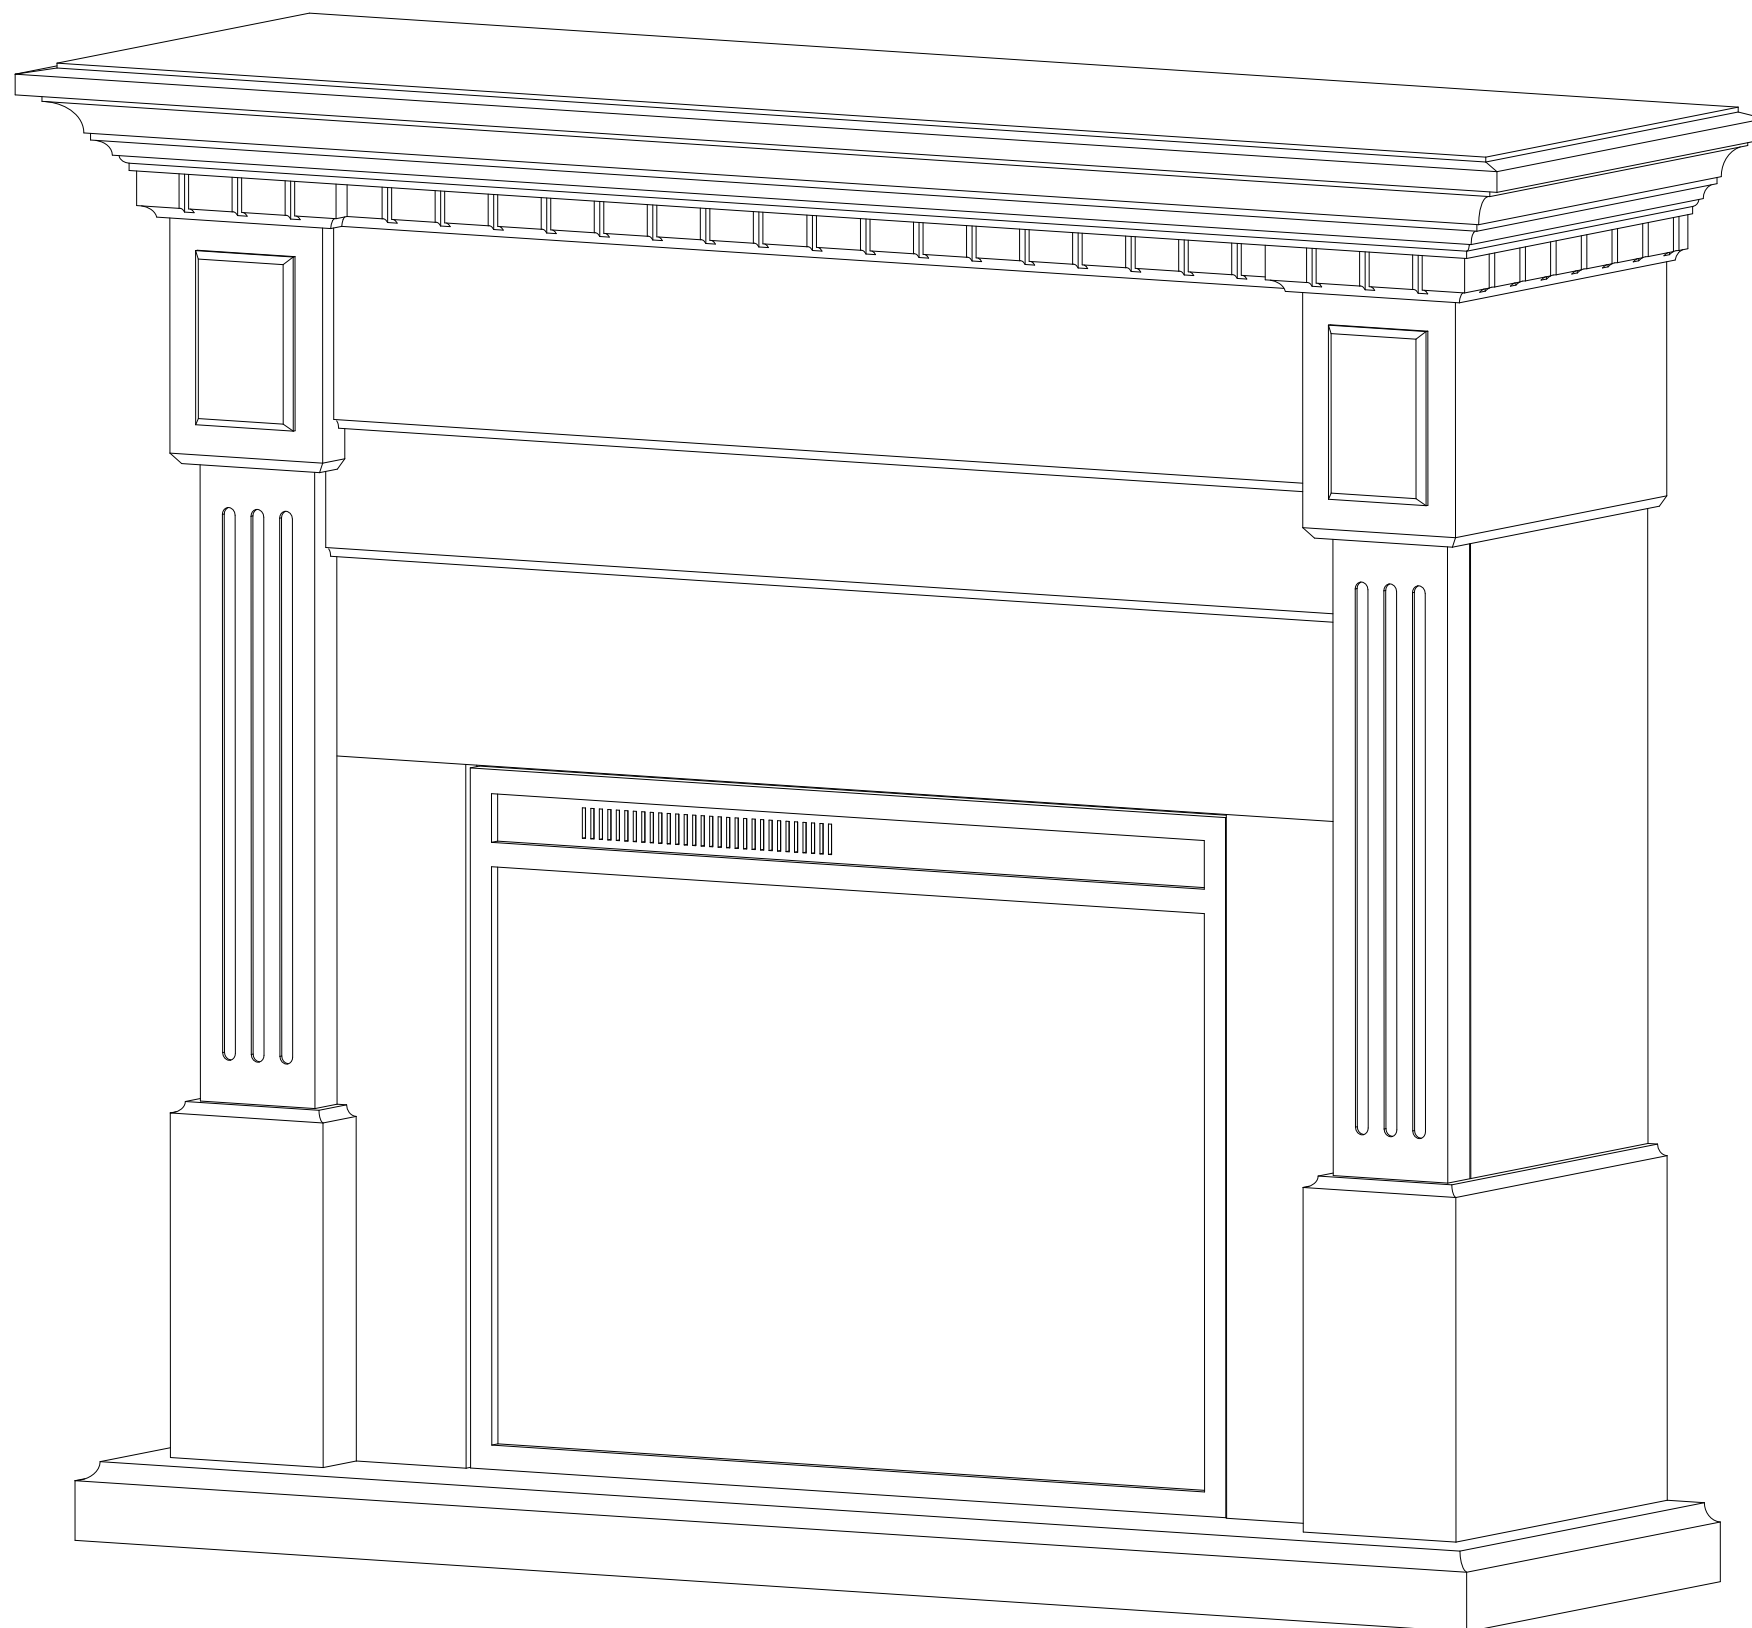


MODERN EMBER

Augustine Mantel

Model: ME-M-SBK6990-AUG
ME-M-WHT-AUG



SAFETY INFORMATION



Please read and understand the entire manual before attempting to assemble, install, or operate the product.



WARNING! You may need an adult to assist with some steps.



CAUTION!

Before assembly and installation, carefully unwrap all parts. Locate and set aside the hardware kit before disposing of the packaging.

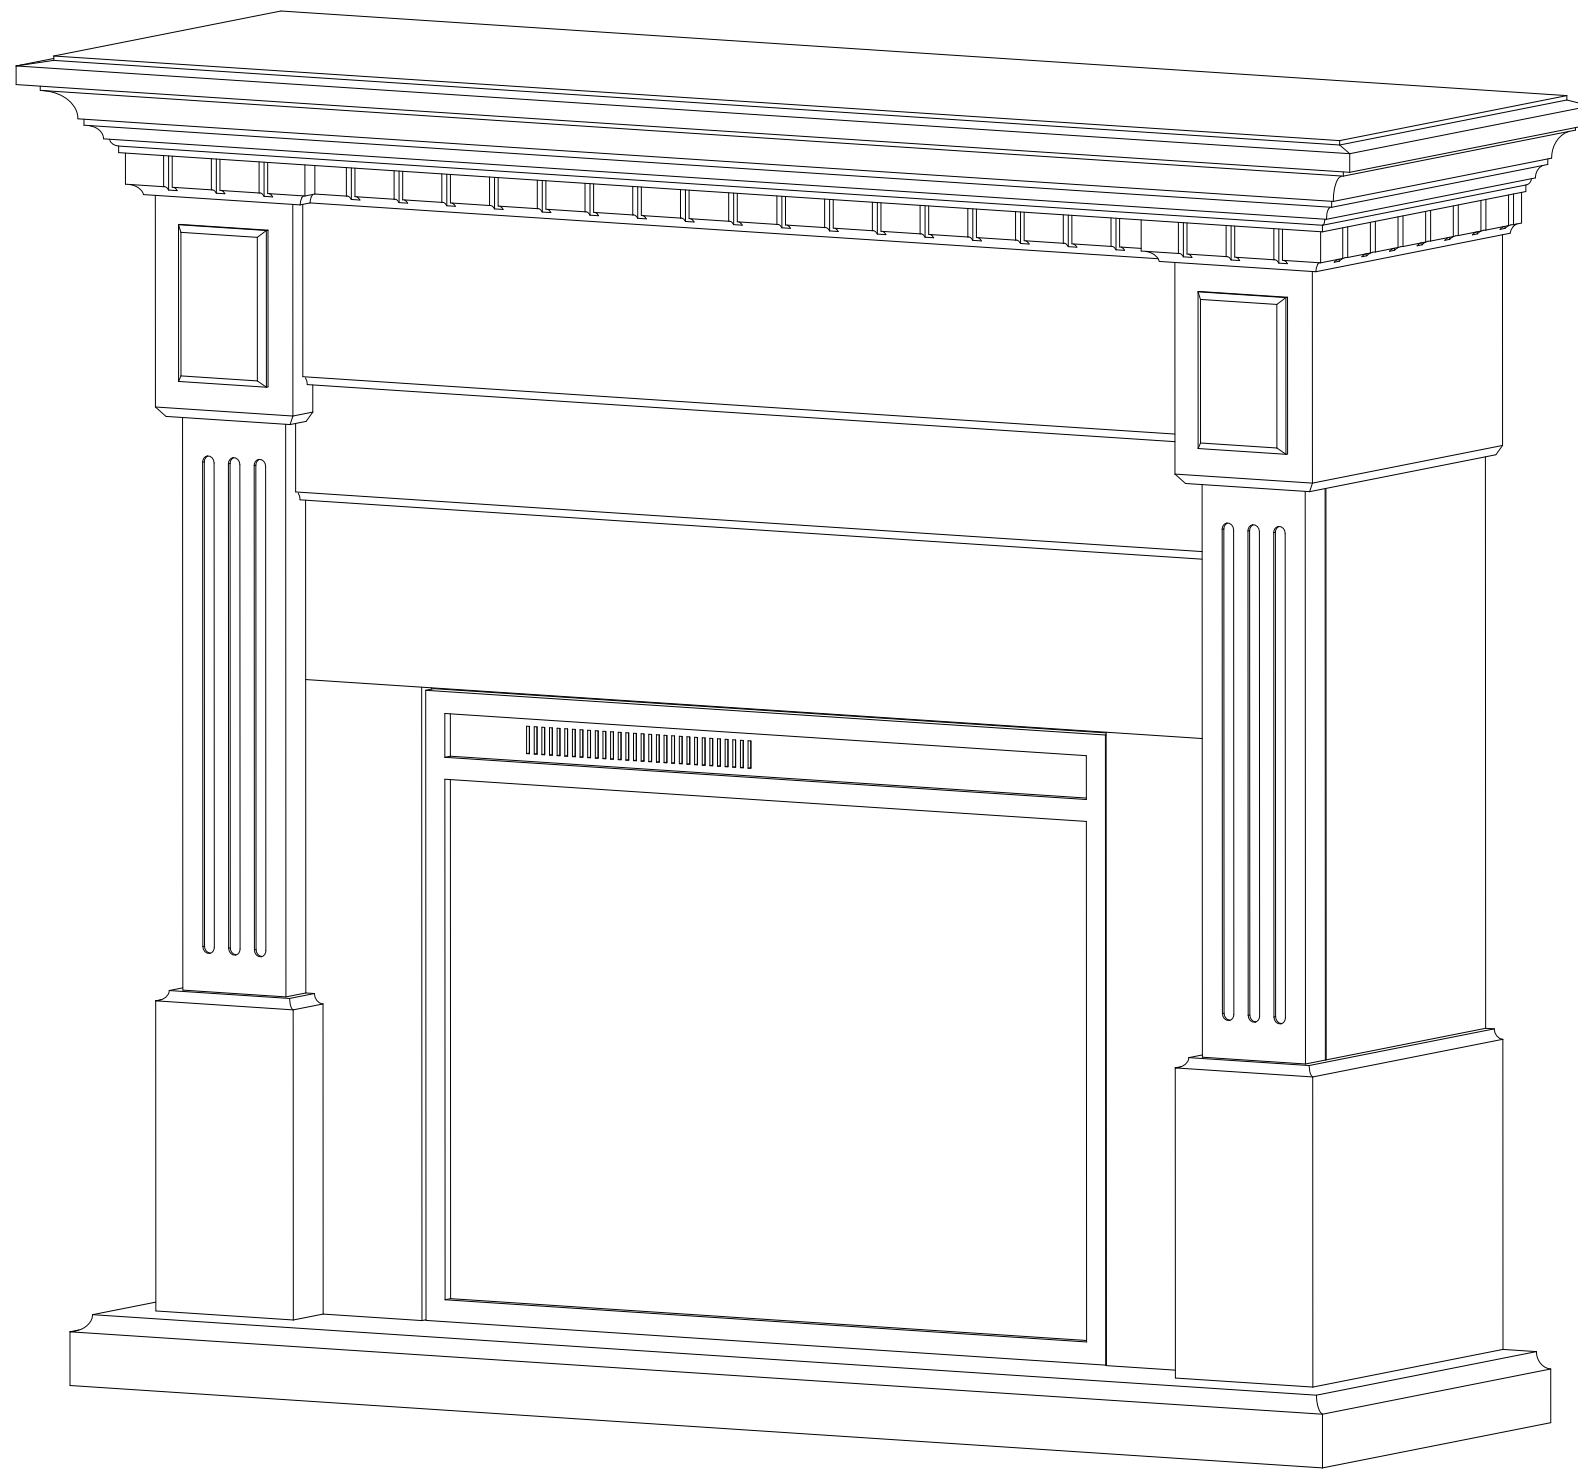
Use care when assembling the product. Take your time and follow the instructions closely.



WARNING!

Do not use more than the maximum load as shown in the diagram. The use of TVs or loads heavier than the maximum weights specified may result in instability, causing tip over, which could result in serious injury or death.

Maximum load 99 lbs



Questions, problems, missing parts?

Before returning to store, call

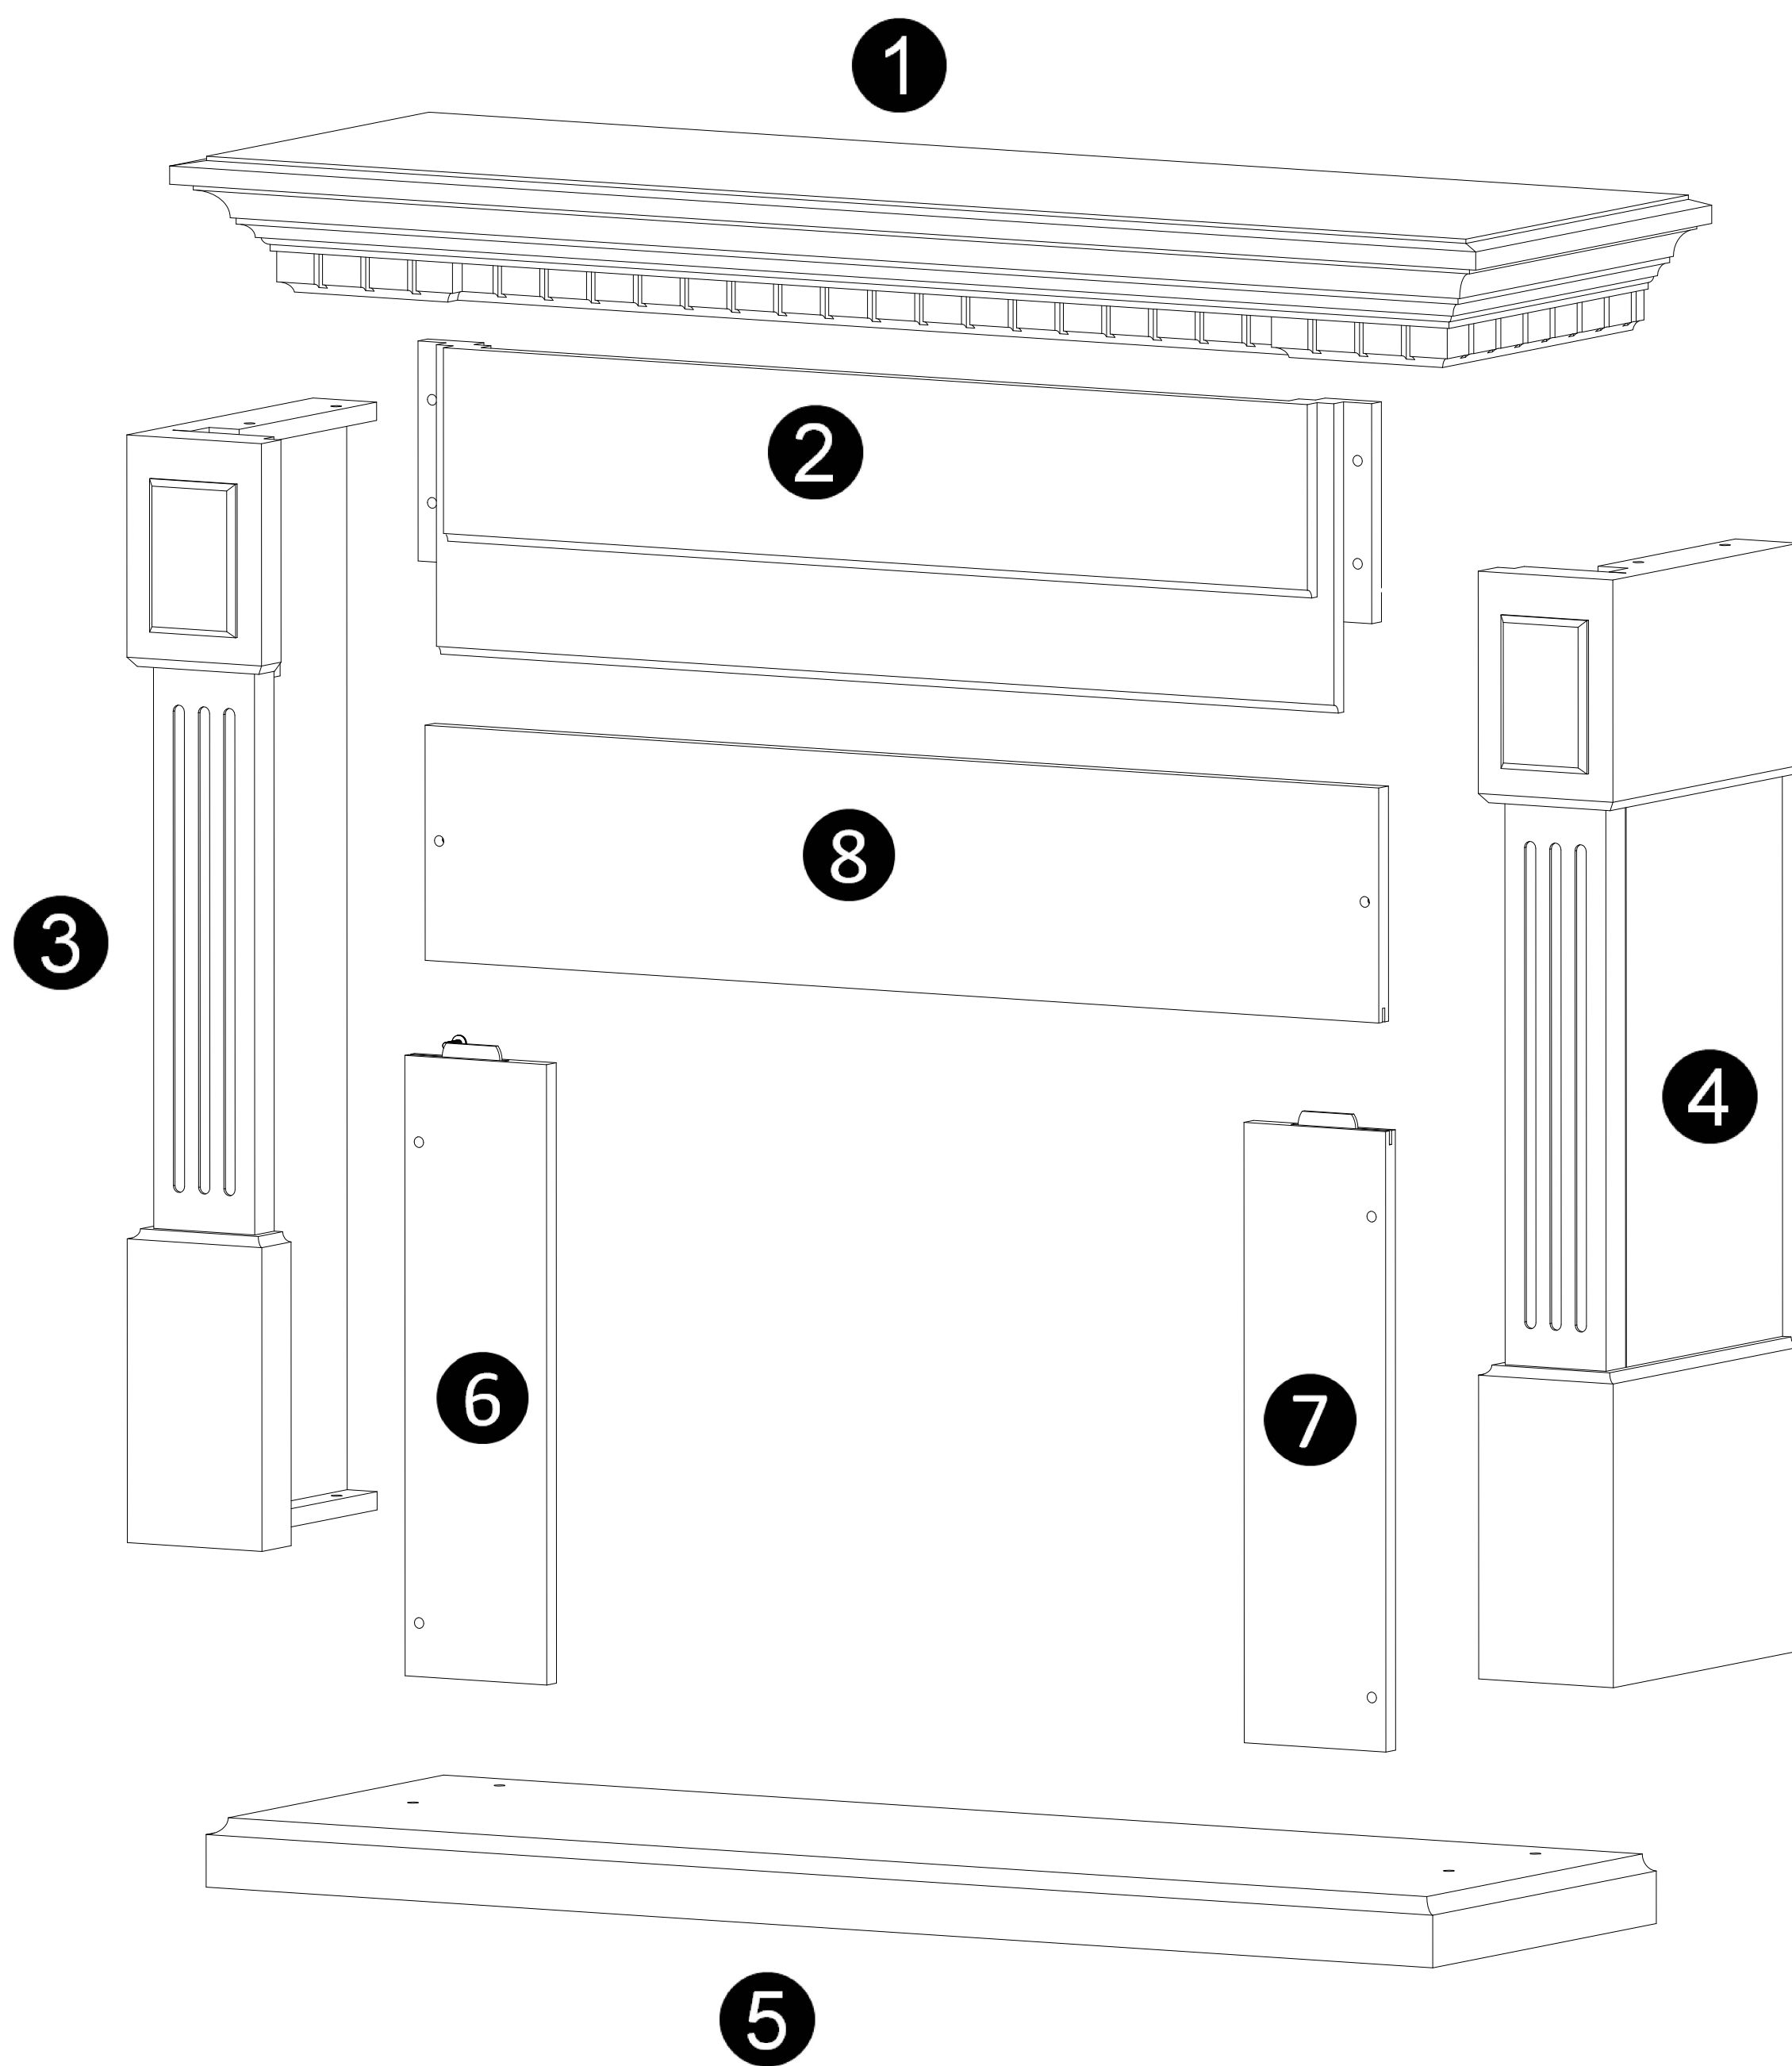
Customer Service:

8am-5pm CST, Monday – Friday

Phone: 877-430-0703

Email: resolutions@electricfireplacesdirect.com

Please save these instructions for future reference.



TOOLS NEEDED





Phillips Head Screwdriver
(not included)







Drill
(not included)


PARTS


PART NO.	DESCRIPTION	QTY
1	Top	1
2	Header	1
3	Left Side	1
4	Right Side	1
5	Base	1
6	Left Surround	1
7	Right Surround	1
8	Top Surround	1

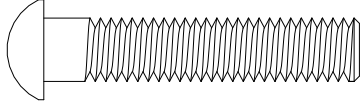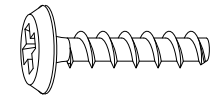HARDWARE		
PART NO.	DESCRIPTION	QTY
A	1/4x25mm Bolt 	19
B	4.5x12mm Screw 	4

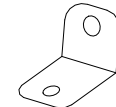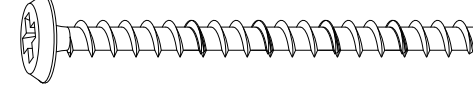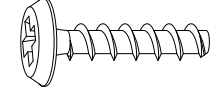SAFETY STRAP KIT		
PART NO.	DESCRIPTION	QTY
C	Bracket 	2
D	260mm Nylon Strap 	1
E	4x50mm Screw 	1
F	4x16mm Screw 	1

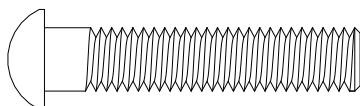
STEP 1


Hardware/Tool	Description	Qty
A	1/4x25mm Bolt 	4
Phillips Head Screwdriver		

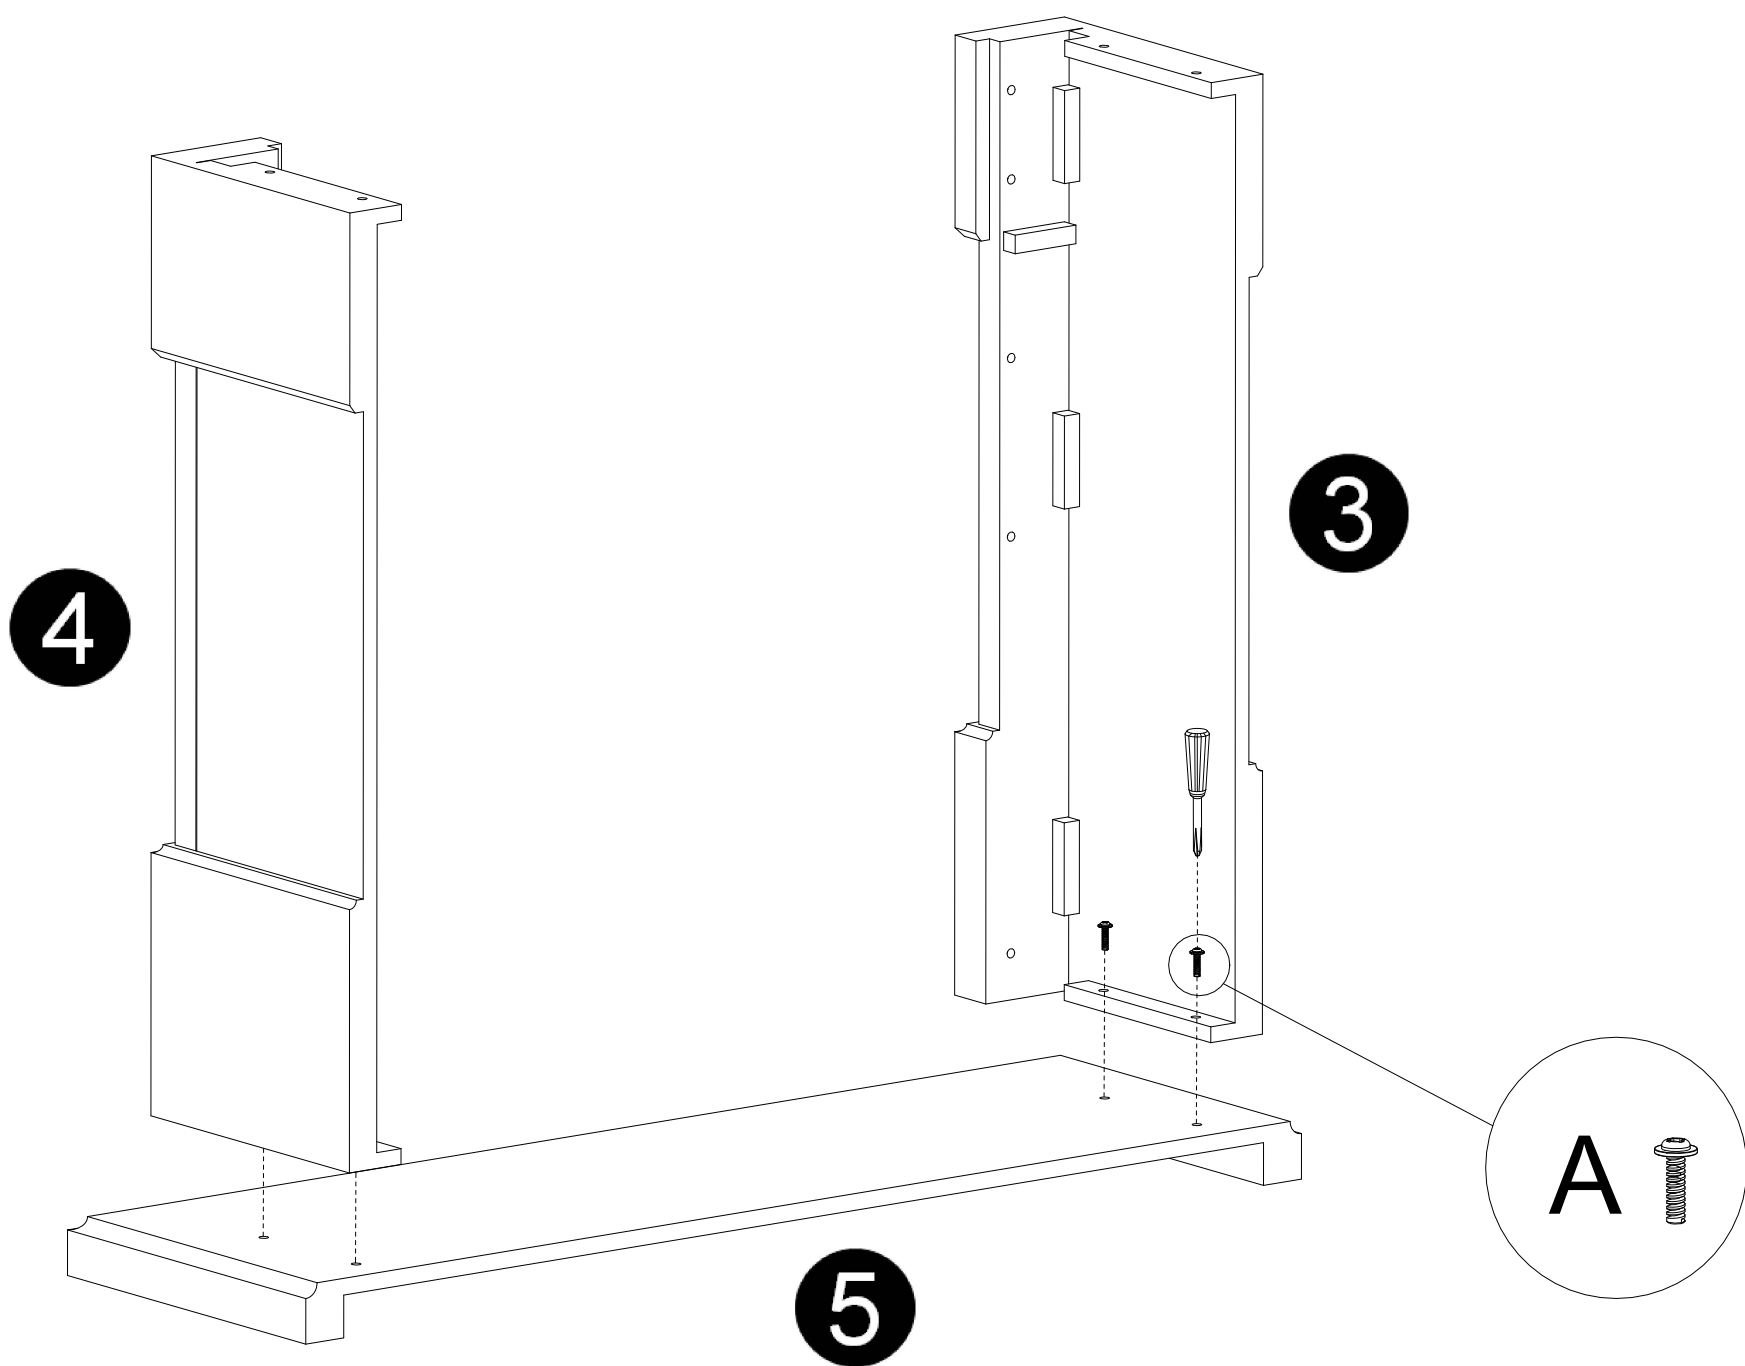

Gently set the Left Side Panel (3) and Right Side Panel (4) onto the Base (5) as shown in the diagram. Align the holes on the Base (5) with the Side Panels (3 & 4). Insert a bolt (A) from the top into the base, but do not tighten. Repeat for the other 3 holes. Note: You will tighten the bolts (A) in the next step. Do not tighten them beforehand or the mantel parts will be misaligned.

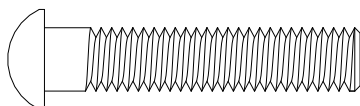
STEP 2


Hardware/Tool	Description	Qty
A	1/4x25mm Bolt 	4
Phillips Head Screwdriver		

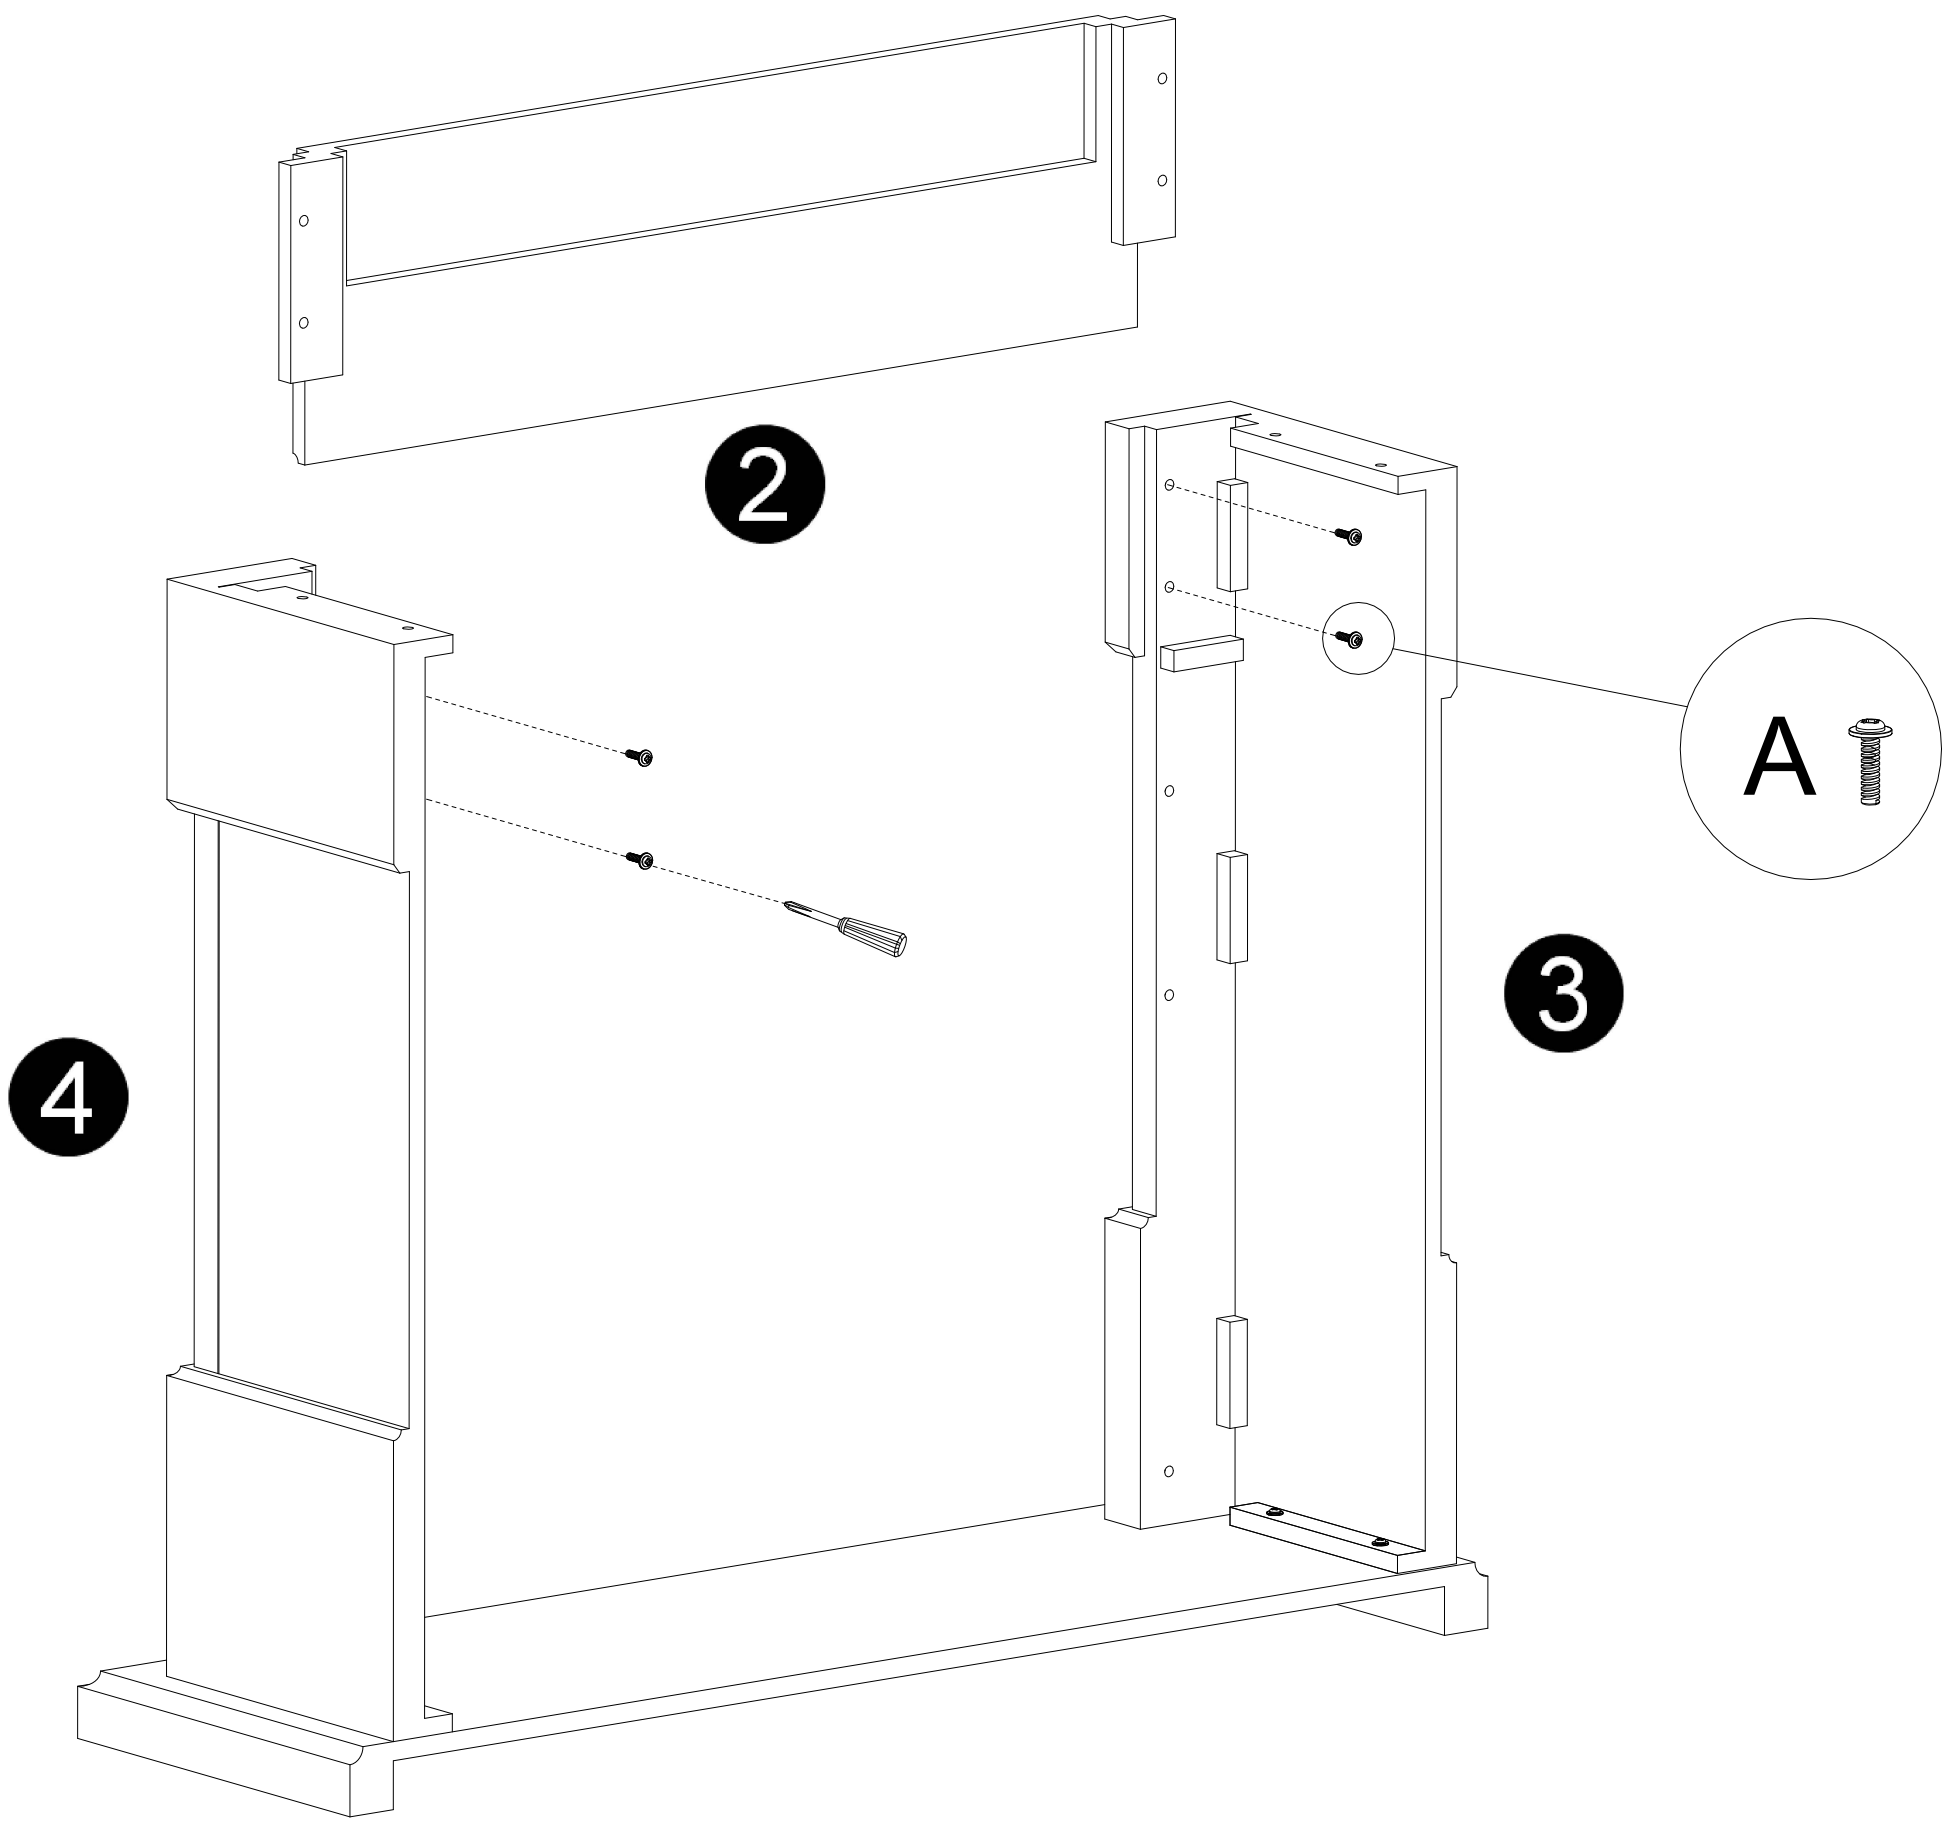

Carefully set the Header (2) into the middle of the Side Panels (3 & 4), making sure the holes are aligned. Insert a bolt from the back of the frame (3, 4 & 5) into the Header (2). Repeat for the other 3 holes. Using the screwdriver, tighten the 4 bolts (A) from this step and the 4 bolts (A) from step 1.

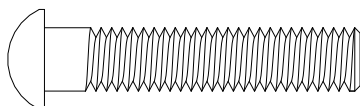
STEP 3


Hardware/Tool	Description	Qty
A	1/4x25mm Bolt 	4
Phillips Head Screwdriver		

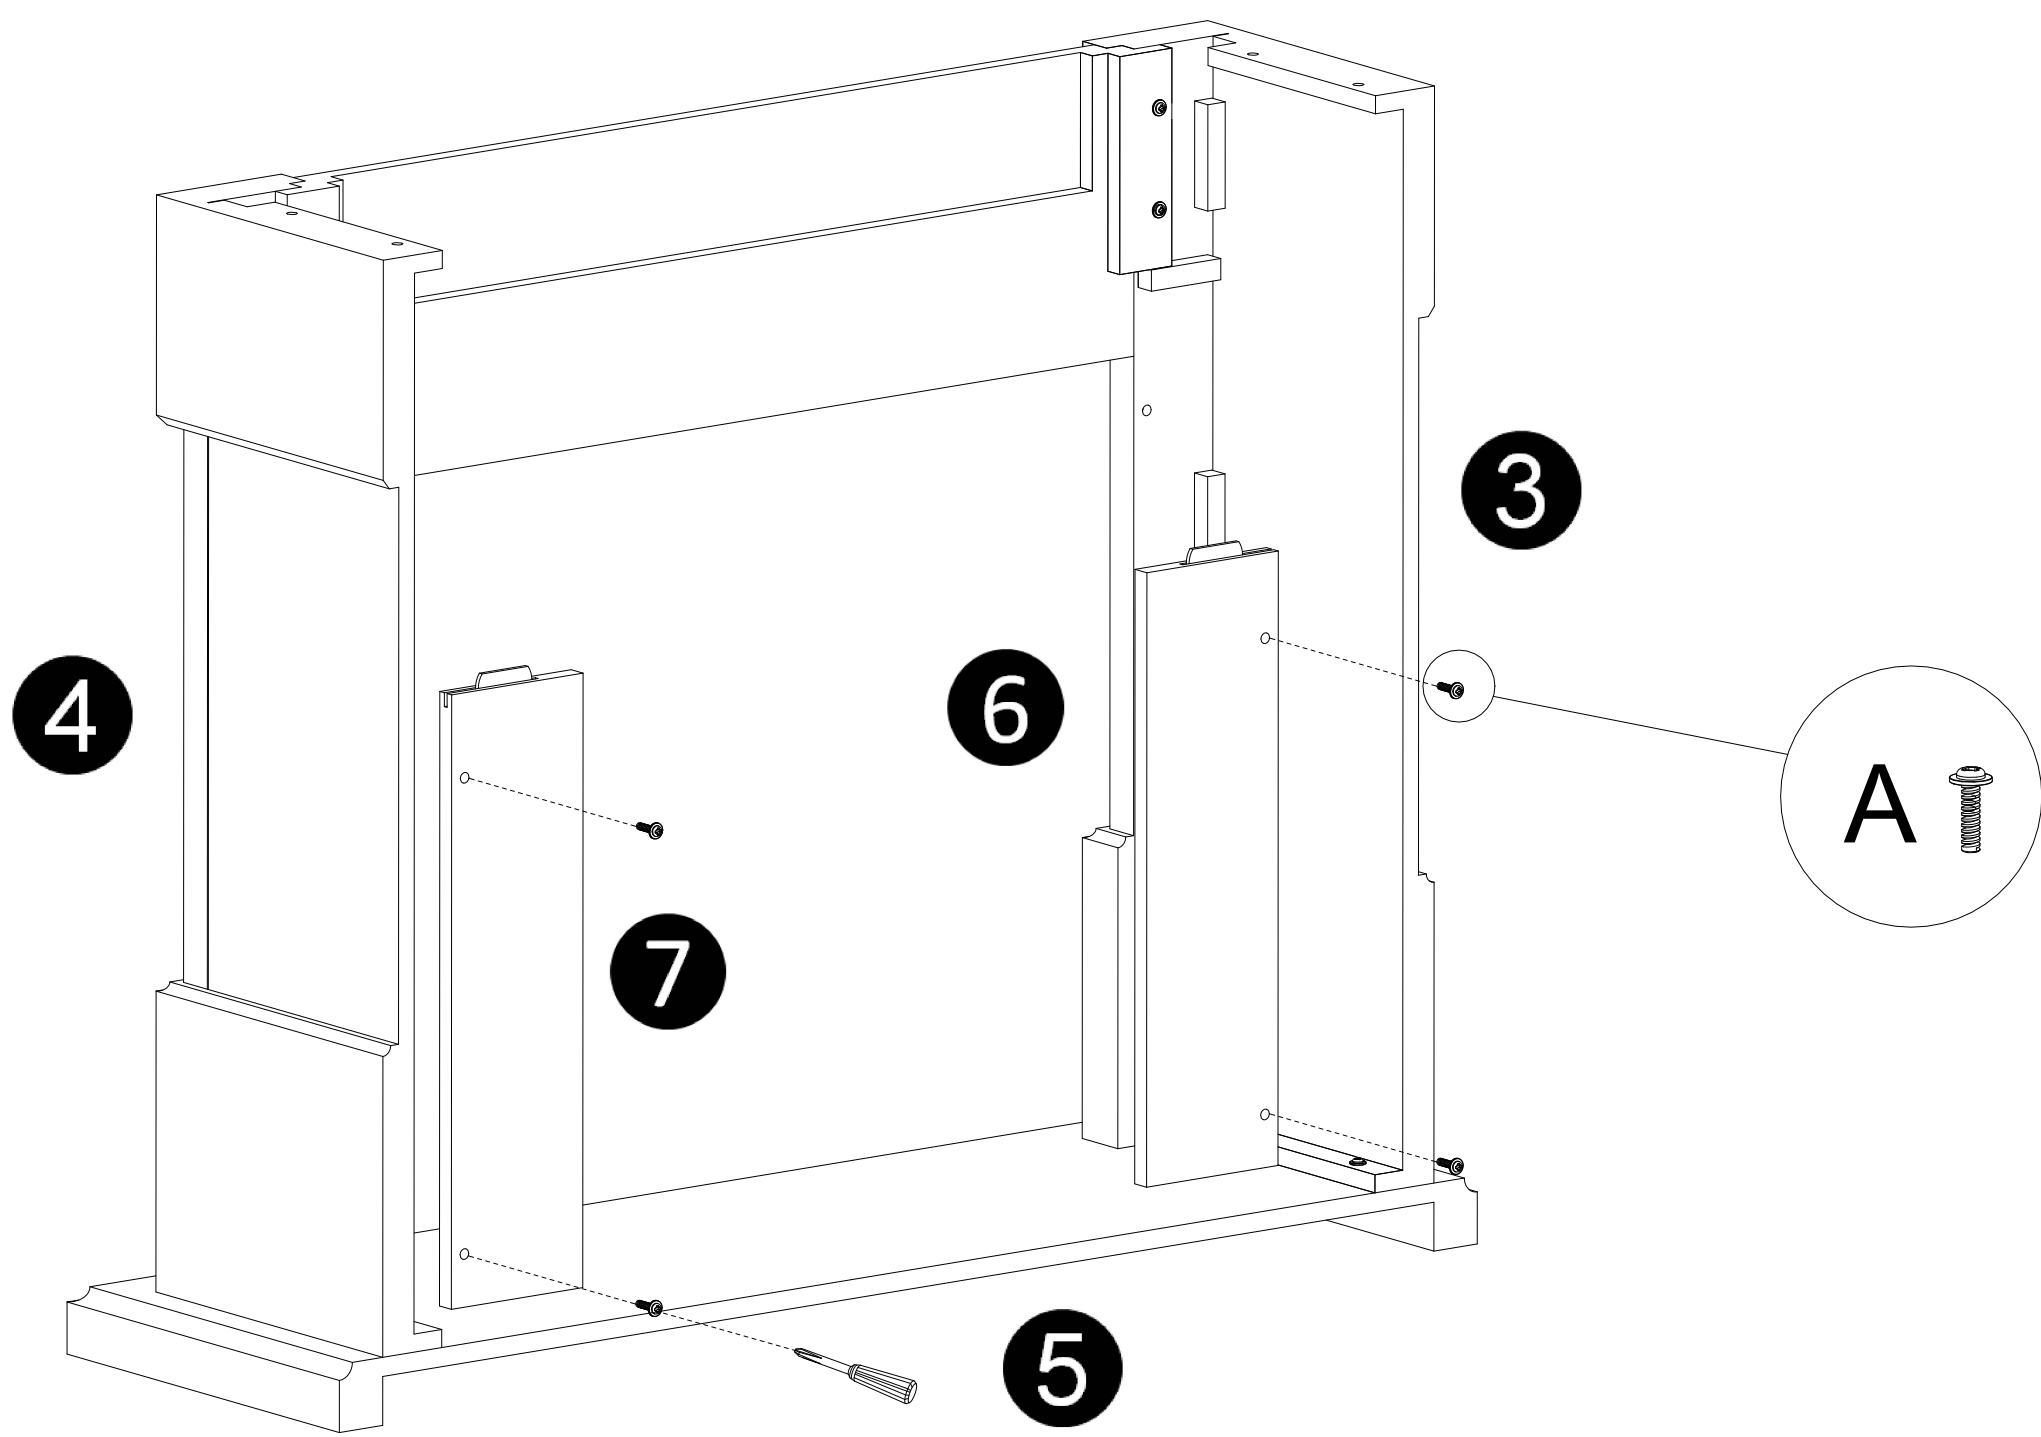

Set the Left Surround (6) and Right Surround (7) onto the Base (5) next to the corresponding Sides (3 & 4). Align the holes on the Side panels (3 & 4) with the holes on the Surrounds (6 & 7). Insert a bolt (A) into a hole and tighten with a screwdriver. Repeat for the other 3 holes.

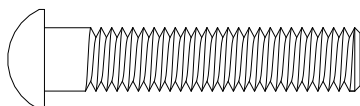
STEP 4


Hardware/Tool	Description	Qty
A	1/4x25mm Bolt 	3
Phillips Head Screwdriver		

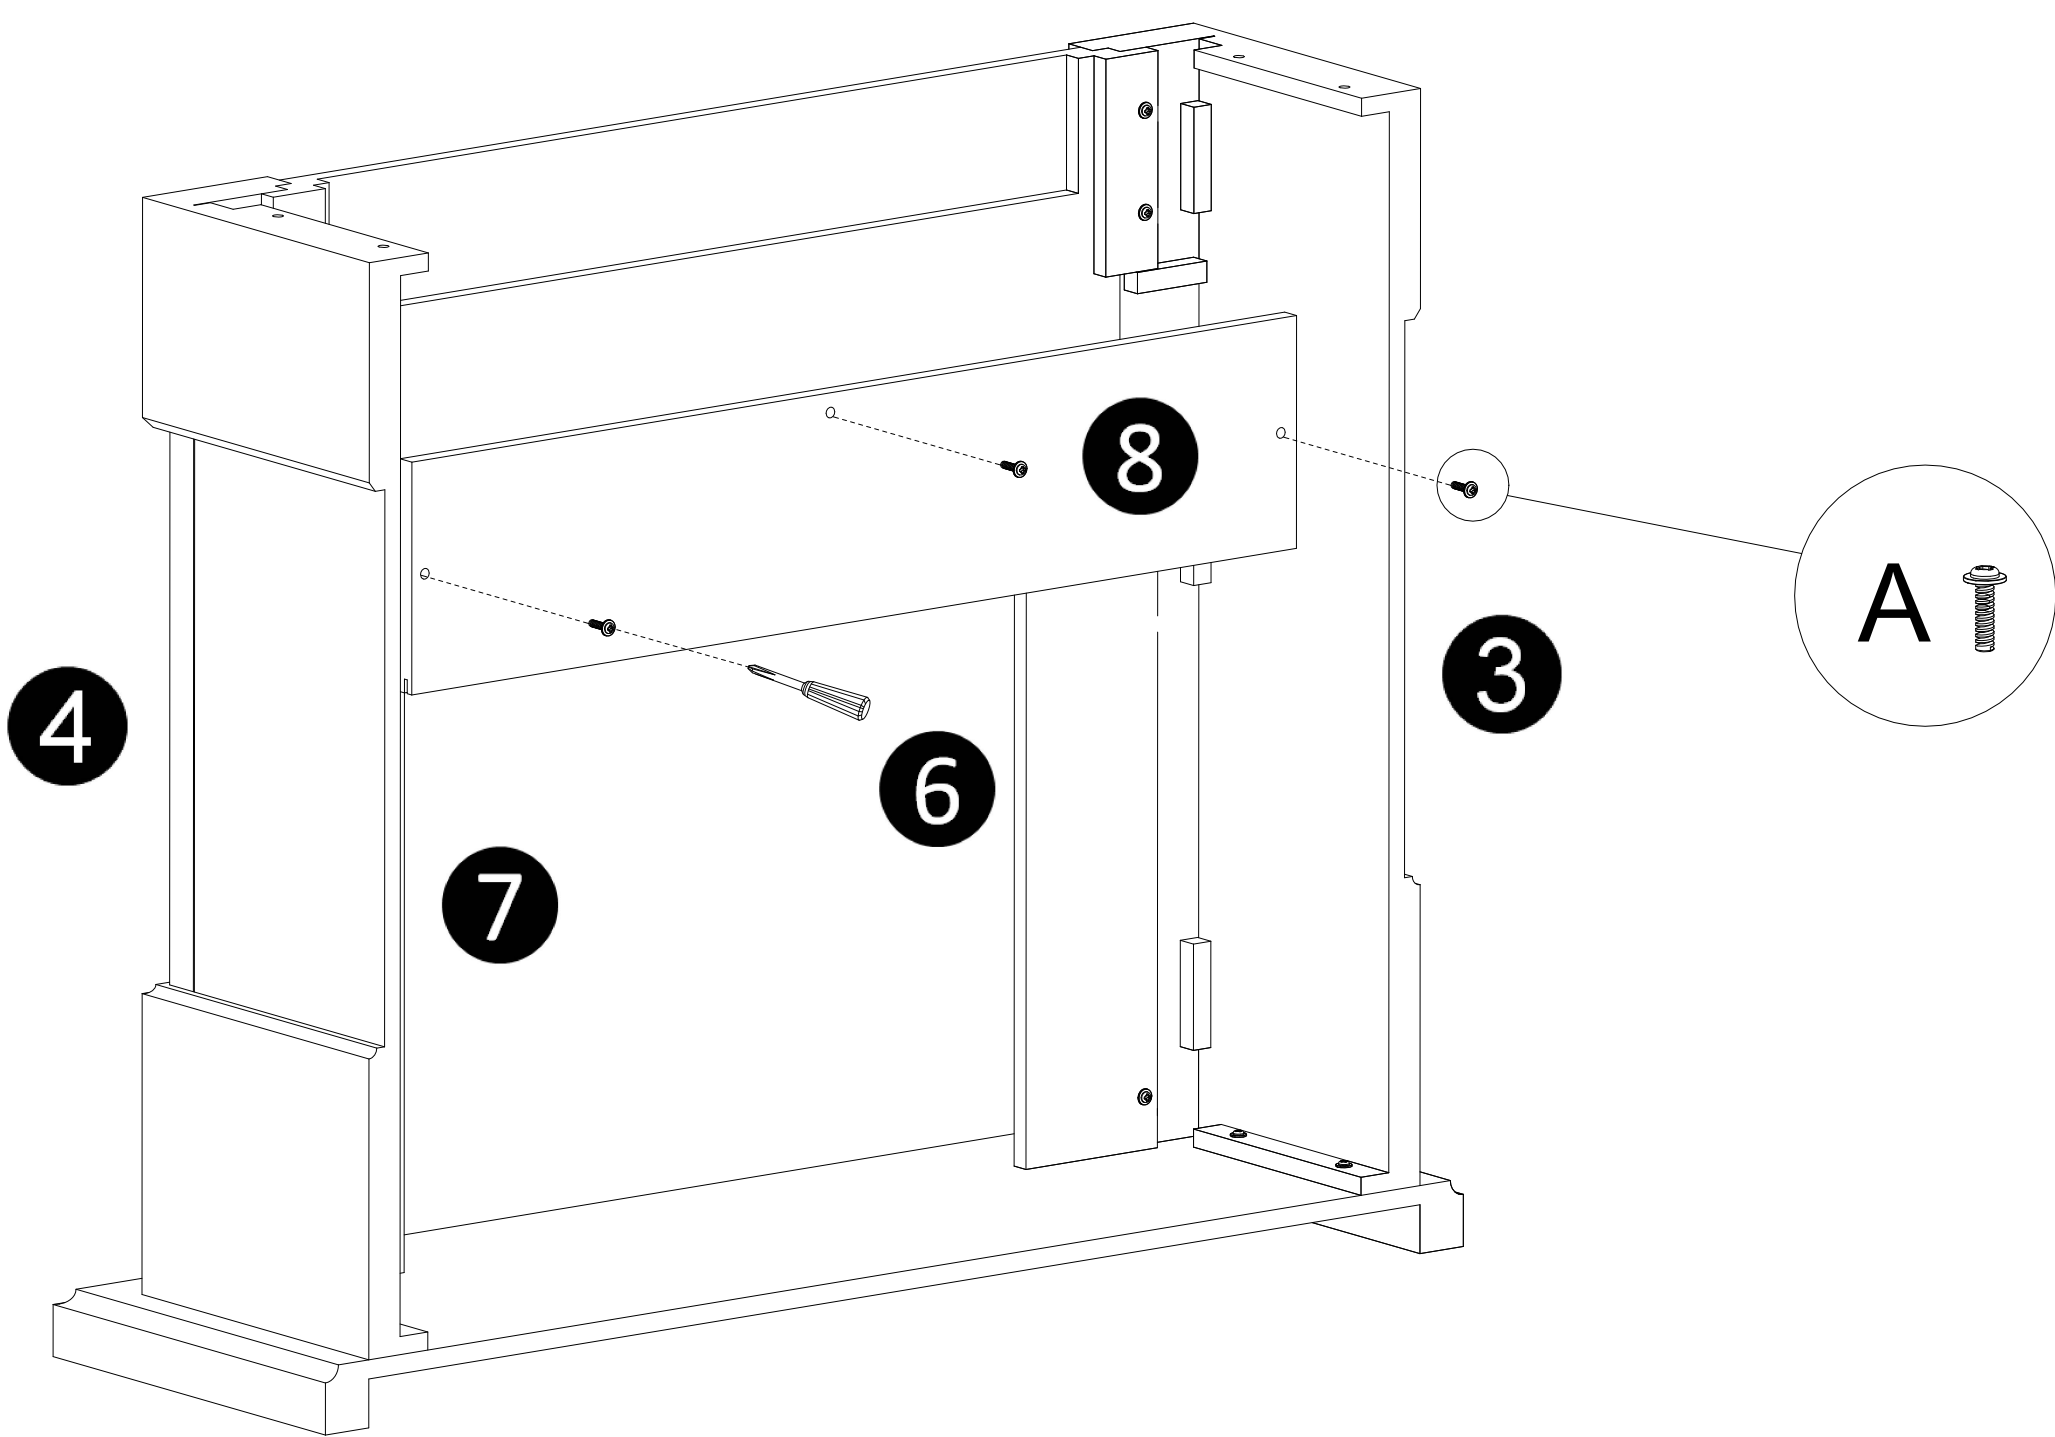

Set the Top Surround (8) onto the Side Surrounds (6 & 7), making sure the holes are aligned. Insert a bolt (A) into a hole and tighten with a screwdriver. Repeat for the other 2 holes.

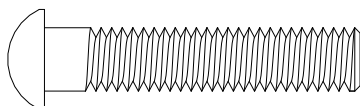
STEP 5

Hardware/Tool	Description	Qty
A	1/4x25mm Bolt 	4
Phillips Head Screwdriver		

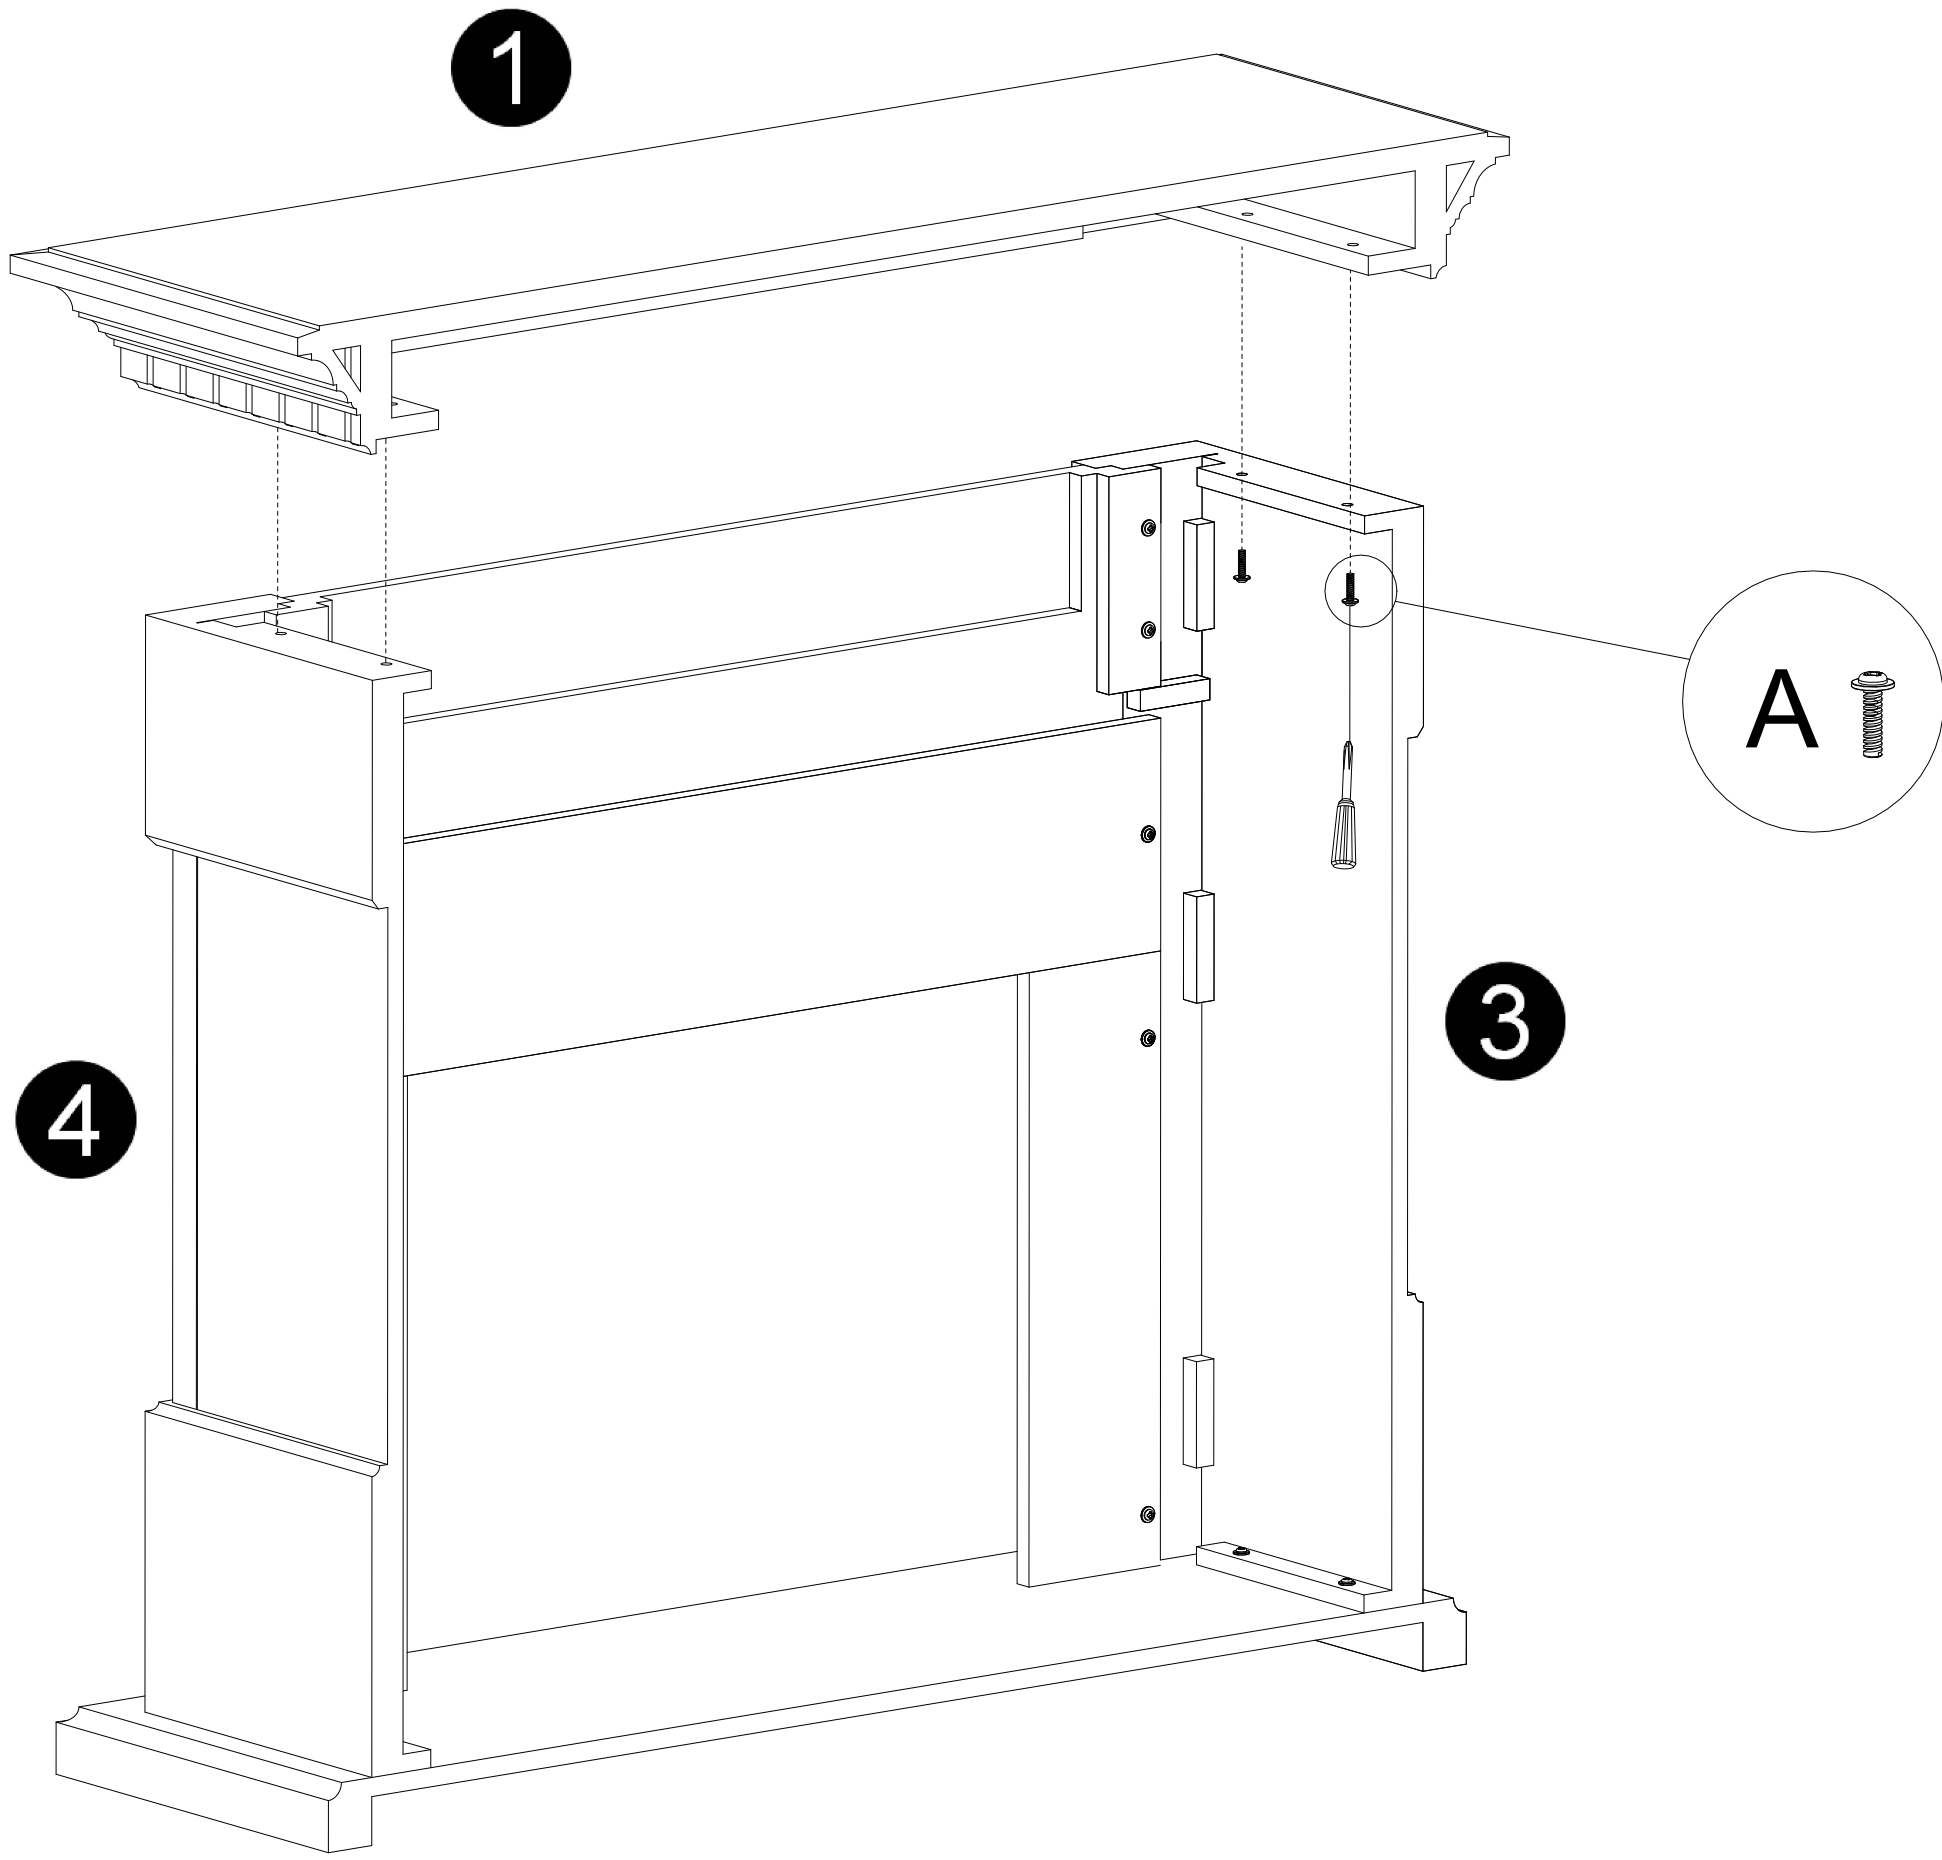



Gently set the Top (1) onto the Side Panels (3 & 4), making sure the holes are aligned. Insert a bolt (A) into a hole and tighten with a screwdriver. Repeat for the other 3 holes.

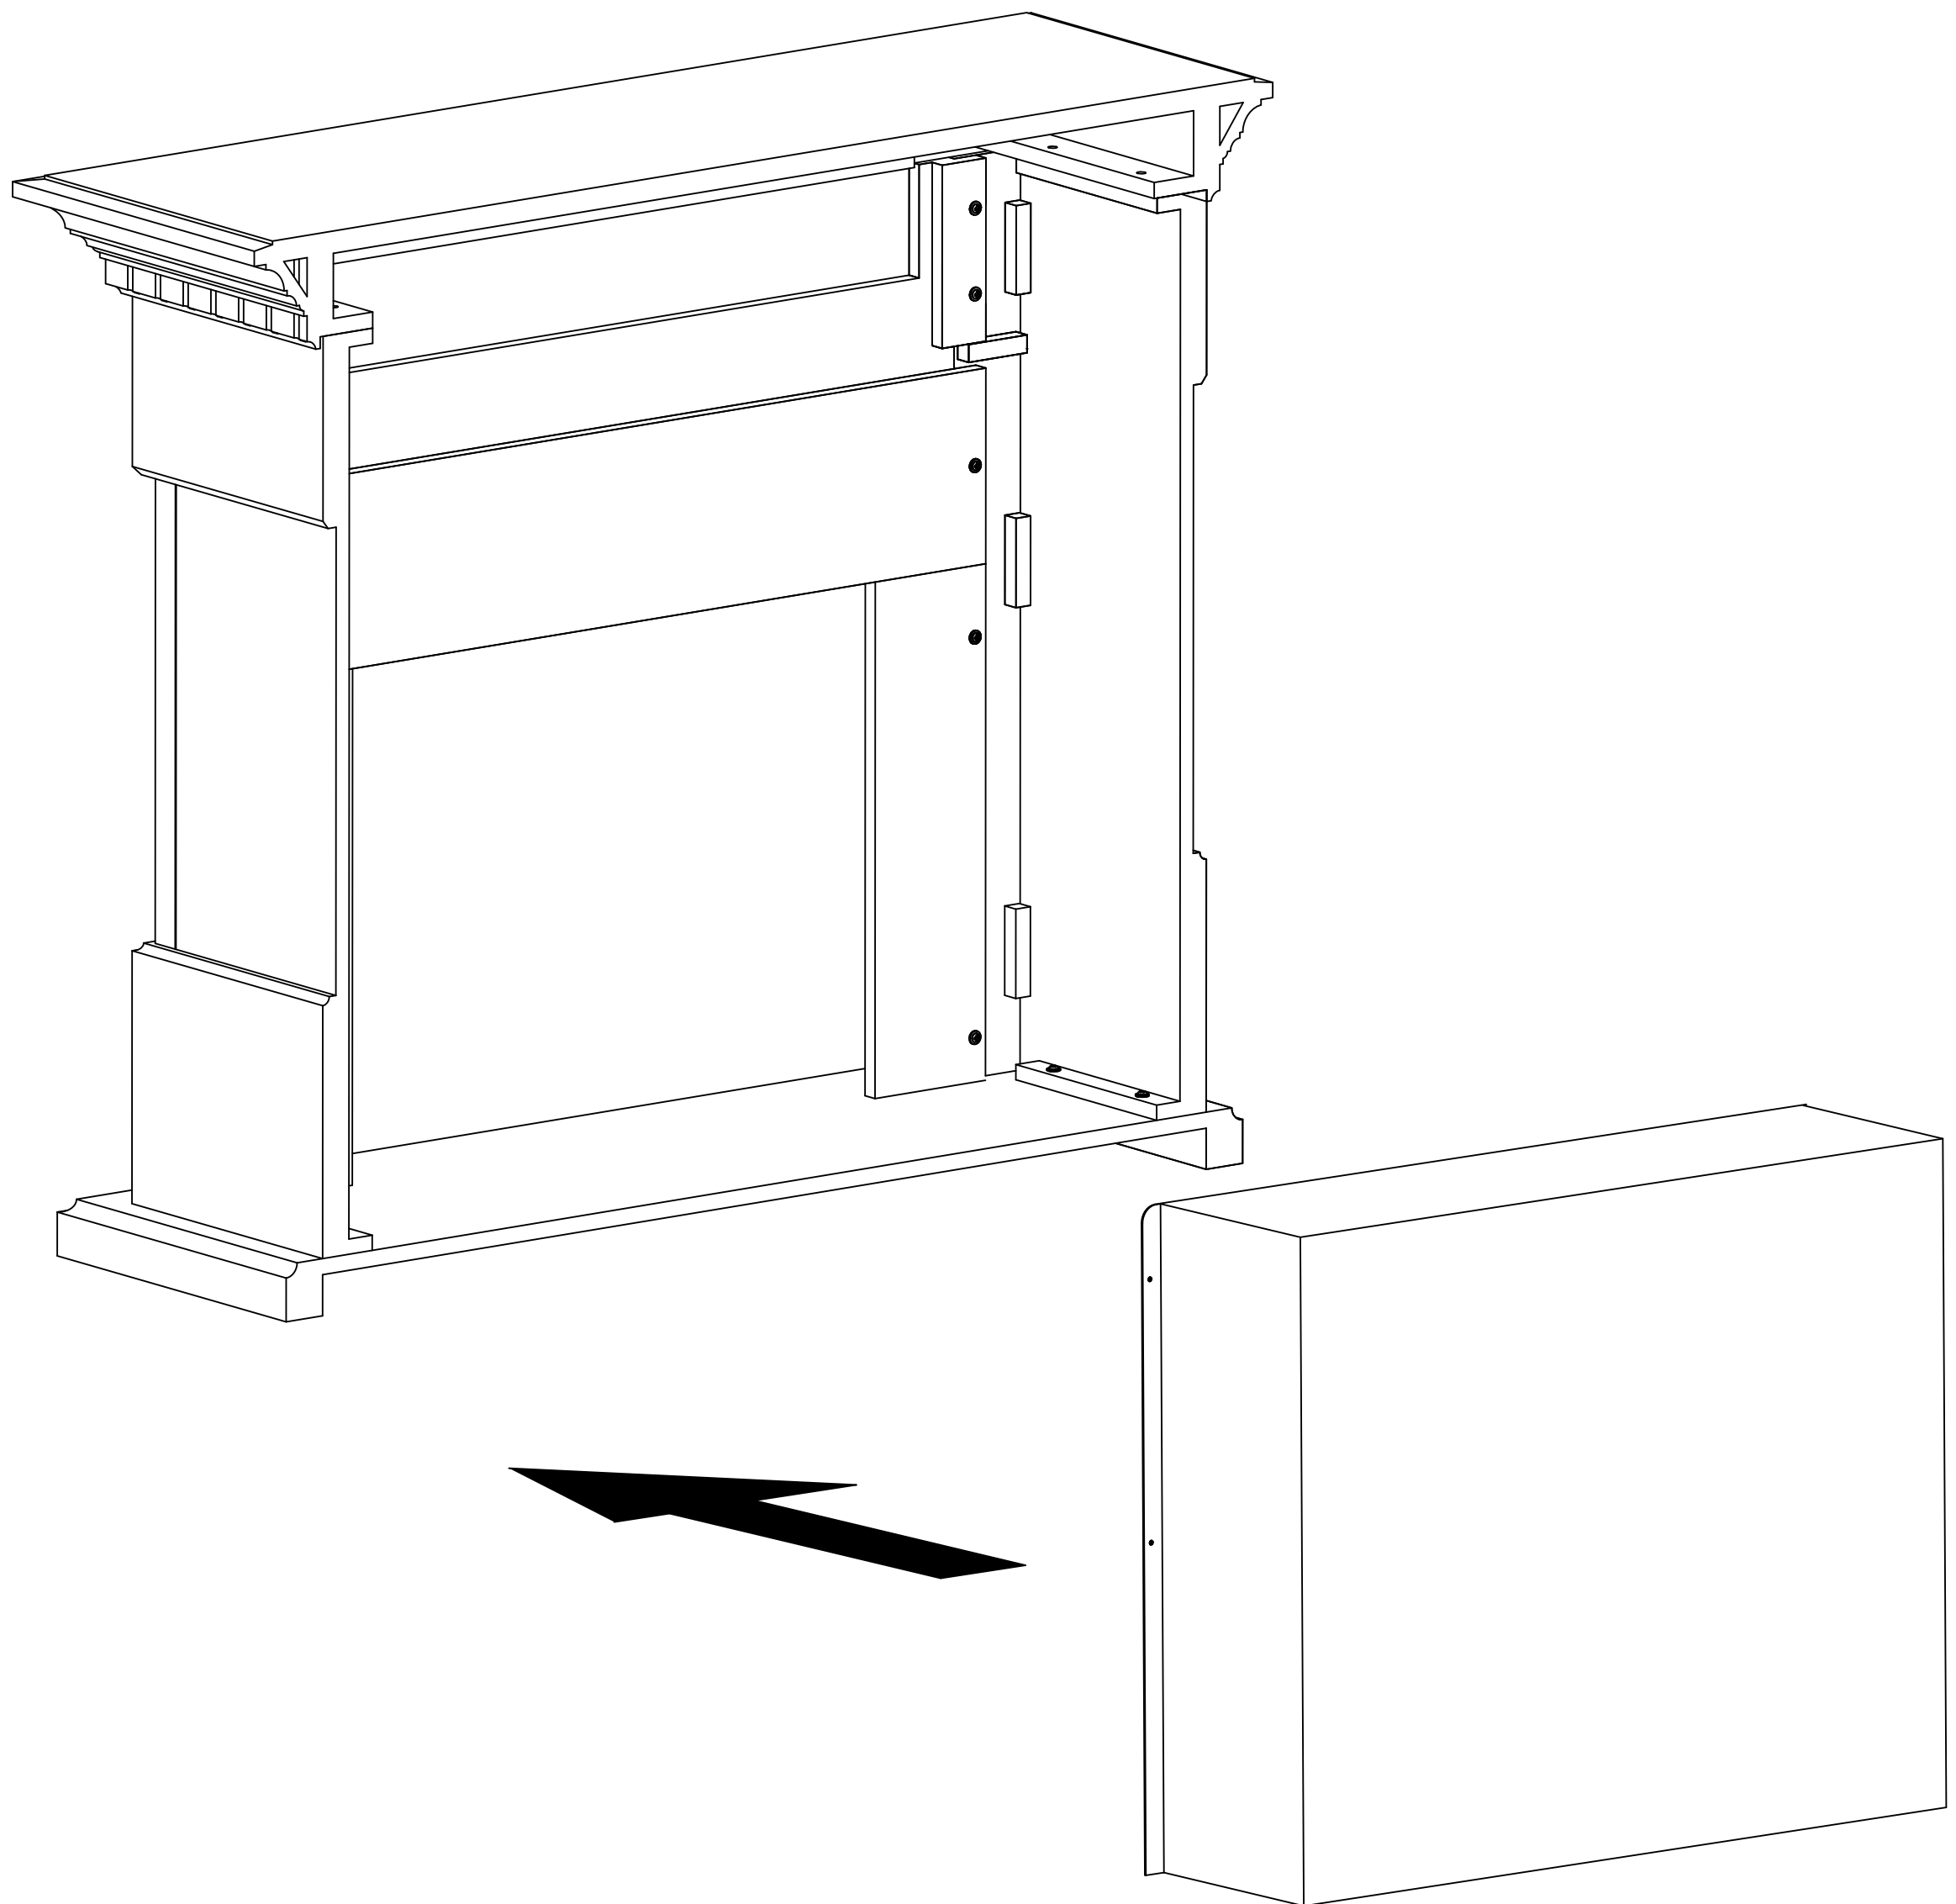
STEP 6



Carefully place the electric fireplace insert onto the base of the mantel. From the front, make sure the insert is centered in the mantel opening.



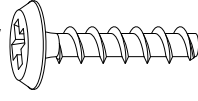
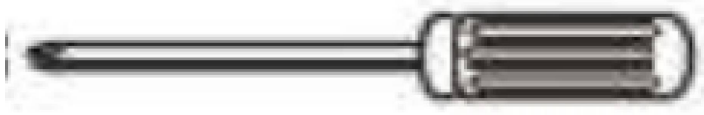
STEP 7


Hardware/Tool	Description	Qty
B	4.5x12mm Screw 	4
Phillips Head Screwdriver		

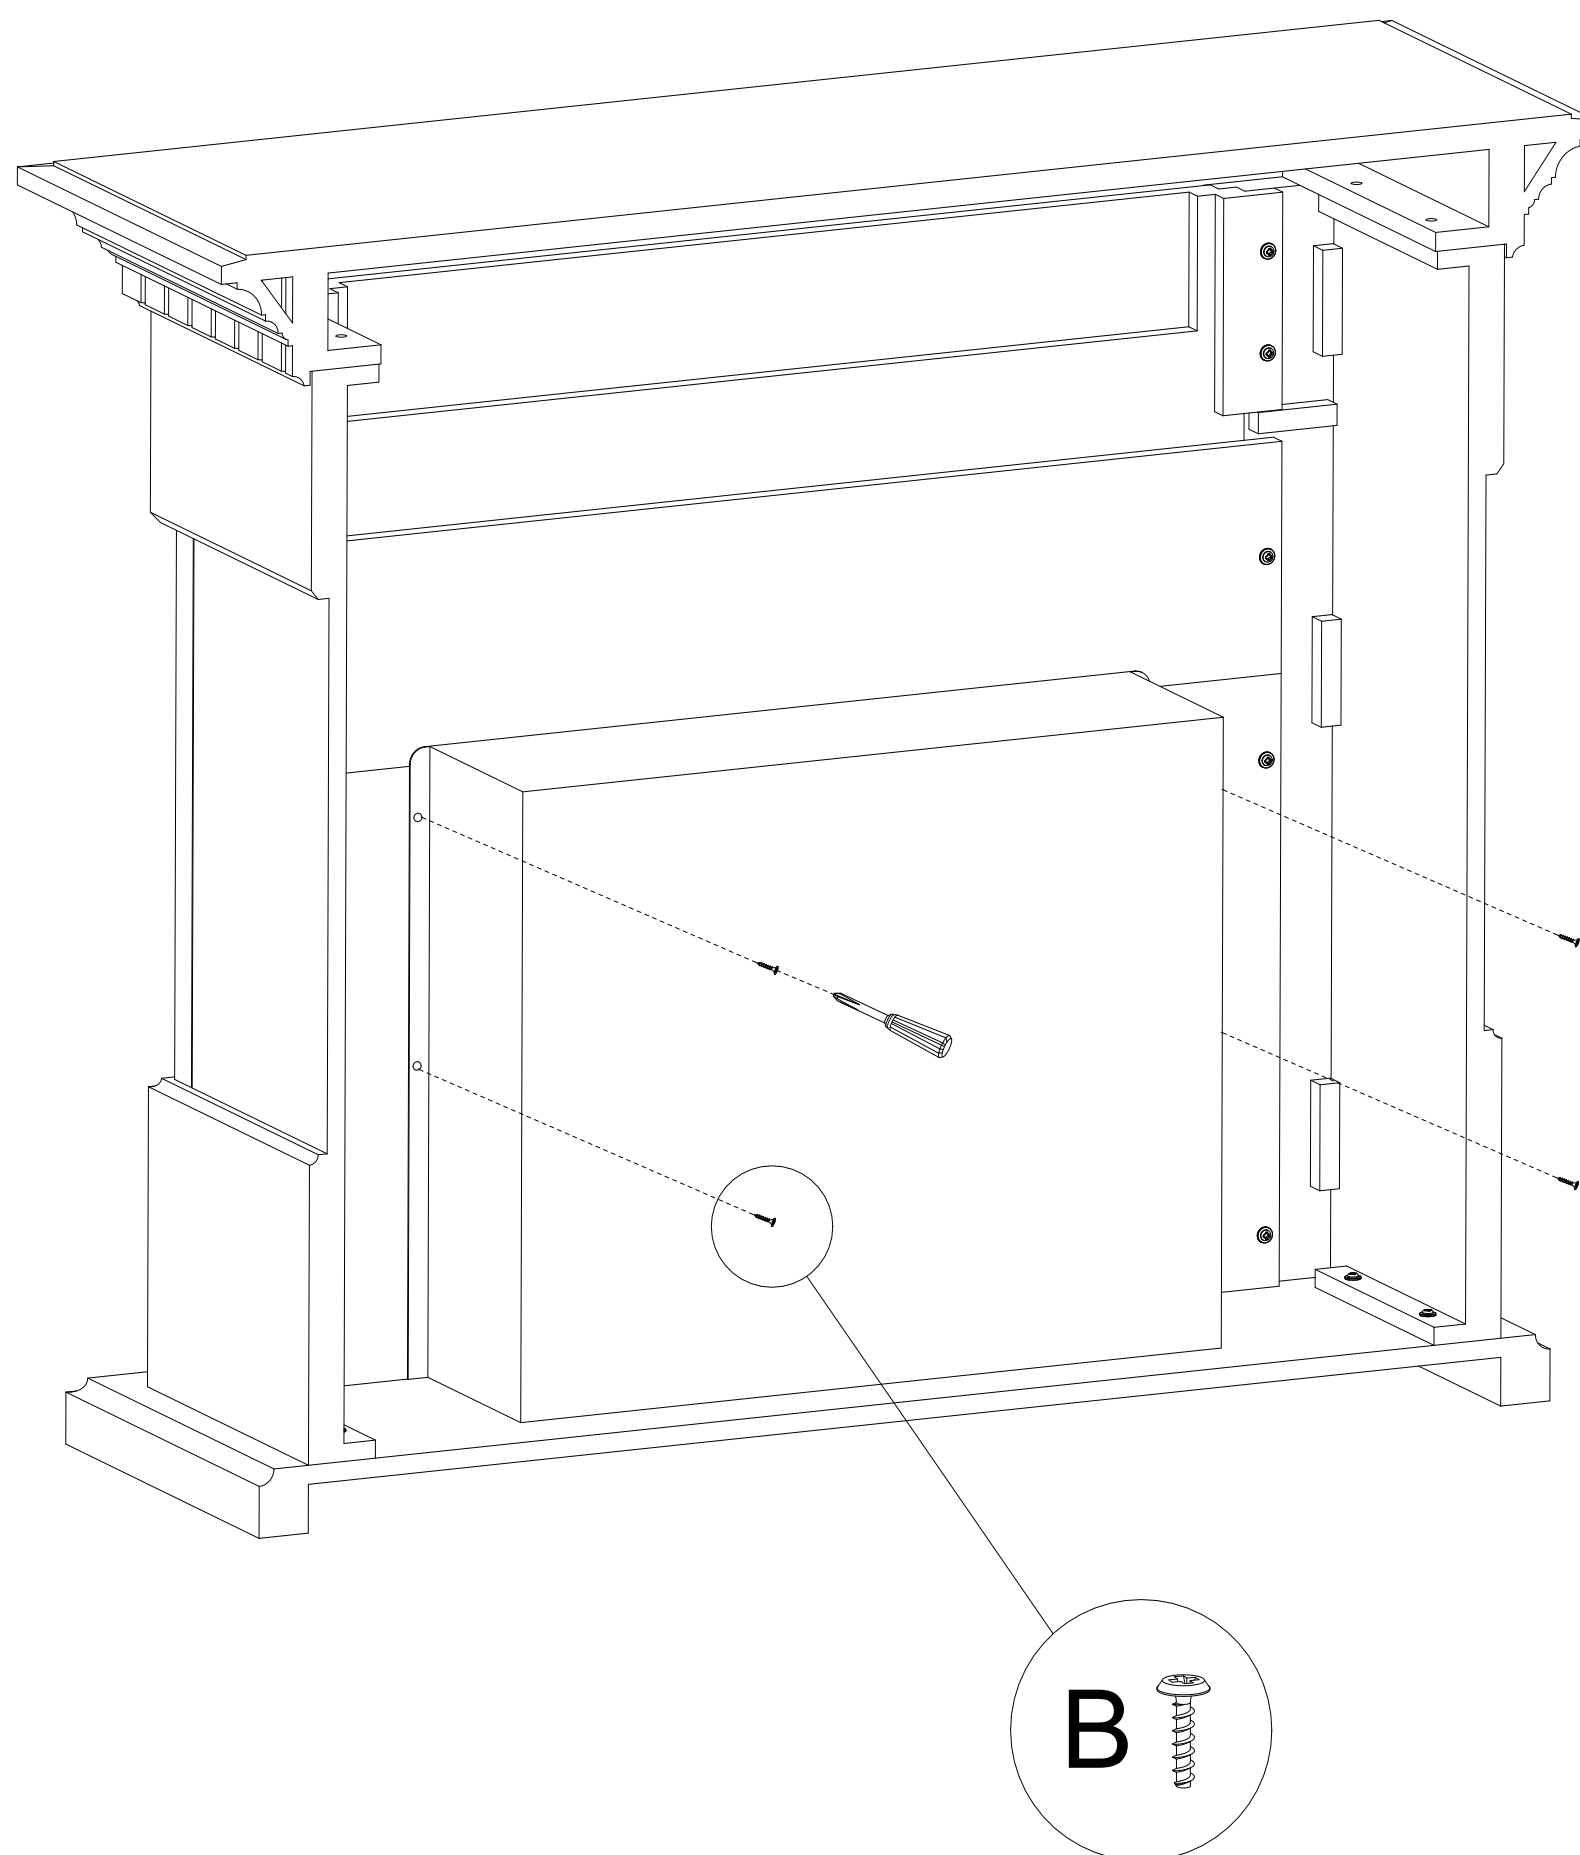

Using the screwdriver, secure the fireplace insert to the mantel with the screws (B).

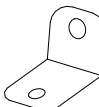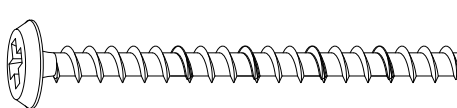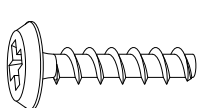STEP 8

Hardware/Tool	Description	Qty
C	Bracket 	2
D	260mm Nylon Strap 	1
E	4x50mm Screw 	1
F	4x16mm Screw 	1
Drill		

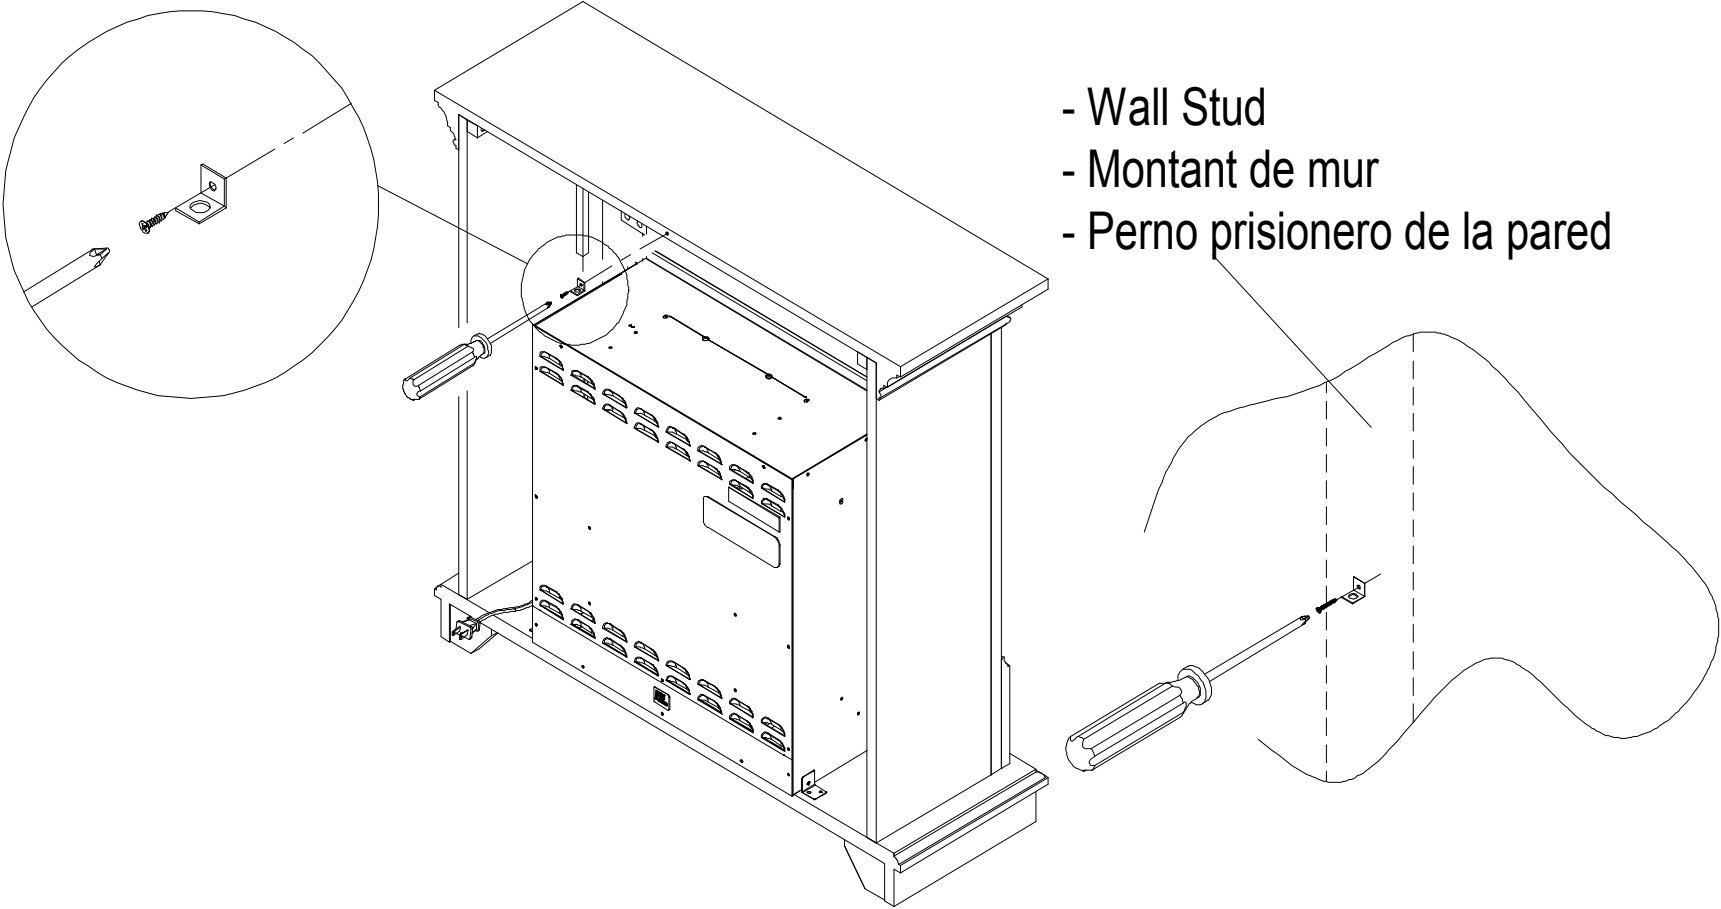

- Wall Stud
- Montant de mur
- Perno prisionero de la pared

WARNING: This tip restraint must be attached to a wall stud using the 50mm screw (E) enclosed.

a. Attach one bracket (C) securely to the back top wood panel of the mantel using the 16mm screw (F) through the smaller hole of the bracket. It is highly recommended to pre-drill a 1/16" hole into the wood mantel to prevent splitting.

b. Position the other bracket (C) on the wall over a wall stud 2 inches below the bracket secured to the back of the mantel. Attach to the wall stud using the 50mm screw (E) through the smaller hole of the bracket.

c. Place the mantel into position so both brackets are in line vertically.

d. Lace the end of the restraint strap (D) through the larger hole in each bracket. Bring both ends together and slide the flat end through the locking end. Pull it through until all slack is removed.

e. Confirm that the strap is securely laced and locked.

AVERTISSEMENT! Ce dispositif de retenue de pointe doit être fixé à un montant mural à l'aide de la vis de 50 mm (E) fournie.

a. Fixez solidement un support (C) à l'arrière panneau de bois supérieur de la cheminée en utilisant le 16 mm vissez (F) dans le petit trou du support. Il est fortement recommandé de pré-percer un trou de 1/16" dans le manteau en bois pour éviter les fissures.

b. Positionnez l'autre support (C) sur le mur au-dessus un montant mural à 2 pouces sous le support fixé à l'arrière de la cheminée. Fixer au montant du mur en utilisant la vis de 50 mm (E) à travers le plus petit trou du support.

c. Placez le manteau en position de manière à ce que les deux supports sont alignés verticalement.

d. Enfilez l'extrémité de la sangle de retenue (D) à travers le plus grand trou dans chaque support. Apportez les deux extrémités ensemble et faites glisser l'extrémité plate à travers le verrouillage fin. Tirez-le jusqu'à ce que tout le jeu soit éliminé.

e. Vérifiez que la sangle est bien lacée et verrouillé.

¡ADVERTENCIA! Esta sujeción de punta debe fijarse a un montante de pared utilizando el tornillo de 50 mm (E) adjunto.

a. Fije un soporte (C) de forma segura a la parte posterior panel de madera superior de la repisa usando el 16 mm atornille (F) a través del orificio más pequeño del soporte. Se recomienda perforar previamente un orificio de 1/16" en la repisa de madera para evitar que se parta.

b. Coloque el otro soporte (C) en la pared sobre un montante de pared a 2 pulgadas debajo del soporte asegurado hasta la parte trasera de la repisa. Fijar al montante de la pared usando el tornillo de 50 mm (E) a través del orificio más pequeño agujero del soporte.

c. Coloque la repisa en su posición de modo que ambos soportes están alineados verticalmente.

d. Pase el extremo de la correa de sujeción (D) a través el agujero más grande en cada soporte. Trae ambos extremos juntos y deslice el extremo plano a través del bloqueo fin. Tire de él hasta eliminar toda la holgura.

e. Confirme que la correa esté bien atada y bloqueado.

MODERN EMBER

Questions, problems, missing parts?

Before returning to store, call

Customer Service:

8am-5pm CST, Monday – Friday

Phone: 877-430-0703

Email: resolutions@electricfireplacesdirect.com

Please save these instructions for future reference.