



Serial Number: SDP10-22
R1.0

Shower Door Installation Instructions

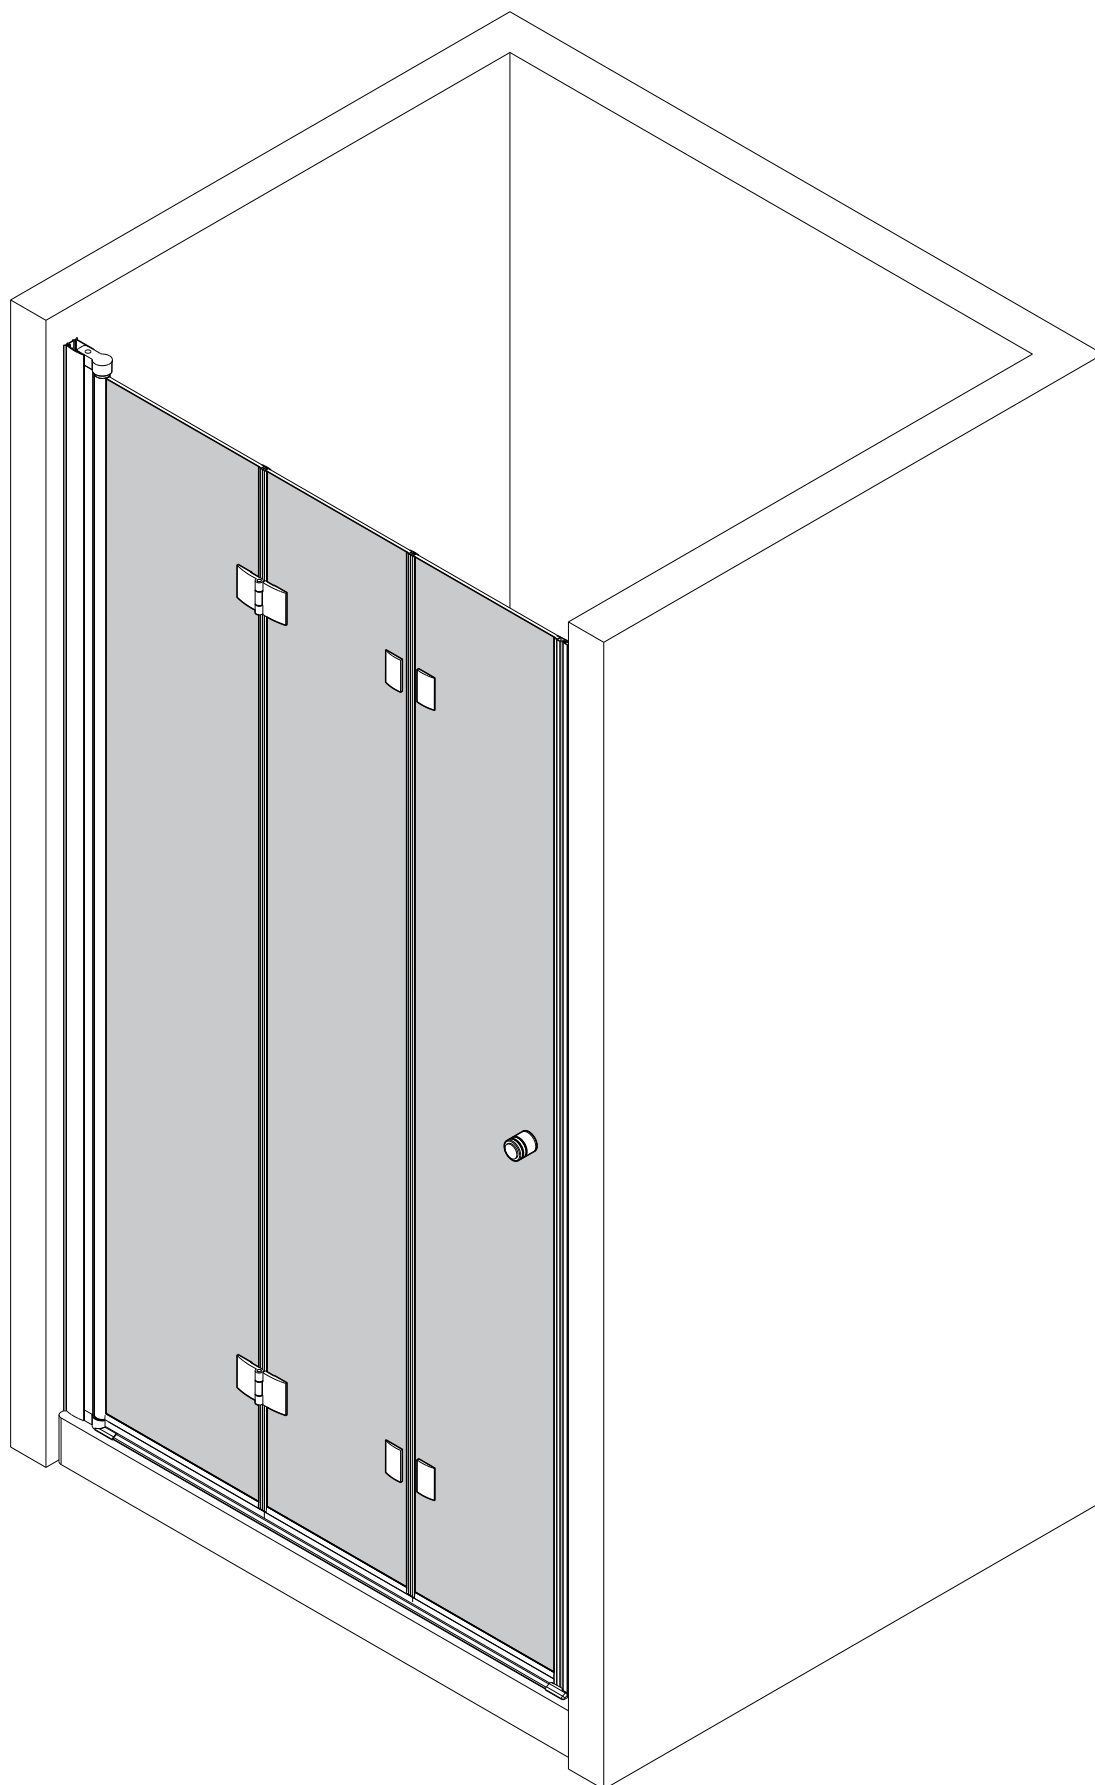

(Left-opening door)

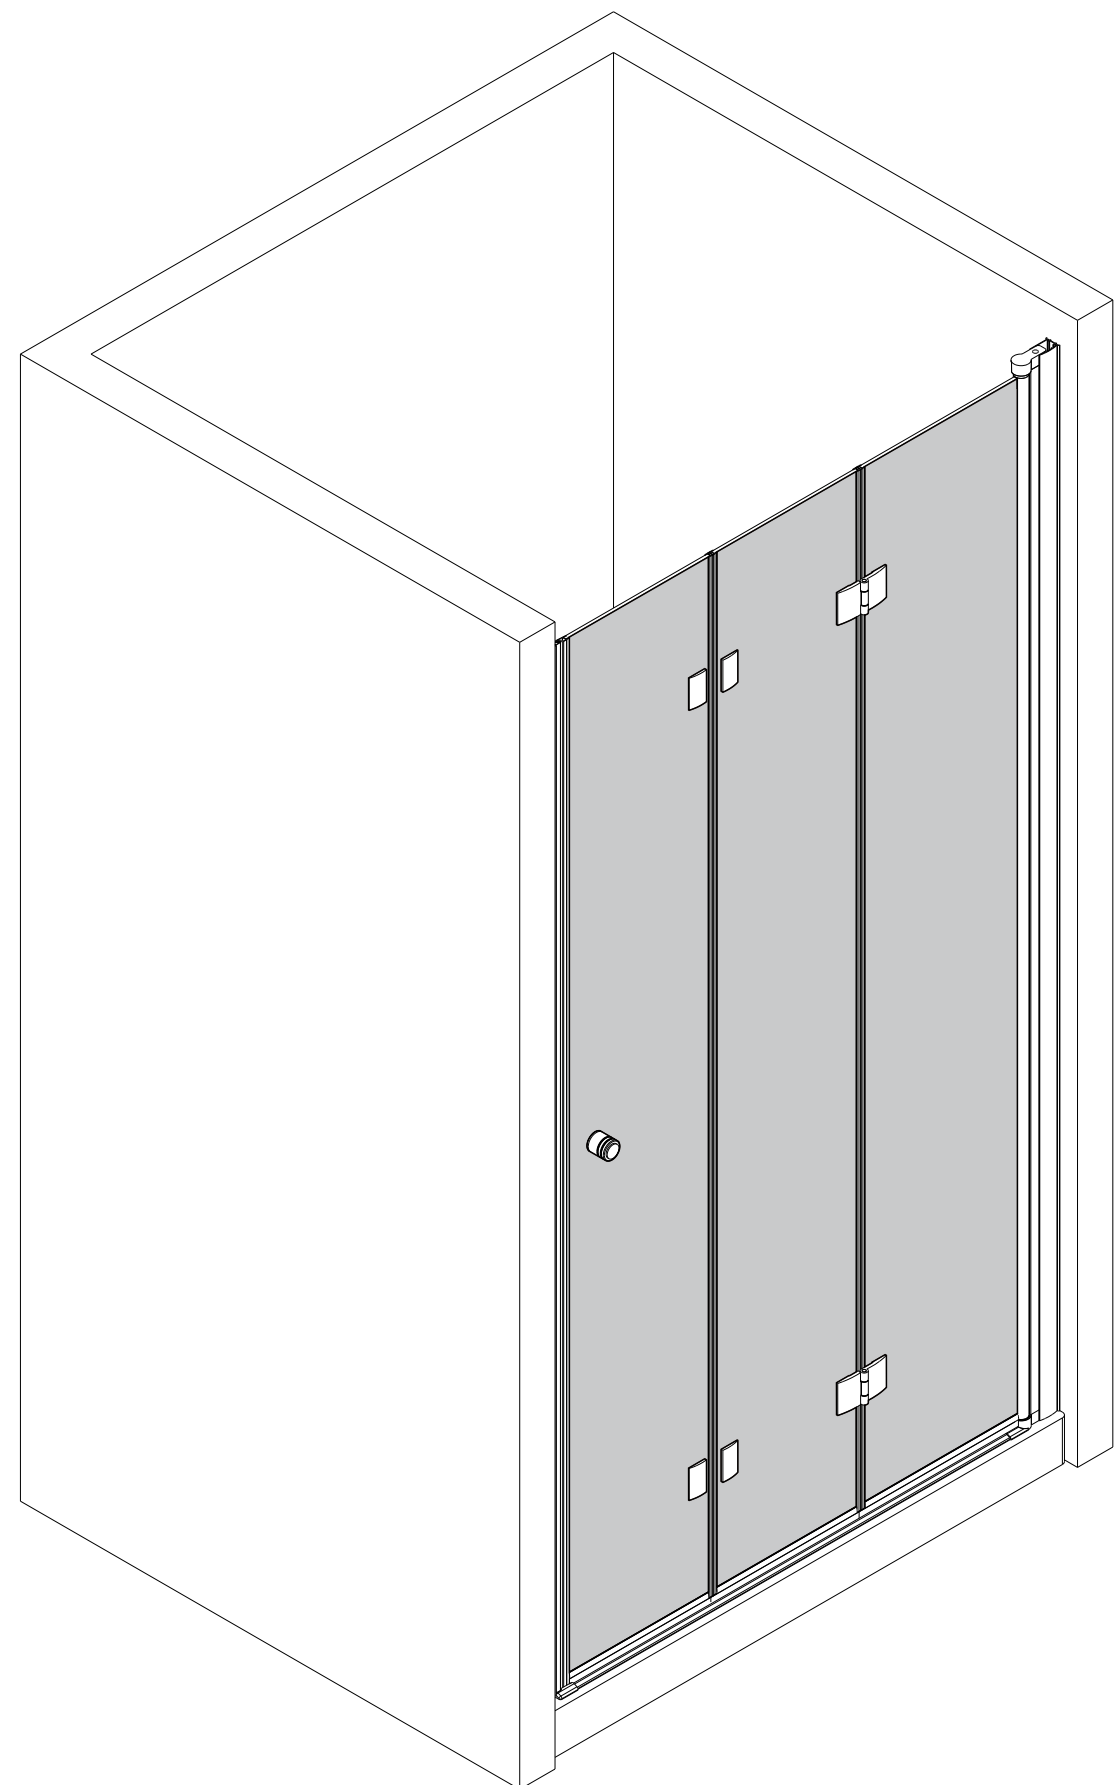

(Right-opening door)



Reversible For a Left or Right Door



**Please Do Not Return the Product to the Store.
Contact us with any questions.**

Model Specific Preparation


 **REQUIRED:**

Verify threshold and wall with a level.

3/8"(10mm) Maximum out of plumb adjustment from top to bottom

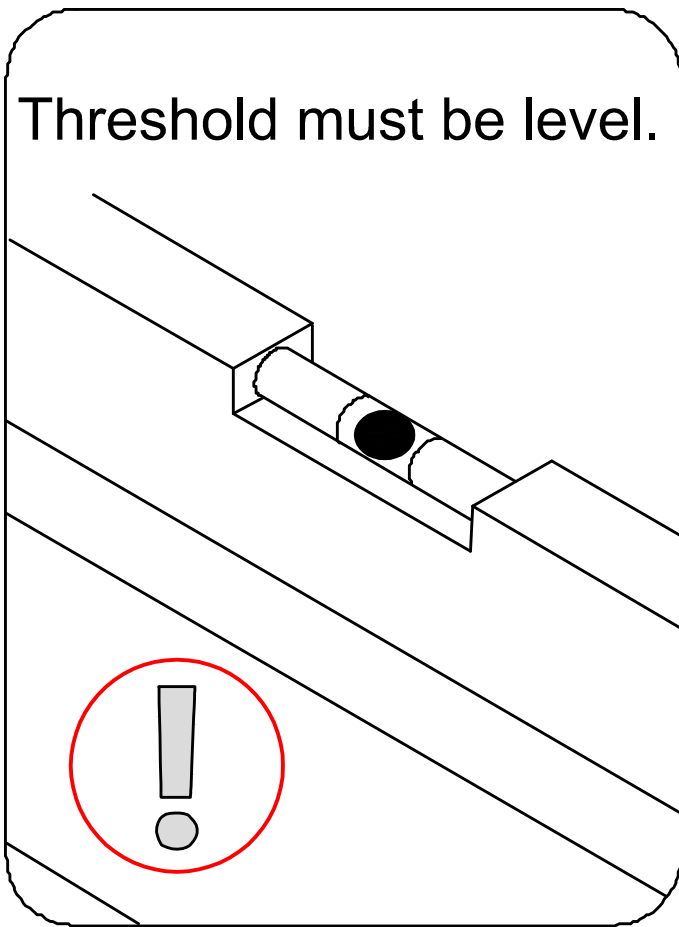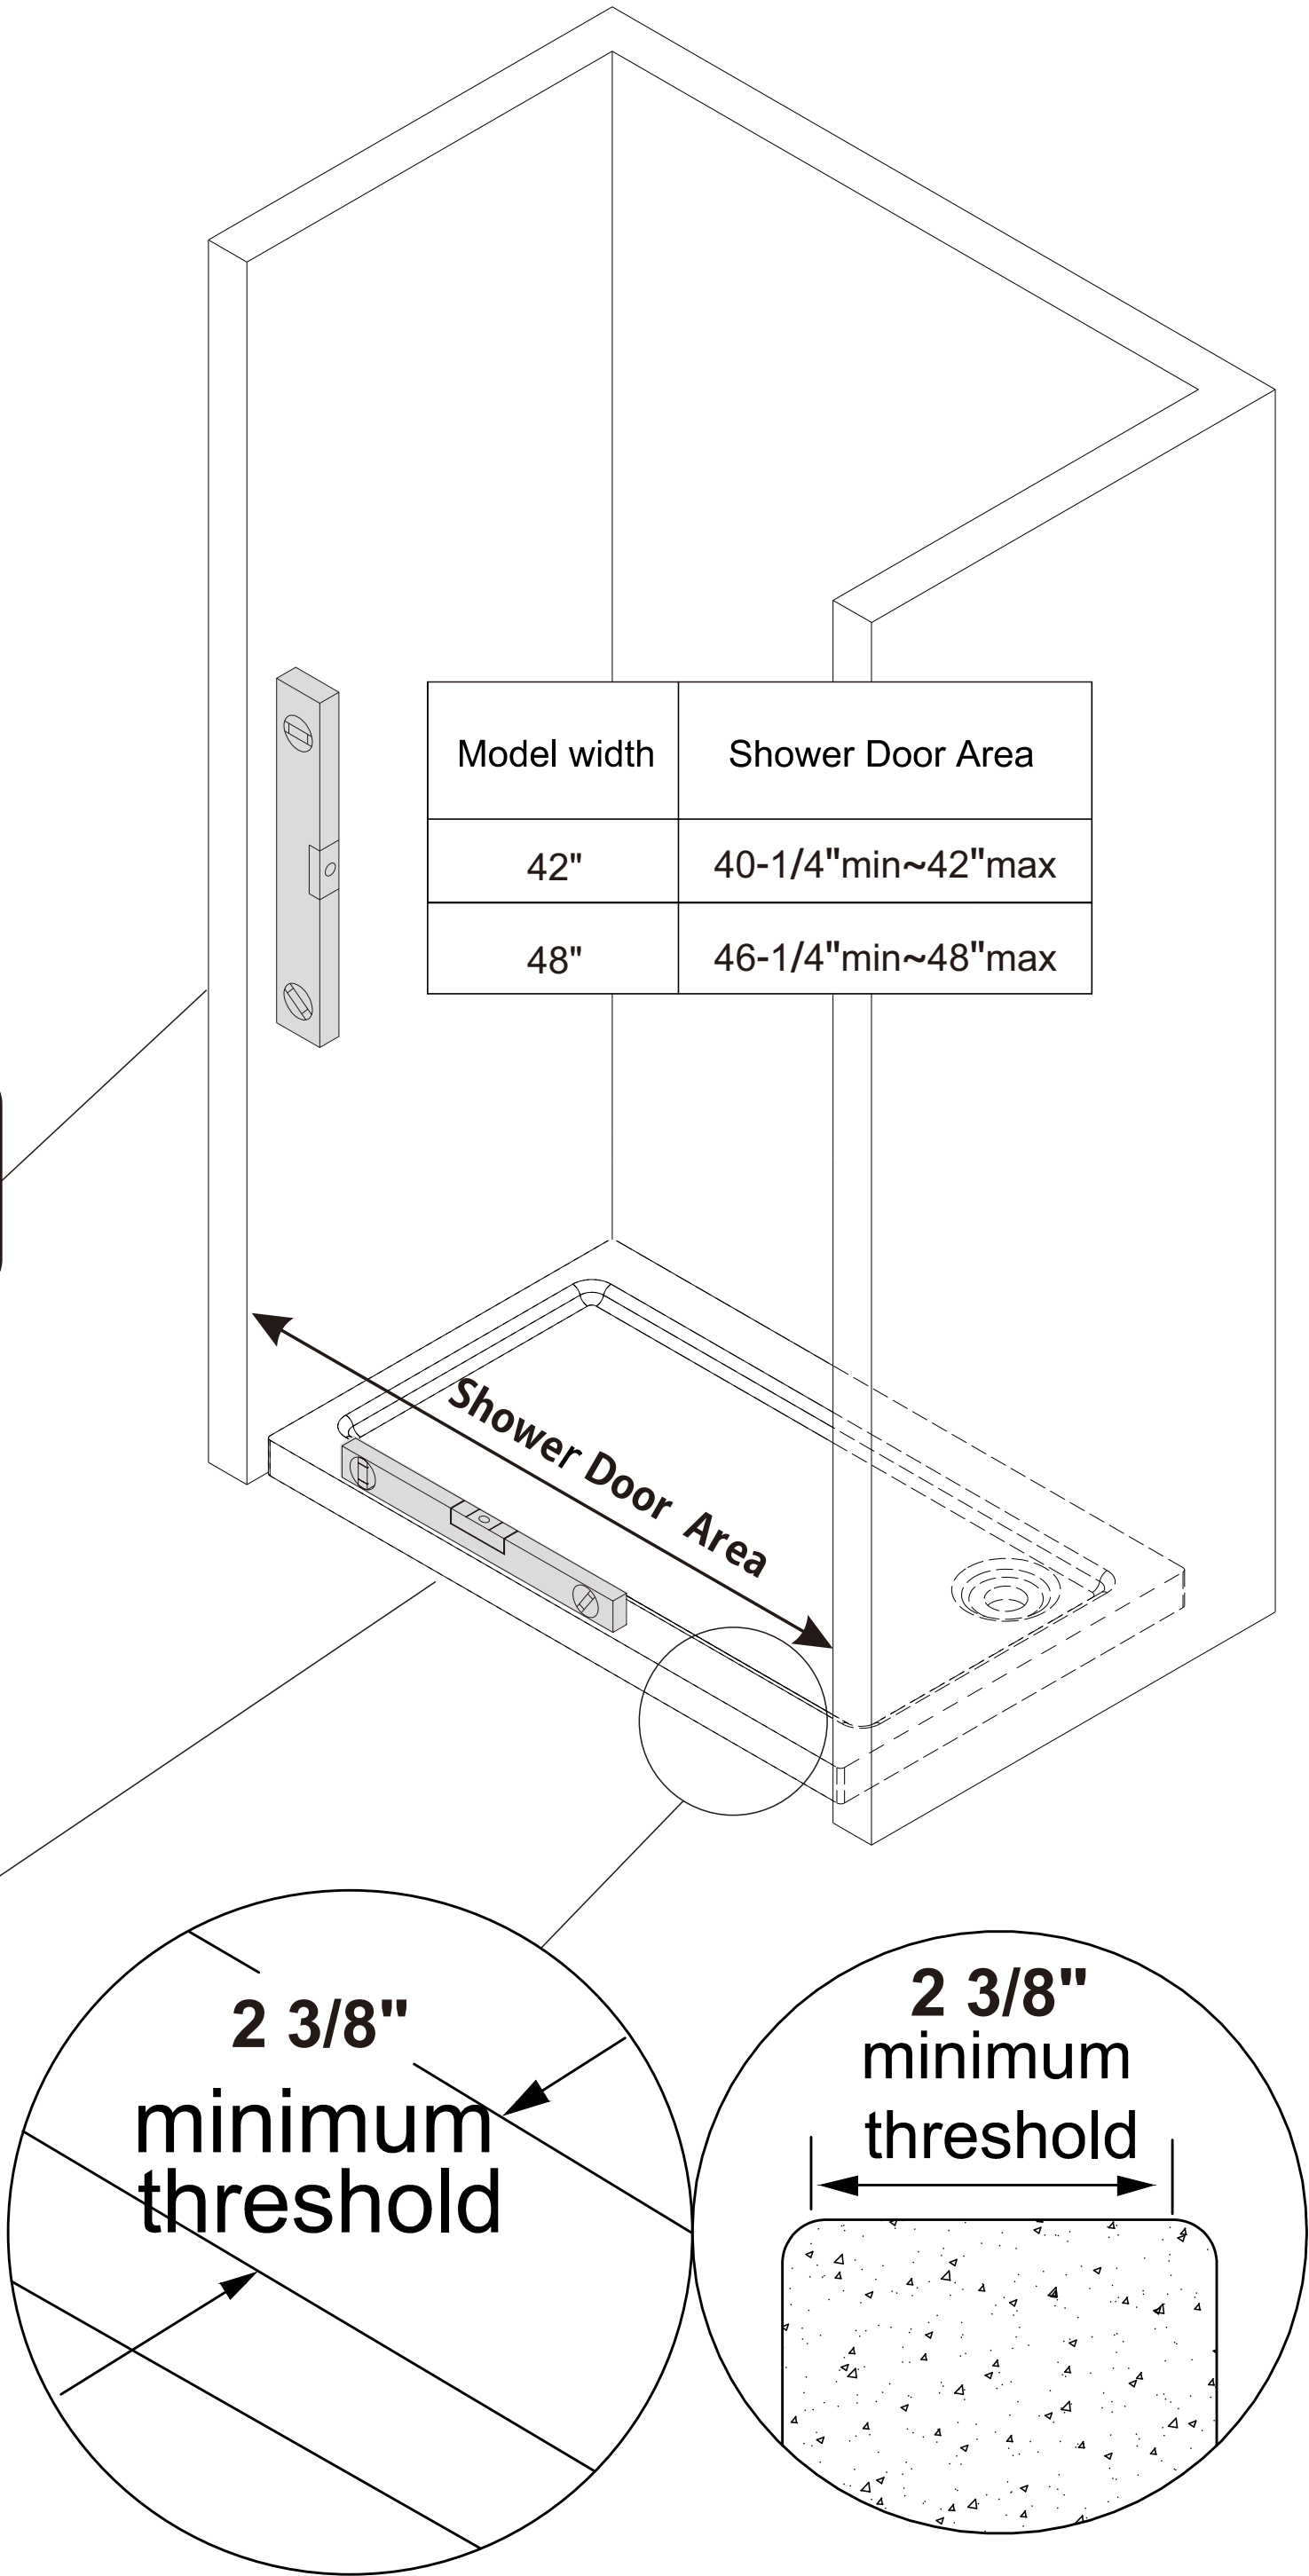

PACKAGE CONTENT



















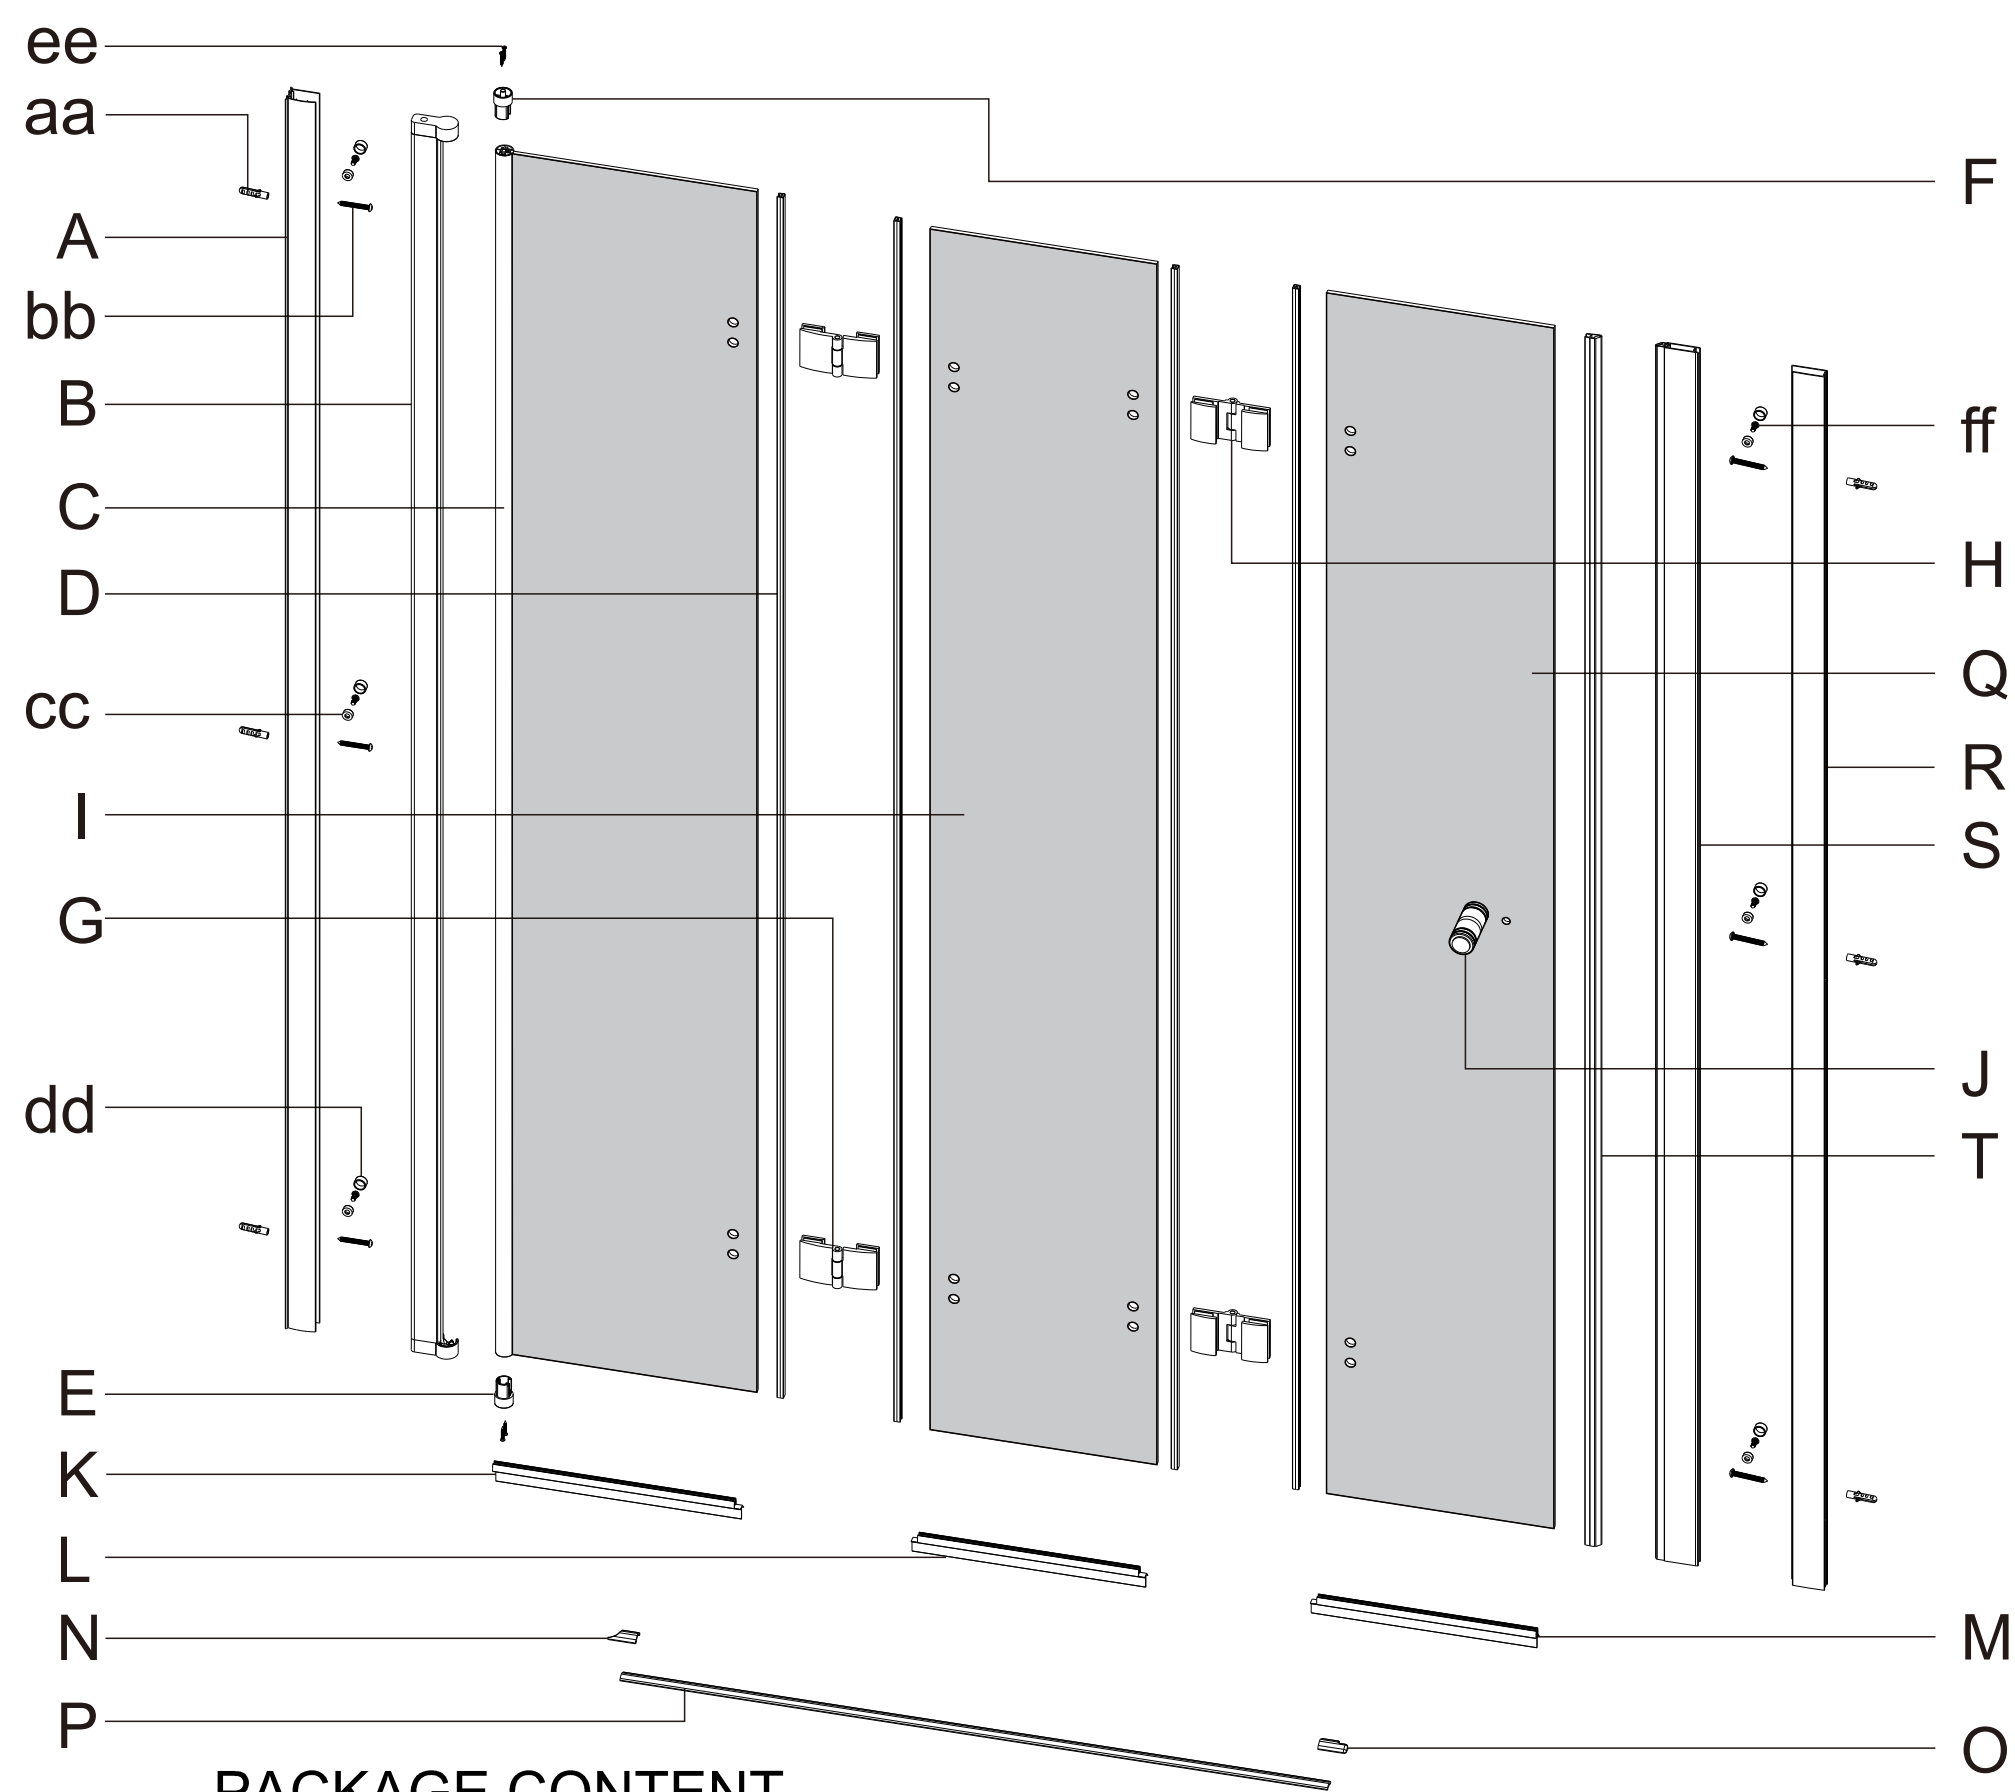


PACKAGE CONTENT

PART#	DESCRIPTION	QTY	PART#	DESCRIPTION	QTY
A	Wall Jamb	1	K	Bottom Anti-Water Strip	2
B	Upright Profile	1	L	Bottom Anti-Water Strip	1
C	Stationary Glass	1	M	Bottom Anti-Water Strip	1
D	Anti-Water Strip	4	N	Connector	2
E	Bottom pivot sleeve	1	O	Connector	2
F	Top pivot sleeve	1	P	Alu. Threshold	1
G	Hinge	2	Q	Glass Door	1
H	Hinge	2	R	Wall Jamb	1
I	Glass Door	1	S	Upright Profile	1
J	Handle	1	T	Magnetic stripe	1

NOTE Inspect all parts for missing prior to installation!
Contact us for any part missing.

PACKAGE CONTENT

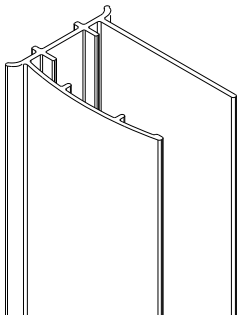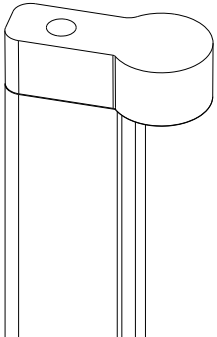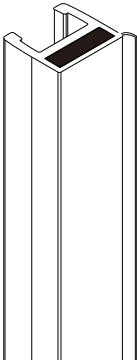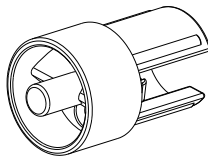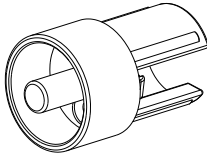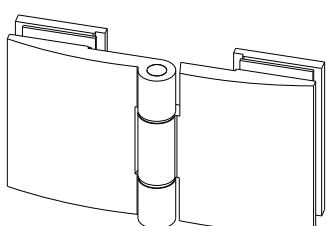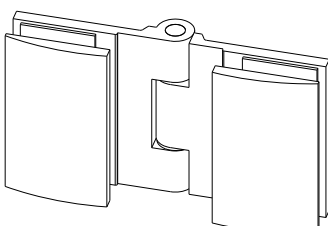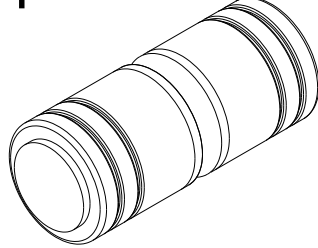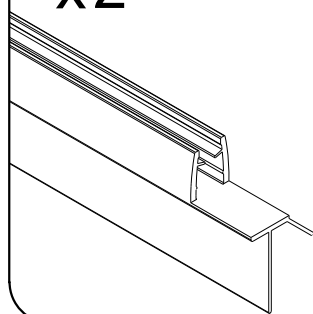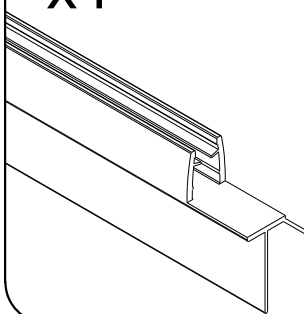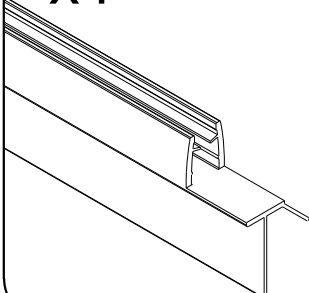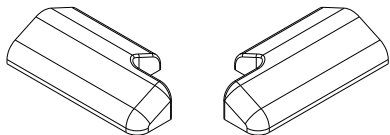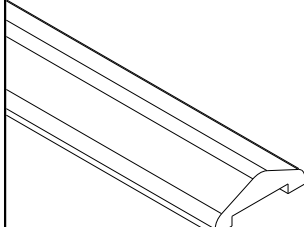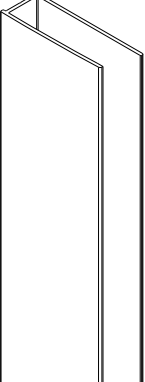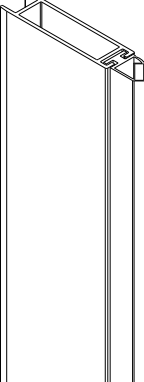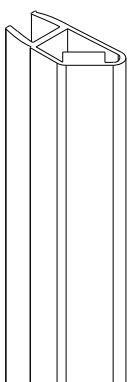
<div>A</div> <div>x1</div> <div></div>	<div>B</div> <div>x1</div> <div></div>	<div>C</div> <div>x1</div> <div></div>	<div>D</div> <div>x4</div> <div></div>
<div>E</div> <div>x1</div> <div></div>	<div>F</div> <div>x1</div> <div></div>	<div>G</div> <div>x2</div> <div></div>	<div>H</div> <div>x2</div> <div></div>
<div>I</div> <div>x1</div> <div></div>	<div>J</div> <div>x1</div> <div></div>	<div>K</div> <div>x2</div> <div></div>	<div>L</div> <div>x1</div> <div></div>
<div>M</div> <div>x1</div> <div></div>	<div>N</div> <div>x2</div> <div></div>	<div>O</div> <div>x2</div> <div></div>	<div>P</div> <div>x1</div> <div></div>
<div>Q</div> <div>x1</div> <div></div>	<div>R</div> <div>x1</div> <div></div>	<div>S</div> <div>x1</div> <div></div>	<div>T</div> <div>x1</div> <div></div>

HARDWARE CONTENT




Additional spare parts are included.

aa

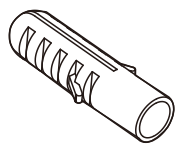


Wall anchor
Ø6x28mm
7 pcs

bb

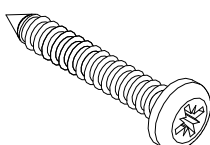


Screw
ST4X40mm
7 pcs

cc




Washer
Φ10XΦ5X1.0
6 pcs

dd

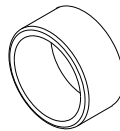


Screw cap
6 pcs

ee

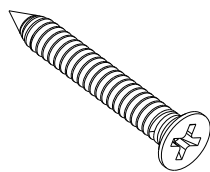


Screw
ST3X20mm
5 pcs

ff




Metric Screw
ST4X12mm
6 pcs

gg

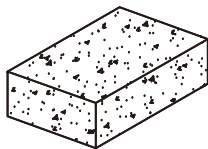

Plastic spacer
20mm(3/4")
2 pcs

hh




Positioning
Plate
1 pcs

ii




Positioning
Plate
1 pcs

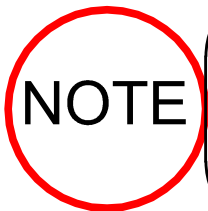

Inspect all parts for missing prior to installation!
Contact us for any part missing.


TOOLS REQUIRED

Drill Bits

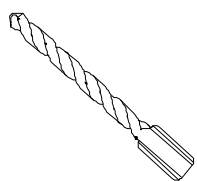


3.2/6mm dia.
HSS


Screw Driver

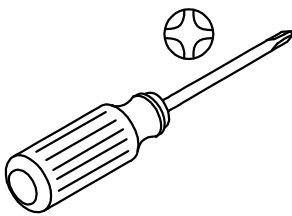


Drill

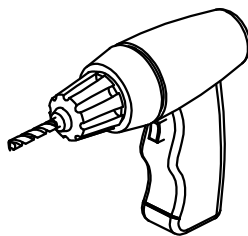


Level

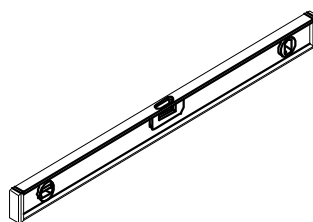


Silicone

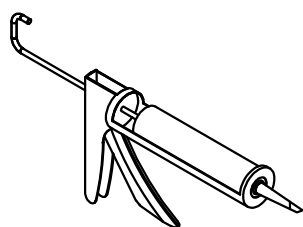


Measuring Tape

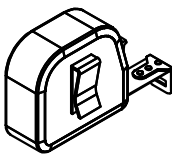


Soft Head
Hammer

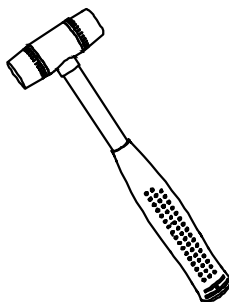


Pencil

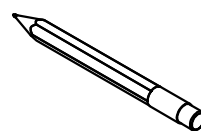

Knife

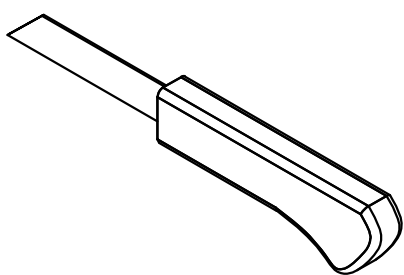


Sealant

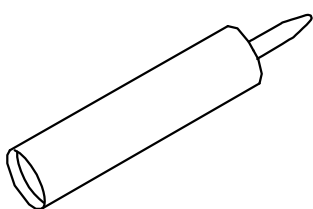

MASONRY DRILL
BIT FOR TILE
Ø6mm




Safety Glasses

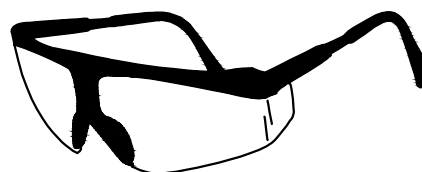


Glove




Carpenter's Squarer

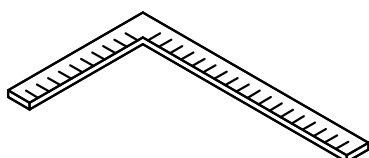


Masking or painter's
tape

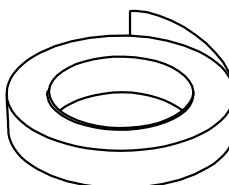

Hack Saw

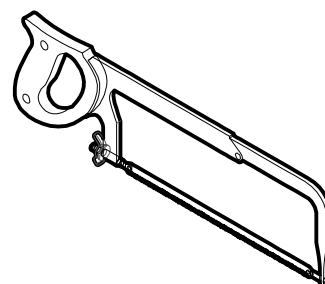

Metal File

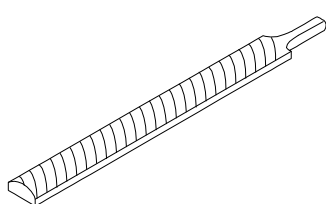

SAFETY INFORMATION


CAUTION

Please carefully read the following important safety information before handling or installing this shower. There is a risk of serious injury while handling this product.

To minimize these risks, please note:

- Always wear safety glasses and gloves while handling.
- Always follow the installation instructions.
- Inspect glass for damage before installation.
- Extreme caution should be taken while handling the glass during installation as the tempered glass may shatter if in contact with a hard surface.
- Do not cut or modify the tempered glass as it will shatter if cut.
- Carefully remove product from packaging and keep packaging until installation is complete.
- Inspect all parts for damage or missing; if there is damage or part missing to the unit prior to installation, please contact customer service at the number provided in this guide.
- Cover the drain with tape to prevent the loss of small parts.
- The shower base and finished walls should be installed before beginning the shower door installation.
- During the installation, protect the shower floor with a drop cloth to avoid damage.
- This product should be installed by two people who are familiar with construction requirements. Professional installation is recommended!
- Keep this installation manual for future reference.


NOTE: Two people should perform this installaton.

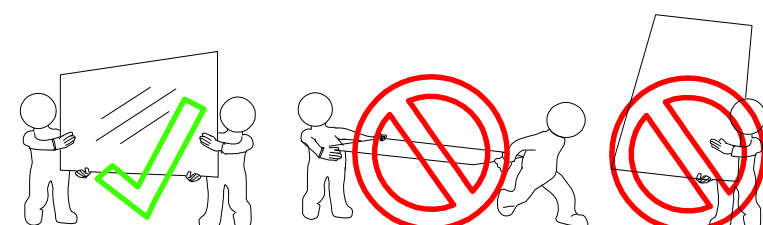

1 Measure the finished opening width.

NOTE

- 1.Measure the finished opening width at the bottom and at the model height.
- Use these dimensions as “W1” (top) and “W2”(bottom) in step #2.
- 2.Also check the threshold for level and the walls for plumb.

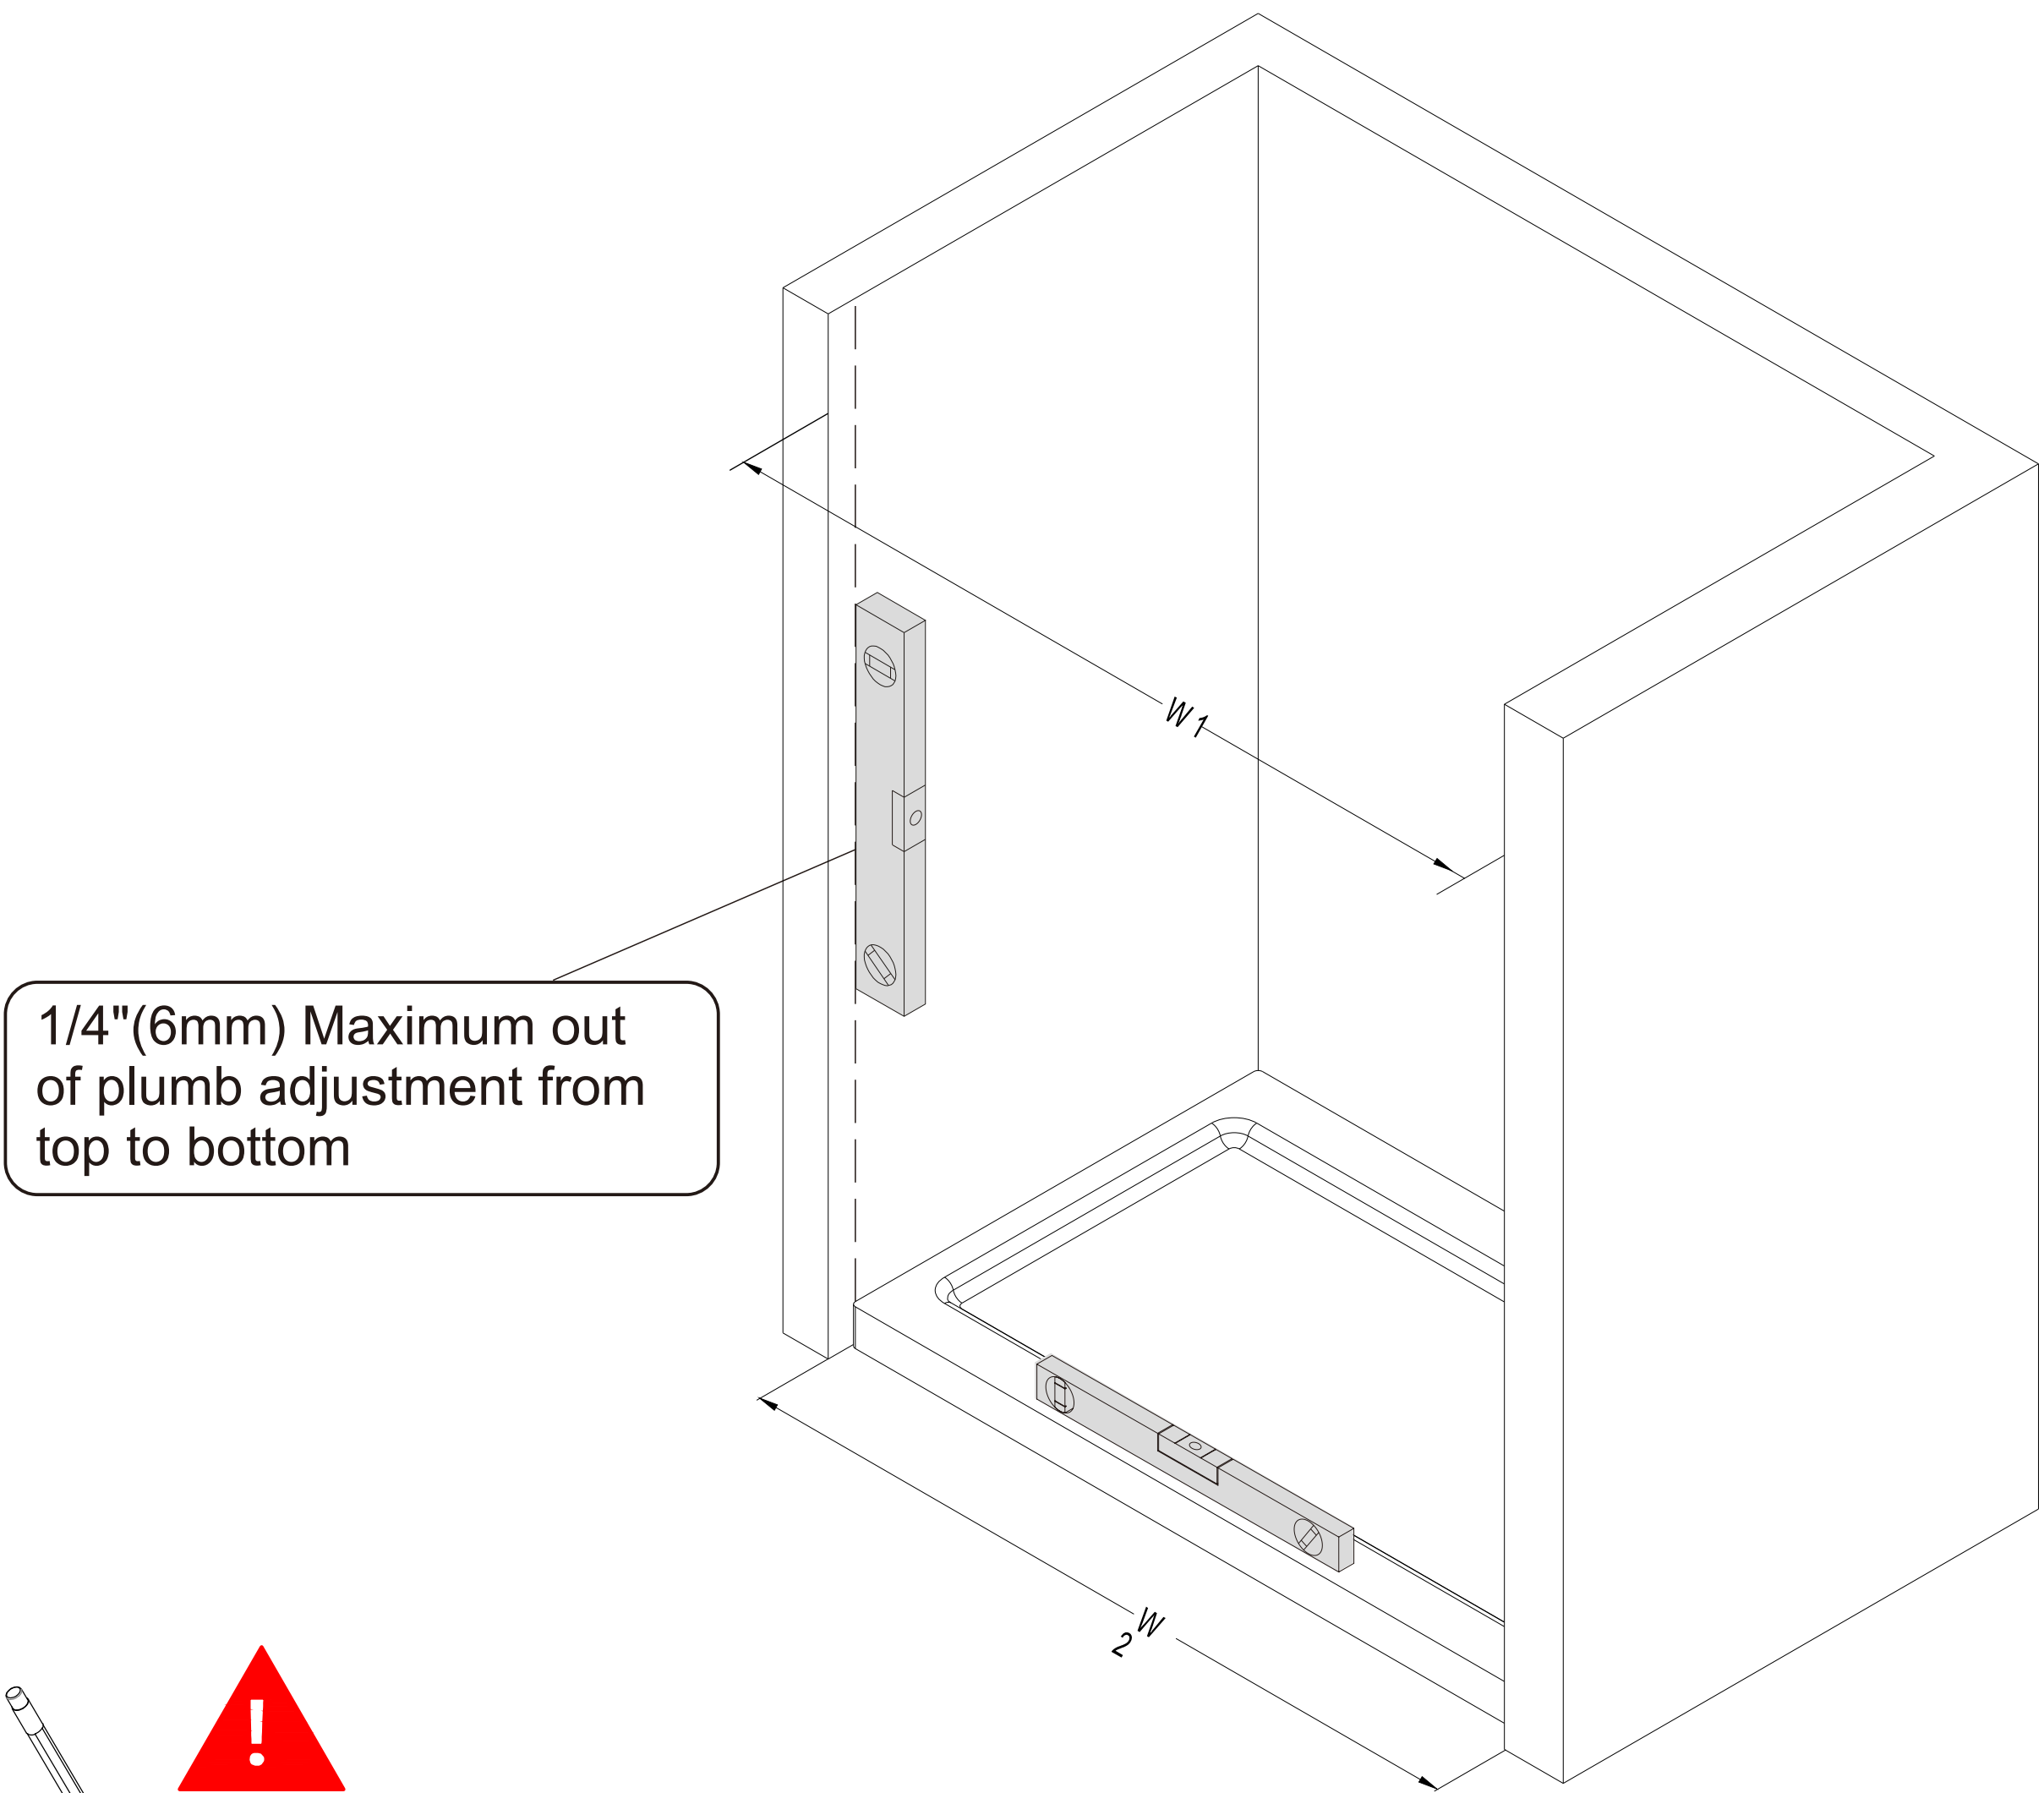


_____ Finished opening top (W1)

_____ Finished opening bottom (W2)

2-1 Confirm installation direction

NOTE



Use the Positioning Plate (hh&ii) according to the installation direction. This manual uses a left-opening door as an example.

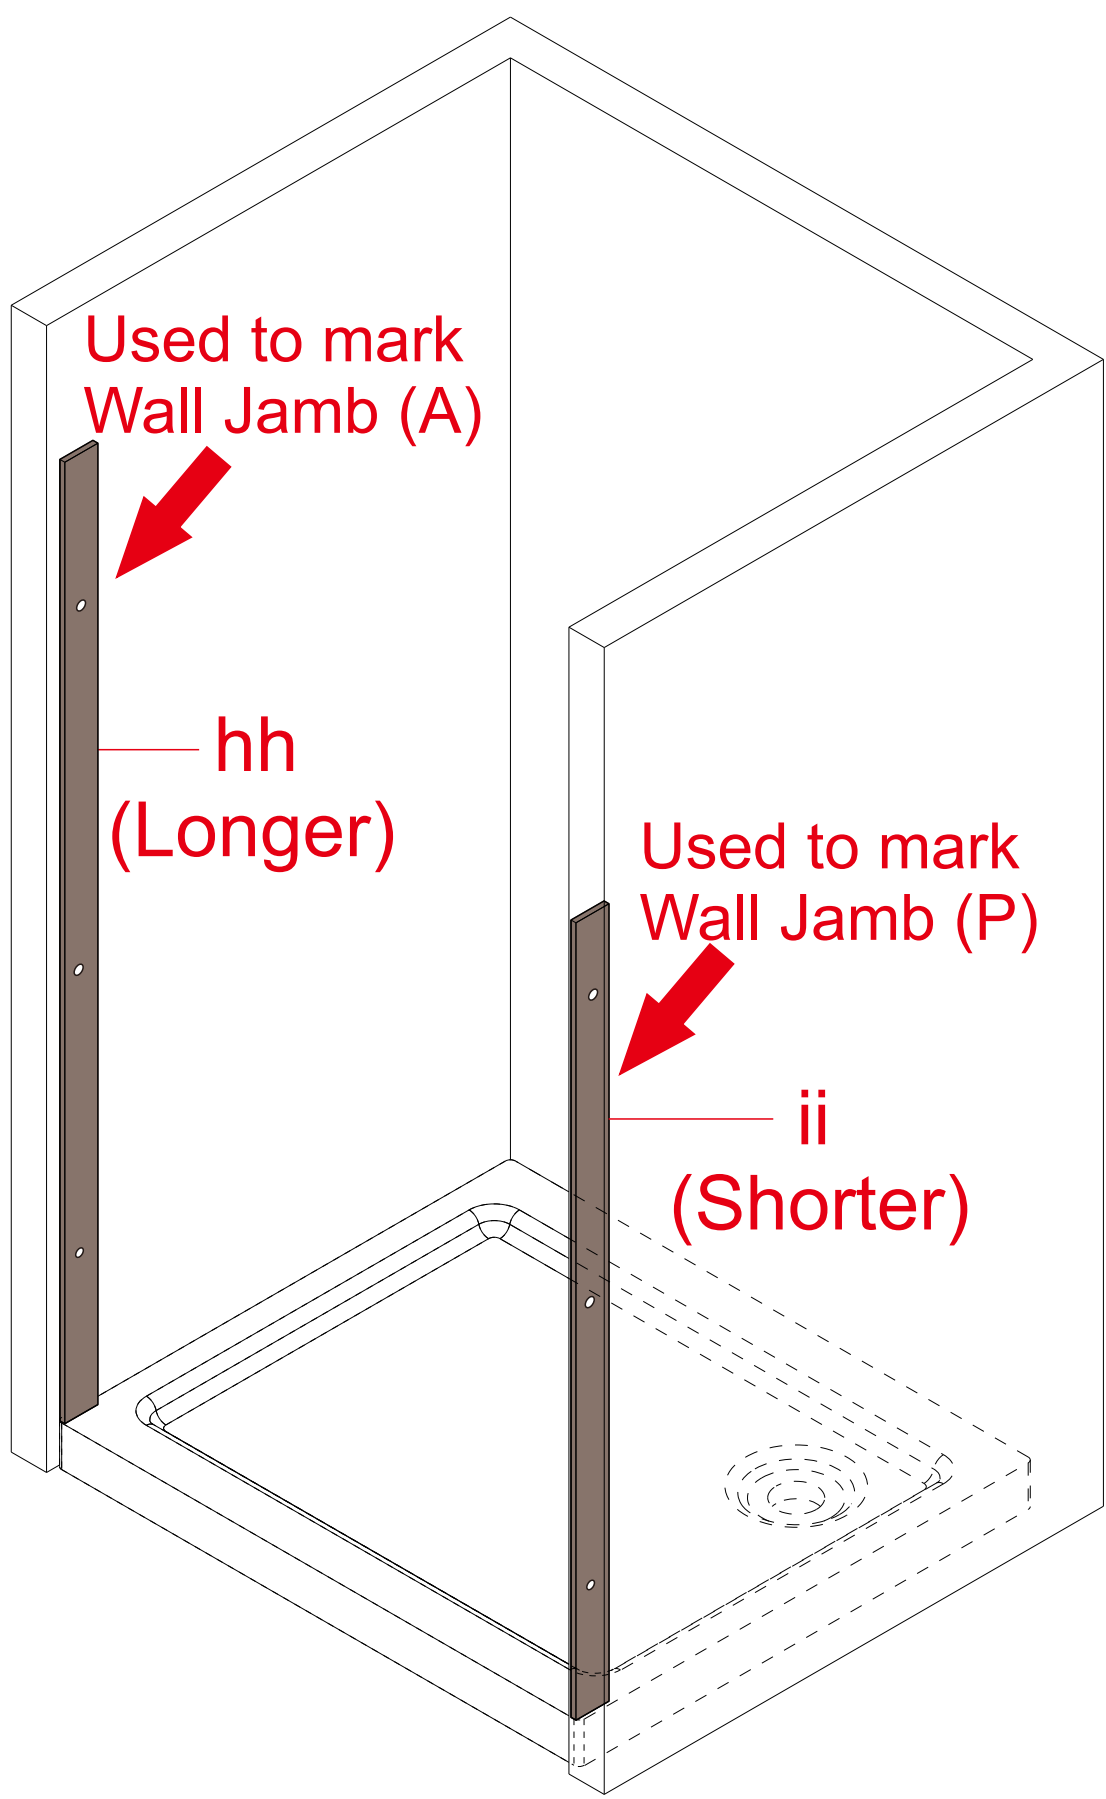

(Left-opening door)



Note: The shower door can be installed left or right, according to the need to determine the installation direction.

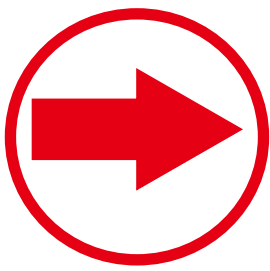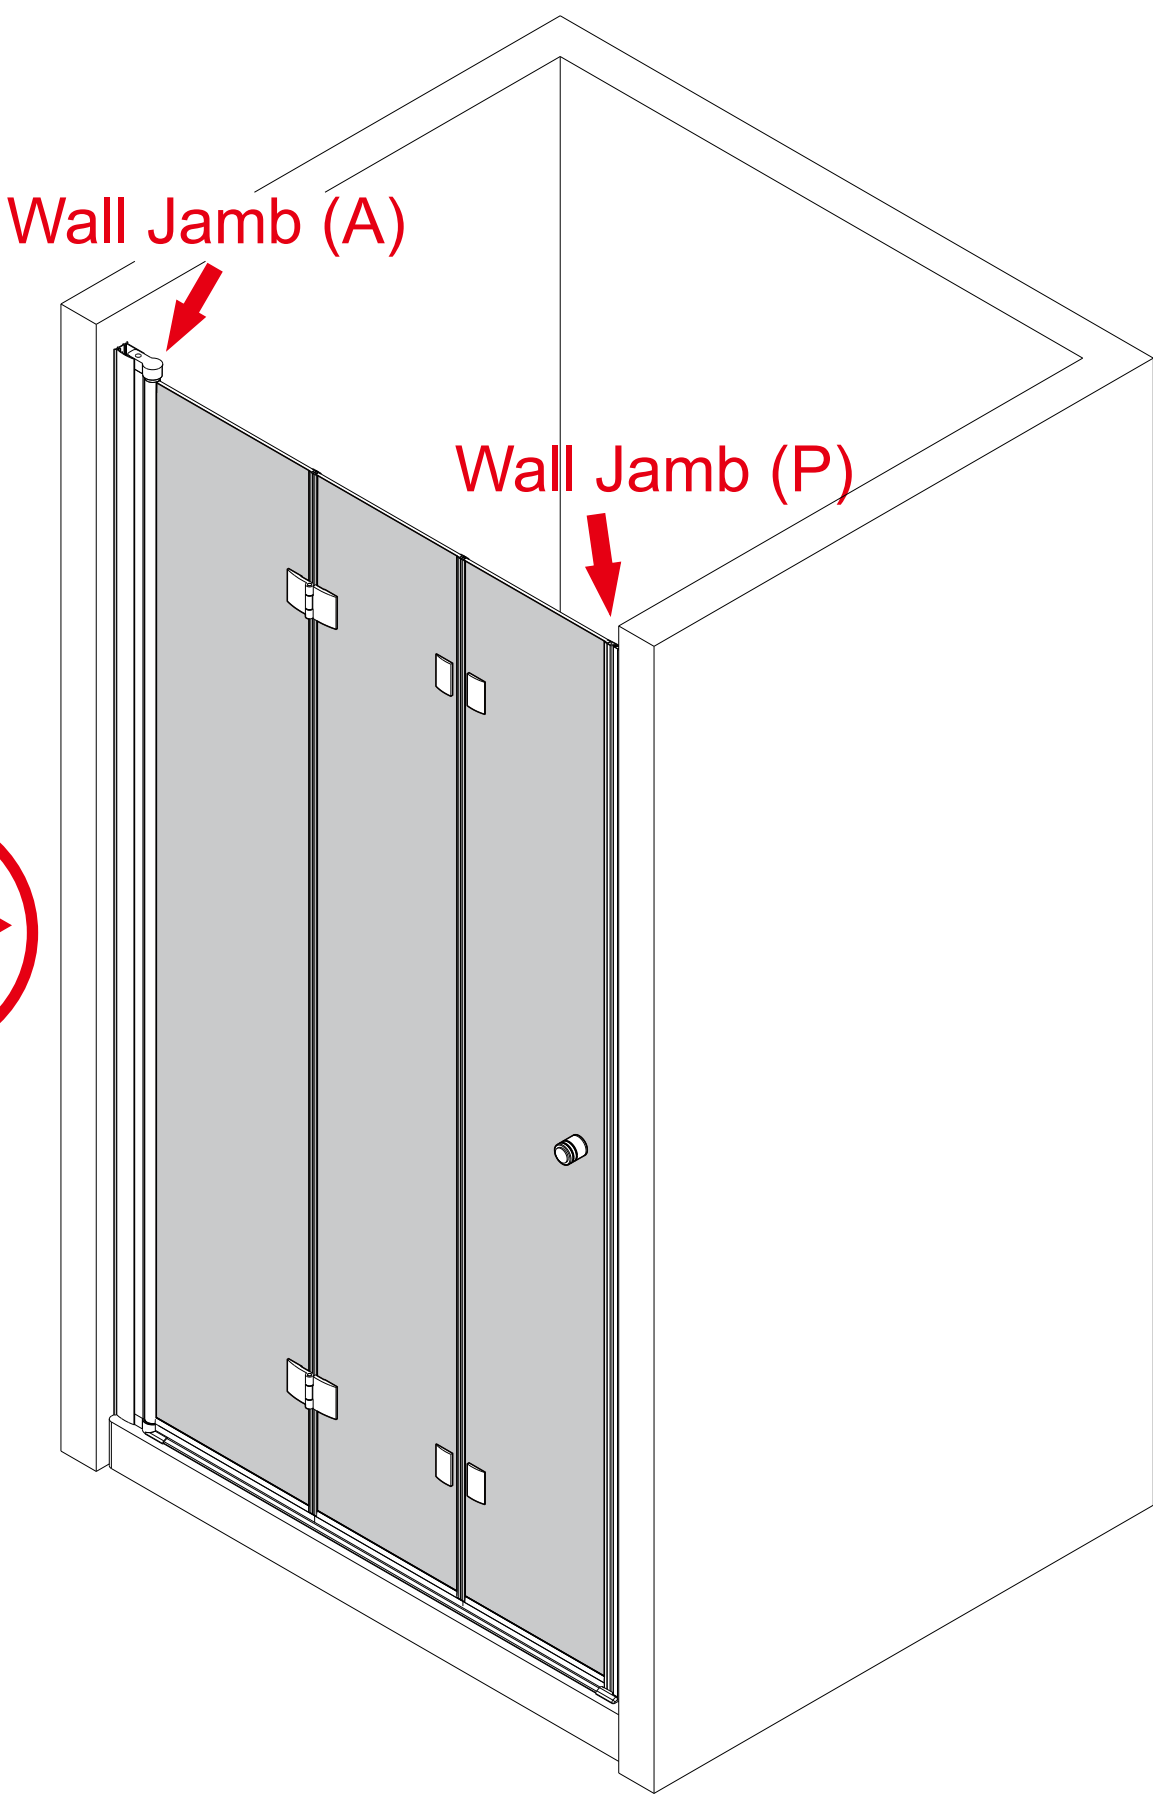

(Left-opening door)




This manual is based on an example of a left-opening door

2-2

Confirm installation direction

NOTE



Use the Positioning Plate (hh&ii) according to the installation direction. This manual uses a left-opening door as an example.

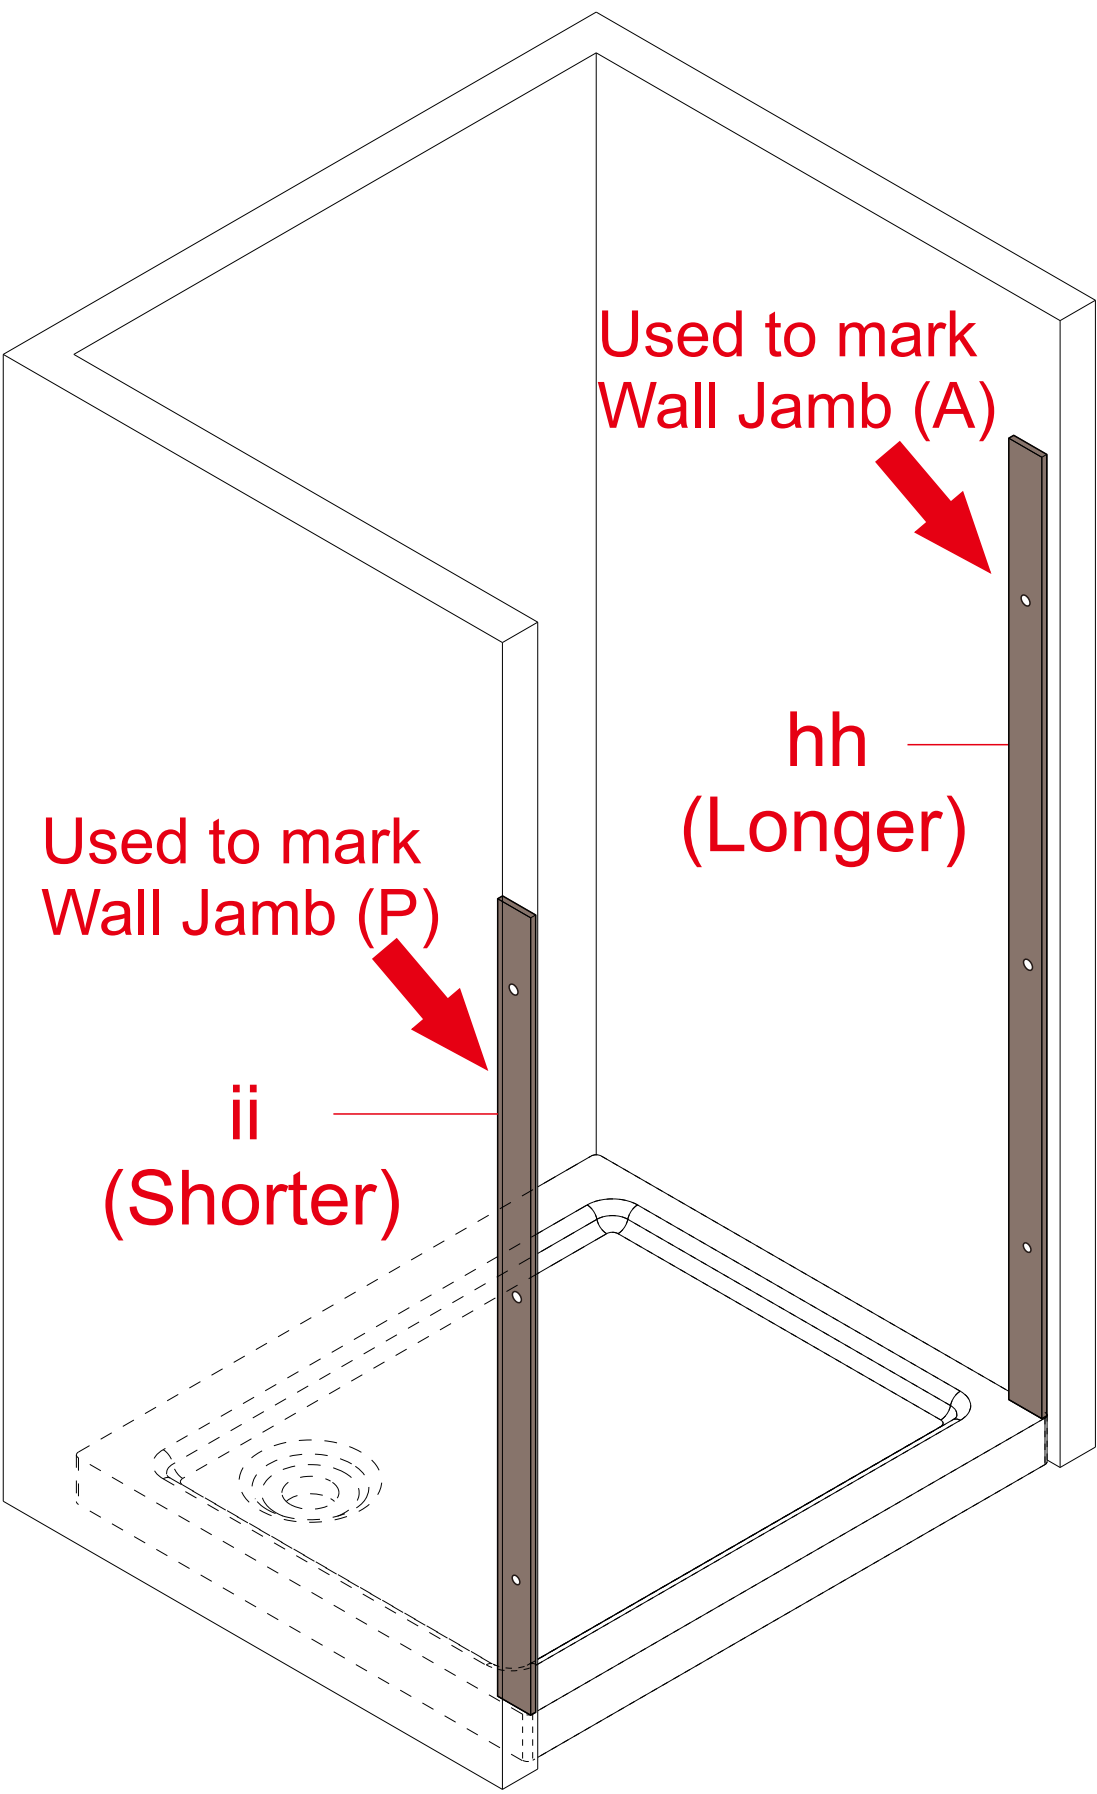

(Right-opening door)



Note: The shower door can be installed left or right, according to the need to determine the installation direction.

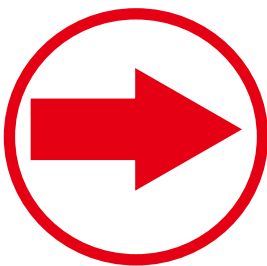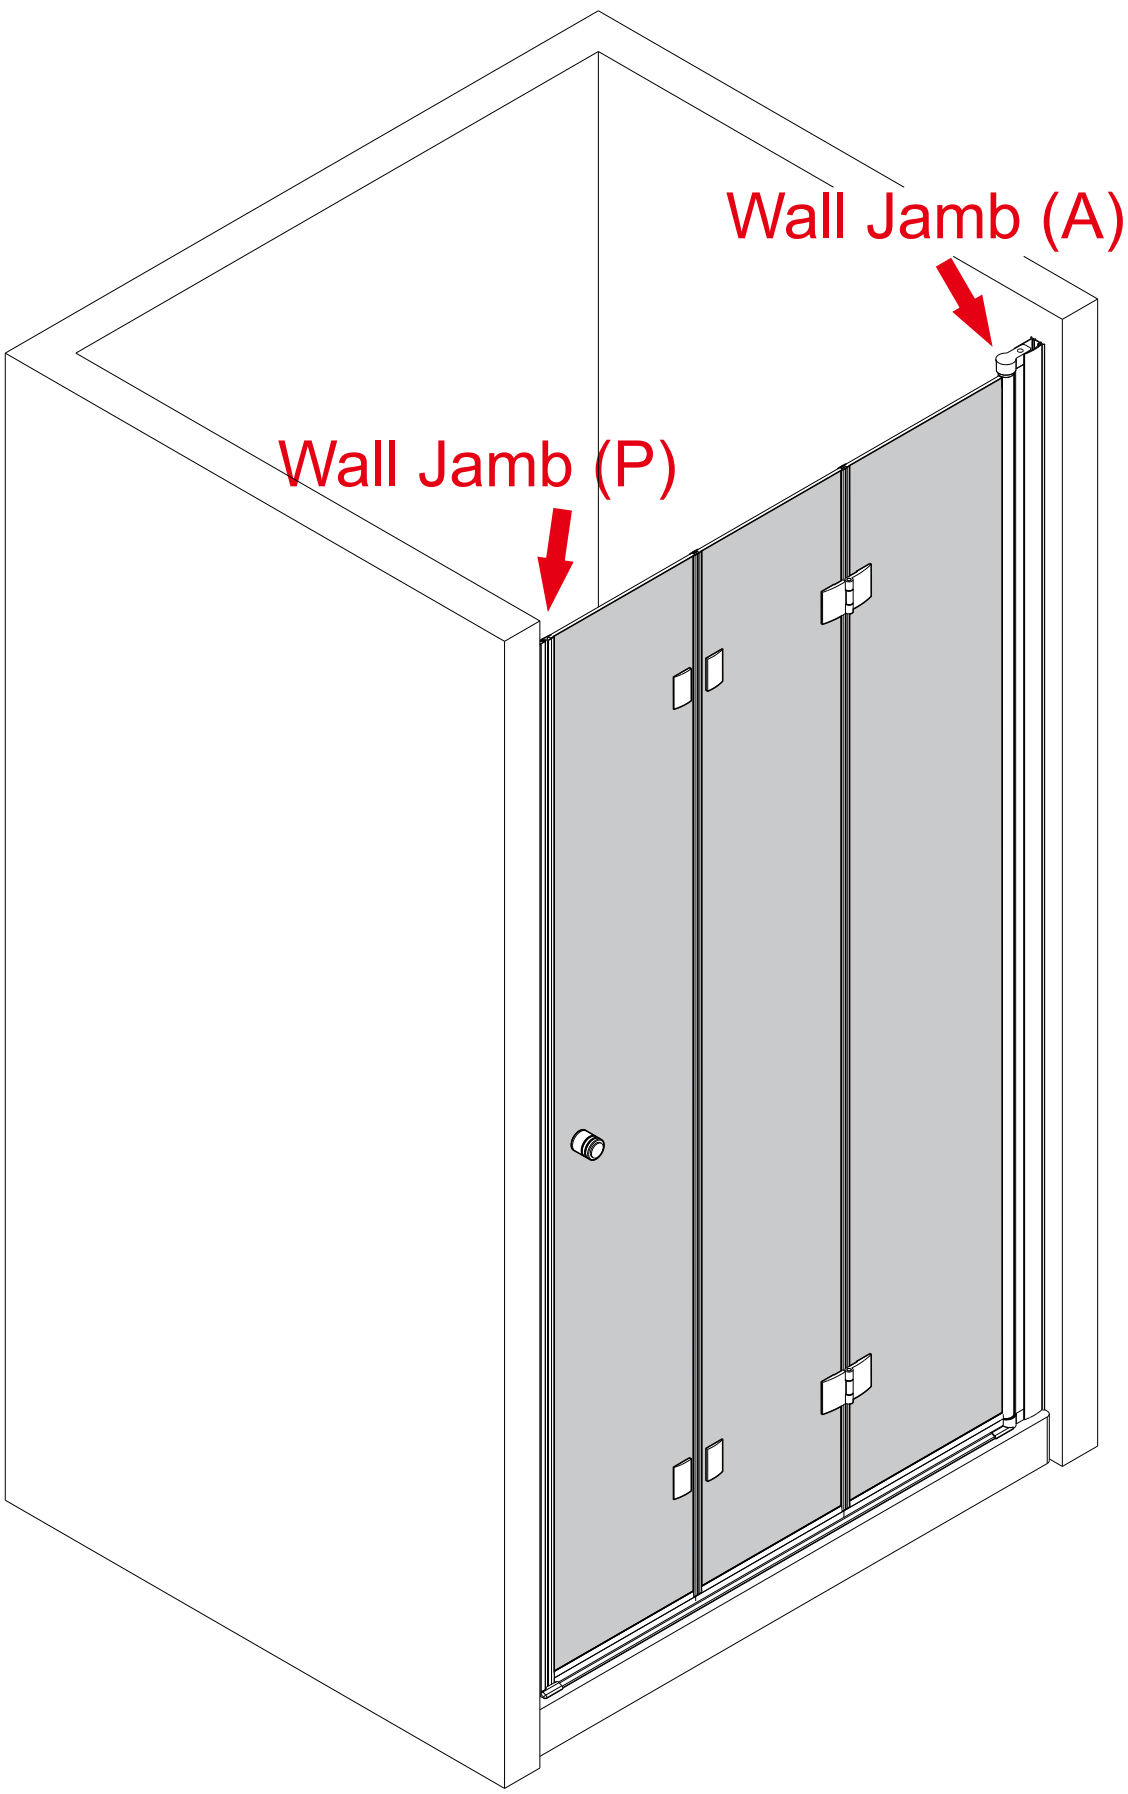

(Right-opening door)



This manual is based on an example of a left-opening door

3 Mark the location of **Wall Jamb (A)**

NOTE

1. Place the **Positioning plate(hh)** align the edge of the shower tray(threshold) as Fig.a .
- 2.Mark the **Wall Jamb (A)** hole positions with a pencil as Fig.b .


Fig.a

hh

Align model edges

Fig.b

Wall Jamb(A)
holes

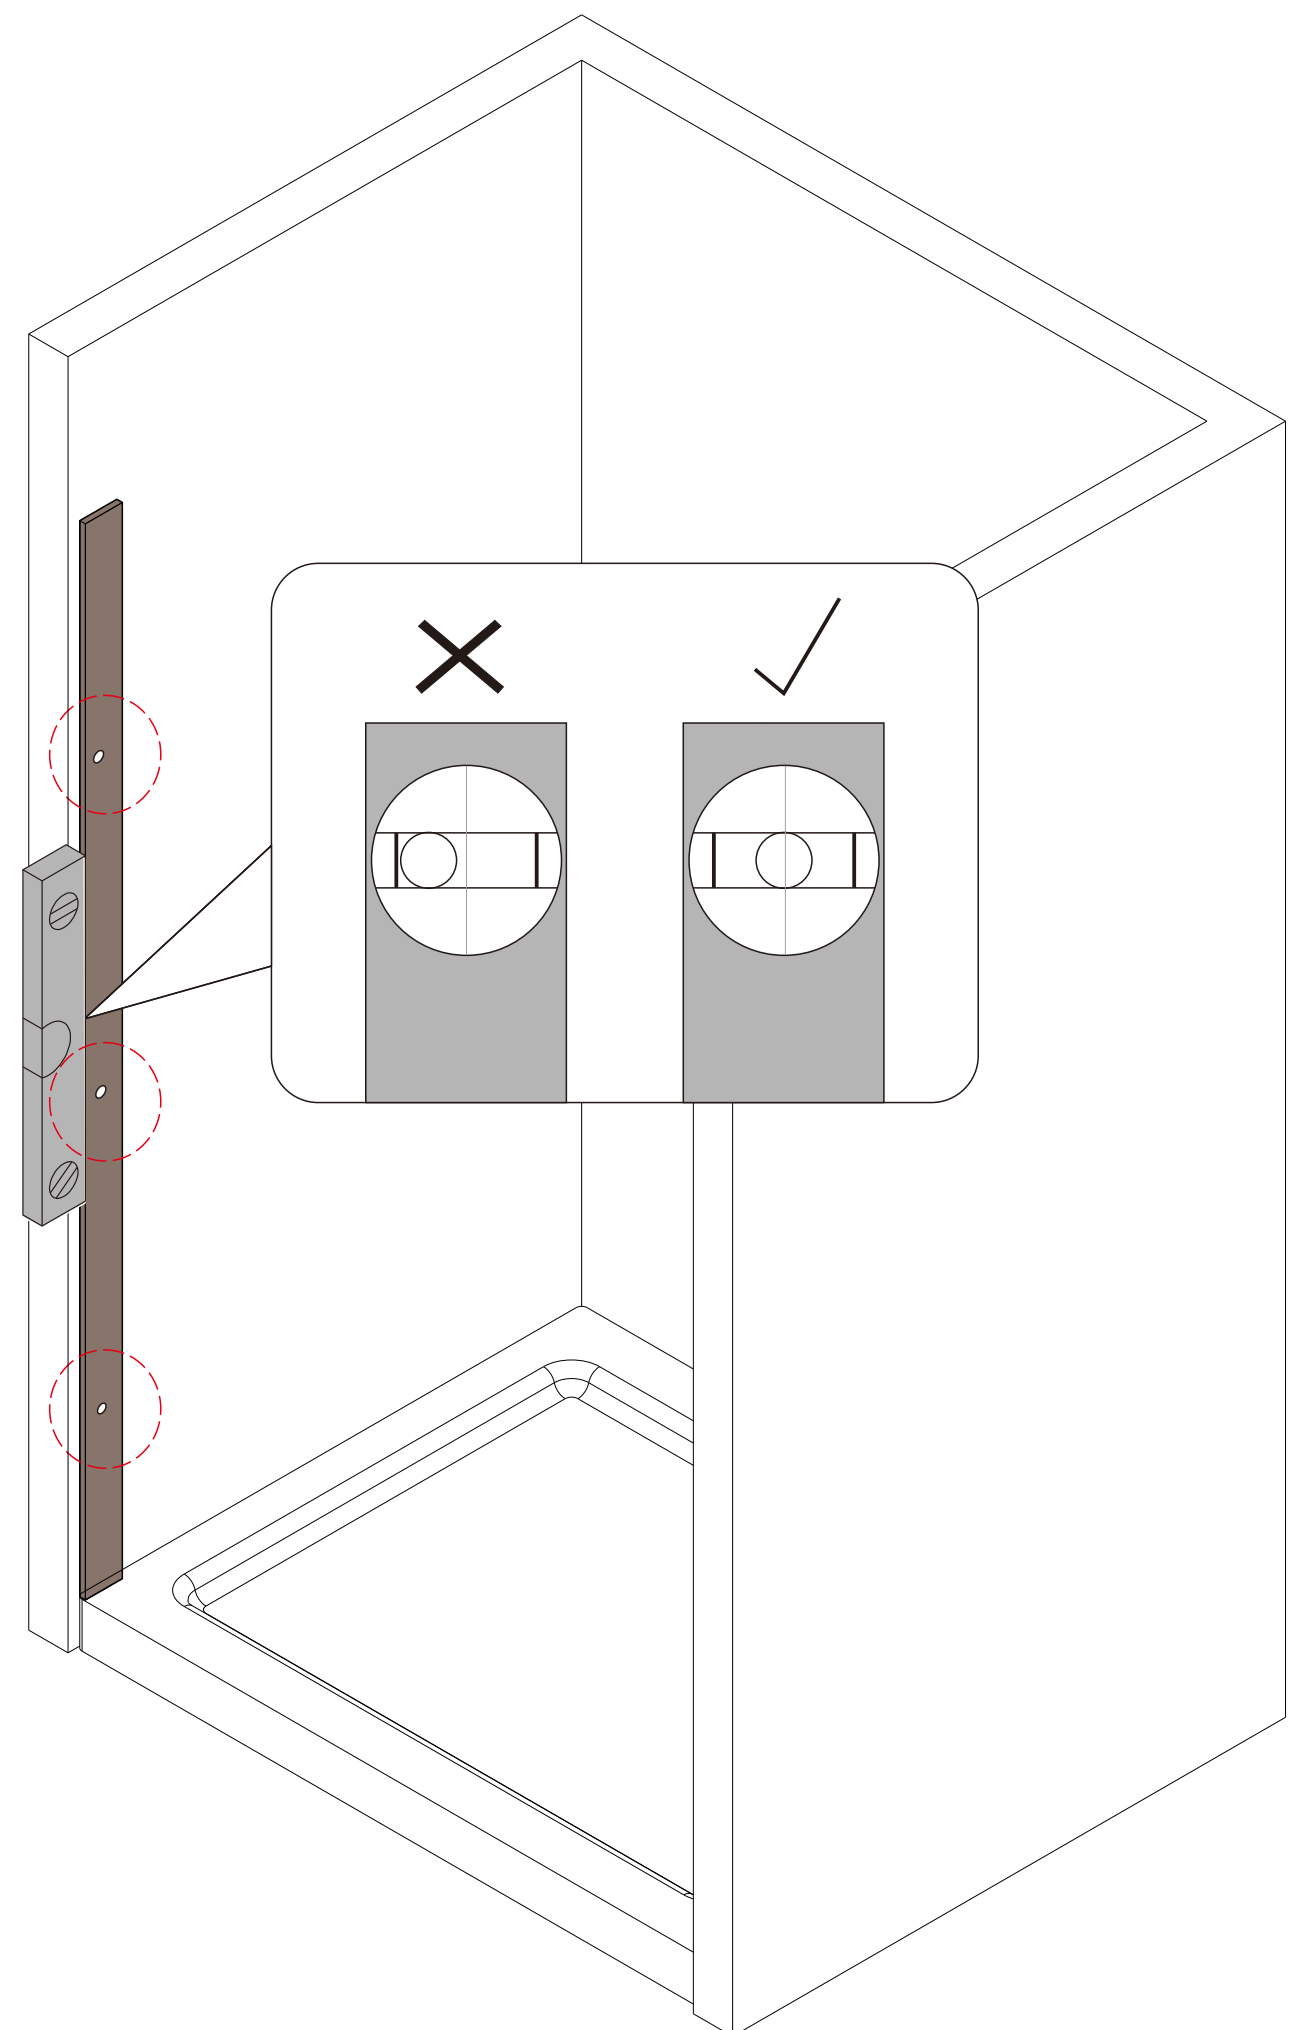

Note: The shower door can be installed left or right, according to the need to determine the installation direction.





This manual is based on an example of a left-opening door

4 Install **Wall Anchor(aa)**

NOTE

1. Drill holes with ϕ 6mm(1/4") drill bit as Fig.a .
2. Insert **Wall Anchors(aa)** as Fig.b .

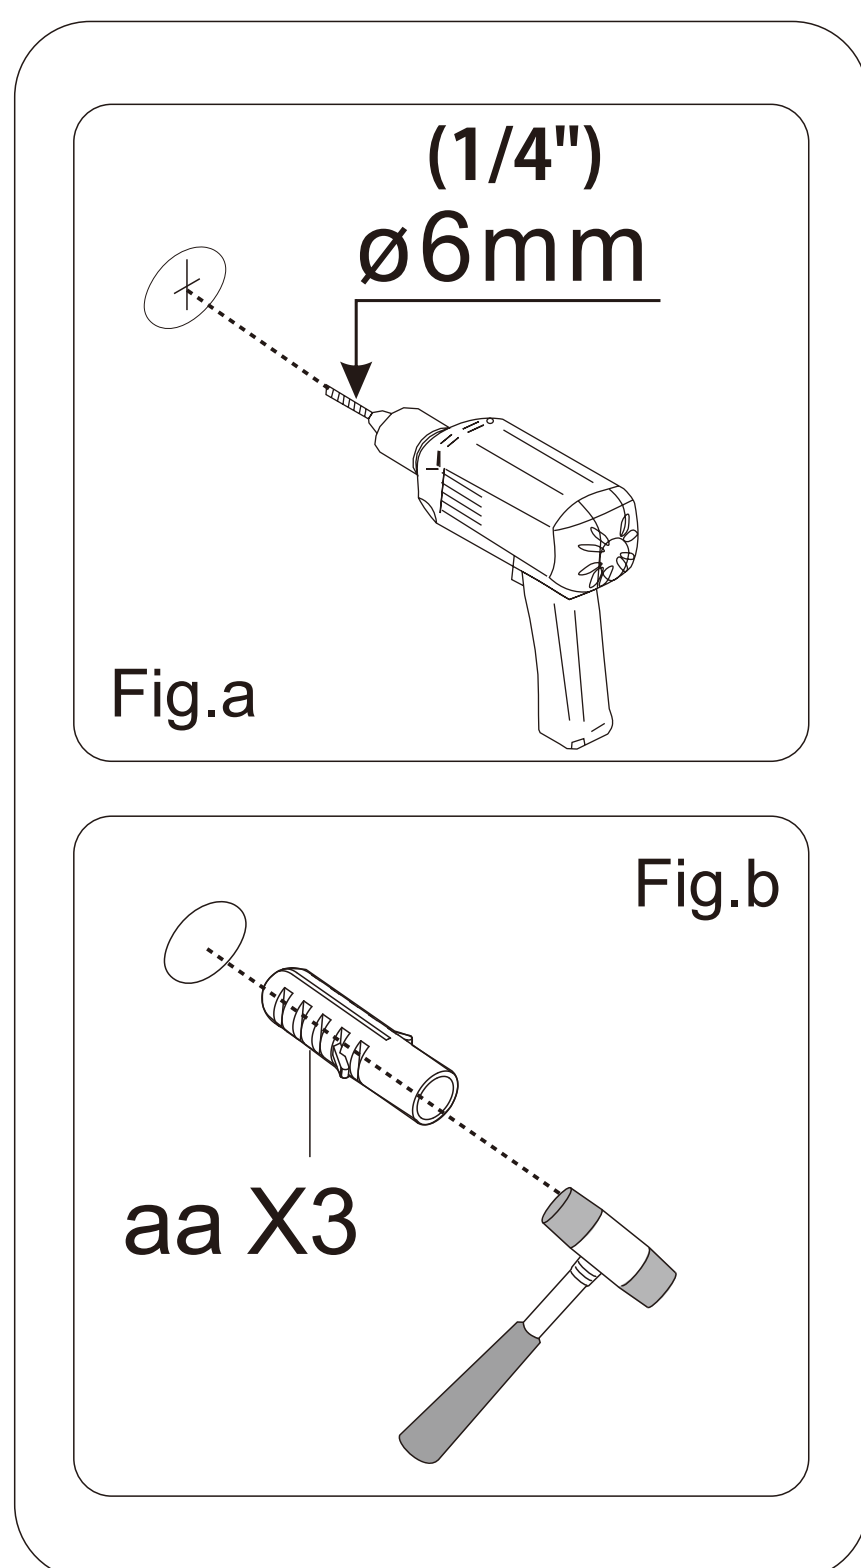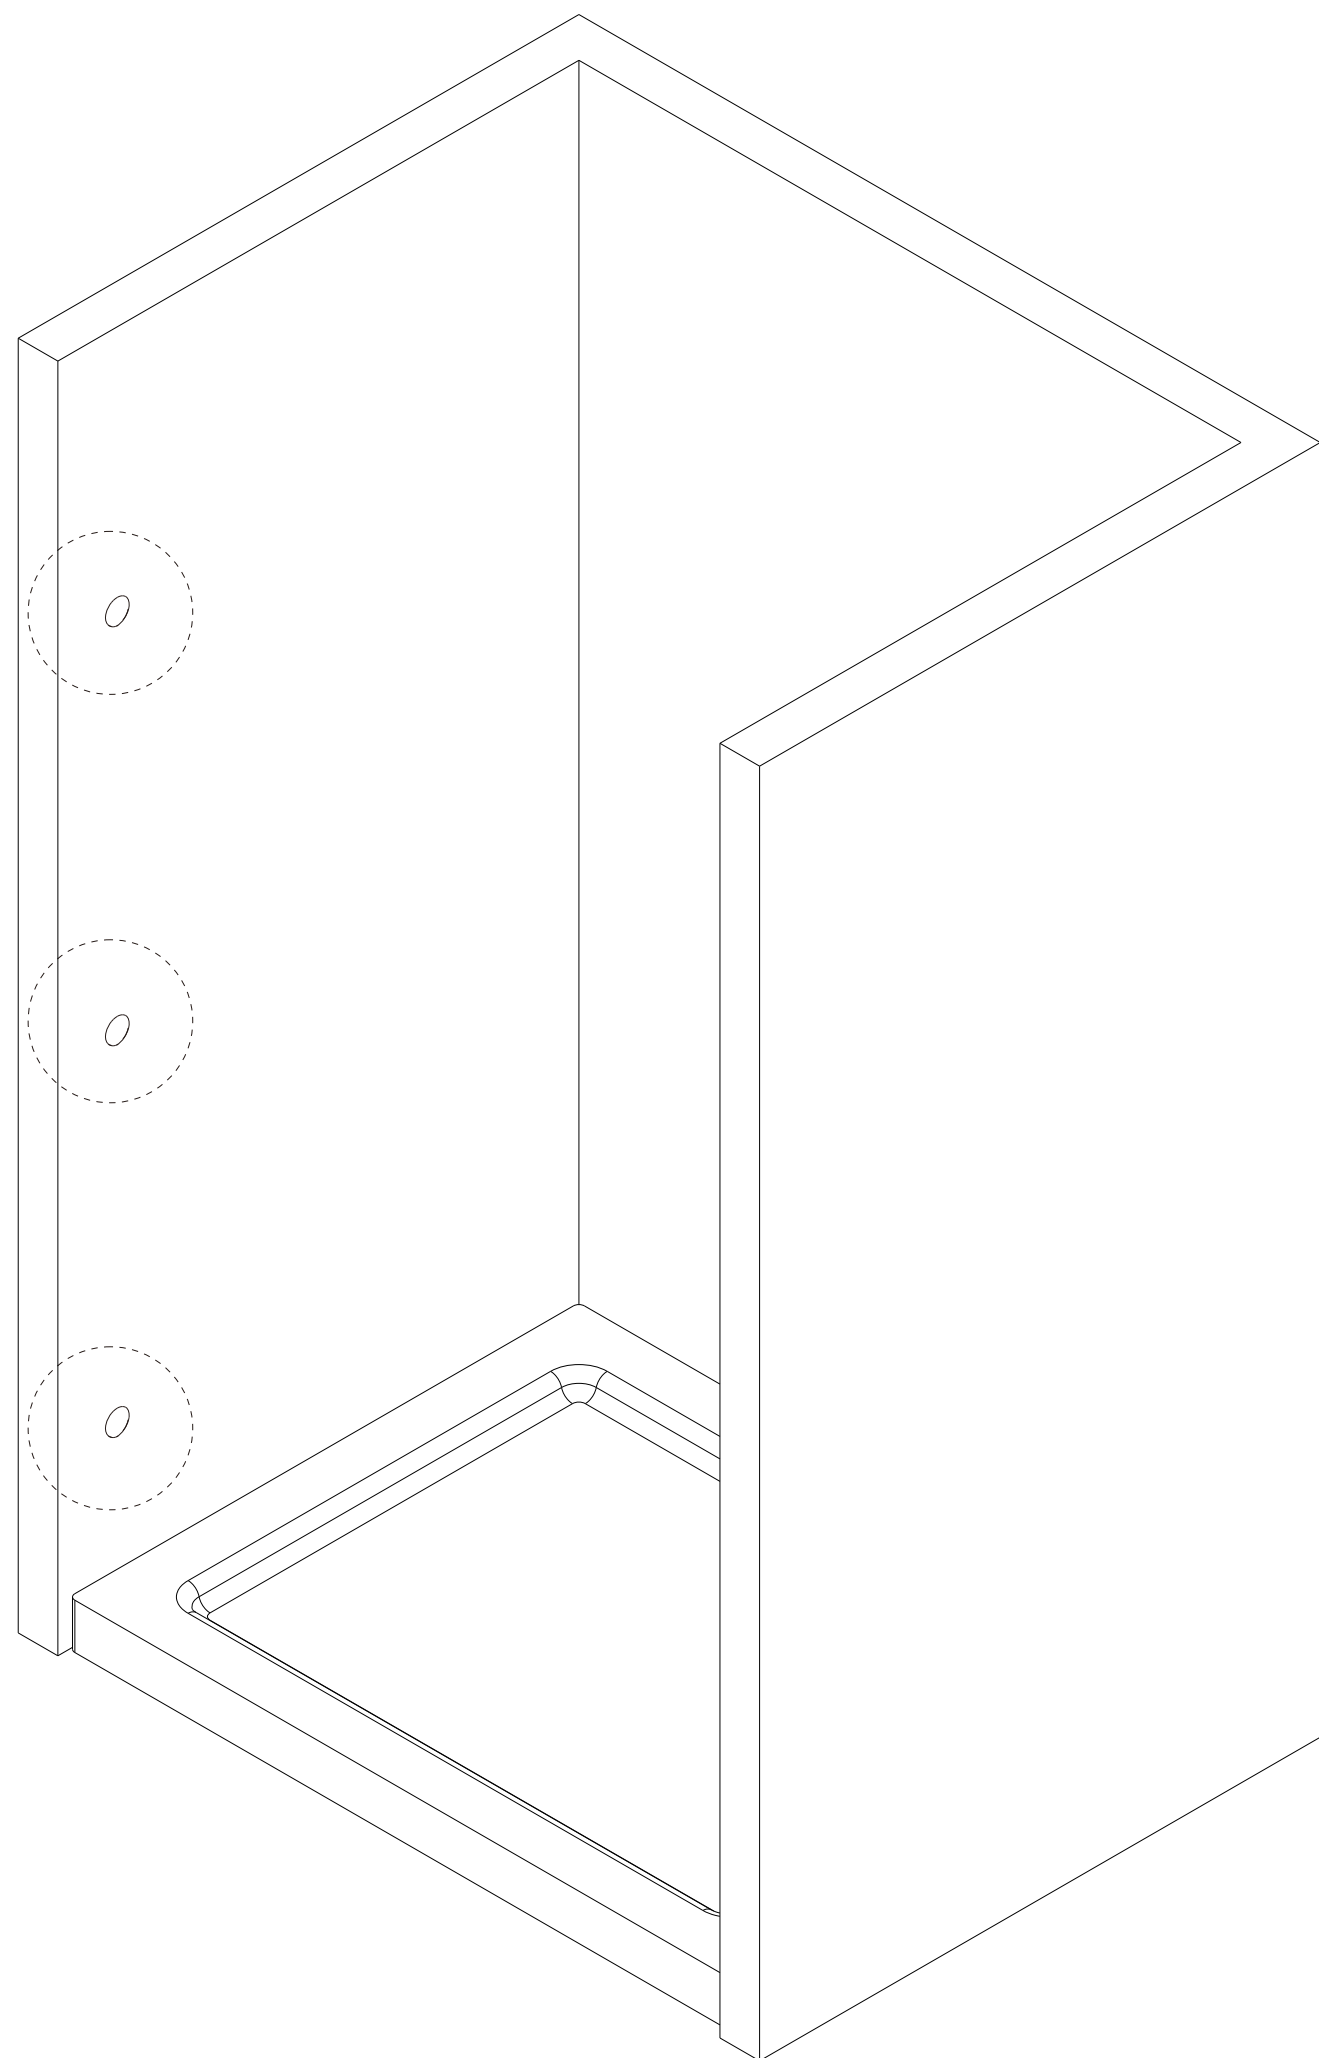

NOTE

- If a Stud is present behind the wall:
drill ϕ 1/8"(3mm) pilot holes into the stud and use the ST4.0x40mm **Screws(bb)**
OR
- If NO Stud is present behind the wall:
drill ϕ 1/4"(6mm) holes and insert the **Wall Anchors(aa)** and use the ST4.0x40mm **Screws(bb)**.





Note: The shower door can be installed left or right, according to the need to determine the installation direction.

5

Mark the location of **Wall Jamb (P)**

NOTE

- 1. Place the **Positioning plate(ii)** align the edge of the shower tray(threshold) as Fig.a .
- 2.Mark the **Wall Jamb (P)** hole positions with a pencil as Fig.b .

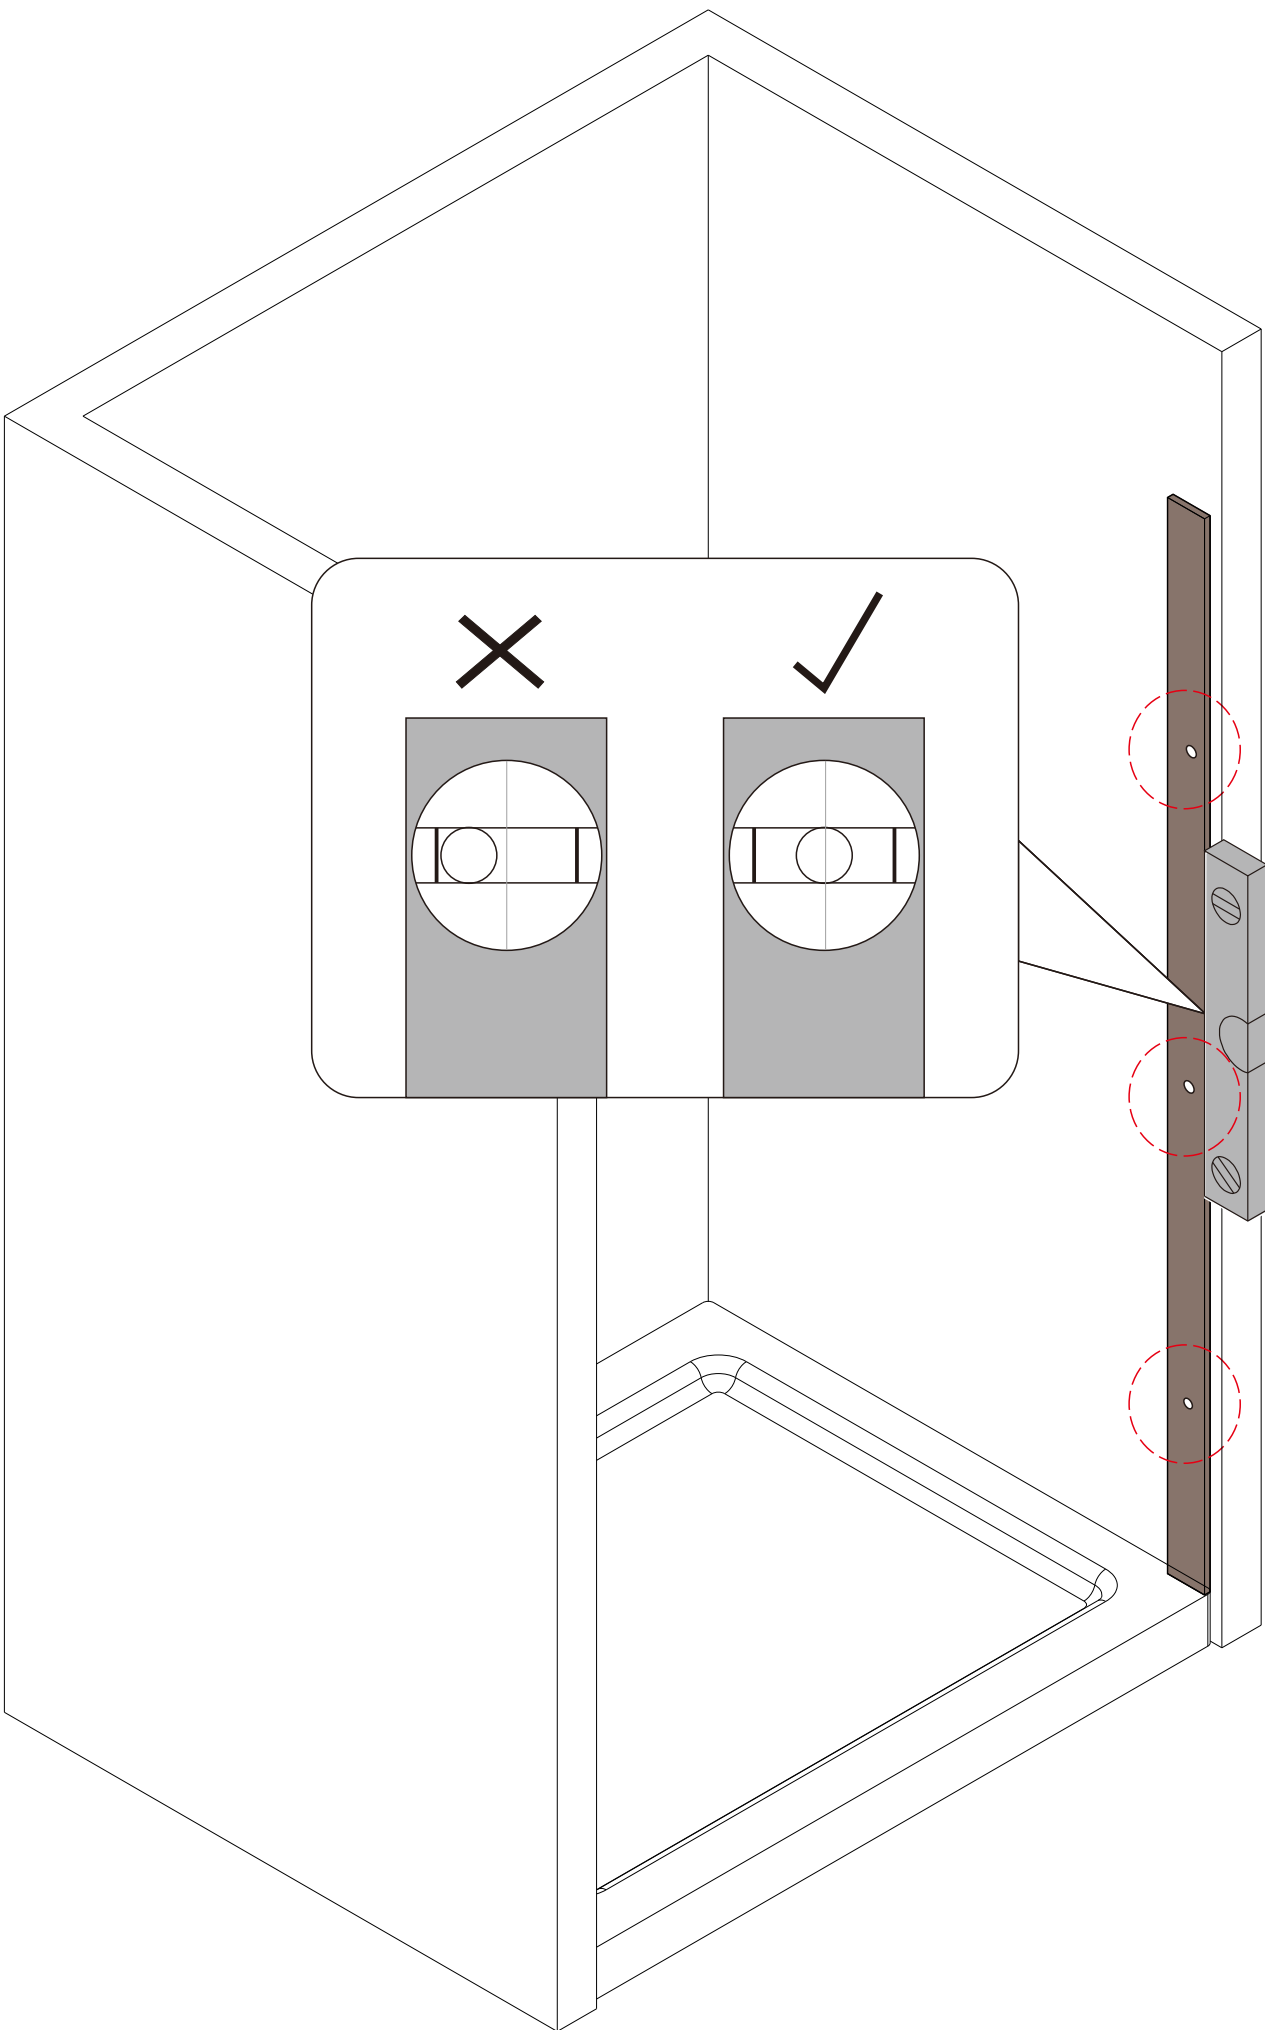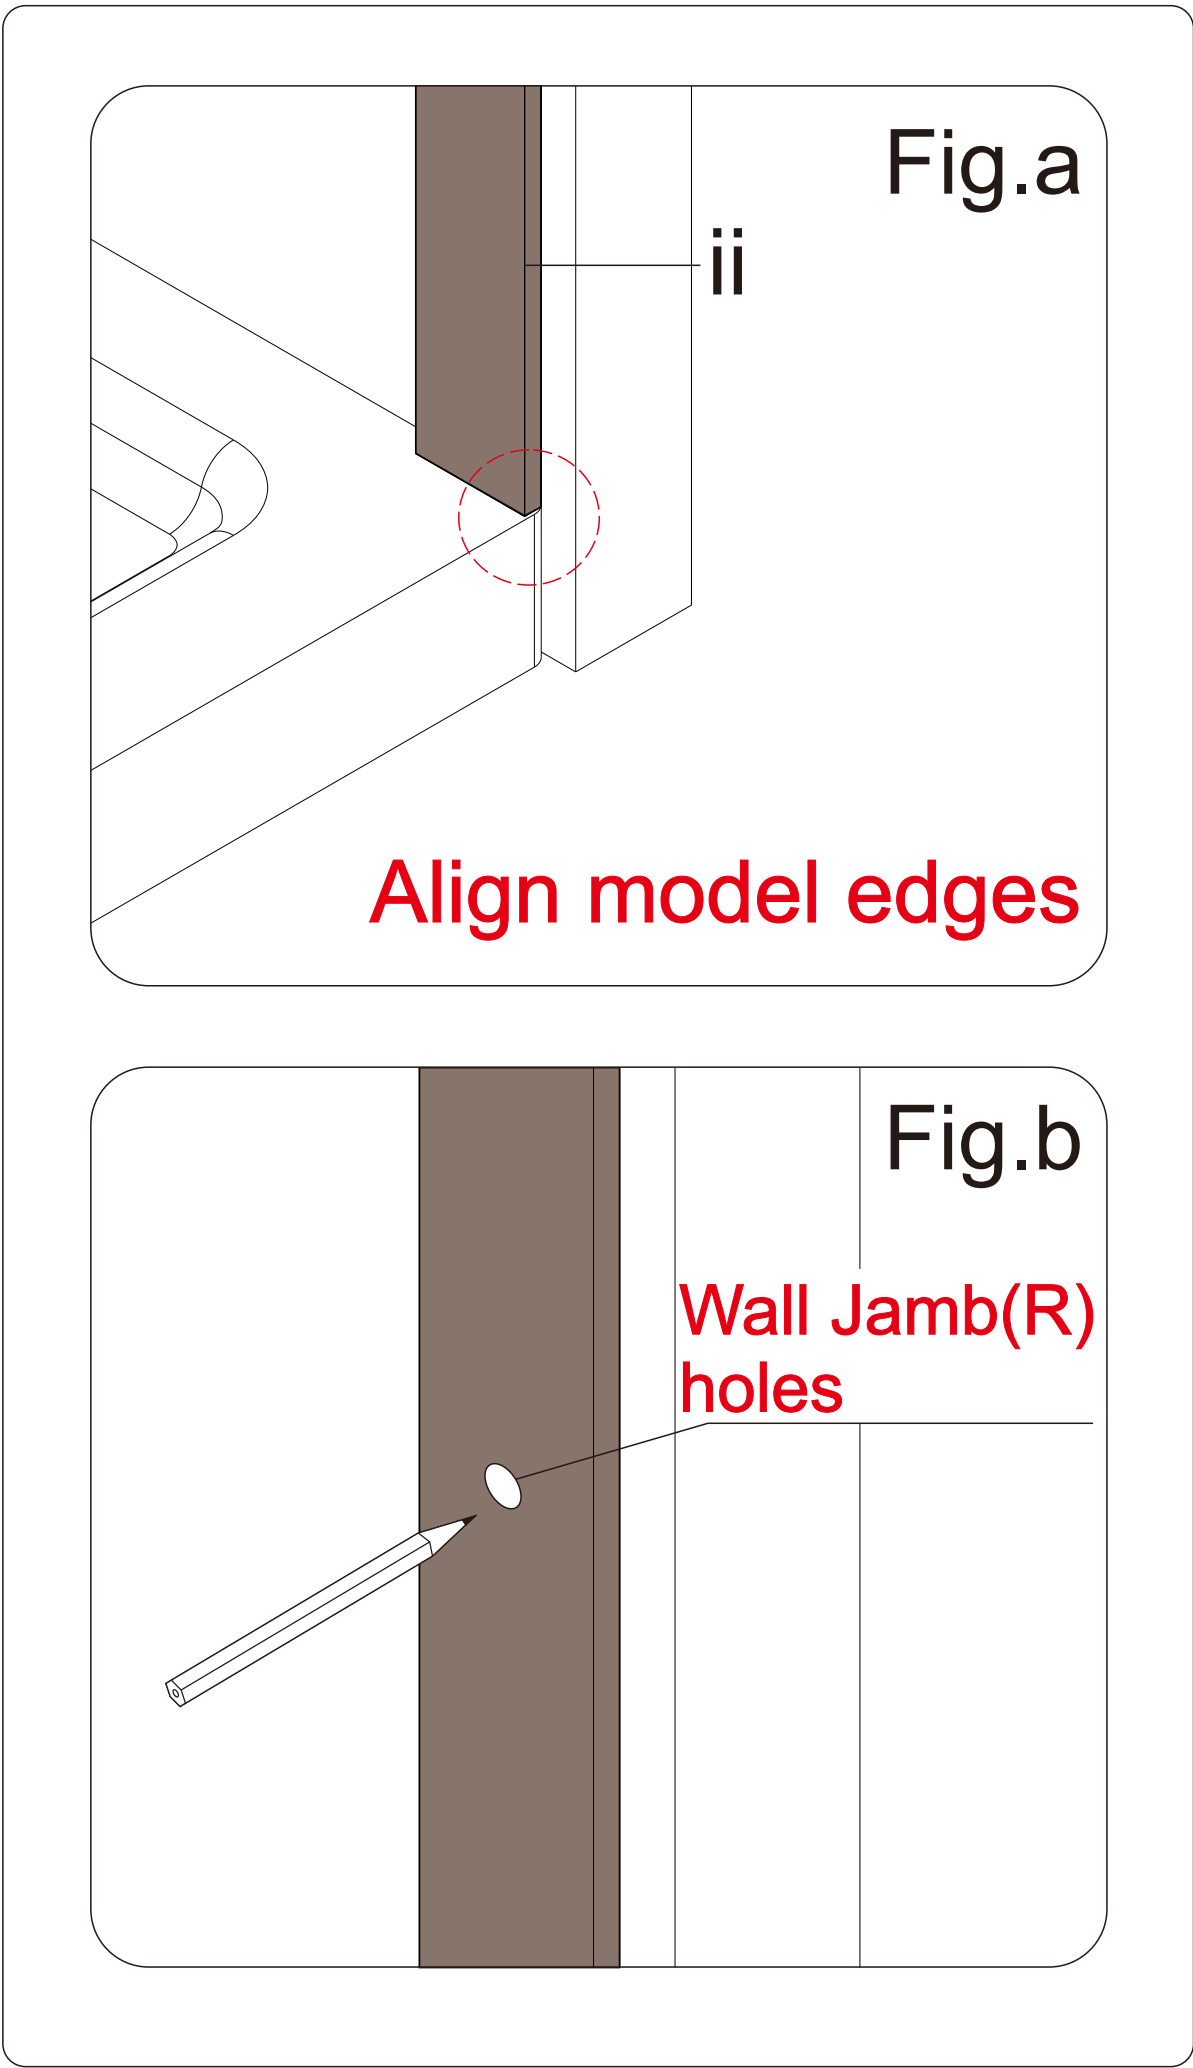

Note: The shower door can be installed left or right, according to the need to determine the installation direction.





This manual is based on an example of a left-opening door

6 Install **Wall Anchor(aa)**

NOTE

1. Drill holes with ϕ 6mm(1/4") drill bit as Fig.a .
2. Insert **Wall Anchors(aa)** as Fig.b .

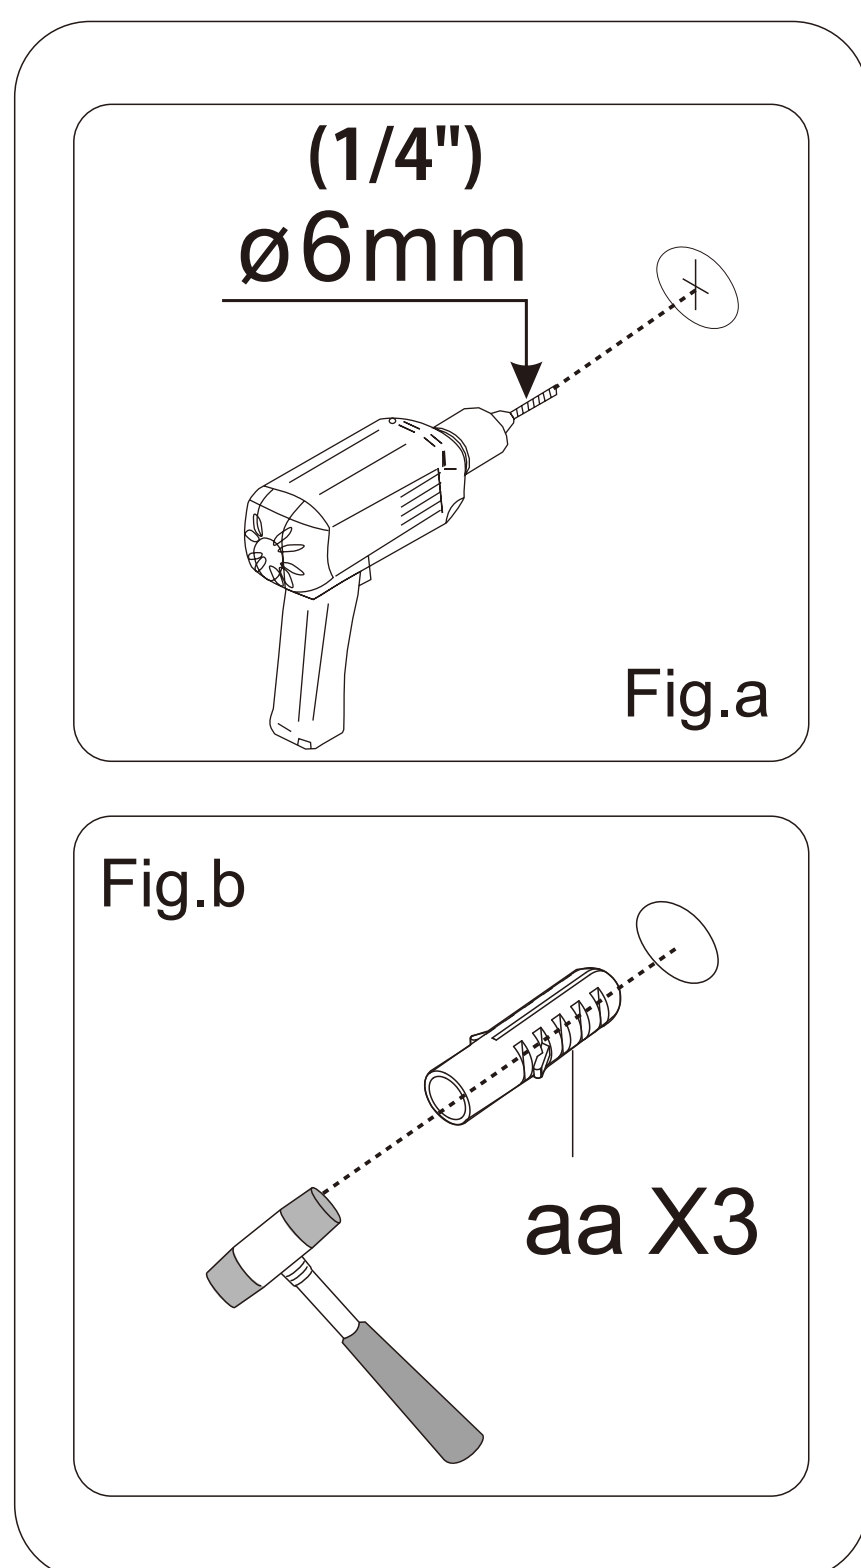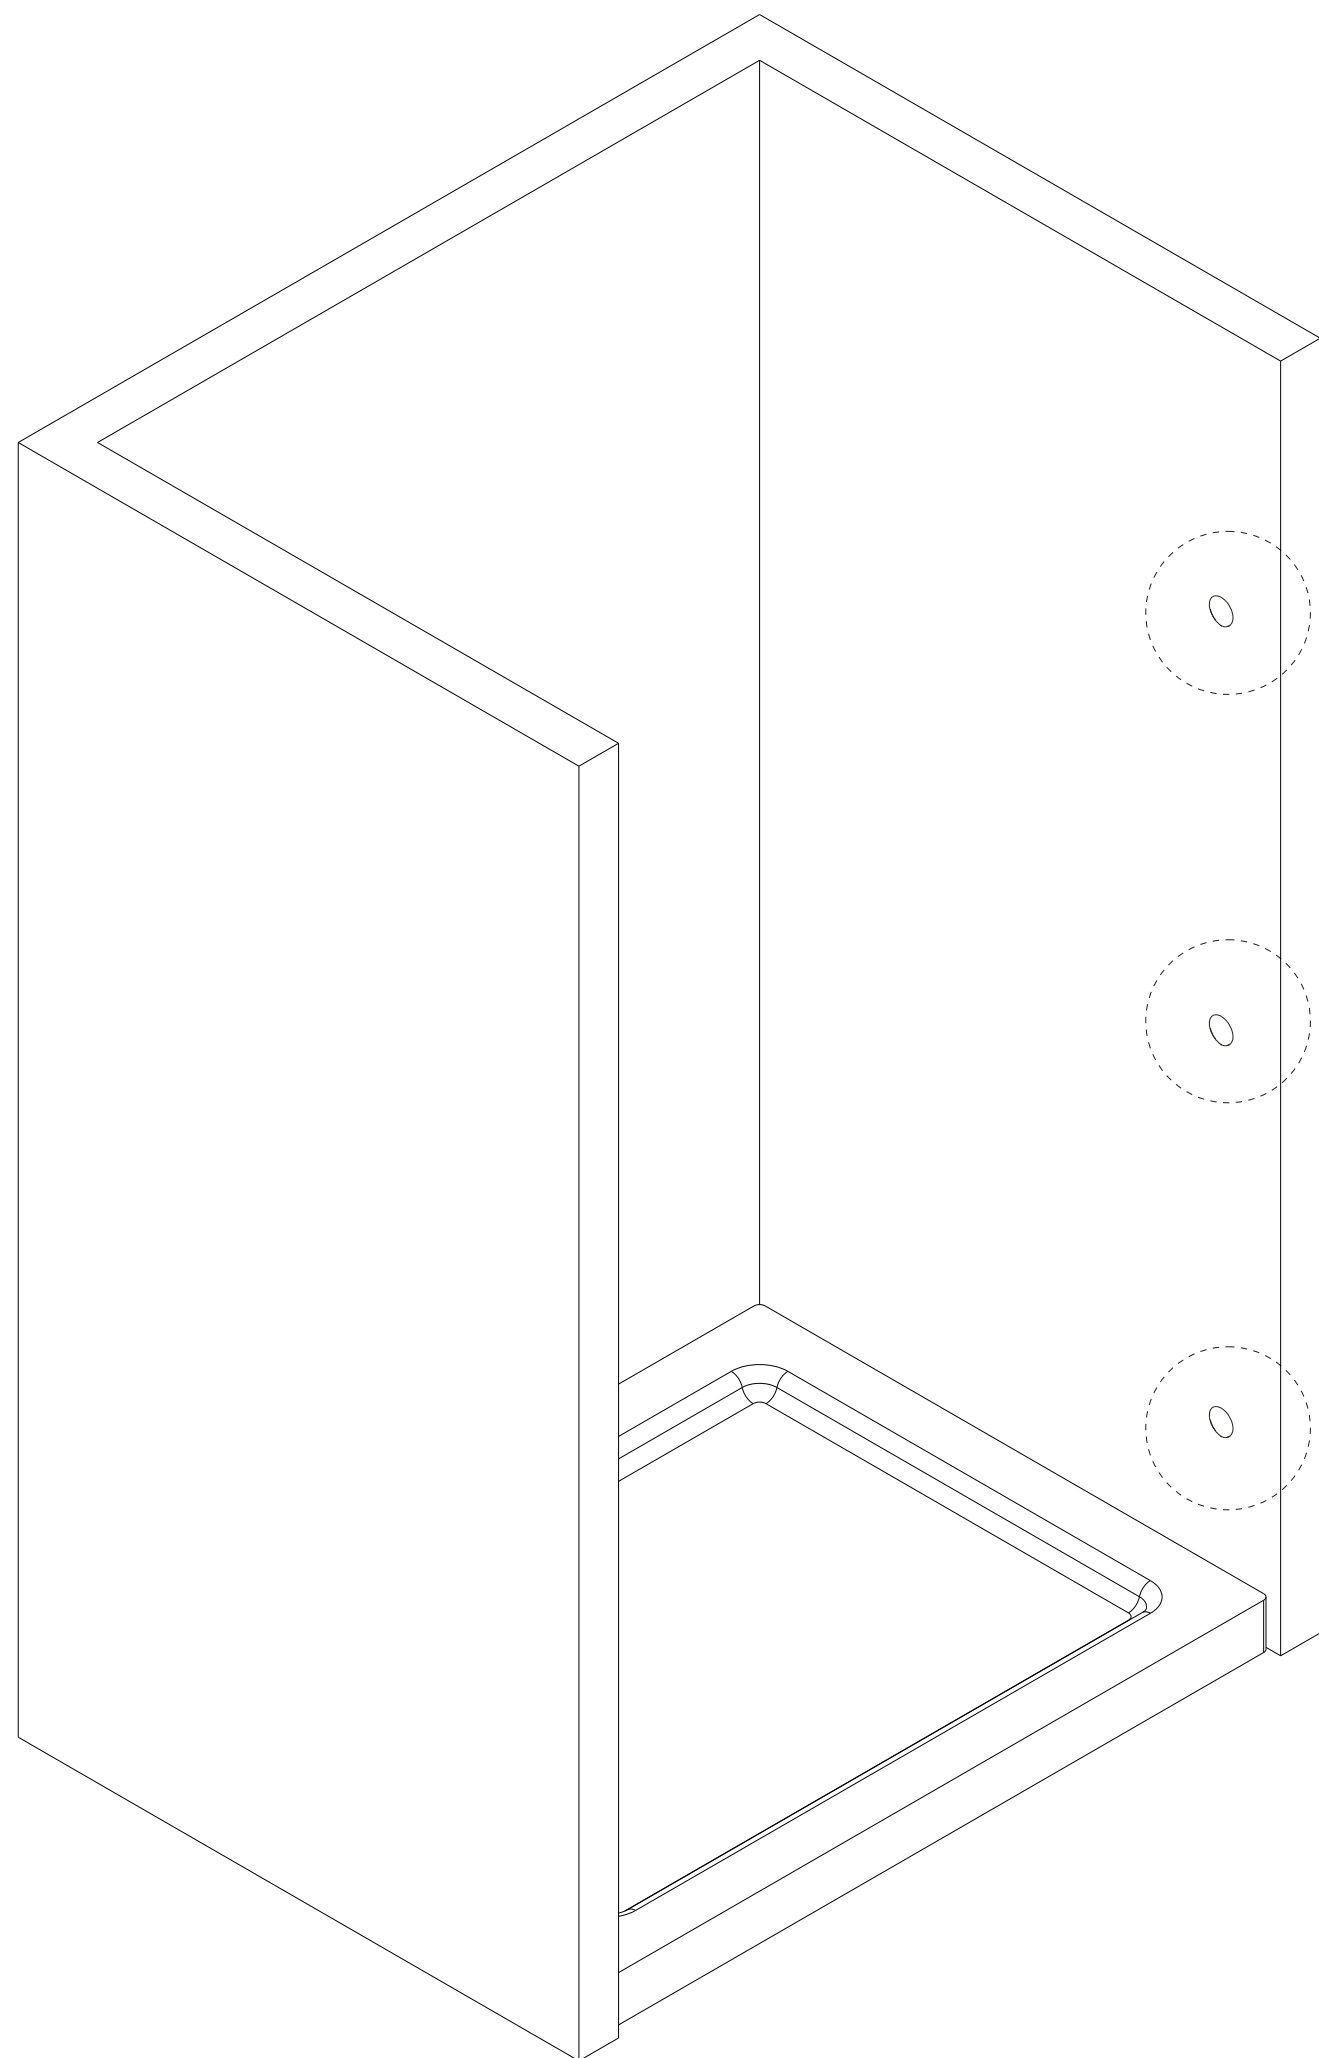

NOTE


- If a Stud is present behind the wall:
drill ϕ 1/8" (3mm) pilot holes into the stud and use the ST4.0x40mm **Screws(bb)**
OR
- If NO Stud is present behind the wall:
drill ϕ 1/4" (6mm) holes and insert the **Wall Anchors(aa)** and use the ST4.0x40mm **Screws(bb)**.



Note: The shower door can be installed left or right, according to the need to determine the installation direction.

7 Fixed Wall Jamb(A)

NOTE Attach the **Wall Jamb(A)** to the wall with **Screws (bb)** as Fig.a.

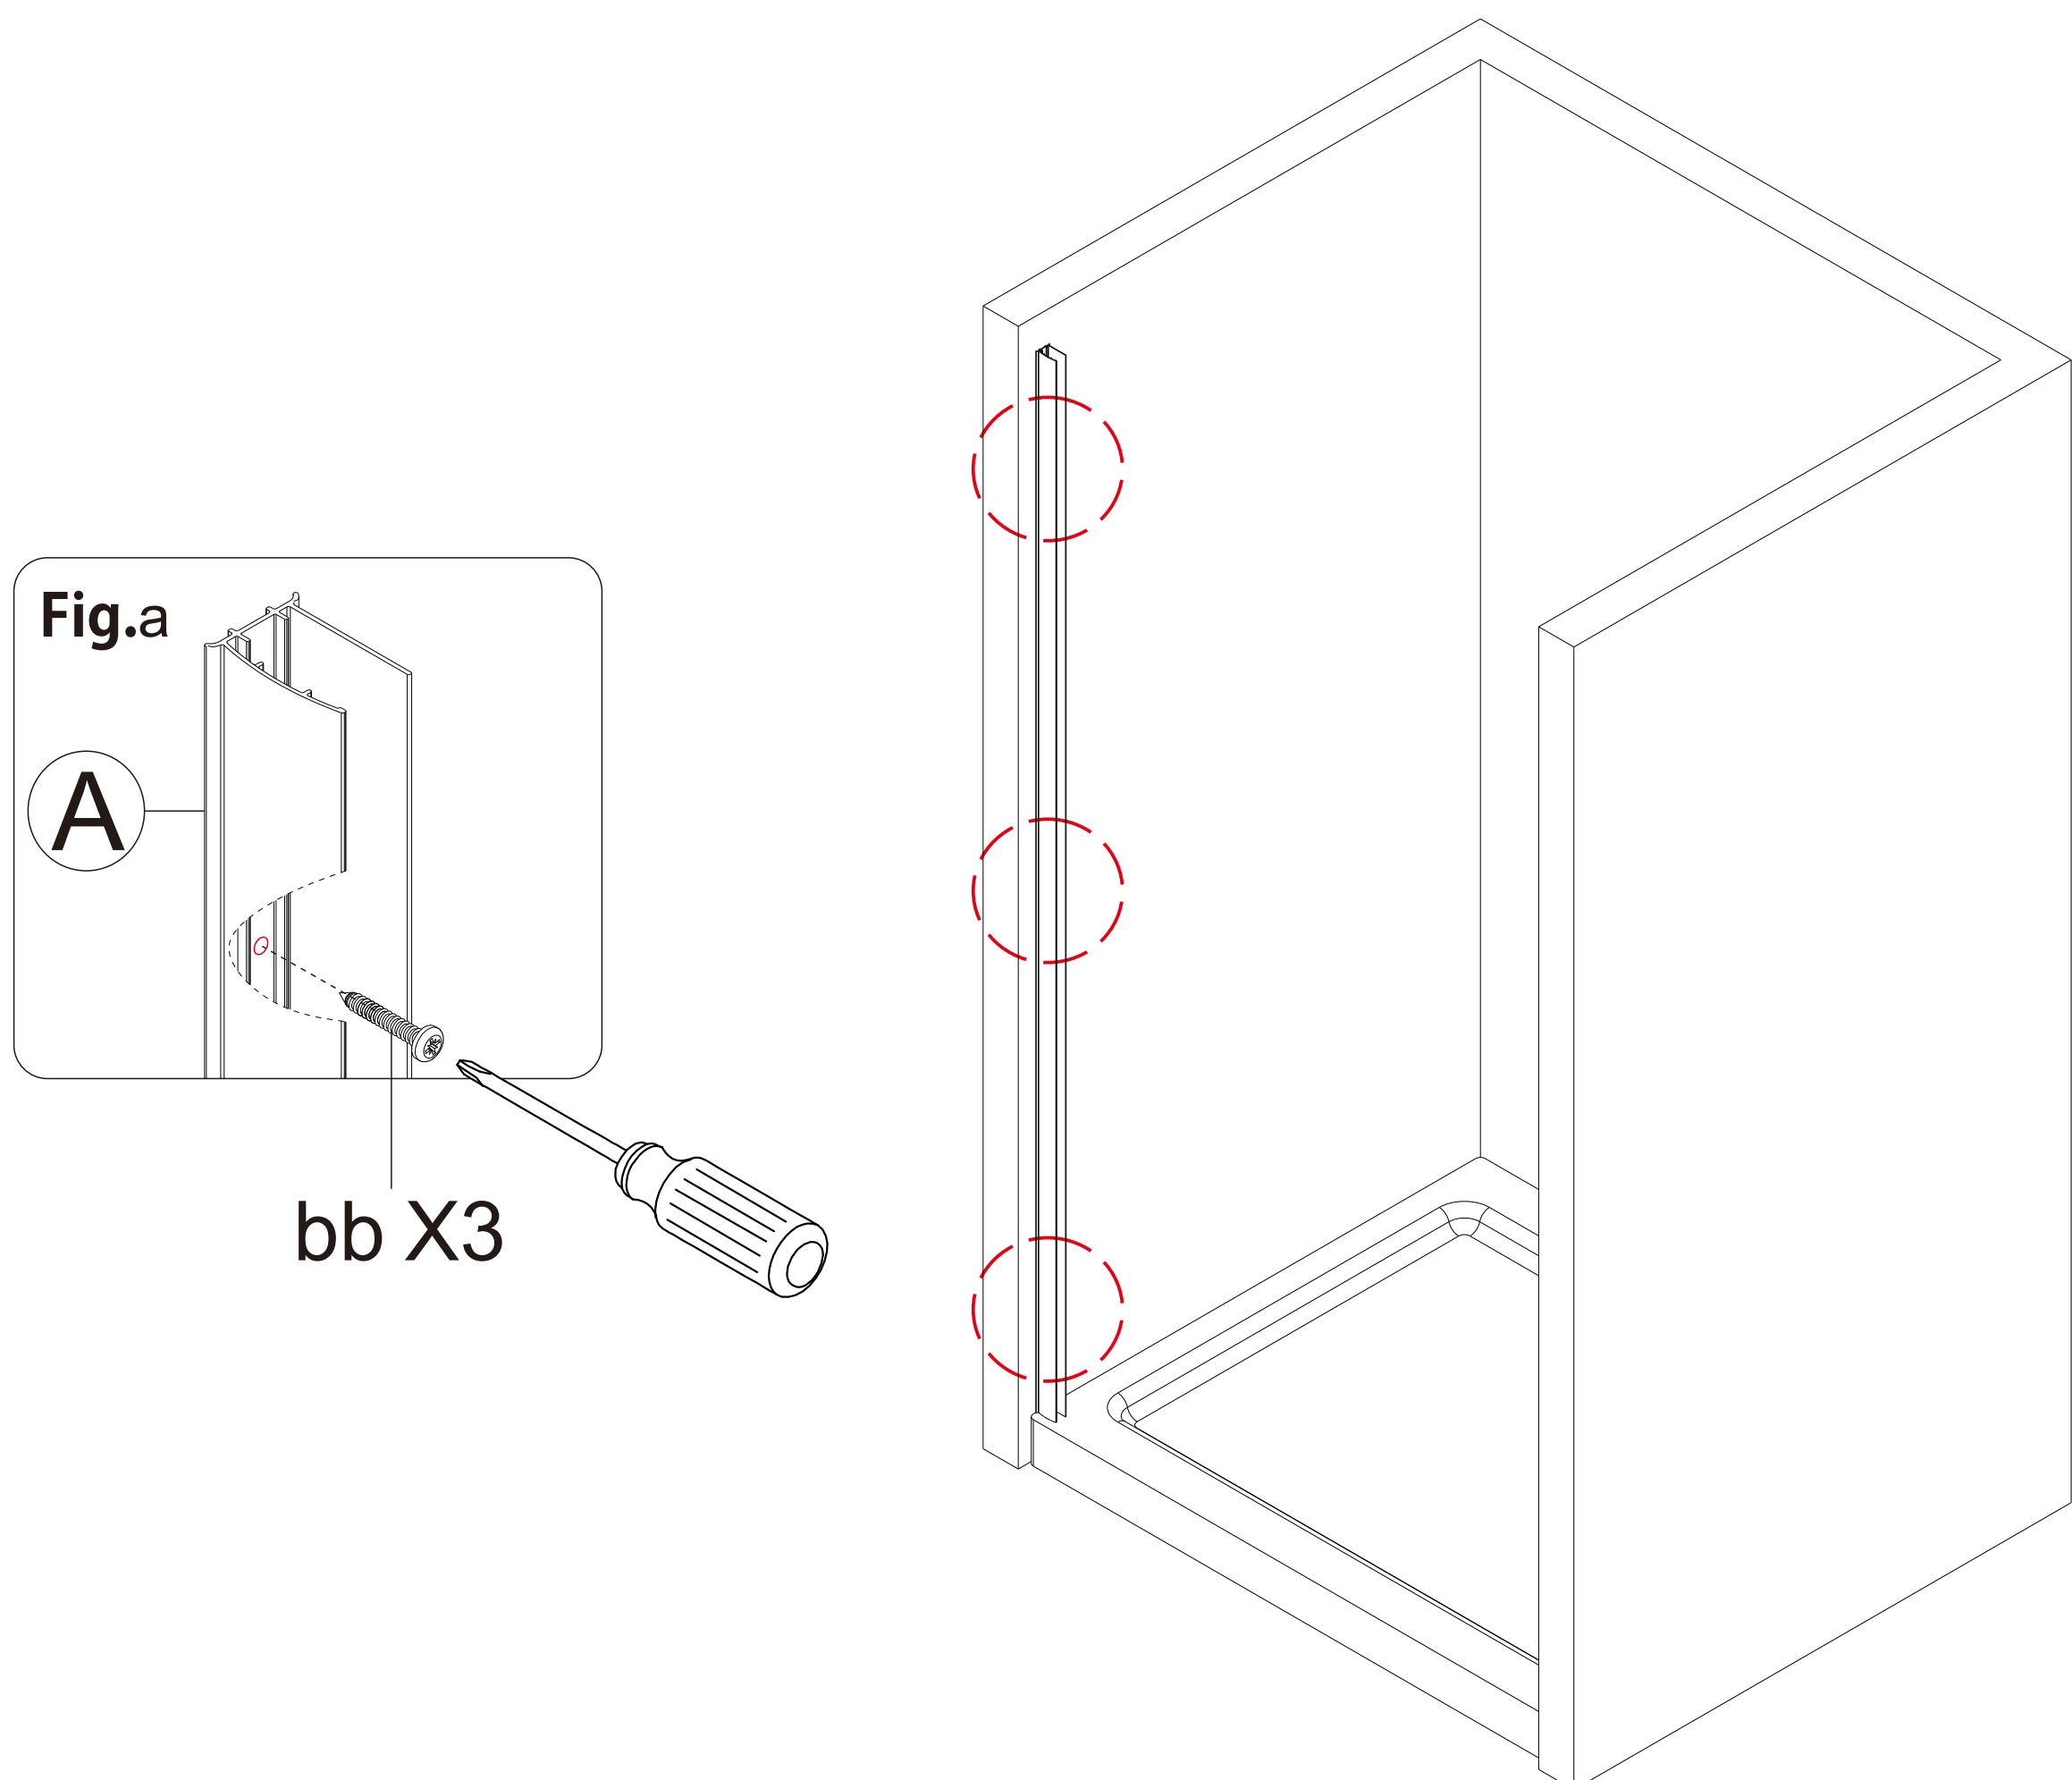

Note: The shower door can be installed left or right, according to the need to determine the installation direction.

8 Install the Hinges(G)

NOTE

1. Pay attention to the **Hinge(G)** mounting direction as Fig.a and Fig.d.
2. Loosen the **Hinges(G)** as Fig.b and Fig.e.
3. Attach the hinges to the **Stationary Glass(C)** and **Glass Door (I)** as Fig.c and Fig.f.
4. Make sure the **Hinges(G)** are mounted flat on the Glass.

Always mounted on
Stationary Glass(C)

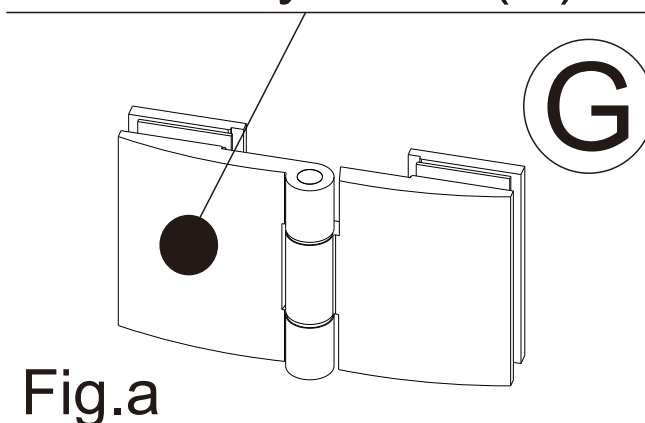


Fig.b



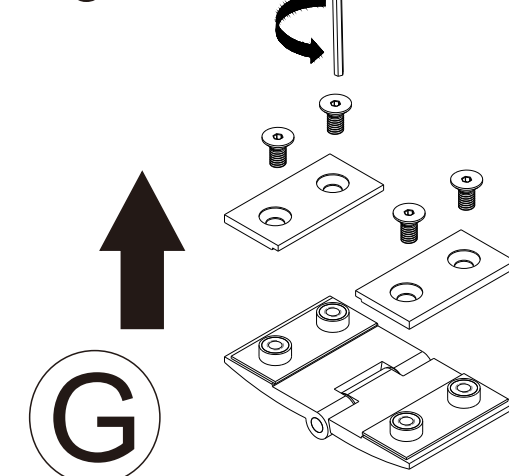


Fig.c



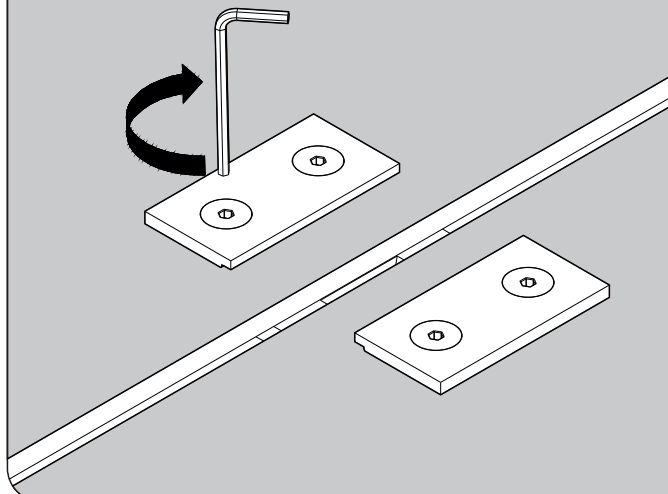


To prevent glass-to-metal contact,
confirm the gaskets are present
between the Hinge Assemblies
and the Door Glass.

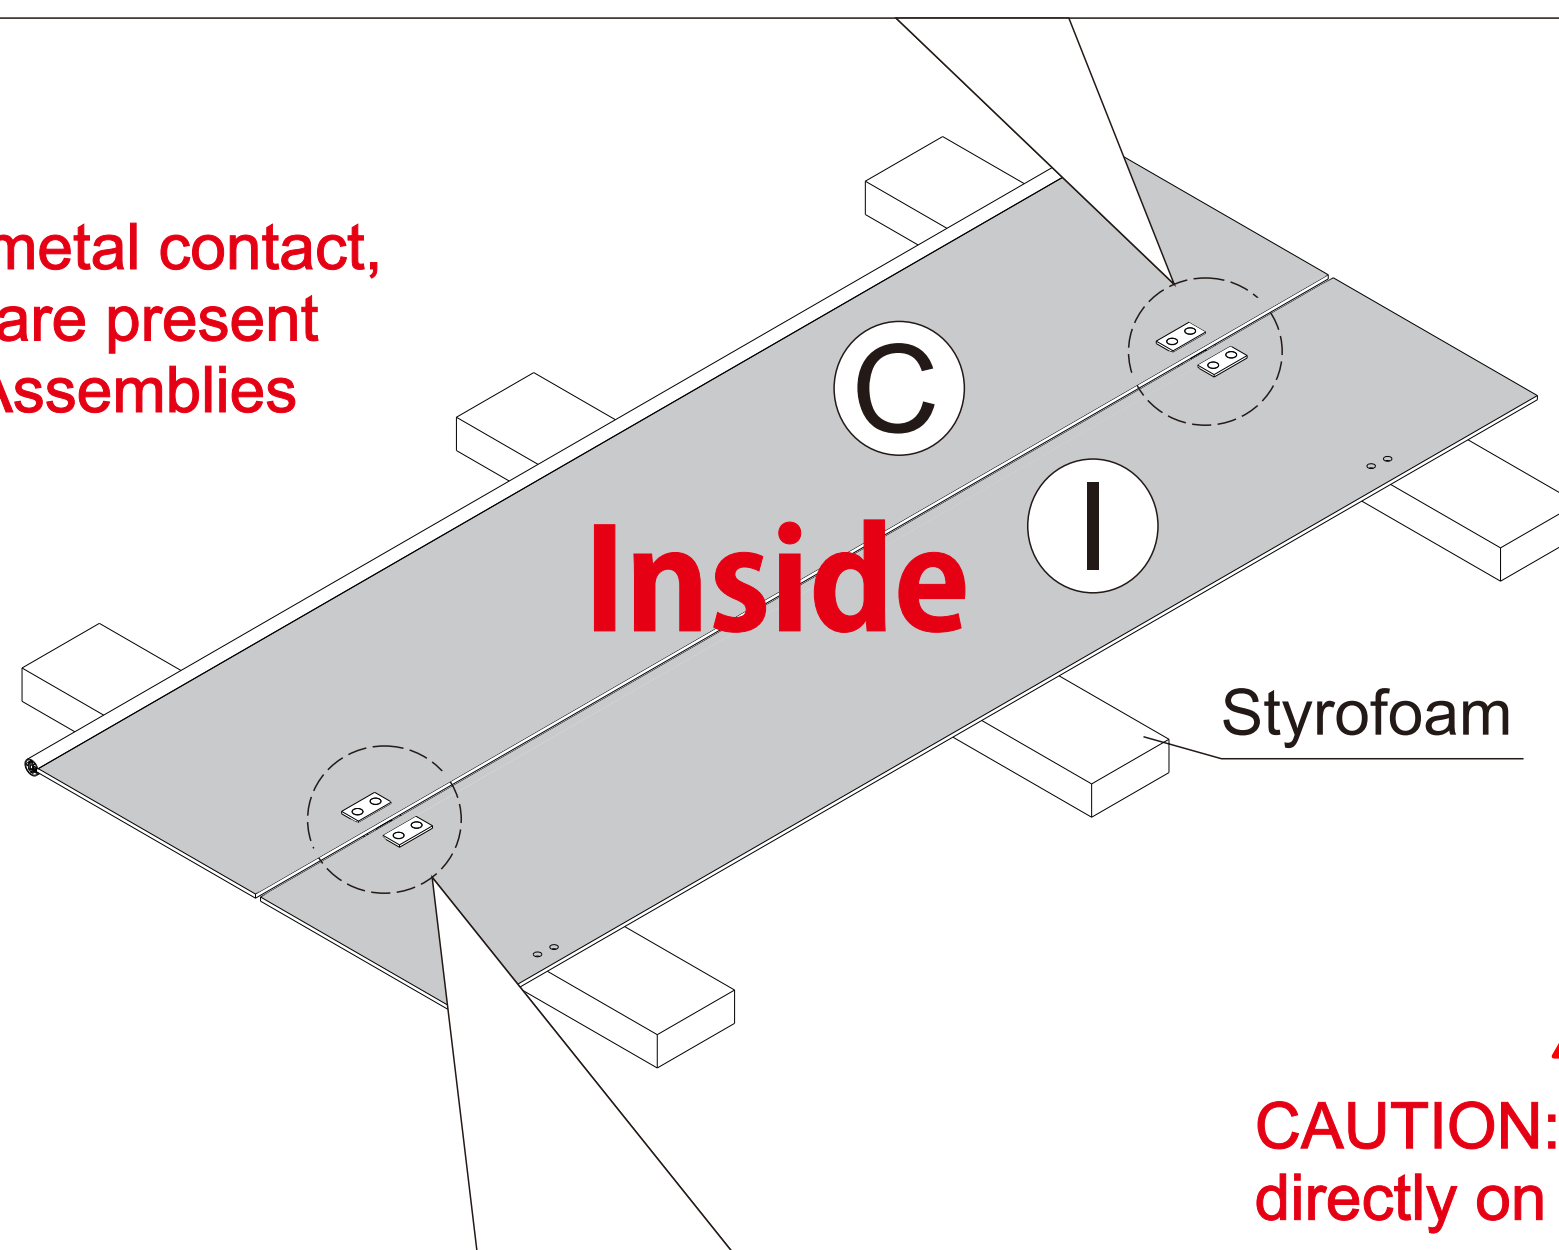

CAUTION: Do not put glass
directly on the ground




Always mounted on
Stationary Glass(C)

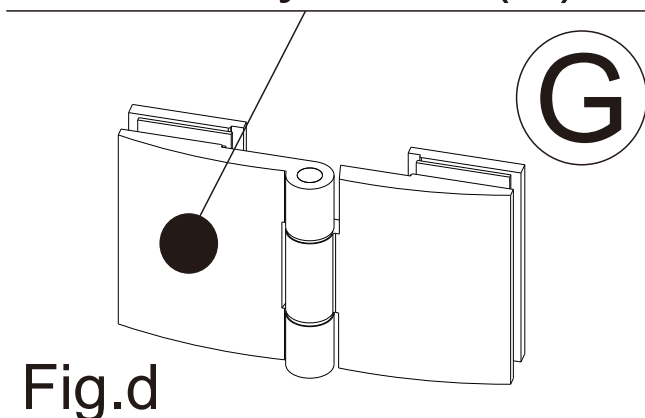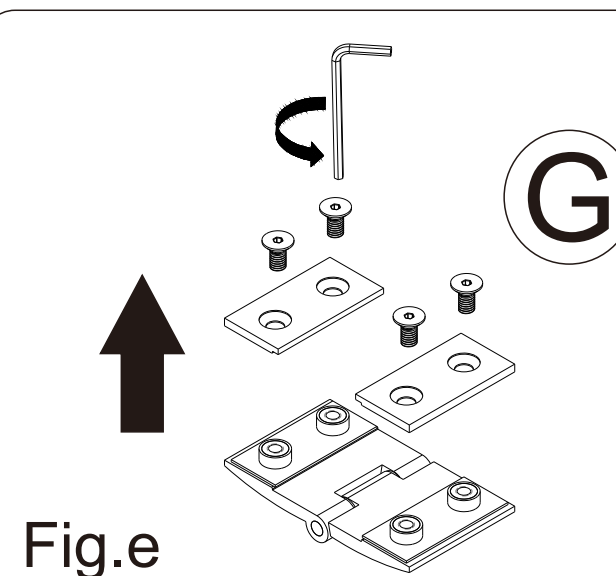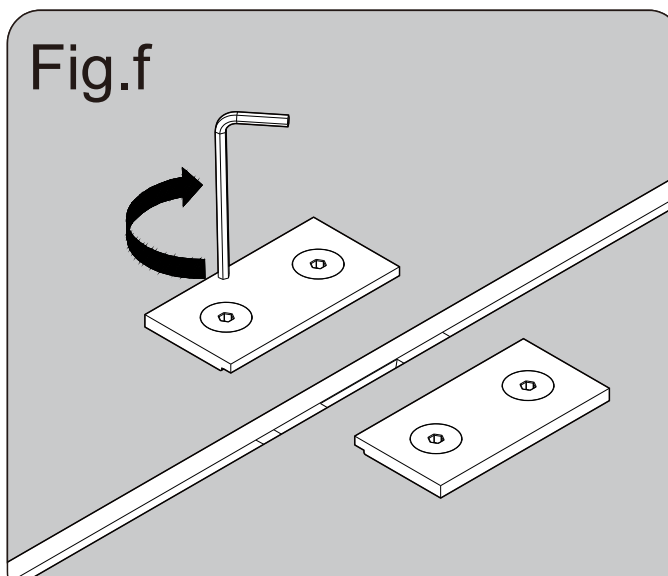


9 Install the Hinges(H)

NOTE




1. Pay attention to the **Hinge(H)** mounting direction as Fig.a and Fig.d.
2. Loosen the **Hinges(H)** as Fig.b and Fig.e.
3. Attach the hinges to the **Glass Door(I)** and **Glass Door (Q)** as Fig.c and Fig.f .
4. Make sure the **Hinges(H)** are mounted flat on the Glass

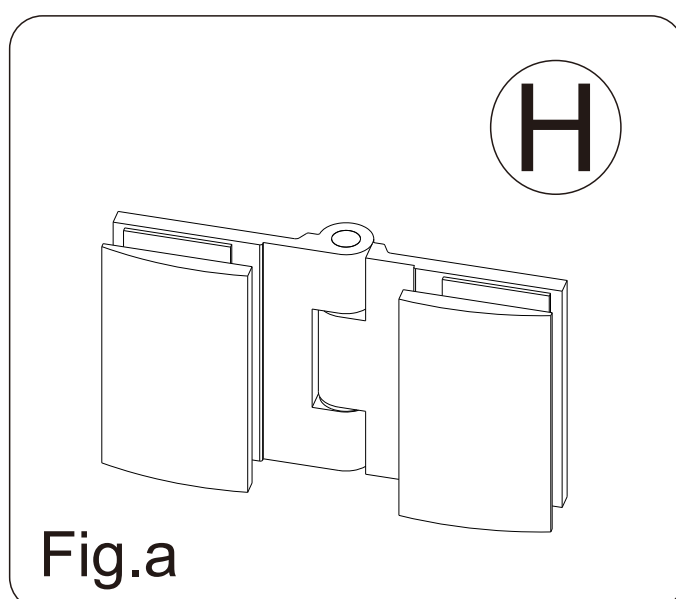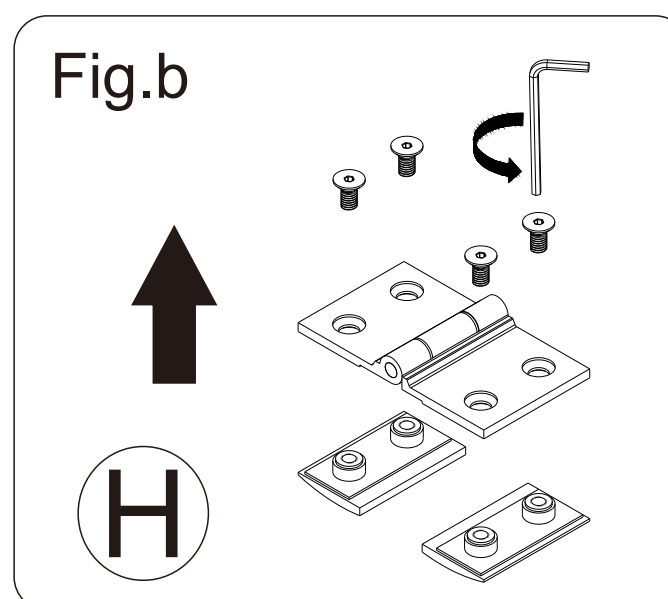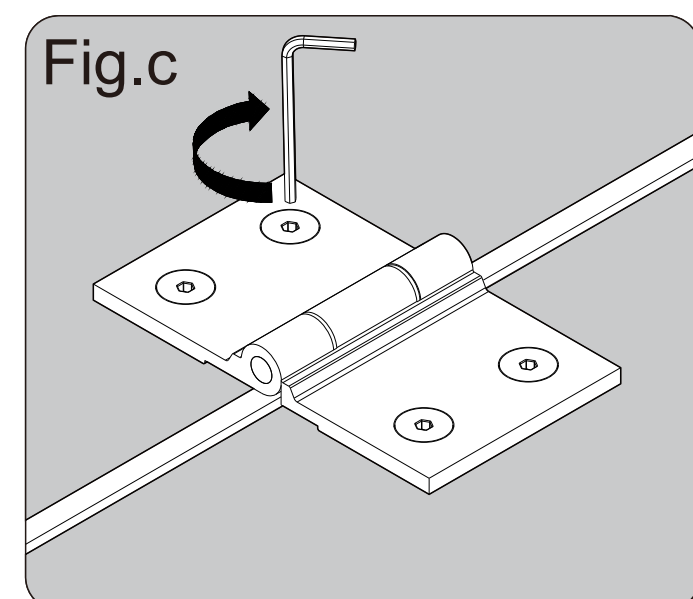

!
To prevent glass-to-metal contact, confirm the gaskets are present between the Hinge Assemblies and the Door Glass.

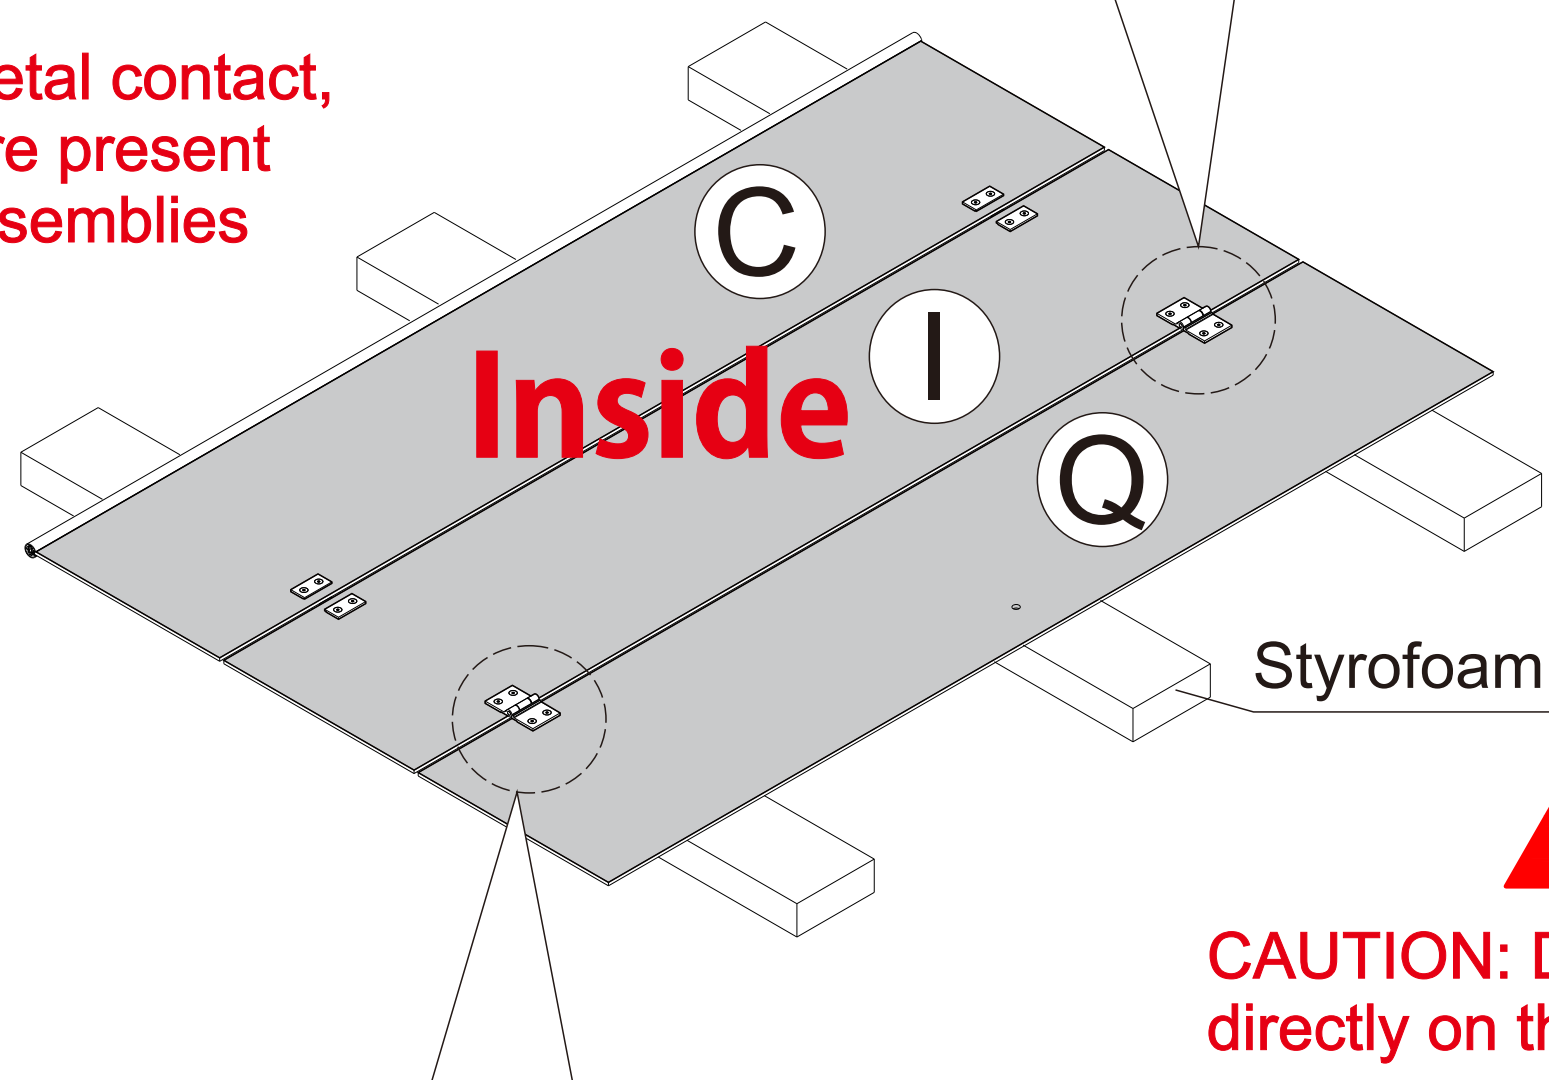

!
CAUTION: Do not put glass directly on the ground

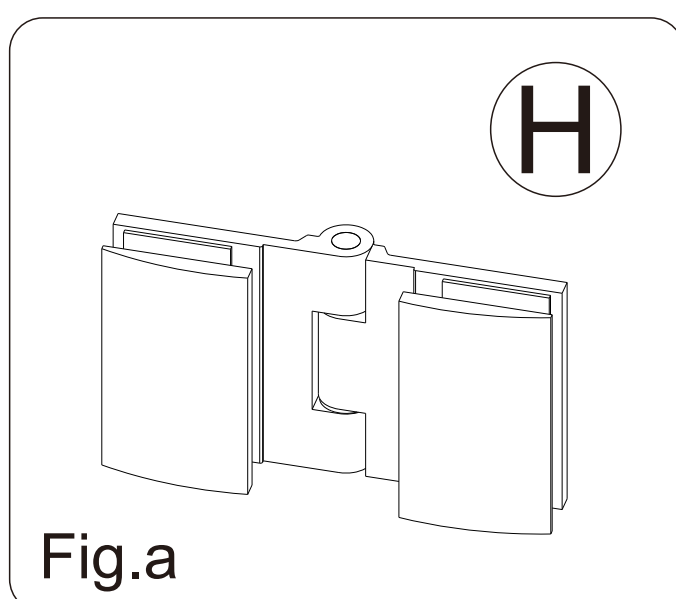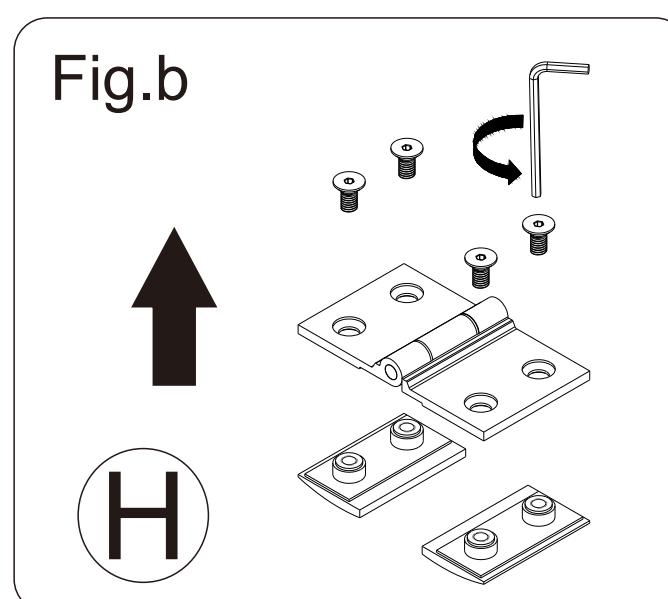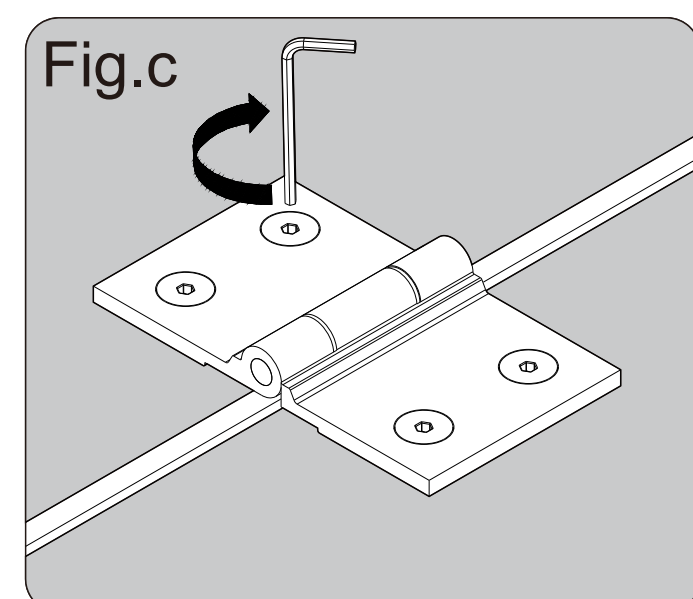

10 Install Top Pivot Sleeve(F) and Bottom Pivot Sleeve(E).

NOTE

1. Install the **Top Pivot Sleeve(F)** into the **Stationary Glass(C)** and secure it with **screws(ee)** as Fig.a .

2. Install the **Bottom Pivot Sleeve(E)** into the **Stationary Glass(C)** and secure it with **screws(ee)** as Fig.b .

Note: ensure bracket with the 'V' is always on the bottom

Fig.b

E
eex2



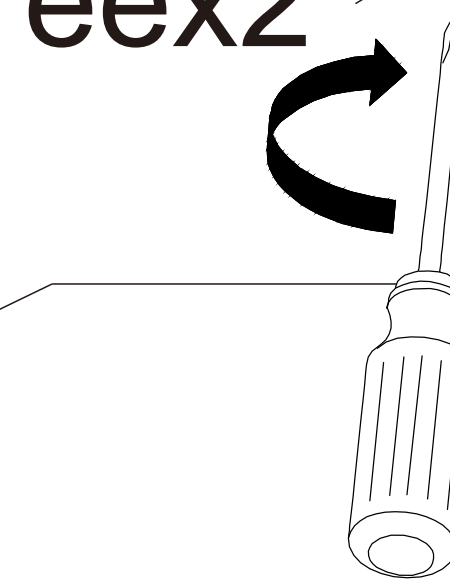


Fig.a

eex2

F

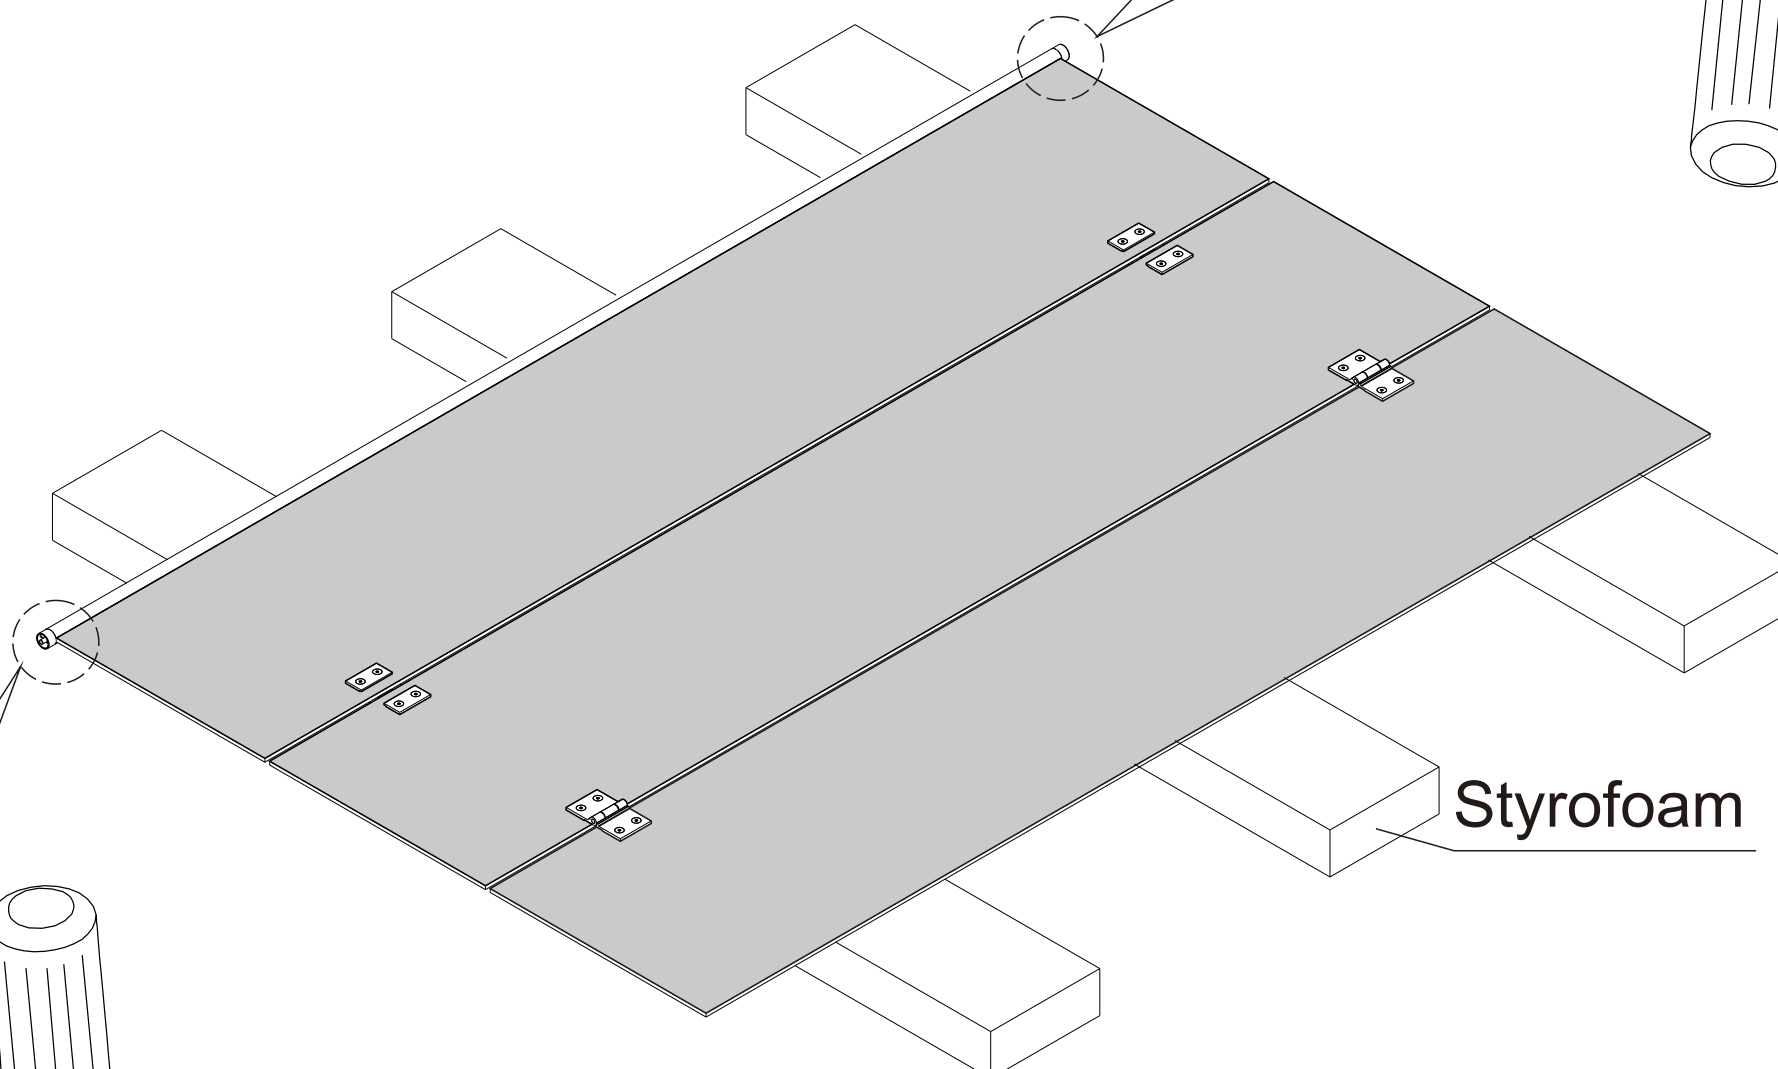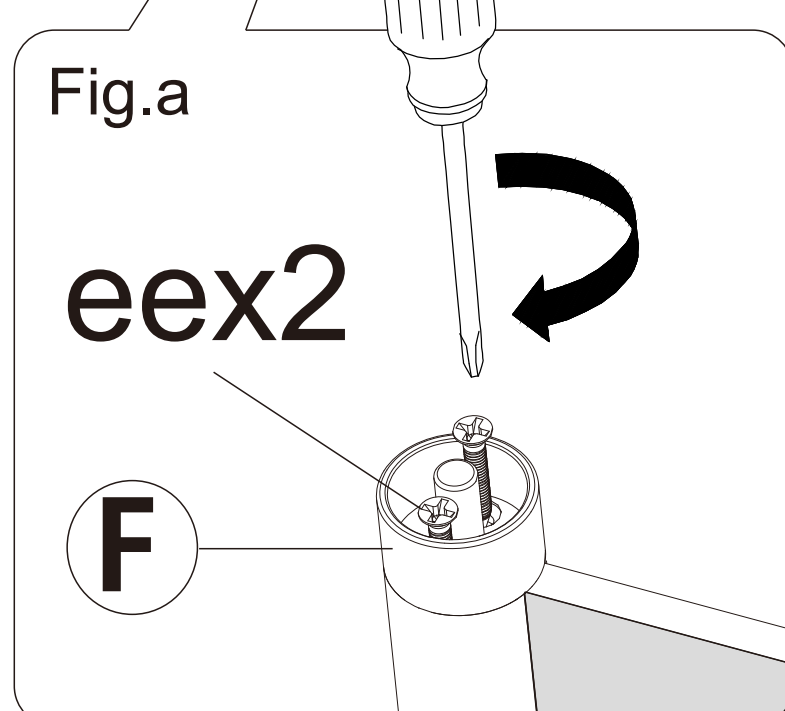

Note: ensure bracket without 'V' is always on the top






CAUTION: Do not put glass directly on the ground

11 Install Upright Profile(B)

NOTE



- 1.Remove the upper and lower brackets as Fig.a and Fig.d
- 2.The Bracket notch is always facing inward as Fig.b and Fig.e .
- 3.Fix the **Upright Profile(B)** and the **Stationary Glass(C)** with a Bracket as Fig.c and Fig.f

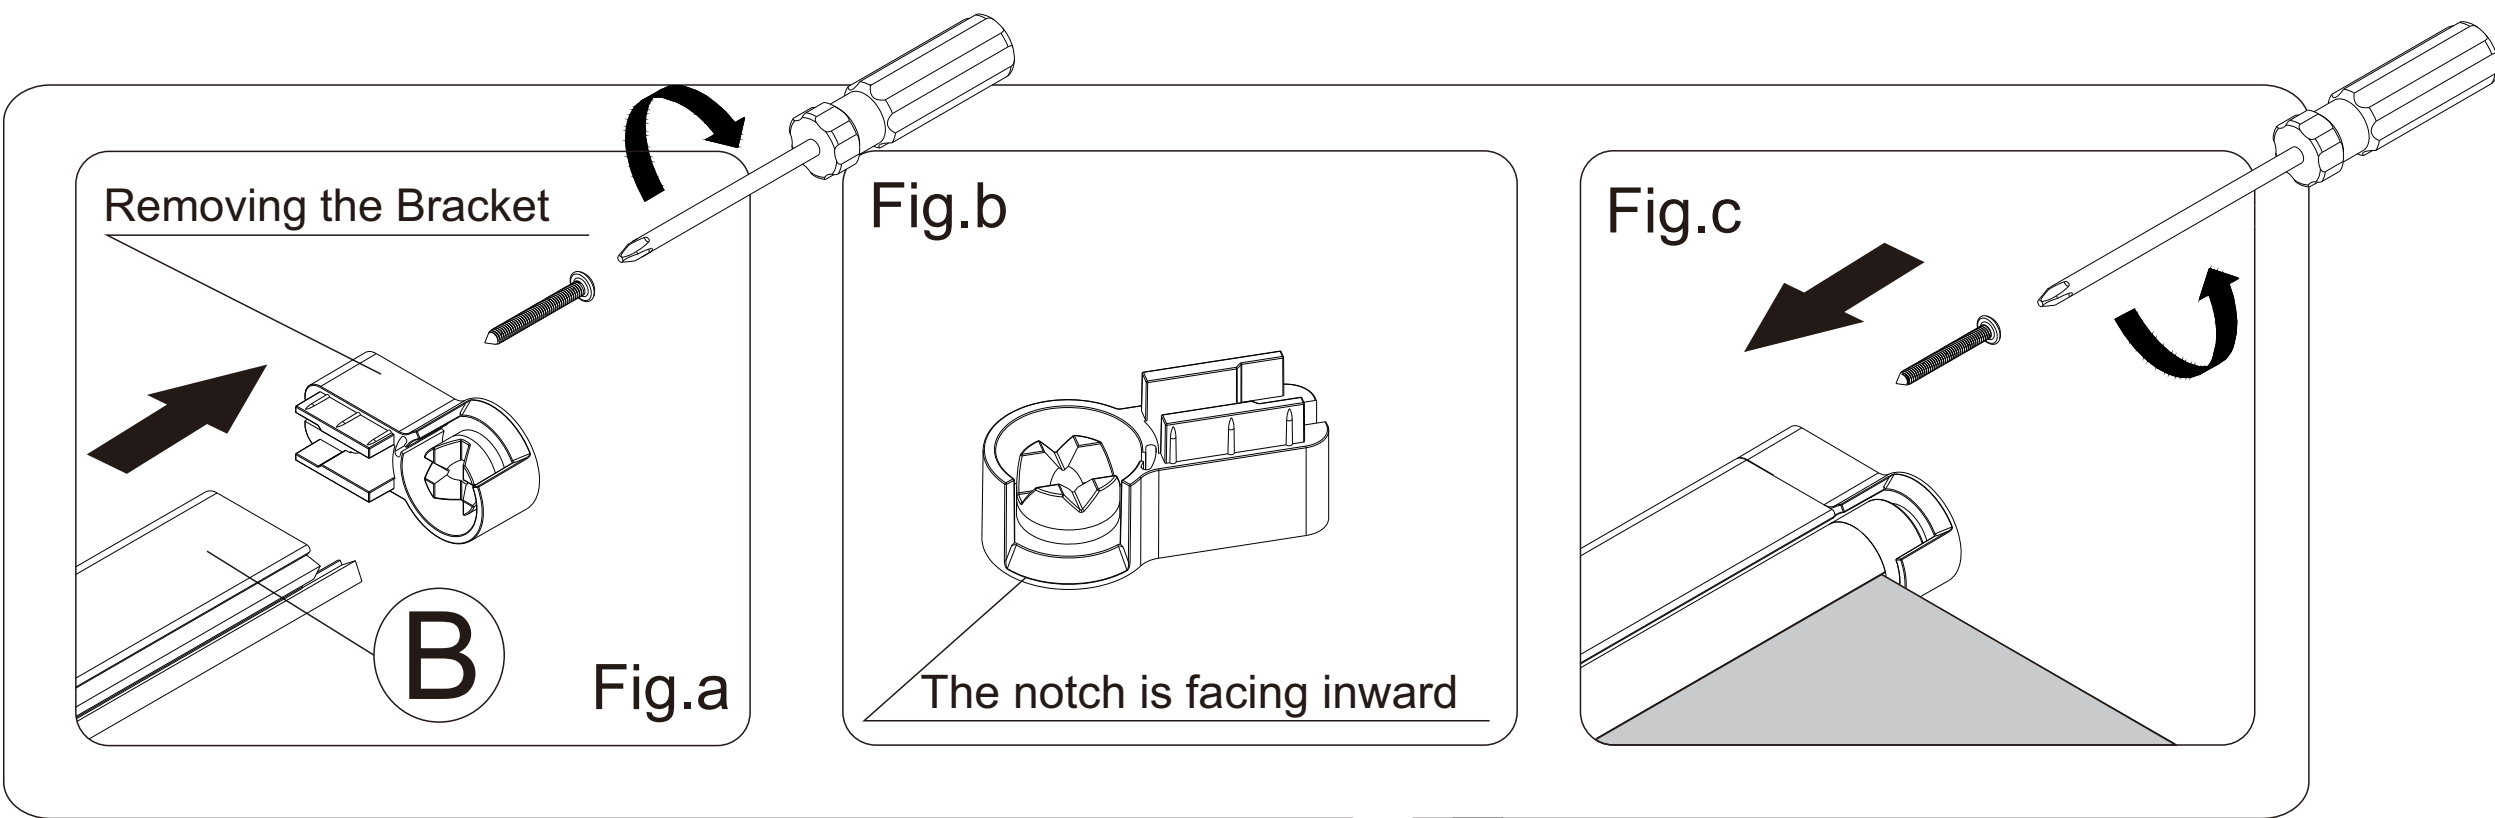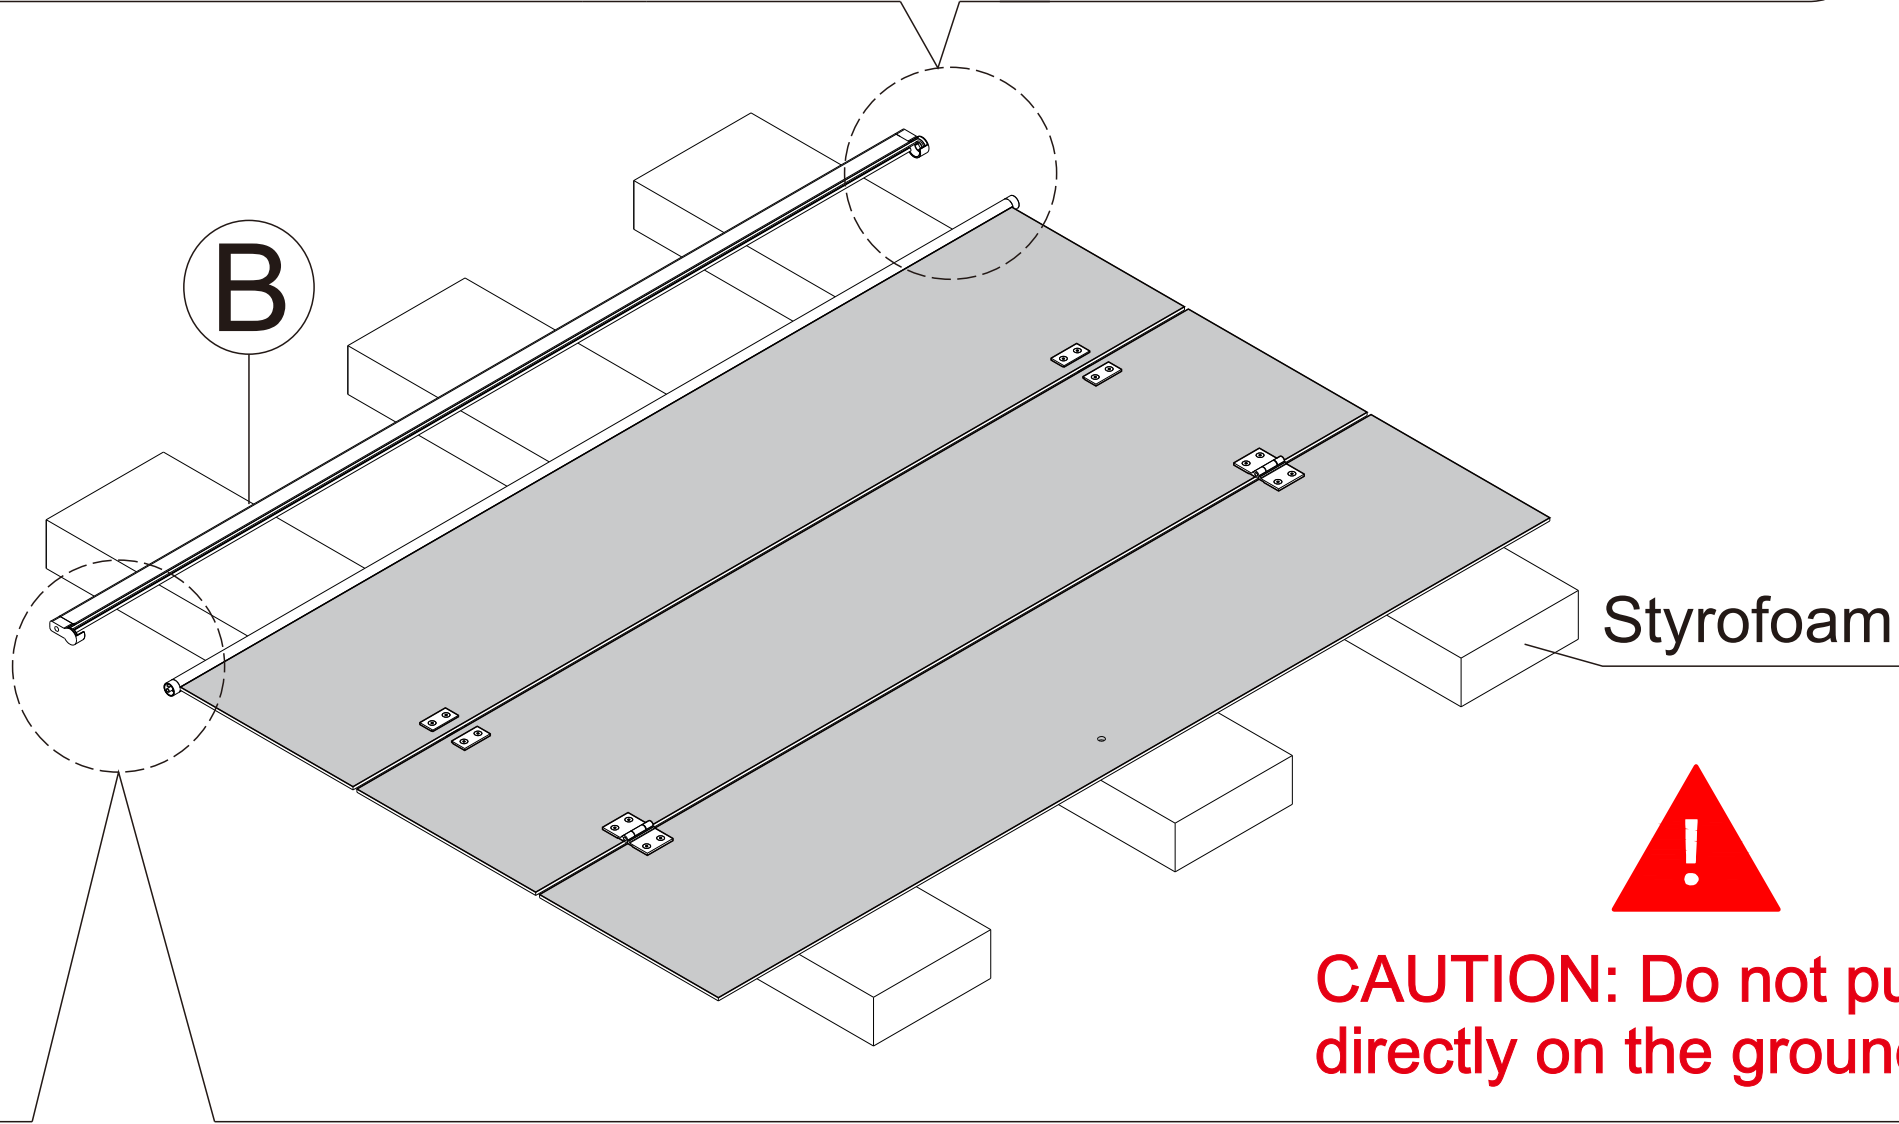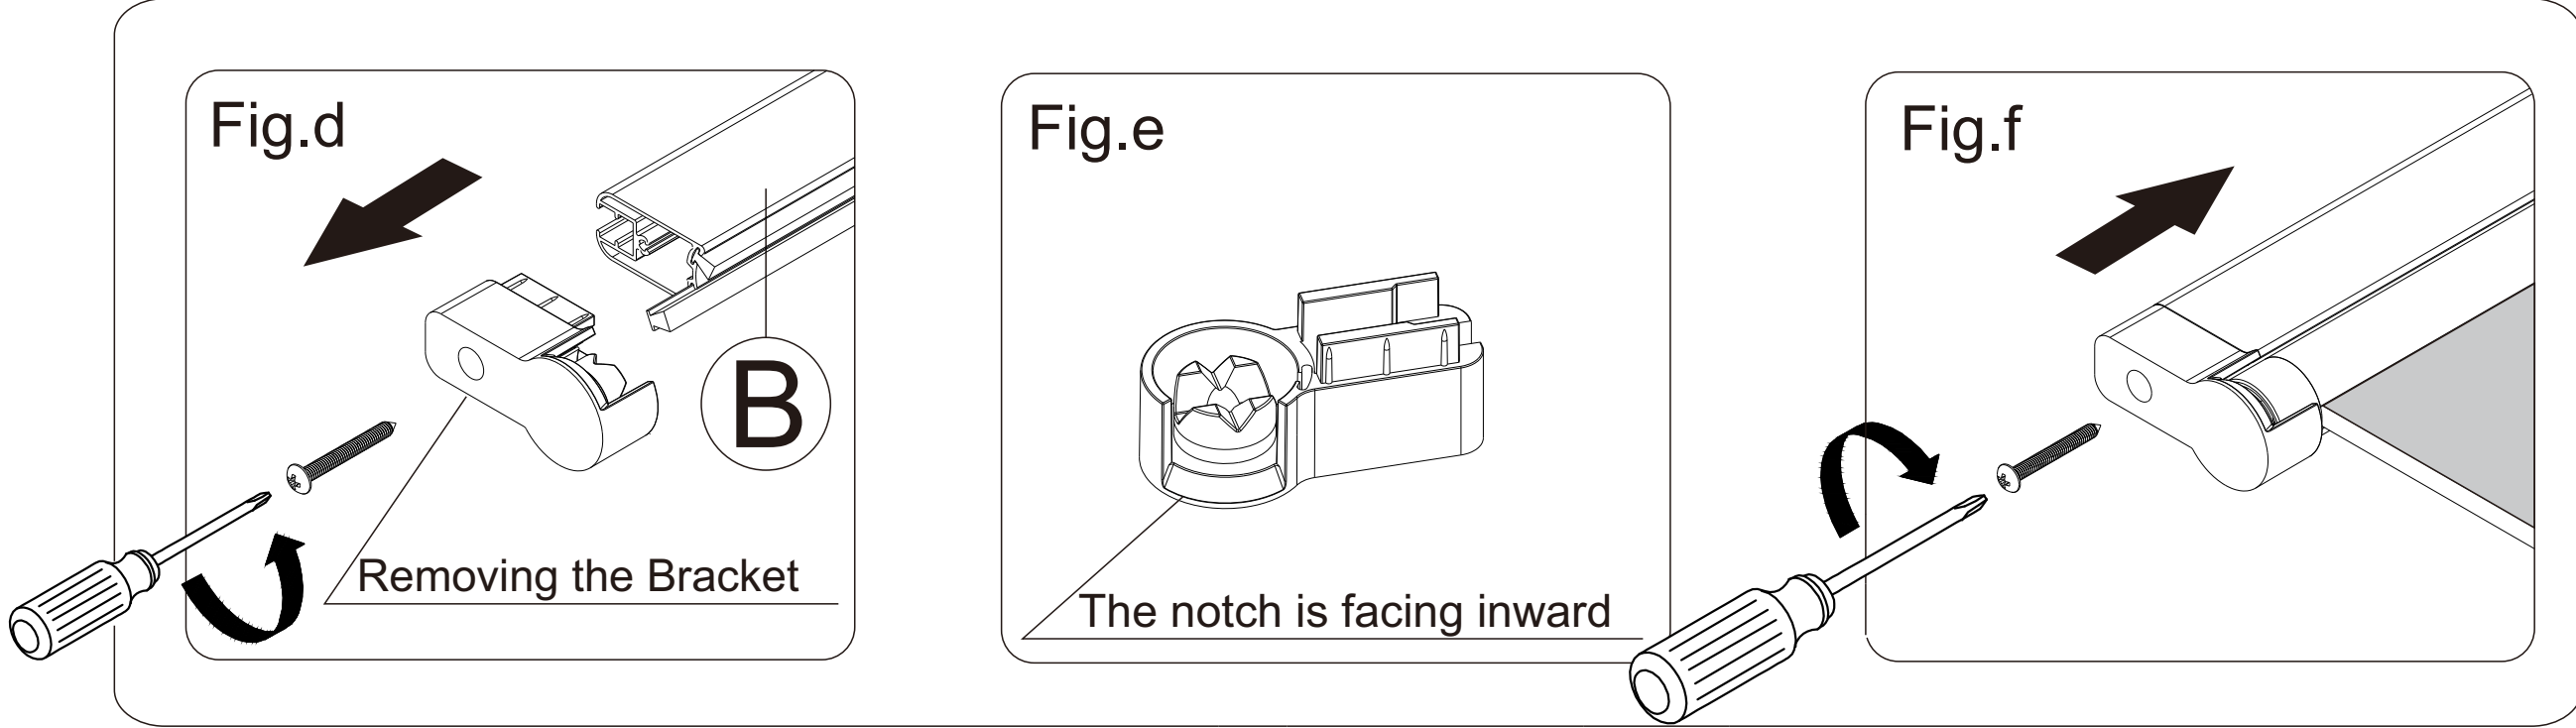

12 Install Glass Door(C)


NOTE

- 1.Insert the **Stationary Glass(C)** to the **Wall Jamb(A)**,the max adjustment is 5/8" as Fig.a and Fig.b
- 2.Note the Bracket orientation as Fig.c

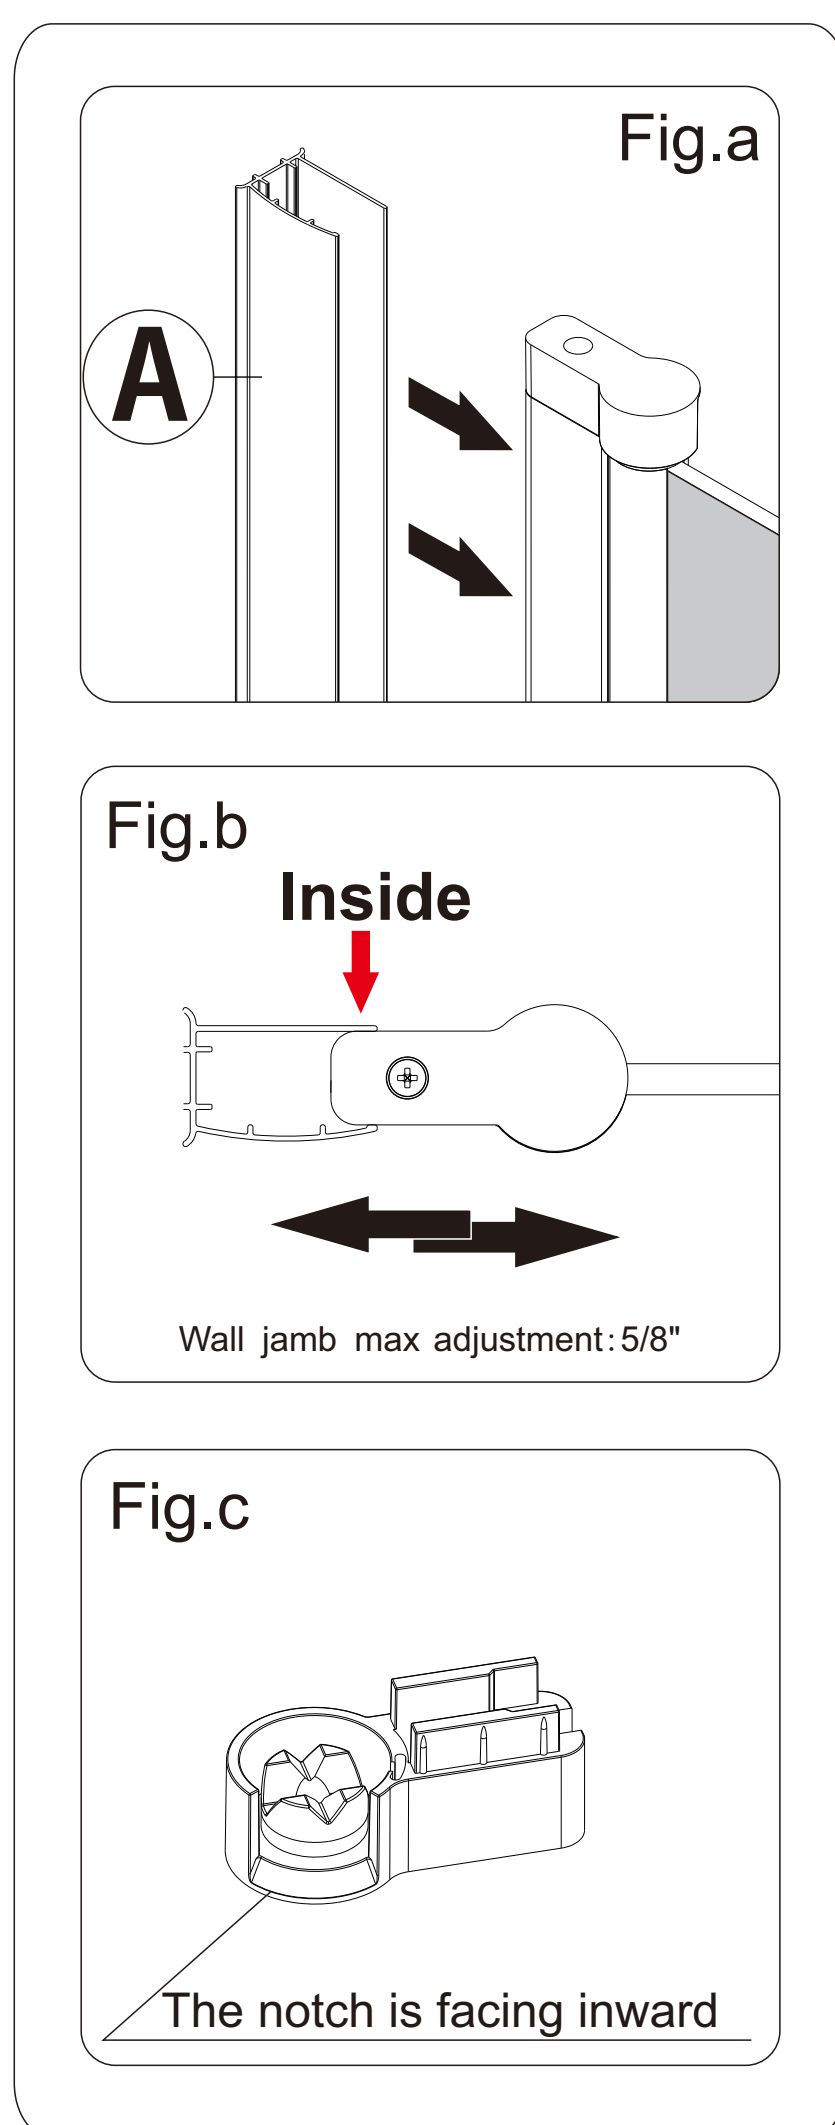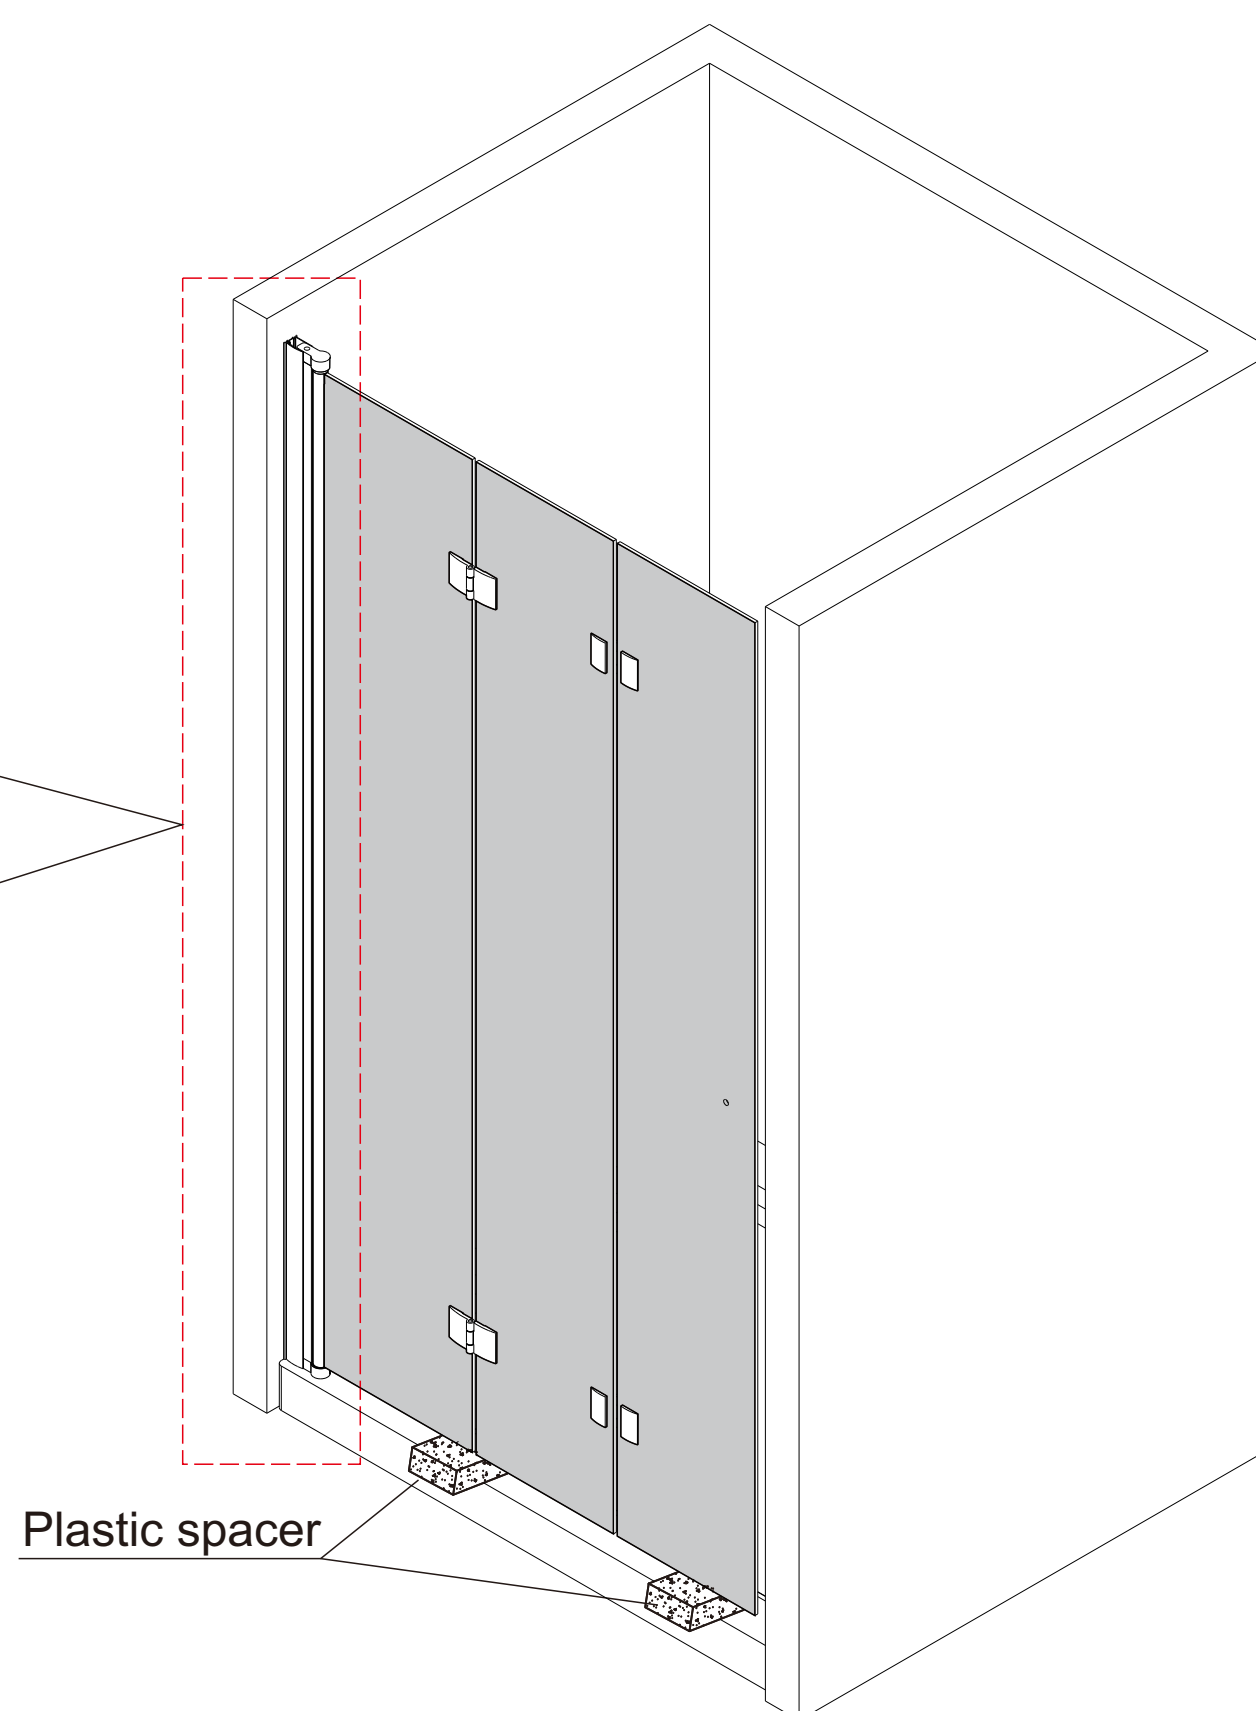

NOTE



The Plastic spacer is an aid tool to prevent the glass from touching the ground

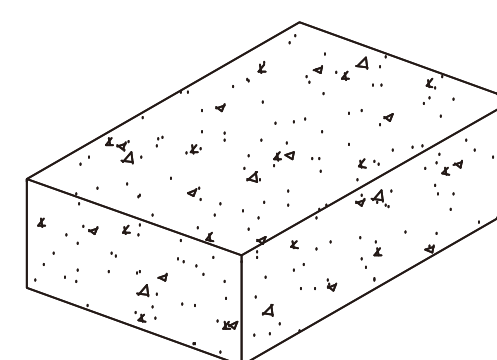

Note: The shower door can be installed left or right, according to the need to determine the installation direction.

13 Fixed Wall Jamb(R)


NOTE Attach the **Wall Jamb(R)** to the wall with **Screws (bb)** as Fig.a.

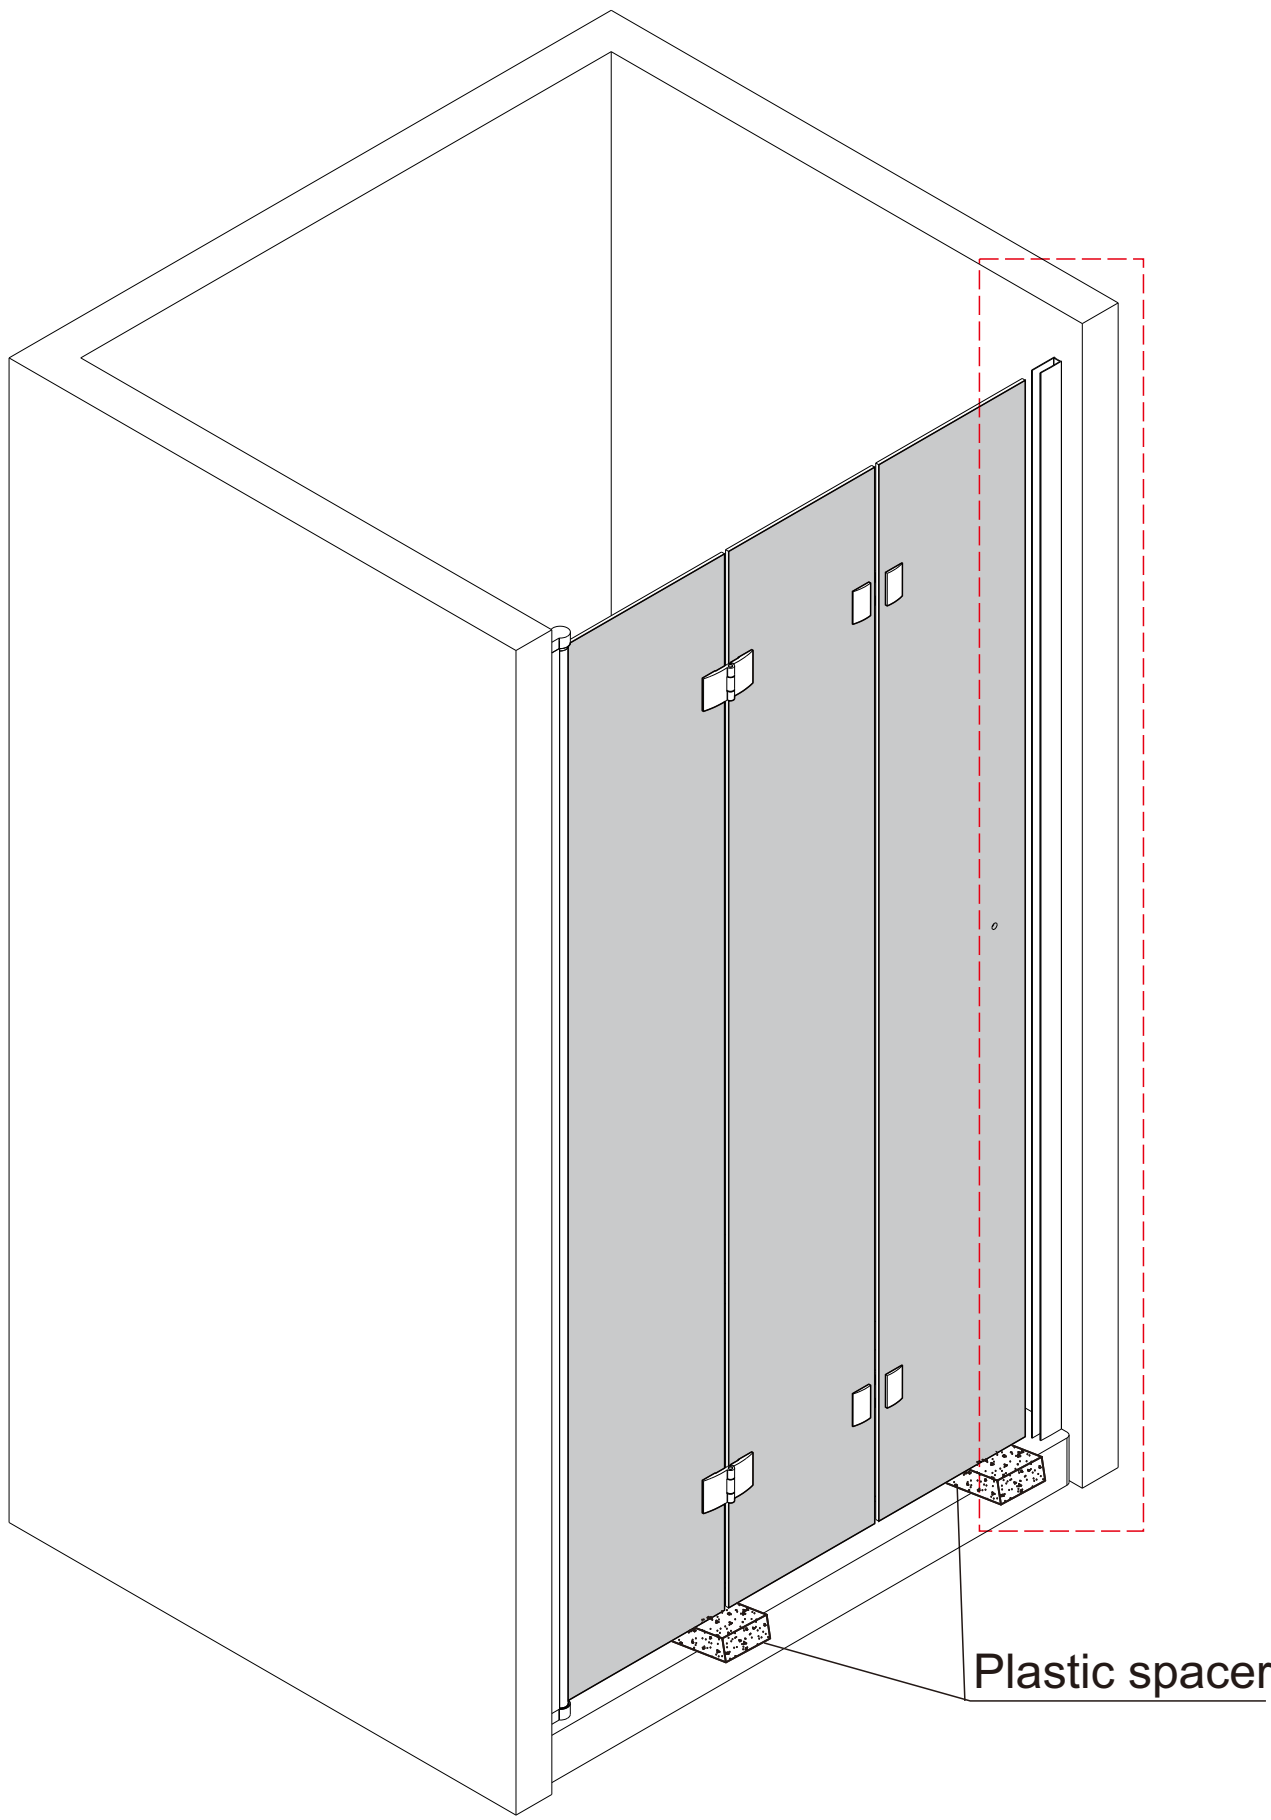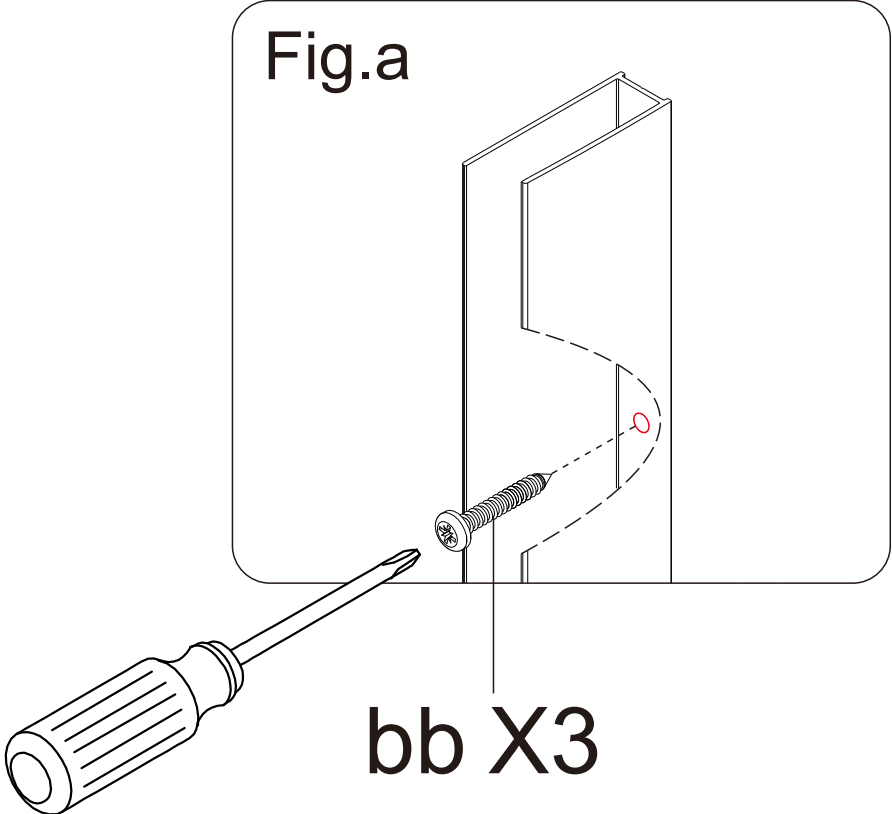

!
Note: The shower door can be installed left or right, according to the need to determine the installation direction.

NOTE


The Plastic spacer is an aid tool to prevent the glass from touching the ground

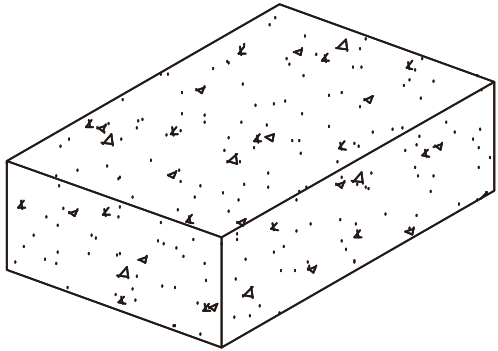

14 Install the **Magnetic stripe (T)** and the **Upright Profile (S)**






NOTE

1. Install the **Magnetic Strip (T)** on the **Glass Door (Q)** as Fig.a .
2. Install the **Upright Profile (S)** on the **Wall Jamb (R)** as Fig.b .
3. The maximum adjustment width for upright profile (S) is 1-1/8" as Fig.c .
4. Make sure the magnetic stripe is closed as Fig.d .

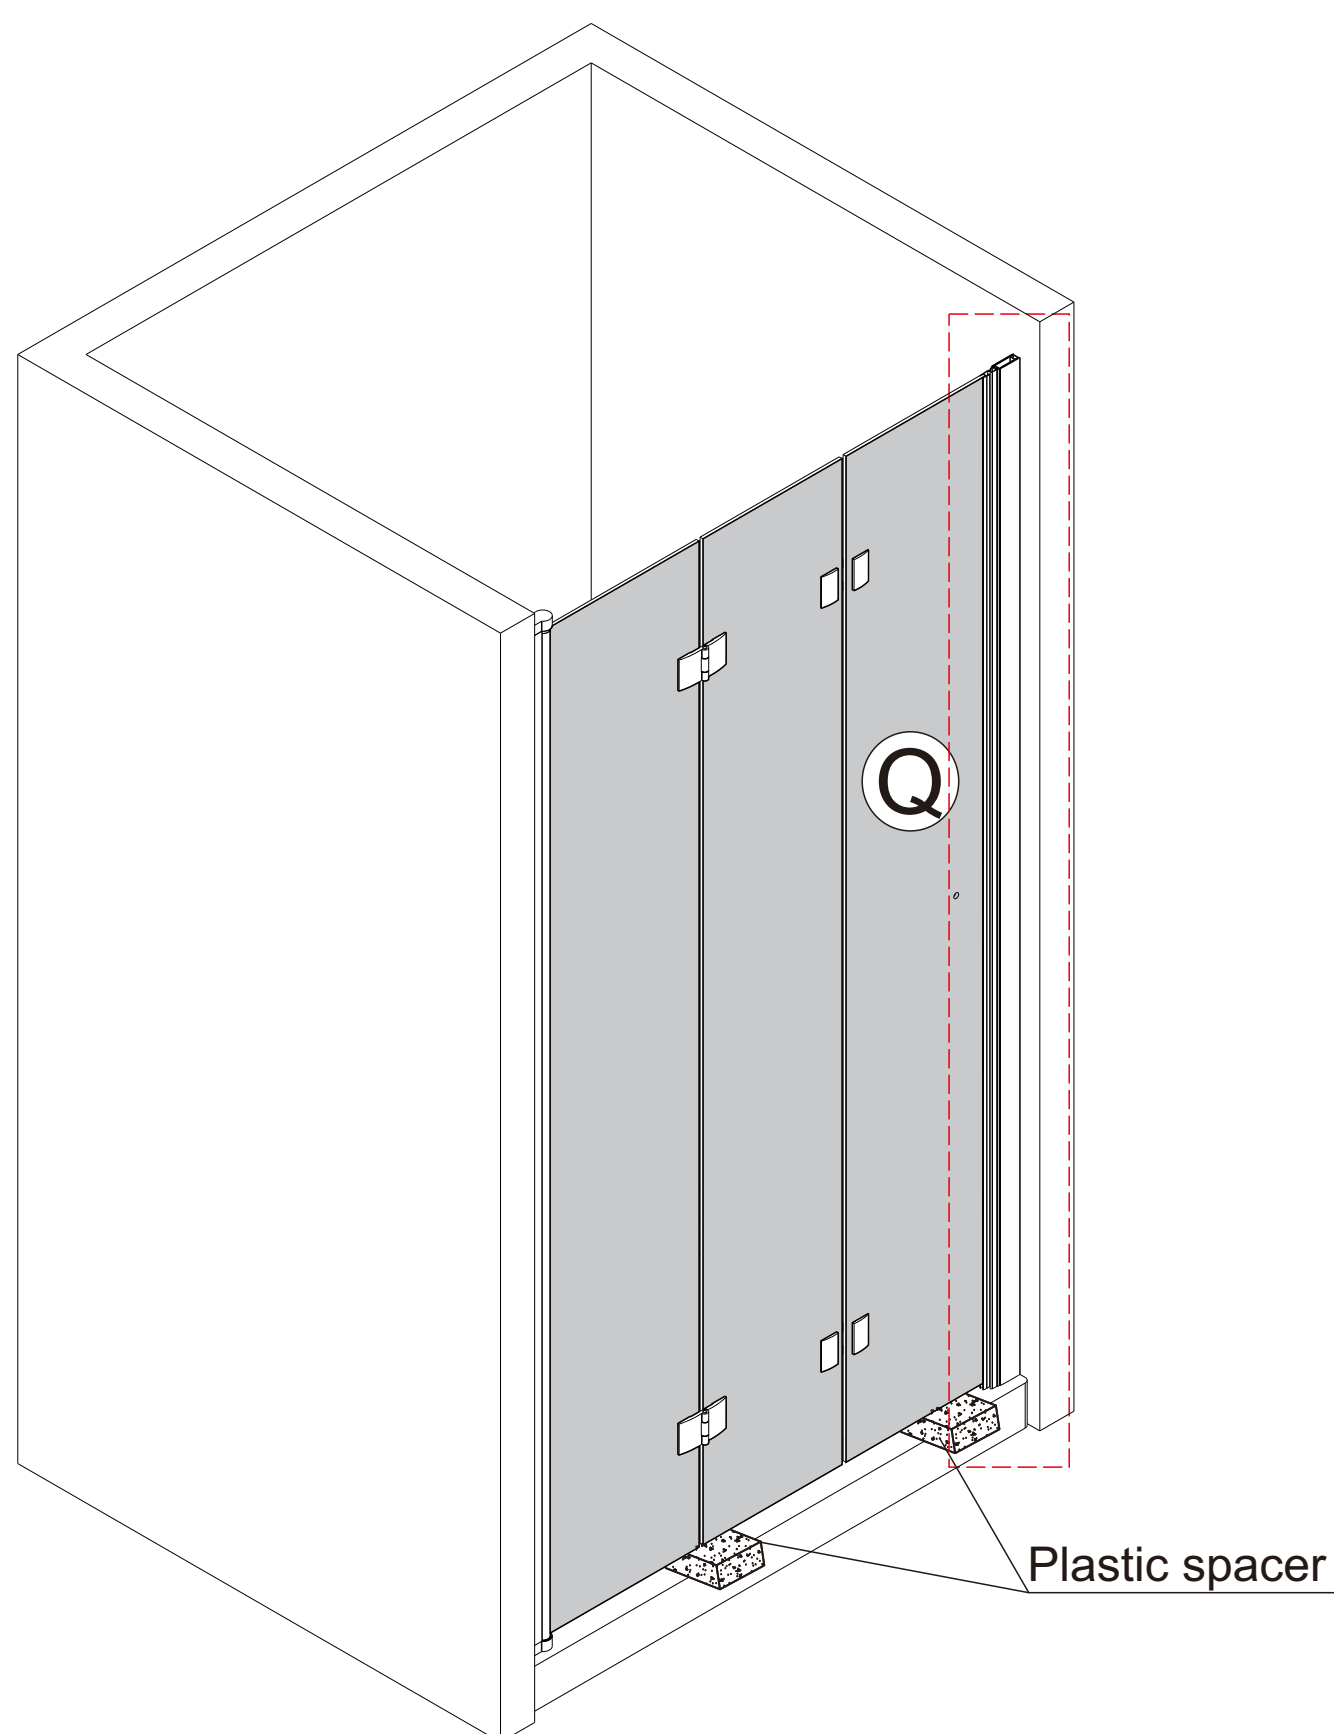

NOTE




The Plastic spacer is an aid tool to prevent the glass from touching the ground

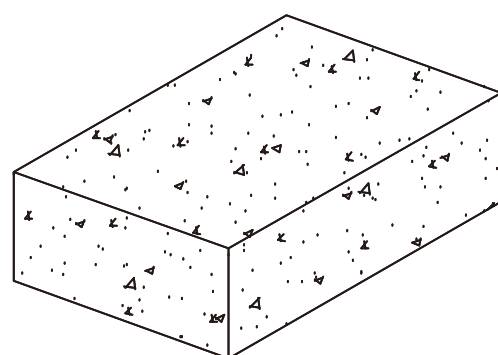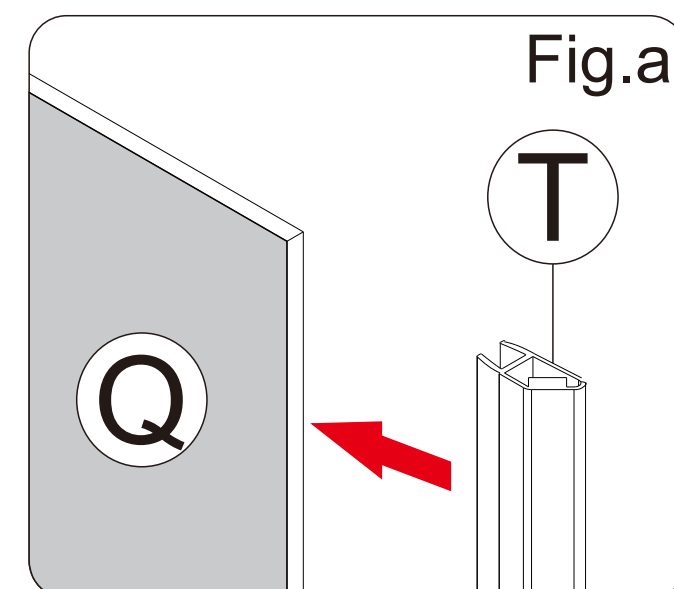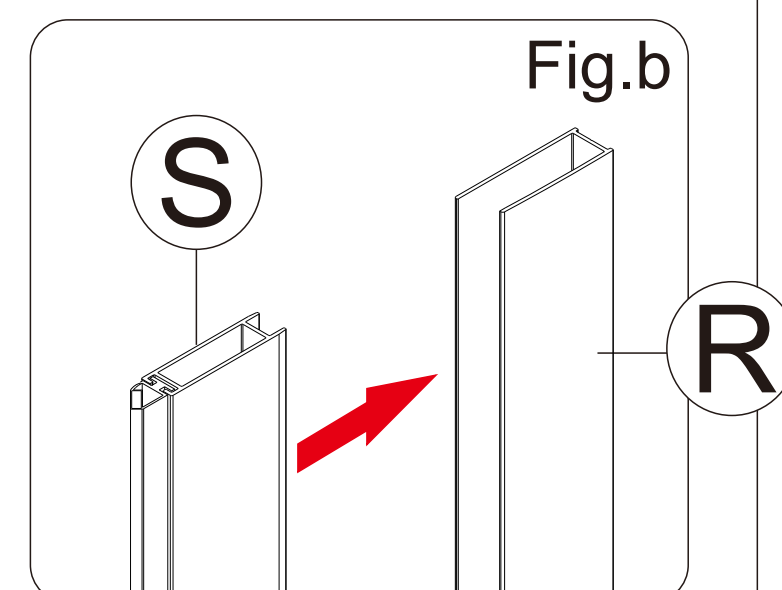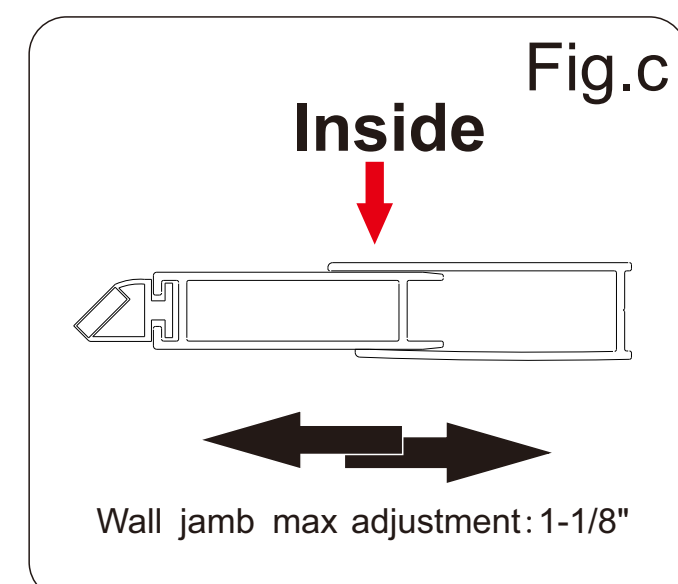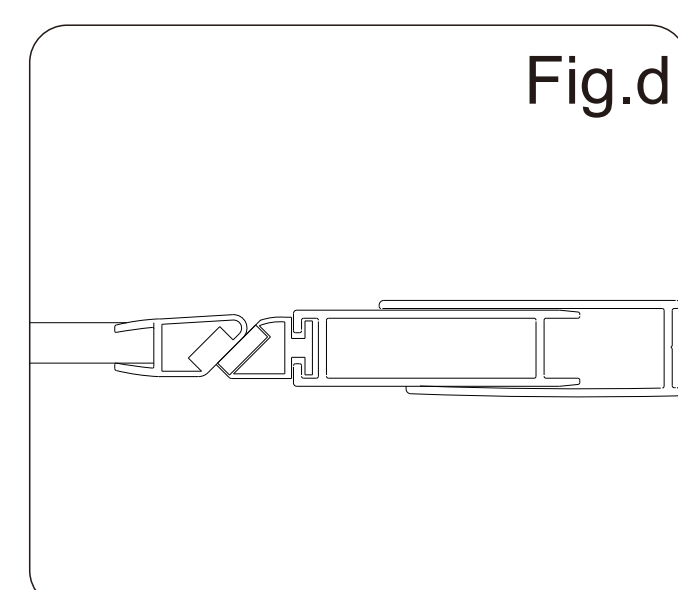

15 Adjustment

NOTE



Adjust the **Upright Profile (S)** left and right to ensure the magnetic strip fits perfectly and seamlessly as Fig.a .

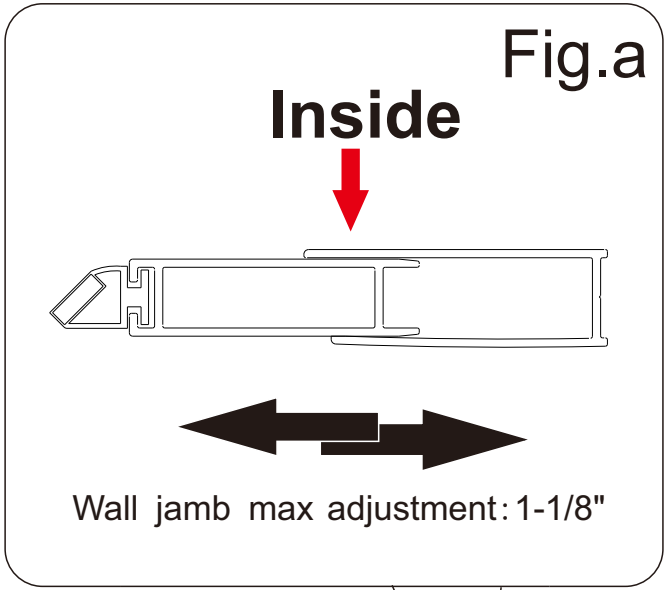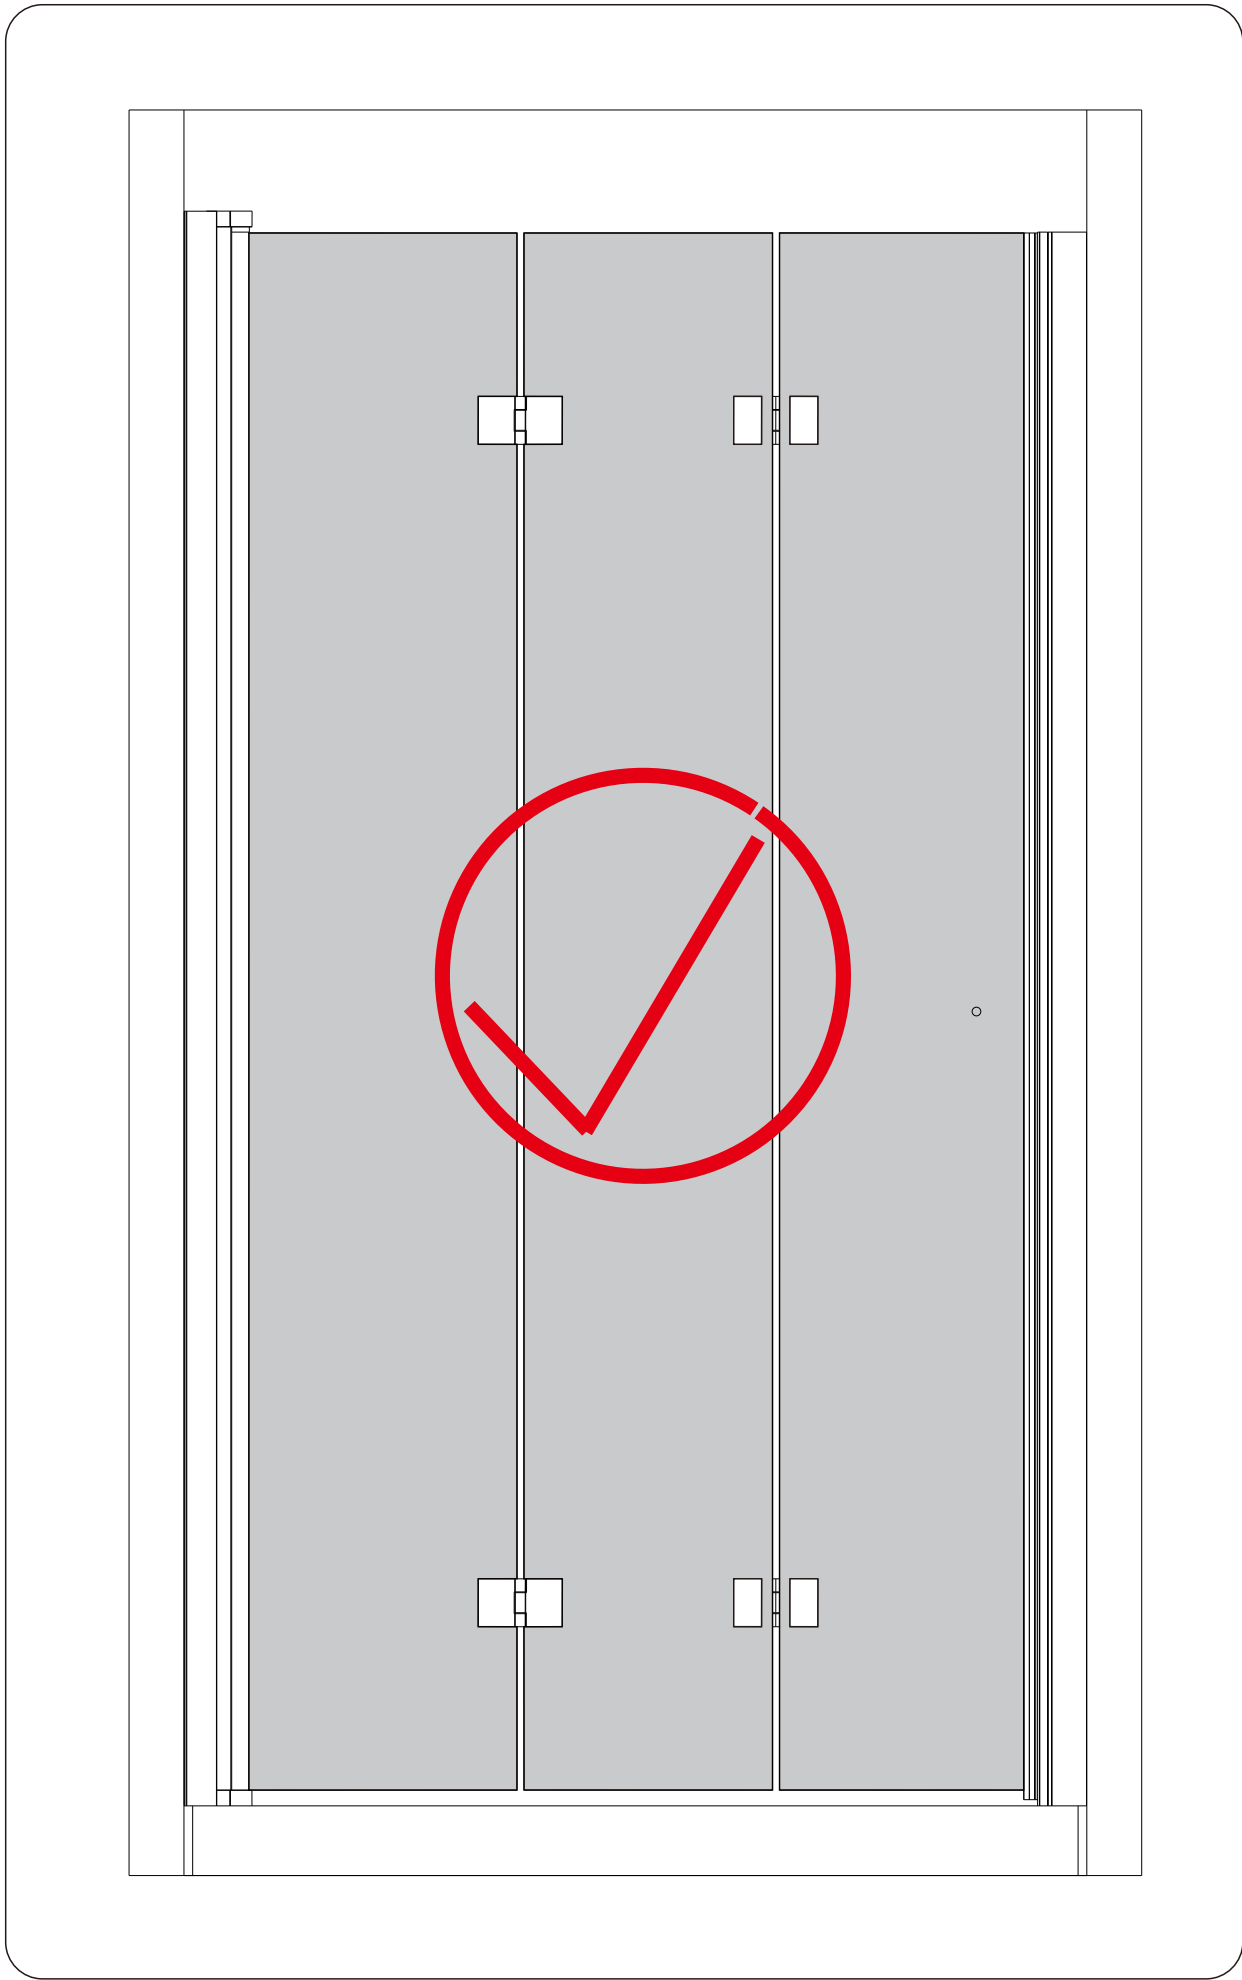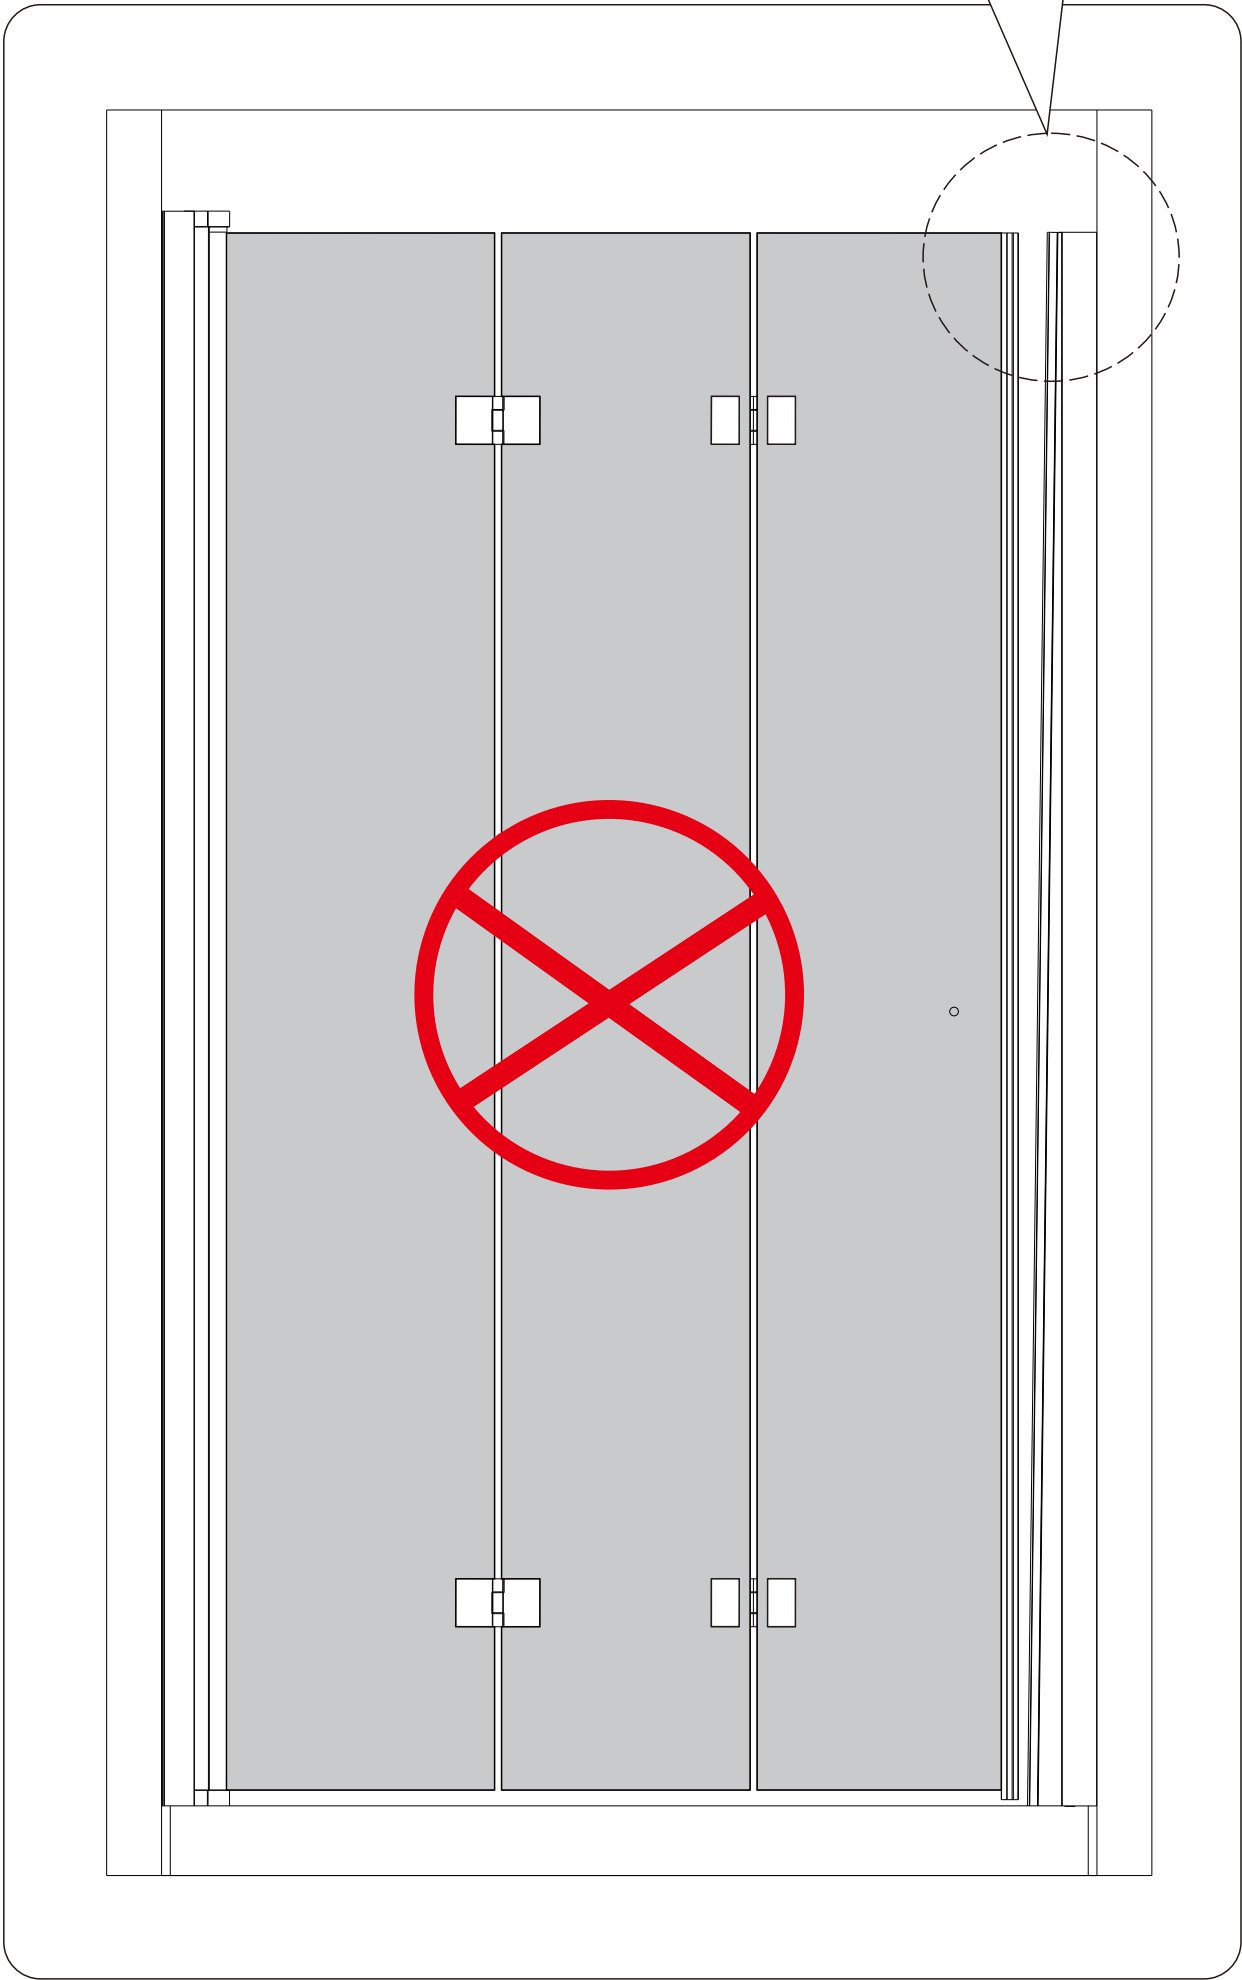

16 Lock Upright Profile(B)

NOTE

1. Ensure the glass doors are level and flat. and make sure both upright profiles are symmetrical .
2. Drill 3 holes on the inside of the **Wall Jamb(A)** with 1/8"(3mm) drill bit as Fig.a .
3. Install **Screws(ff)** and screw cover cap **Washers(cc)** as Fig.b.
4. Install **Screw caps(dd)** as Fig.c.

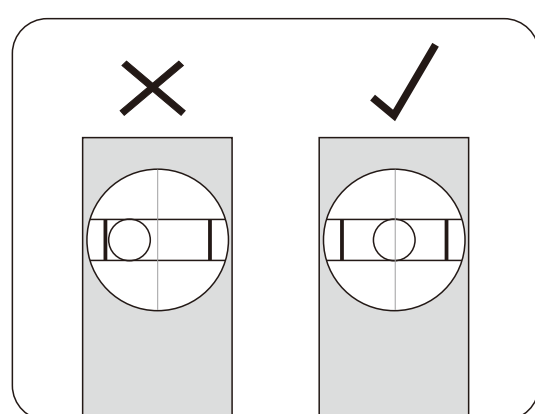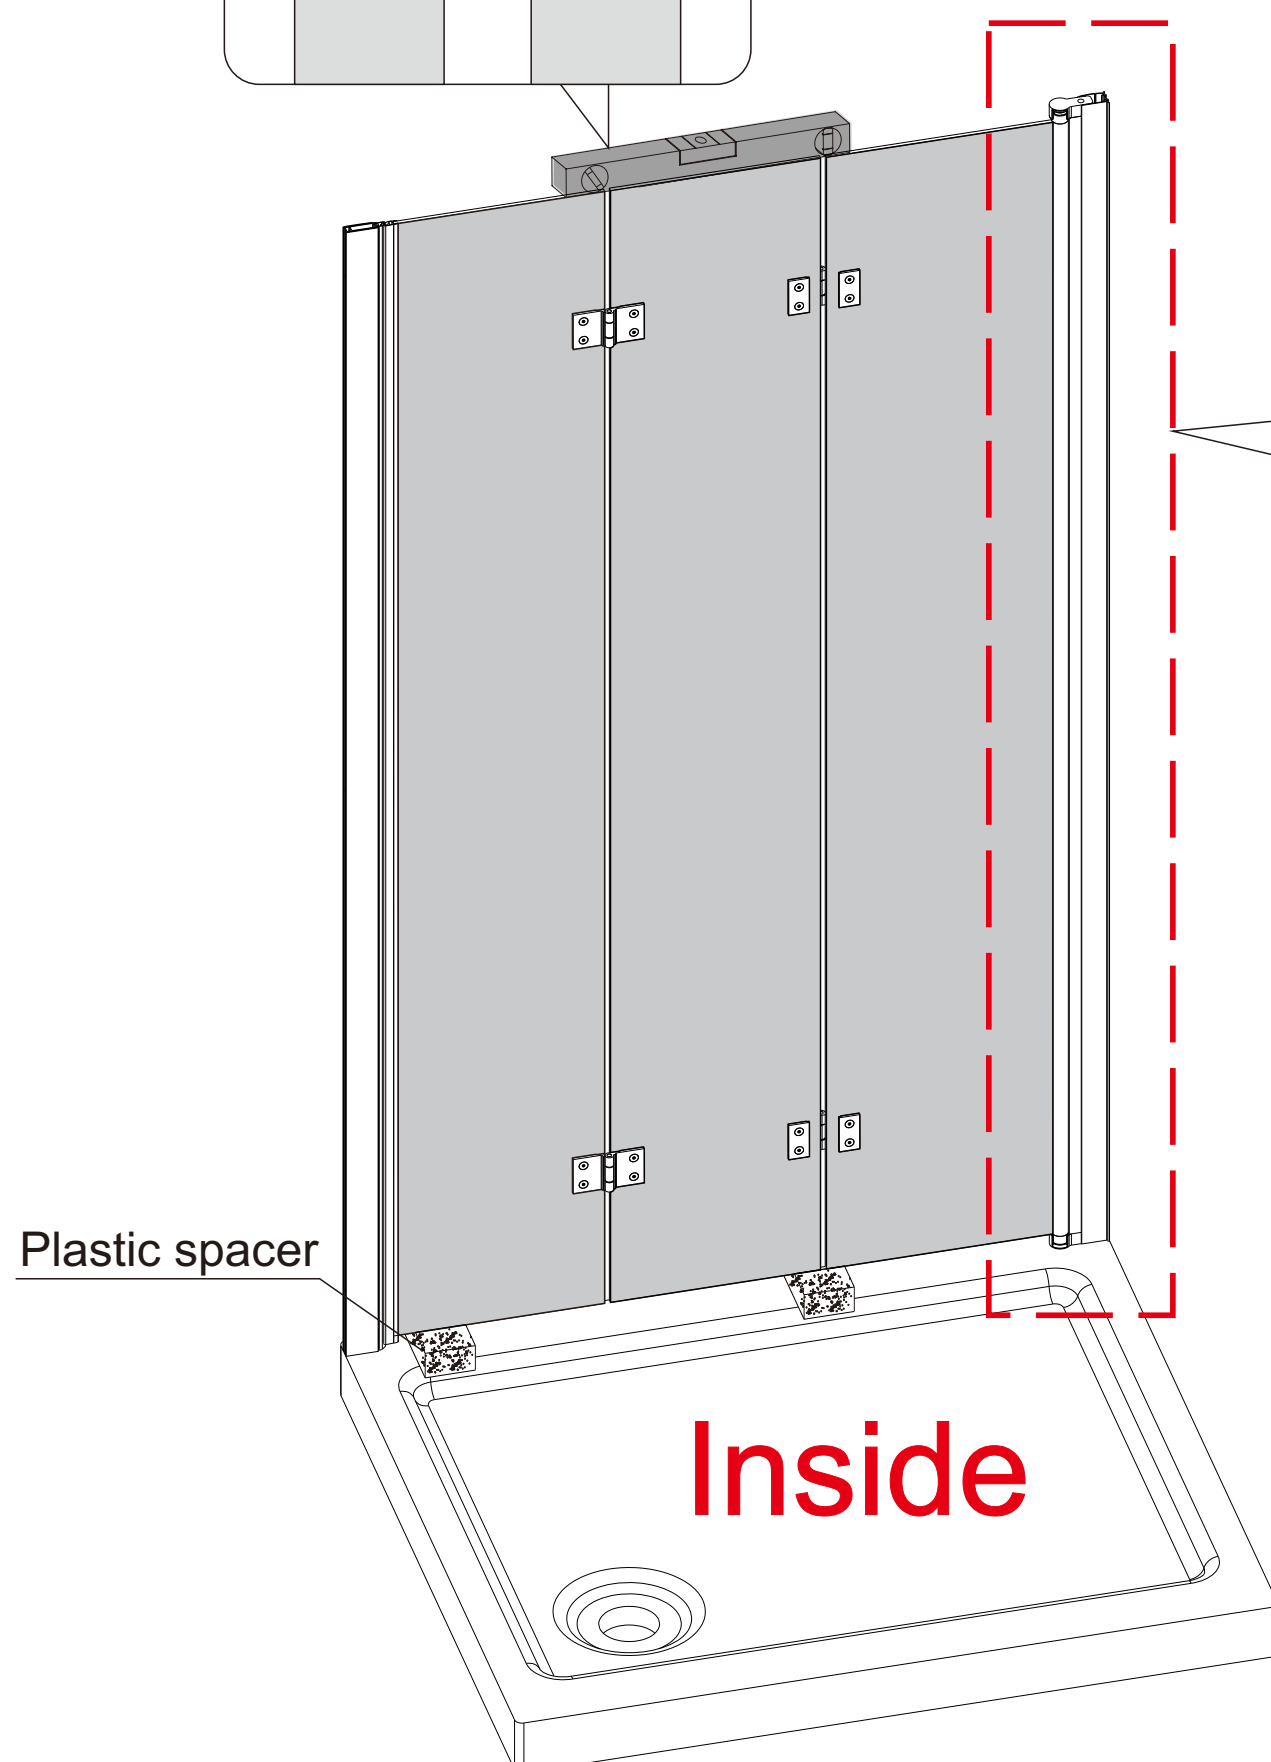

X3

Fig.a

Inside
(1/8")
ø3mm

Inside

Fig.b

ccX3
ffX3

Inside


Fig.c

ddX3

Inside

NOTE


The Plastic spacer is an aid tool to prevent the glass from touching the ground

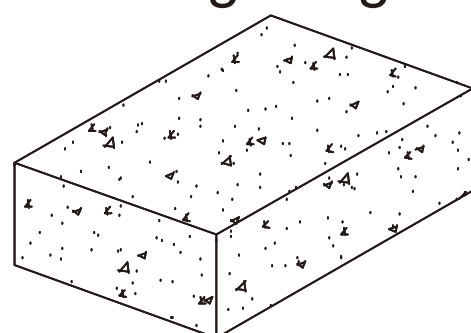

17 Lock Upright Profile(S)

NOTE

1. Drill 3 holes on the inside of the **Wall Jamb(A)** with 1/8"(3mm) drill bit as Fig.a .
2. Install **Screws(ff)** and screw cover cap **Washers(cc)** as Fig.b.
3. Install **Screw caps(dd)** as Fig.c.

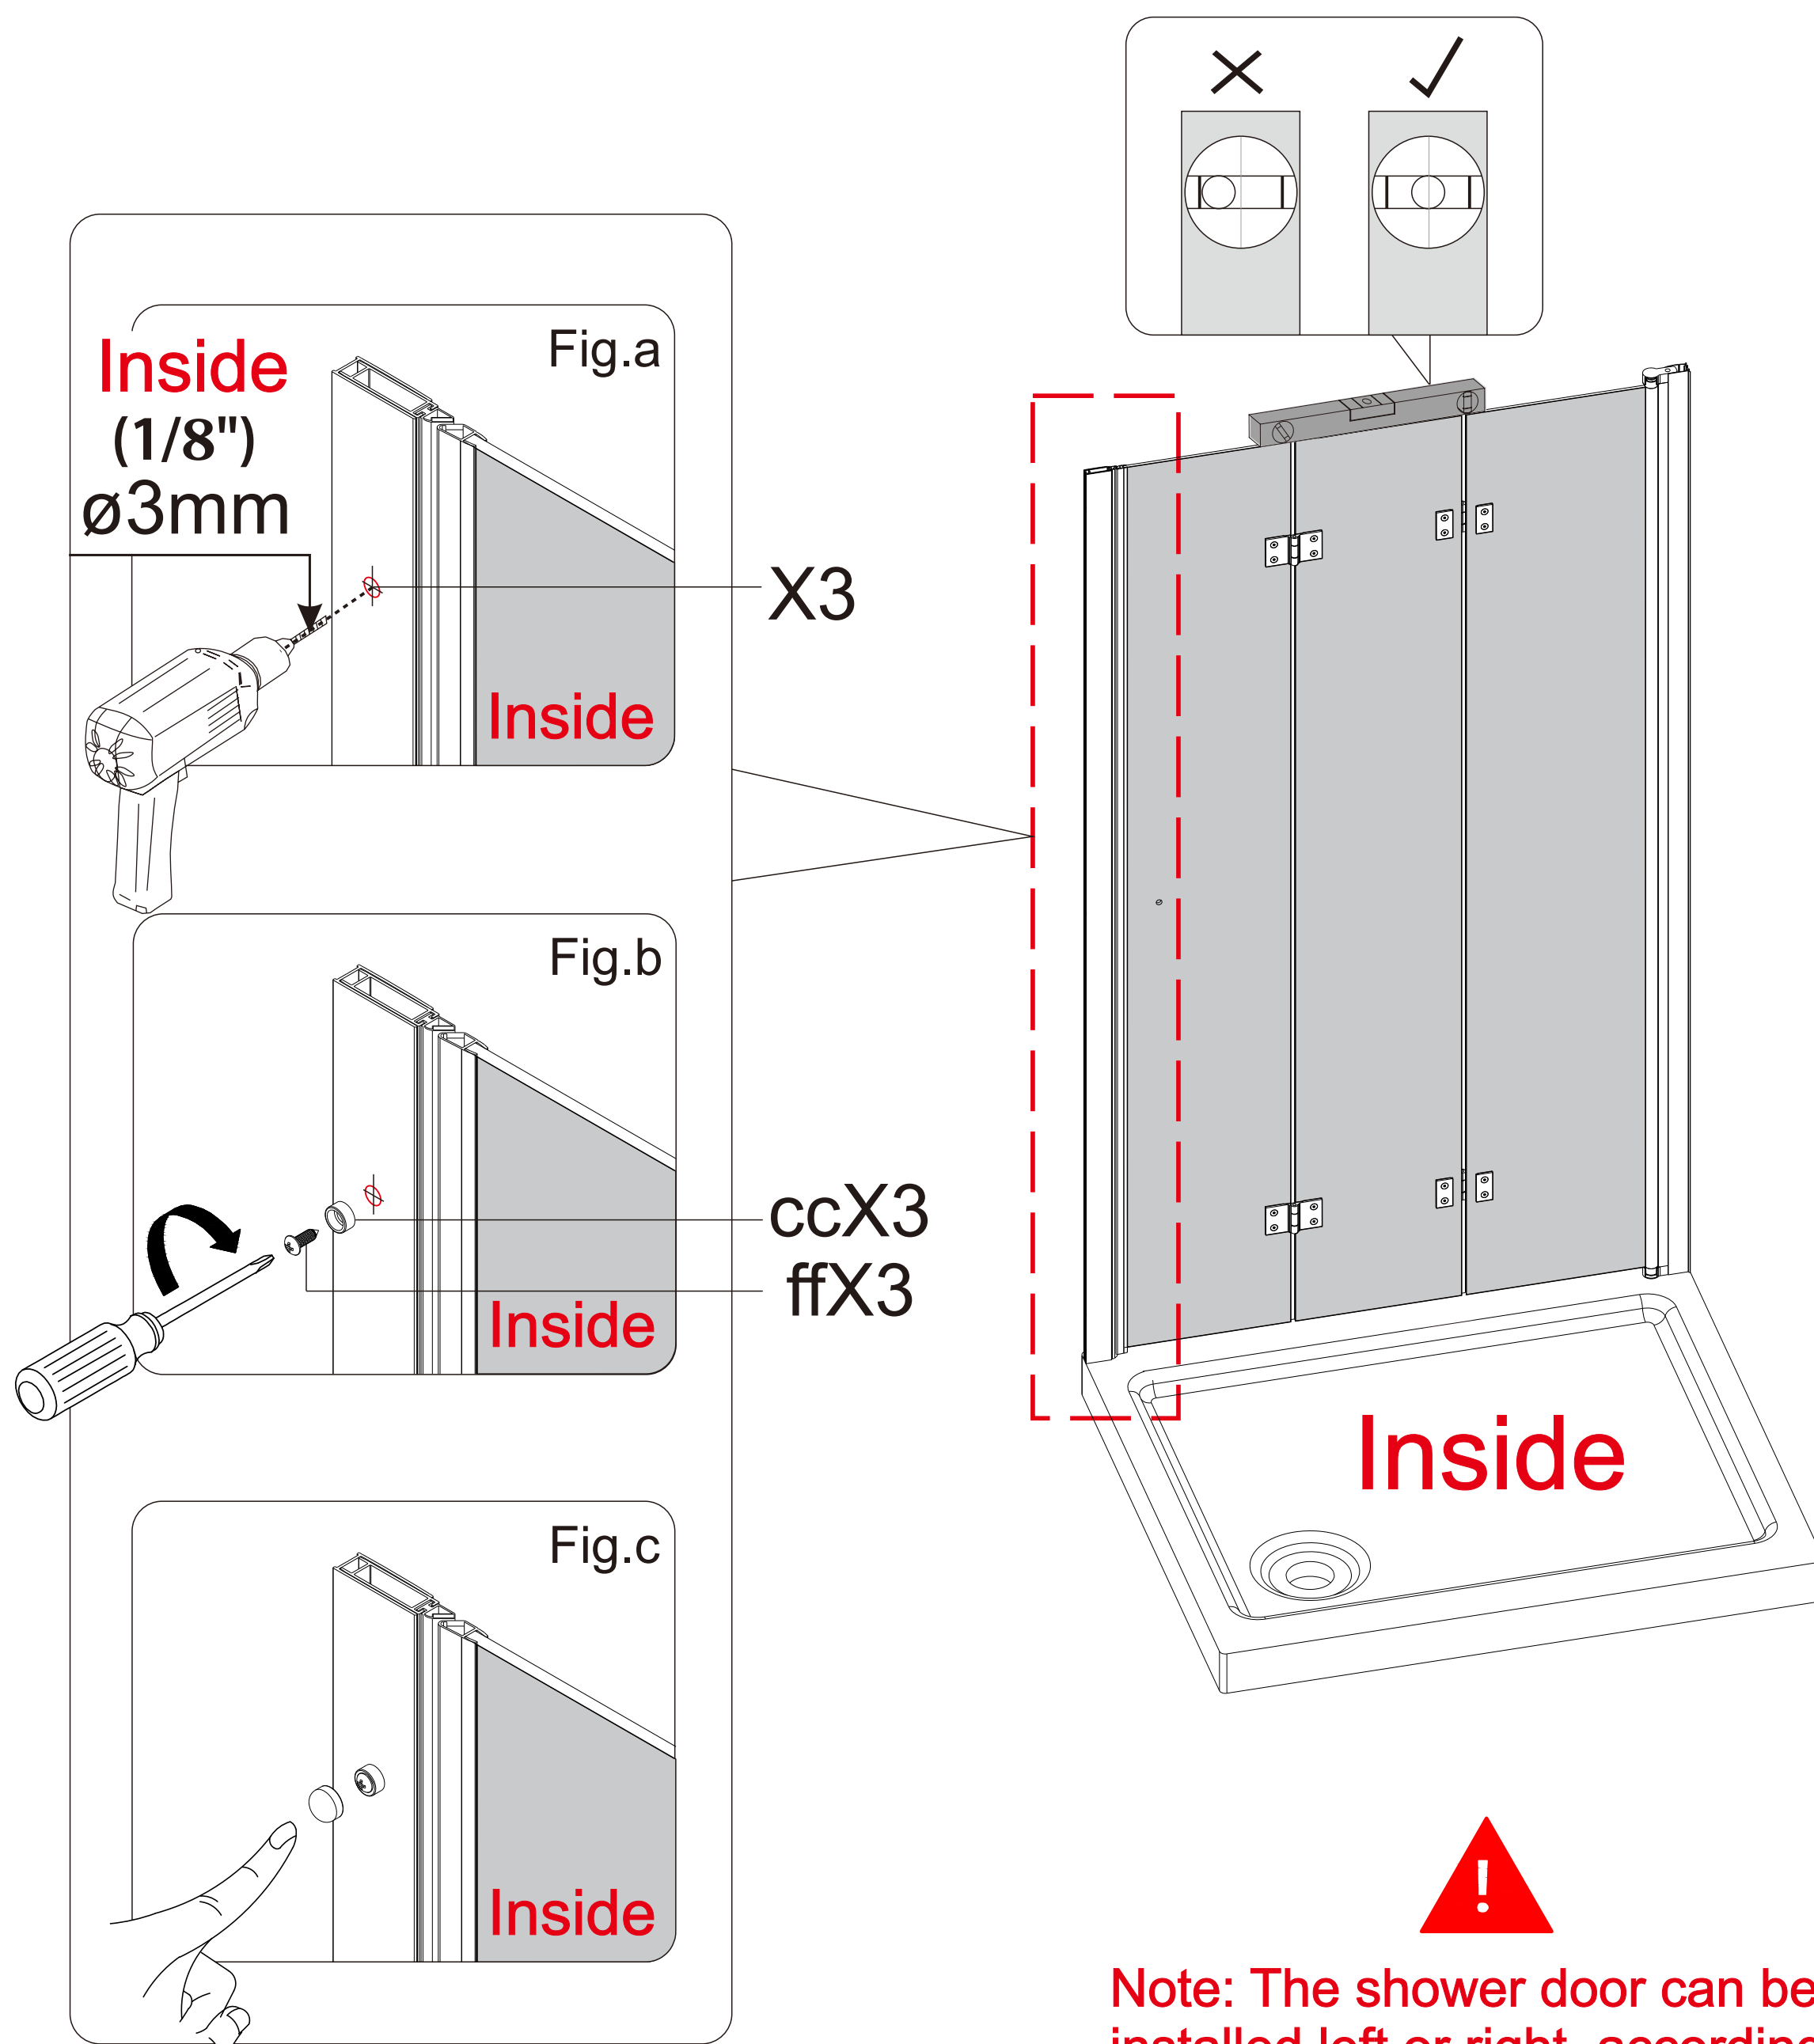

18


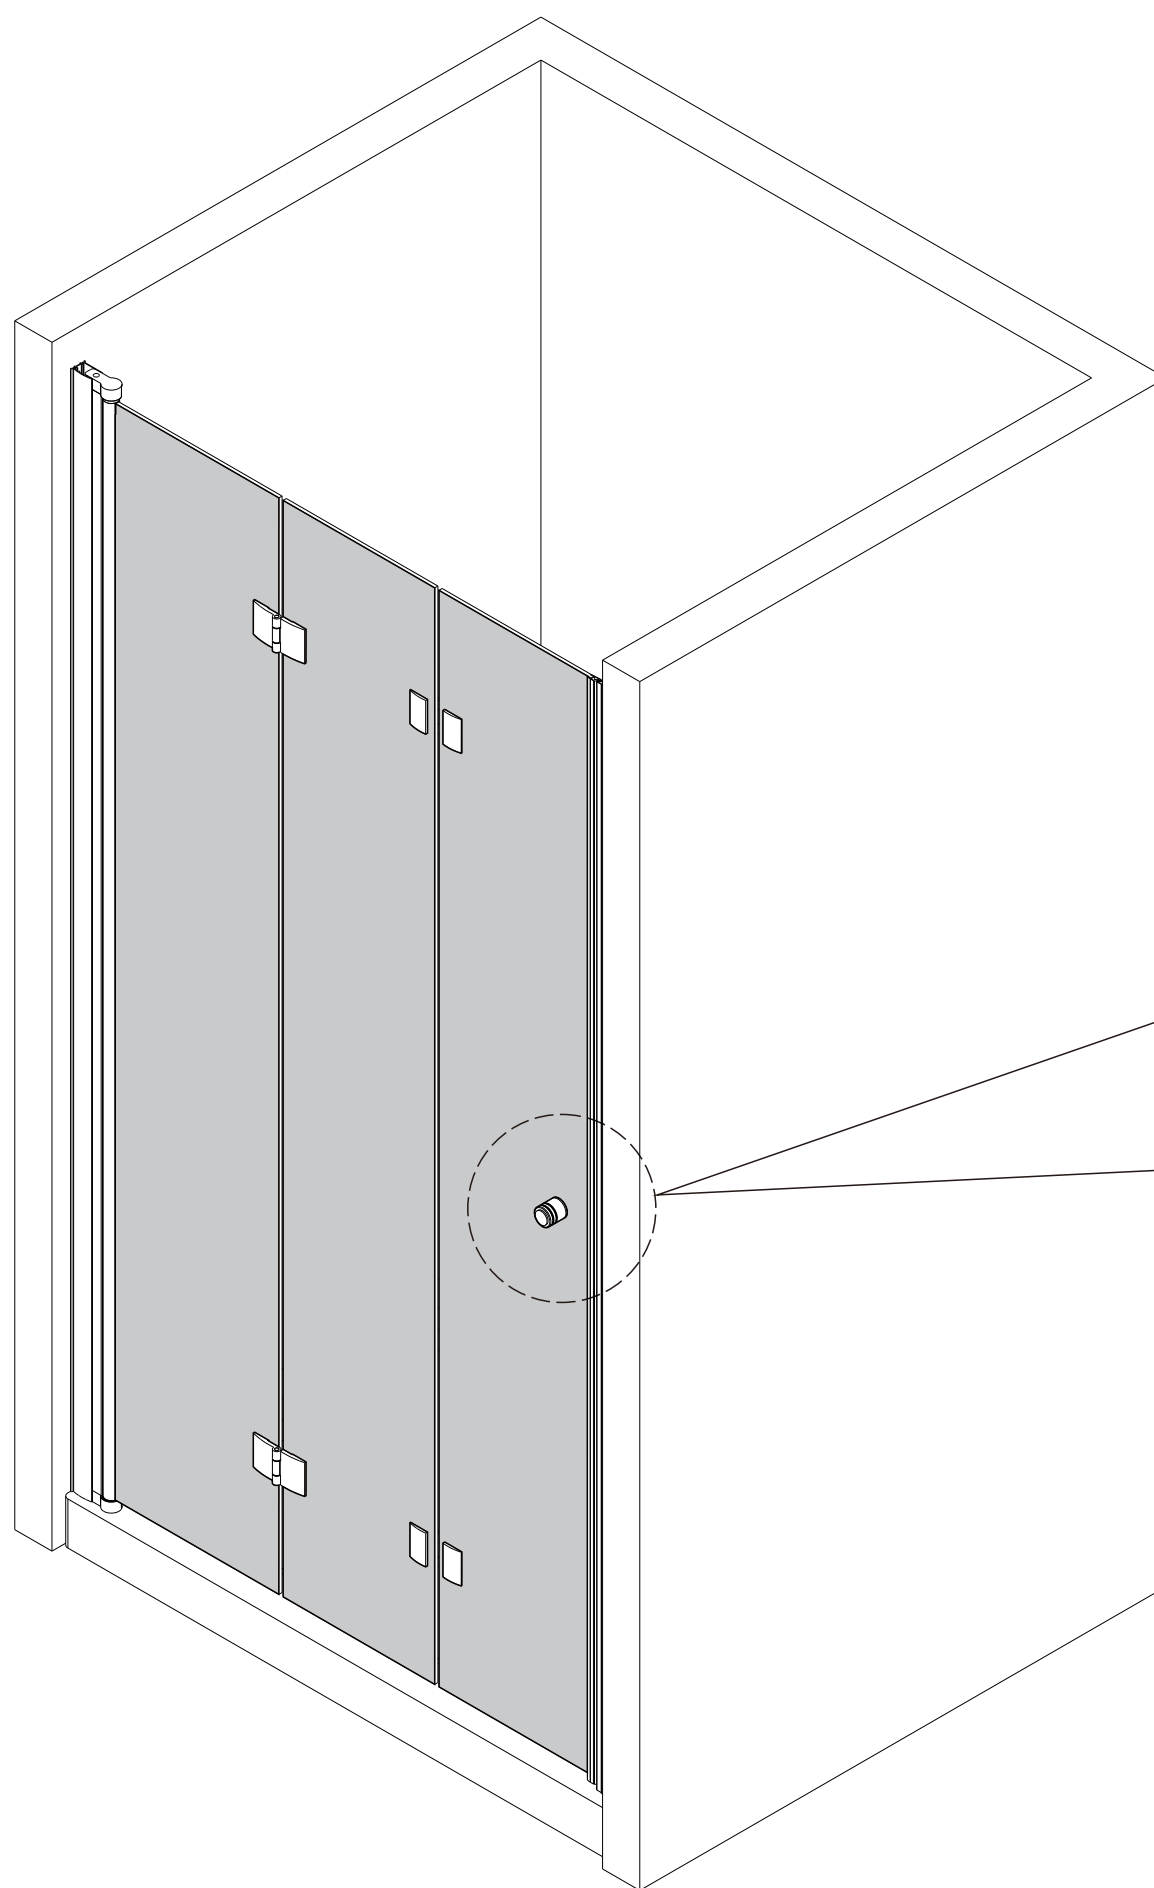
 Install the **Handle(J)****NOTE**1. Install the **Handle (J)** on the **Glass Door (Q)** as Fig.a.

Fig.a


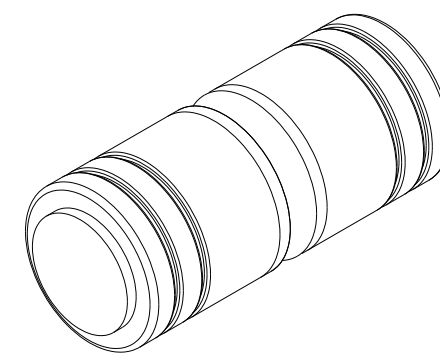


Note: The shower door can be installed left or right, according to the need to determine the installation direction.

19 Install the **Anti-Water Strip(D)**

NOTE



- 1.Install the **Anti-Water Strip(D)** onto the **Stationary Glass(C)** and **Glass Door (I)** as Fig.a and Fig.b .
- 2.Install the **Anti-Water Strip(D)** onto the **Glass Door(I)** and **Glass Door (Q)** as Fig.c and Fig.d .

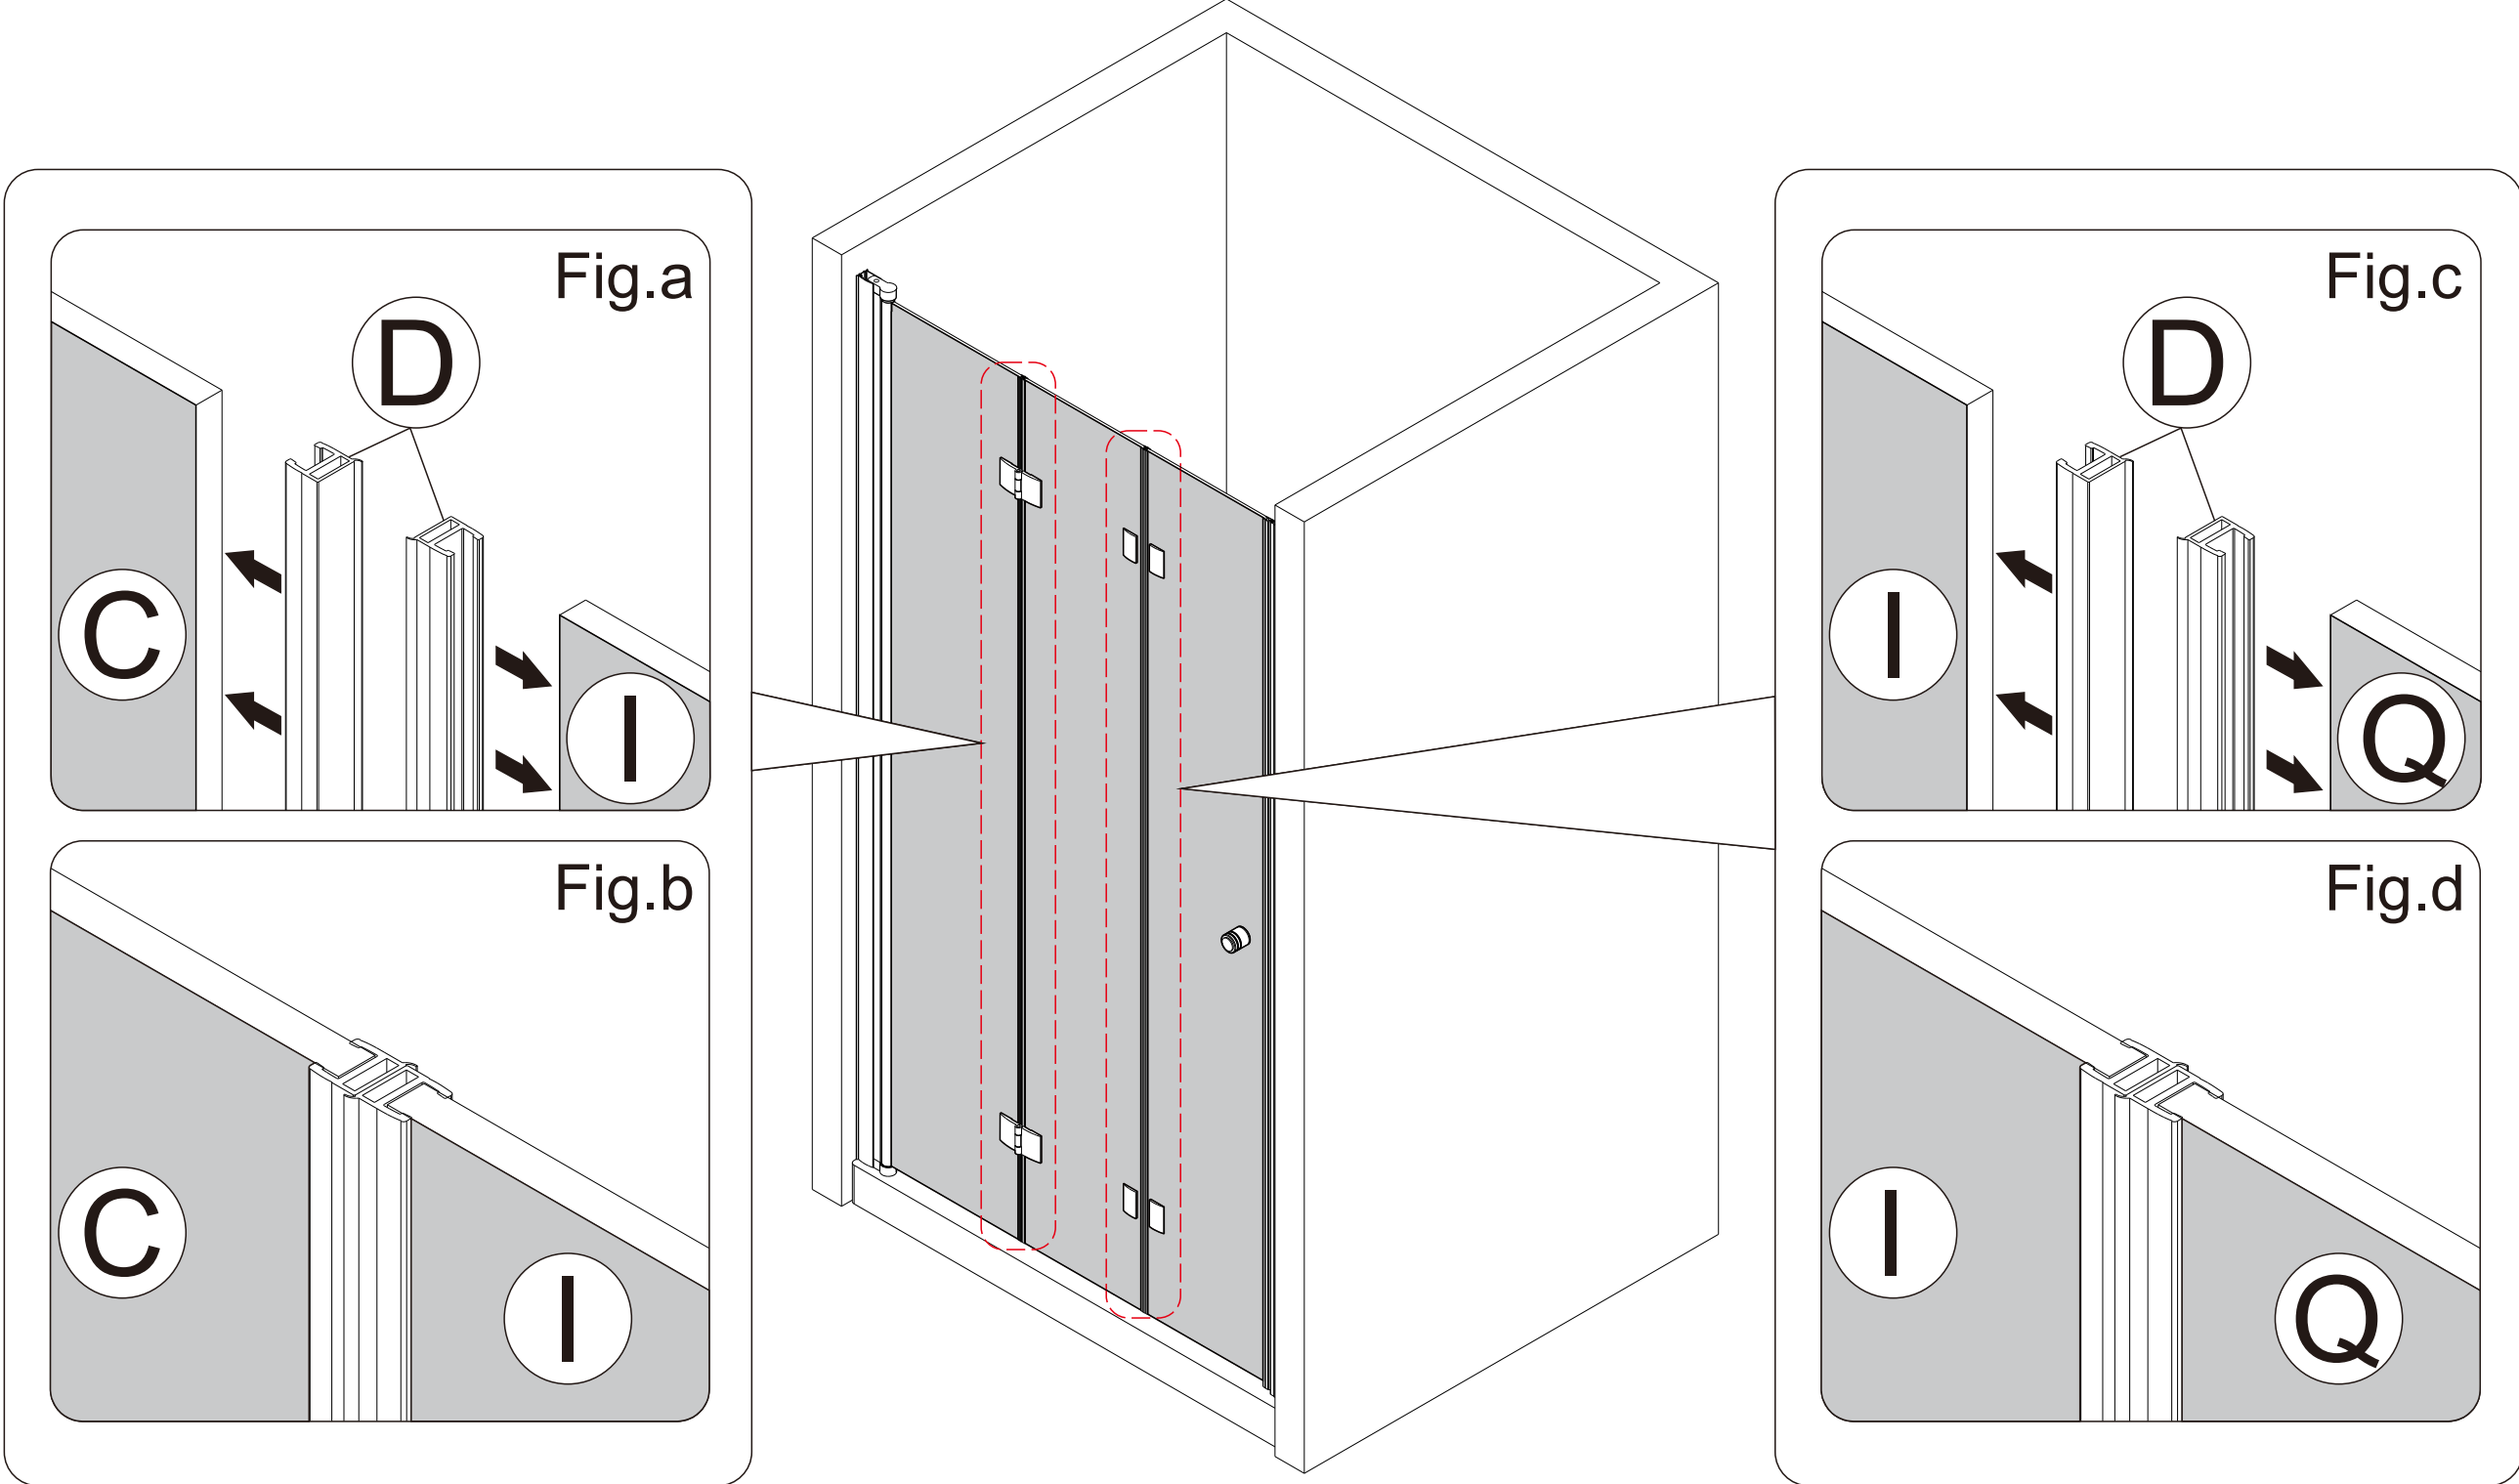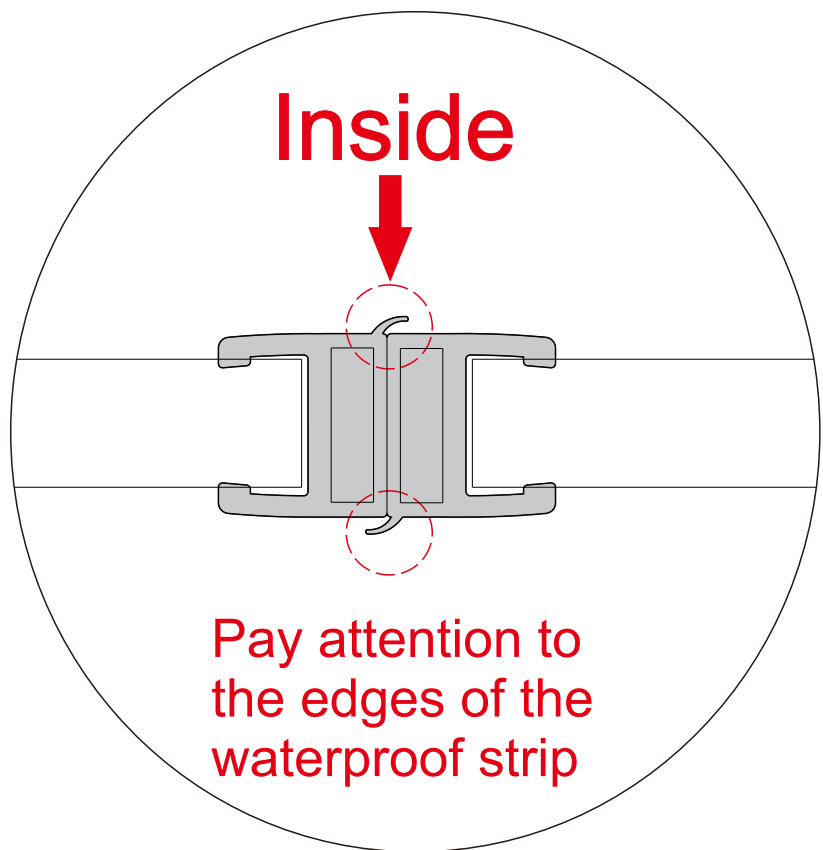

20₋₁ Install the **Bottom Anti-Water Strip(K&L)**




The Bottom Anti-Water Strip(K&L&M) beveled edge is always facing inward

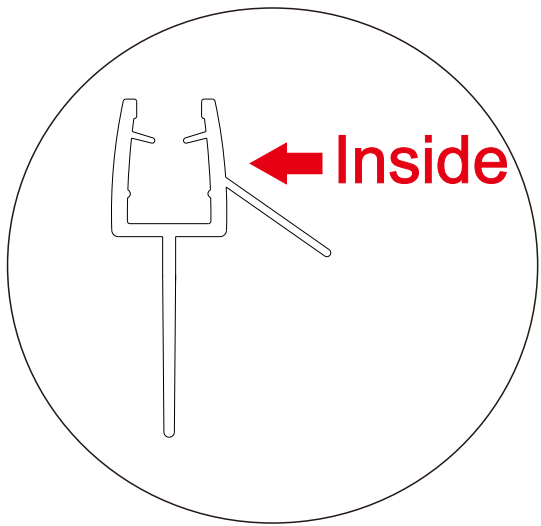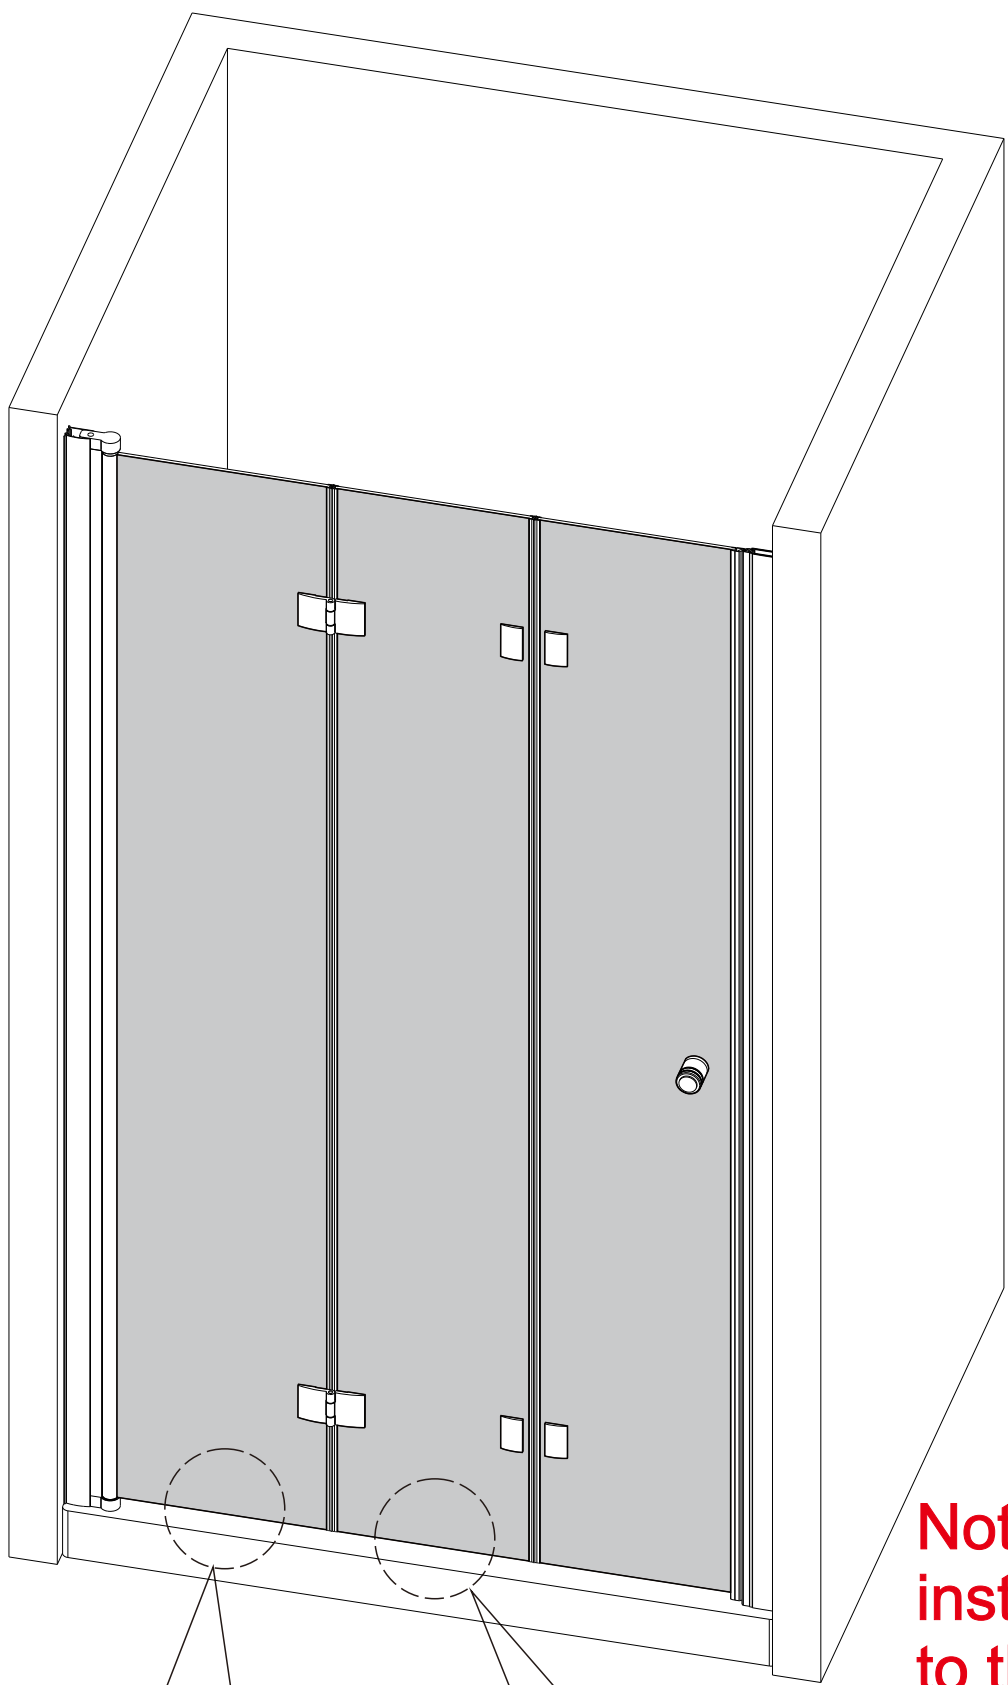


Note: The shower door can be installed left or right, according to the need to determine the installation direction.

K

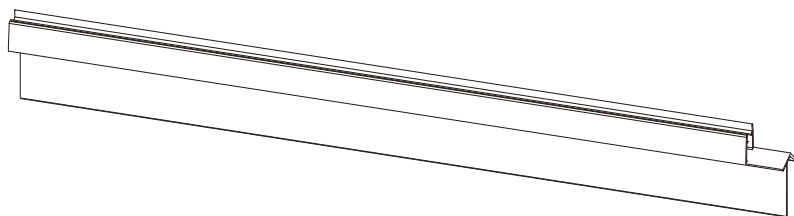

1.This **Bottom Anti-Water Strip (K)** has two pieces, each for a different left or right direction. Please install it on the **Stationary Glass (C)** according to the installation direction. The demonstration shows a left-opening shower door.

L


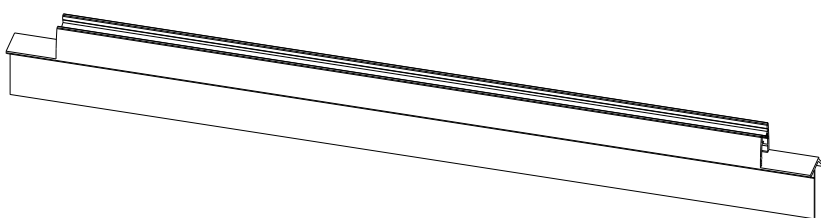


2.The **Bottom Anti-Water Strip(O)** is not cut and is always installed on the **Glass Door (I)**.


20₋₂ Install the **Bottom Anti-Water Strip(M)**




The Bottom Anti-Water Strip(K&L&M) beveled edge is always facing inward

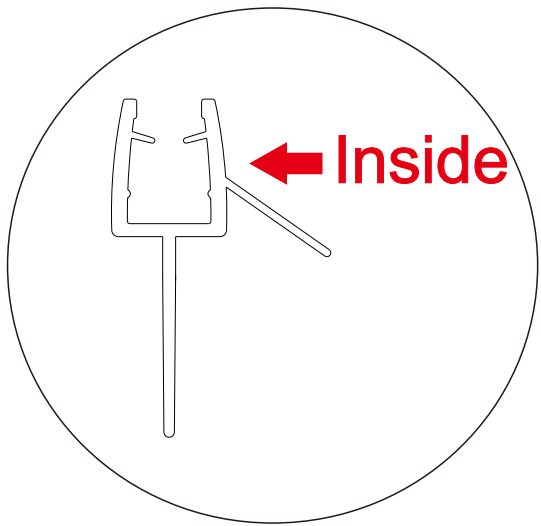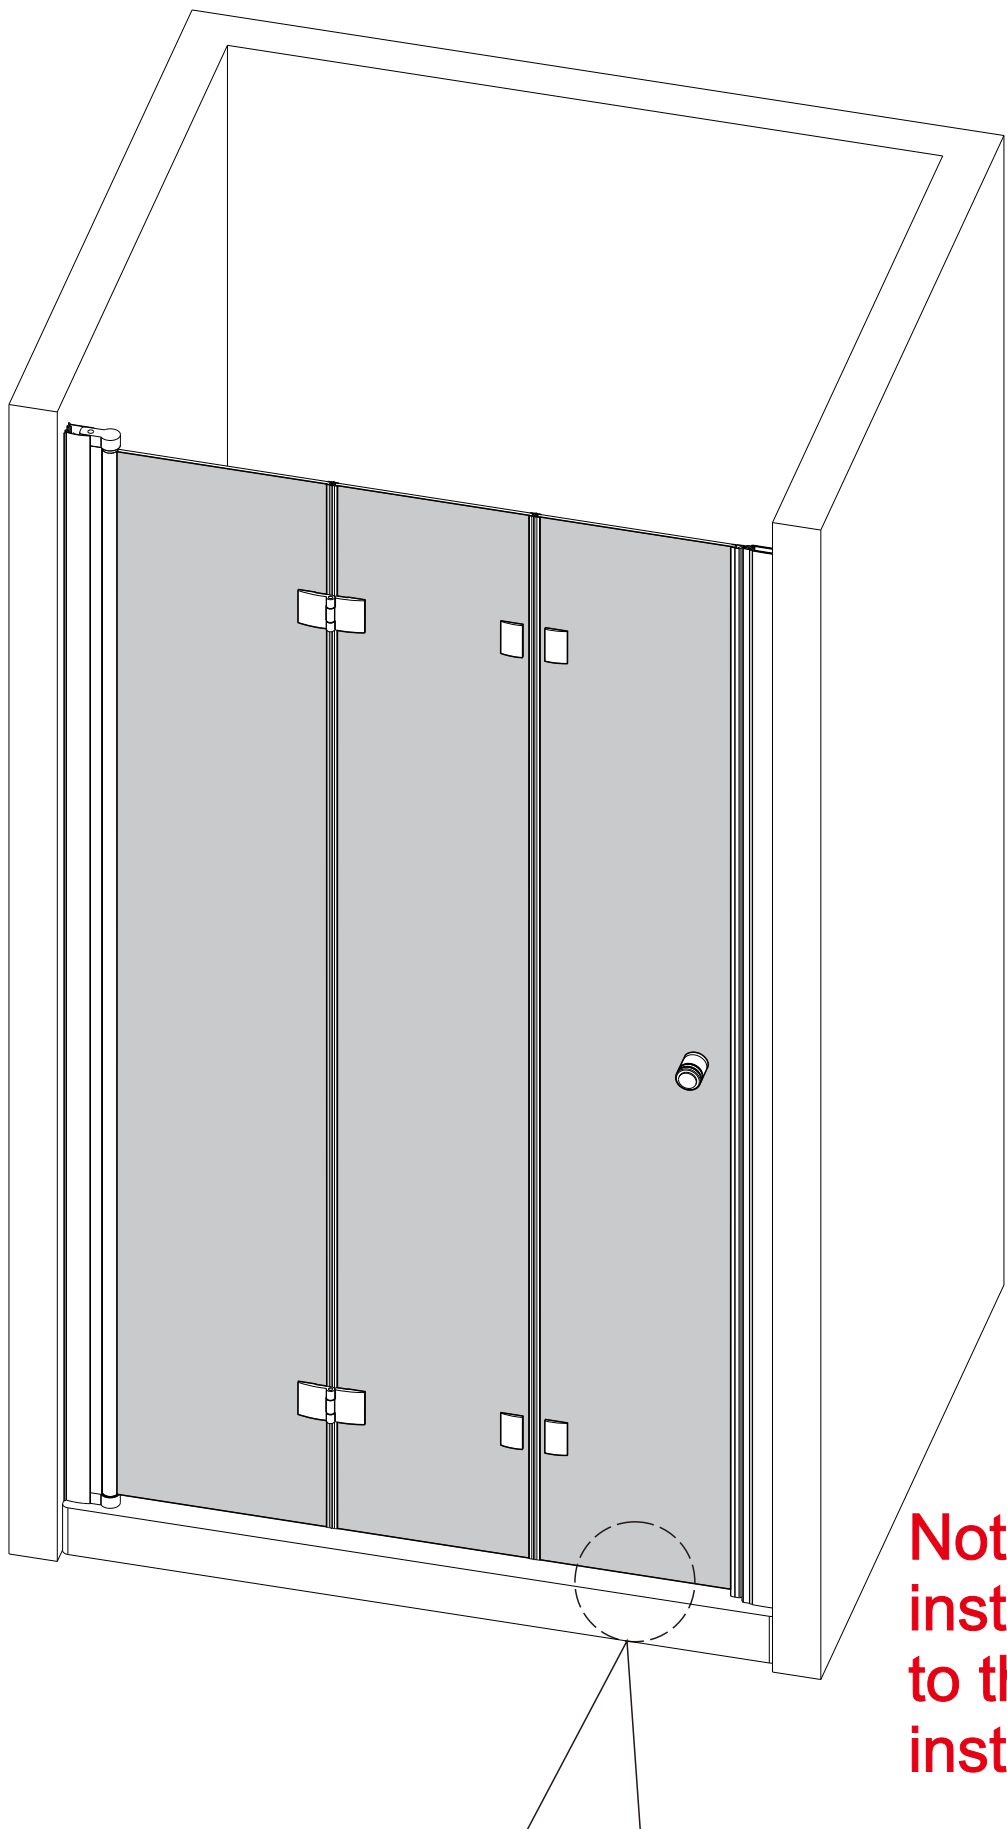


Note: The shower door can be installed left or right, according to the need to determine the installation direction.

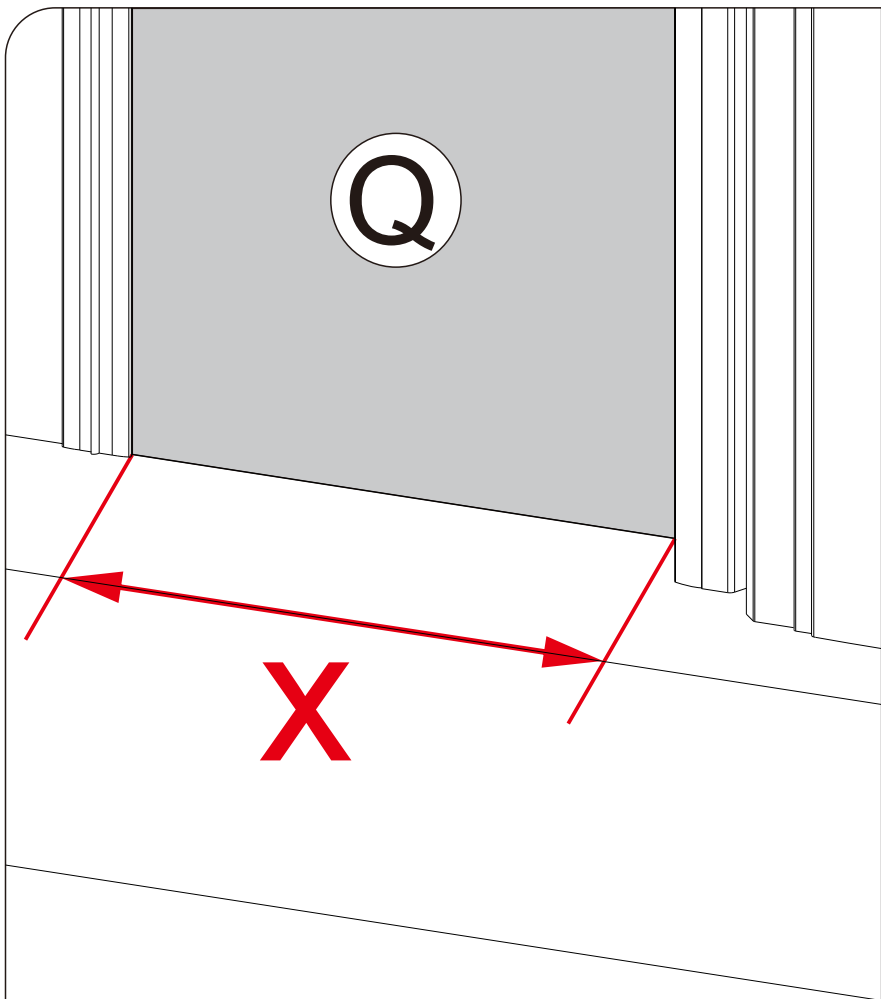

1.Measure the distance between the **Anti-Water Strip (D)** and the **Magnetic Strip (T)**.

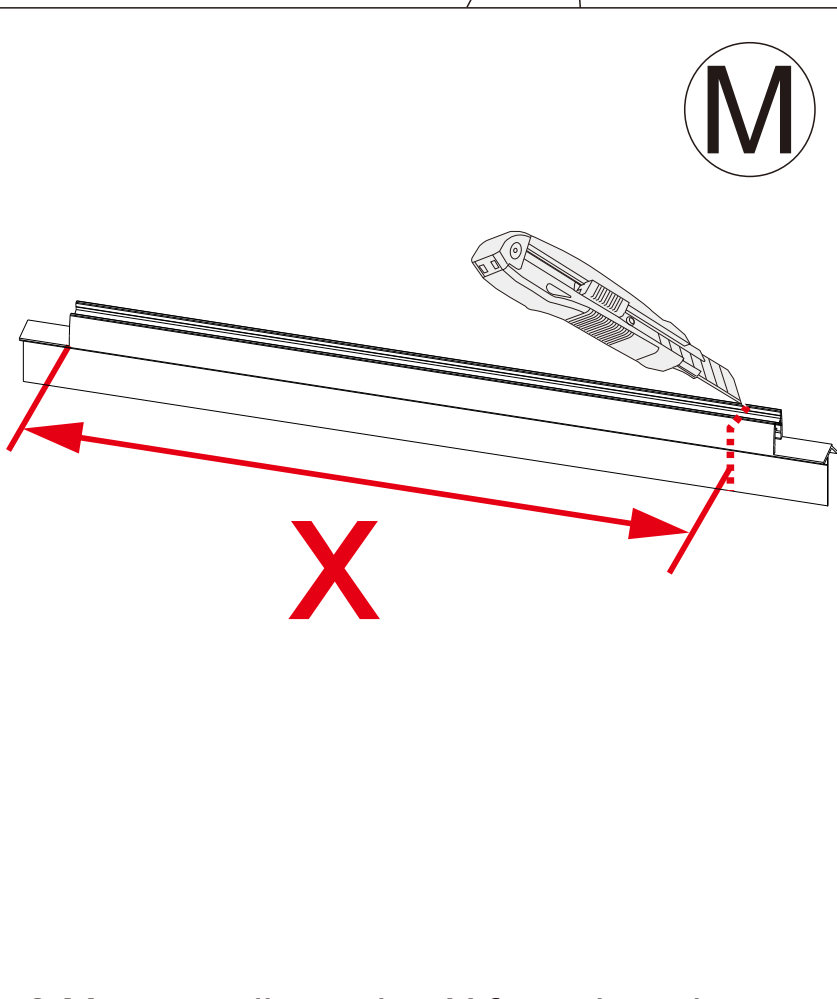

2.Measure dimension X from the edge of the **Bottom Anti-Water Strip (M)** and cut with a utility knife .






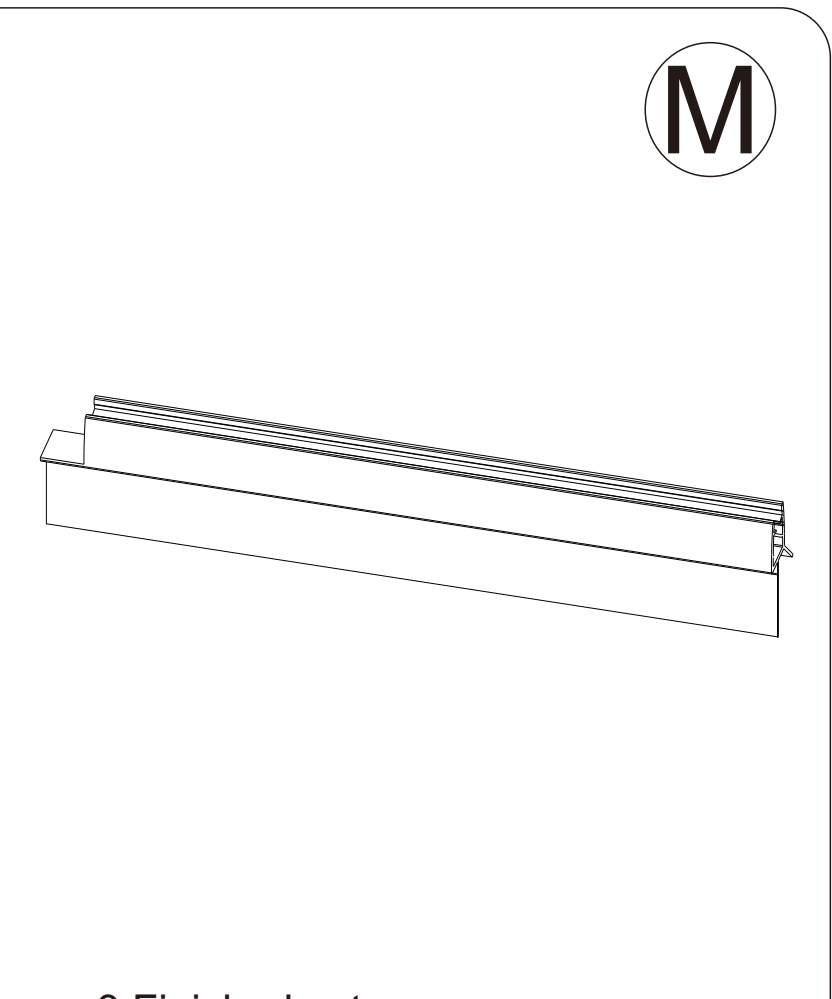


3.Finished cut appearance; this manual demonstrates a left-opening shower enclosure.

20₋₃ Install the **Bottom Anti-Water Strip(K&L&M)**



NOTE




- 1.Insert the **Bottom Anti-Water Strip(K)** into the bracket seam as Fig.a and Fig.b .
- 2.Apply silicone to the notch of the Bottom Anti-Water Strip and install it on the Glass Door as Fig.c & Fig.d and Fig.e .

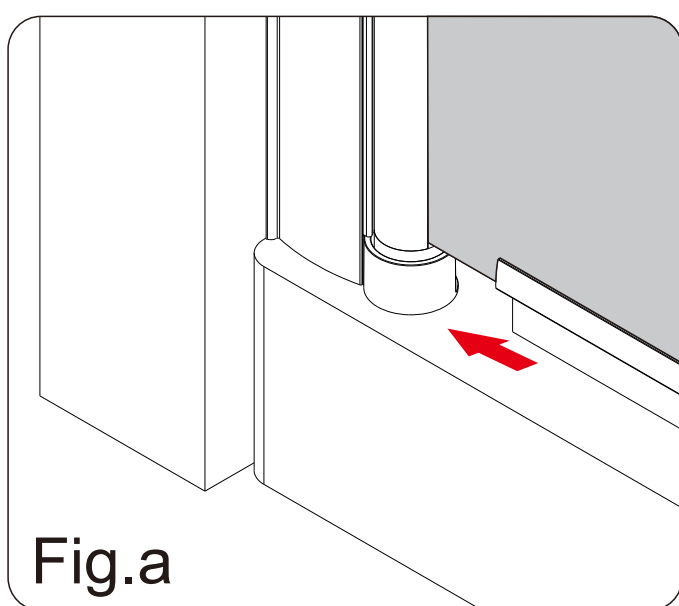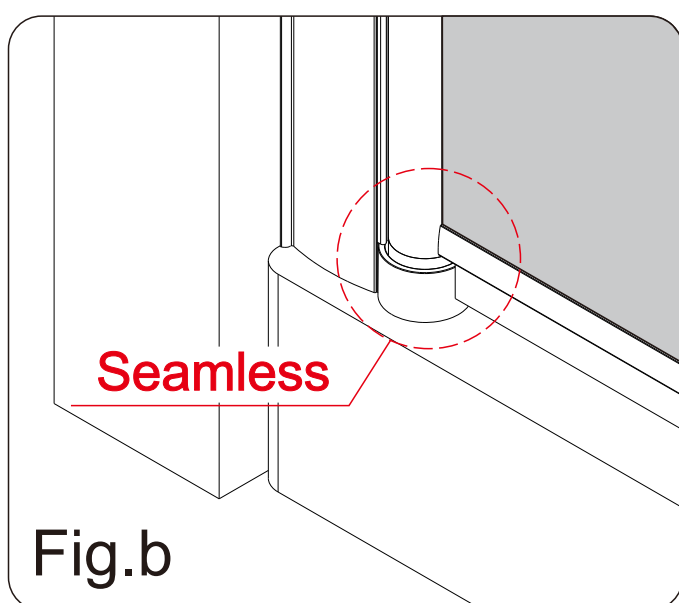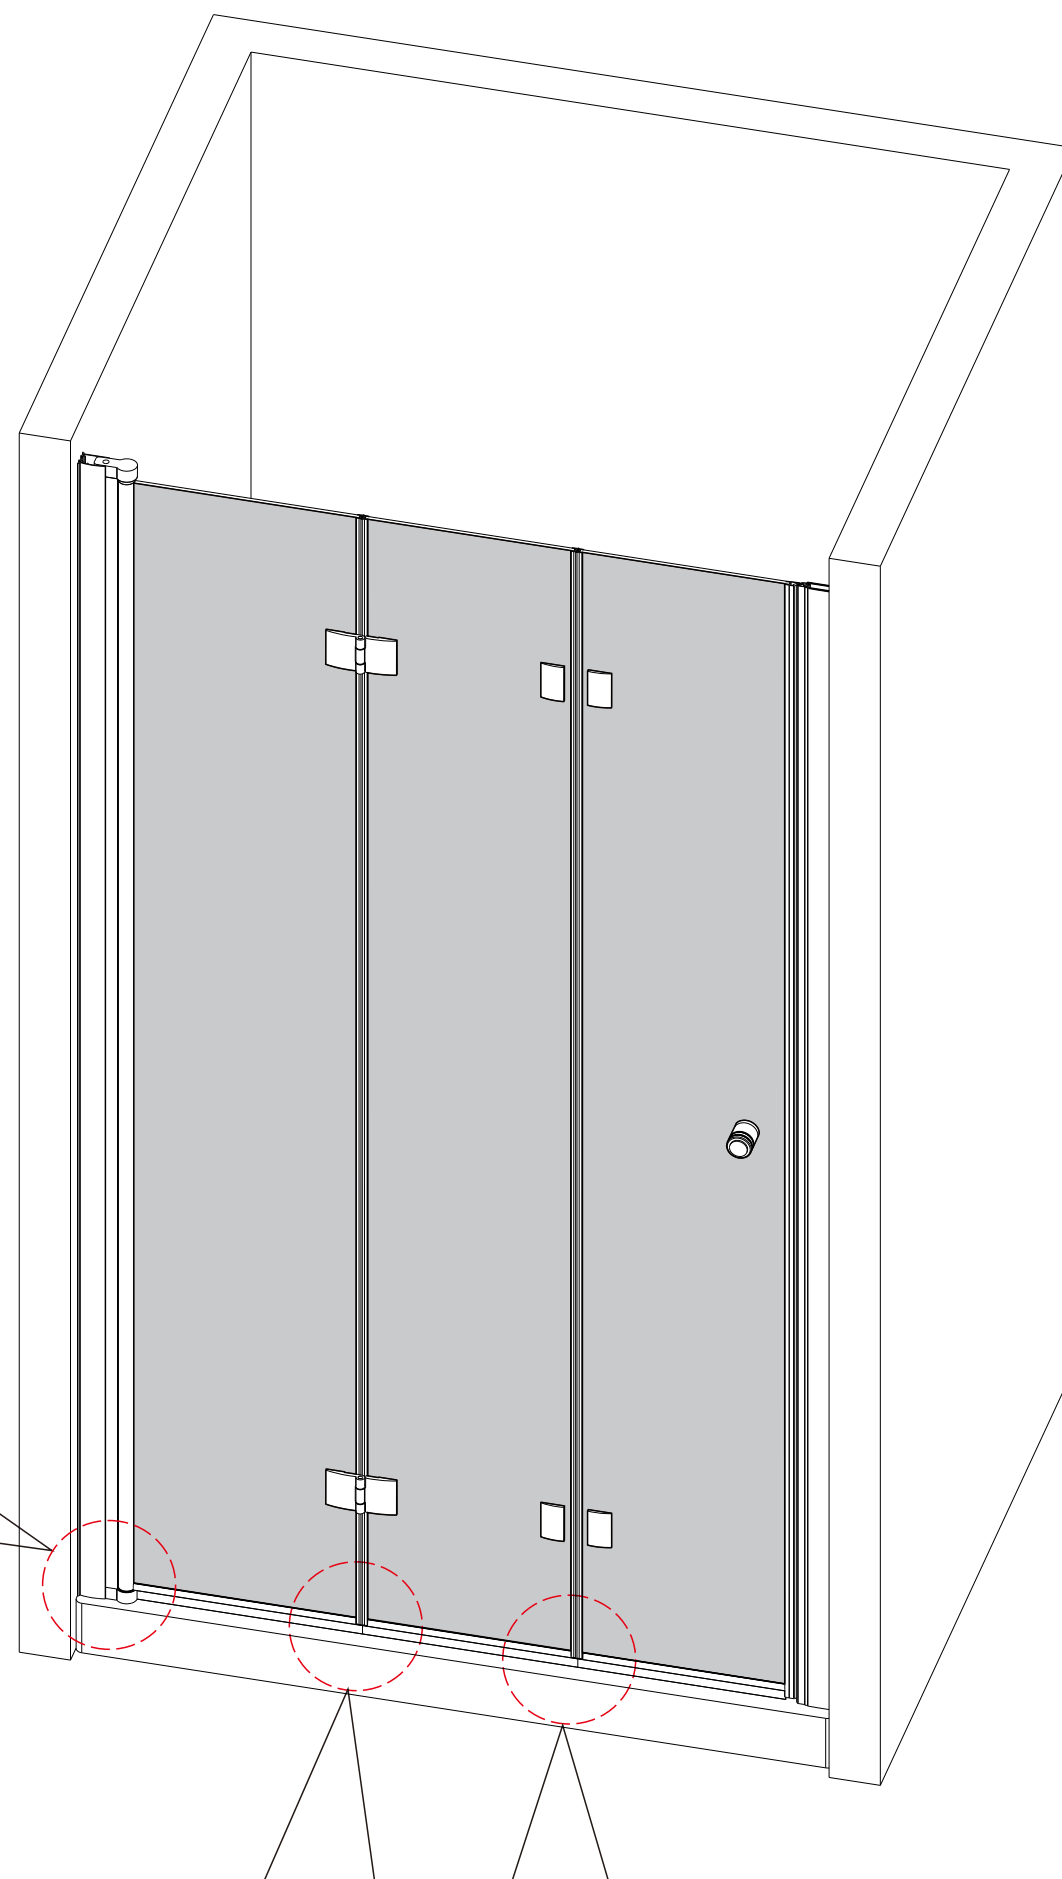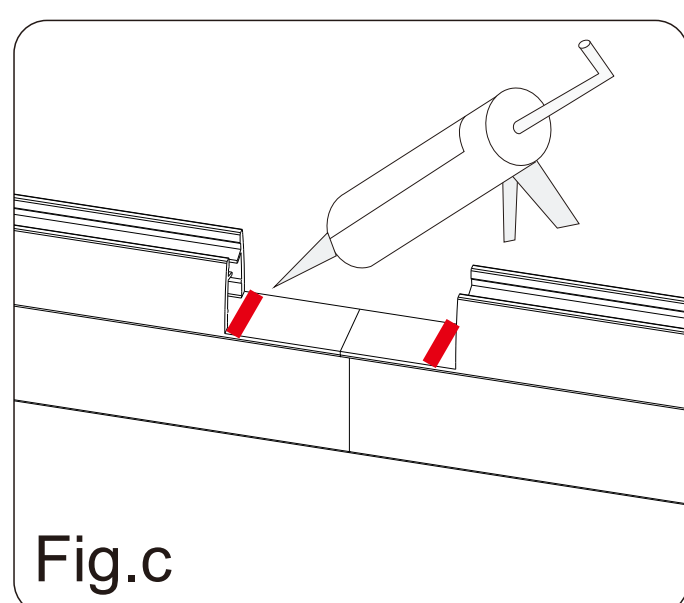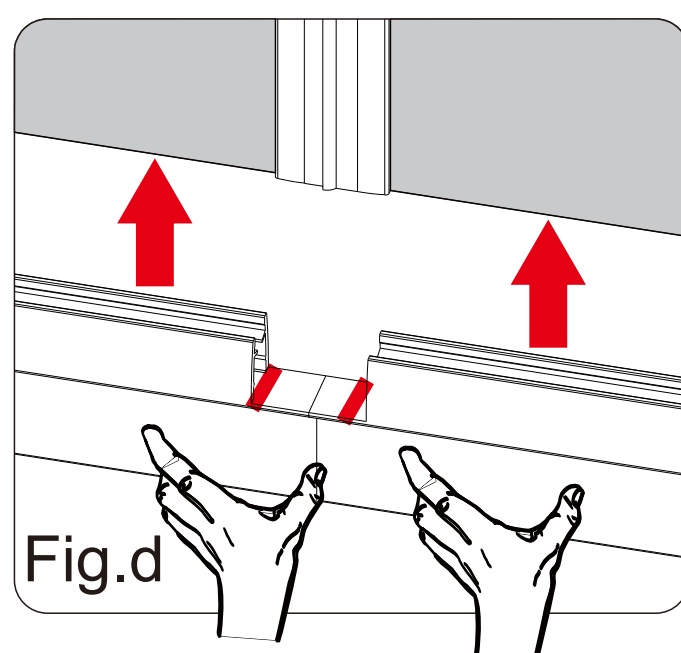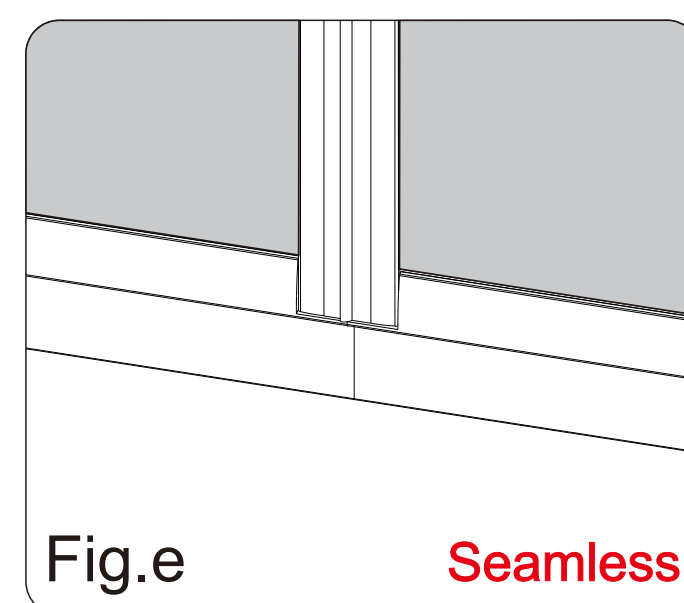

21**Install the Alu. Threshold(P) and Connector(N&O)****NOTE**

1. Apply Silicone to the bottom of the **Alu. Threshold(P)** to prevent water leakage as Fig.a
2. Install the **Alu. Threshold(P)** and **Connector(N&O)** as Fig.b

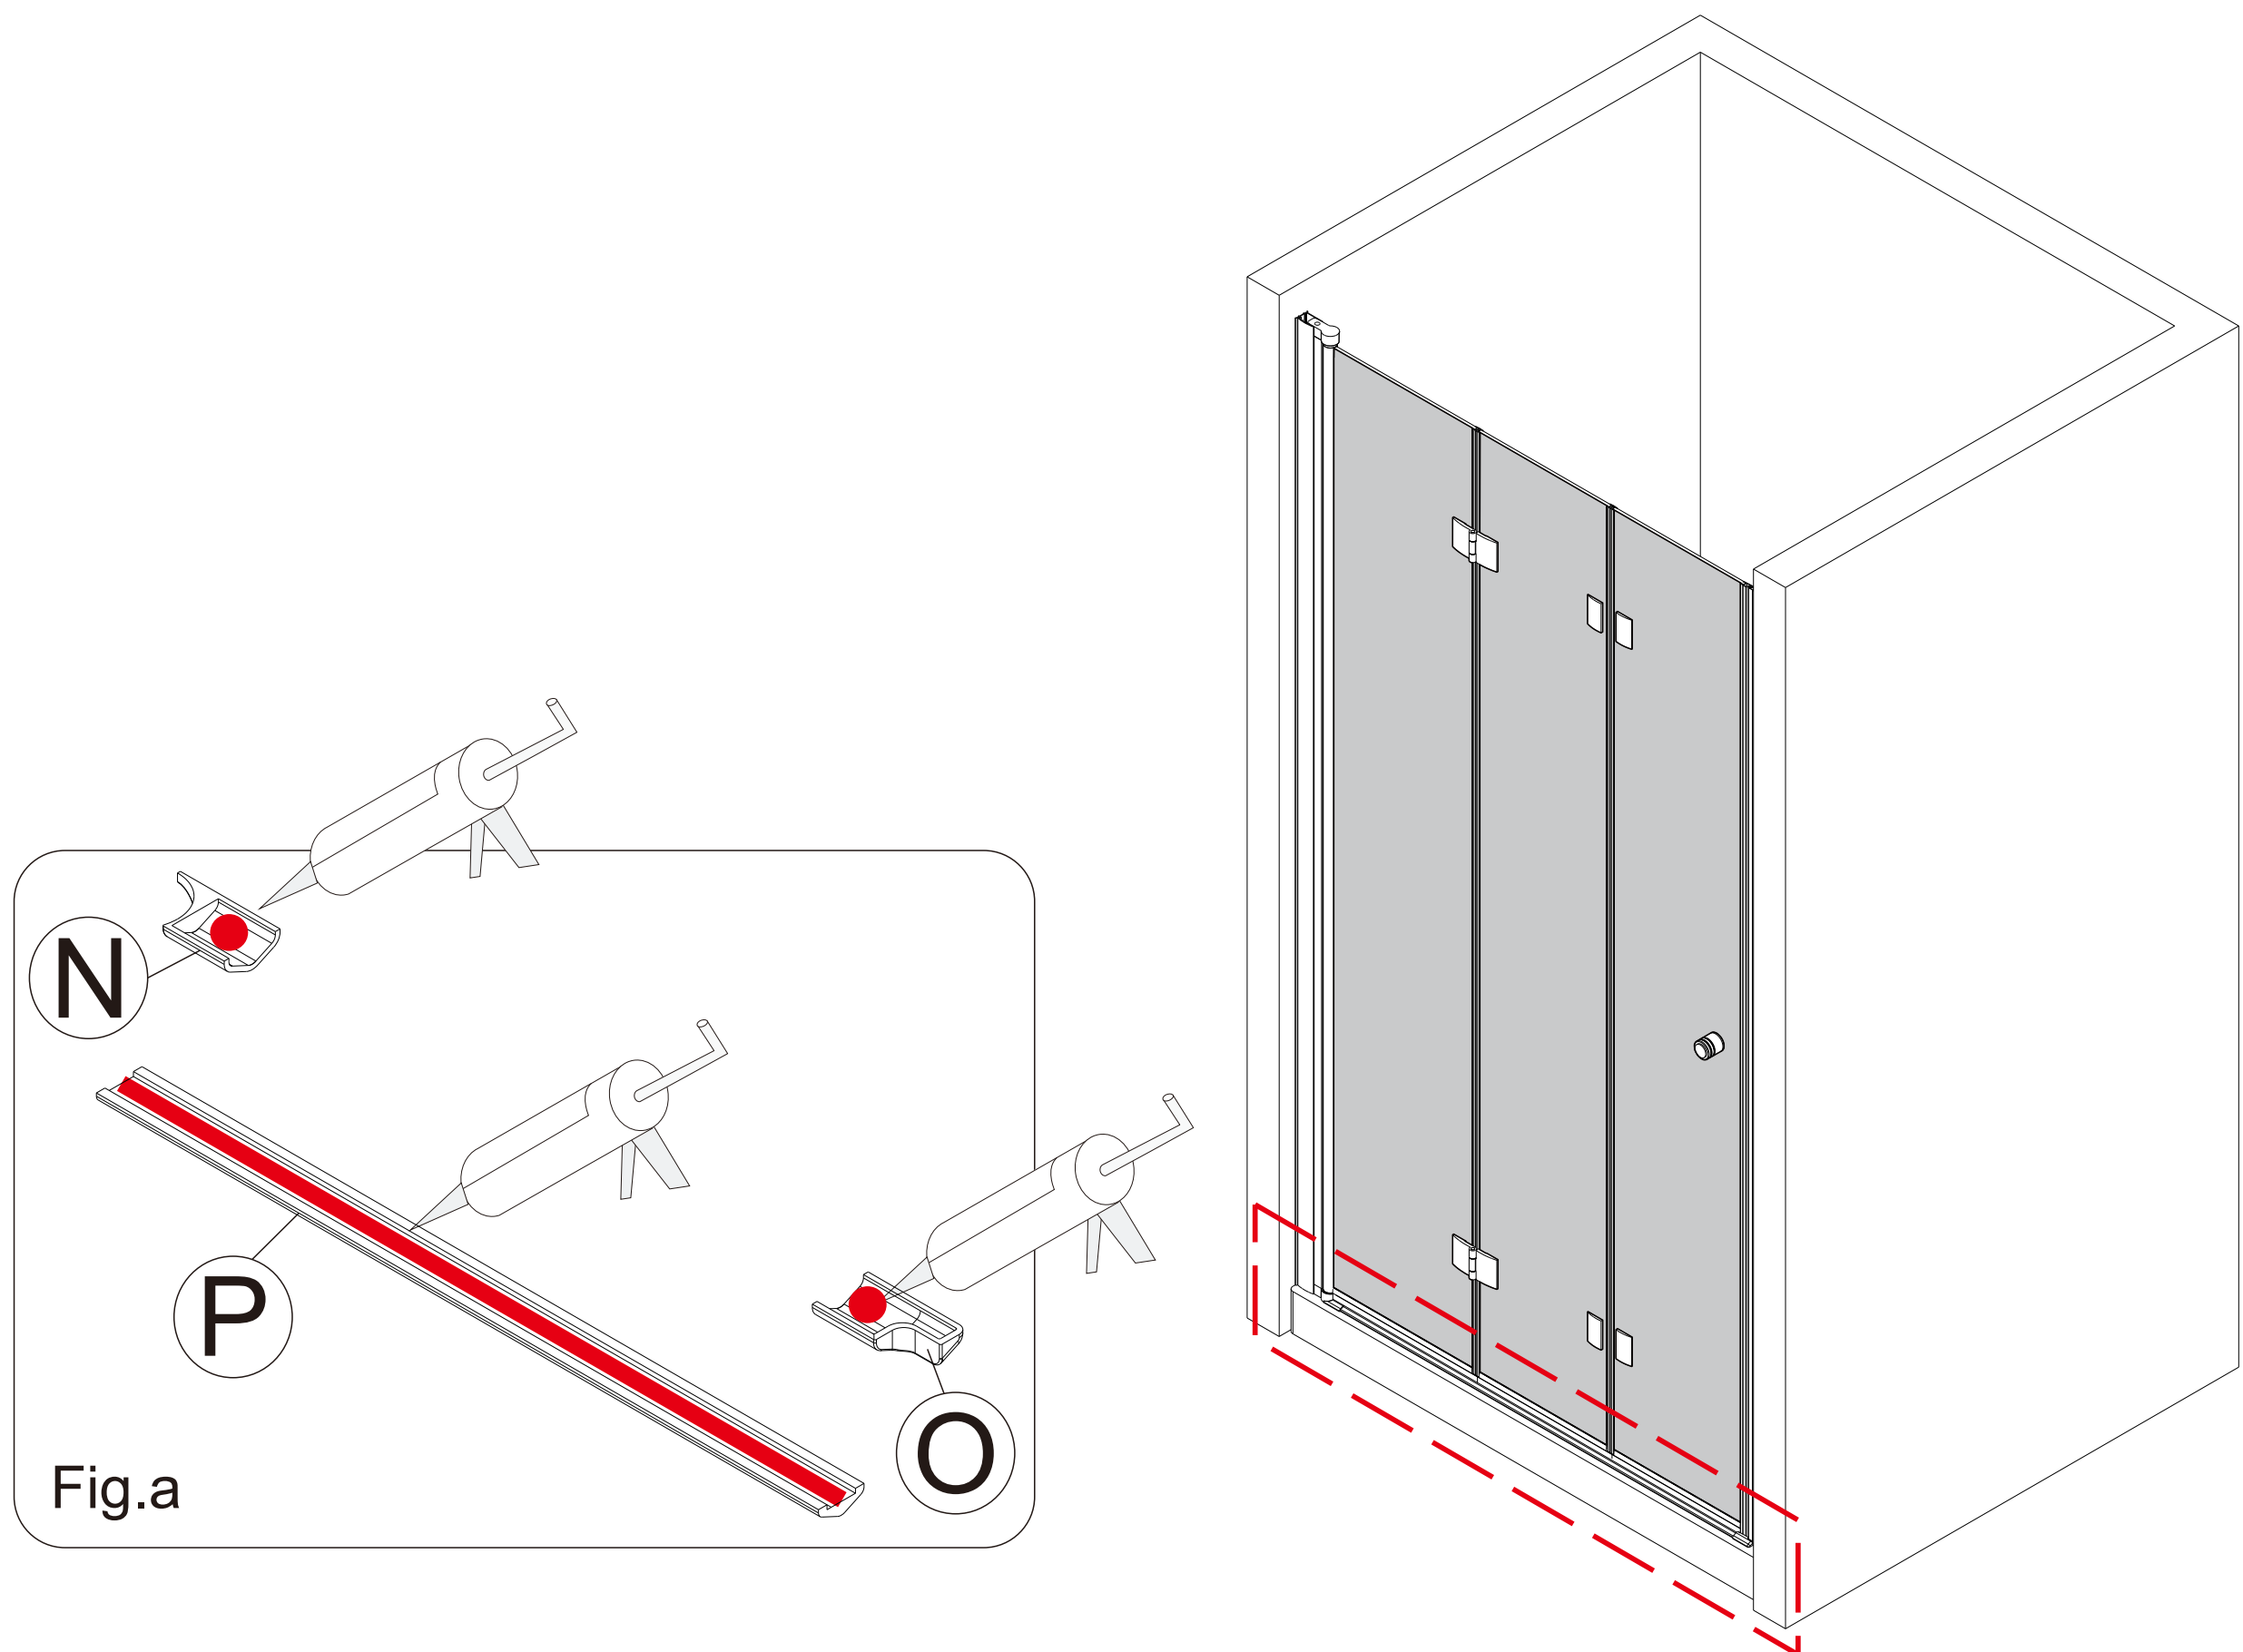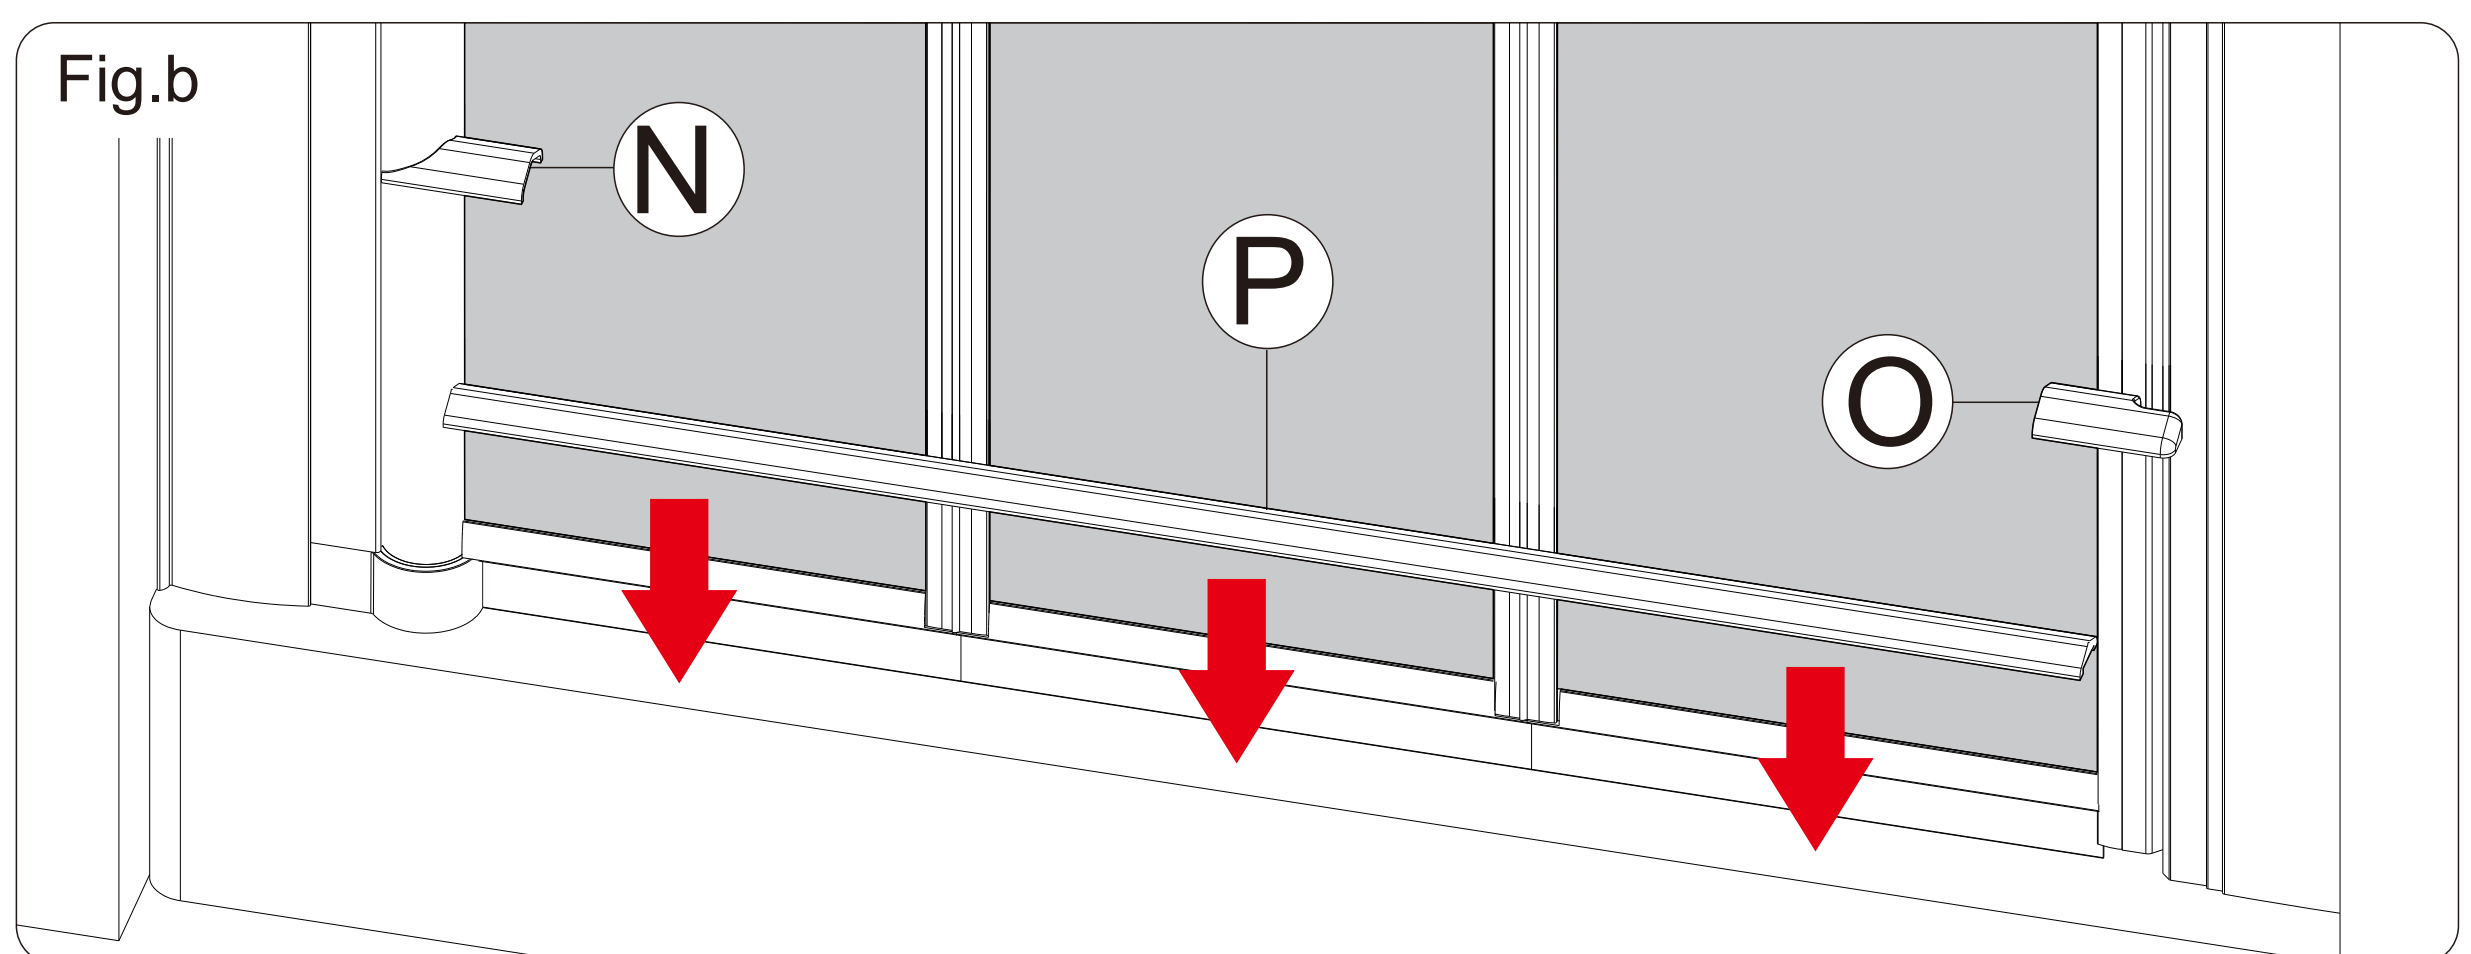

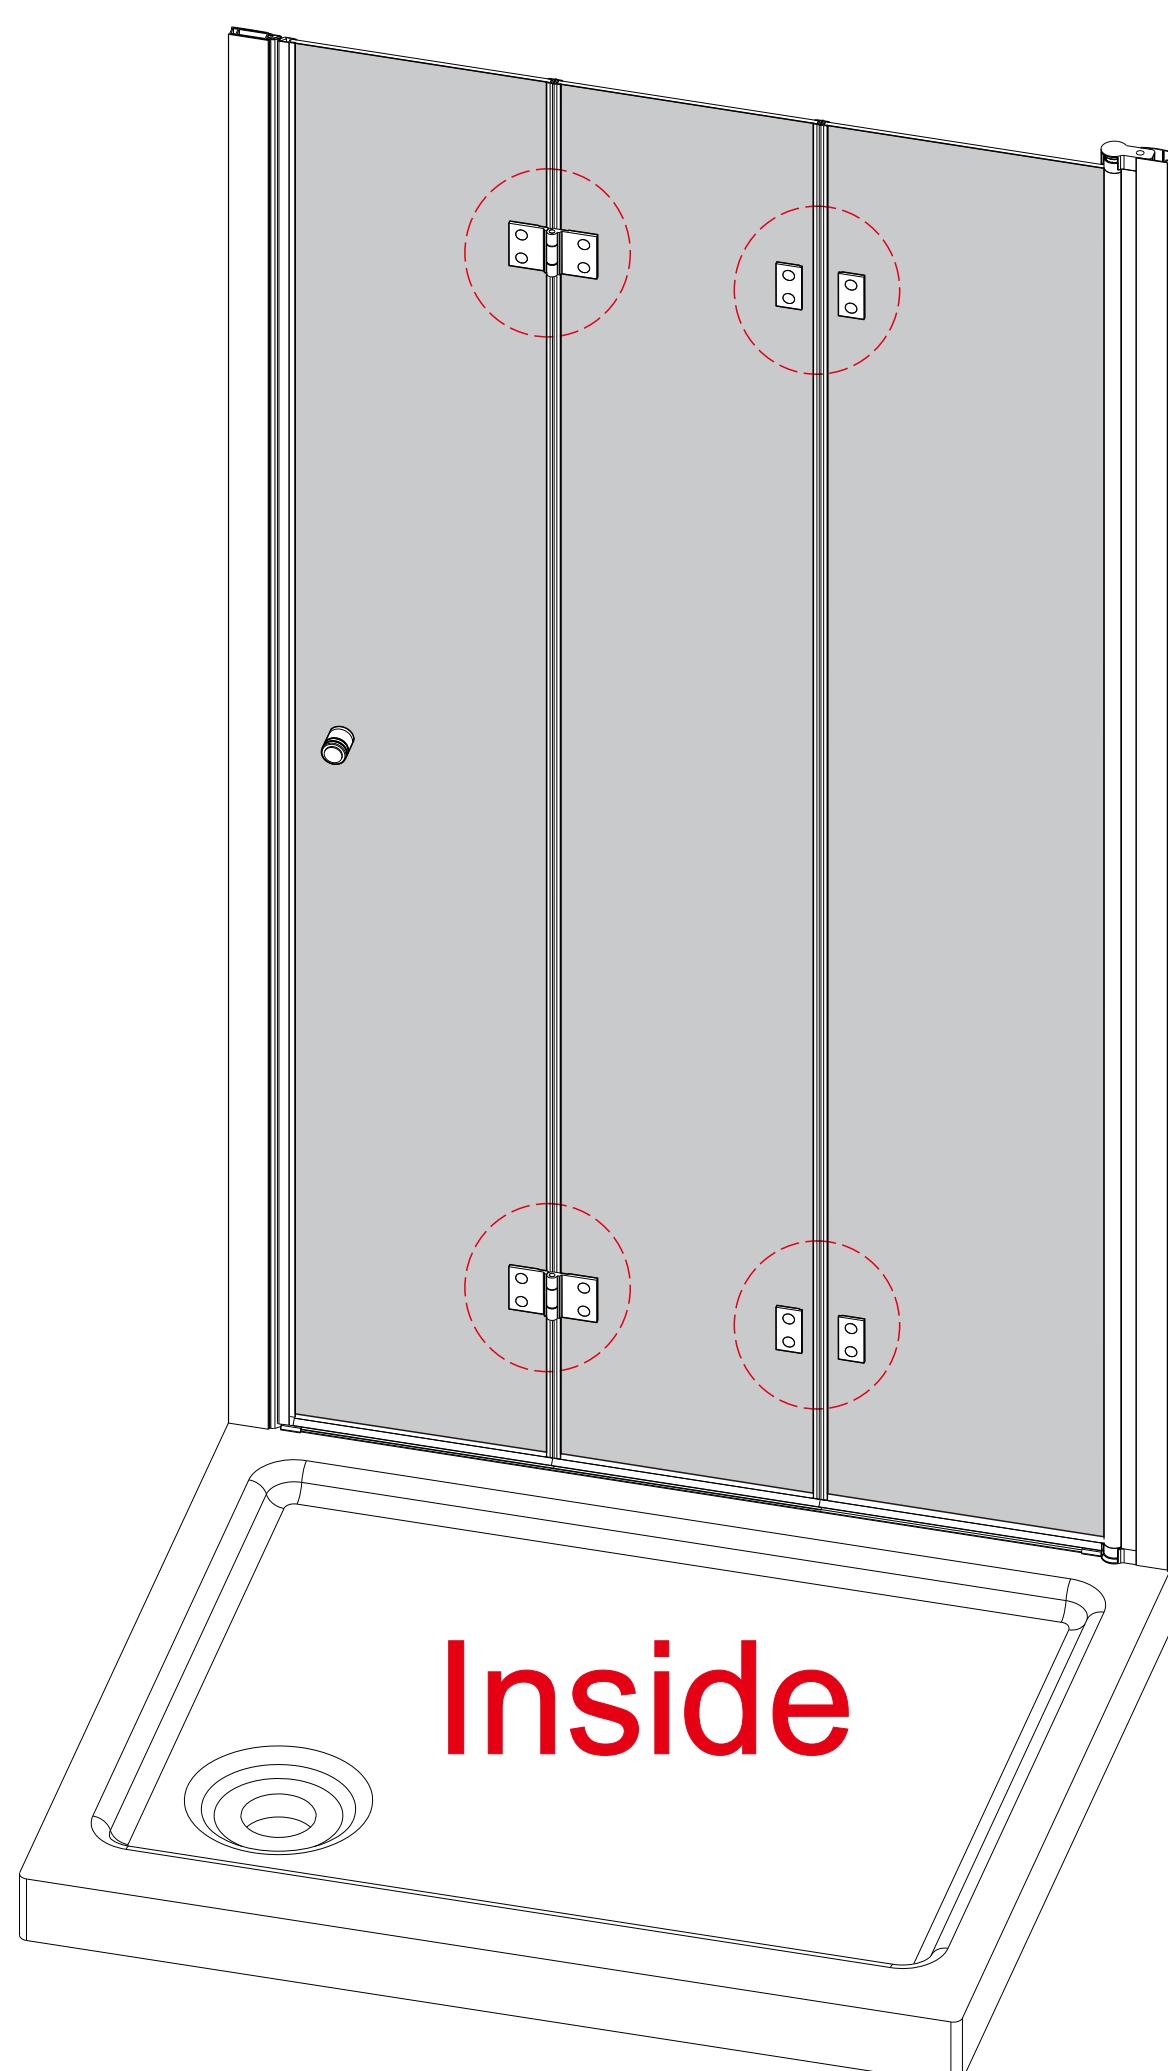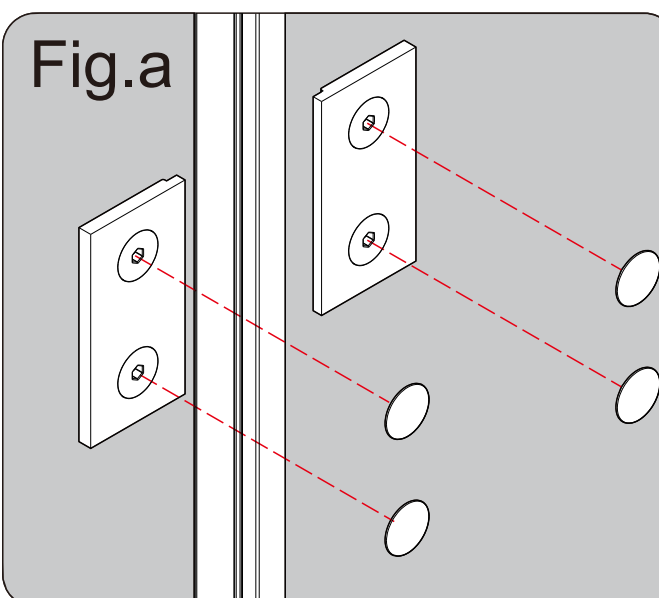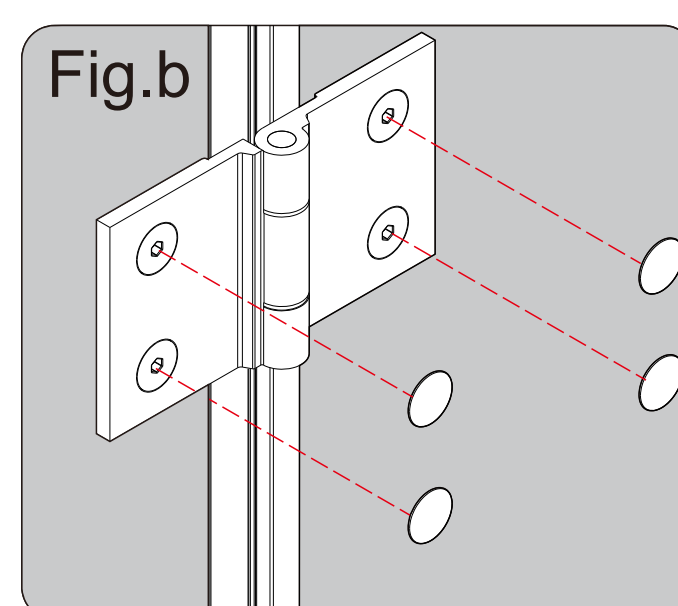
22**Install the Decorative cover****NOTE**1. Install the decorative cover of the **Hinge (H&G)** as Fig.a and Fig.b .

23 SEALING

NOTE The surfaces need to be clean and free of debris before applying silicone.

NOTE Make sure that the Shower door closes tightly and opens smoothly. Apply a good quality silicone sealant along the **Wall Jamb(A&R)** and **Alu. Threshold(P)**.

! Allow 24 hours for the silicone to cure before using the shower.

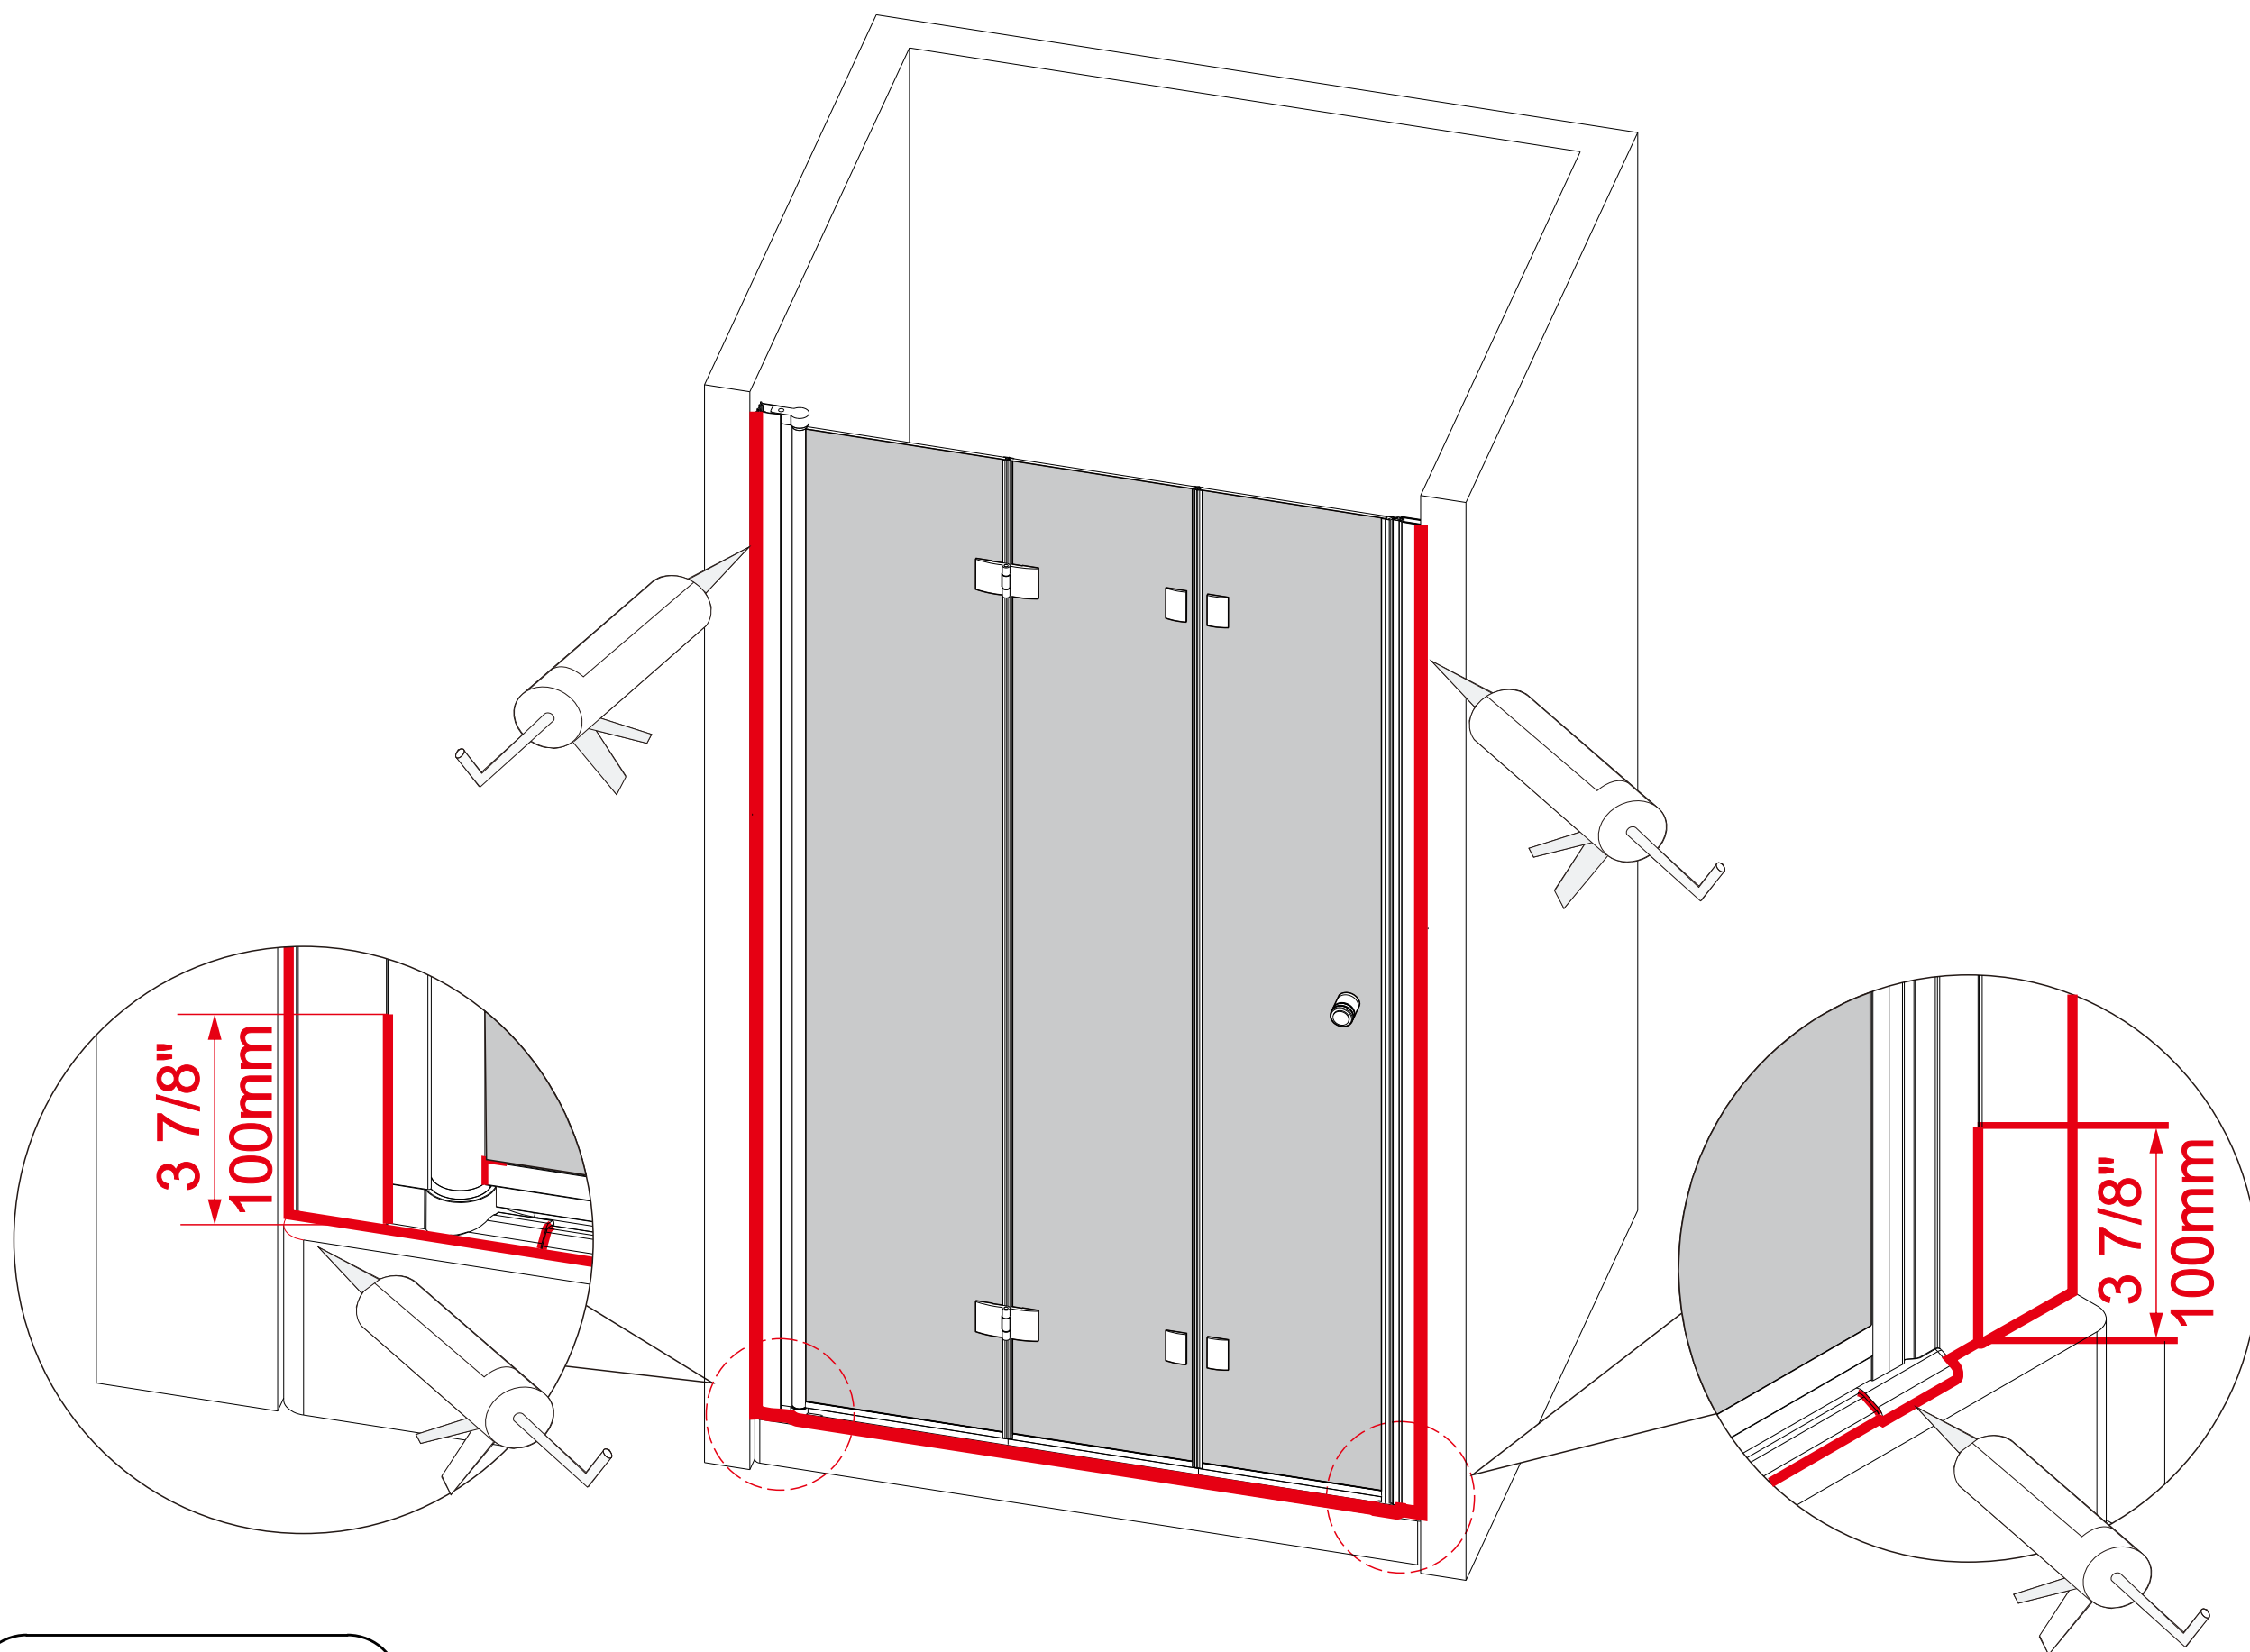

! Apply Silicone Sealant,(not supplied).




The shower room needs to be sealed inside and out

24 SEALING

NOTE The surfaces need to be clean and free of debris before applying silicone.

NOTE Make sure that the Shower door closes tightly and opens smoothly. Apply a good quality silicone sealant along the **Wall Jamb(A&R)** and **Alu. Threshold(P)**.

! Allow 24 hours for the silicone to cure before using the shower.

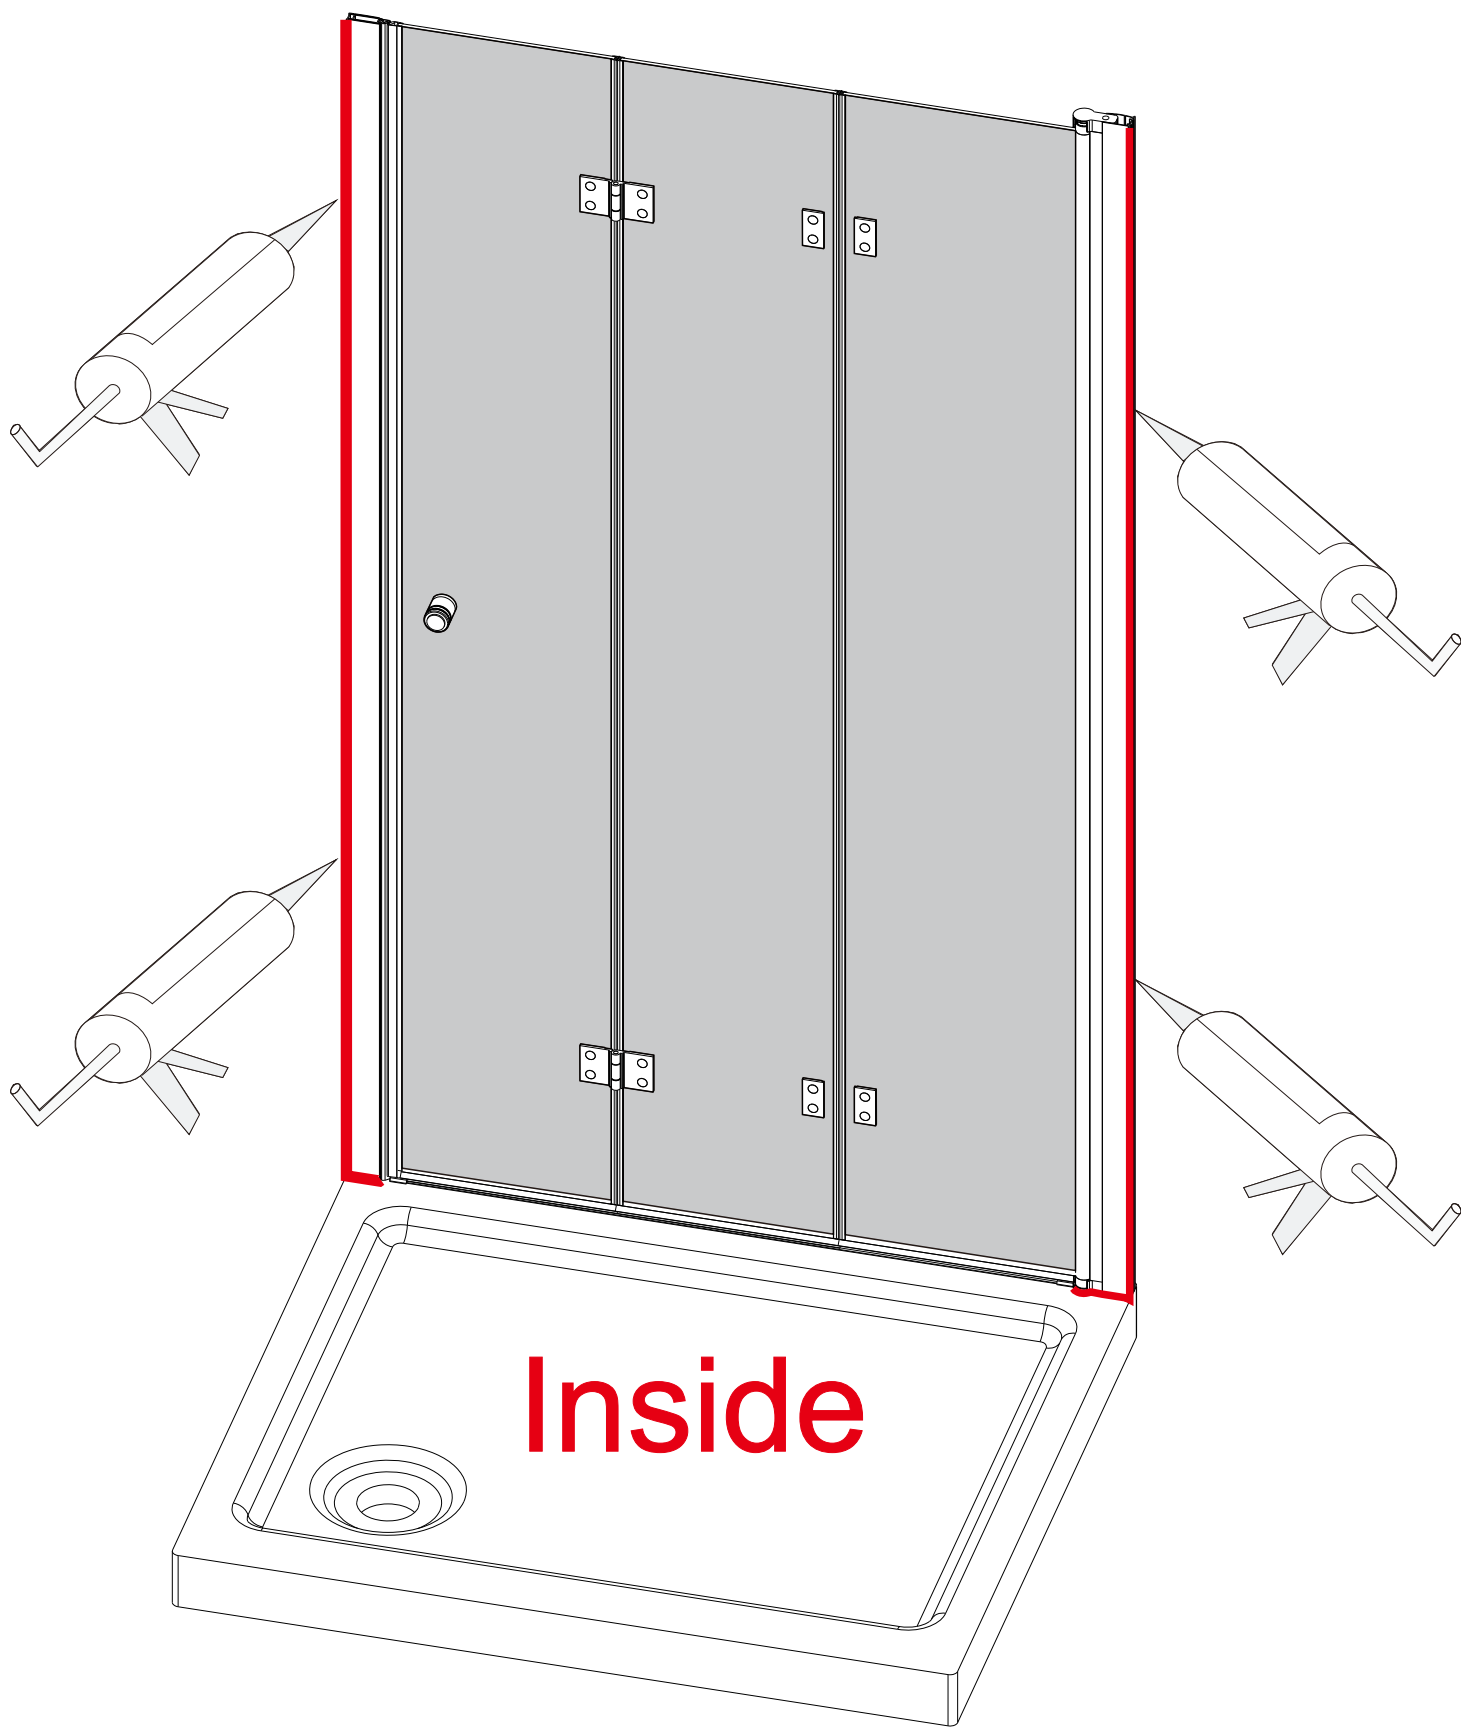

! Apply Silicone Sealant,(not supplied).



The shower room needs to be sealed inside and out