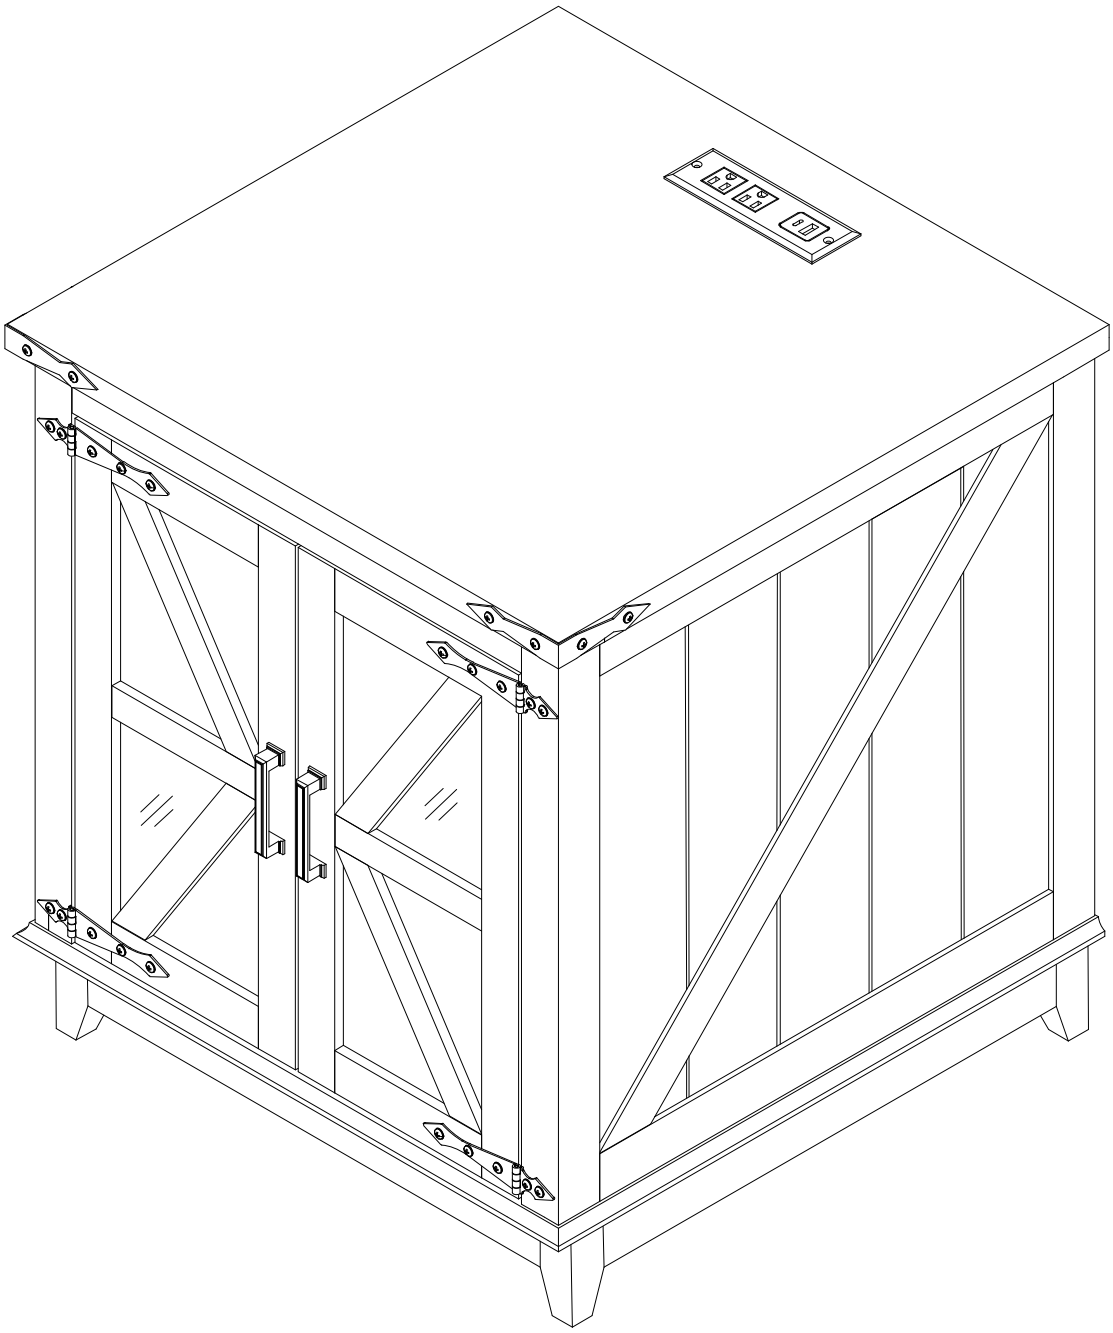


ATTENTION

If there is any missing, please kindly send us messages to let us know the part number of missing part regarding to the first page of instructions.

Please also provide your full address, recipient name and contact phone number so that we can send replacement to you as soon as possible.

# BEFORE STARTING

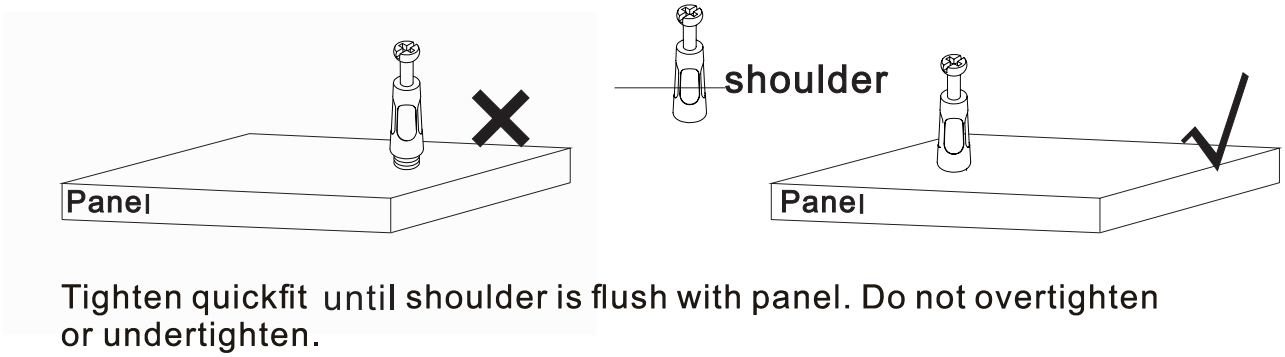
## Before Using Product

- Read each step carefully before starting.It is very important thateach step is performed in the correct order.If these steps are not followed in sequence,assembly difficulties will occur.
- Make sure all parts are included.
- Work in a spacious area and near where the unit will be used,preferably on a carpet,or use a piece of the cardboard packaging to protect your floor and product.
- For a smooth assembly process,we suggest you keep a lite tightness for all the screws during assembly.After the whole product is assembled, firmly tighten all the screws.

## ⚠ WARNING


- Do not allow children to climb on unit.
- Avoid sharp objects or corrosive chemicals to prevent damage to the product.
- During assembly,keep parts and packaging materials away from children and pets as there could be potential injury and choking hazards.
- Please make sure that all objects are removed before moving the assembled unit.
- The unit must be team lifted,not dragged or pushed.Failure to do so could cause instability,product collapse,and/or serious injury.
- Be careful when using power tools to assemble your furniture.Power tools may strip or damage the parts.

# QUICKFIT





Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

# CAM LOCK

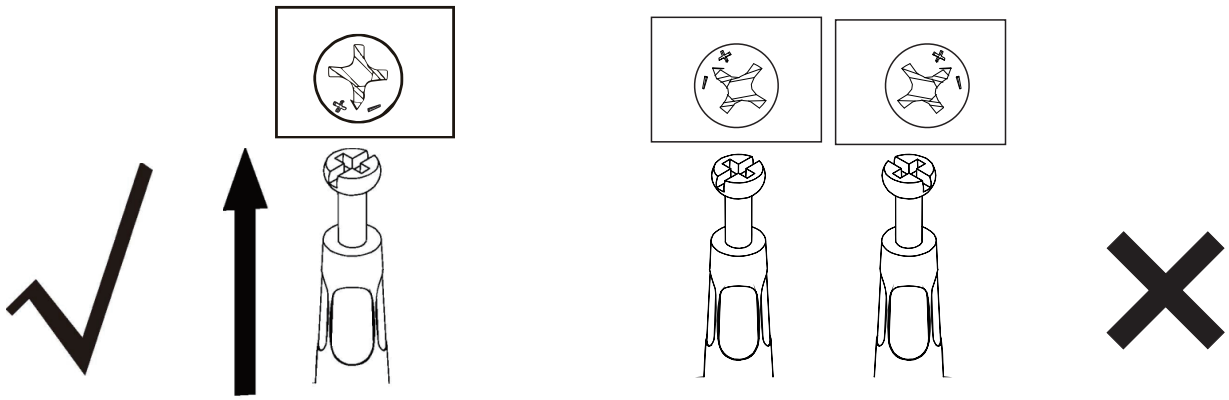


CORRECT WRONG

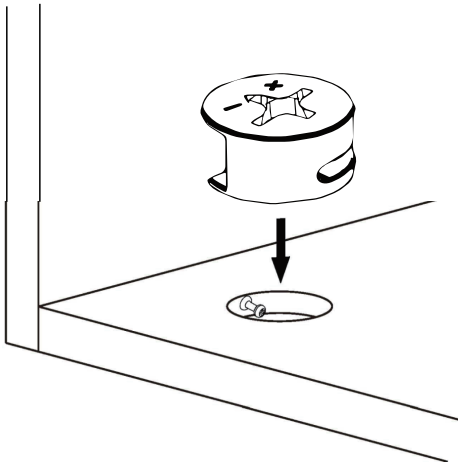When fitting cam lock, ensure starting positions is correct before you insert cam lock to quickfit.




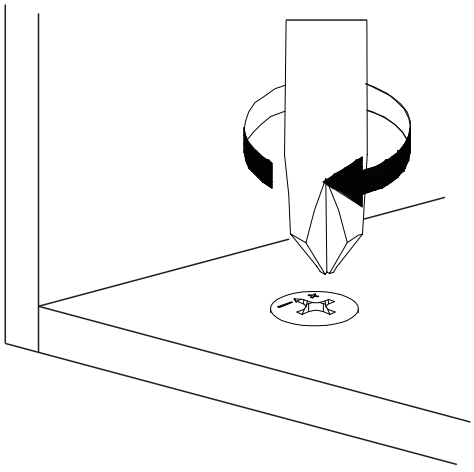Quickfit head should be in the center of the cam lock. When the two panels are joined. Cam lock should be inserted before quickfit.













Turn cam lock clockwise to tighten.










# PART LIST

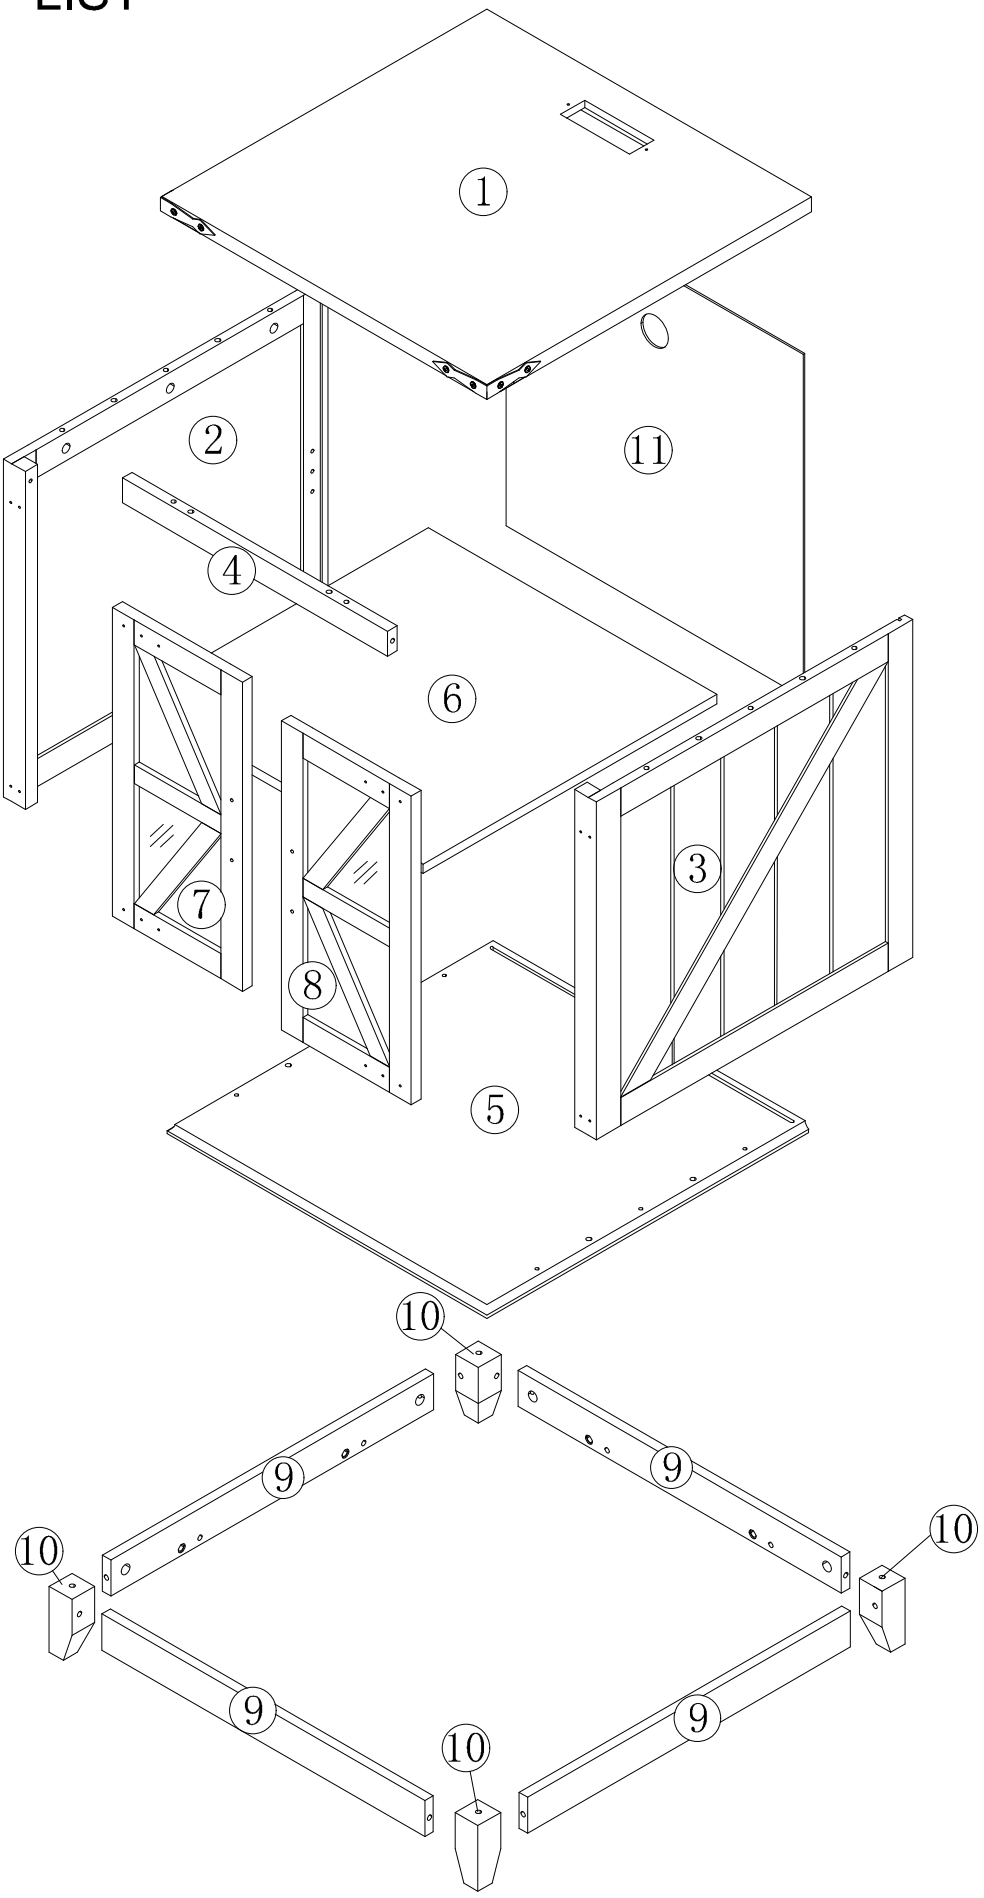


# PART LIST
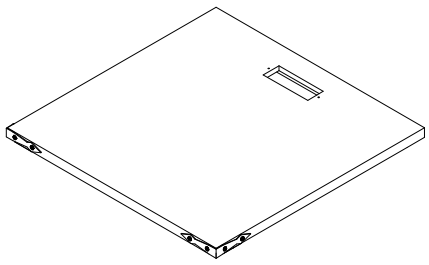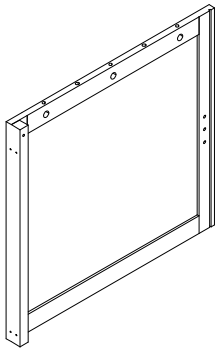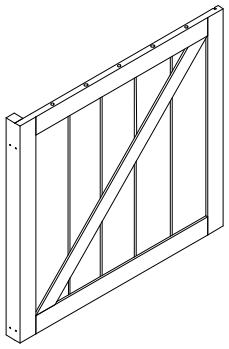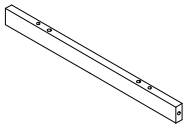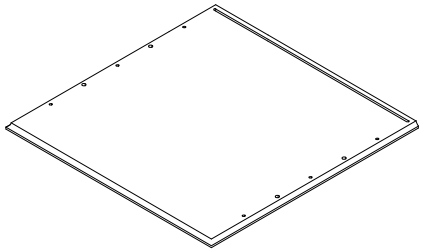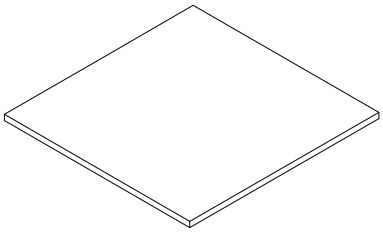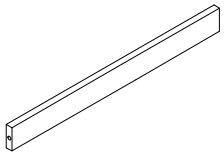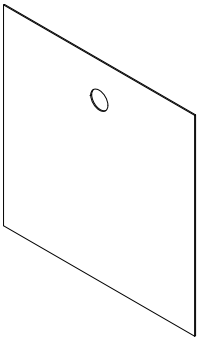
| | | |
|---|---|---|
| ①  1PCS | ②  1PCS | |
| ③  1PCS | ④  1PCS | |
| ⑤  1PCS | ⑥  1PCS | |
| ⑦  1PCS | ⑧  1PCS | ⑨  4PCS |
| ⑩  4PCS | ⑪  1PCS | |

# HARDWARE LIST

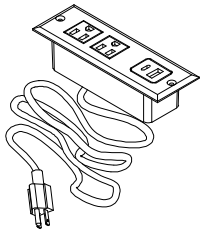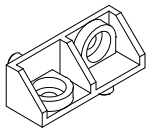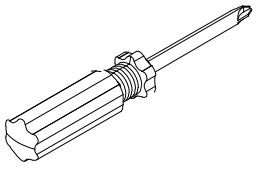
| | | |
|---|---|---|
| A  ϕ6X35 (18+1)PCS | B  ϕ15X9.5 (18+1)PCS | C  ϕ8X30 (14+1)PCS |
| D  ϕ5X40 6PCS | E  4PCS | F  ϕ3X15 (6+1)PCS |
| G  1PCS | H  4PCS | I  ϕ3.5*14 (20+1)PCS |
| J  4PCS | K  ϕ3X12 2PCS | L  8PCS |
| M  ϕ6*12 (16+1)PCS | N  1PCS | O  2PCS |
| P  ϕ4X22 4PCS |  1PCS |  1PCS |

## STEP 1

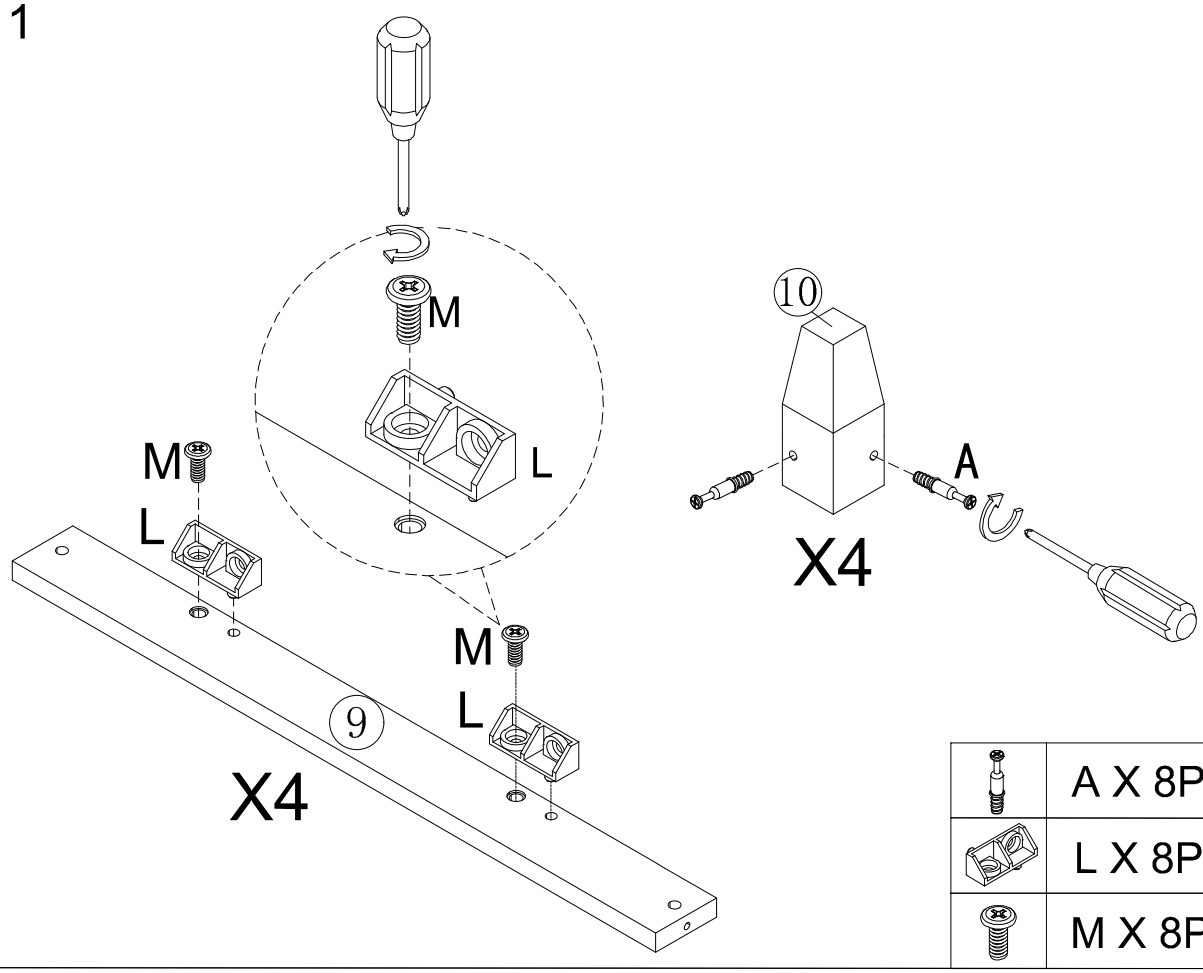



| | |
|---|---|
|  | A X 8PCS |
|  | L X 8PCS |
|  | M X 8PCS |

## STEP 2

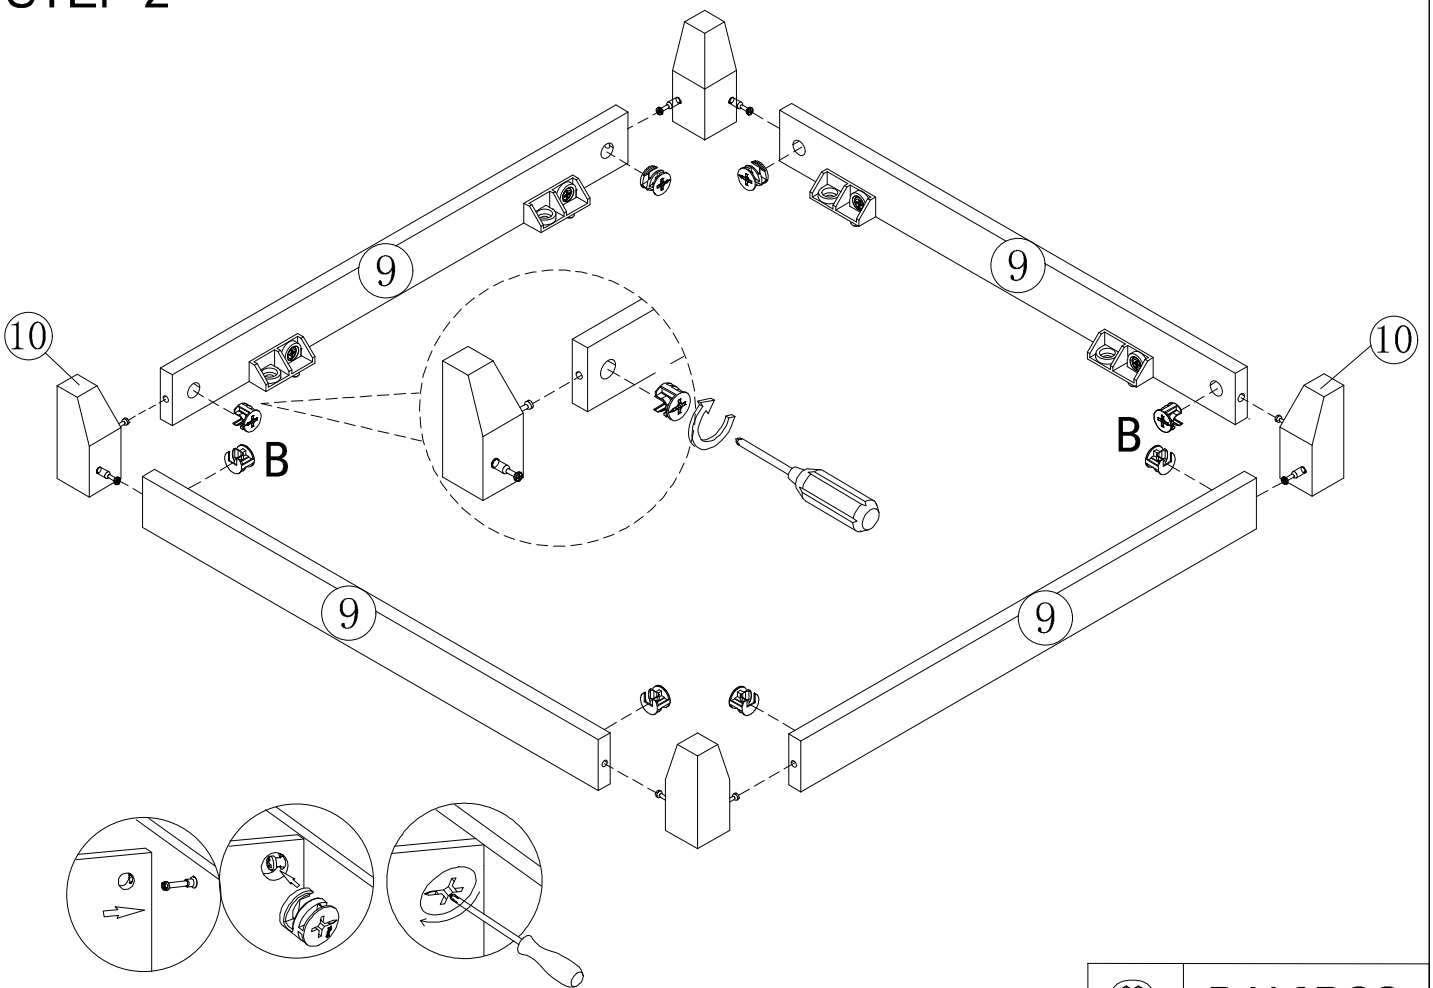



| | |
|---|---|
|  | B X 8PCS |

# STEP 3

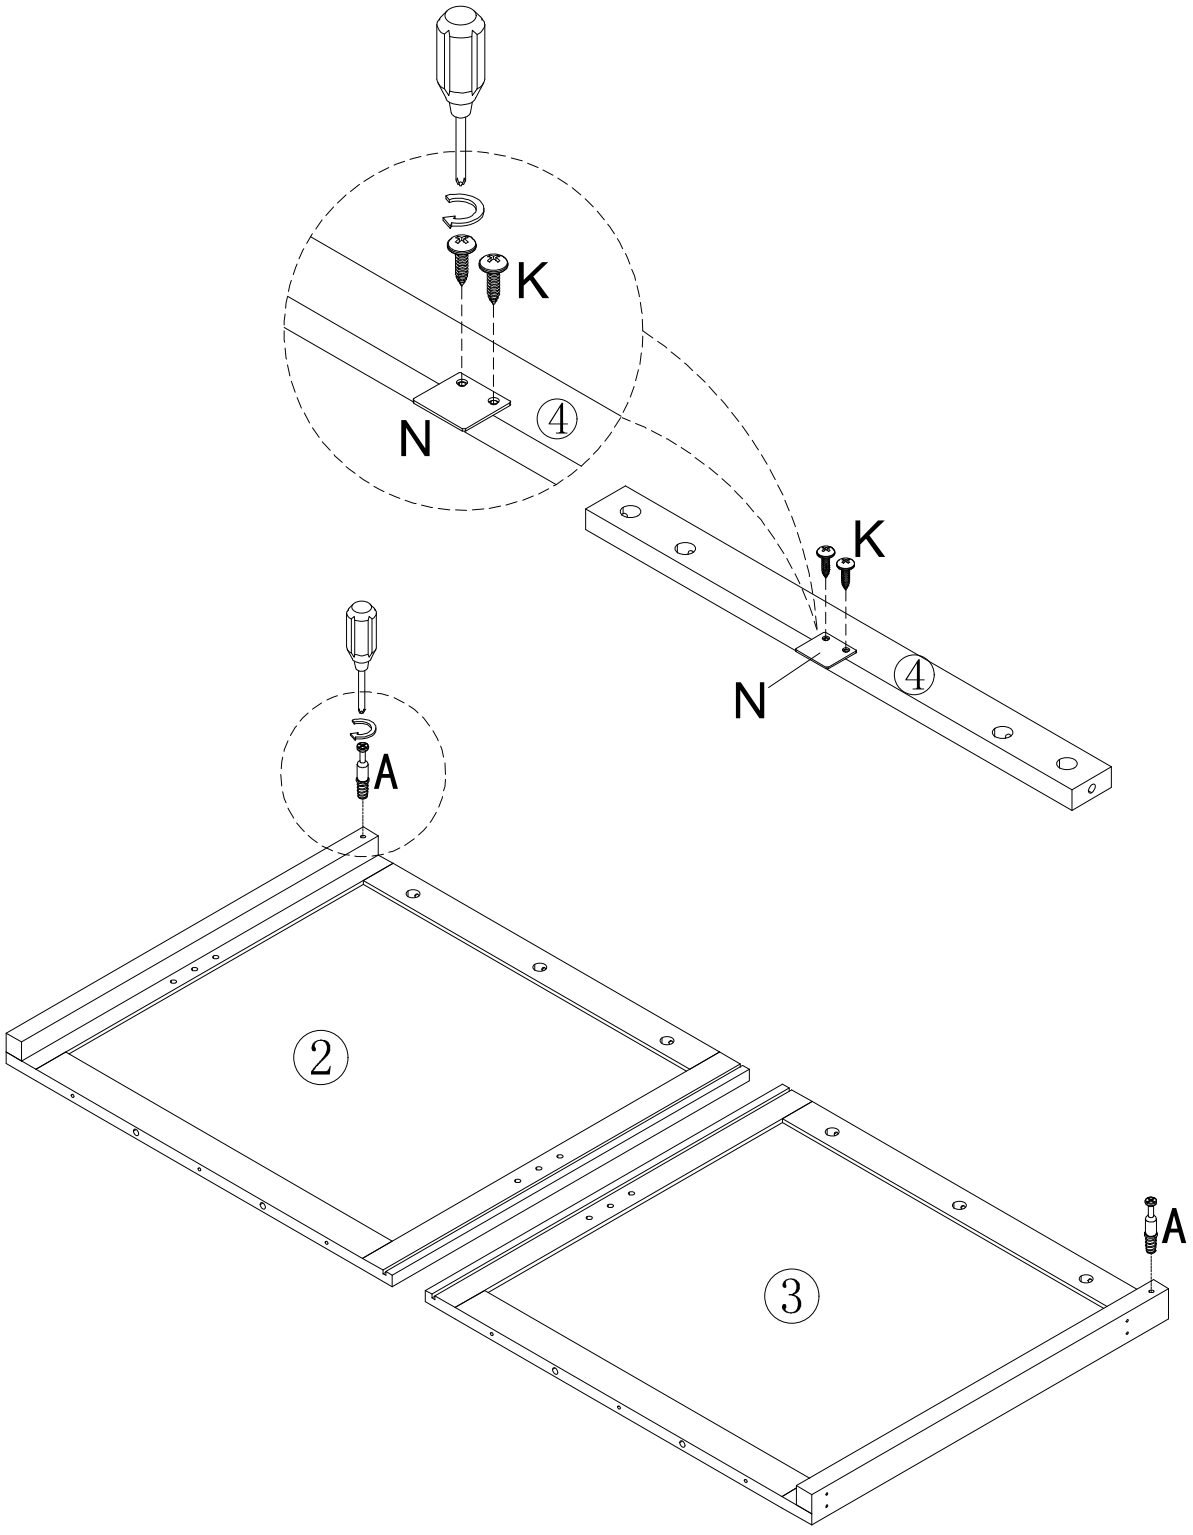



| | |
|---|---|
| | A X 2PCS |
| | N X 1PCS |
| | K X 2PCS |

## STEP 4

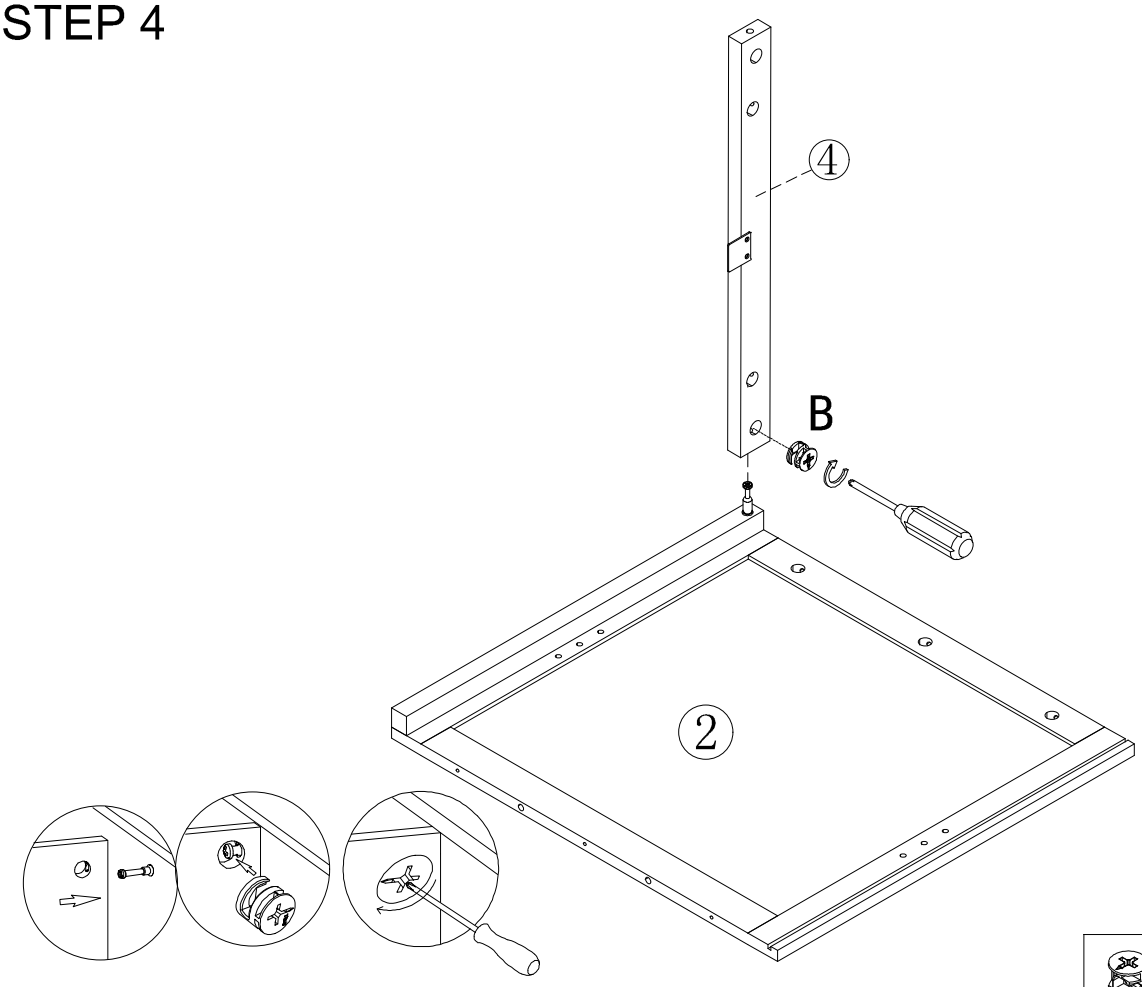



| | |
|---|---|
| | B X 1PCS |

## STEP 5

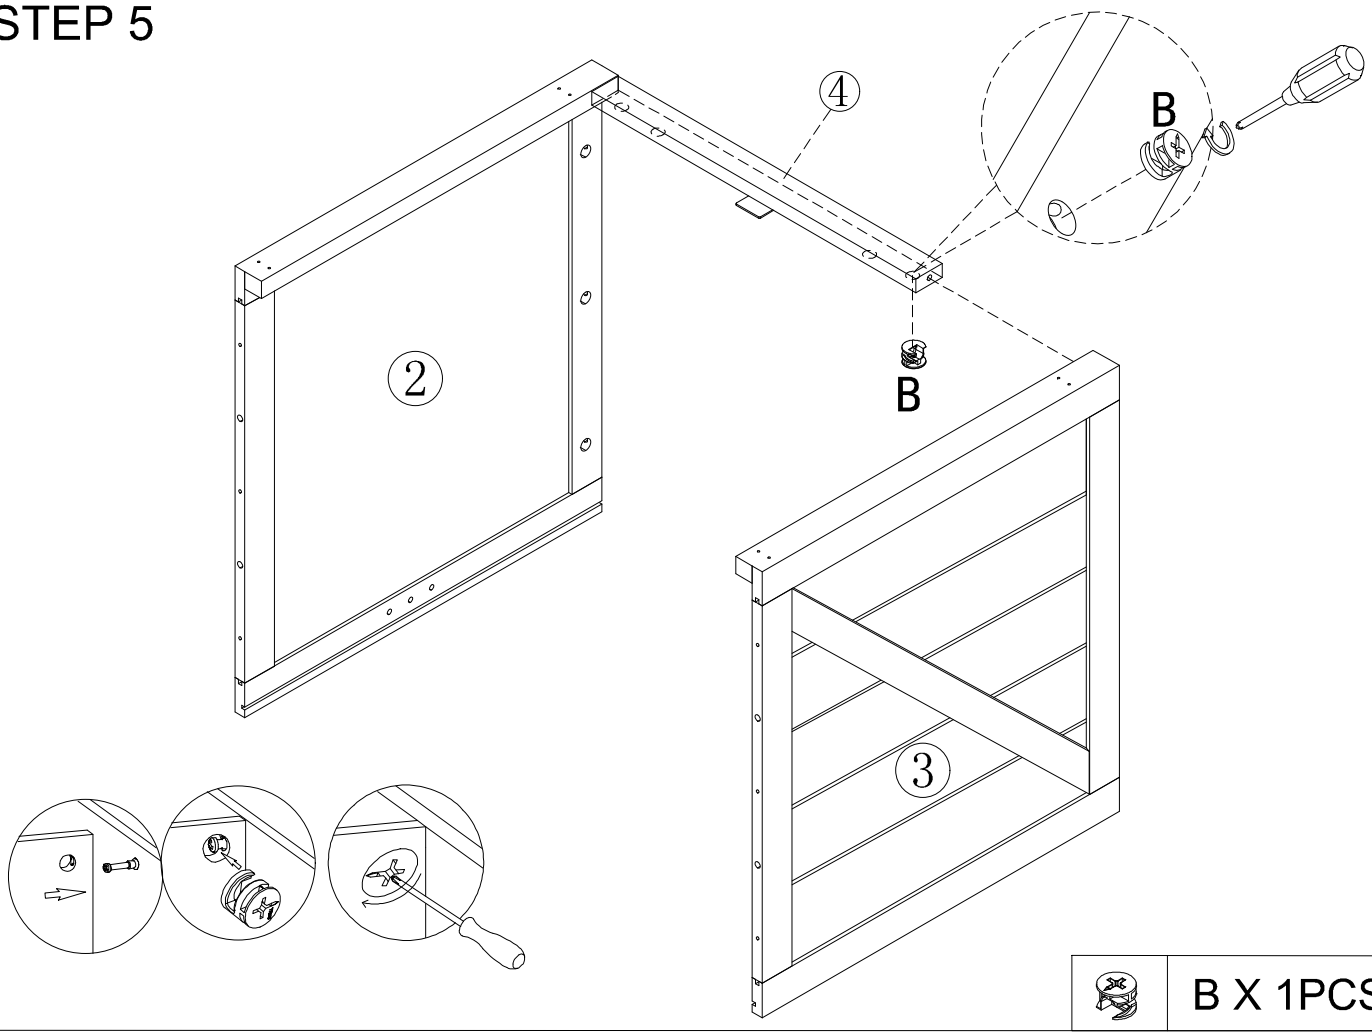



| | |
|---|---|
| | B X 1PCS |

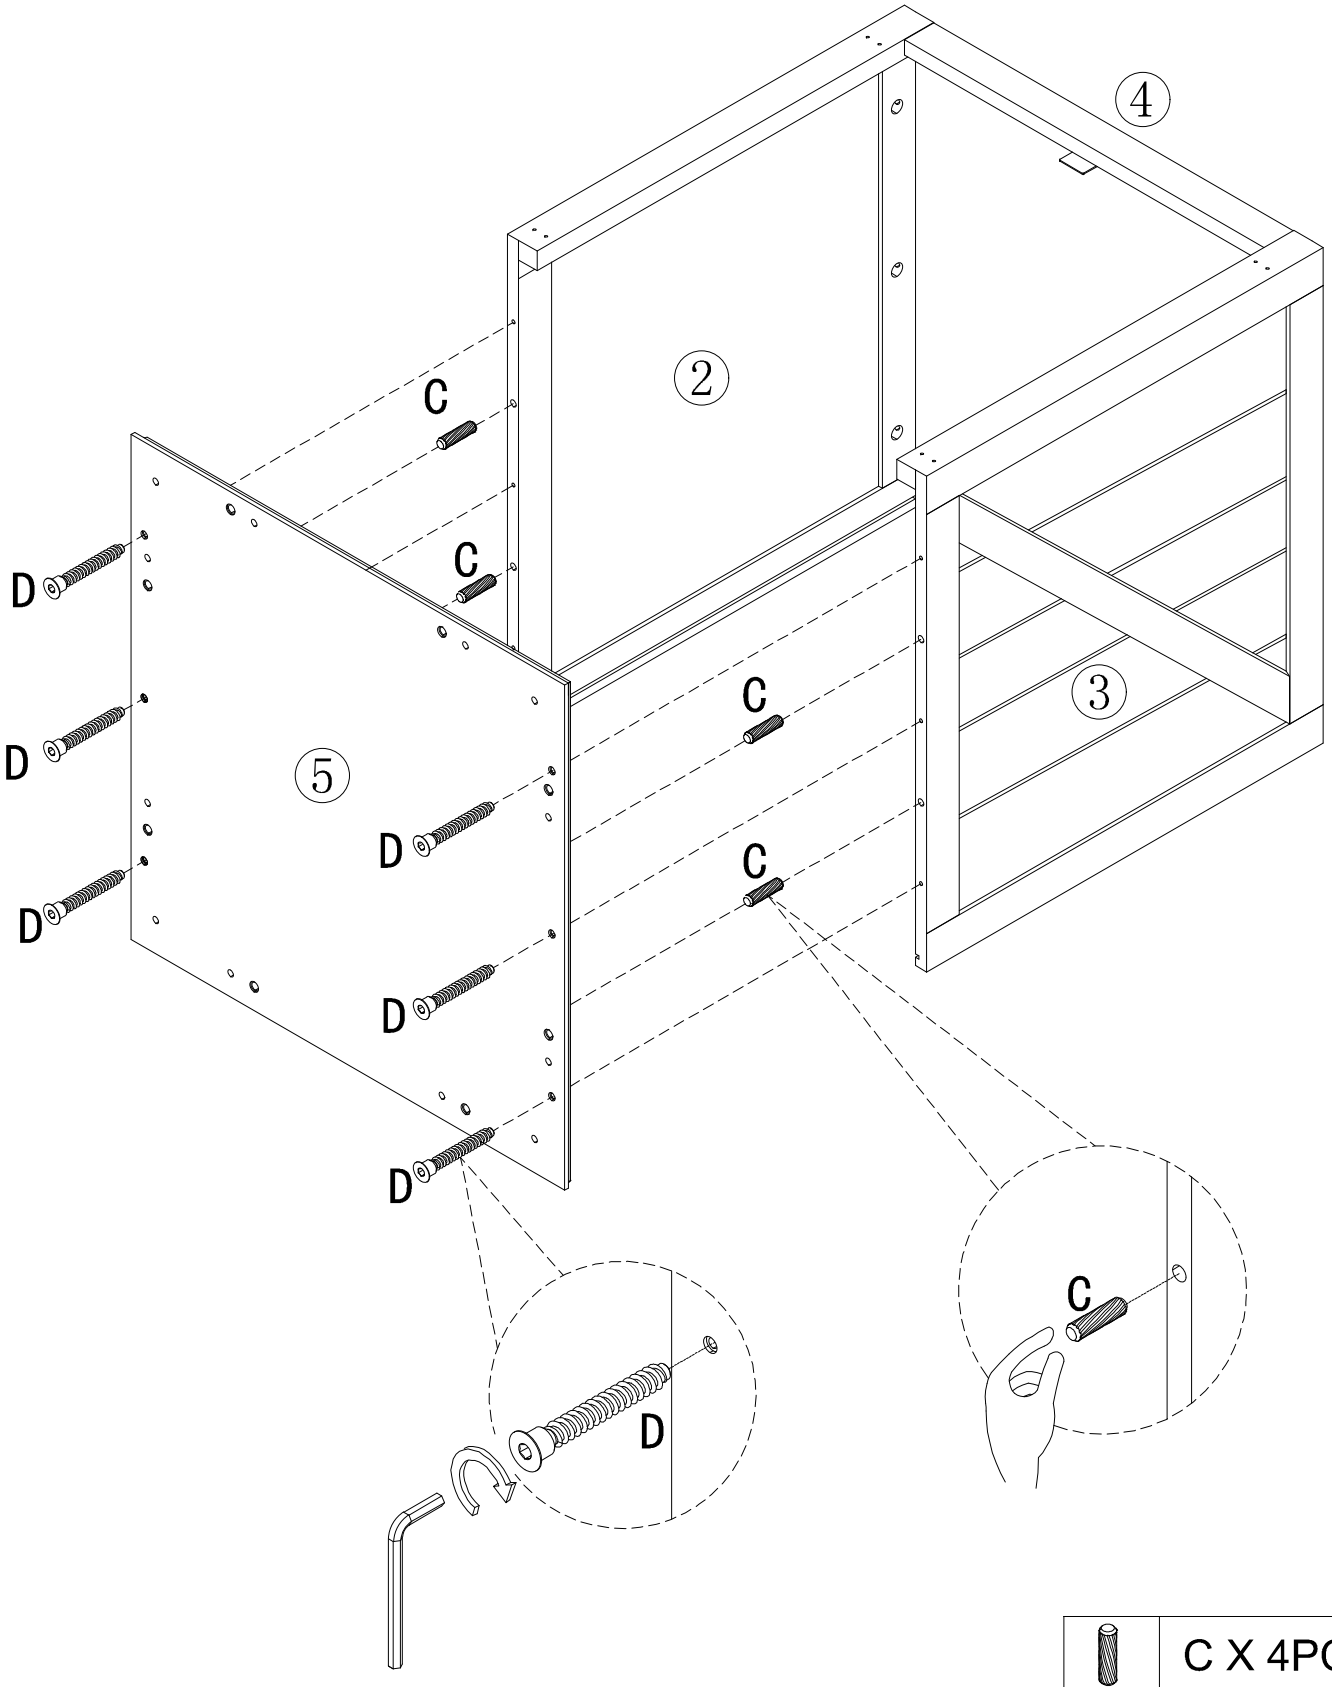STEP 6




| | |
|---|---|
| | C X 4PCS |
| | D X 6PCS |

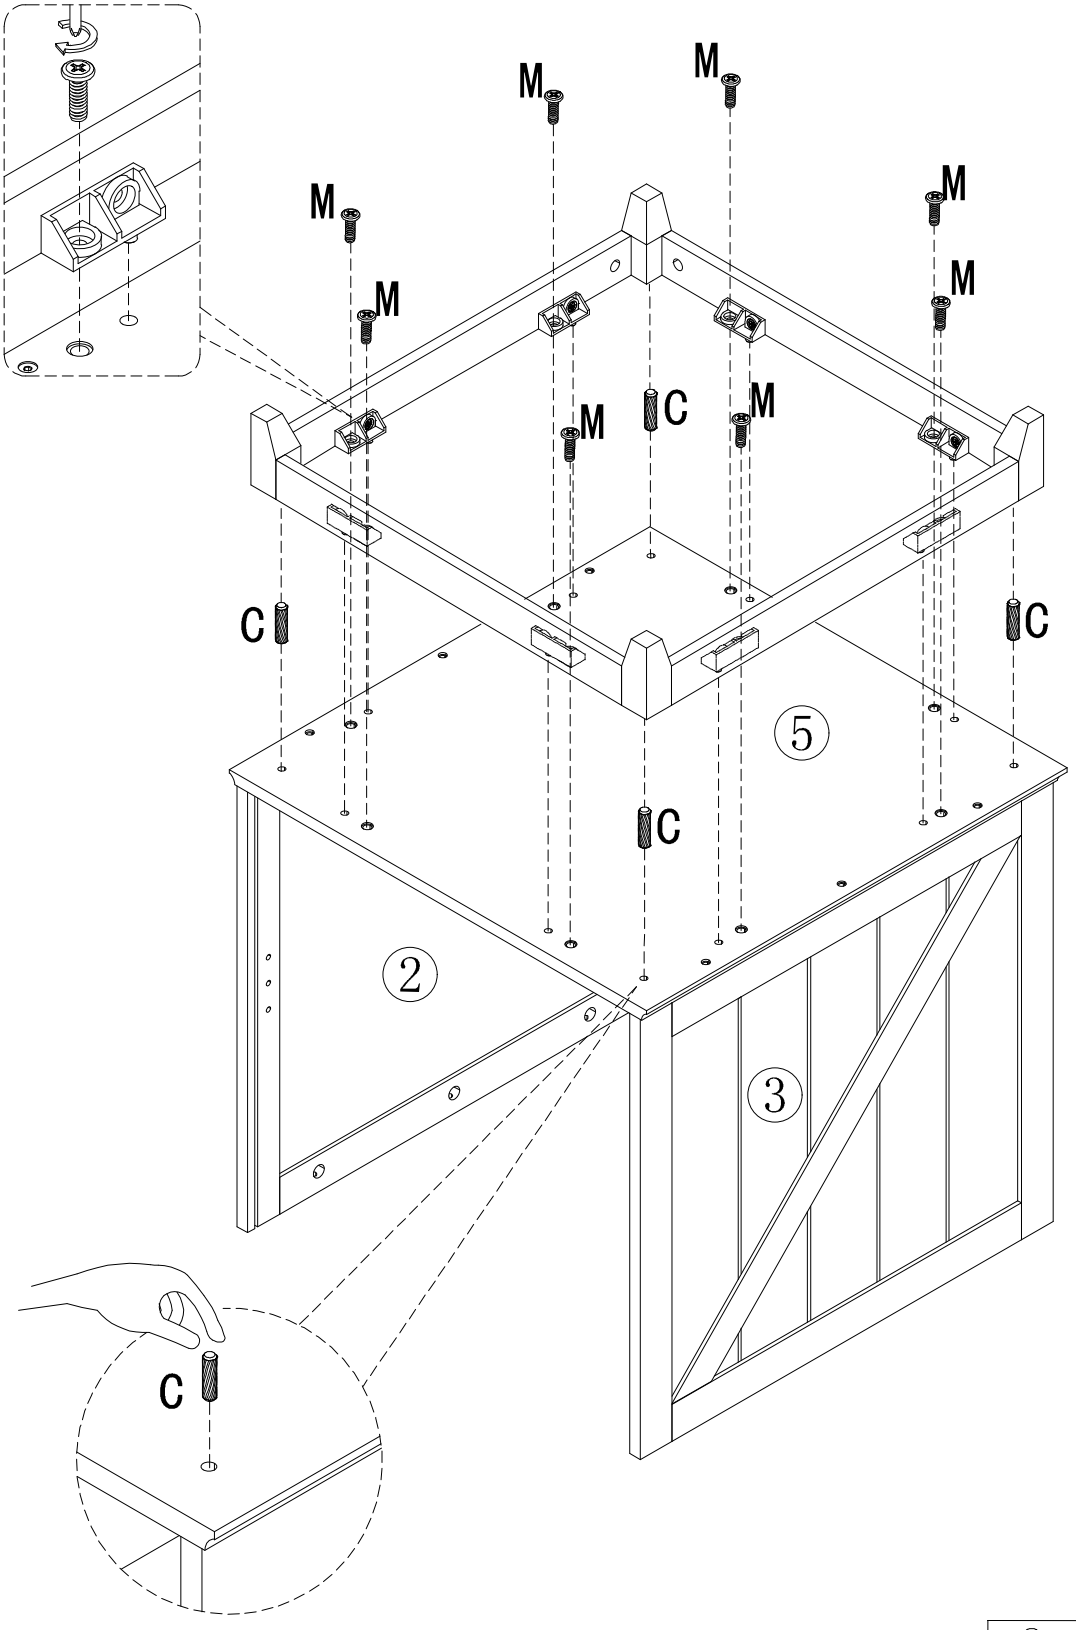STEP 7





| | |
|---|---|
| | C X 4PCS |
| | M X 8PCS |


## STEP 8

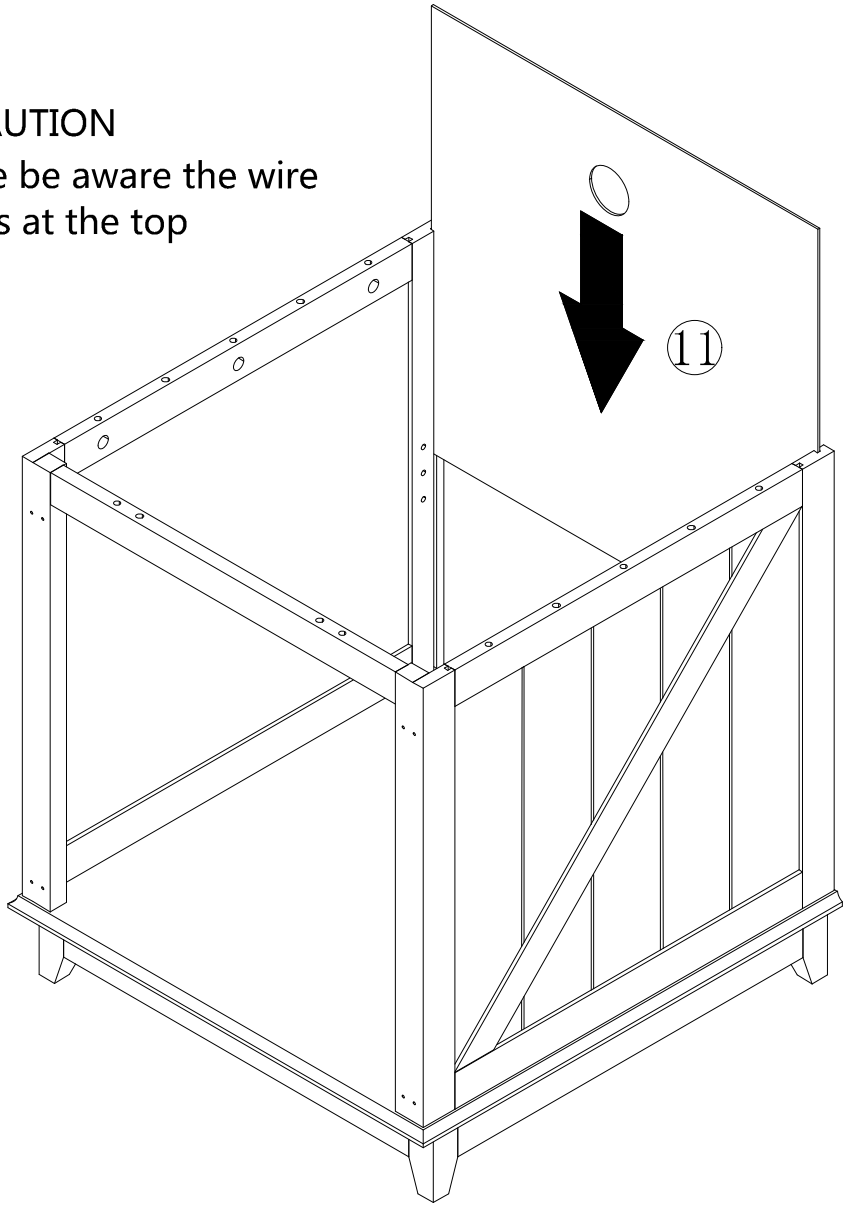⚠ CAUTION

Please be aware the wire hole is at the top





## STEP 9

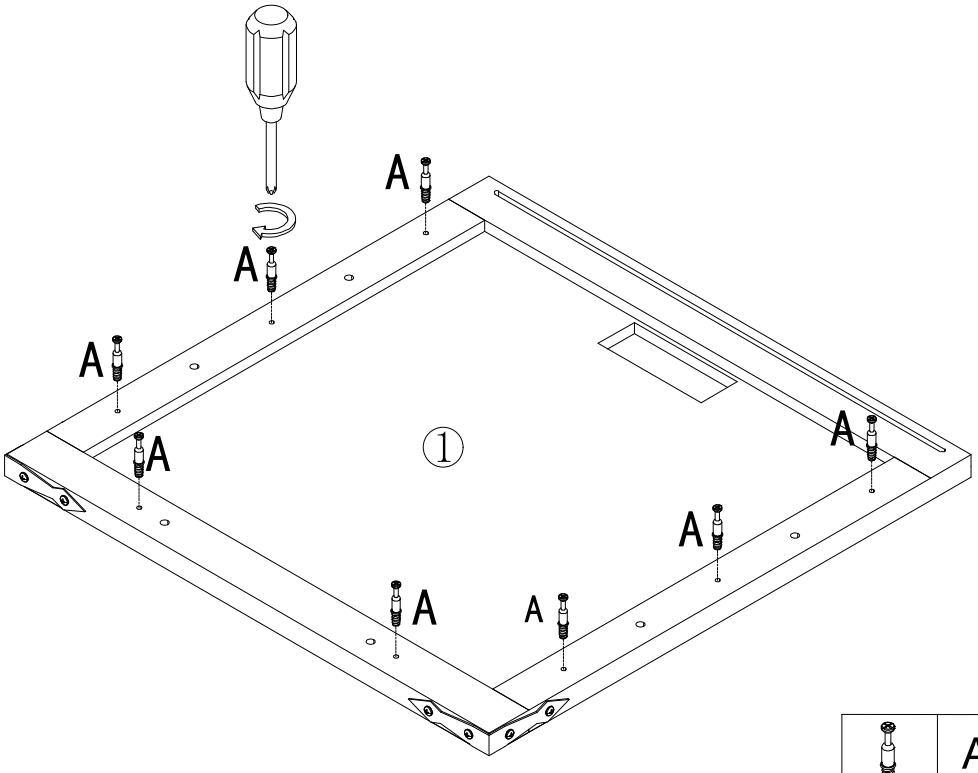







A X 8PCS

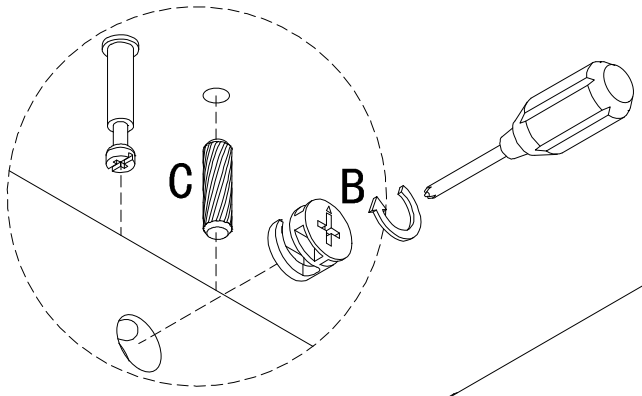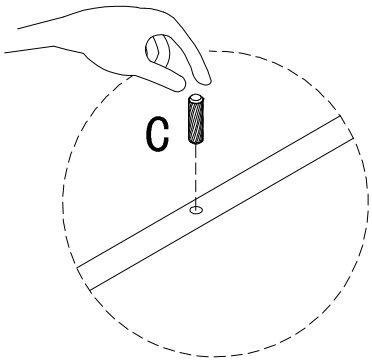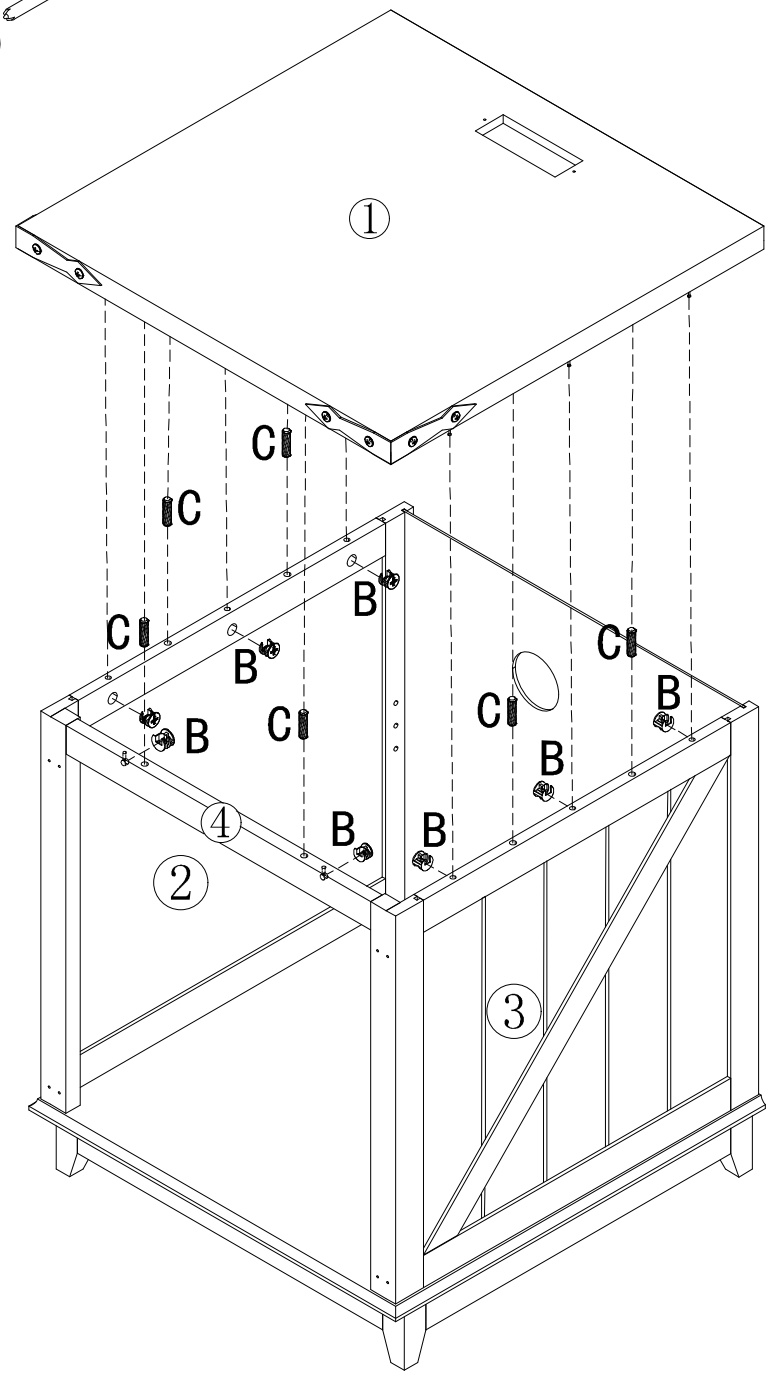STEP 10







| | |
|---|---|
| | B X 8PCS |
| | C X 6PCS |

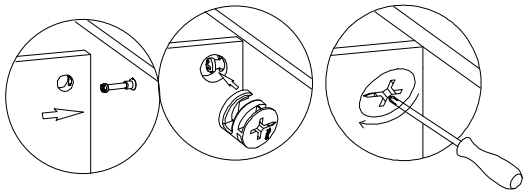STEP 11



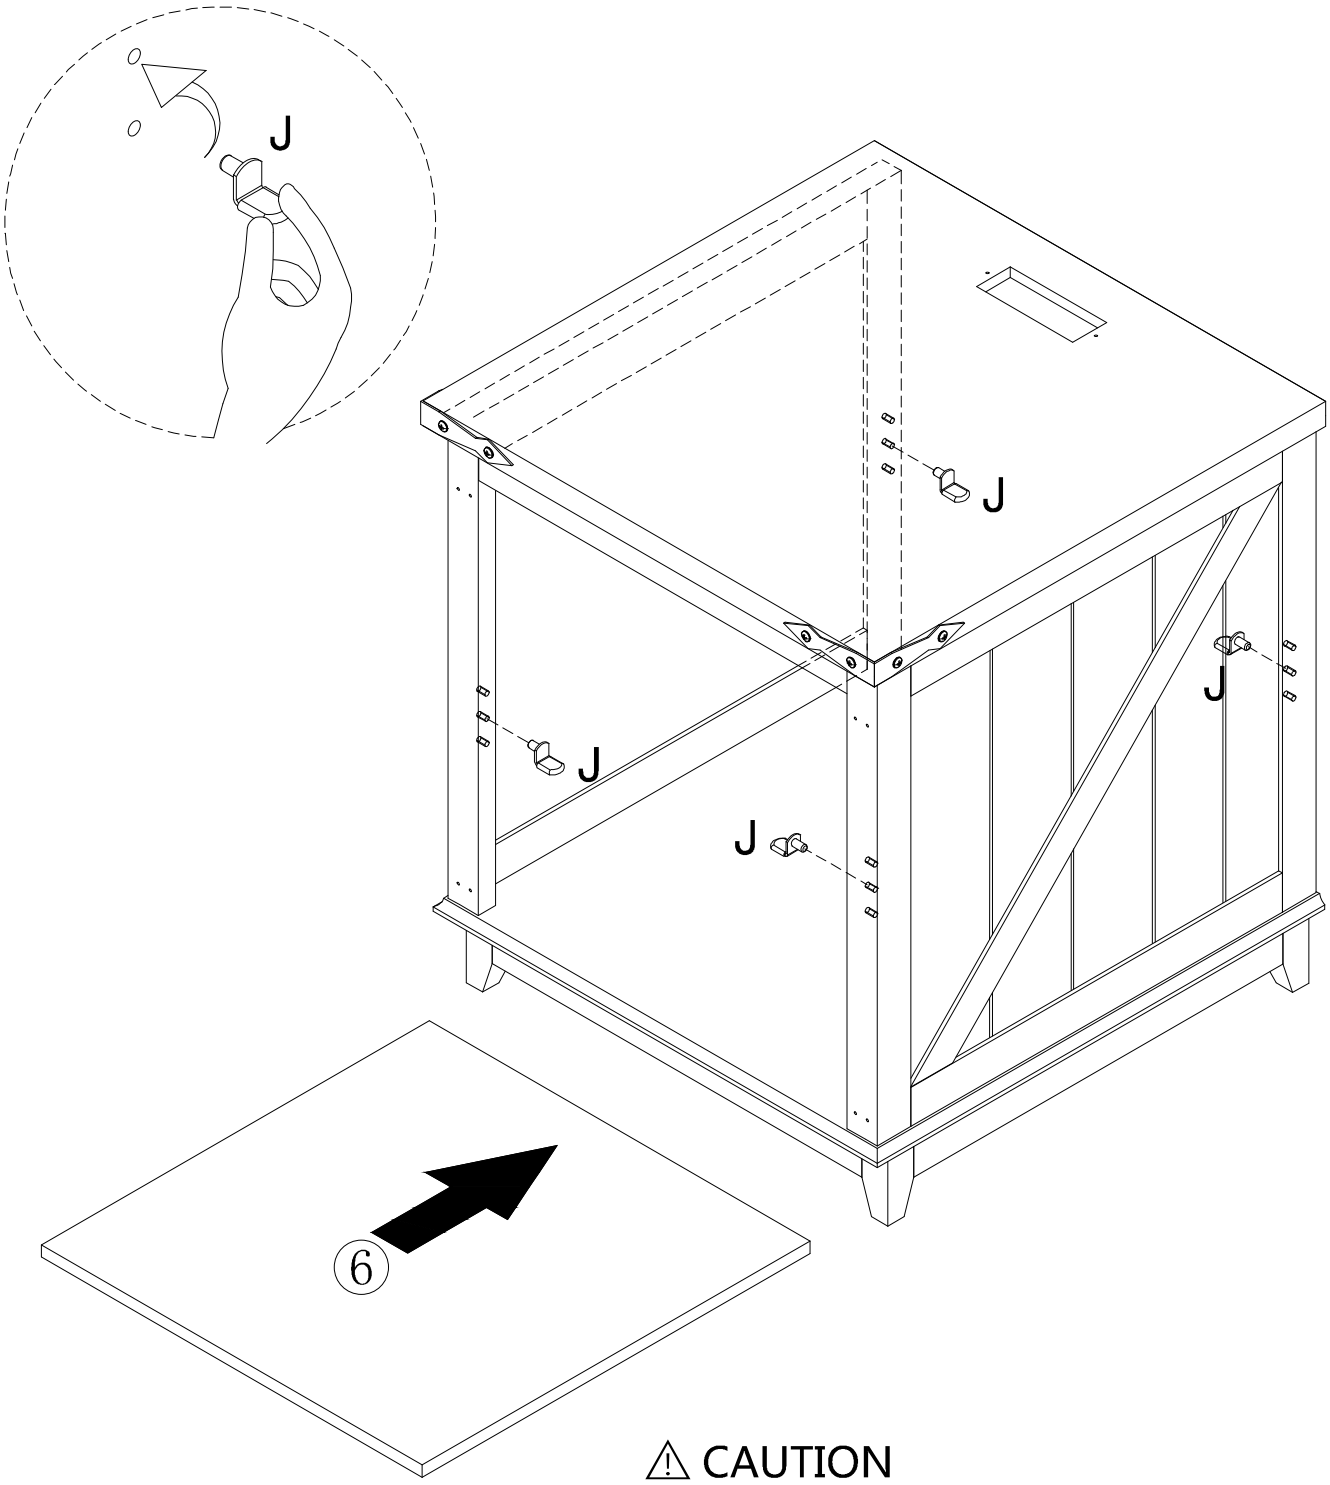
⚠ CAUTION

Note:the 6# plate needs to be instered diagonally

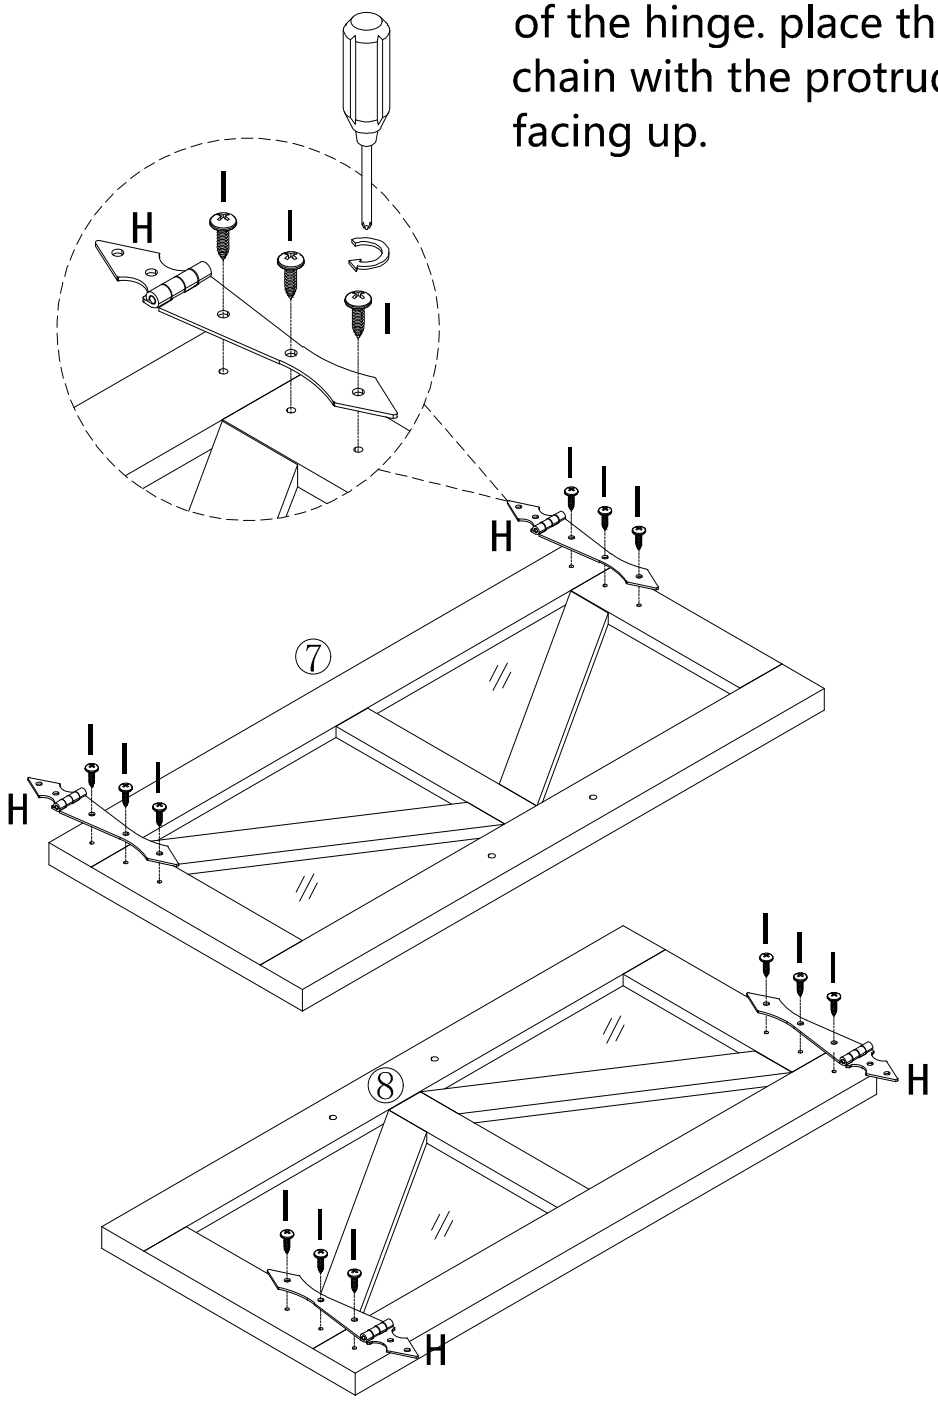


J X 4PCS

STEP 12


⚠ CAUTION

Pay attention to the direction of the hinge. place the hinge chain with the protruding side facing up.





| | |
|---|---|
|  | H X 4PCS |
|  | I X 12PCS |

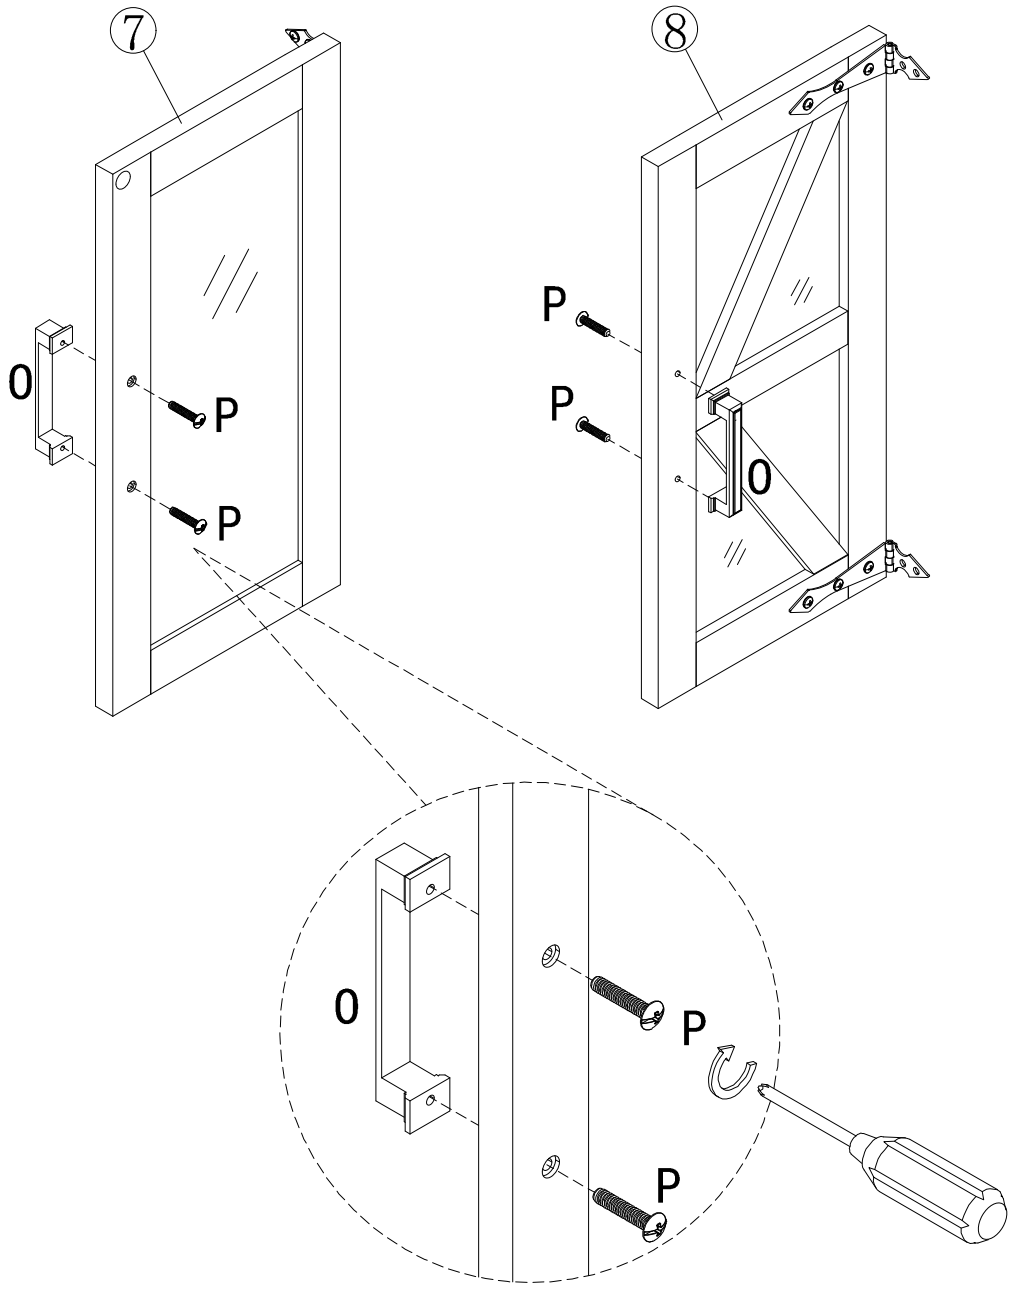
STEP 13




| | |
|---|---|
| | O X 2PCS |
| | P X 4PCS |

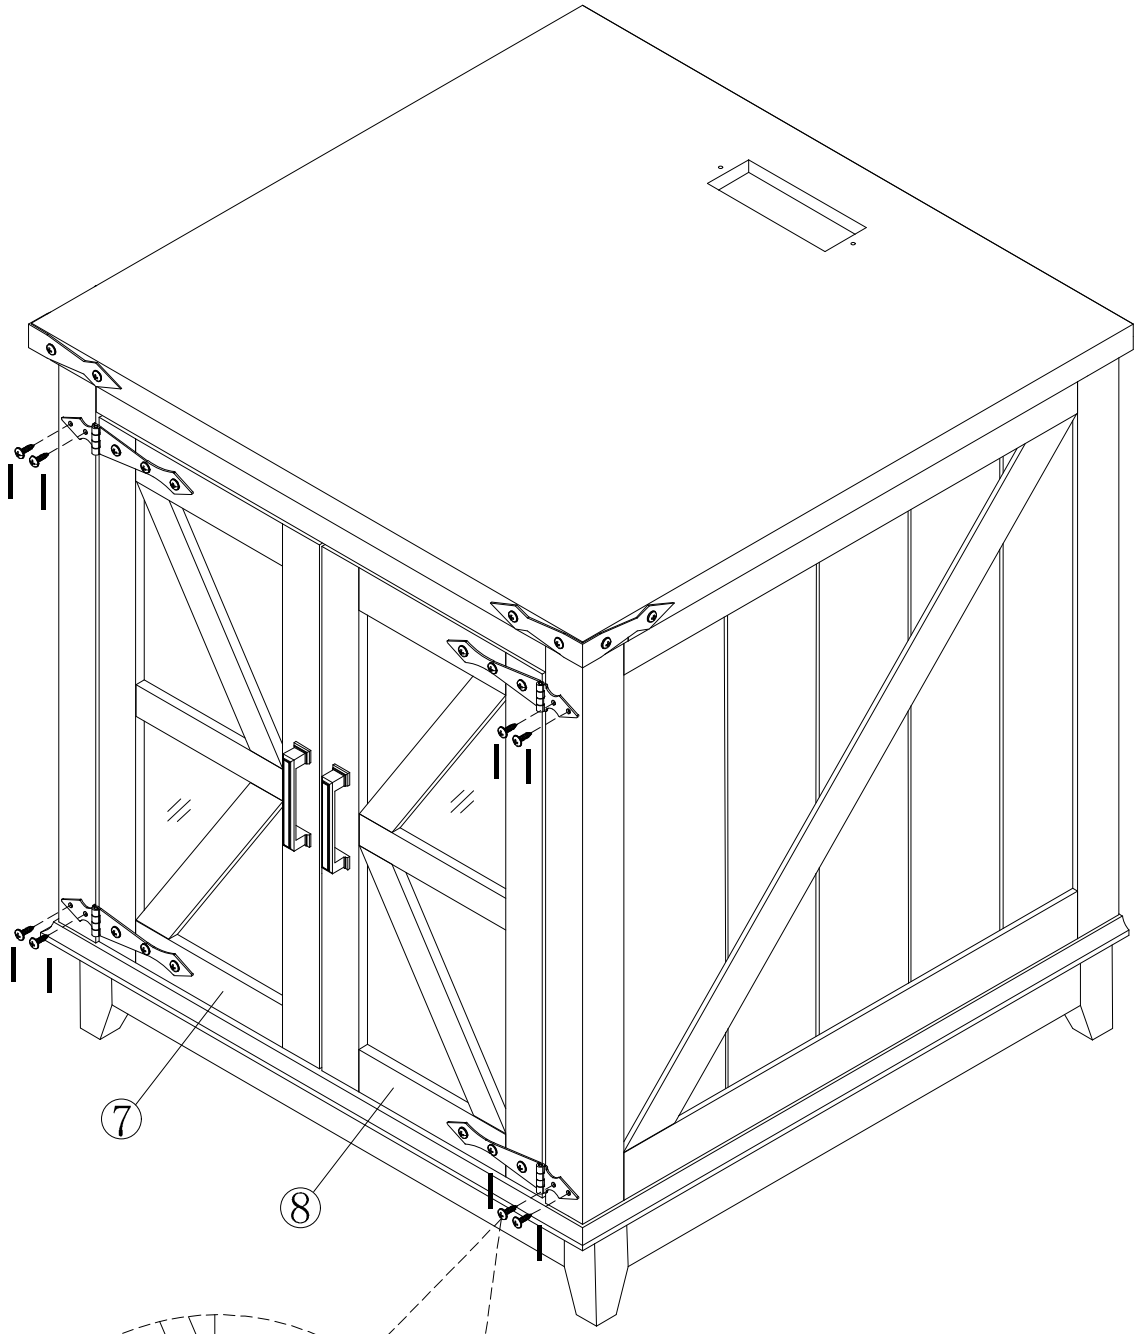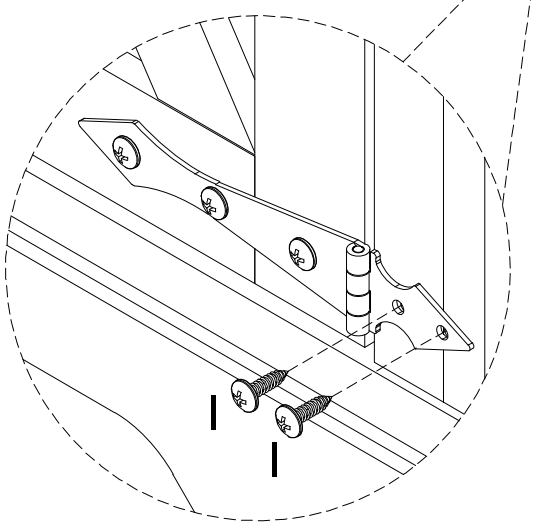STEP 14



⚠ CAUTION

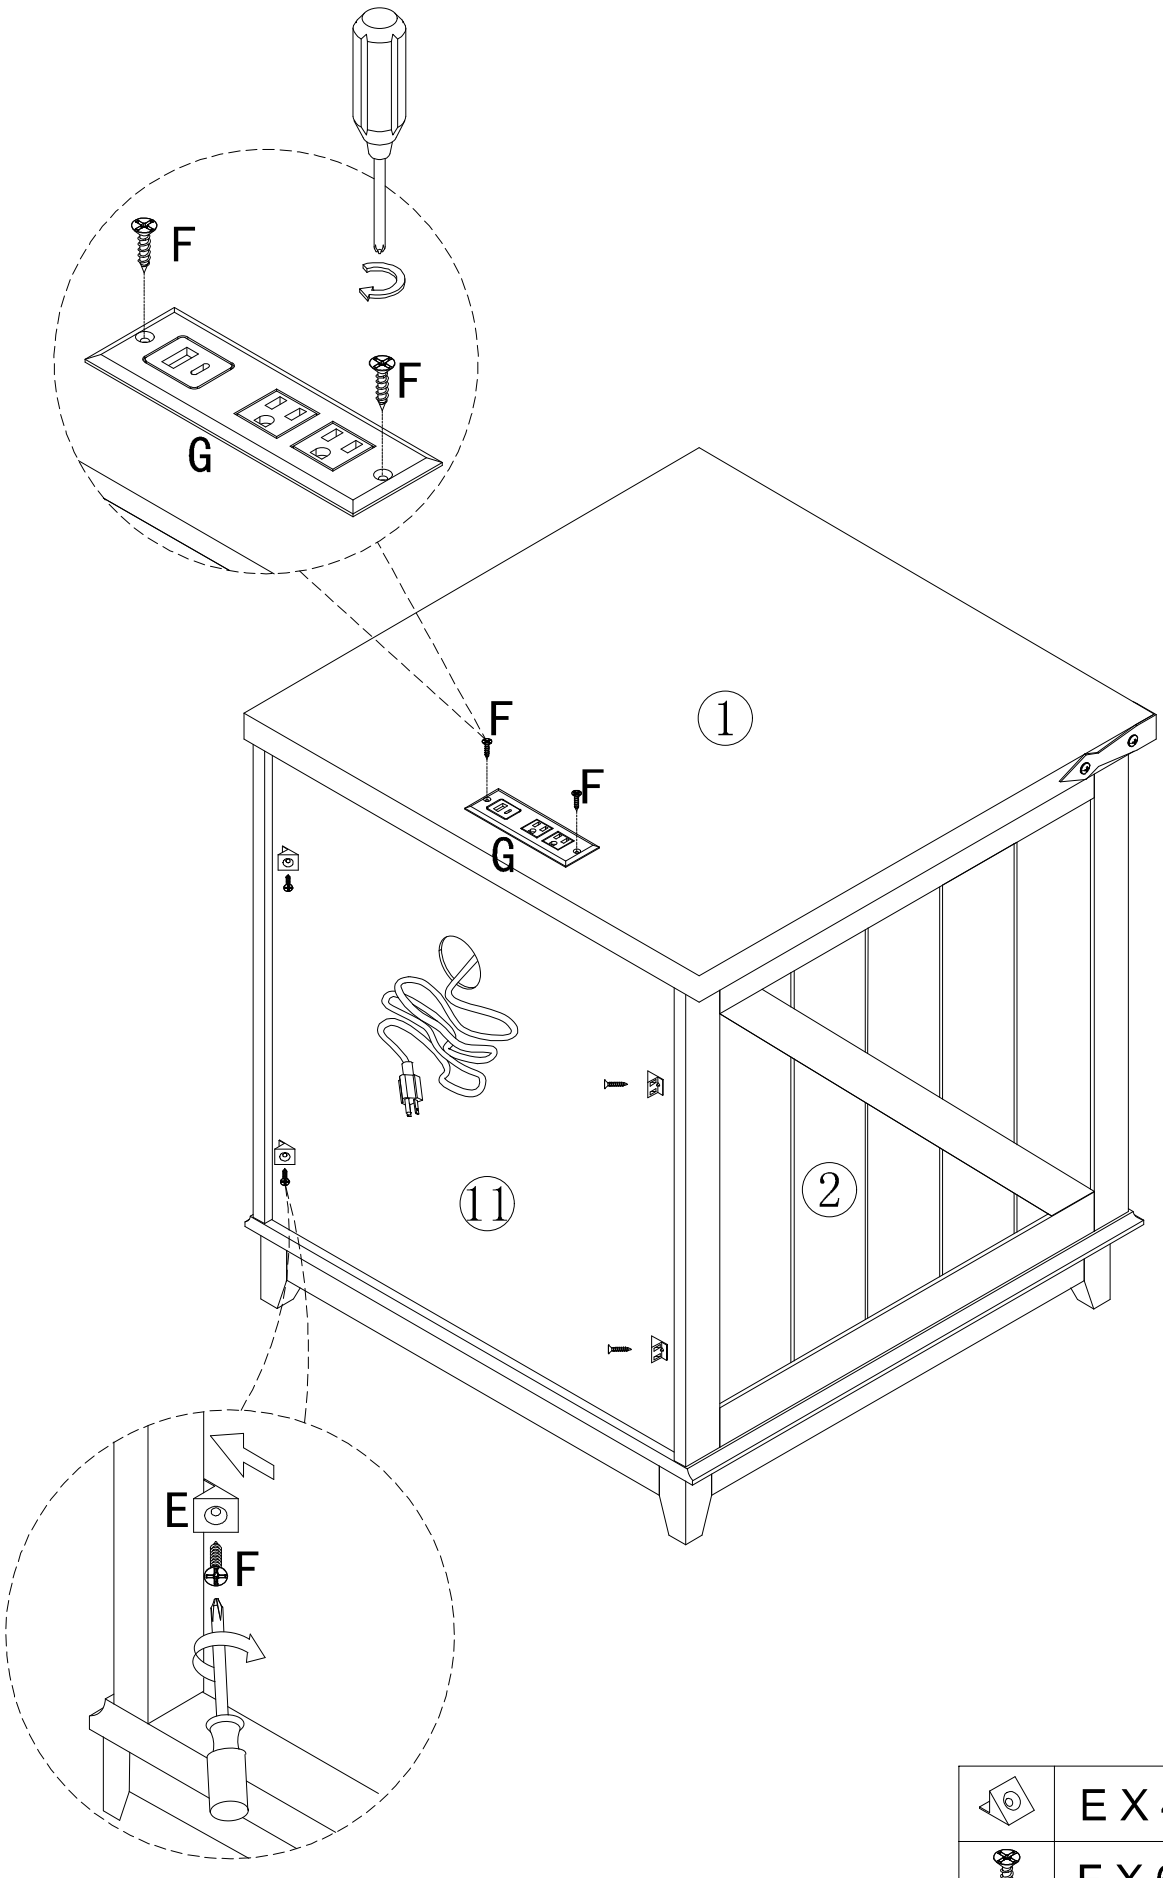
Note: Door #7 need to be installed on the left side, Door #8 need to be installed on the right side

The suction iron piece is located above the door.



I X 8PCS

STEP15




| | |
|---|---|
| | E X 4PCS |
| | F X 6PCS |
| | G X 1PCS |

STEP 16

