


Hall Tree

Assembly Instructions - Please keep for future reference

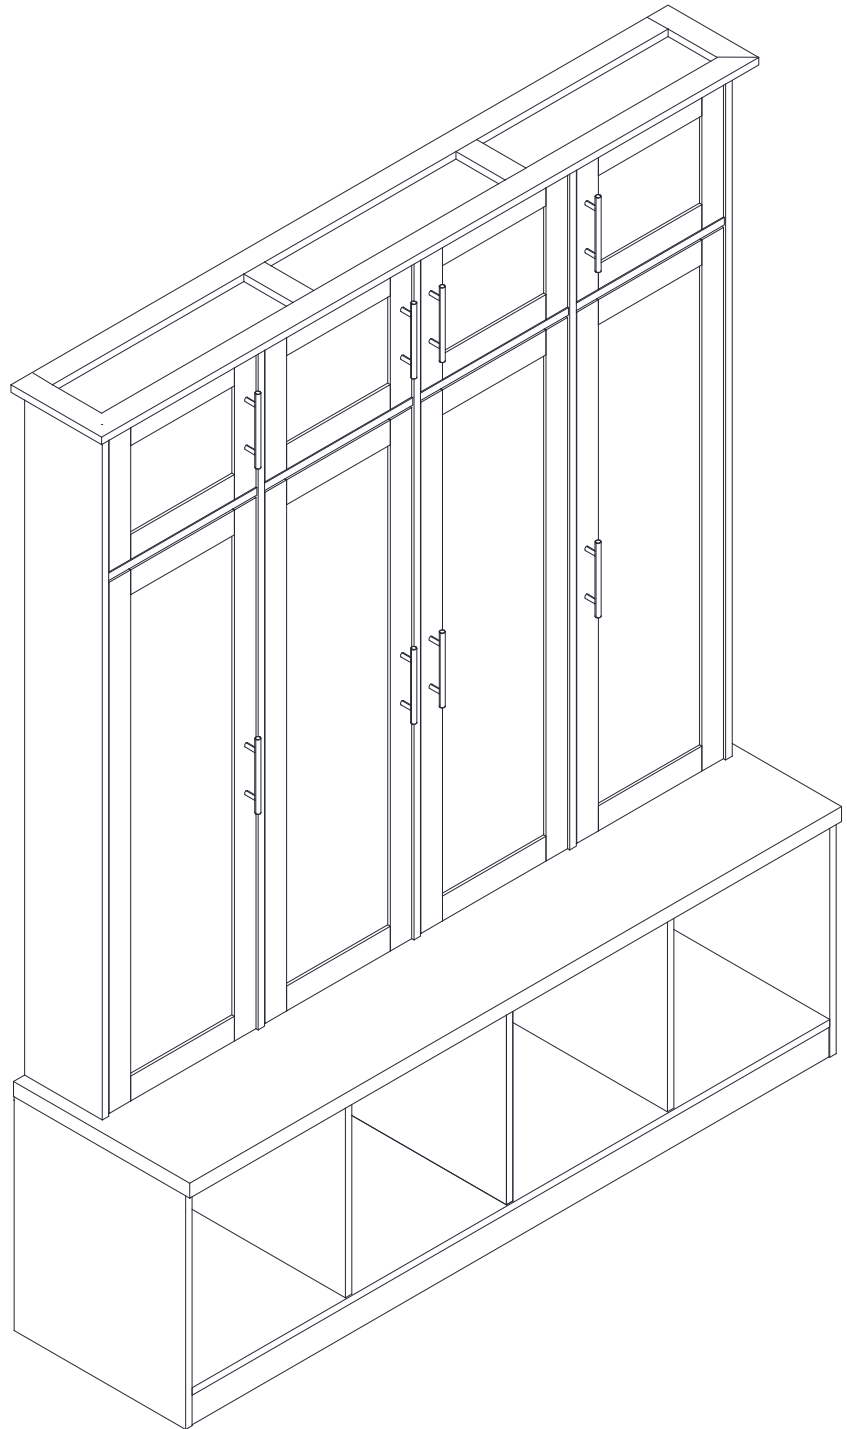

Dimensions

Width- 59.05inch

Depth-15.75inch

Height-74.80inch

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning –
please follow these instructions







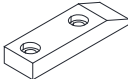

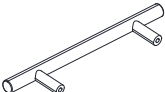







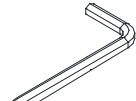
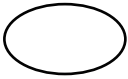
To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

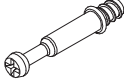
Components - Fittings

Please check you have all the panels listed below


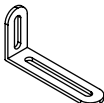
Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required

(A)  4*14mm Screw x 136	(B)  Hook x 4	(C)  Cam Bolt x 66	(D)  6*30mm Dowel x 58+1
(E)  Cam lock x 66	(F)  6*50mm Dowel x 15+1	(G)  x 8	(H)  Hinge x 20
(I)  Handle x 8	(J)  4*20mm Screw x 16	(K)  4*35mm Screw x 8	(L)  x 2
(M)  4*12mm Screw x 2	(P)  Back Panel Buckle x 22	(Q)  3*16mm Screw x 30	(R)  Plastic expansion x 2
(S)  Allen key x 1	(N)  Perfect fit x 66		

Tools required Not Included



Phillips screwdriver
(medium & large)

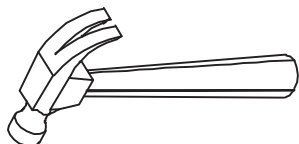


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

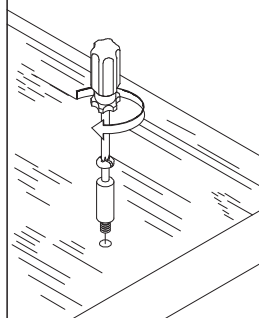

Step 2

Push the male camlock into the entry hole.

2

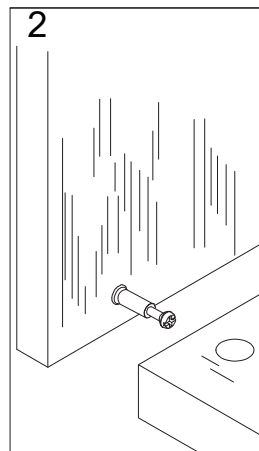


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

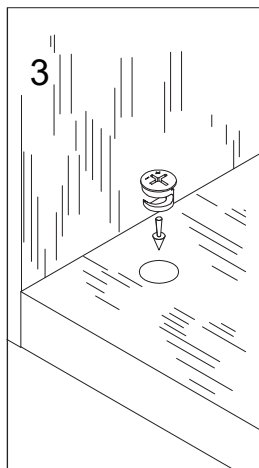


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4

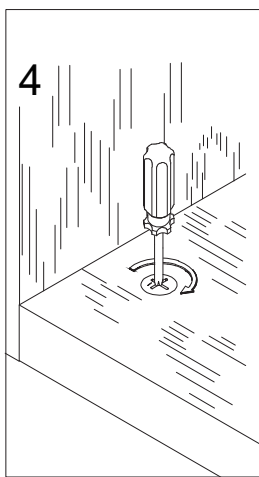

Assembly Instructions

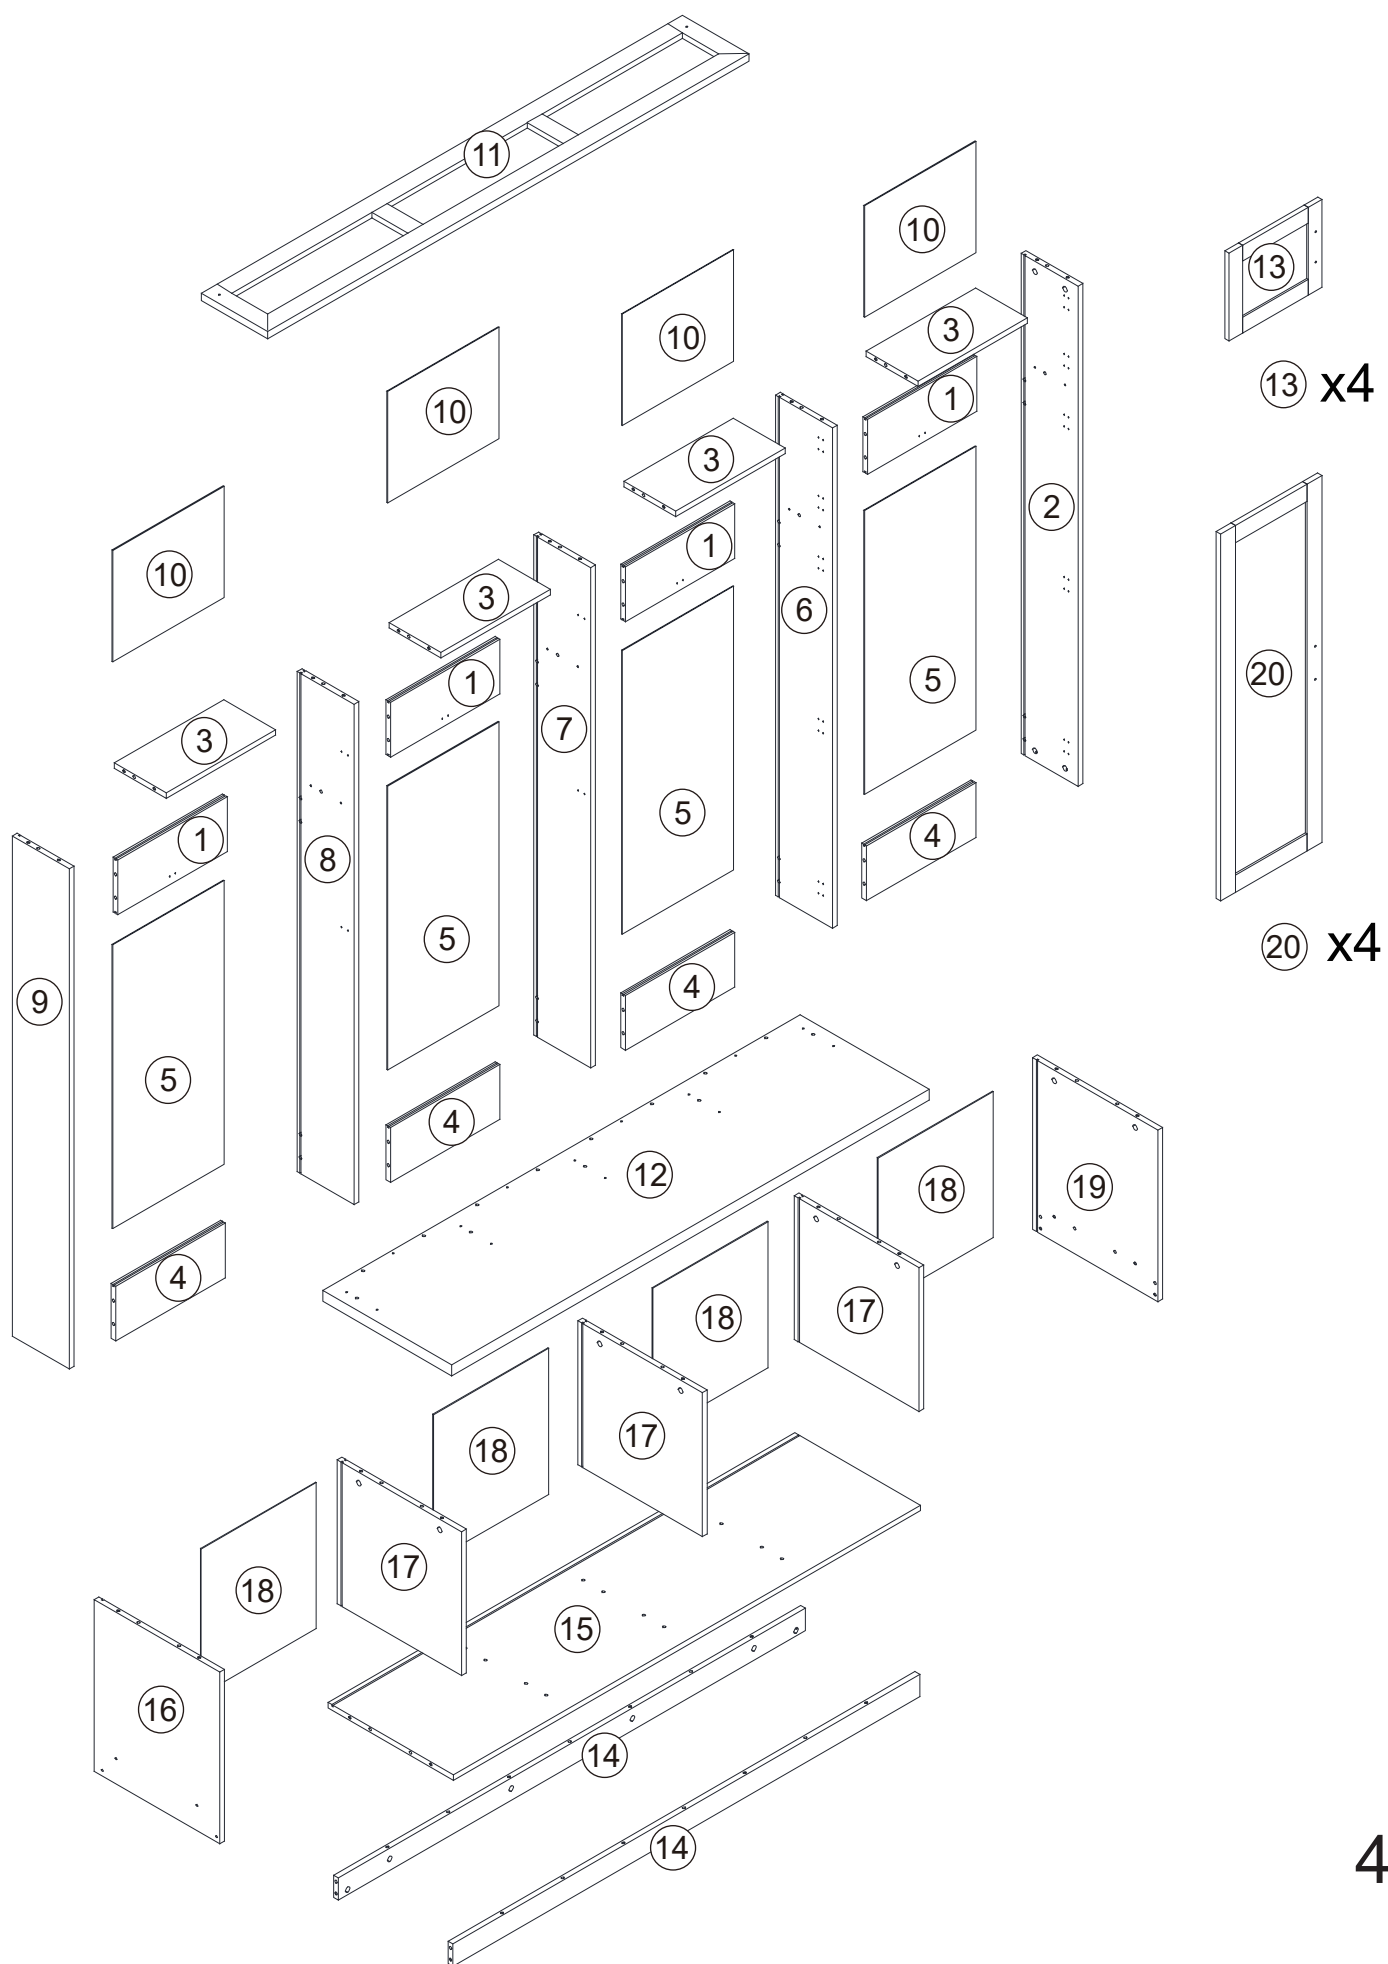

PART LIST

There are 2 boxes of this product.

Box 1:



②
x1

upper right side panel
1370x180x15mm



⑥
x1

middle back panel
1370x180x15mm



⑦
x1

middle partition
1370x180x15mm




⑧
x1

middle partition
1370x180x15mm




⑨
x1

upper left side panel
1370x180x15mm

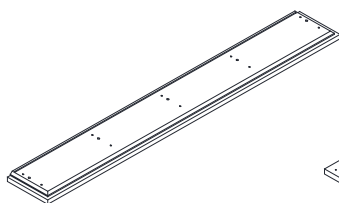


⑪
x1

top panel
1492x195x15mm

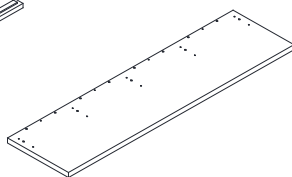


⑫
x1

seat panel
1510x408x15mm

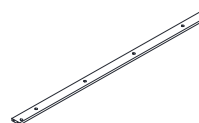

⑭
x2

toe tick
1468x60x15mm

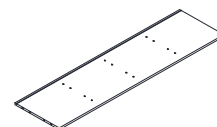













⑮
x1

bottom
1468x396x15mm

PART LIST

There are 2 boxes of this product.


Box 2:

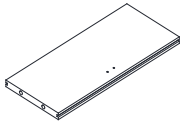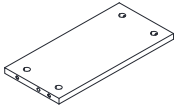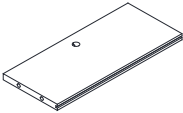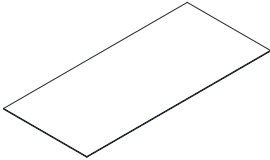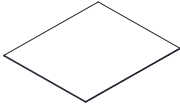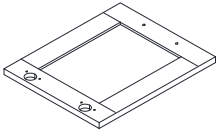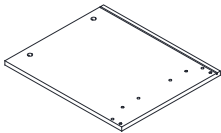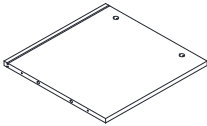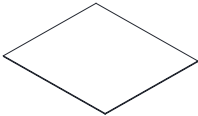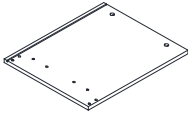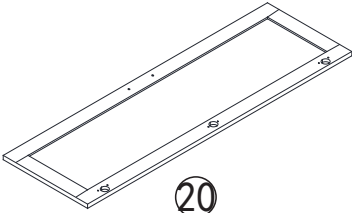				
①	③	④	⑤	⑩
x4	x4	x4	x4	x4
upper brace 346x150x15mm	upper shelf 346x164x15mm	lower brace 346x150x15mm	middle back panel 785x353x3mm	upper back panel 297x353x3mm
				
⑬	⑯	⑰	⑱	⑲
x4	x1	x3	x4	x1
small door panel 268x339x15mm	lower left side panel 470x397x15mm	lower partition 394x394x15mm	lower back panel 401x362x3mm	lower right side panel 470x397x15mm
				
⑳				
x4				
long door panel 1073x339x15mm				
Hardware kit x1				

Assembly Instructions

Step 1

x4

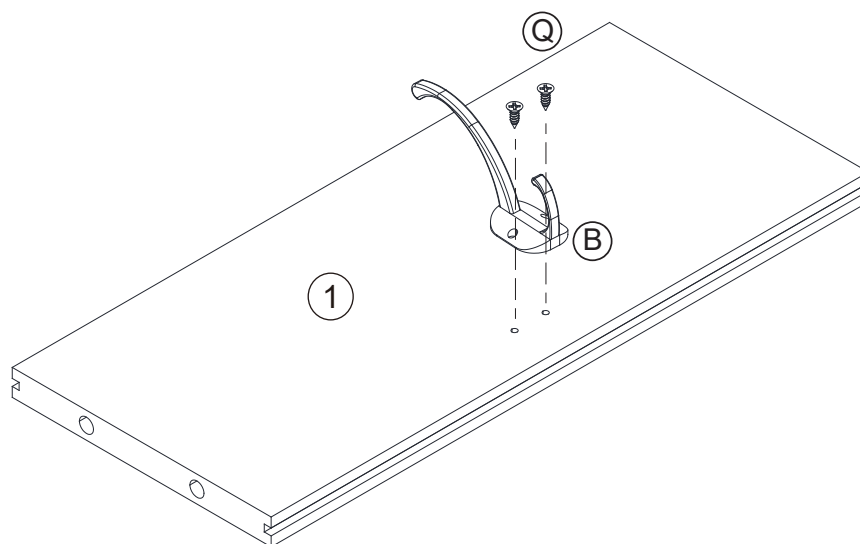

Q




3*16mm Screw x 8

B




Hook x 4

Step 2

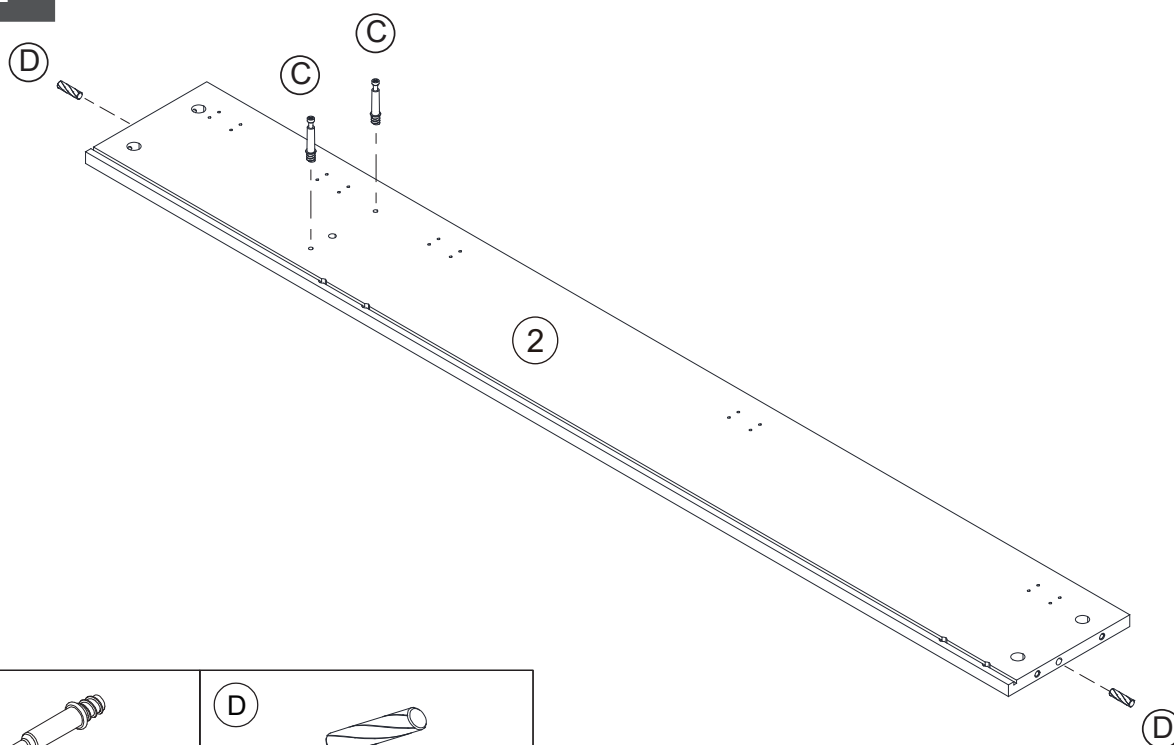

C



Cam Bolt x 2


D



6*30mm Dowel x 2

Assembly Instructions

Step 3

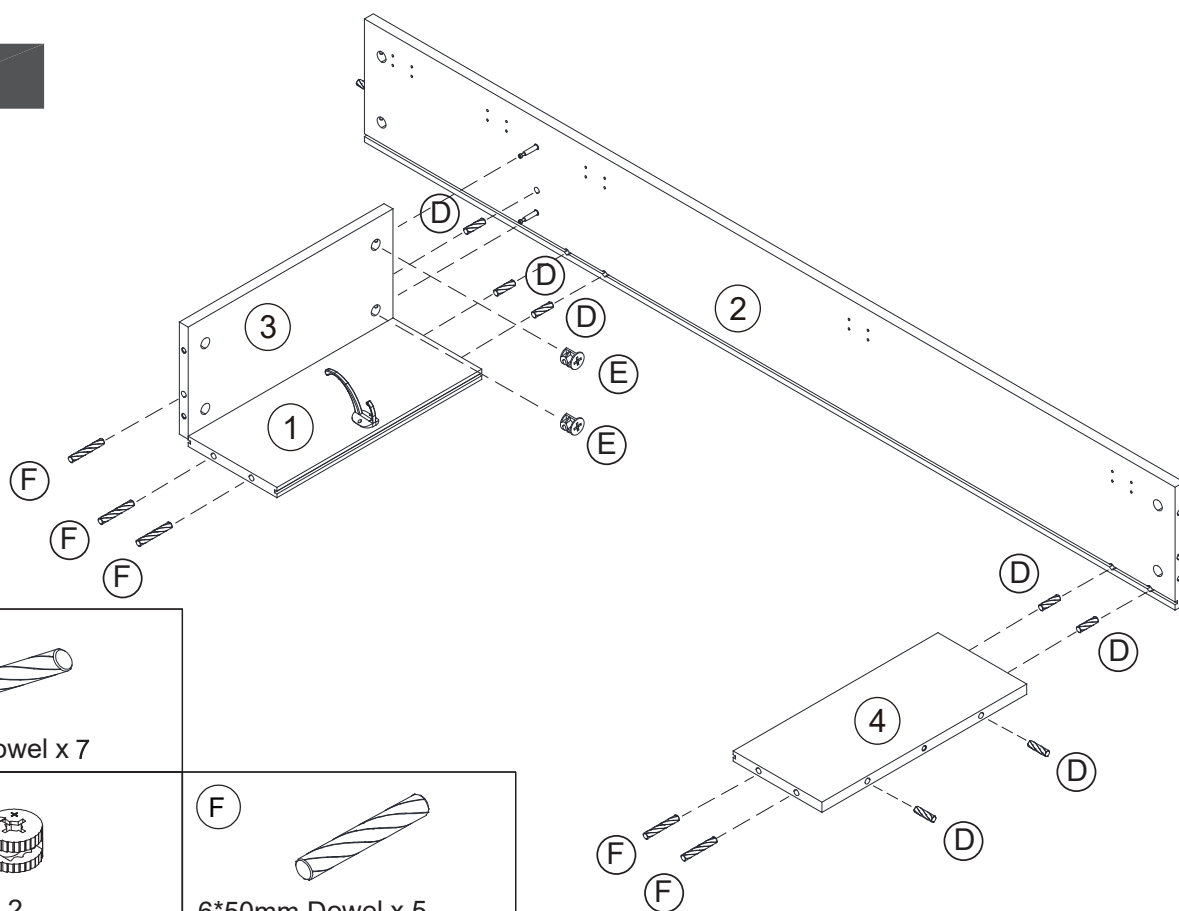

(D)



6*30mm Dowel x 7

(E)



Cam lock x 2


(F)




6*50mm Dowel x 5

Step 4

Part6
requires mounting screws
on both sides

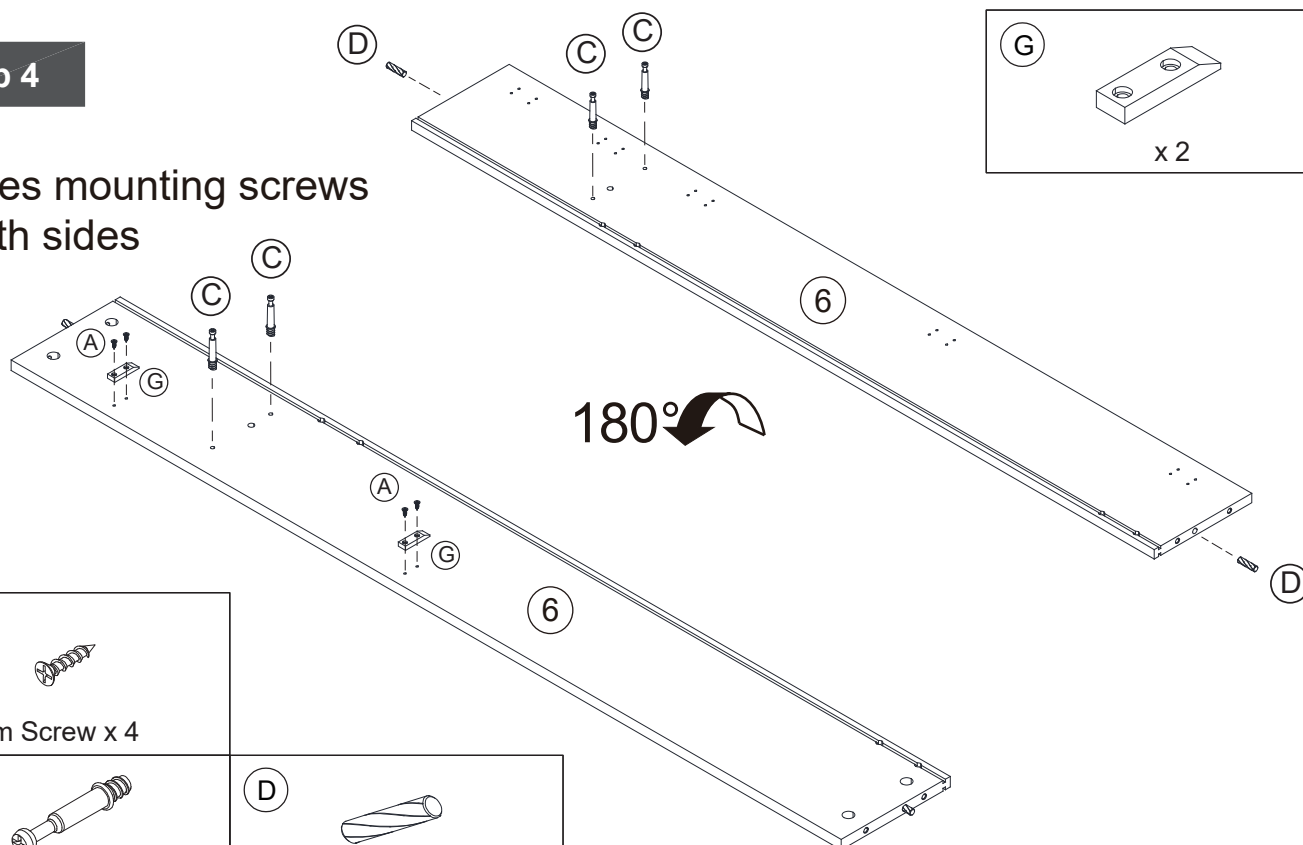

(G)




x 2

(A)



4*14mm Screw x 4

(C)



Cam Bolt x 4


(D)



6*30mm Dowel x 2

Assembly Instructions

Step 5

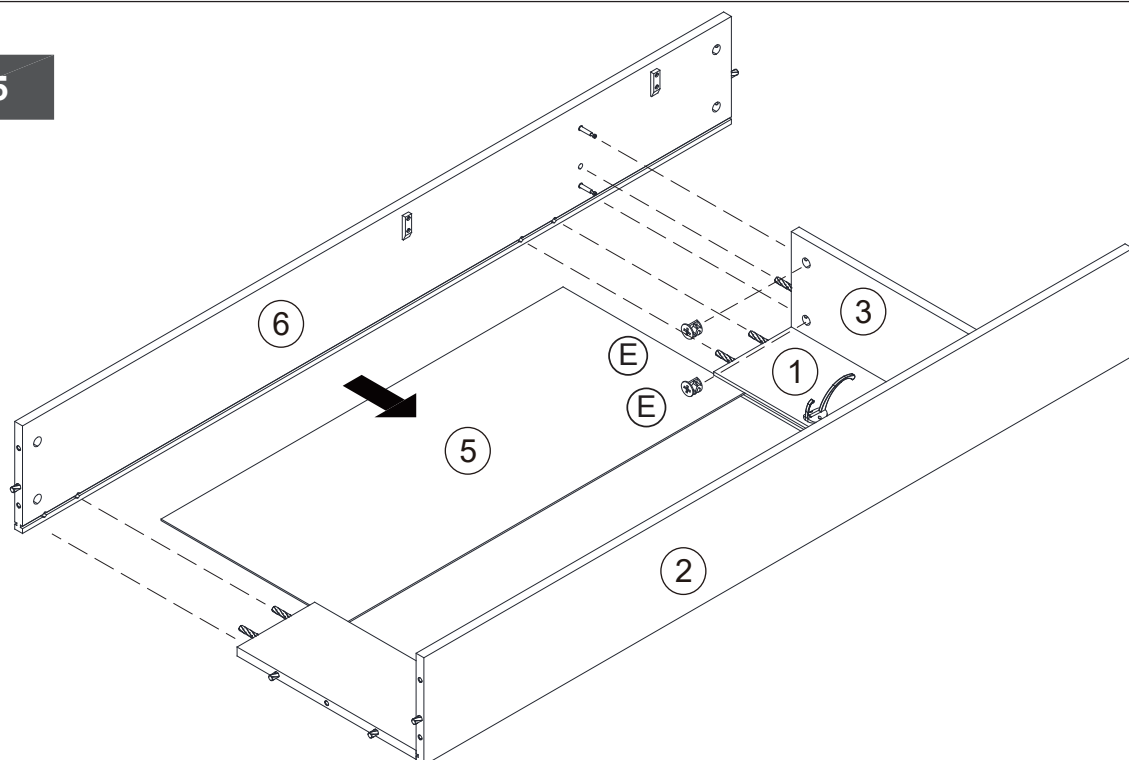


(E)



Cam lock x 2

Step 6

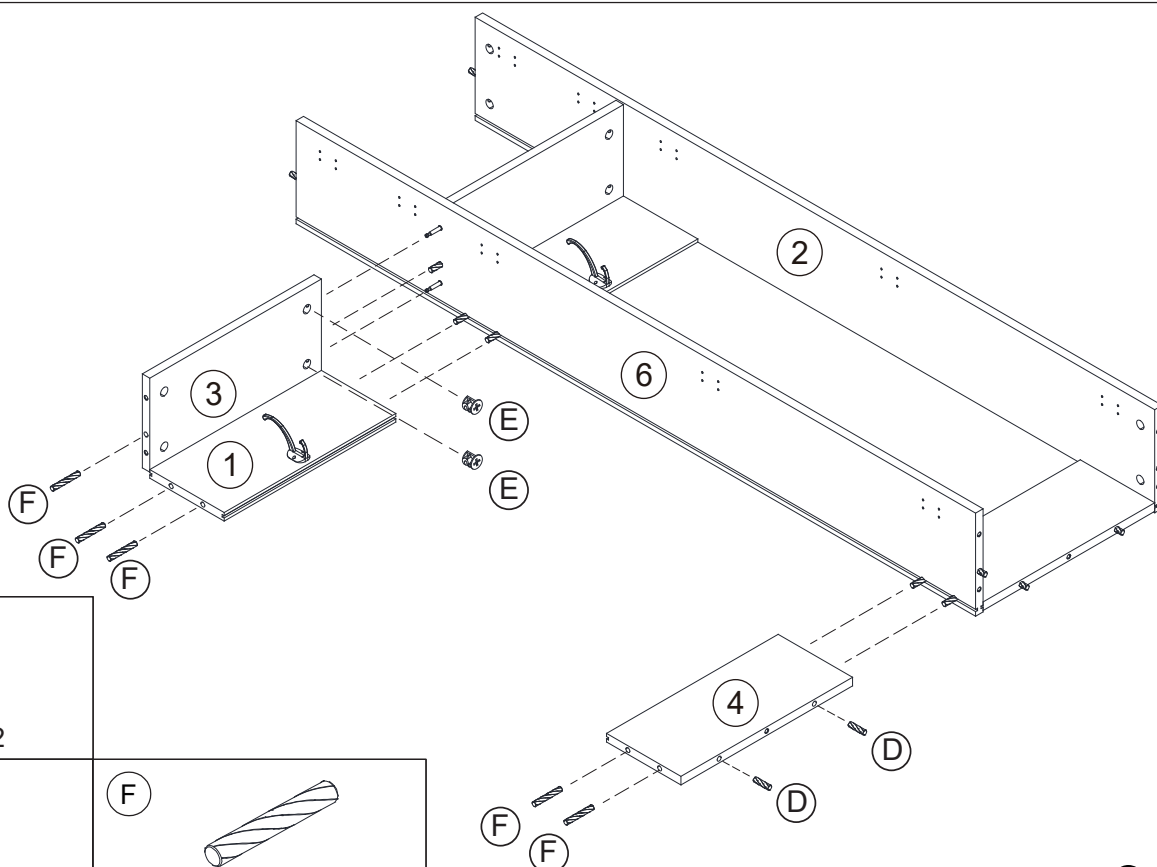

(D)



6*30mm Dowel x 2

(E)



Cam lock x 2


(F)


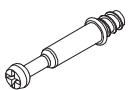

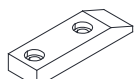


6*50mm Dowel x 5

Assembly Instructions


Step 7

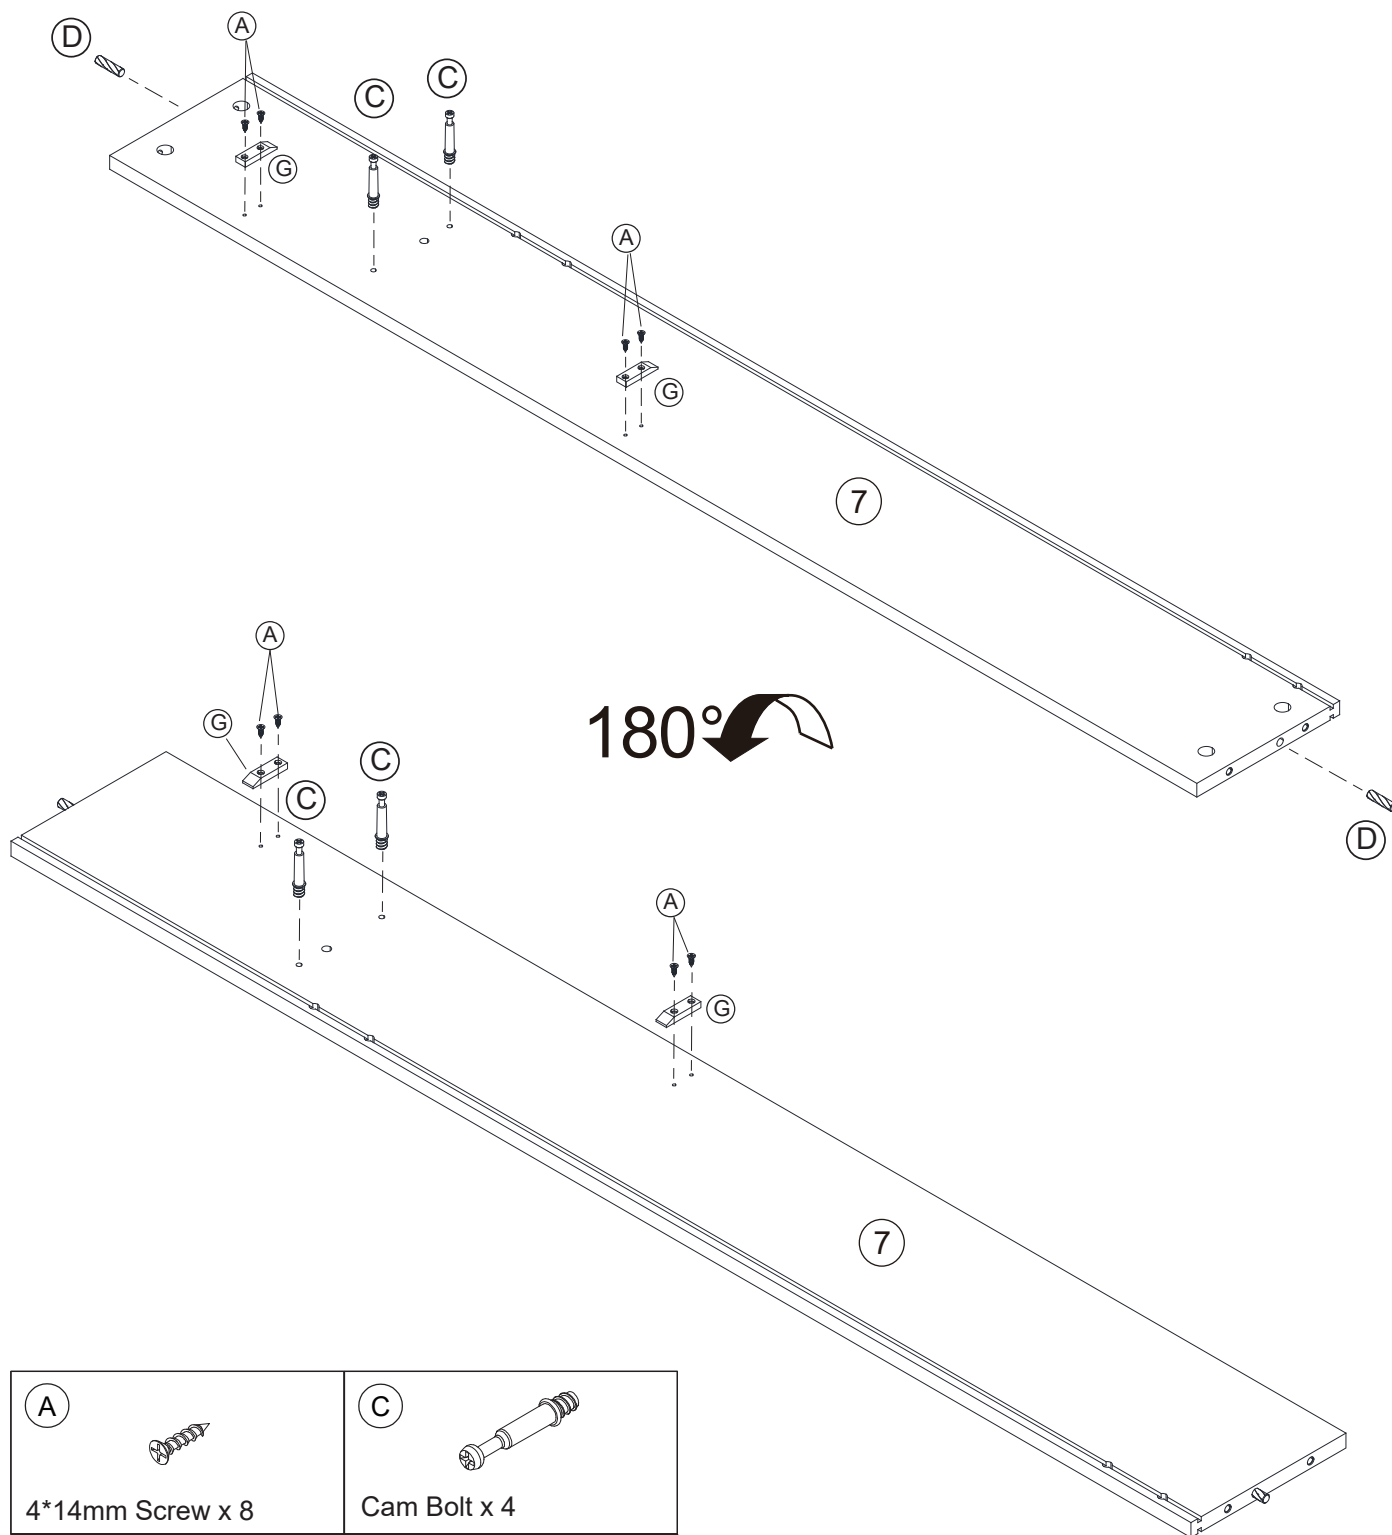

<p>(A)</p>  <p>4*14mm Screw x 8</p>	<p>(C)</p>  <p>Cam Bolt x 4</p>
<p>(D)</p>  <p>6*30mm Dowel x 2</p>	<p>(G)</p>  <p>x 4</p>

Assembly Instructions

Step 8

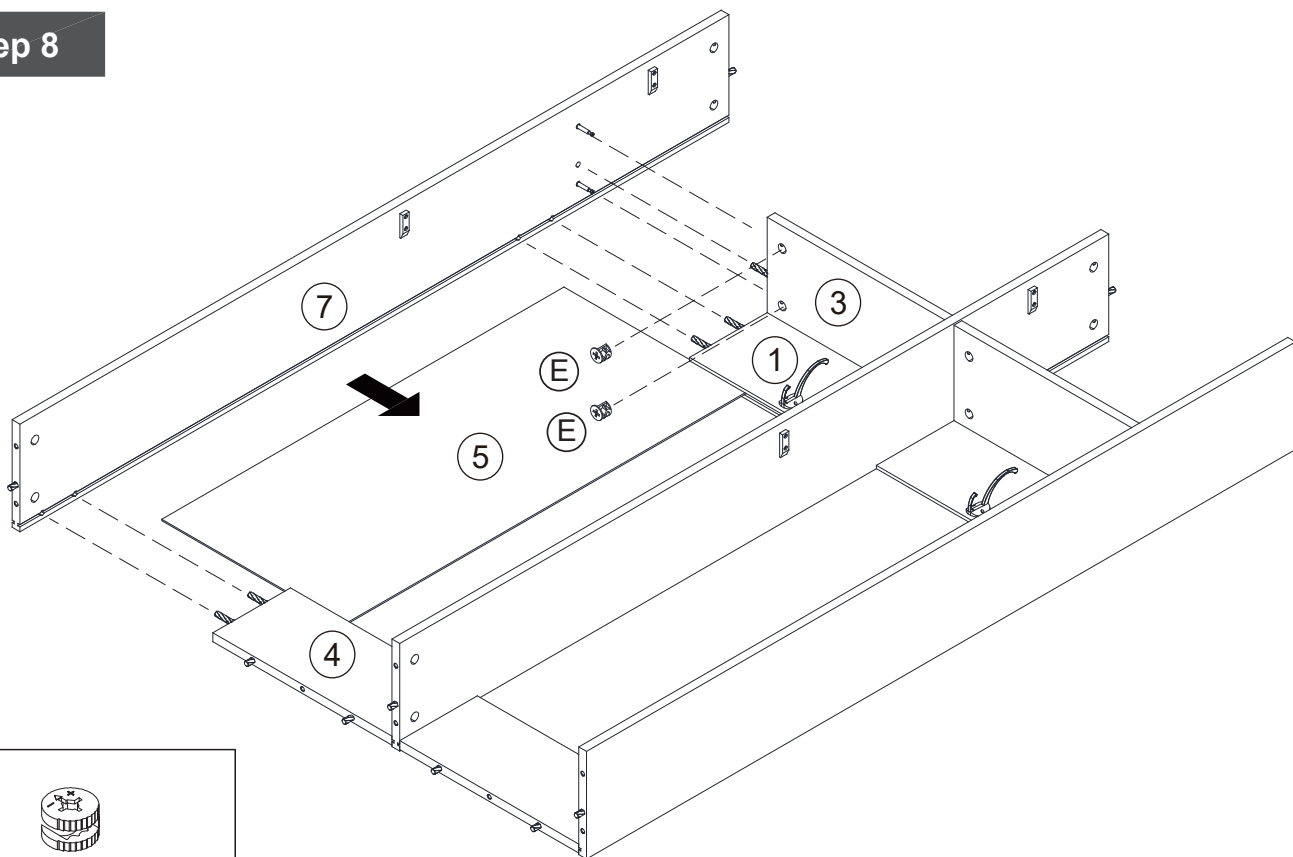


(E)



Cam lock x 2

Step 9

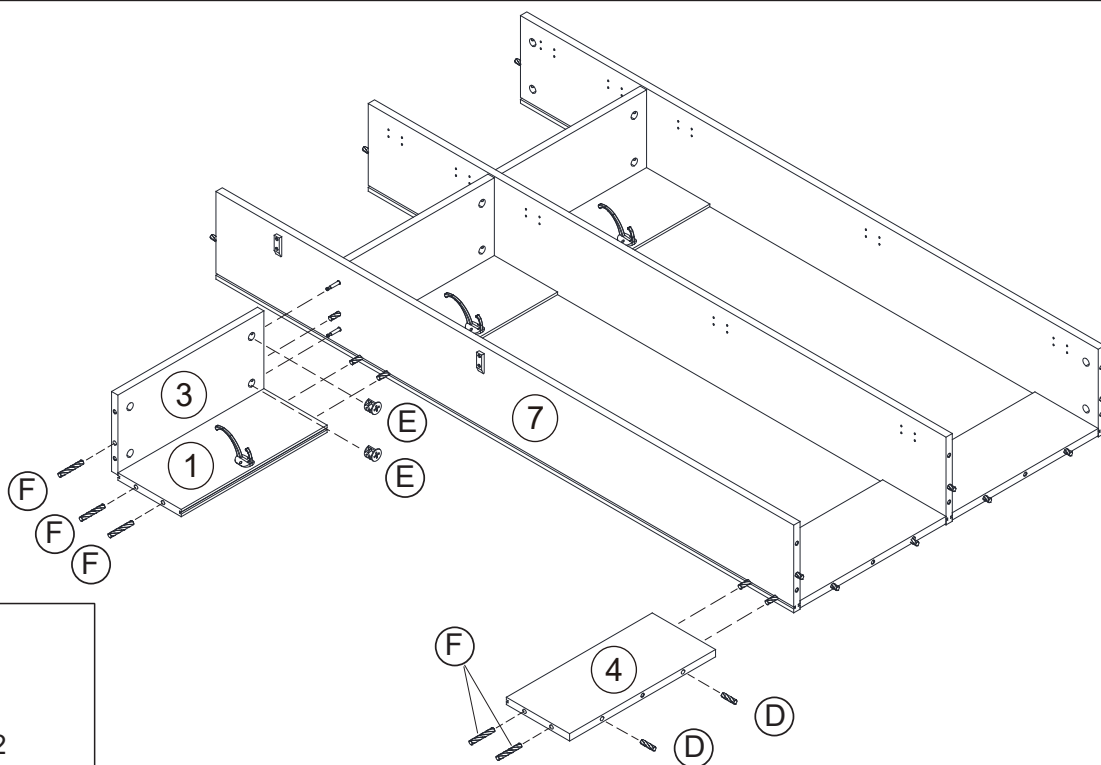

(D)



6*30mm Dowel x 2

(E)



Cam lock x 2


(F)



6*50mm Dowel x 5

Assembly Instructions

Step 10

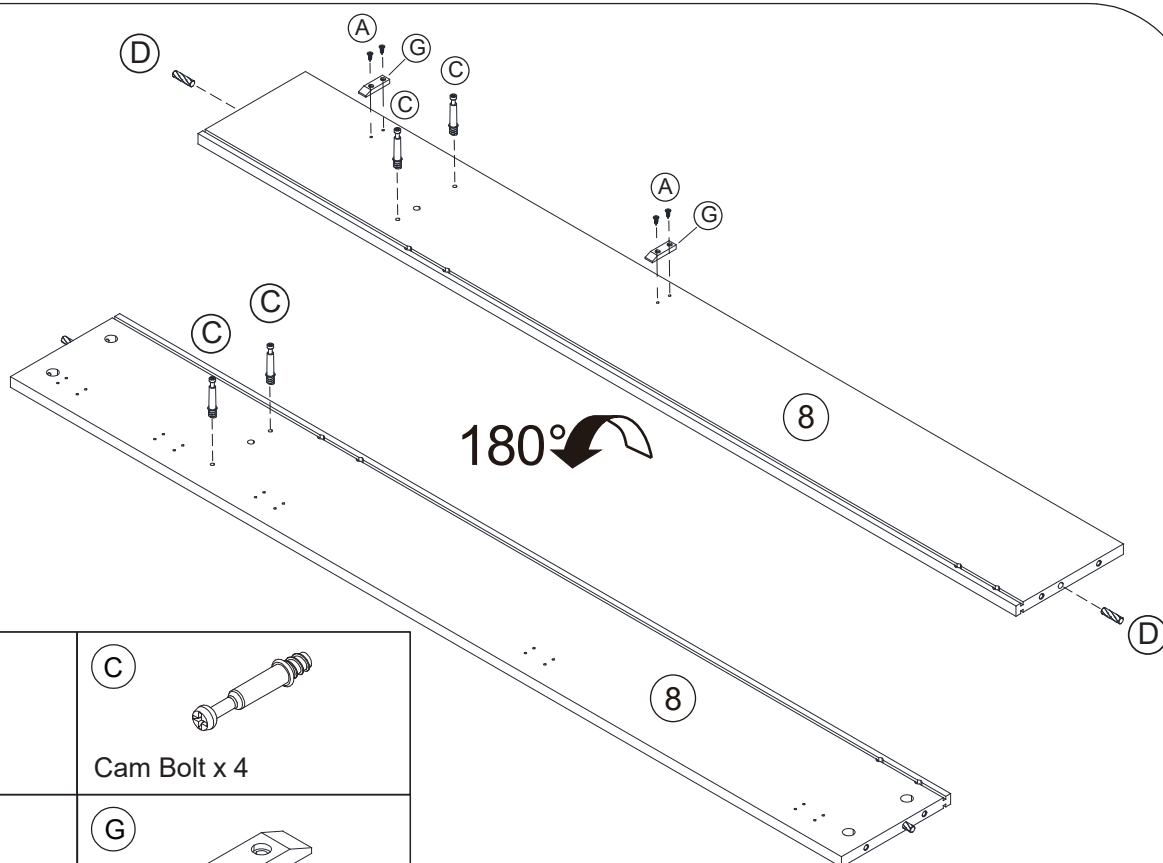


(A)



4*14mm Screw x 4

(C)




Cam Bolt x 4

(D)




6*30mm Dowel x 2

(G)



x 2

Step 11

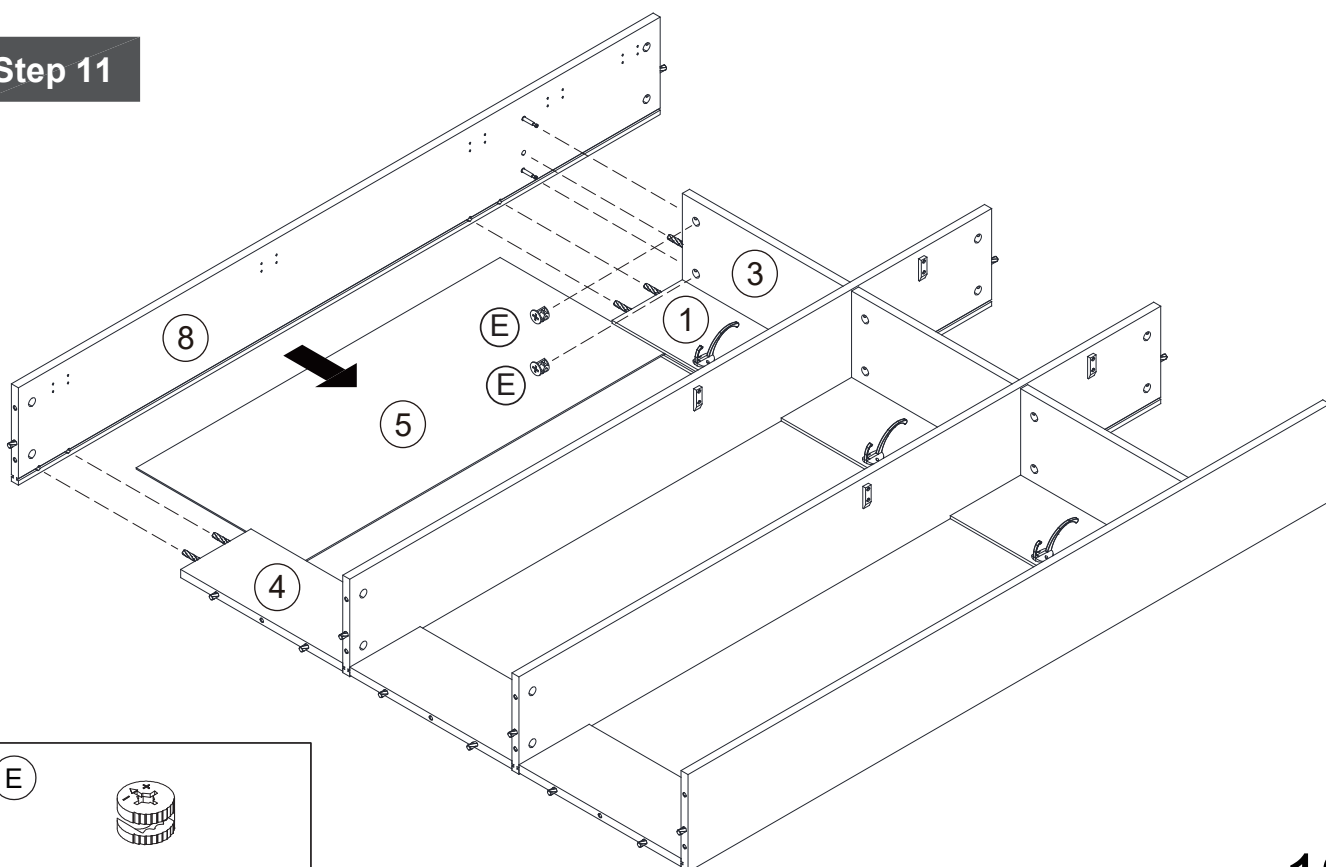


(E)




Cam lock x 2

Assembly Instructions

Step 12

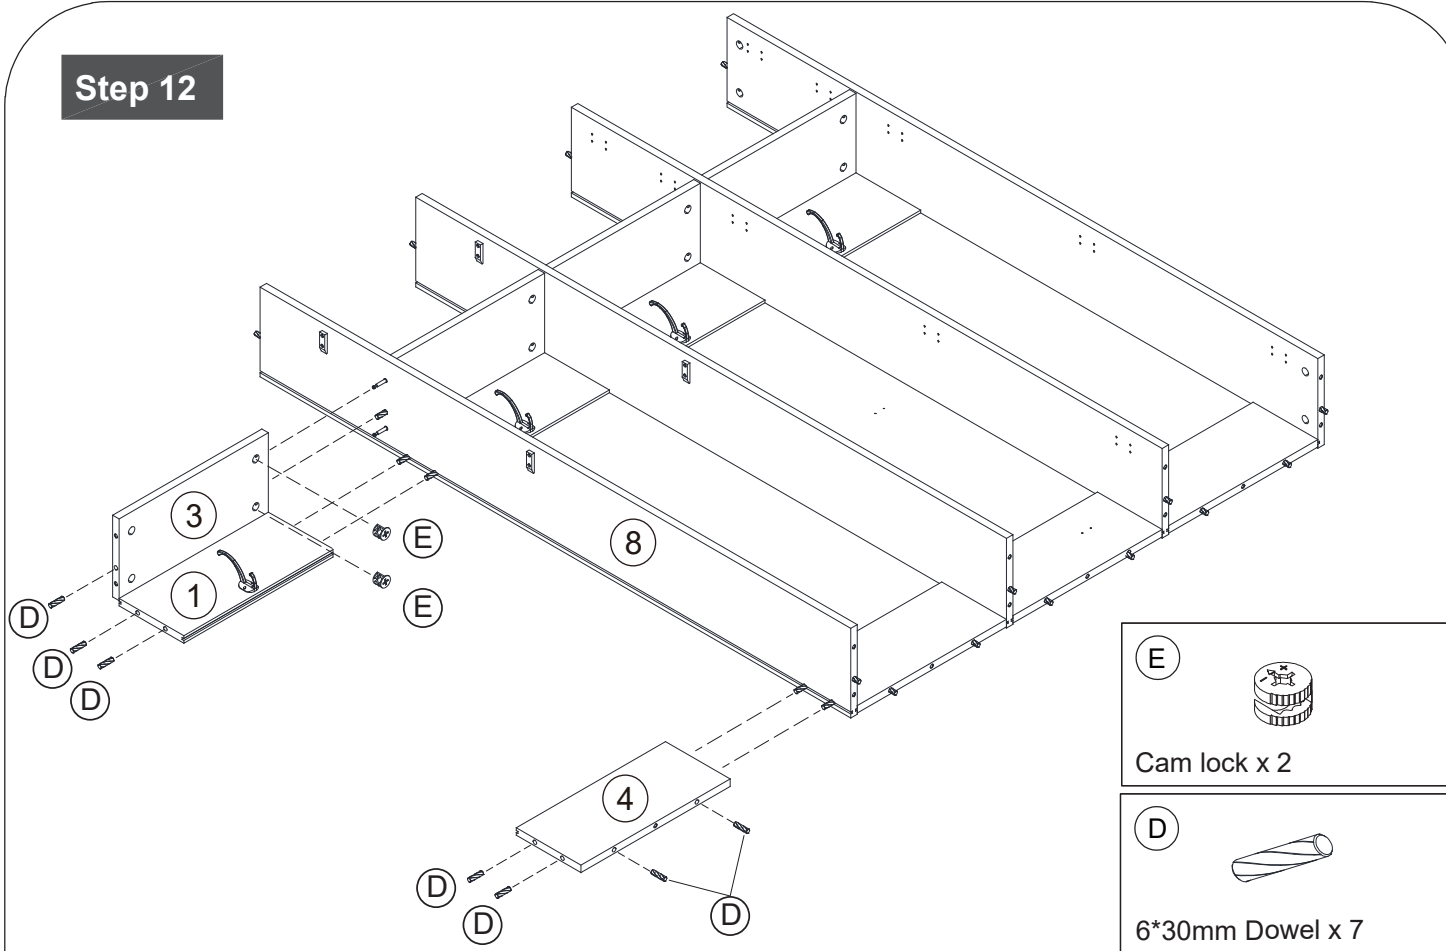


Step 13

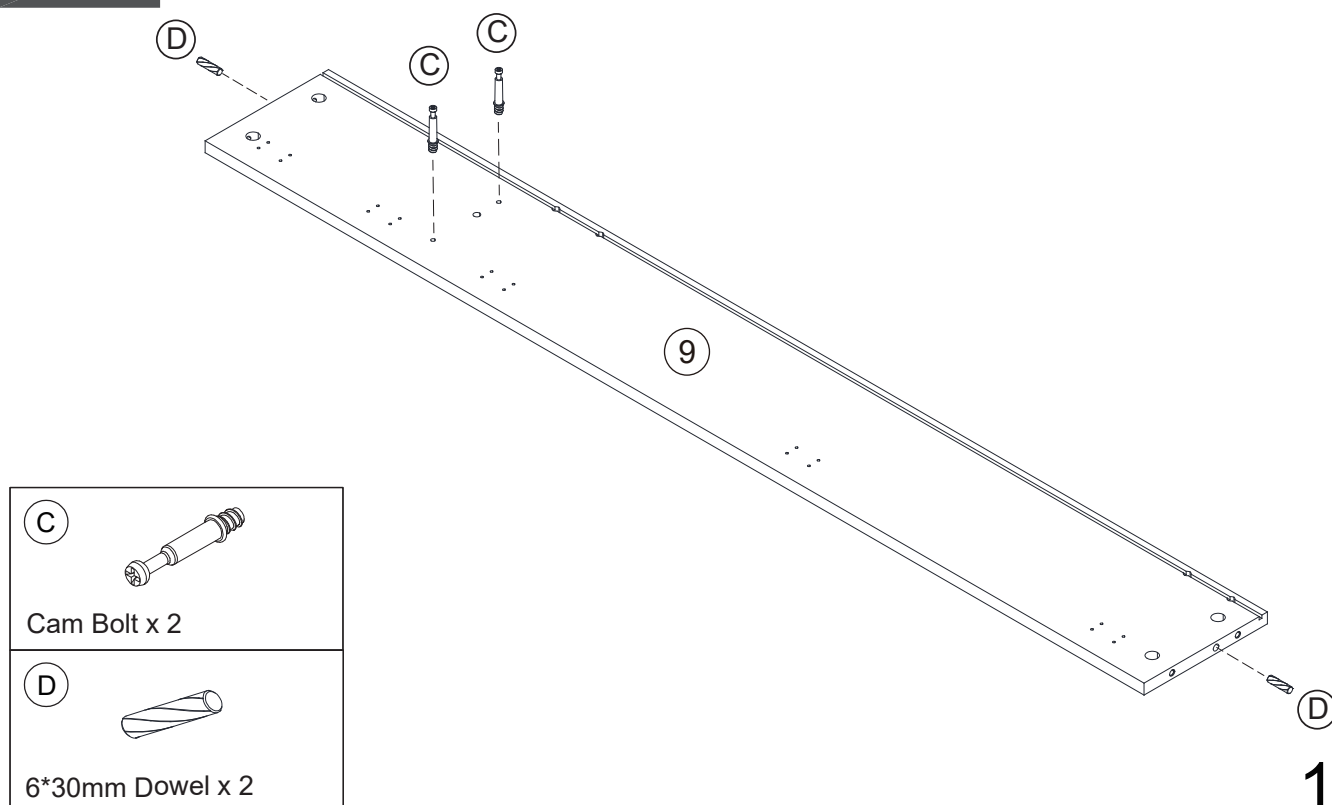


Assembly Instructions

Step 14

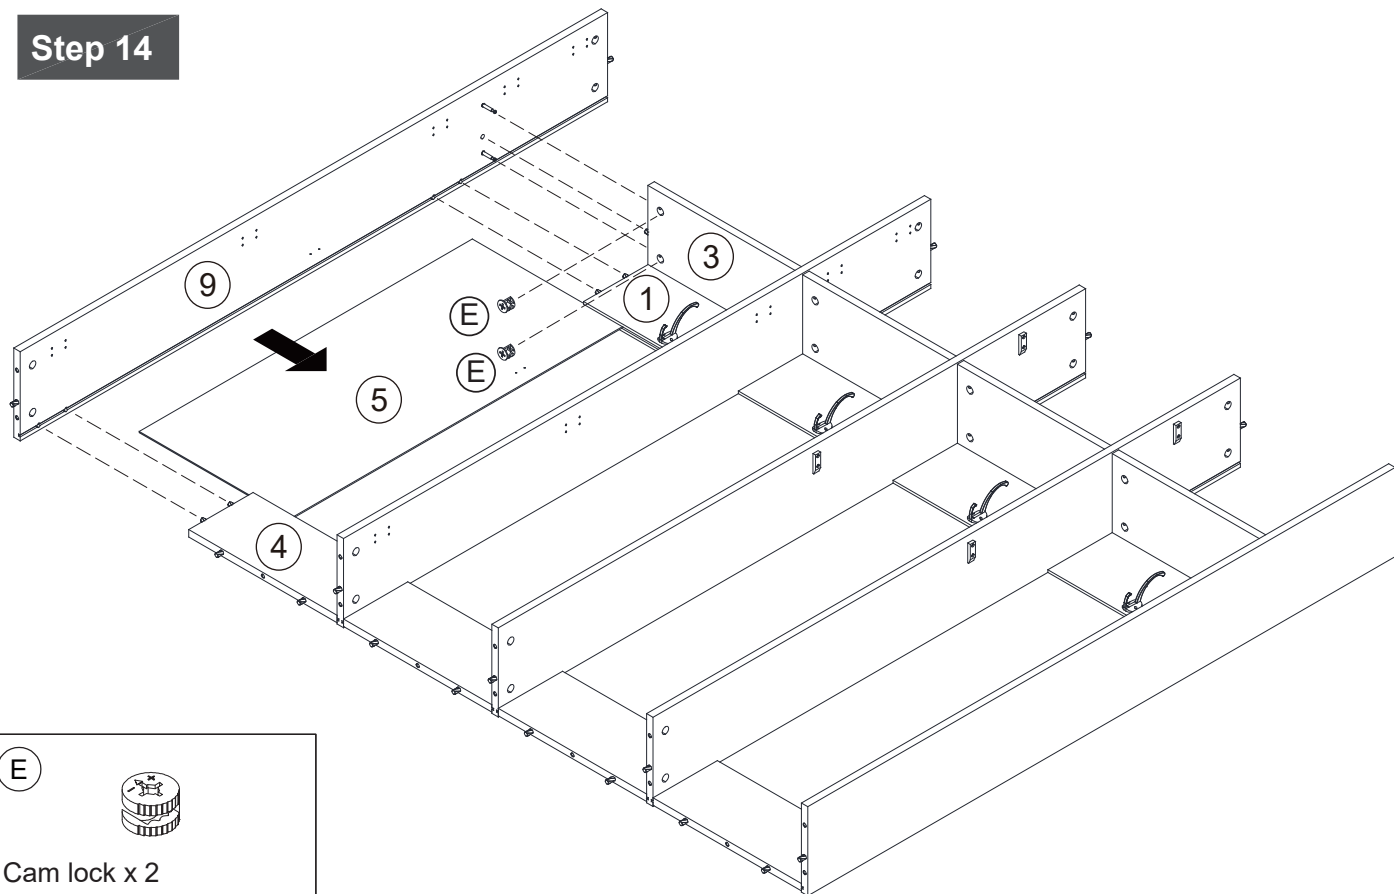


Step 15

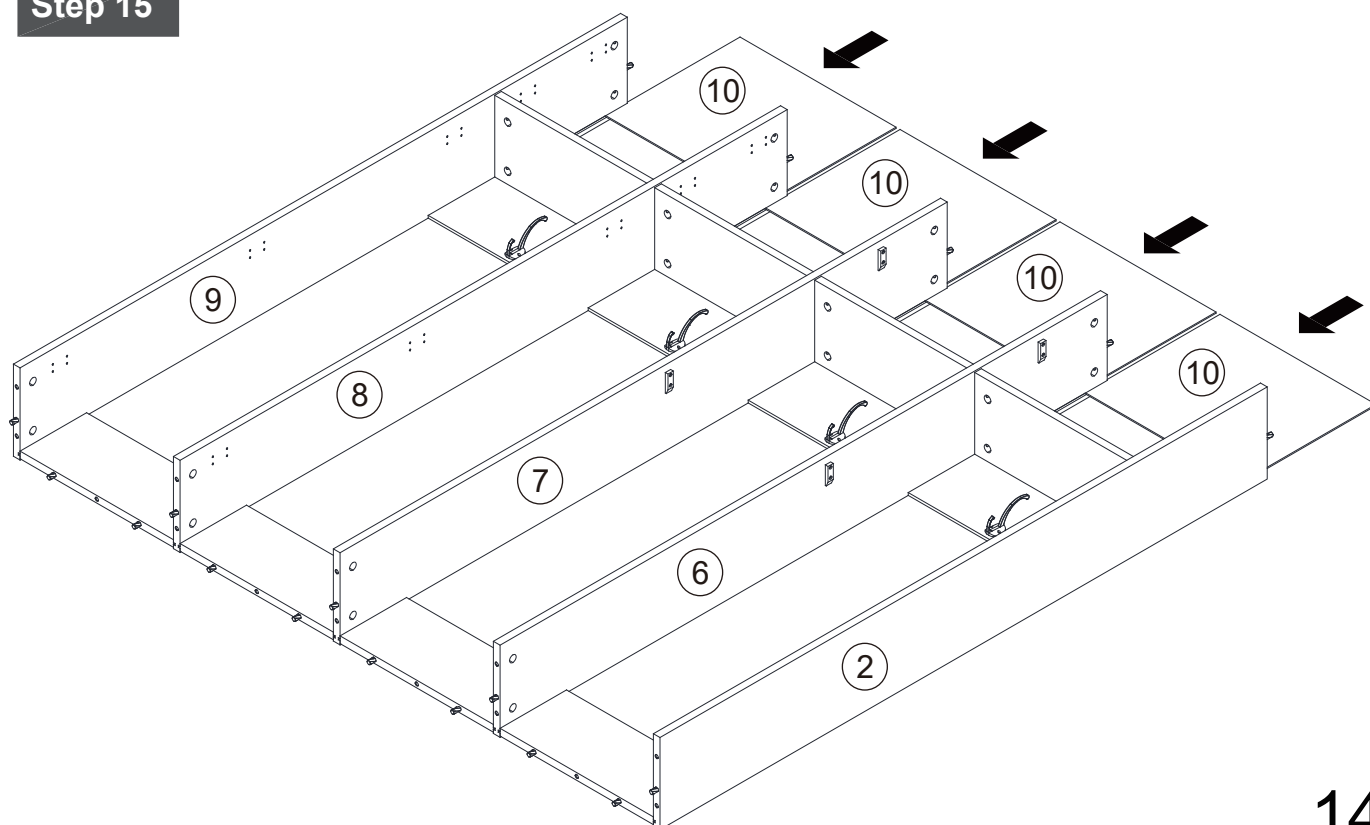


Assembly Instructions

Step 16

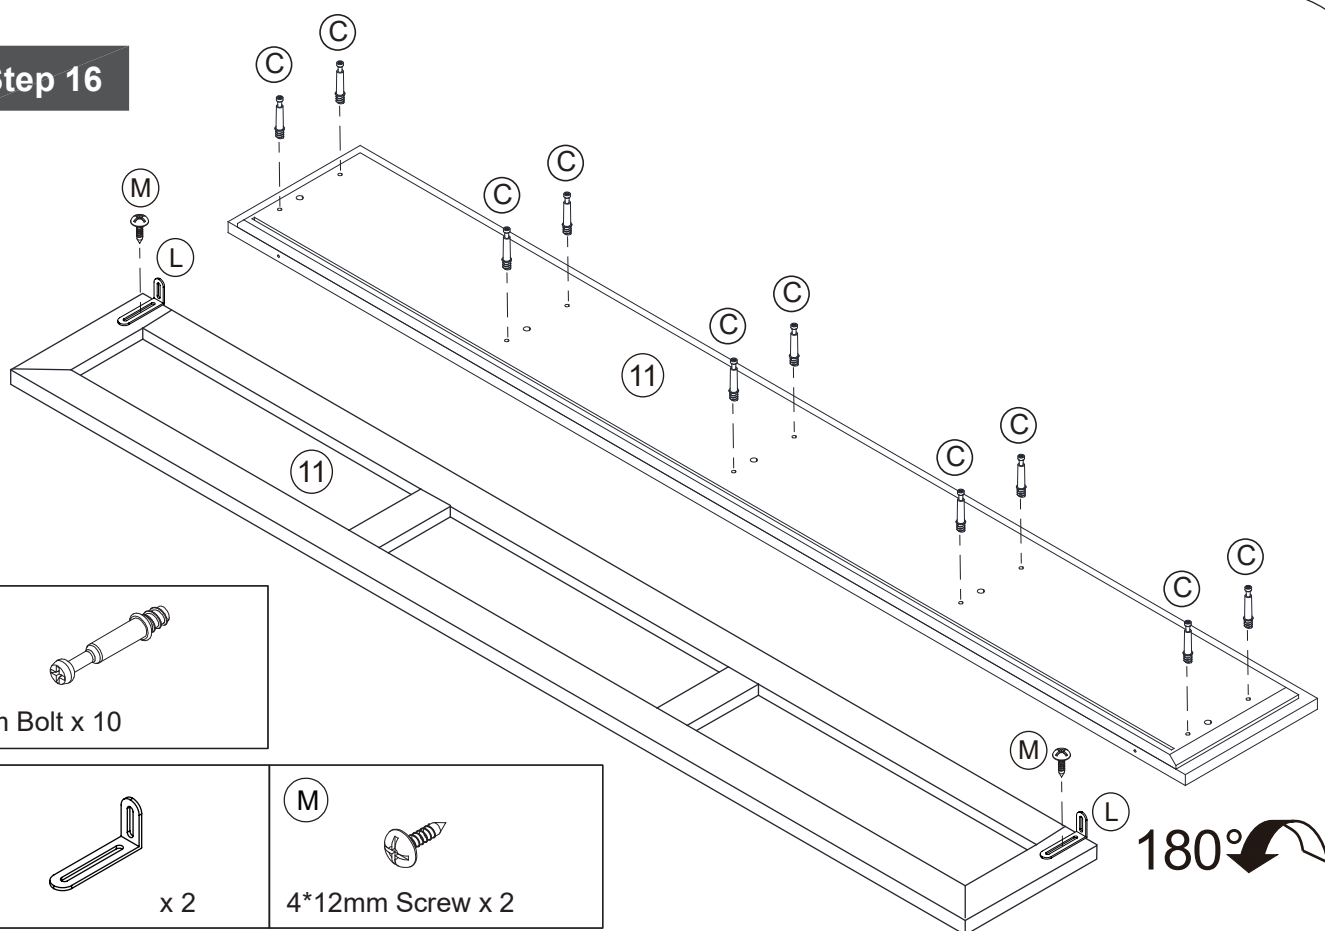


Step 17

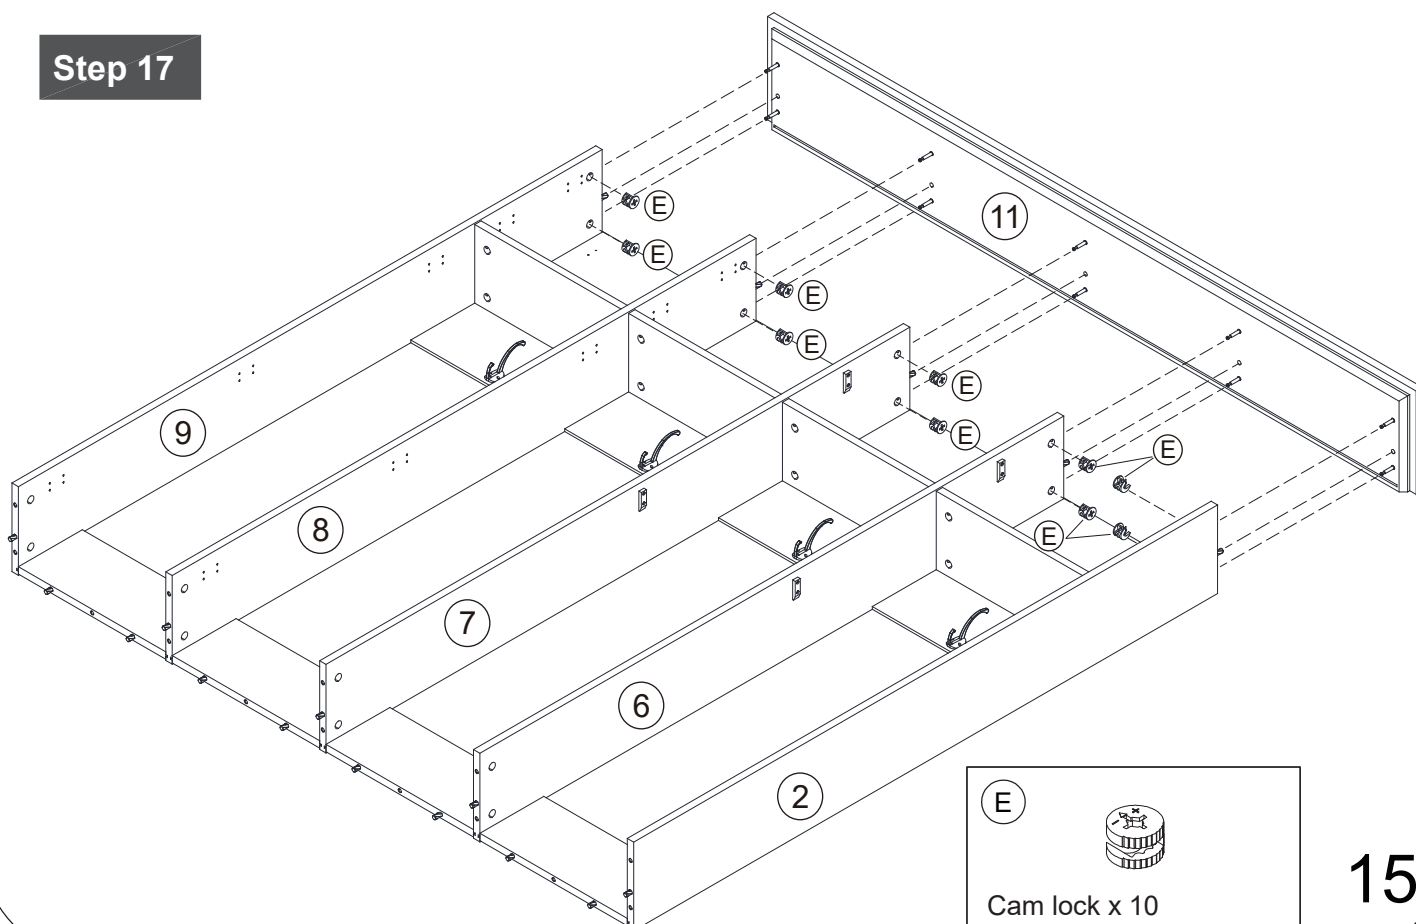


Assembly Instructions

Step 18

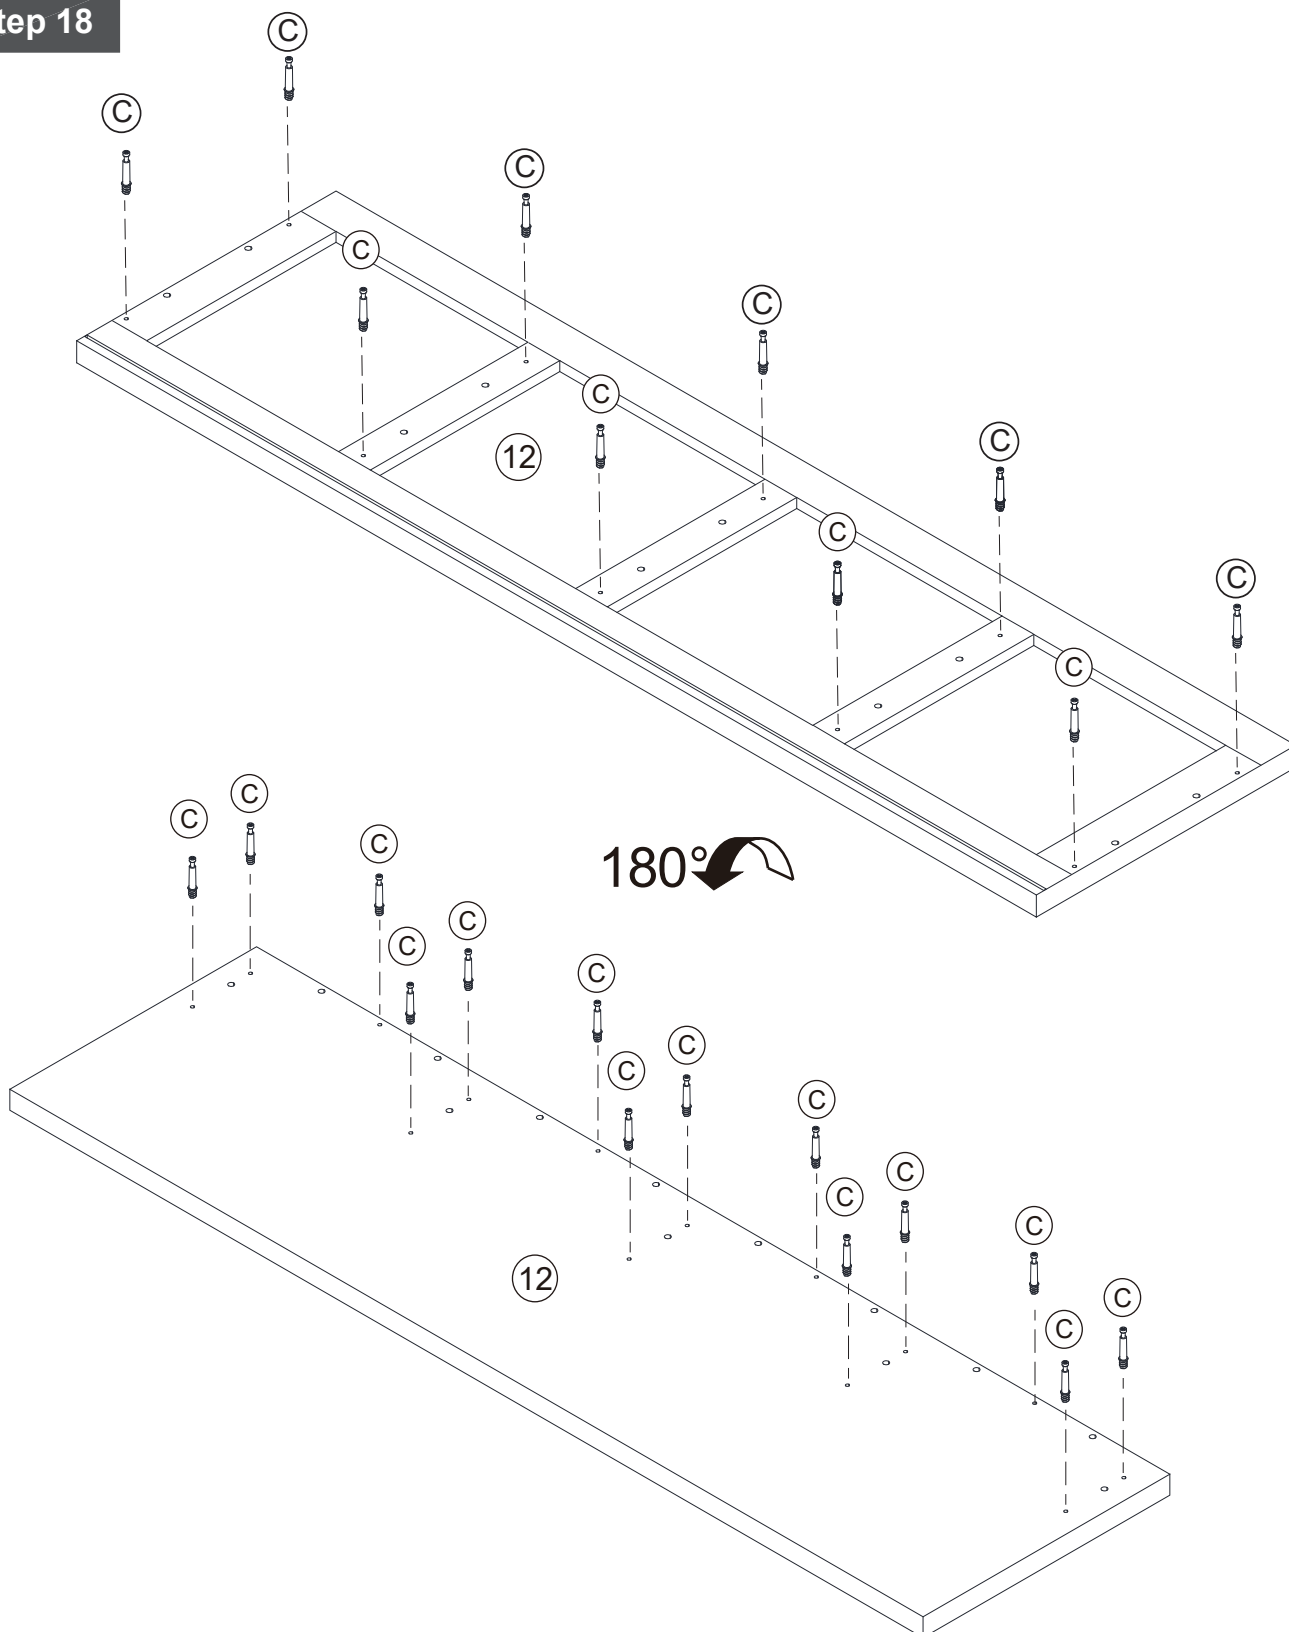


C



Cam Bolt x 24

Assembly Instructions

Step 19

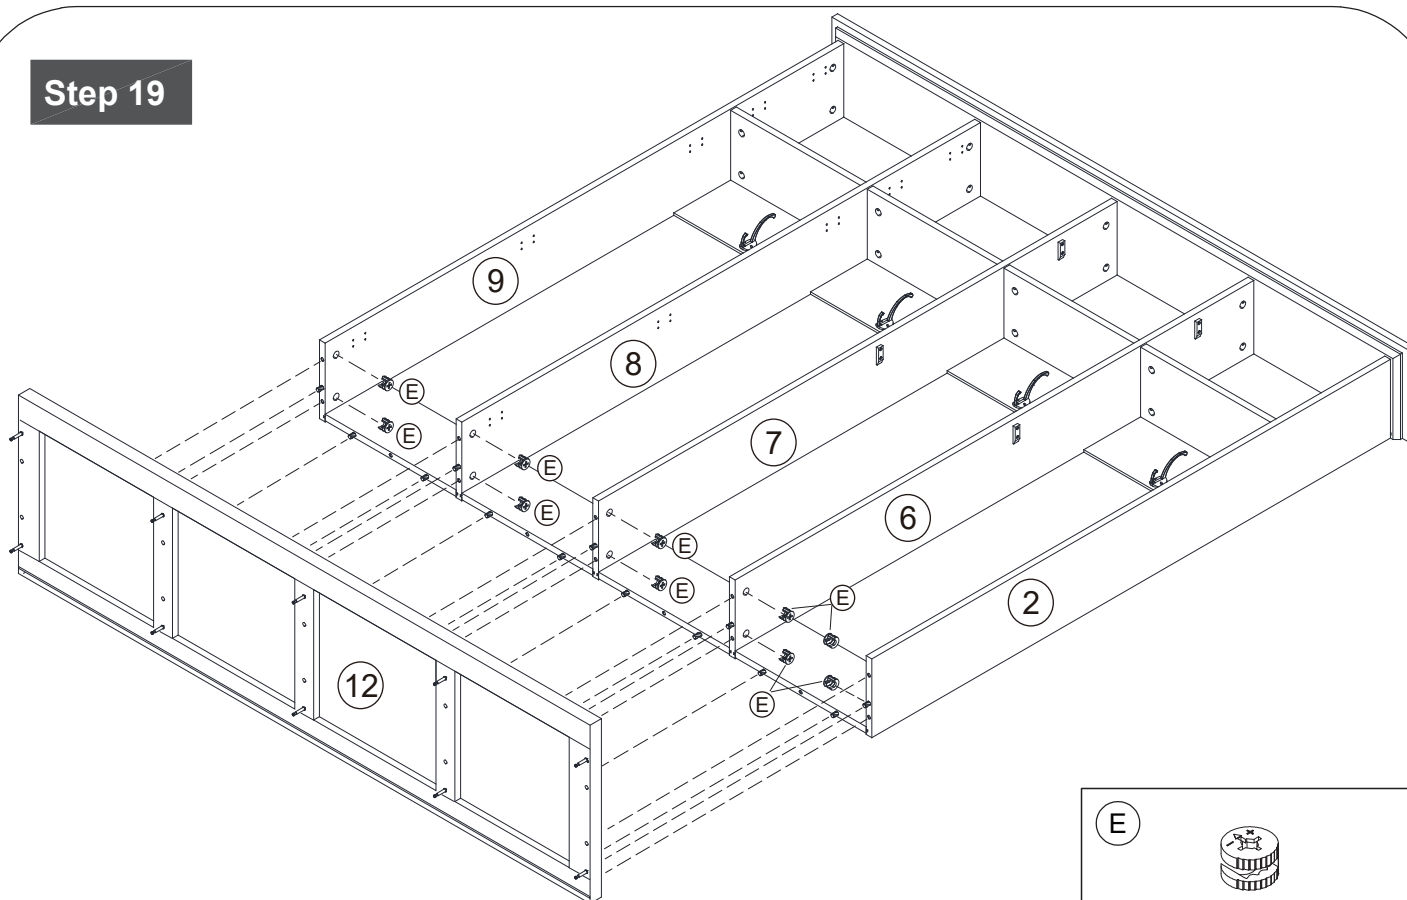


E



Cam lock x 10

Step 20

x4

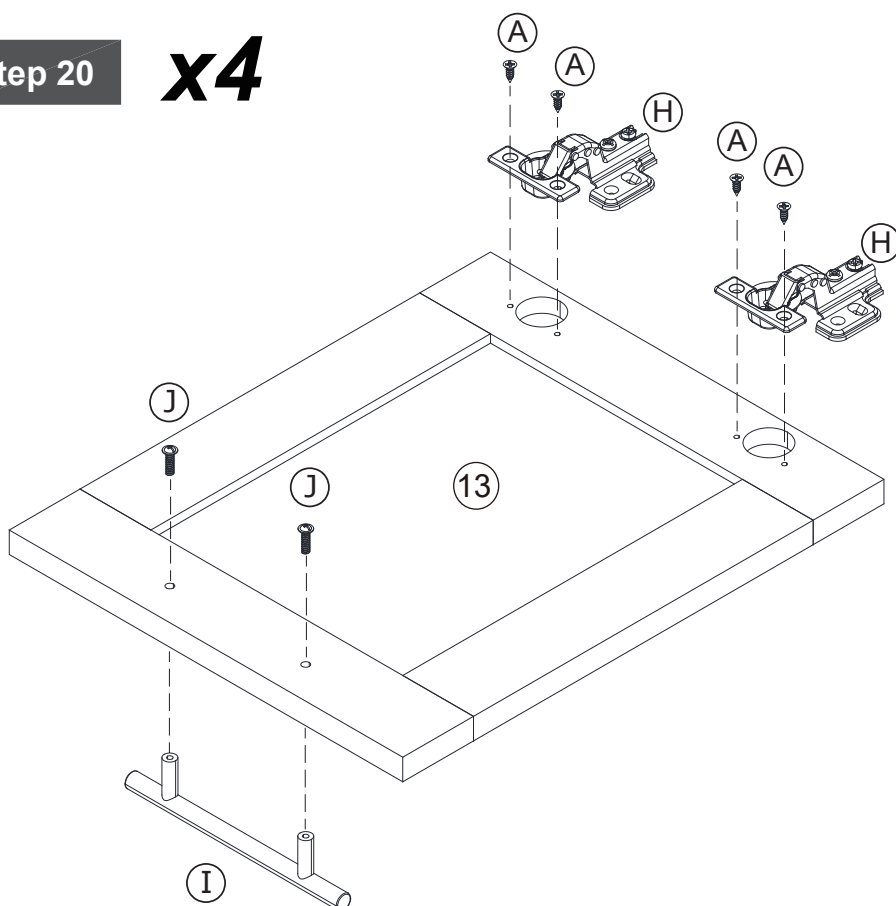


A




4*14mm Screw x 16

H



Hinge x 8

I



Handle x 4


J



4*20mm Screw x 8


Assembly Instructions

Step 21

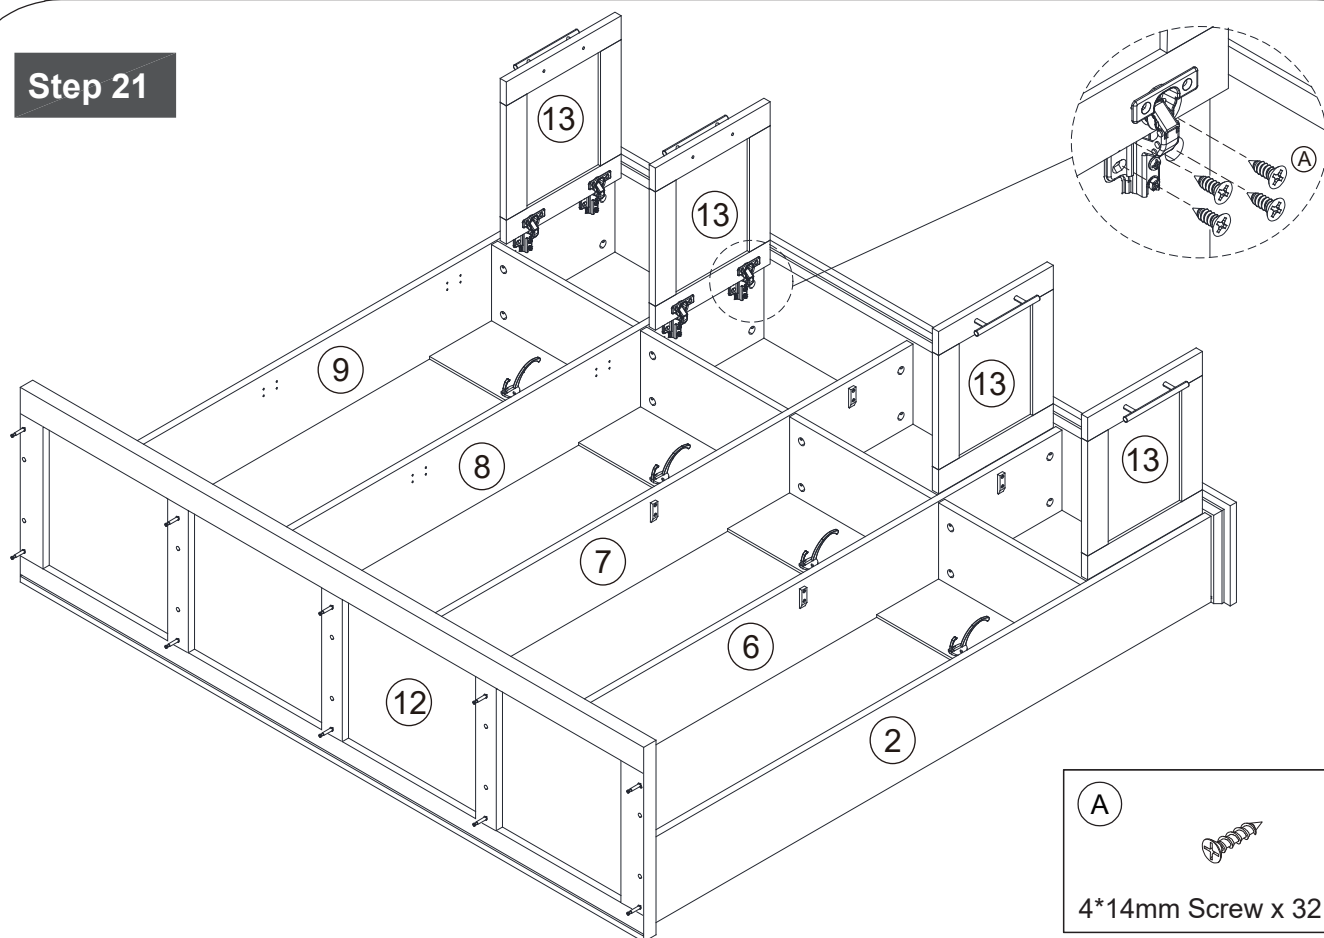



Step 22

x2

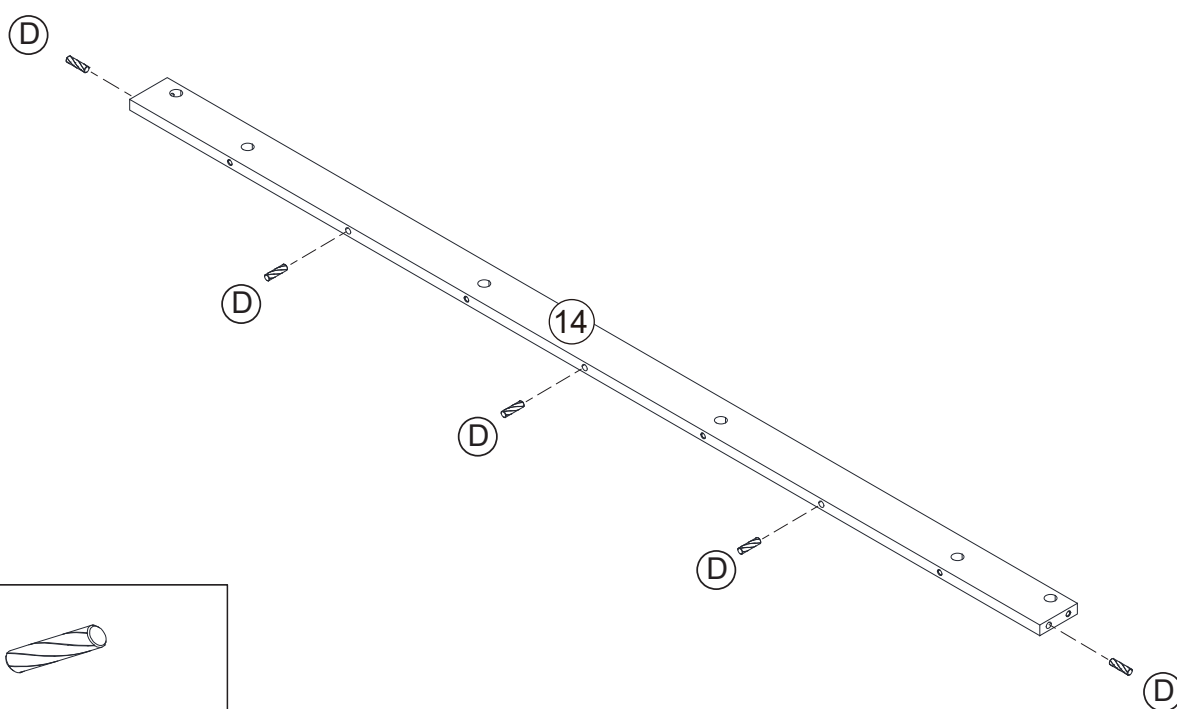

Assembly Instructions

Step 23

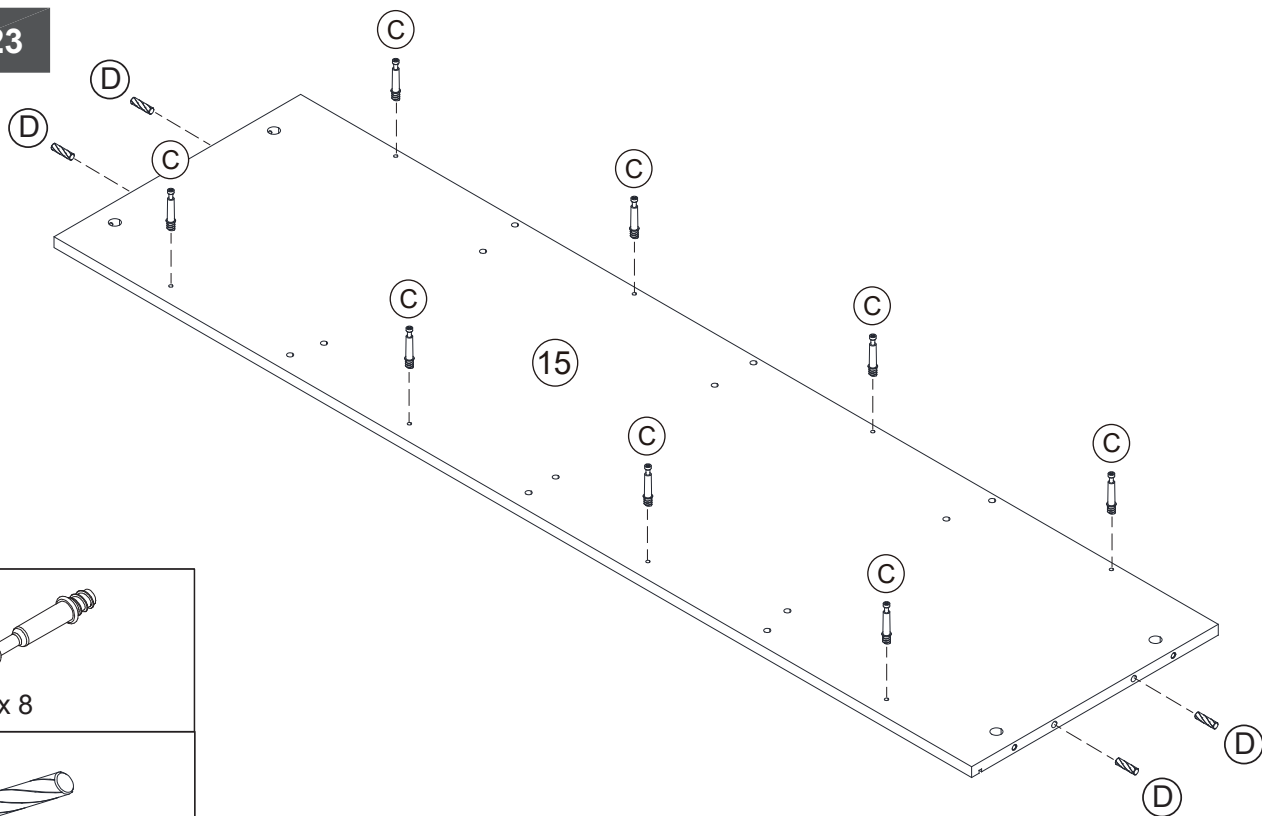


Cam Bolt x 8



6*30mm Dowel x 4


Step 24

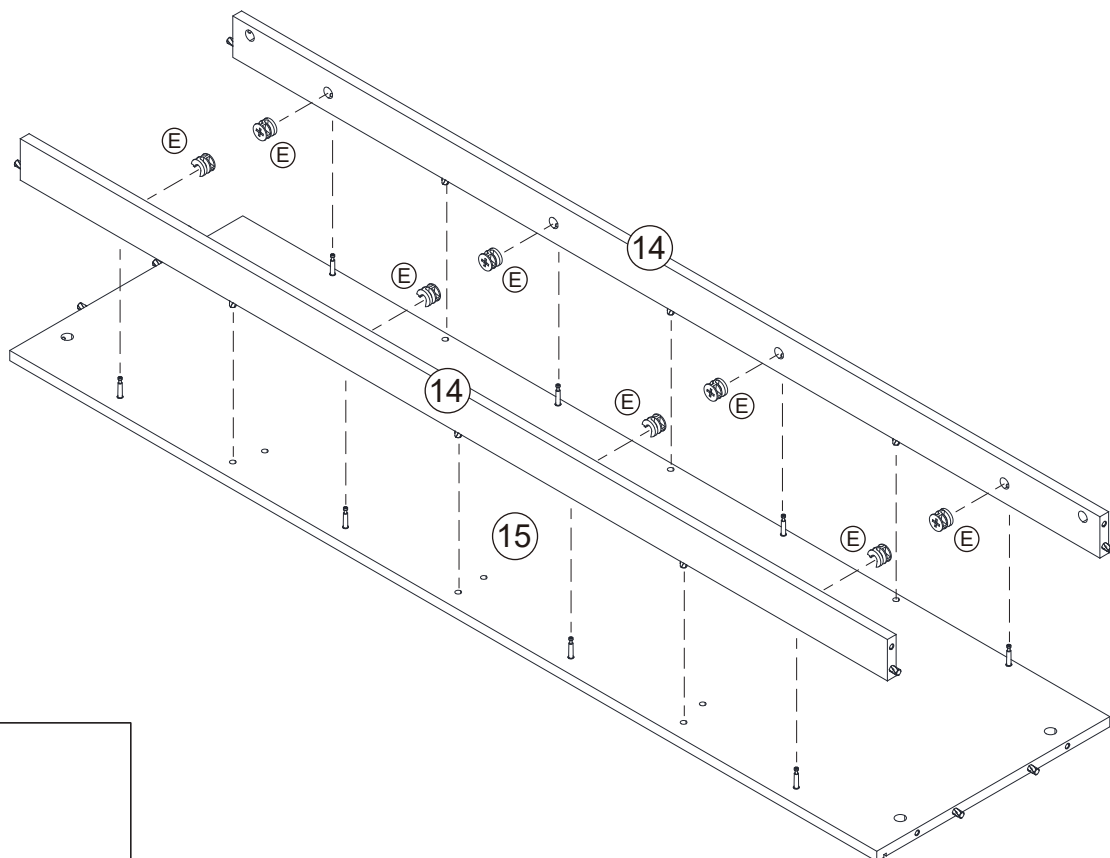



Cam lock x 8


Assembly Instructions



Step 25

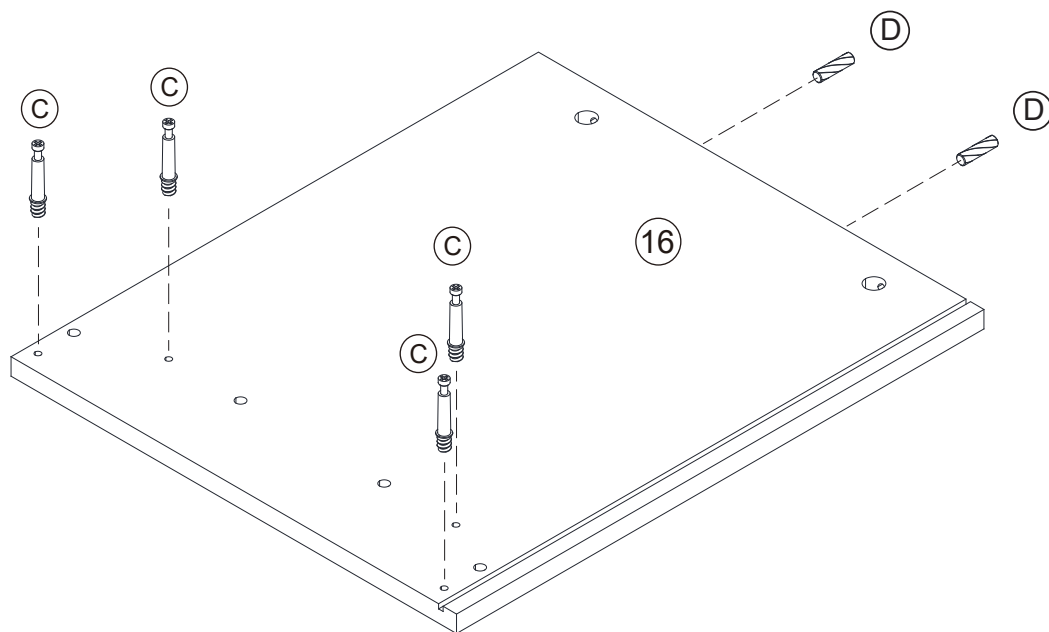

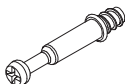	
Cam Bolt x 4	6*30mm Dowel x 2


Step 26

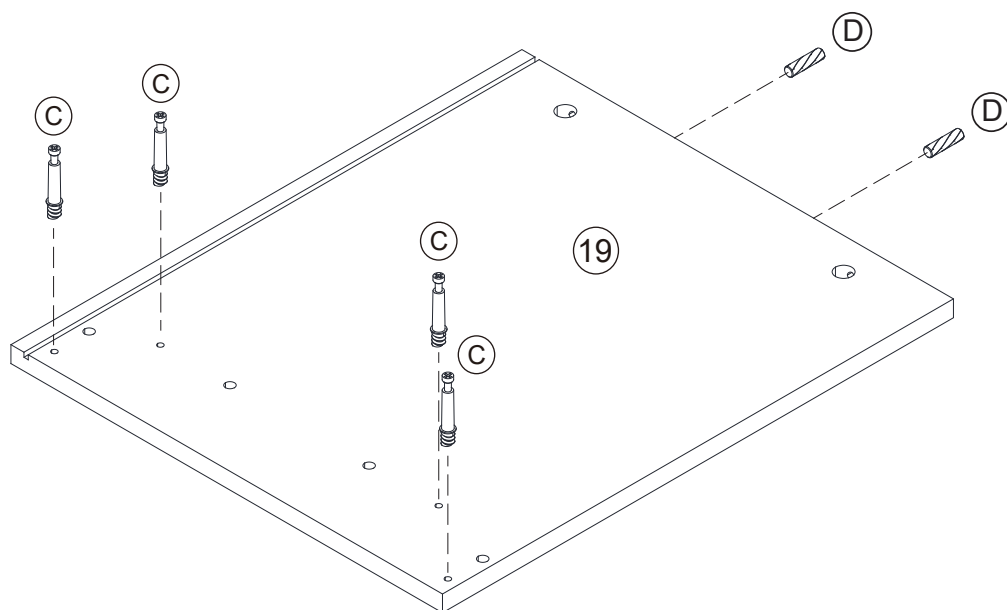

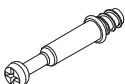	
Cam Bolt x 4	6*30mm Dowel x 2

Assembly Instructions

Step 27

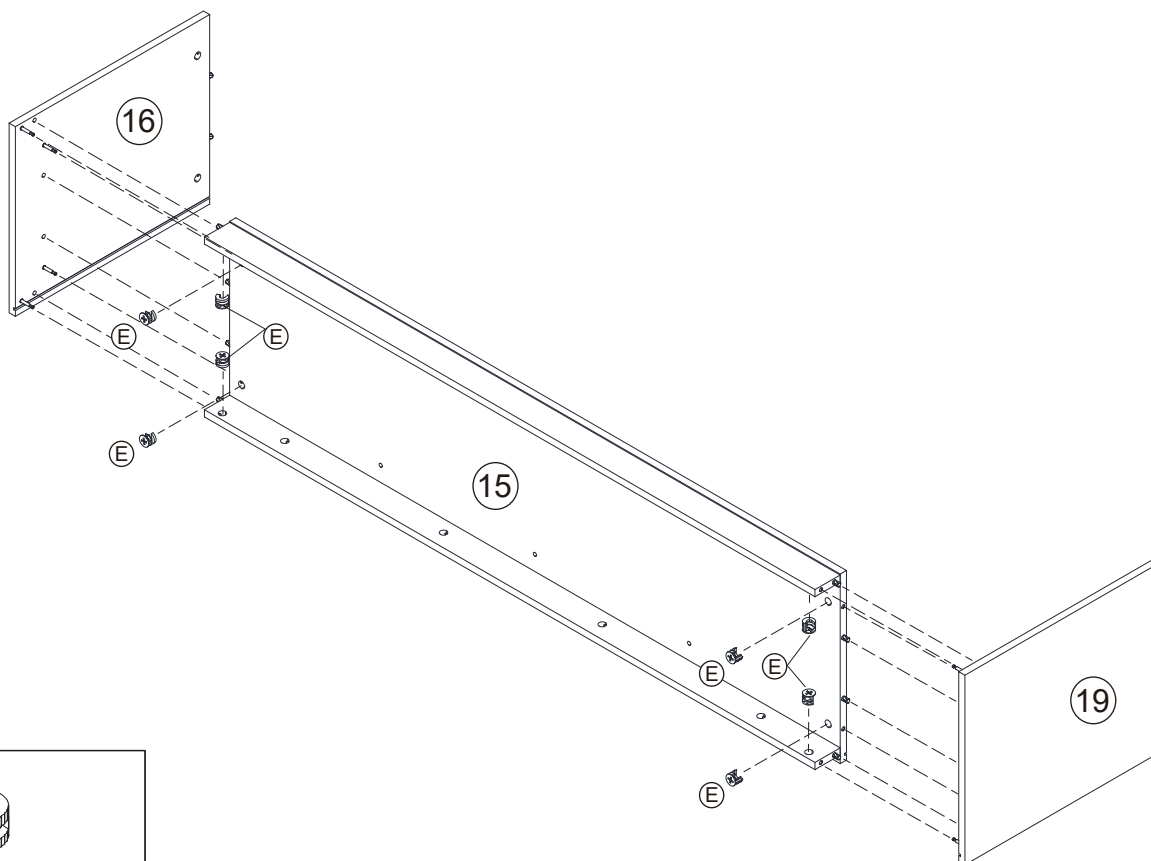


E



Cam lock x 8

Step 28

x3

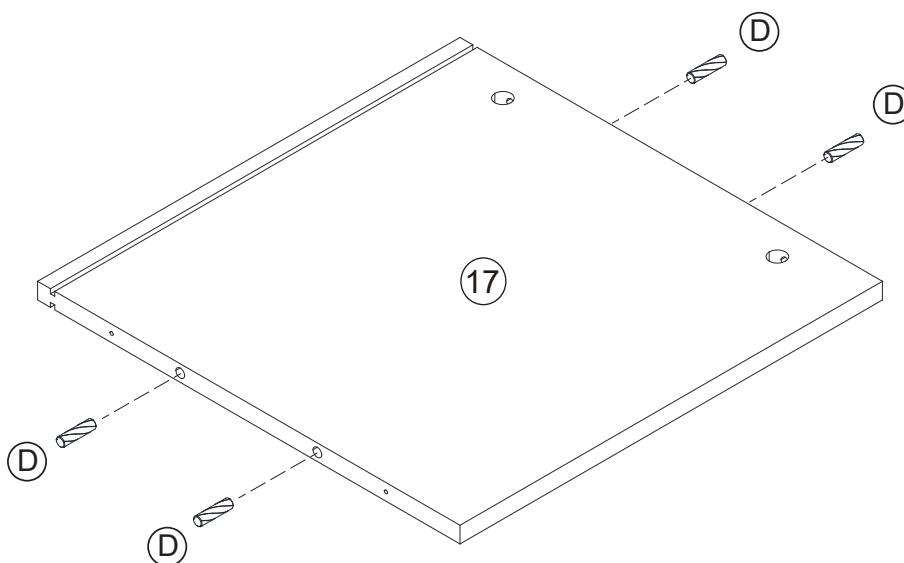


D



6*30mm Dowel x 12

Assembly Instructions

Step 29

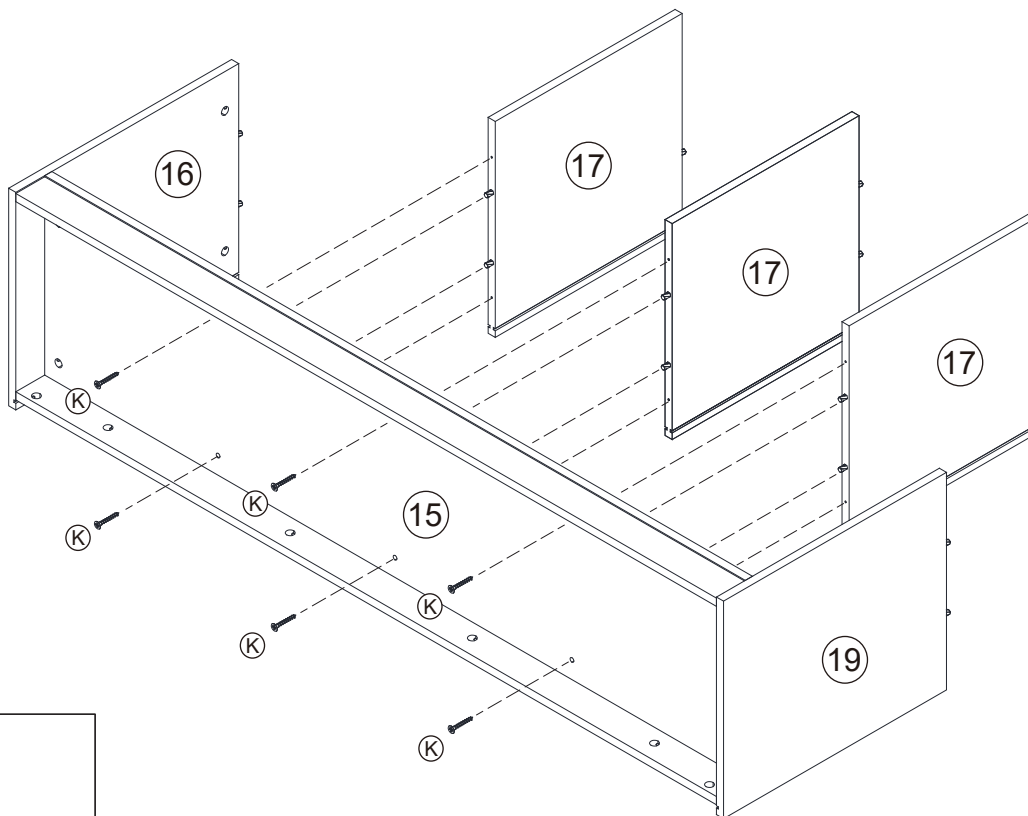


(K)




4*35mm Screw x 6

Step 30

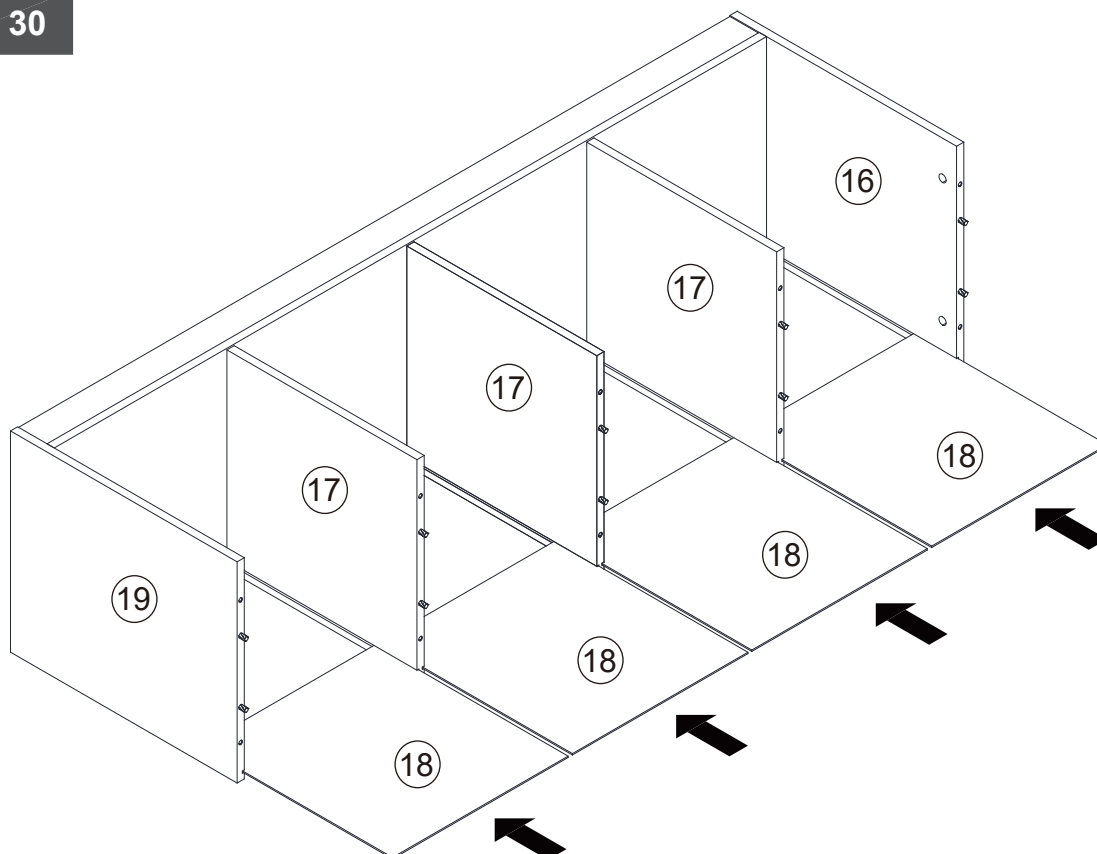

Assembly Instructions

Step 31

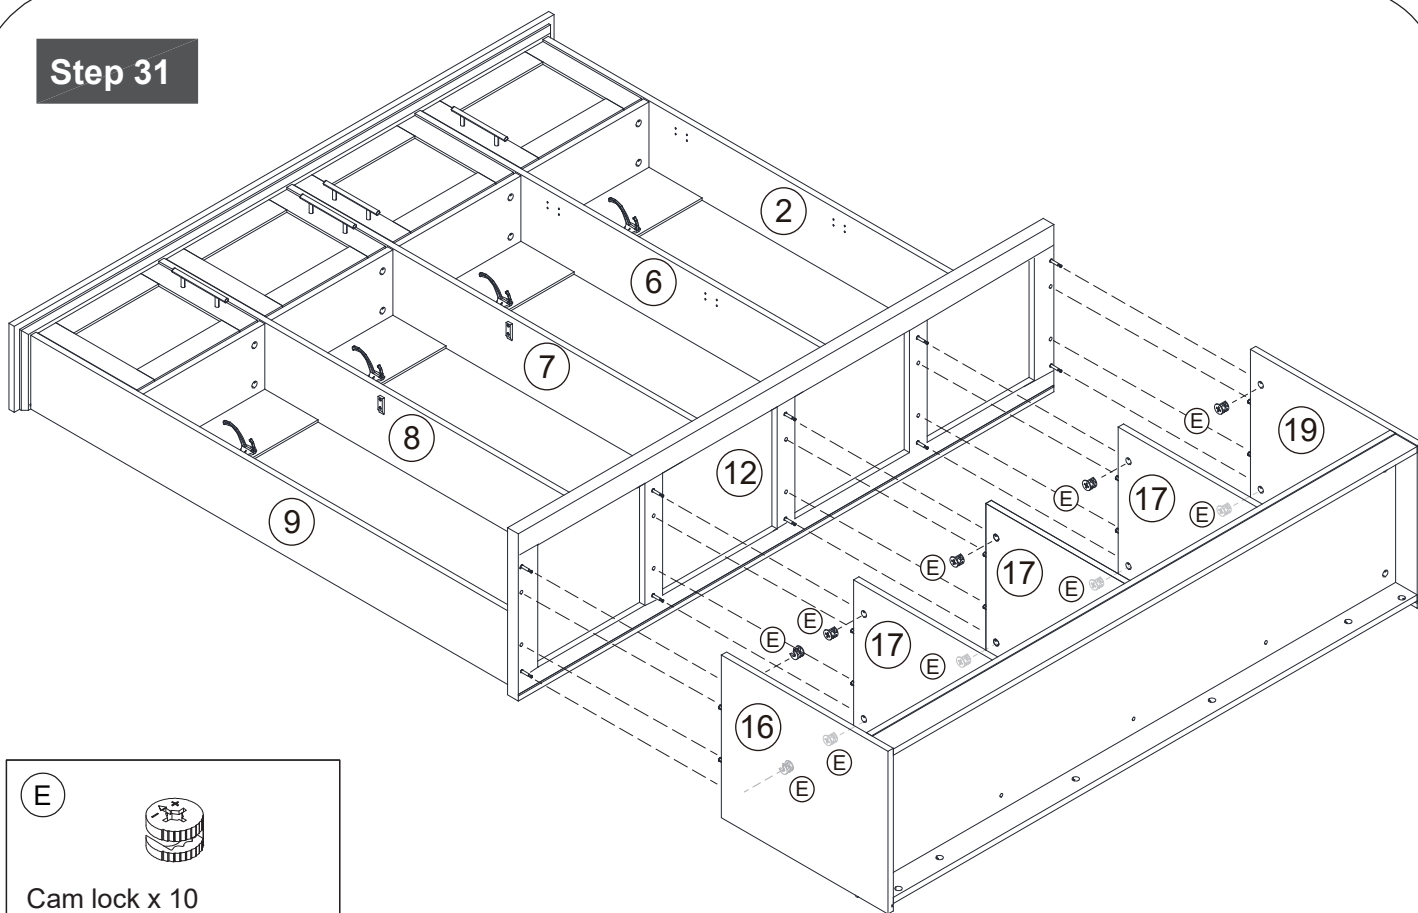


E



Cam lock x 10

Step 32

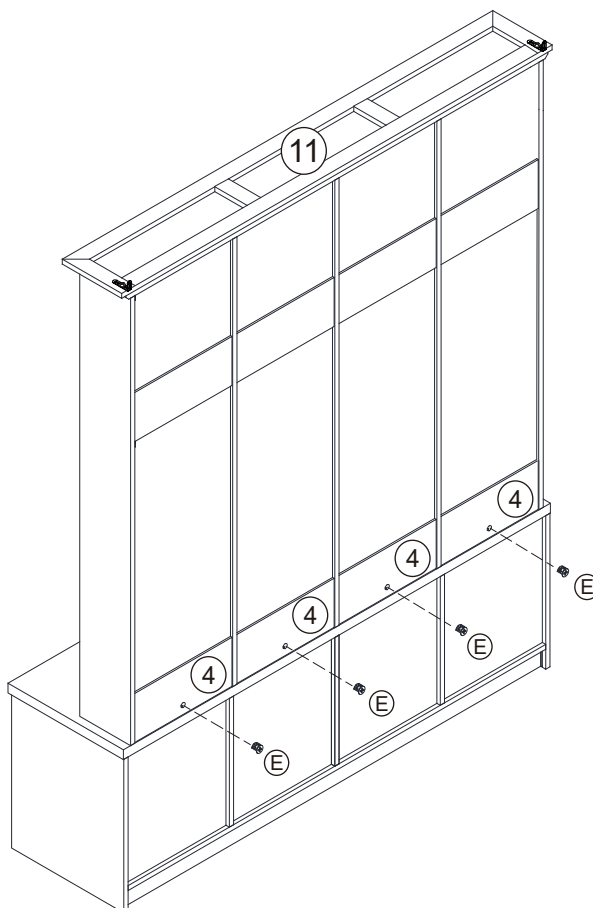


E



Cam lock x 4

Assembly Instructions

Step 33

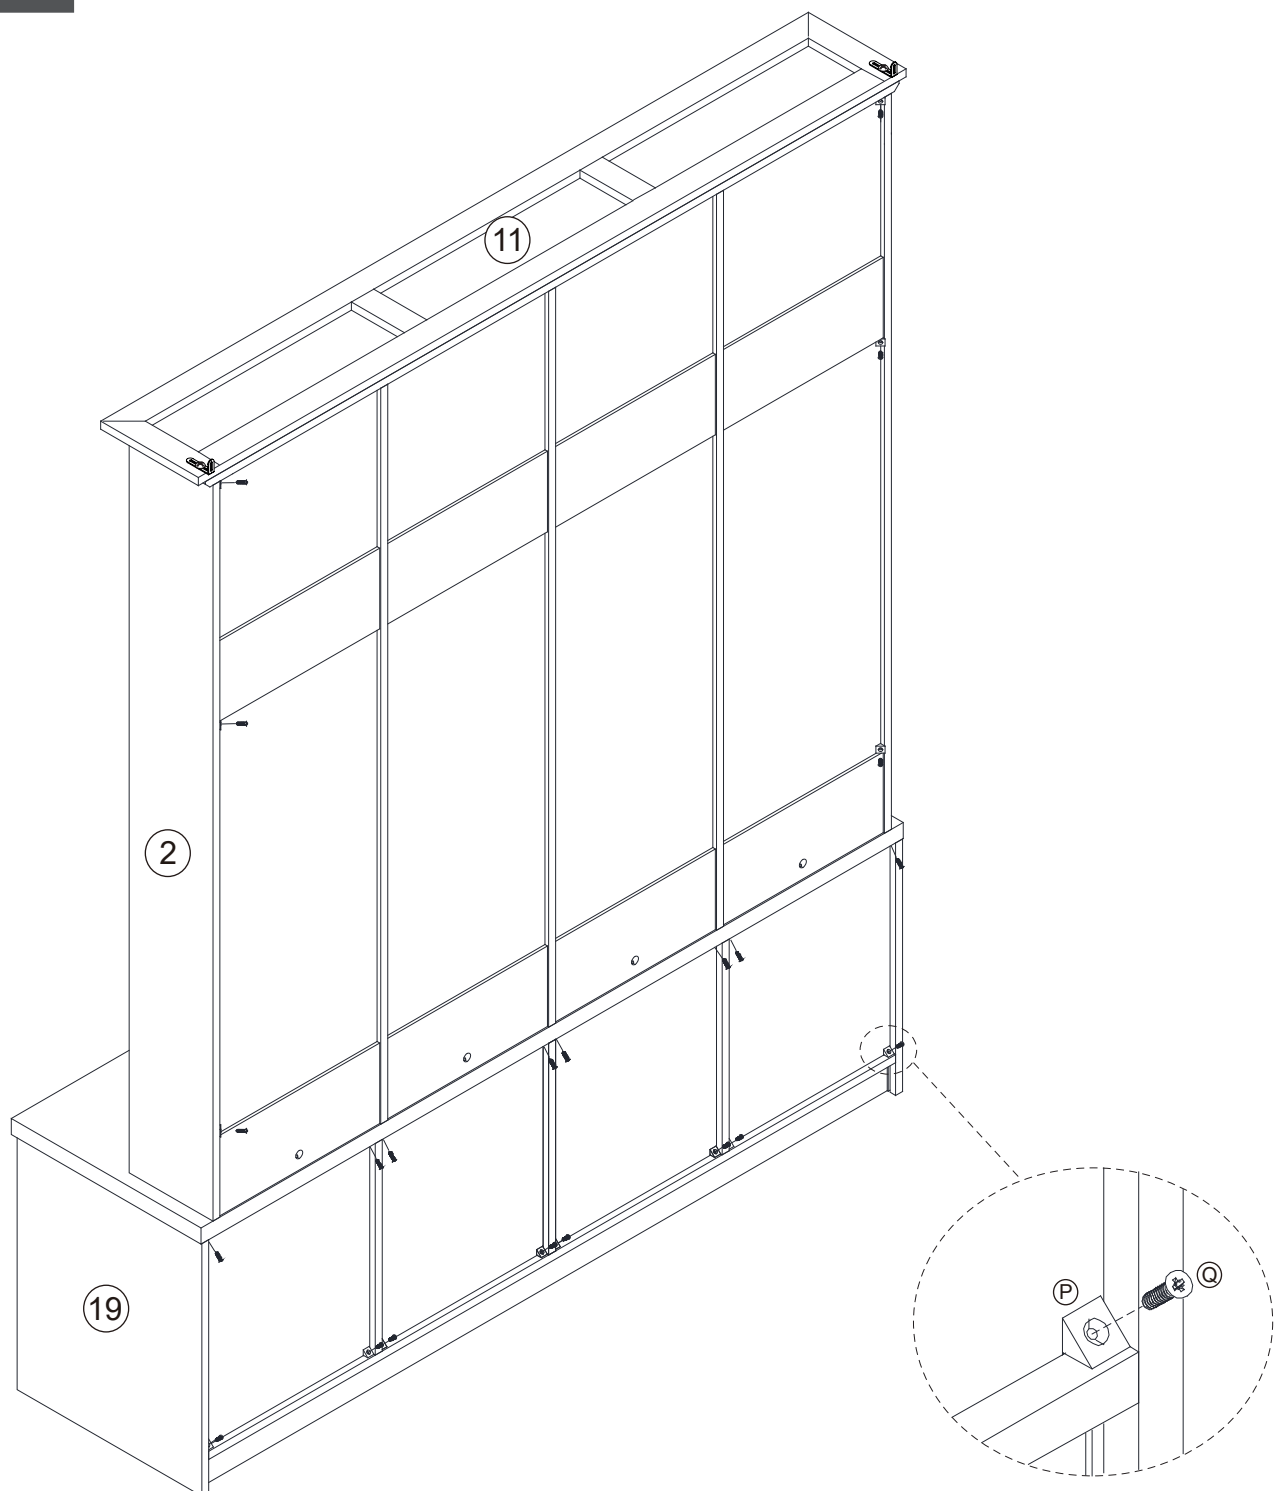

(P)



Back Panel Buckle x 22

(Q)




3*16mm Screw x 22

Assembly Instructions

Step 34

x4

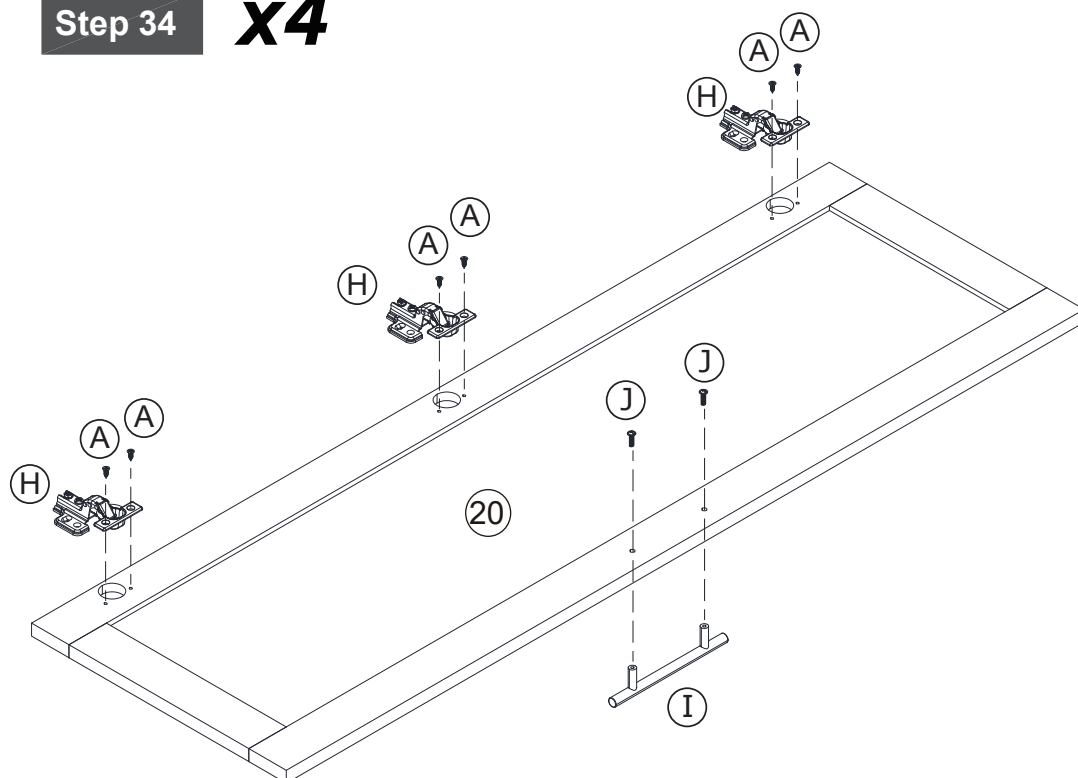


(A)




4*14mm Screw x 24

(H)



Hinge x 12

(I)








Handle x 4

(J)



4*20mm Screw x 8

Step 35

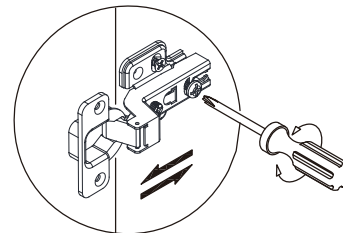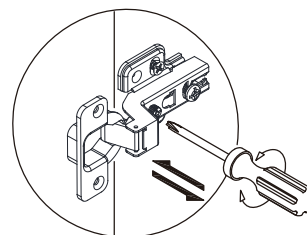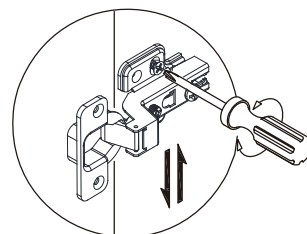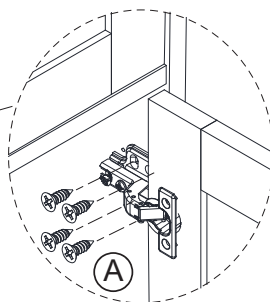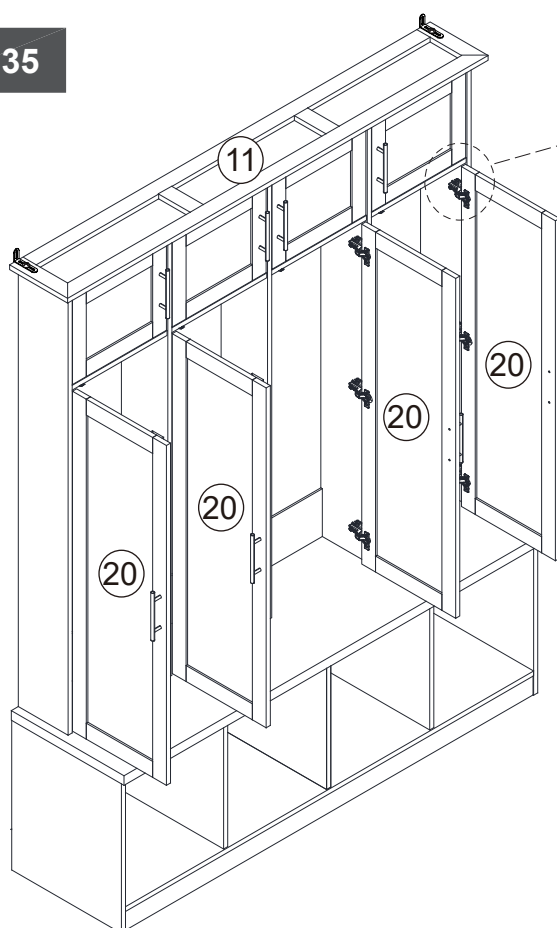

(A)




4*14mm Screw x 48

25


Assembly Instructions

Step 36


WALL

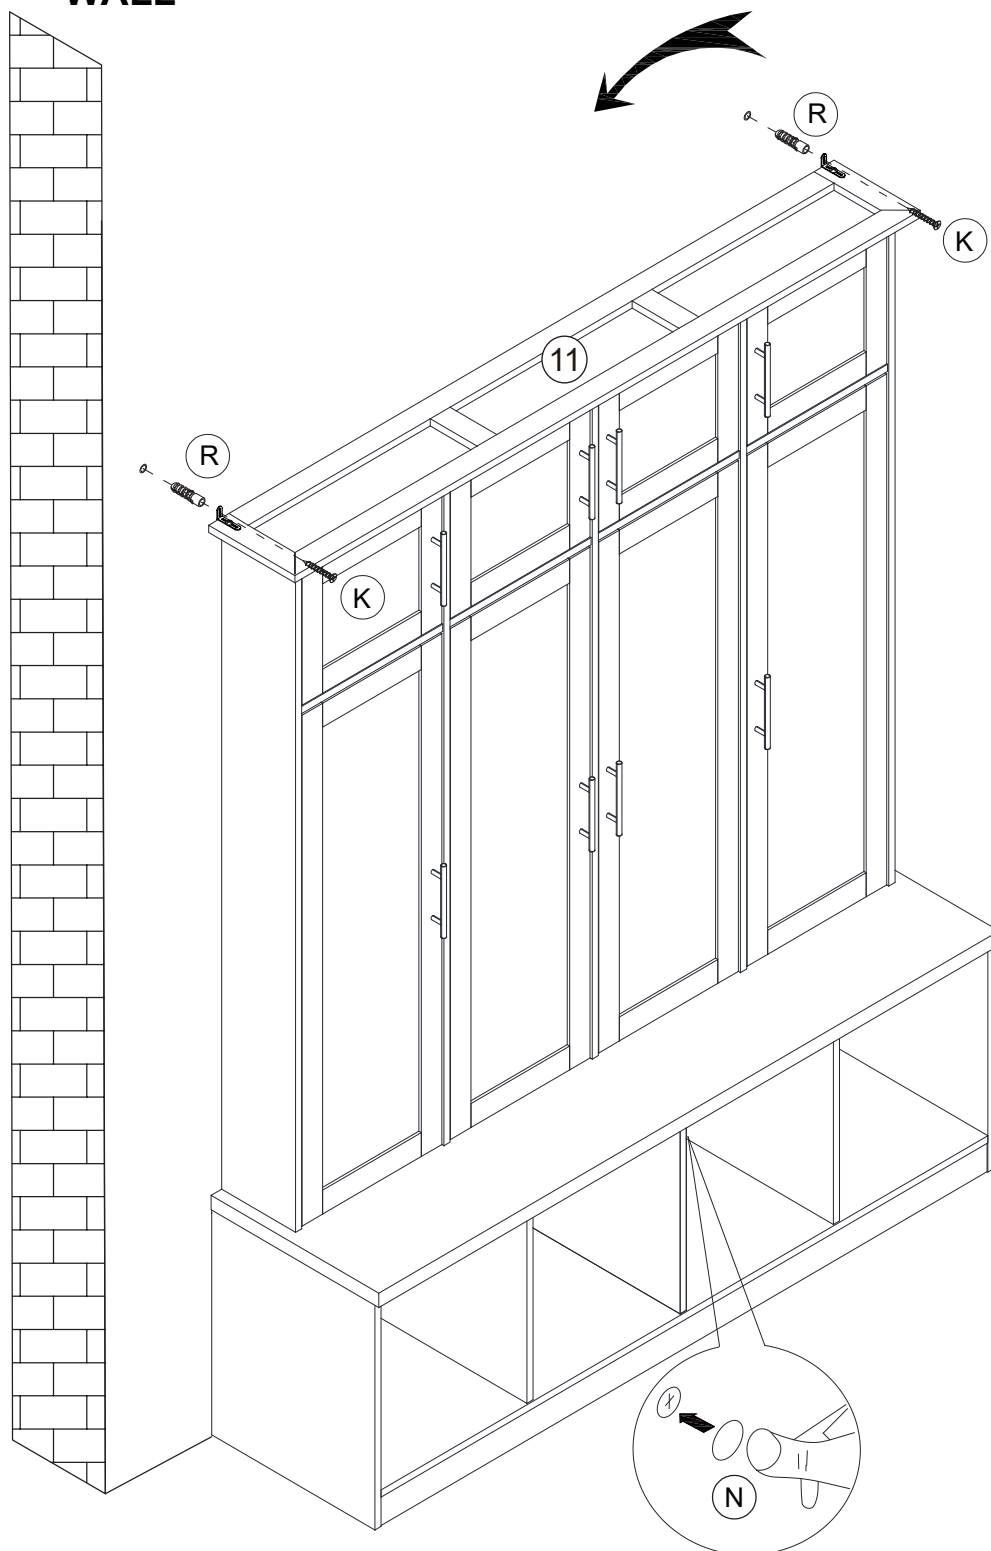


Step 1

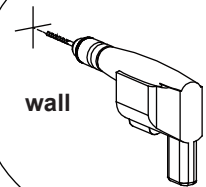

Step 2

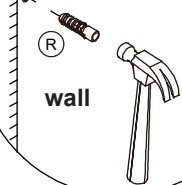

Step 3

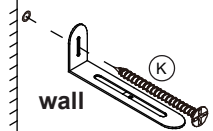

(N)




Perfect fit x 66

(K)



4*35mm Screw x 2

(R)



Plastic expansion x 2

Assembly Instructions

Finish

