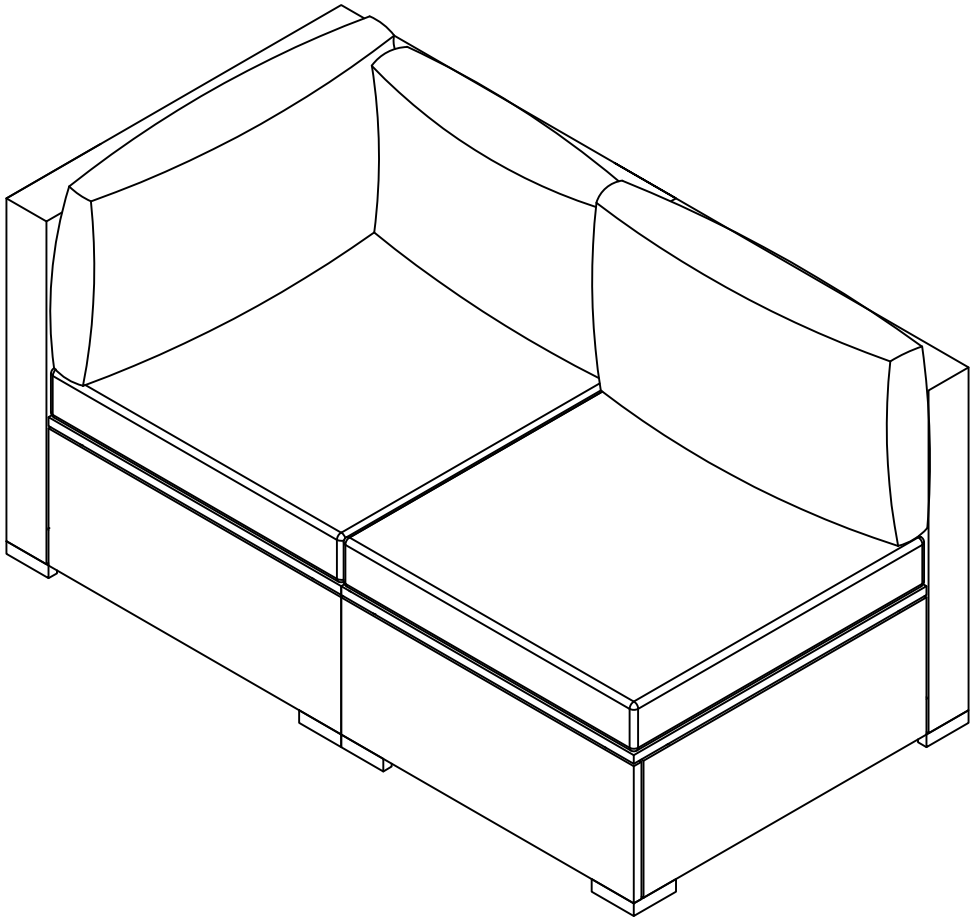
CORNER CHAIR AND ARMLESS CHAIR



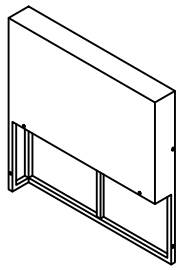
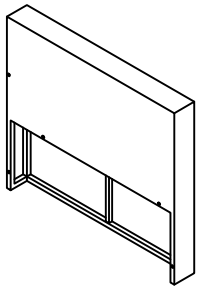
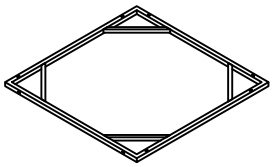
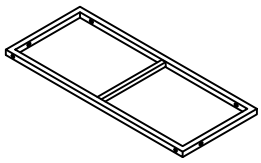
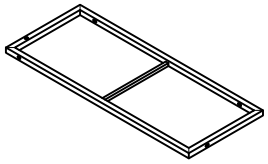
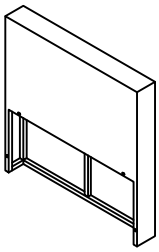
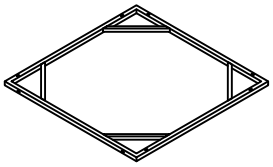
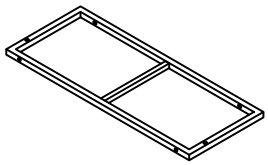
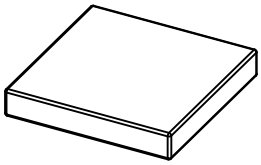
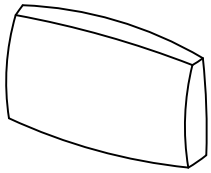
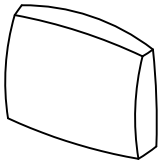




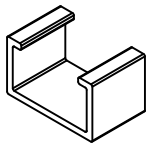
ATTENTION Section:

1. If you encounter any issues, such as missing accessories or damaged parts, please contact us immediately and include pictures (email:jm@nicesoulfurniture.com)

Assembly Instructions:

1. Assembly requires two people to complete.
2. For optimal assembly, we highly recommend using the provided Allen key. If using a power tool, please set it to a low speed to prevent any damage
3. Do not fully tighten the screws until all screws are properly aligned with their holes.

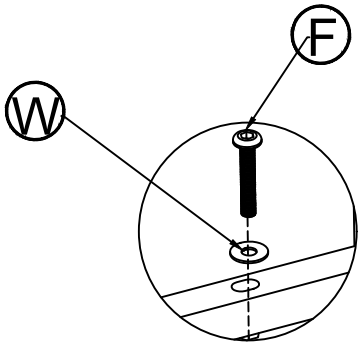
PARTS LIST OF BOX

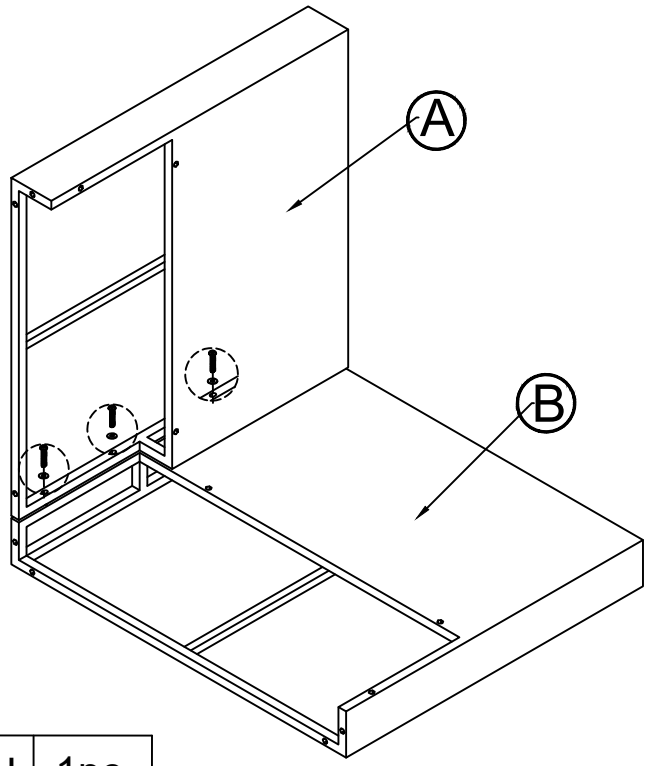
A  70cm/27.5in 1pc	B  80cm/31.5in 1pc	C  1pc	D  68cm/26.7in 3pcs
E  70cm/27.5in 1pc	I  70cm/27.5in 1pc	J  1pc	K  70cm/27.5in 1pc
N  2pcs	O  2pcs	P  1pc	G  8pcs
F  M6*35 42pcs	W  M6 26pcs	H  M6 1pc	R  4pcs




INTALLATION SCAN ME VIDEO

INTALLATION SCAN ME VIDEO

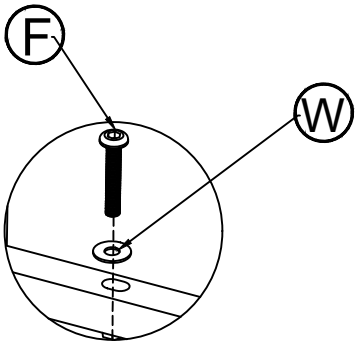
STEP 1

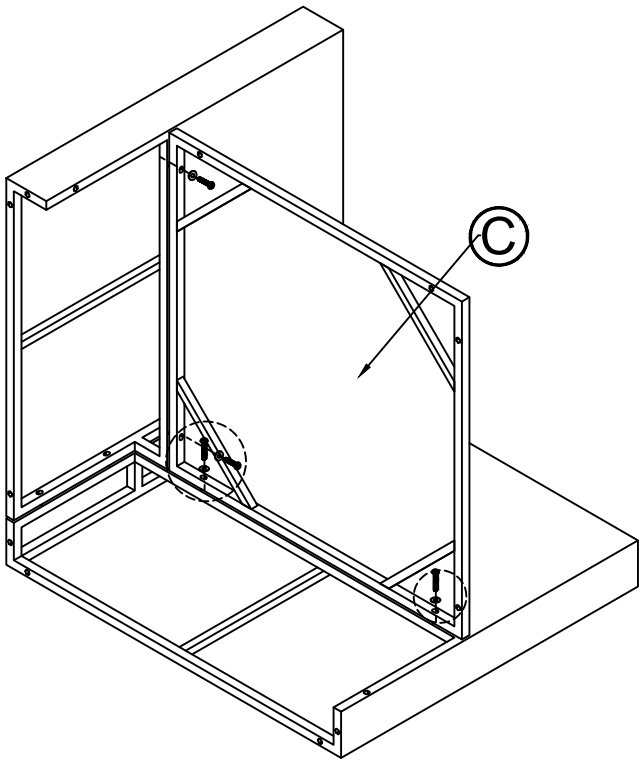





A	1pc	B	1pc	F	3pcs	W	3pcs	H	1pc
					M6*35		M6		M6

STEP 2

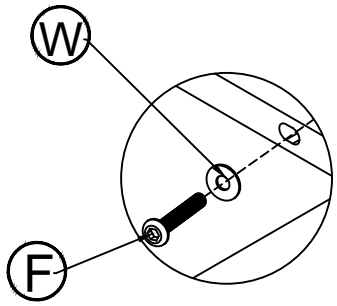


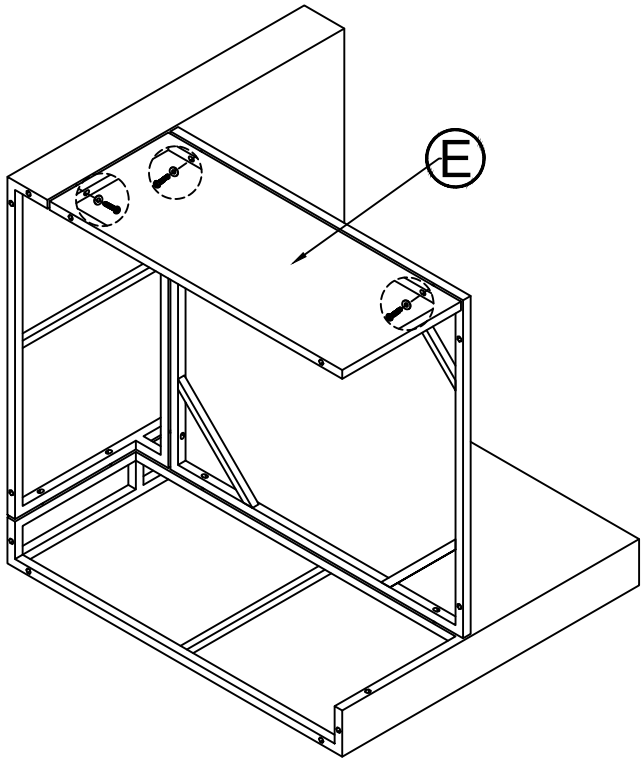



C	1pc	F	4pcs	W	4pcs	H	1pc
			M6*35		M6		M6

Do not fully tighten all screws until assembly is completed.

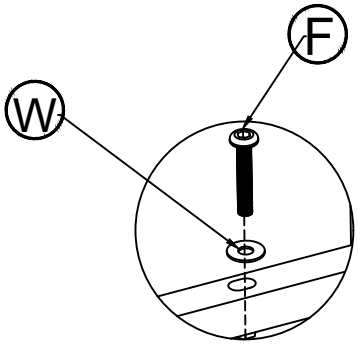
STEP 3

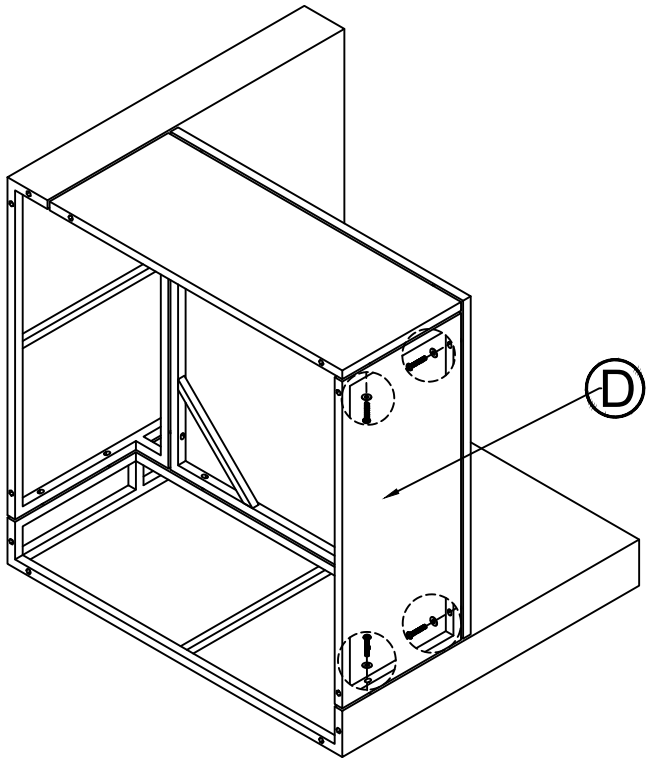





E	1pc	F	3pcs	W	3pcs	H	1pc
		 M6*35		 M6		 M6	

STEP 4

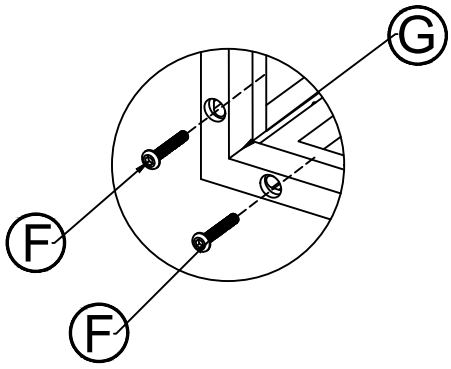


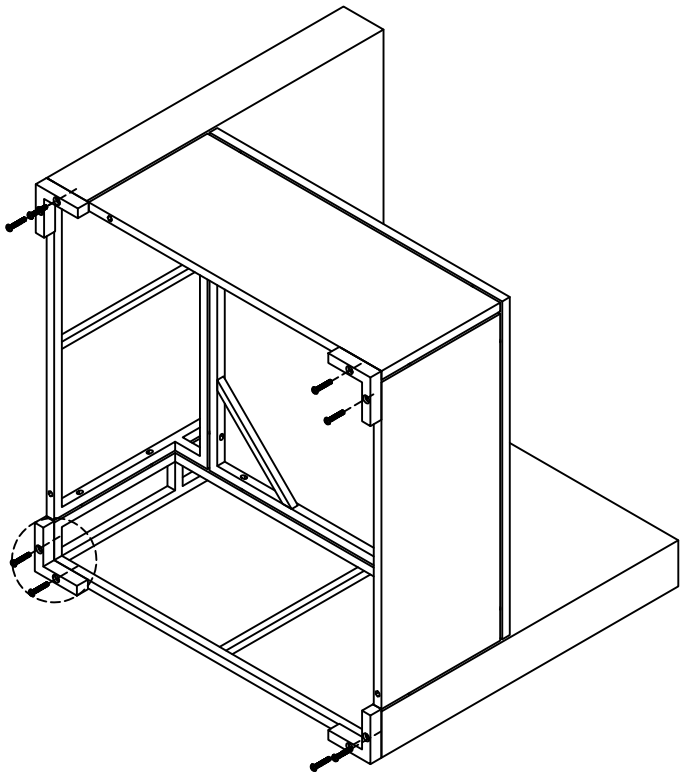




D	1pc	F	4pcs	W	4pcs	H	1pc
		 M6*35		 M6		 M6	

Do not fully tighten all screws until assembly is completed.

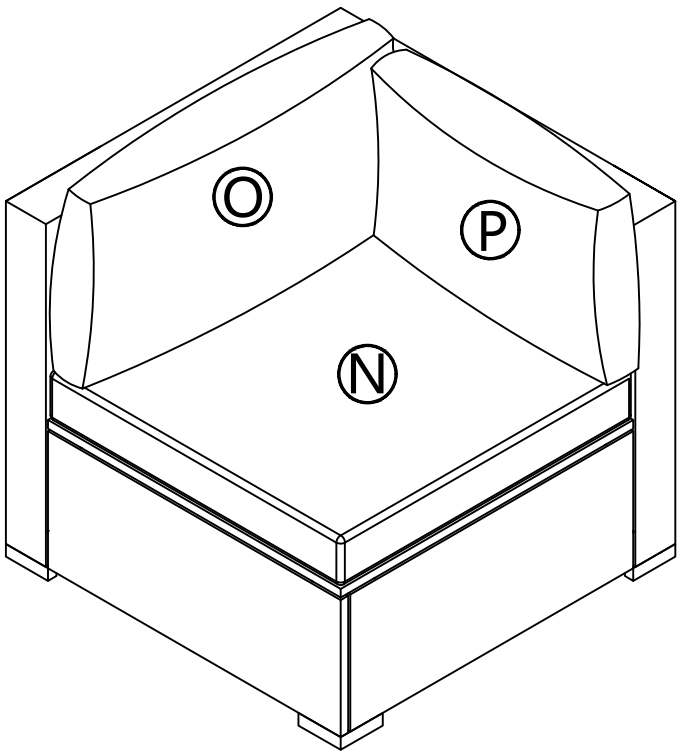
STEP 5






G	4pcs	F	8pcs	H	1pc
		 M6*35		 M6	

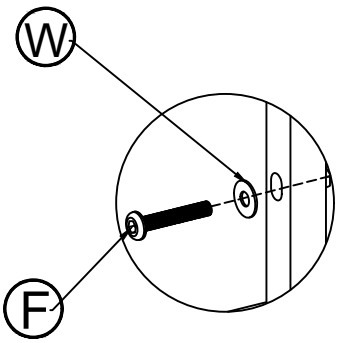
STEP 6

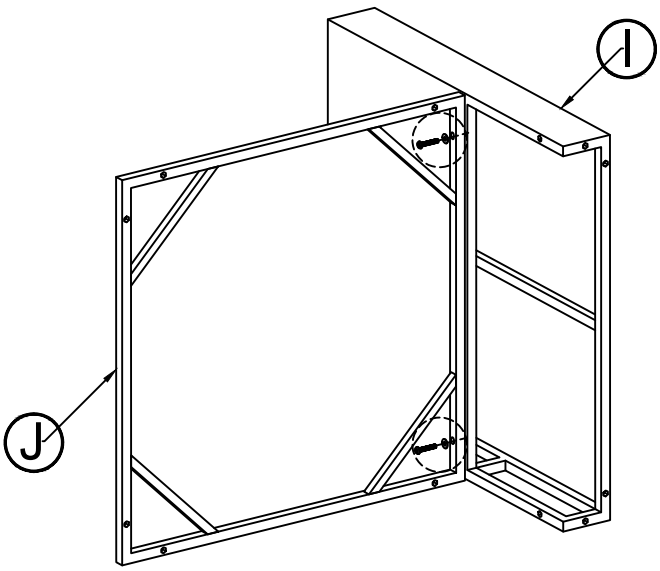




N	1pc	O	1pc	P	1pc
					

Do not fully tighten all screws until assembly is completed.

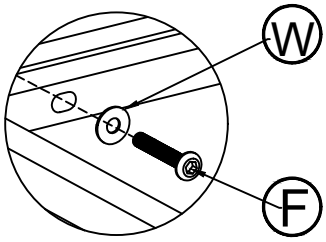
STEP 1

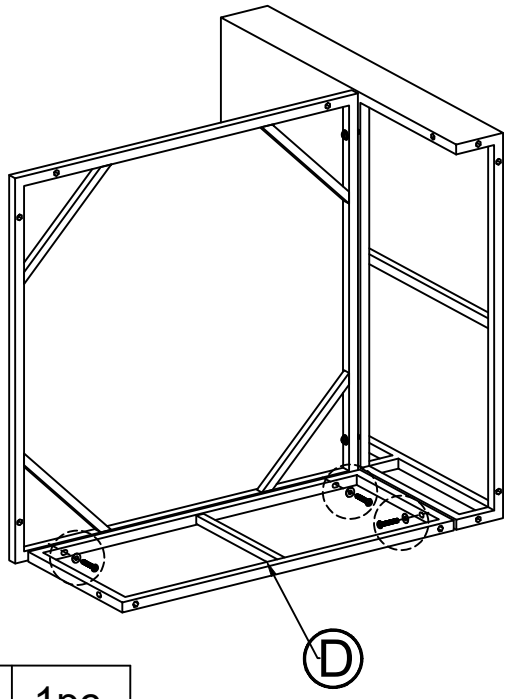





I	1pc	J	1pc	F	2pcs	W	2pcs	H	1pc
					M6*35		M6		M6

STEP 2

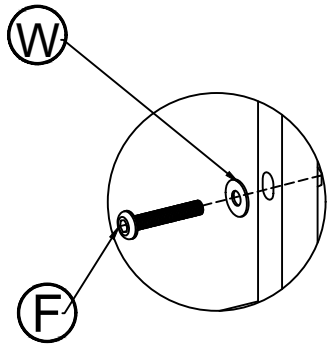


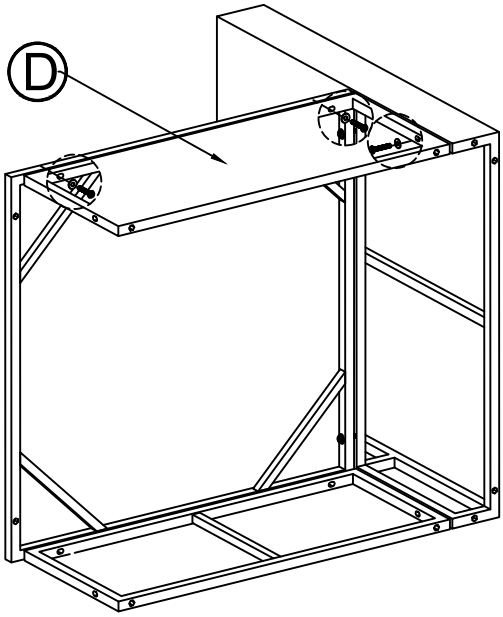




D	1pc	F	3pcs	W	3pcs	H	1pc
			M6*35		M6		M6

Do not fully tighten all screws until assembly is completed.

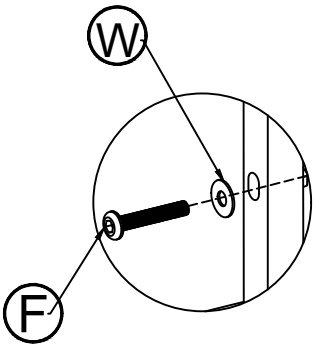
STEP 3

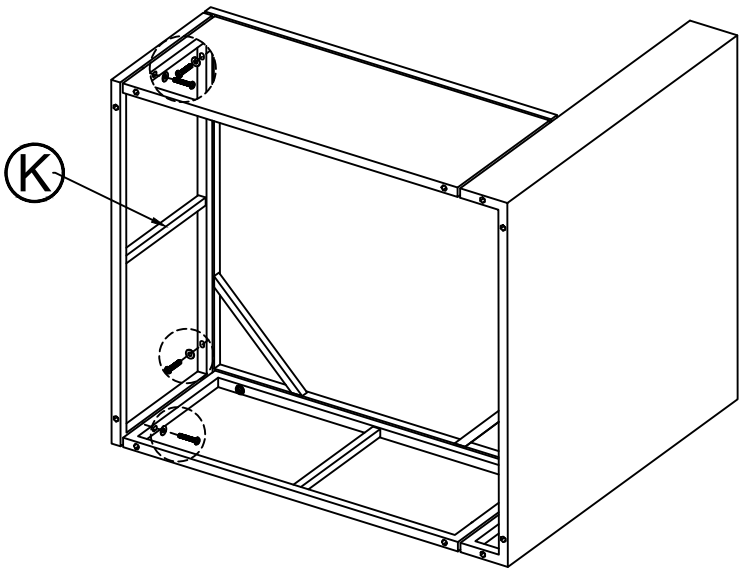





D	1pc	F	3pcs	W	3pcs	H	1pc
		 M6*35		 M6		 M6	

STEP 4

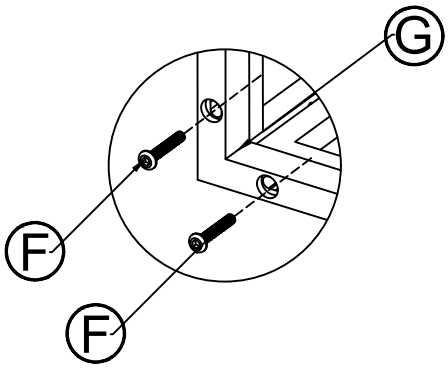


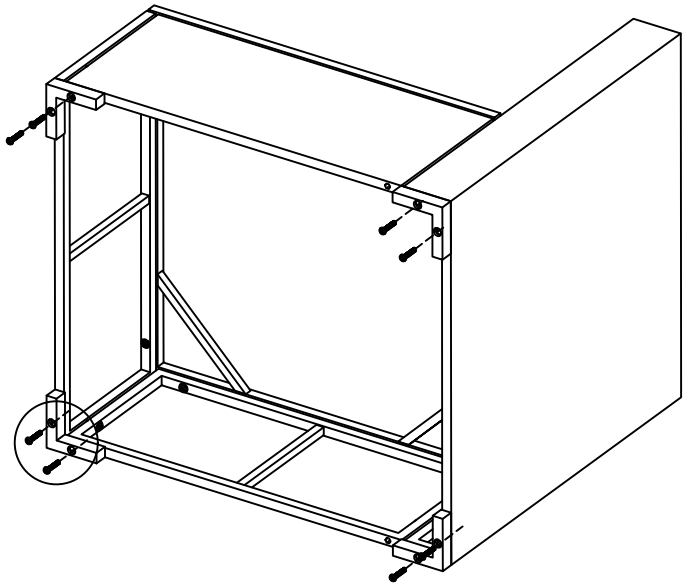




K	1pc	F	4pcs	W	4pcs	H	1pc
		 M6*35		 M6		 M6	

Do not fully tighten all screws until assembly is completed.

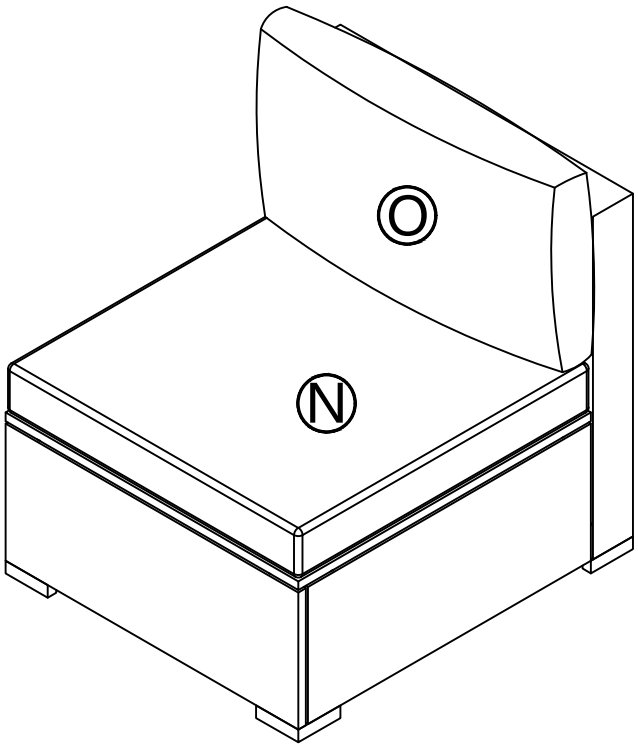
STEP 5






G	4pcs	F	8pcs	H	1pc
		 M6*35		 M6	

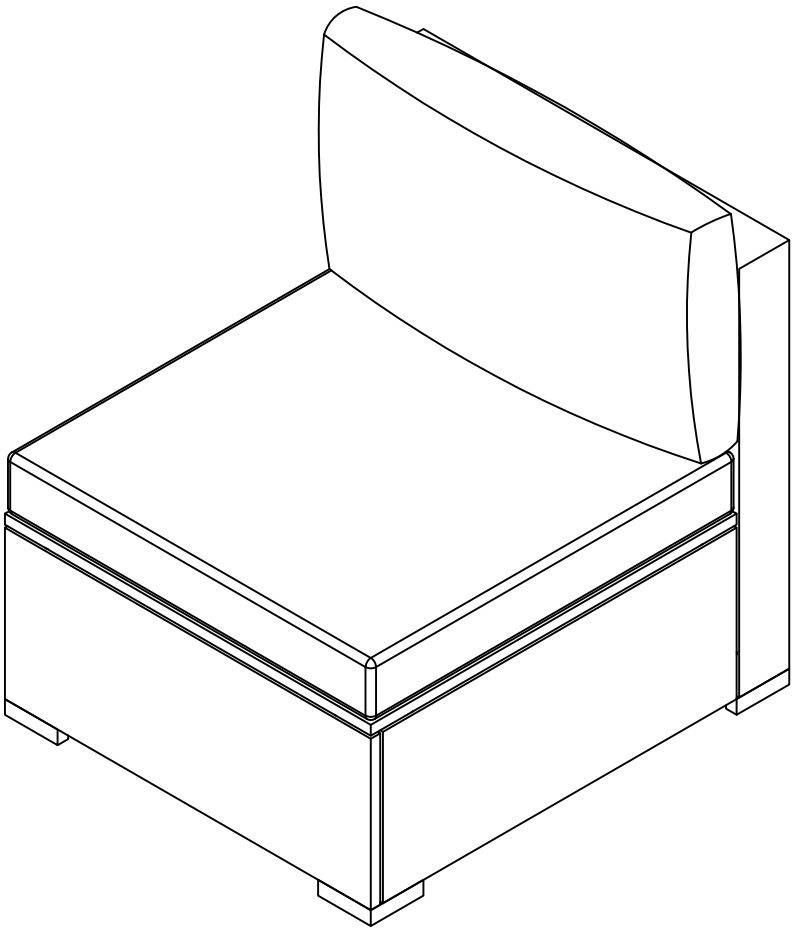
STEP 6



N	1pc	O	1pc
			

Do not fully tighten all screws until assembly is completed.

ARMLESS CHAIR



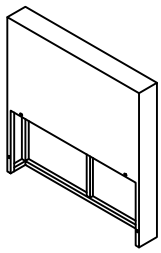
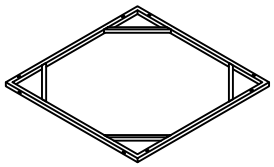
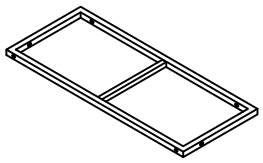
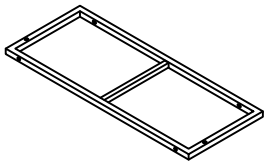
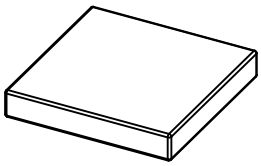
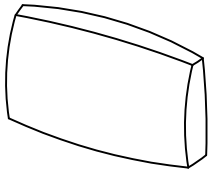



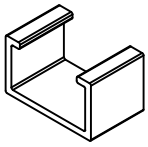
ATTENTION Section:

1. If you encounter any issues, such as missing accessories or damaged parts, please contact us immediately and include pictures (email:jm@nicesoulfurniture.com)

Assembly Instructions:

1. Assembly requires two people to complete.
2. For optimal assembly, we highly recommend using the provided Allen key. If using a power tool, please set it to a low speed to prevent any damage
3. Do not fully tighten the screws until all screws are properly aligned with their holes.

PARTS LIST OF BOX

I  70cm/27.5in 2pcs	J  2pcs	D  68cm/26.7in 4pcs	K  70cm/27.5in 2pcs
N  2pcs	O  2pcs	G  8pcs	F  M6*35 40pcs
W  M6 24pcs	H  M6 2pcs	R  4pcs	

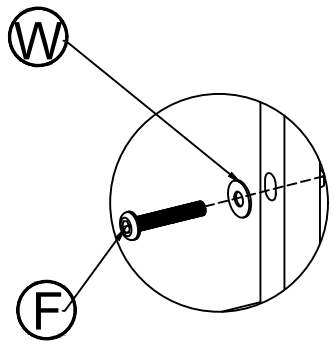


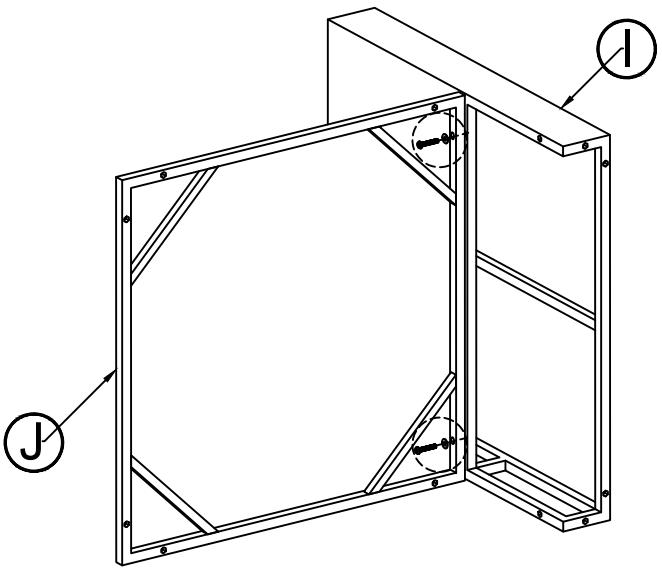
Armless chair Installation Video



Scan the QR to watch the installation video

STEP 1

x2

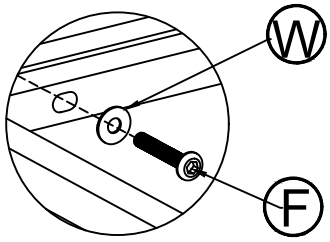


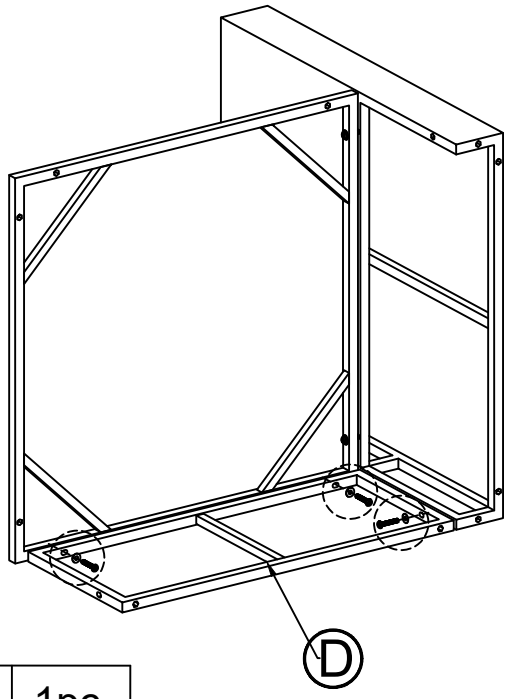



I	1pc	J	1pc	F	2pcs	W	2pcs	H	1pc
					M6*35		M6		M6

STEP 2

x2



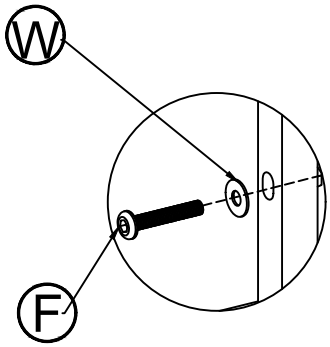


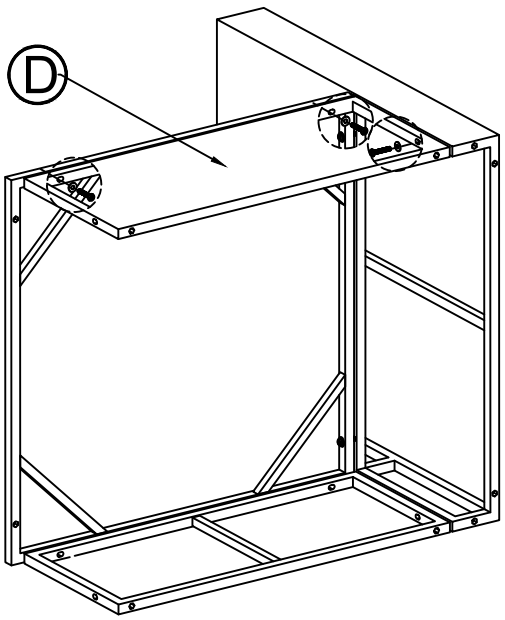
D	1pc	F	3pcs	W	3pcs	H	1pc
			M6*35		M6		M6


Do not fully tighten all screws until assembly is completed.

STEP 3

x2

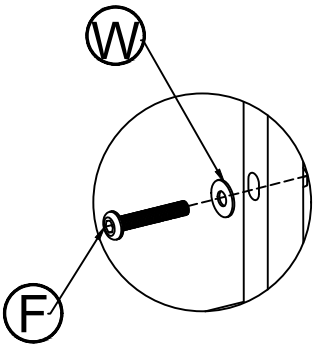


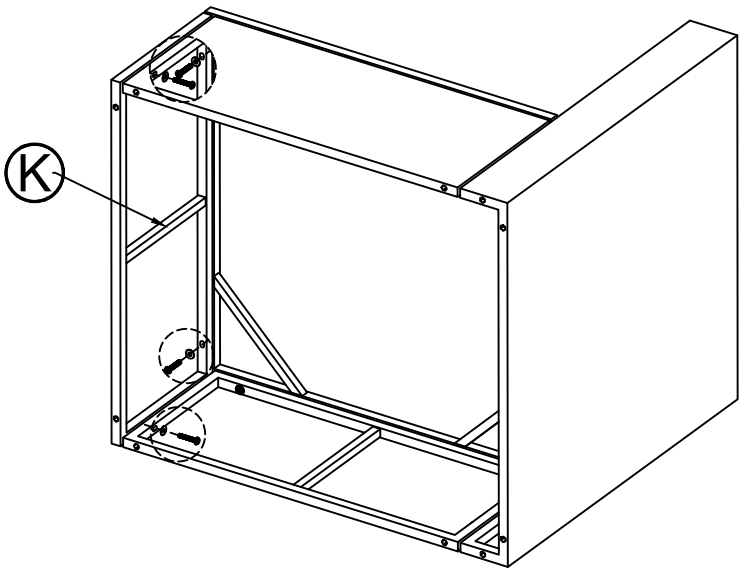



D	1pc	F	3pcs	W	3pcs	H	1pc
		 M6*35		 M6		 M6	

STEP 4

x2



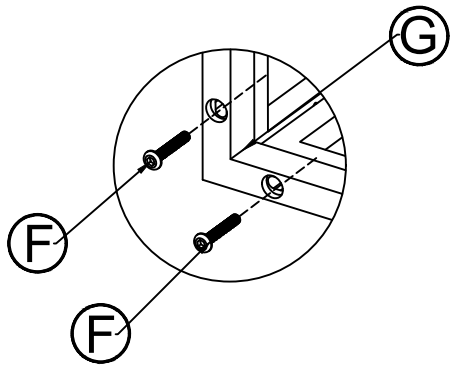


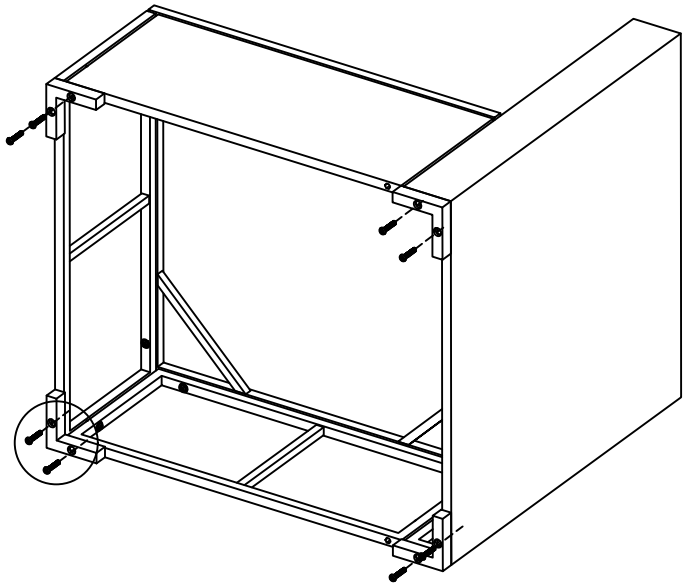
K	1pc	F	4pcs	W	4pcs	H	1pc
		 M6*35		 M6		 M6	


Do not fully tighten all screws until assembly is completed.

STEP 5

x2

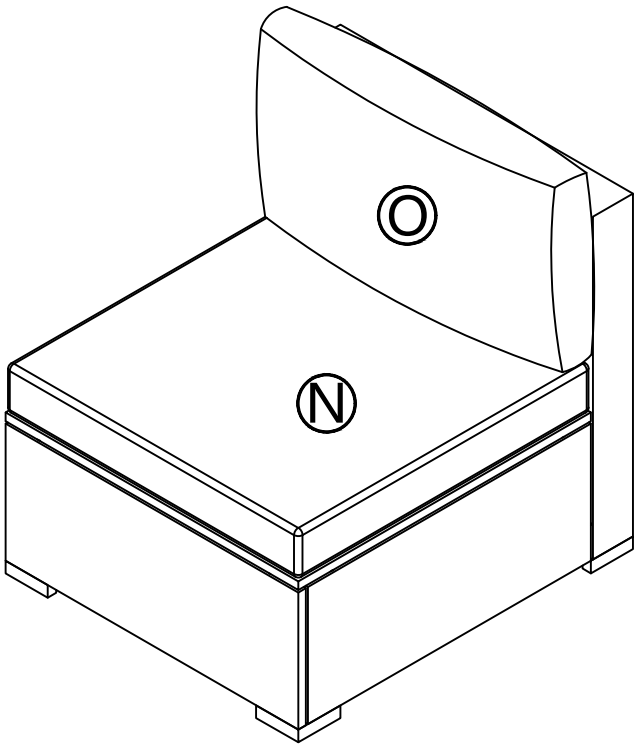





G	4pcs	F	8pcs	H	1pc
		 M6*35		 M6	

STEP 6

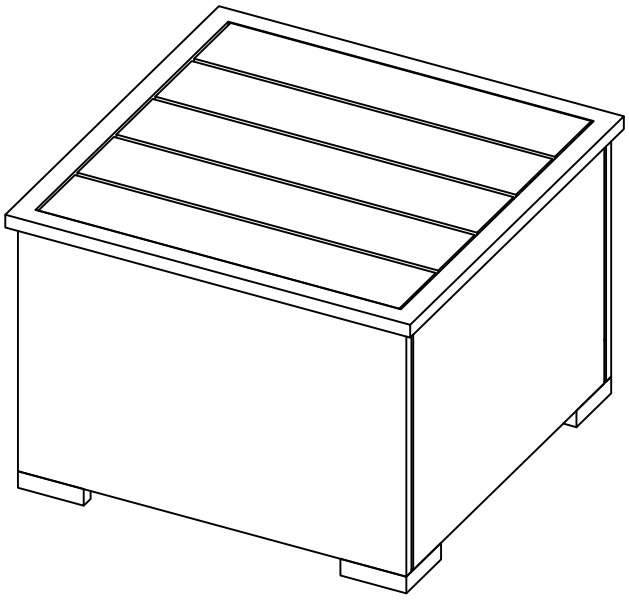
x2



N	1pc	O	1pc
			

Do not fully tighten all screws until assembly is completed.

COFFEE TABLE



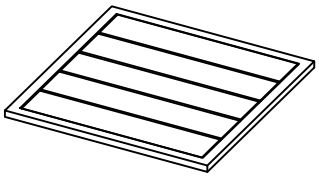
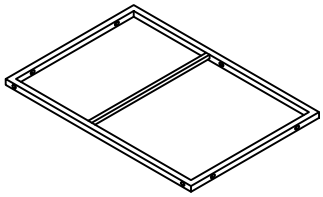
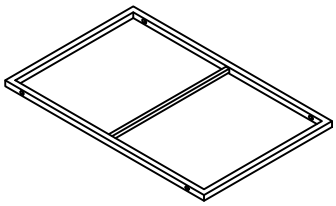

ATTENTION Section:

1. If you encounter any issues, such as missing accessories or damaged parts, please contact us immediately and include pictures (email:jm@nicesoulfurniture.com)

Assembly Instructions:

1. Assembly requires two people to complete.
2. For optimal assembly, we highly recommend using the provided Allen key. If using a power tool, please set it to a low speed to prevent any damage
3. Do not fully tighten the screws until all screws are properly aligned with their holes.

PARTS LIST OF BOX

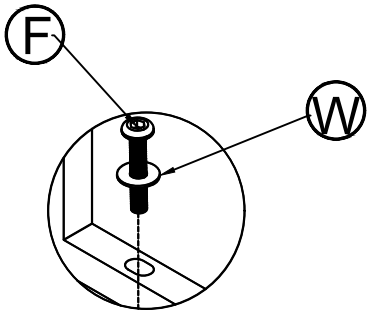
A  PANEL 2pcs	B  55.5cm/21.8in SHORT PLATE 4pcs	C  60cm/23.6in LONG PLATE 4pcs
H  2pcs	F  M6*35 44pcs	W  M6 28pcs
G  8pcs		

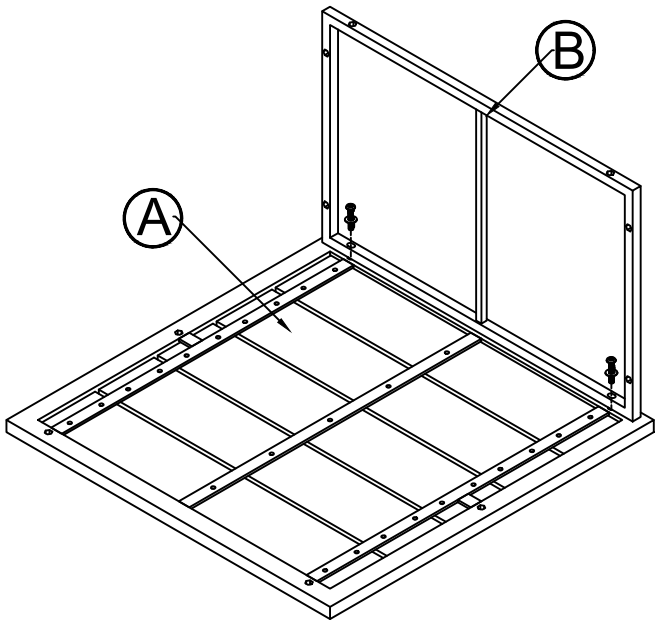
Ottoman chair Installation Video



Scan the QR to watch the installation video

STEP 1

x2

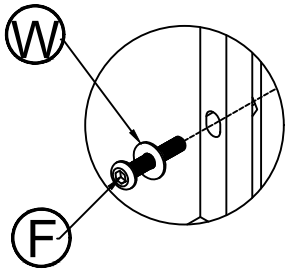


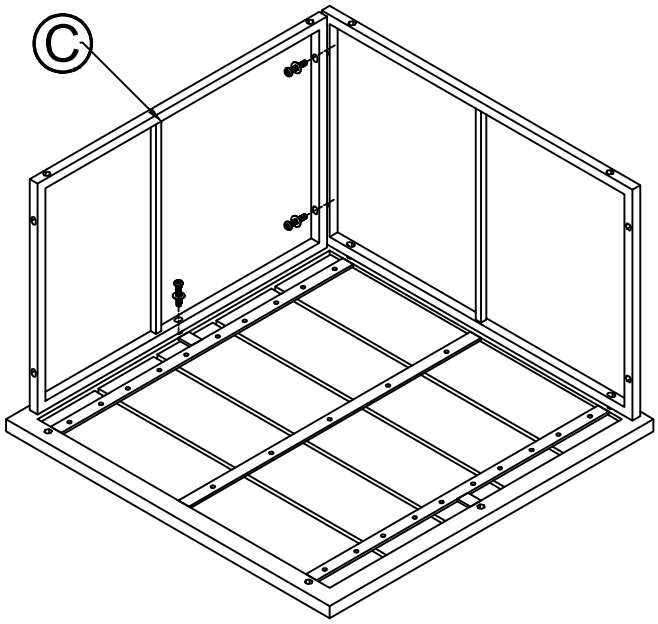



A	1pc	B	1pc	H	1pc	F	2pcs	W	2pcs
				 M6		 M6*35		 M6	

STEP 2

x2



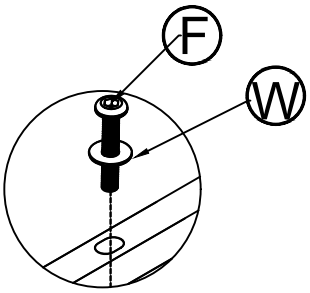


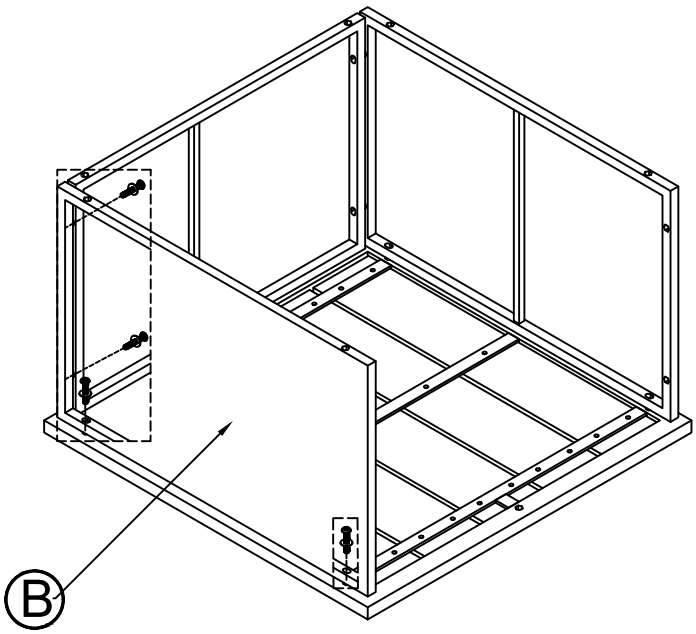
C	1pc	H	1pc	F	3pcs	W	3pcs
		 M6		 M6*35		 M6	


Do not fully tighten all screws until assembly is completed.

STEP 3

x2

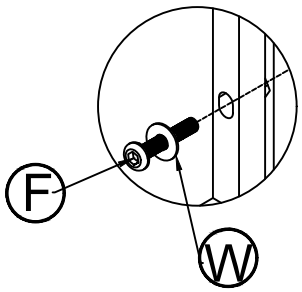


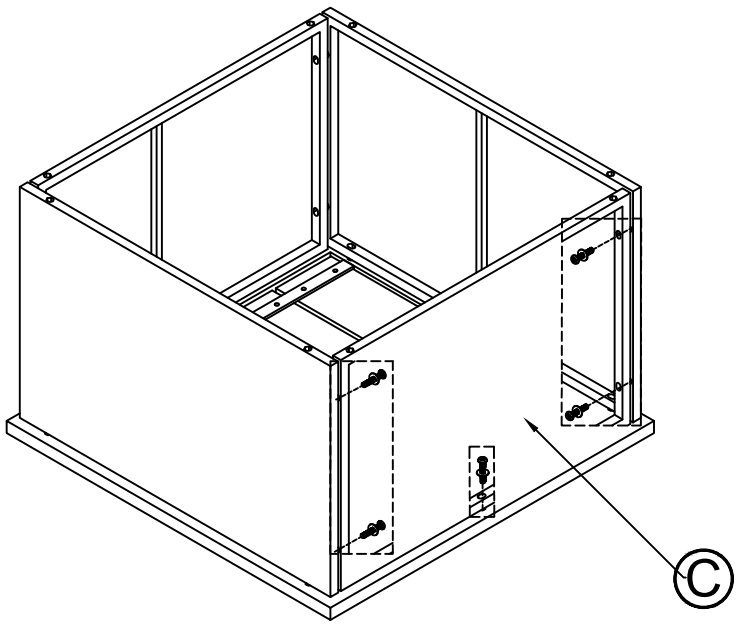



B	1pc	H	1pc	F	4pcs	W	4pcs
		 M6		 M6*35		 M6	

STEP 4

x2



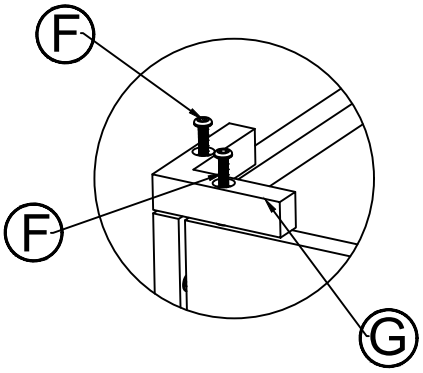


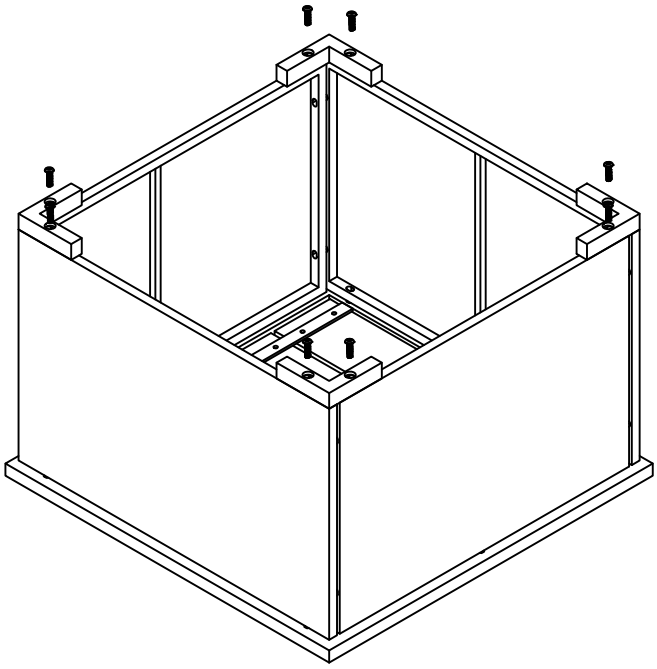
C	1pc	H	1pc	F	5pcs	W	5pcs
		 M6		 M6*35		 M6	

Do not fully tighten all screws until assembly is completed.

STEP 5

x2





G	4pcs	H	1pc	F	8pcs
		 M6		 M6*35	

Do not fully tighten all screws until assembly is completed.