

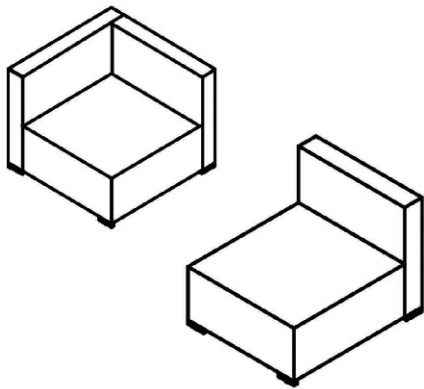


Tips: Don't tighten every screw until you get them all started in any one area.
F07BG201&F07BR202&F07BB203&F07BB204&F07BN205


7-Piece Wicker Full-Back Sectional Sofa

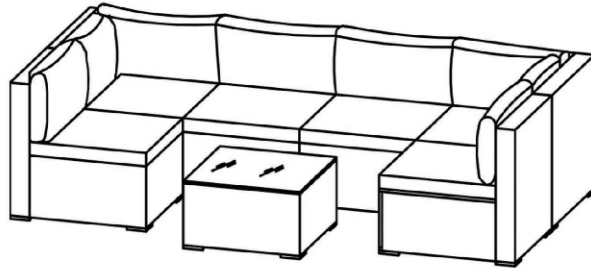

CARTON 1/3

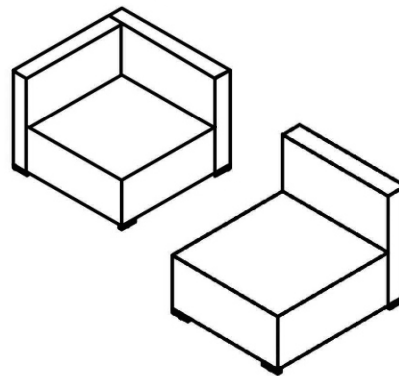






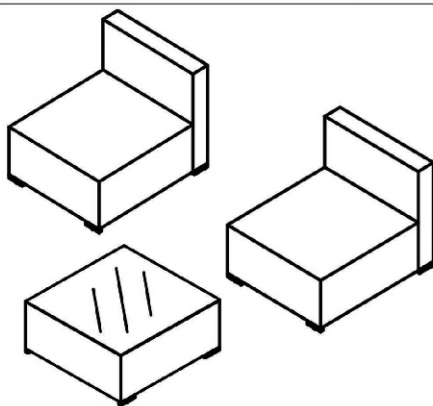


CARTON 2/3




CARTON 3/3

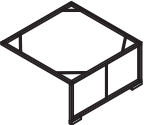
Tips: Don't tighten every screw until you get them all started in any one area.
F07BG201&F07BR202&F07BB203&F07BB204&F07BN205

Item no.	Reference Image	Description	Qty.
A		Arm Rest	1
B		Seat Back	1
C		Seat Base	1
D		Side Panels	1
X	 M6*32	Socket Head Cap Screw	13
Y		Flat Washer	13
Z		Adjustable foot pad	4
T		4-mm Allen Key	1


Step 1: Attach the Arm rest(A) to the Seat Back(B), using M6x32 socket head cap screws with flat washers(Y). Do this in two places.

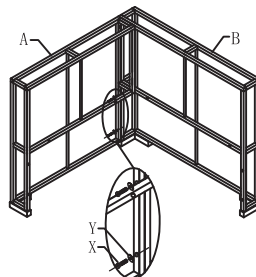

Step 2: Attach the Seat base(C) to the Arm Rest(A) and Seat Back(B), using M6x32 socket head cap screws with flat washers(Y). Do this in four places.

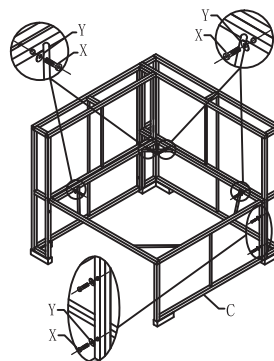


Step 3: Attach the Side Panel(D) to the Seat Base(C) and Arm rest(A), using M6x32 socket head cap screws with flat washers(Y). Do this in four places.

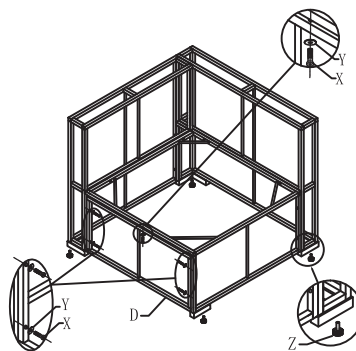
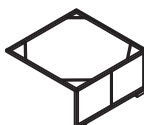






Step 4: Screw in the adjustable footpad(Z) to the silver-colored foot. Do this in four places.

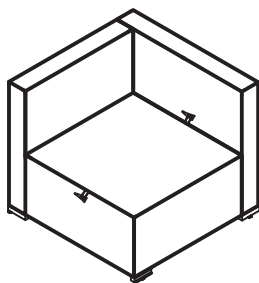
Corner Sofa




Tips: Don't tighten every screw until you get them all started in any one area.
 F07BG201&F07BR202&F07BB203&F07BB204&F07BN205

Item no.	Reference Image	Description	Qty.
E		Seat Back	1
F		Seat Base	1
D		Side Panels	2
X	 M6*32	Socket Head Cap Screw	12
Y		Flat Washer	12
Z		Adjustable foot pad	4


Step 1: Attach the Seat back(E) to the Seat Base(F), using M6x35 socket head cap screws with flat washers (Y). Do this in two places.

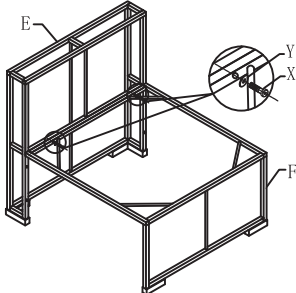


Step 2: Attach the Side Panel(D) to the Seat Base(F), using M6x35 socket head cap screws with flat washers(Y). Do this in two places.

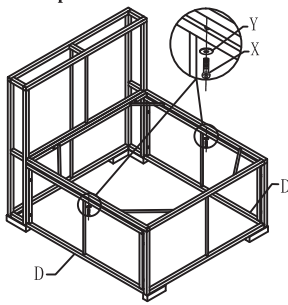

Step 3: Attach the Side Panel(D) to the Seat Back(E) and Seat Base(F), using M6x35 socket head cap screws with flat washers(Y). Do this in eight places.

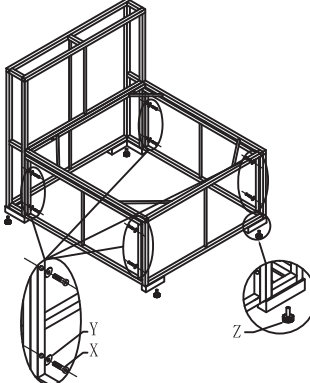


Step 4: Screw in the adjustable footpad(Z) to the silver-colored foot. Do this in four places.

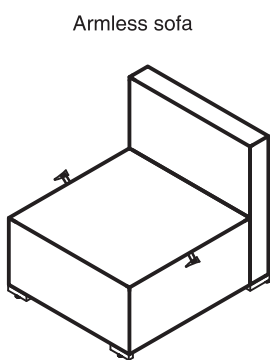


Tips: Don't tighten every screw until you get them all started in any one area.
F07BG201&F07BR202&F07BB203&F07BB204&F07BN205

Item no.	Reference Image	Description	Qty.
J		Table Top	1
K		Side Panels	2
L		Side Panels	2
M		Gkass Top	1
X		Socket Head Cap Screw	12
Y		Flat Washer	12
Z		Adjustable foot pad	4


Coffee Table

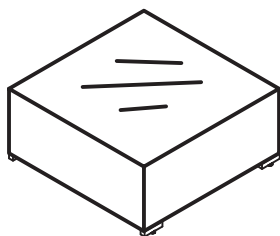


Step 1: Connet all side panels (K & L), using M6X35 socket head cap screws with flat washers (Y). Do this in eight places.

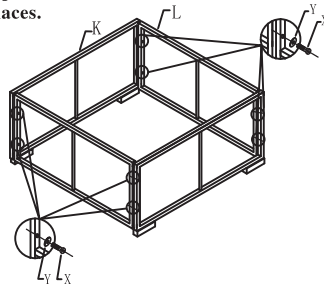

Step 2: Flip the table upside down. Attach the Table Top (J) to the side panels using M6 x 35 socket head cap screws with flat washers (Y). Do this in four places.


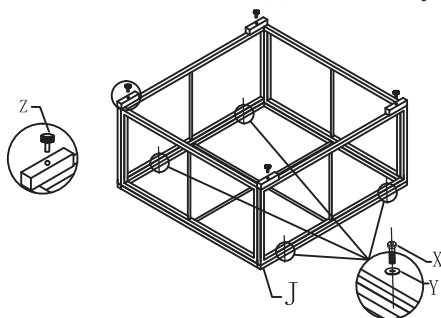


Step 3: Flip the table back then place the glass top (M) on it.

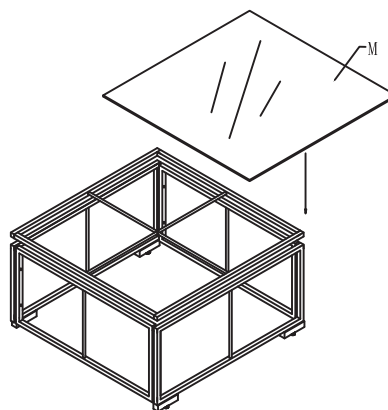


Step 4: Screw in the adjustable footpad(Z) to the silver-colored foot. Do this in four places.

Tips: Don't tighten every screw until you get them all started in any one area.
F07BG201&F07BR202&F07BB203&F07BB204&F07BN205

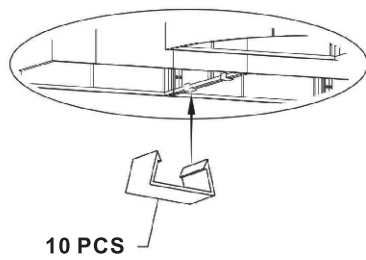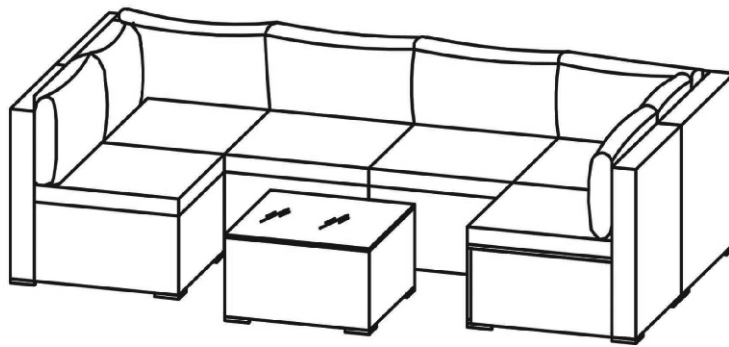

After finishing all assembling, Please use plastic clips to connect each sofa.

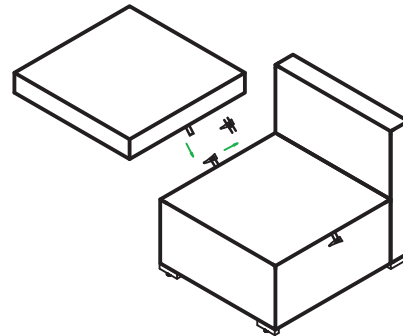

The button on the seat plate goes through the string on the cushion