


WF317009AAE / WF317010AAE / WF317009AAP / WF317010AAP

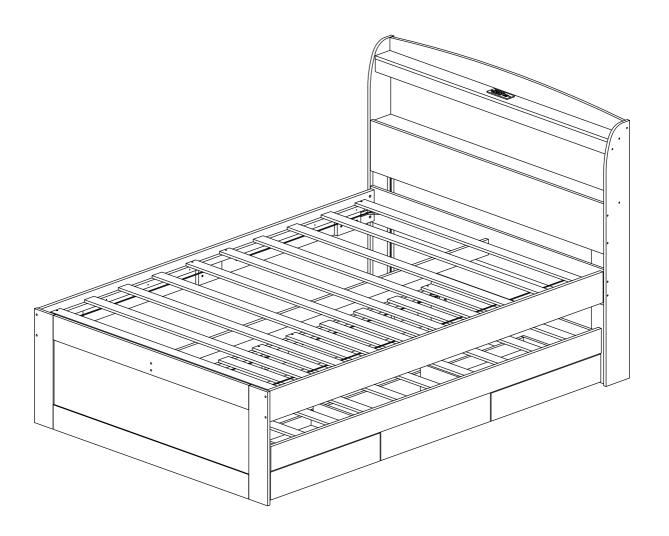



IMPORTANT NOTE


- ** PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED
- ** BEFORE YOU BEGIN, KINDY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP
- ** DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BED IS FULLY SET-UP

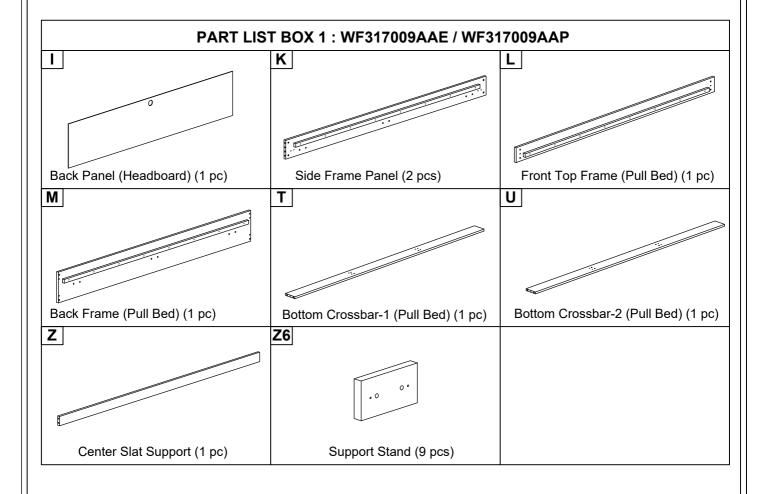


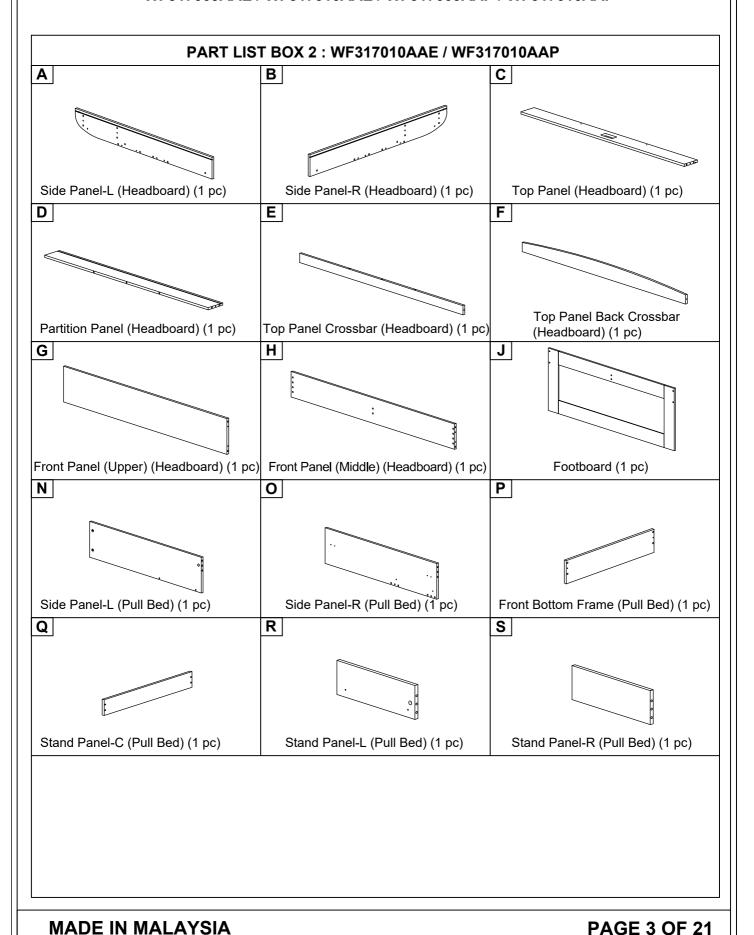

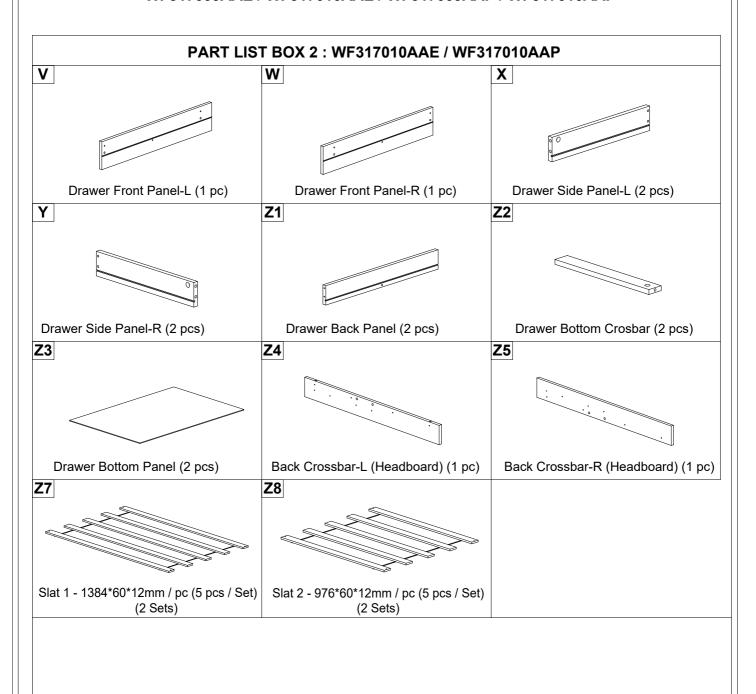

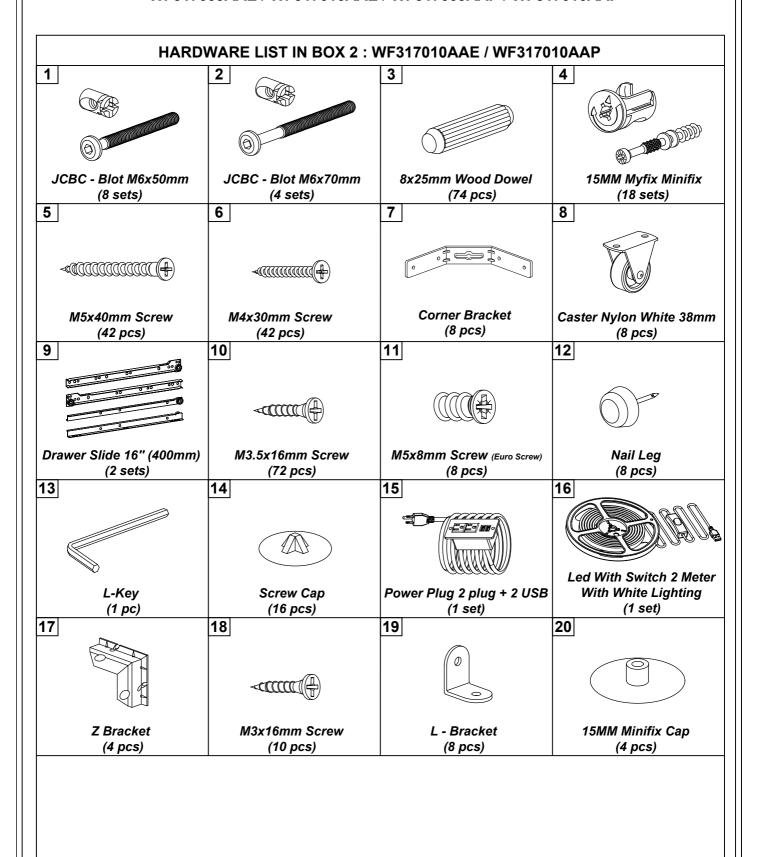

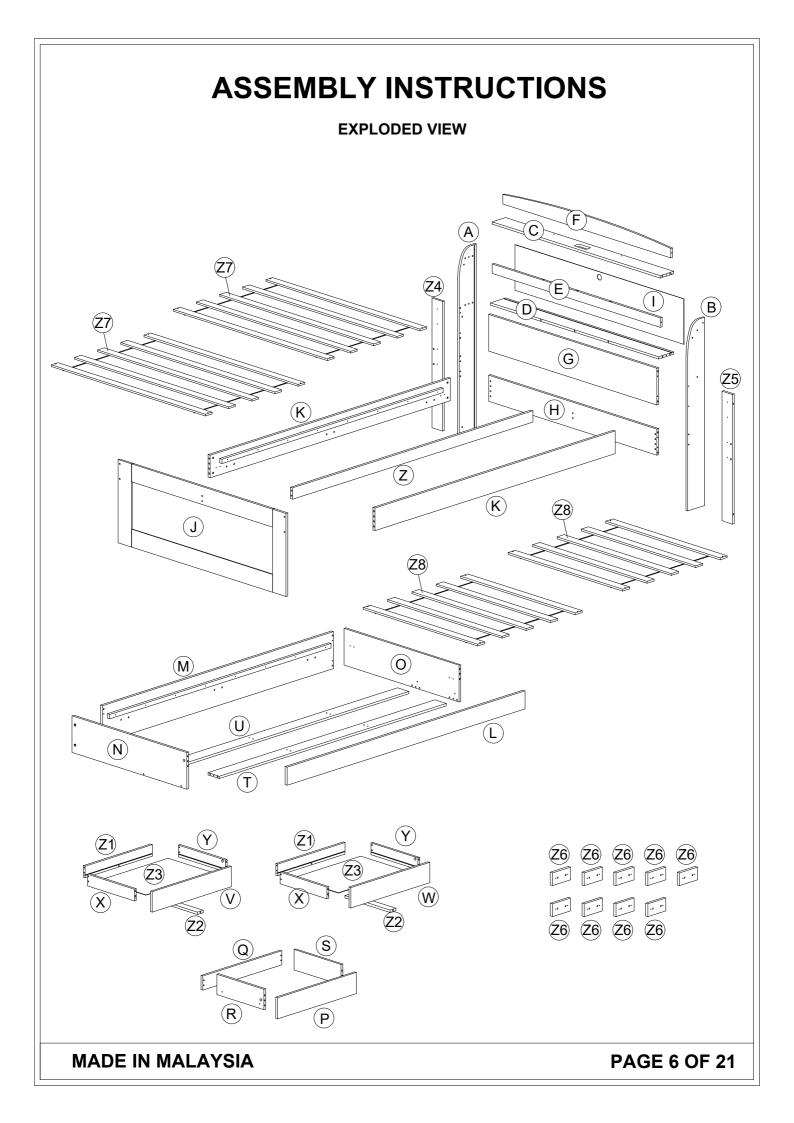


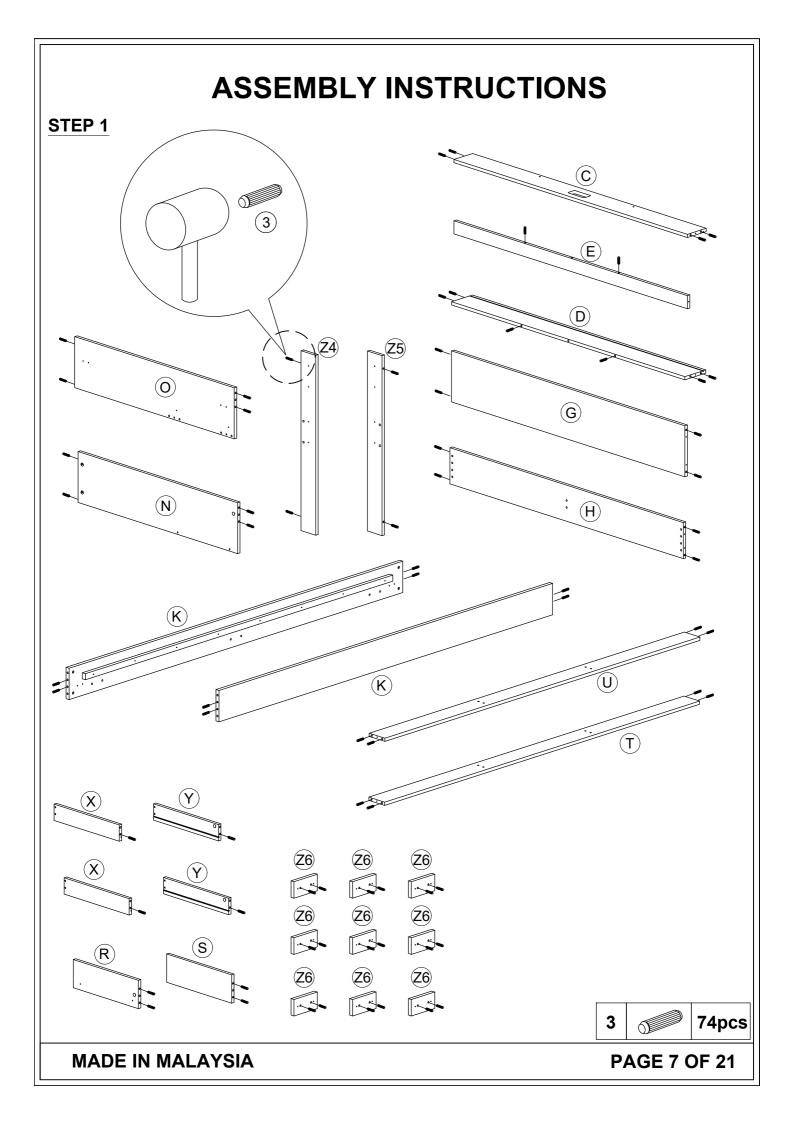


ASSEMBLY INSTRUCTIONS STEP 2 17pcs


MADE IN MALAYSIA

PAGE 8 OF 21

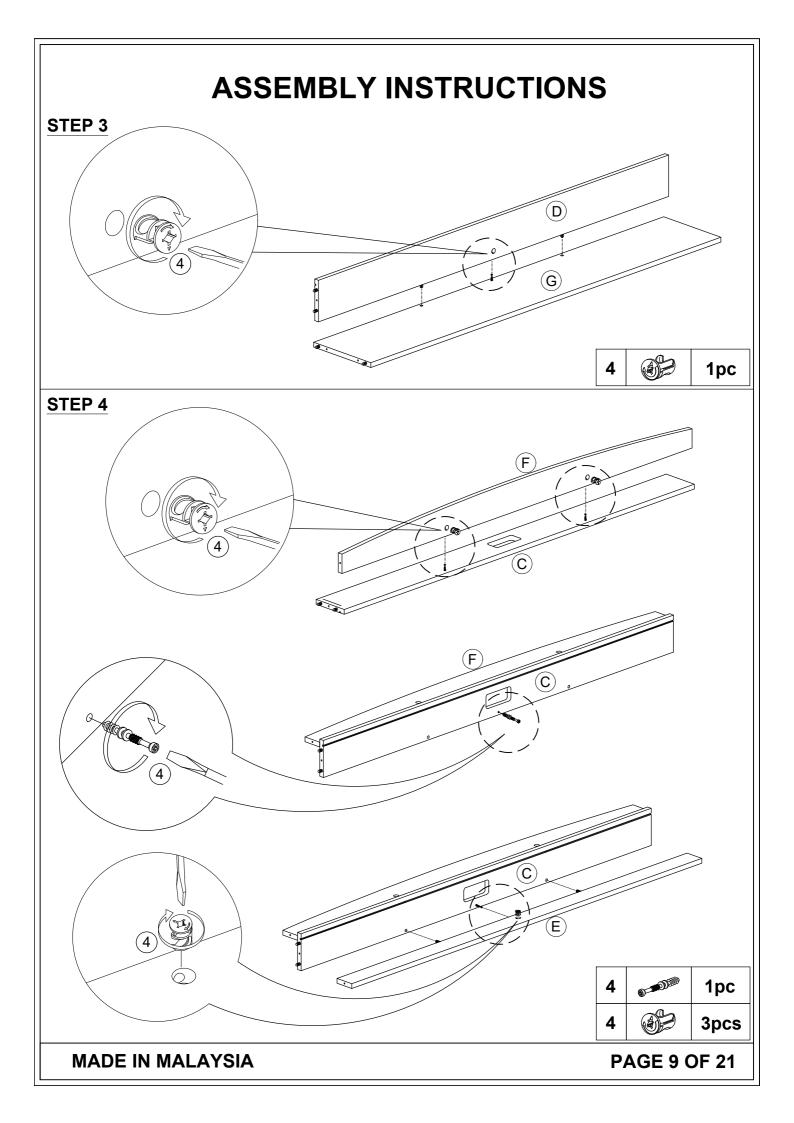

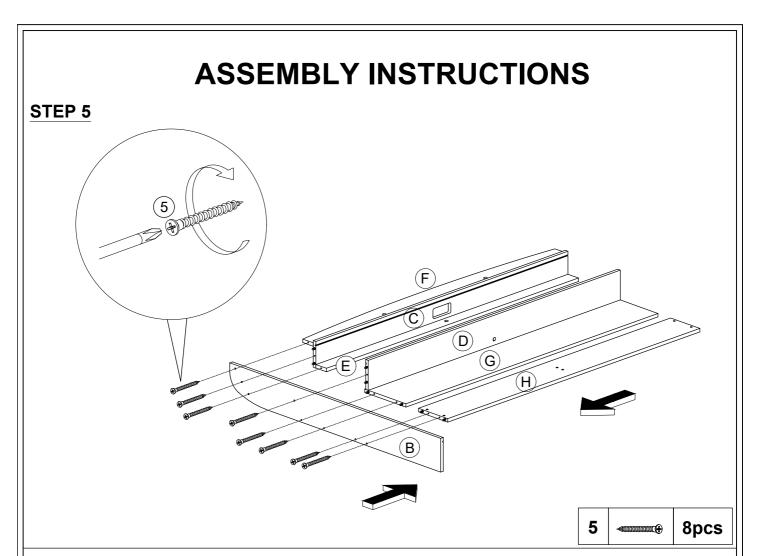


STEP 6

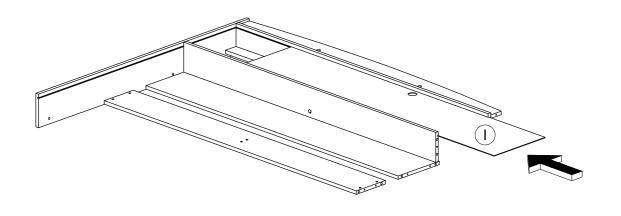


MADE IN MALAYSIA

PAGE 10 OF 21

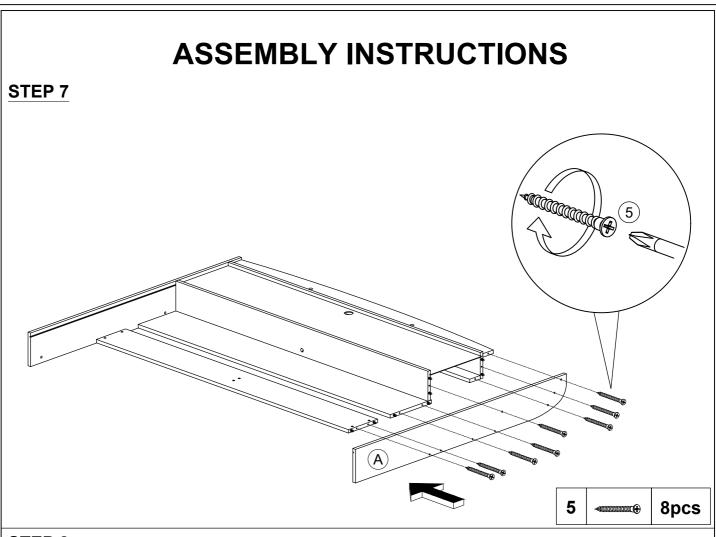





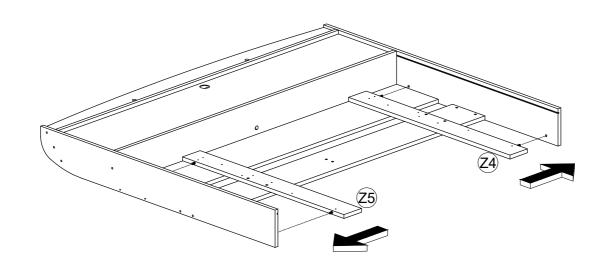



MADE IN MALAYSIA

PAGE 11 OF 21

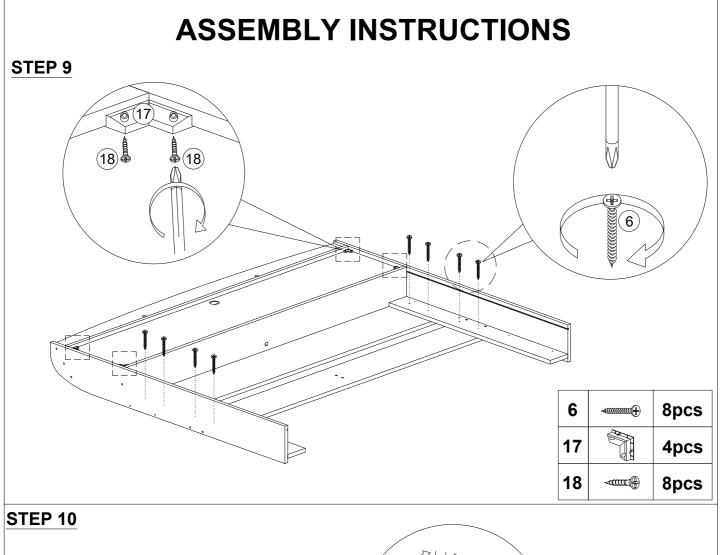

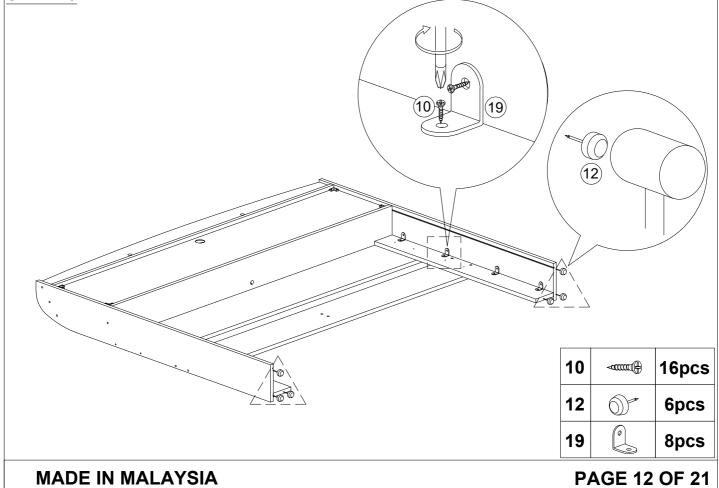


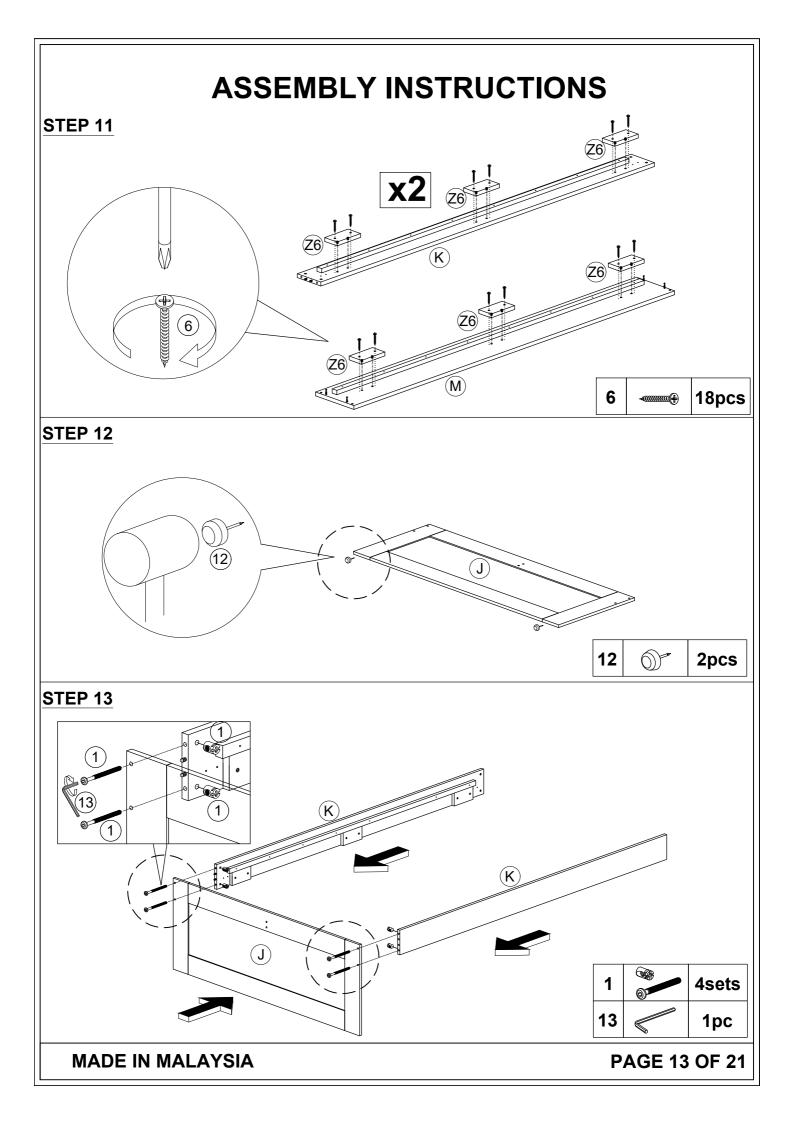


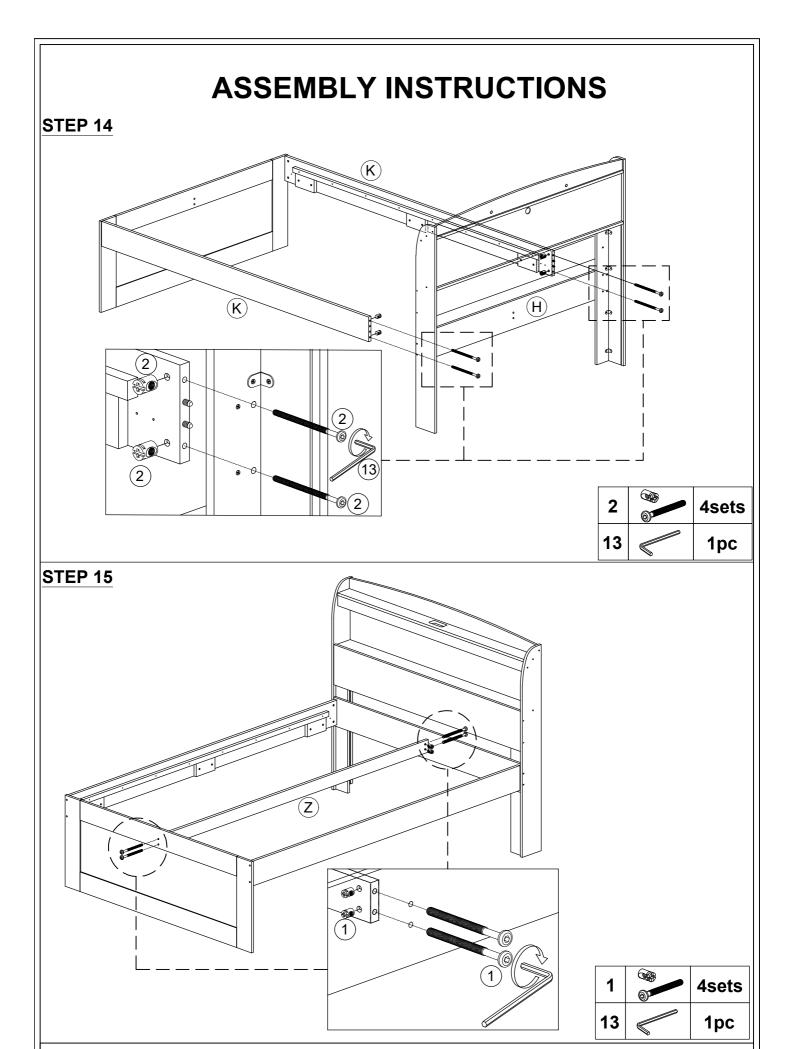


MADE IN MALAYSIA


PAGE 14 OF 21

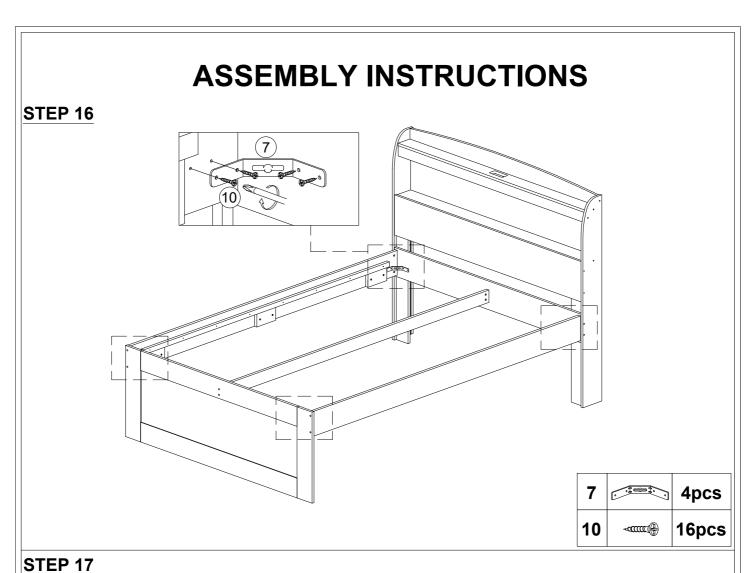

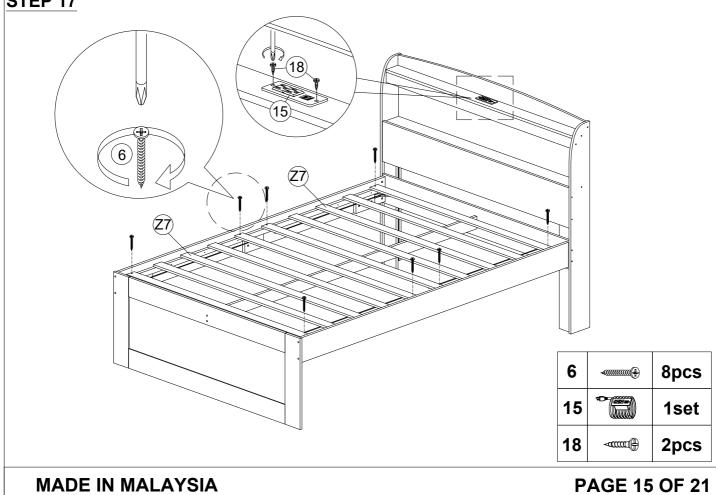

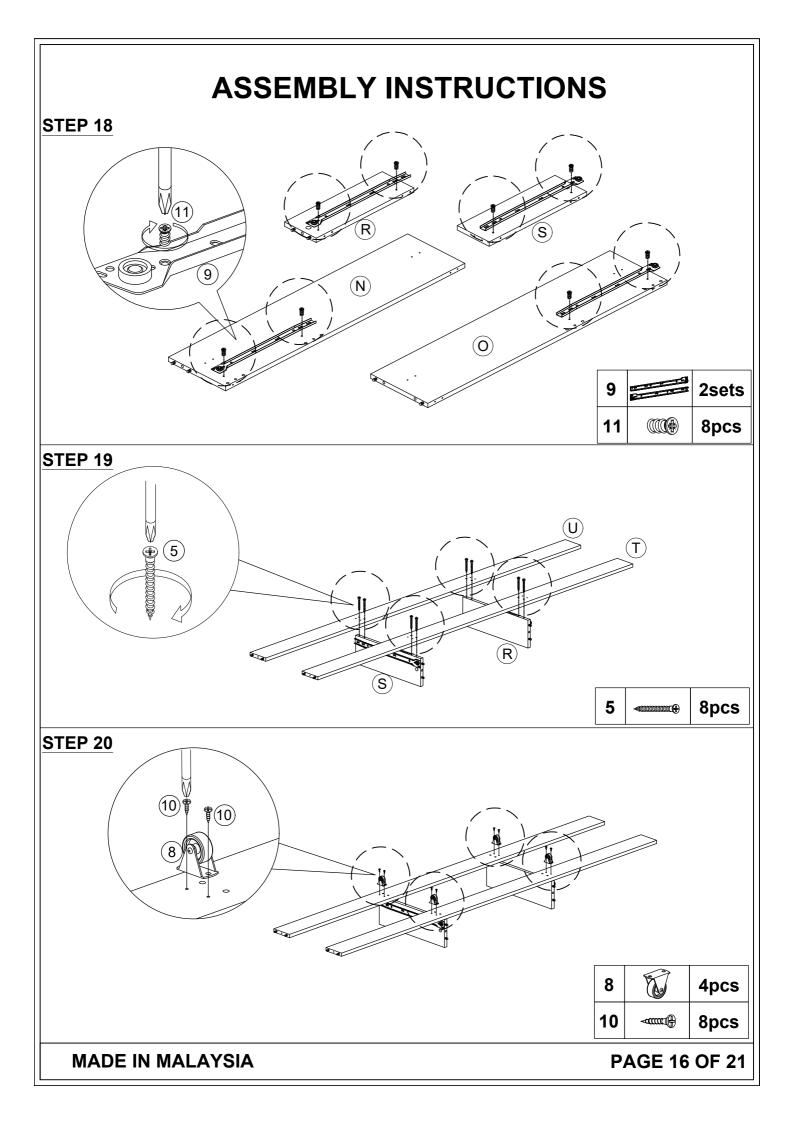


STEP 21

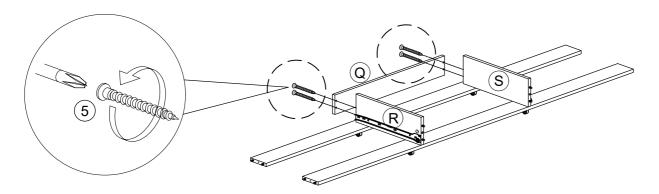


5 **4pcs** 4pcs

STEP 22

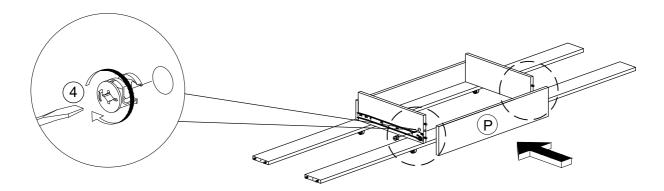

4 2pcs

STEP 23

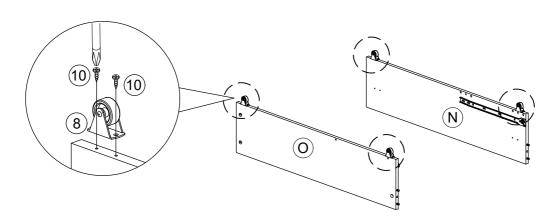


8		4pcs
10	√///	8pcs

MADE IN MALAYSIA


PAGE 17 OF 21



STEP 24

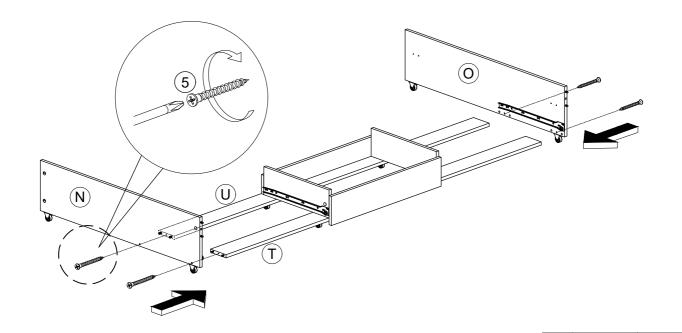


STEP 25

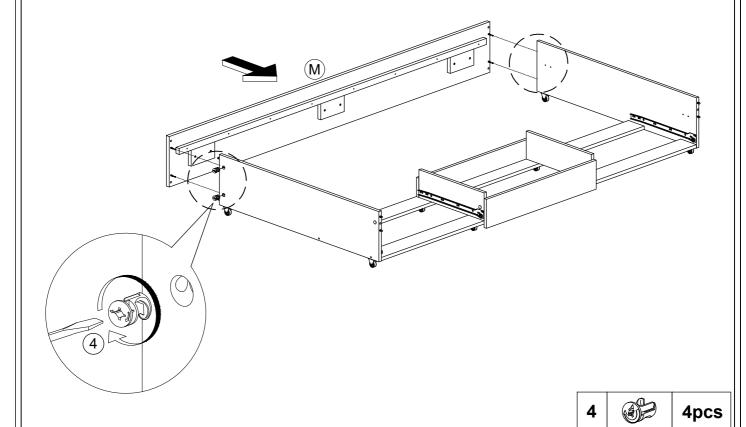

MADE IN MALAYSIA

PAGE 18 OF 21

4pcs

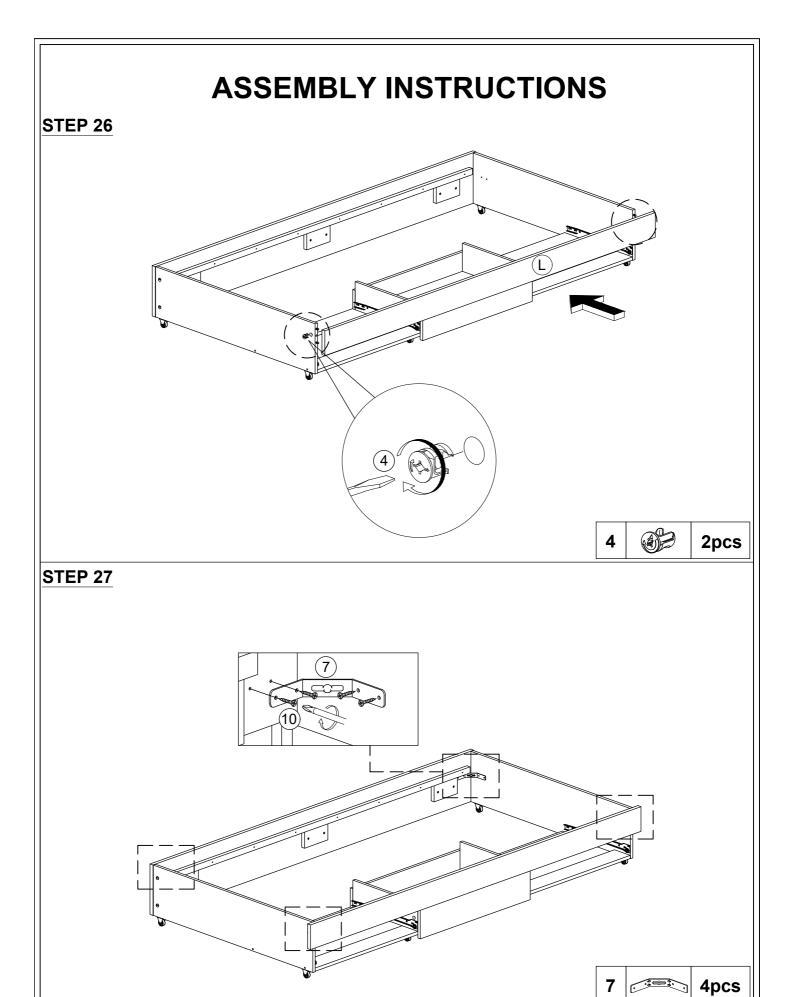

MADE IN MALAYSIA

PAGE 19 OF 21

16pcs

10

