

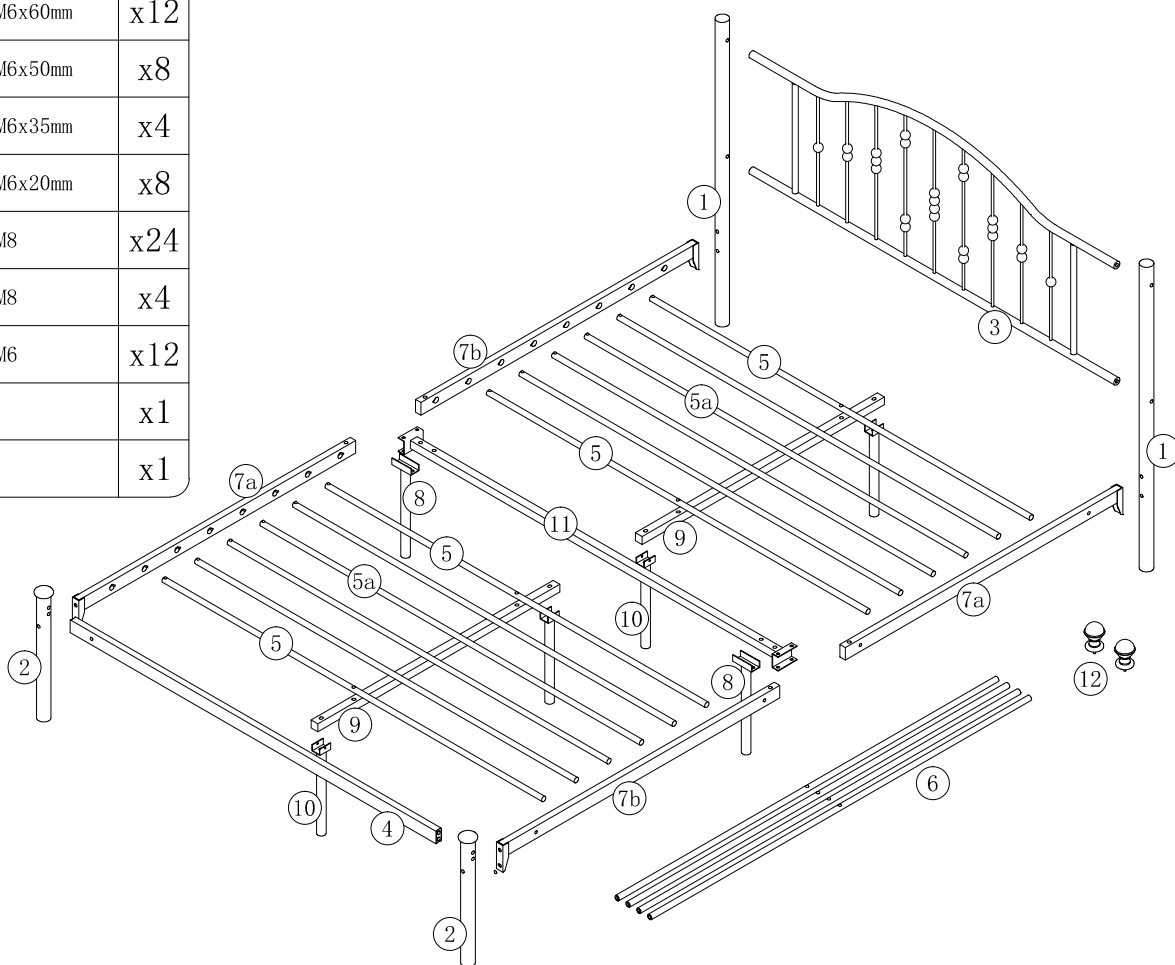
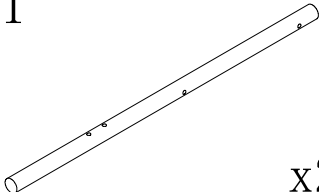

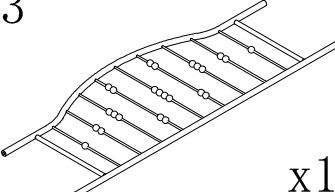
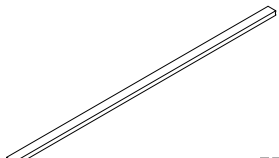
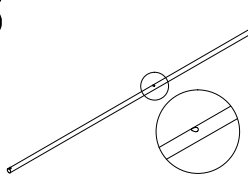
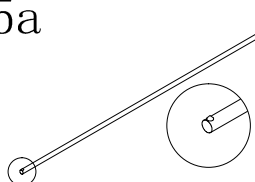
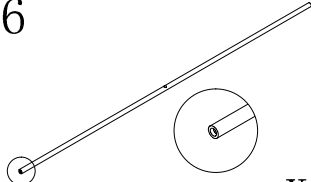
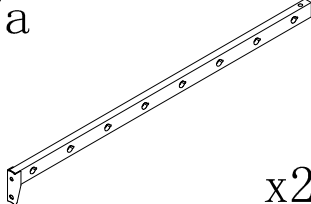
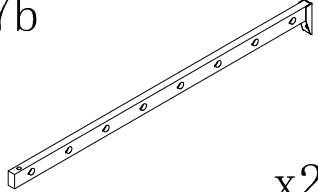
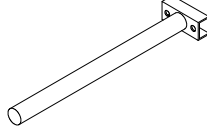
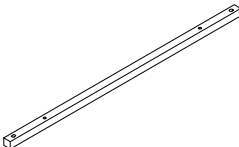


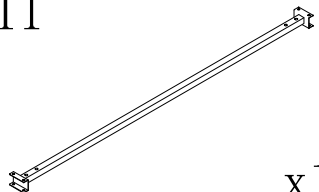


A		M8x52mm	x8
B		M6x60mm	x12
C		M6x50mm	x8
D		M6x35mm	x4
E		M6x20mm	x8
F		M8	x24
G		M8	x4
H		M6	x12
I			x1
J			x1




1  x2	2  x2	3  x1	4  x1
5  x4	5a  x8	6  x4	7a  x2
7b  x2	8  x2	9  x2	10  x4
11  x1	12  x2		

STEP 1

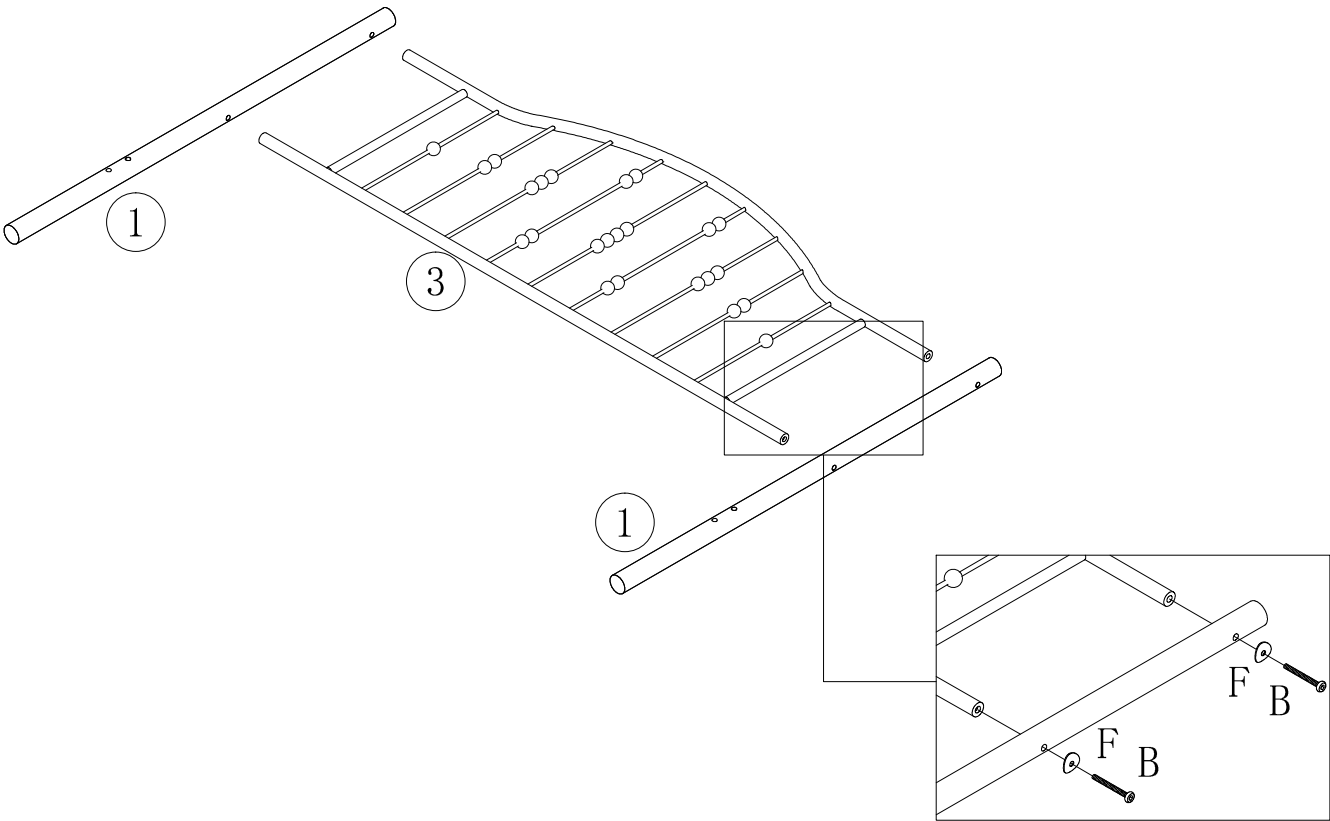


B		x4
F		x4

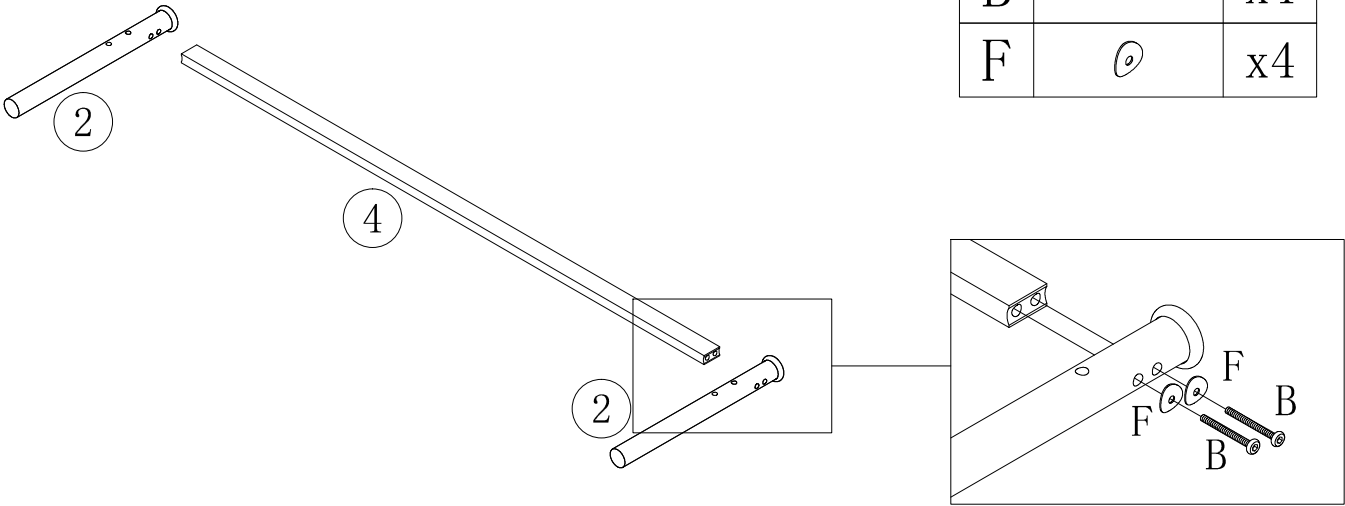


B		x4
F		x4

STEP 2






X2

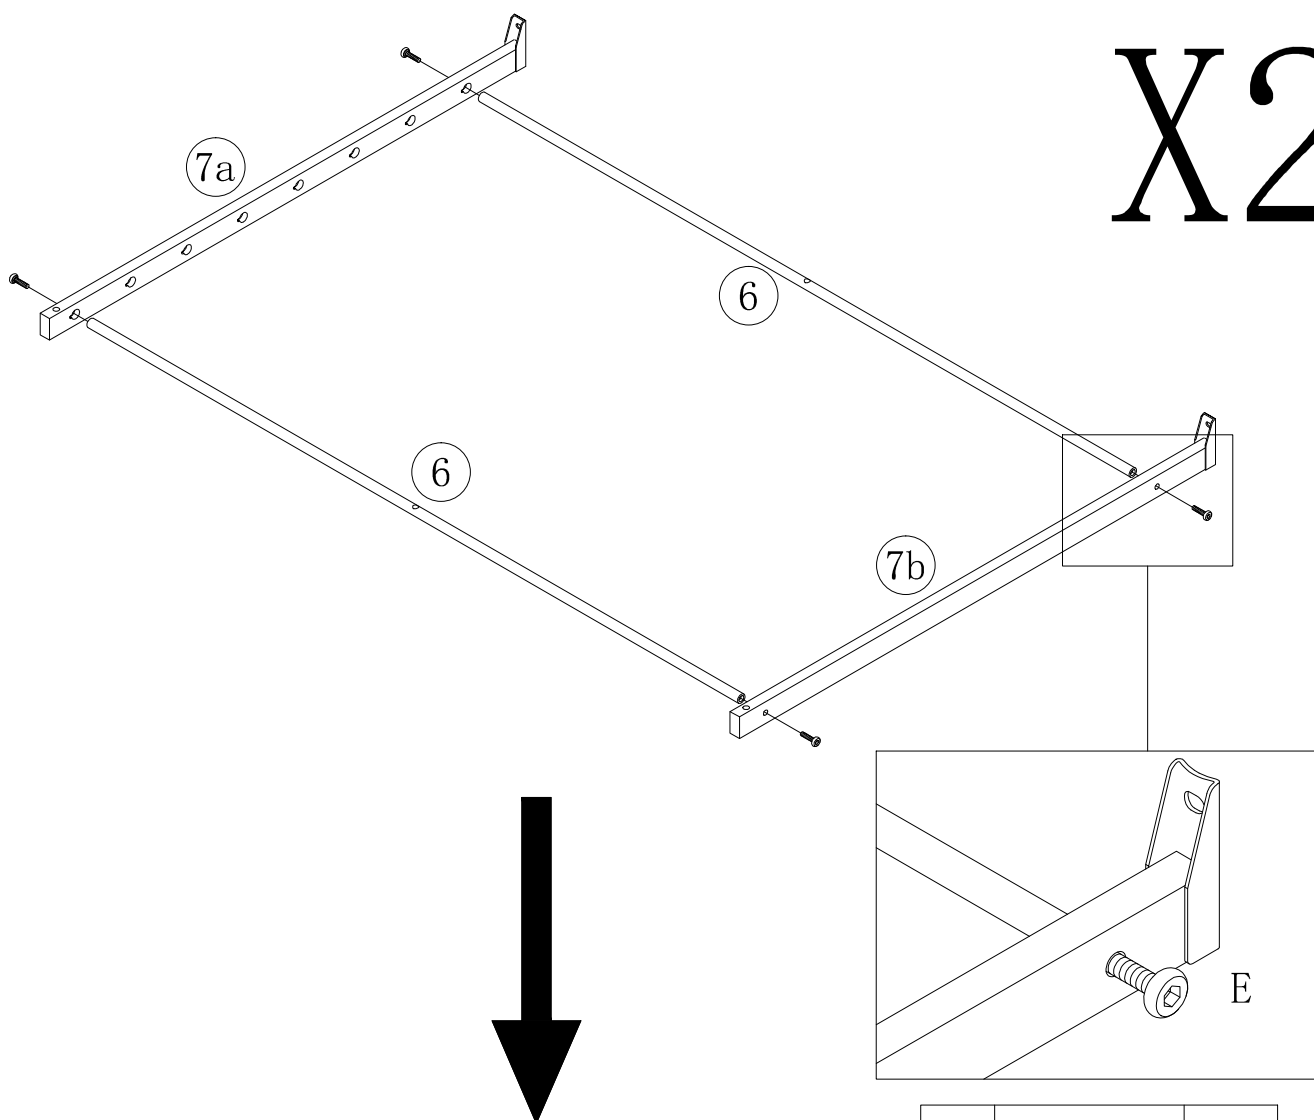

Note: please do lock the screw E directly, do not need to tighten it in this step.



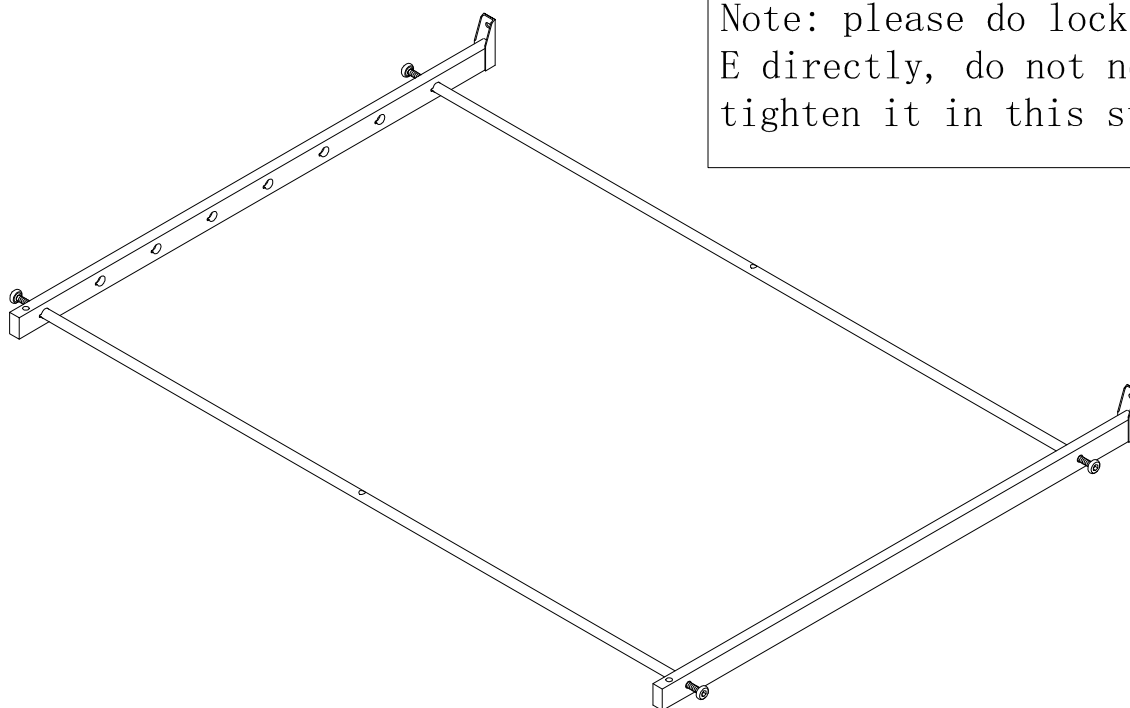


X2

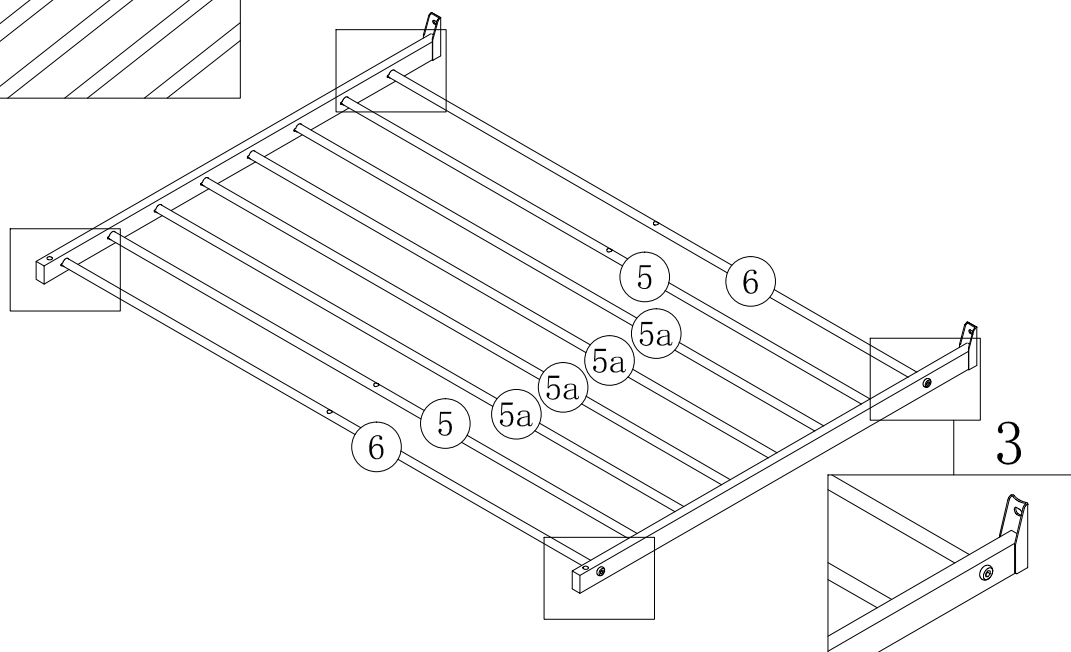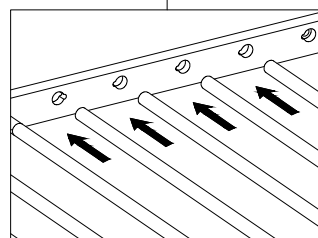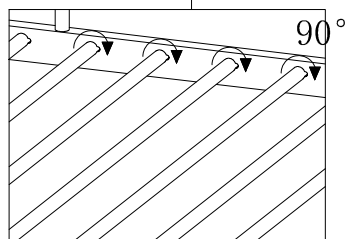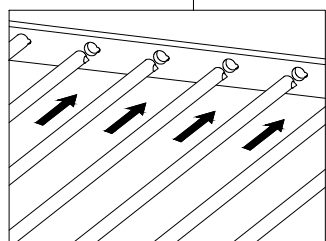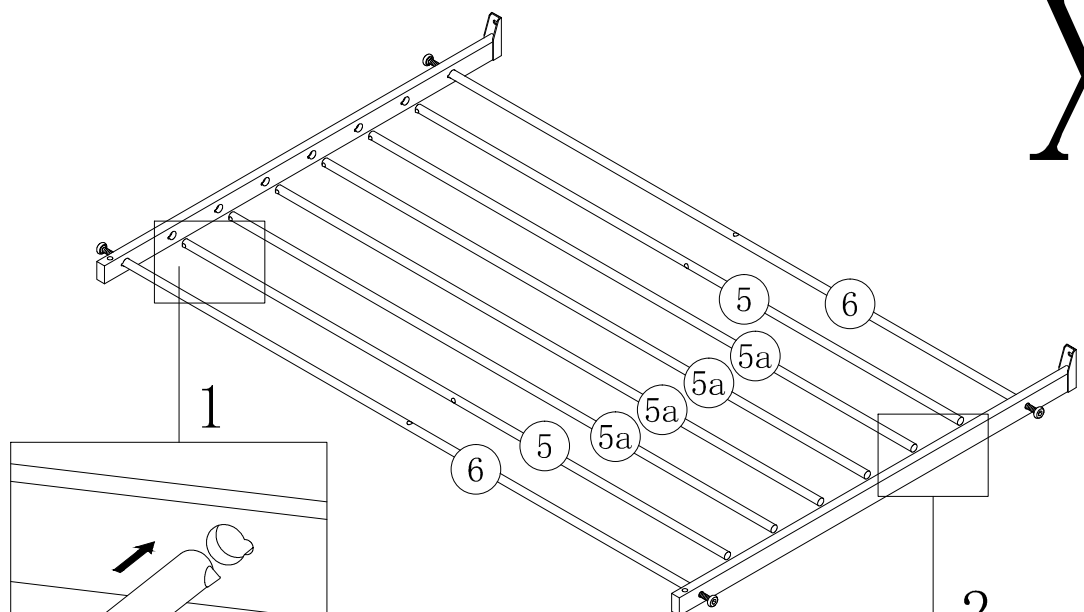


Tighten the screw E after assembling part 5 and part 5a.

STEP 4

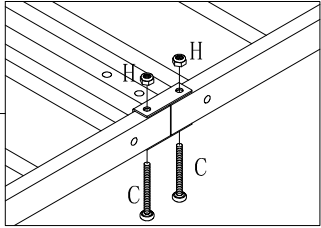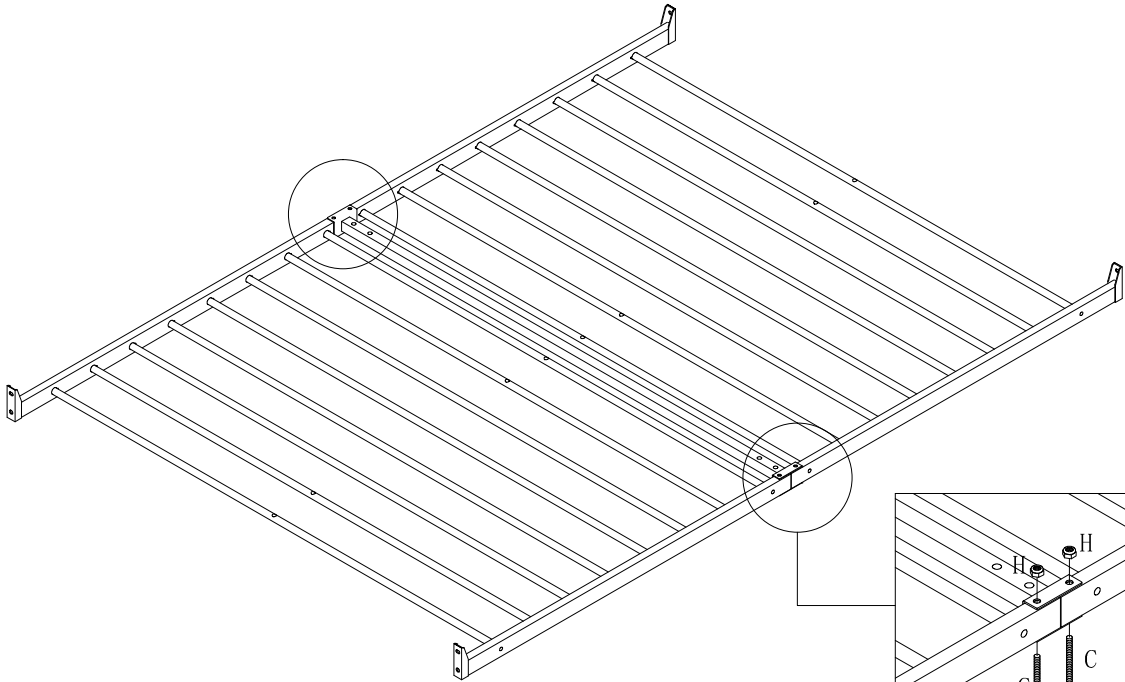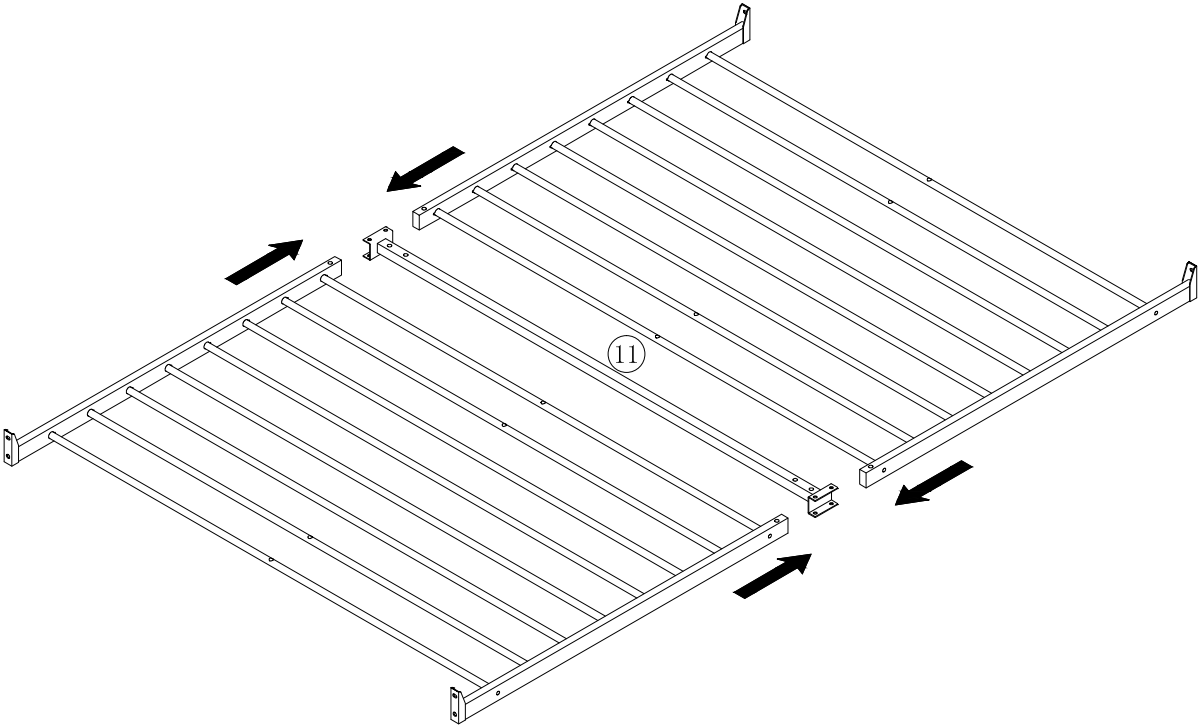

C		x4
H		x4

STEP 5

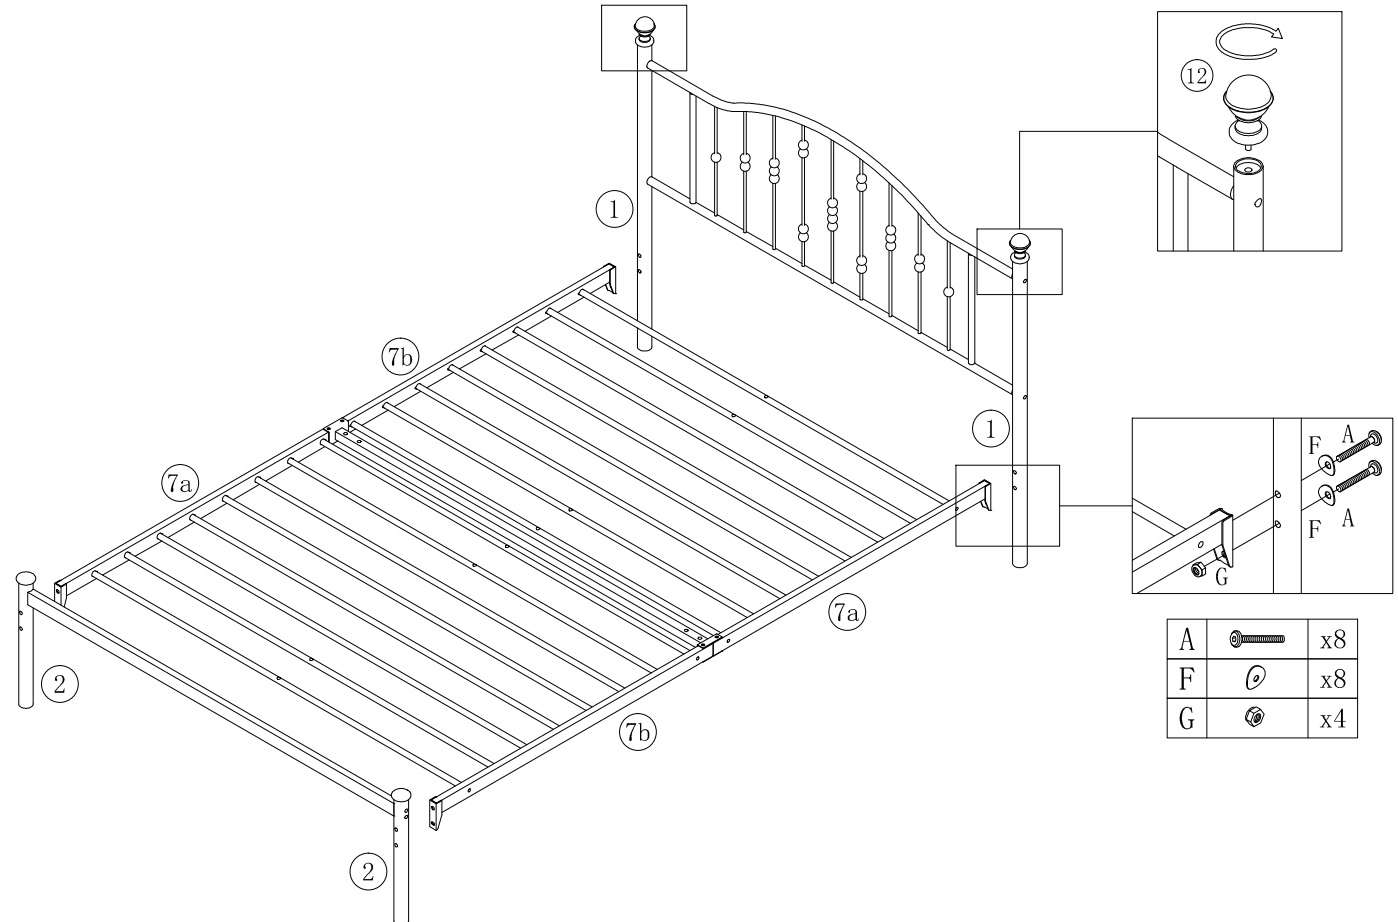

STEP 6

