



ASSEMBLY INSTRUCTIONS

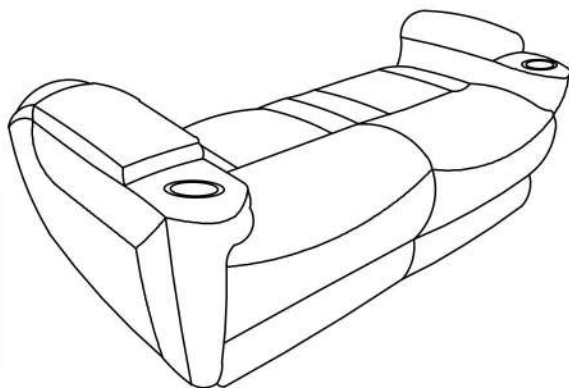

Connect wire behind seat to wire under the headrest, then slide back onto connecting brackets and push until you hear a clicking sound.

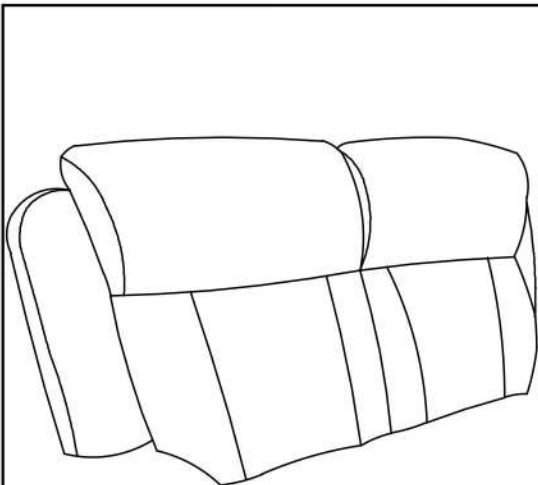