


CUBE STORAGE

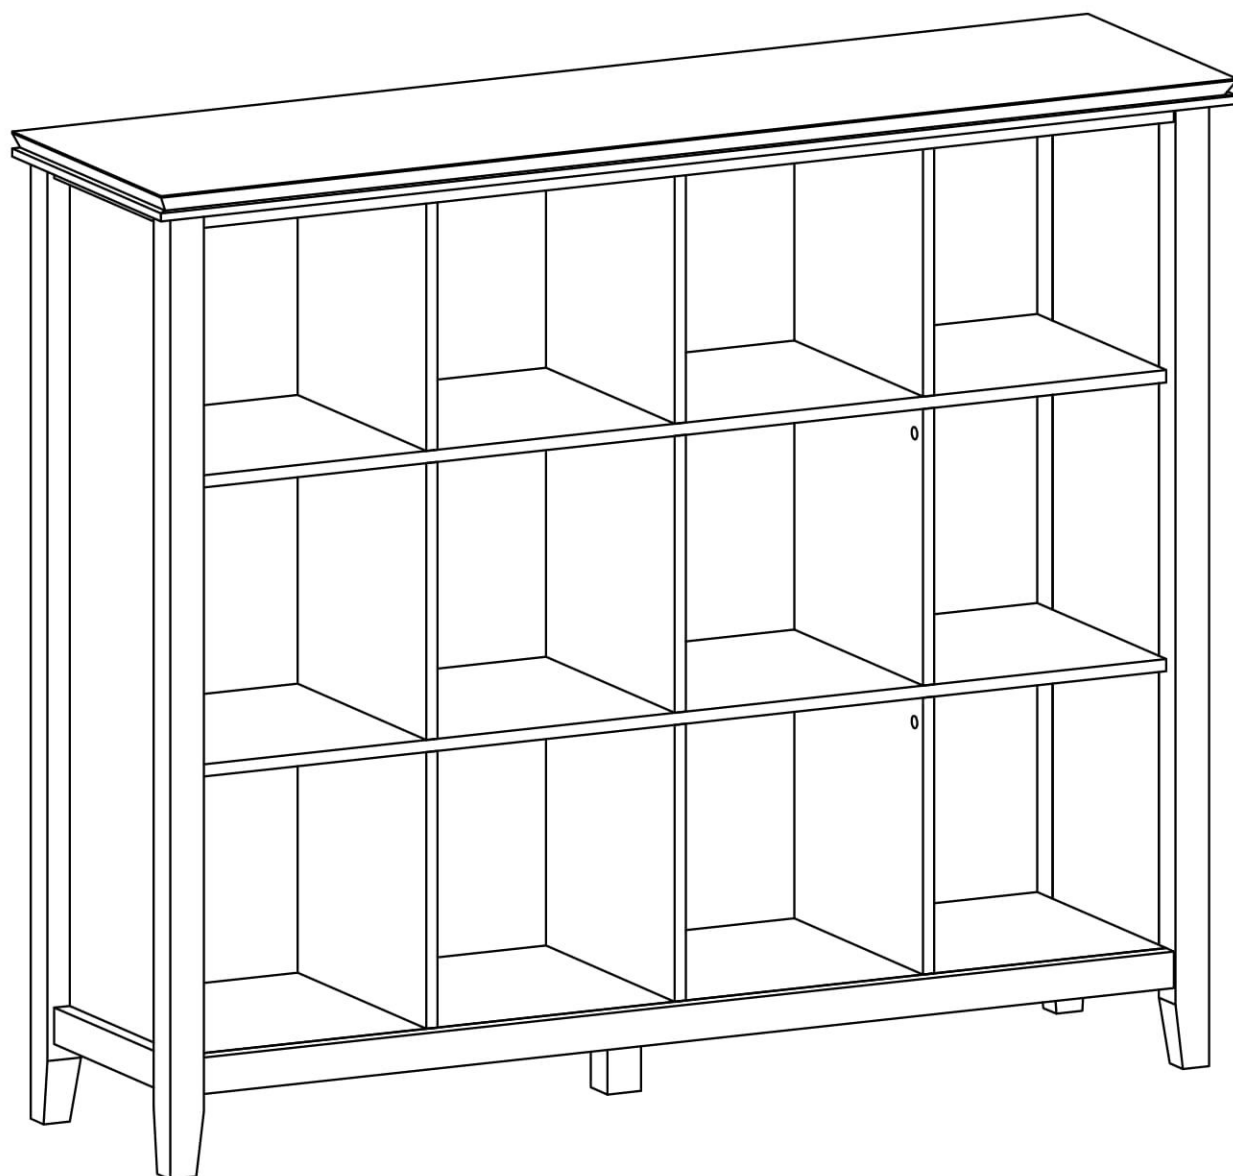

IMPORTANT : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

SAFETY INFORMATION

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

May require 2 people for ease of assembly.


CARE and MAINTENANCE

To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth. Dust with soft dry cloth.
Do not use ammonia-based cleaning products, as they will damage the finish. Do not leave liquids or damp cloths on this furniture.
To avoid dulling of the finish, do not place furniture in direct sunlight. Please inspect and tighten all screws or bolts on a regular basis to ensure proper performance and safety of your item.

PRE-ASSEMBLY INFORMATION


PART DESCRIPTION

A

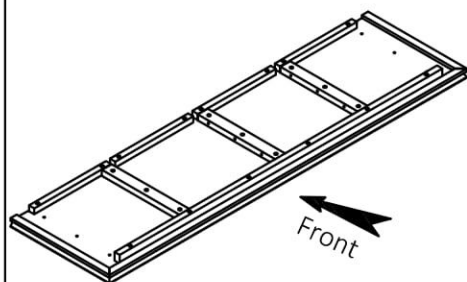


TOP
QTY 1

B

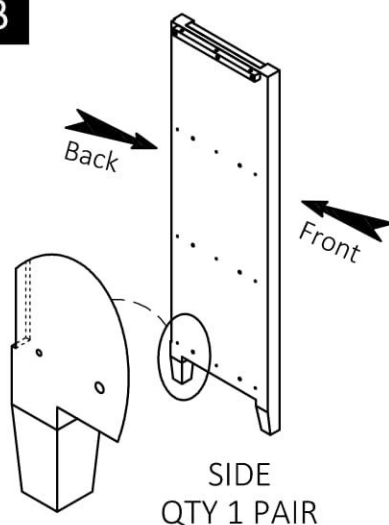


SIDE
QTY 1 PAIR

C

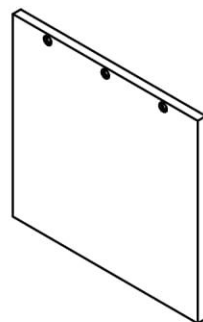


TOP DIVIDER
QTY 3

D

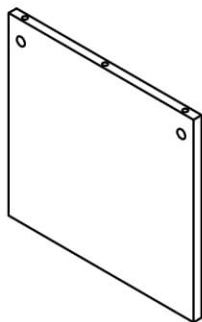


BOTTOM DIVIDER
QTY 6

E

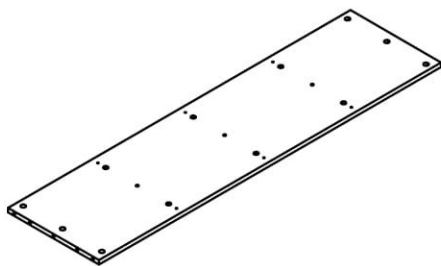


TOP SHELF
QTY 2

F

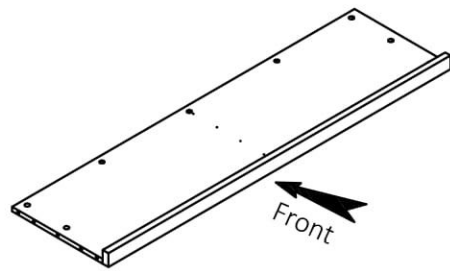


BOTTOM SHELF
QTY 1

G

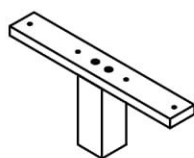









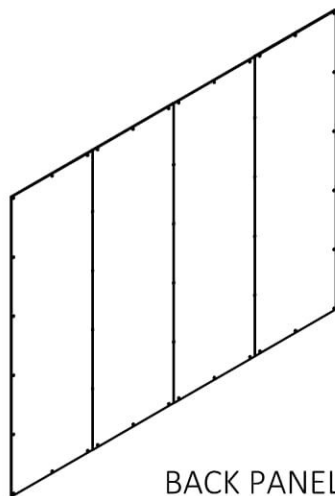

BOTTOM SUPPORT LEG
QTY 1

H




BACK PANEL
QTY 1 SET

HARDWARE DESCRIPTION


<div>1</div> <div></div> <div>ALLEN KEY SCREW M6 X 30mm QTY 33</div>	<div>2</div> <div></div> <div>CAM LOCK PIN CAM LOCK QTY 30 SETS</div>	<div>3</div> <div></div> <div>WOOD DOWEL M8 X 30mm QTY 27</div>	<div>4</div> <div></div> <div>ALLEN KEY QTY 1</div>
<div>5</div> <div></div> <div>PHILLIPS SCREW ROUND HEAD M4 X 15mm QTY 44</div>	<div>6</div> <div></div> <div>PHILLIPS SCREW M4 X 25mm QTY 4</div>	<div>7</div> <div></div> <div>a.  M4 X 25mm - 1PC</div> <div>b.  M4 X 15mm - 1PC</div> <div>c.  M4 X 25mm - 1PC</div> <div>TIPPING RESTRAINT QTY 1 SET</div>	

COMPONENTS-KEY DIAGRAM

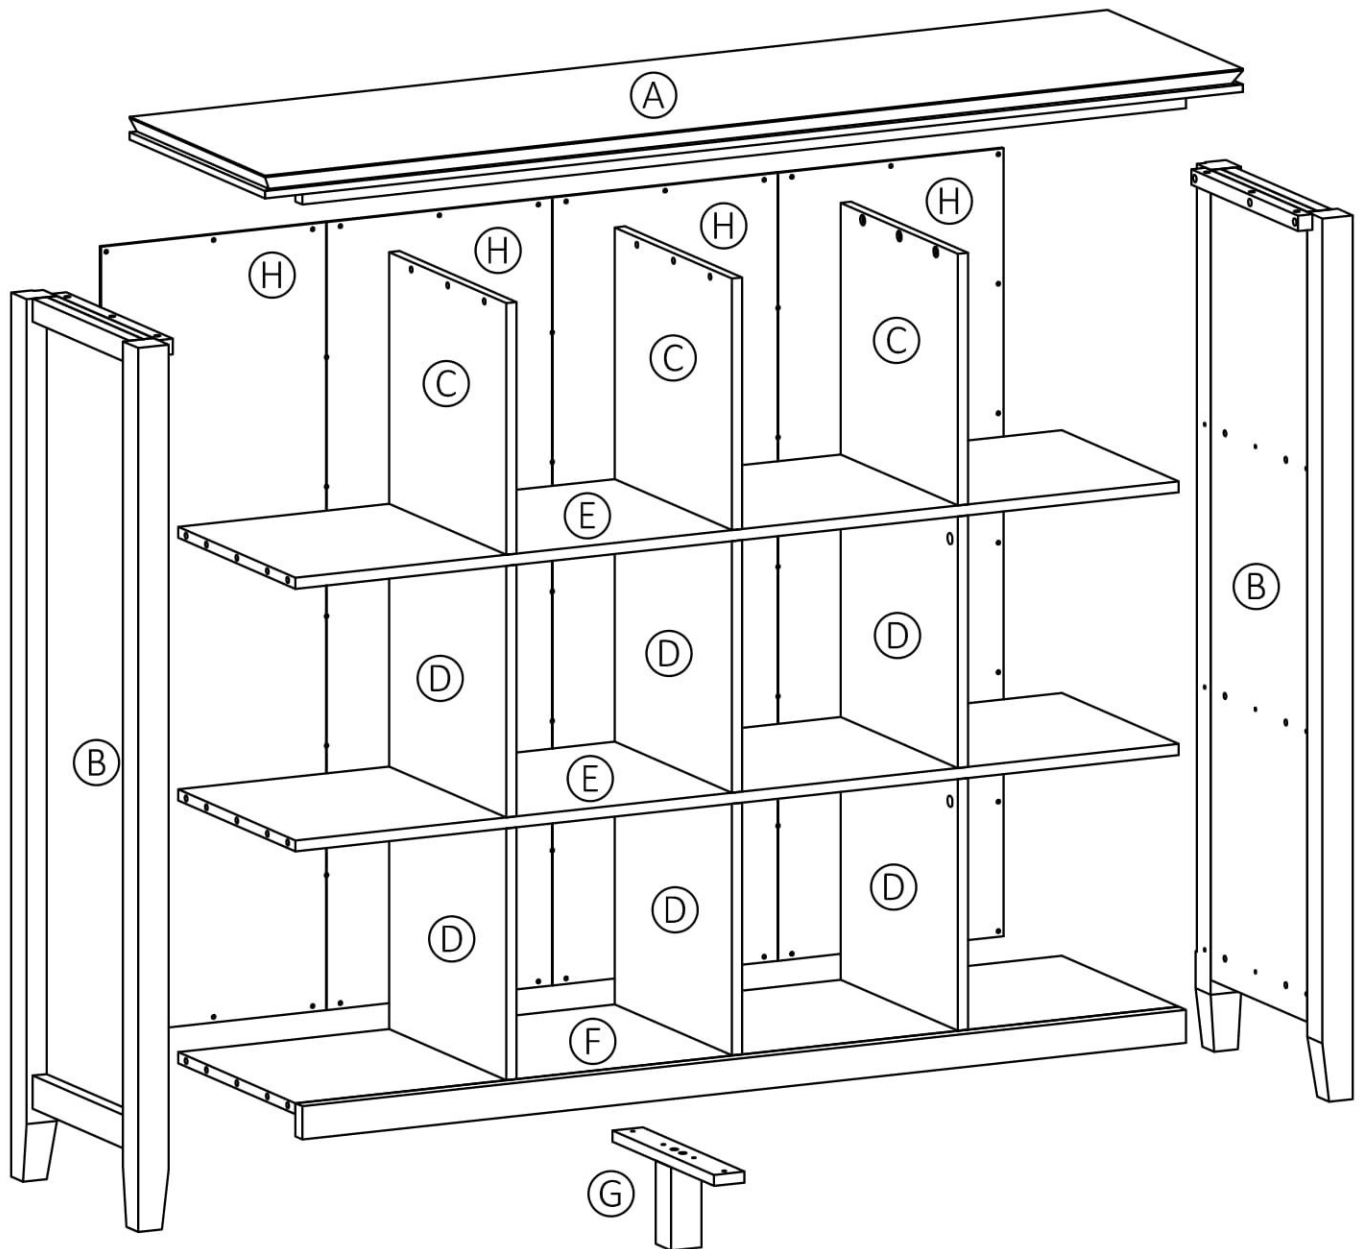

ASSEMBLY


STEP-1

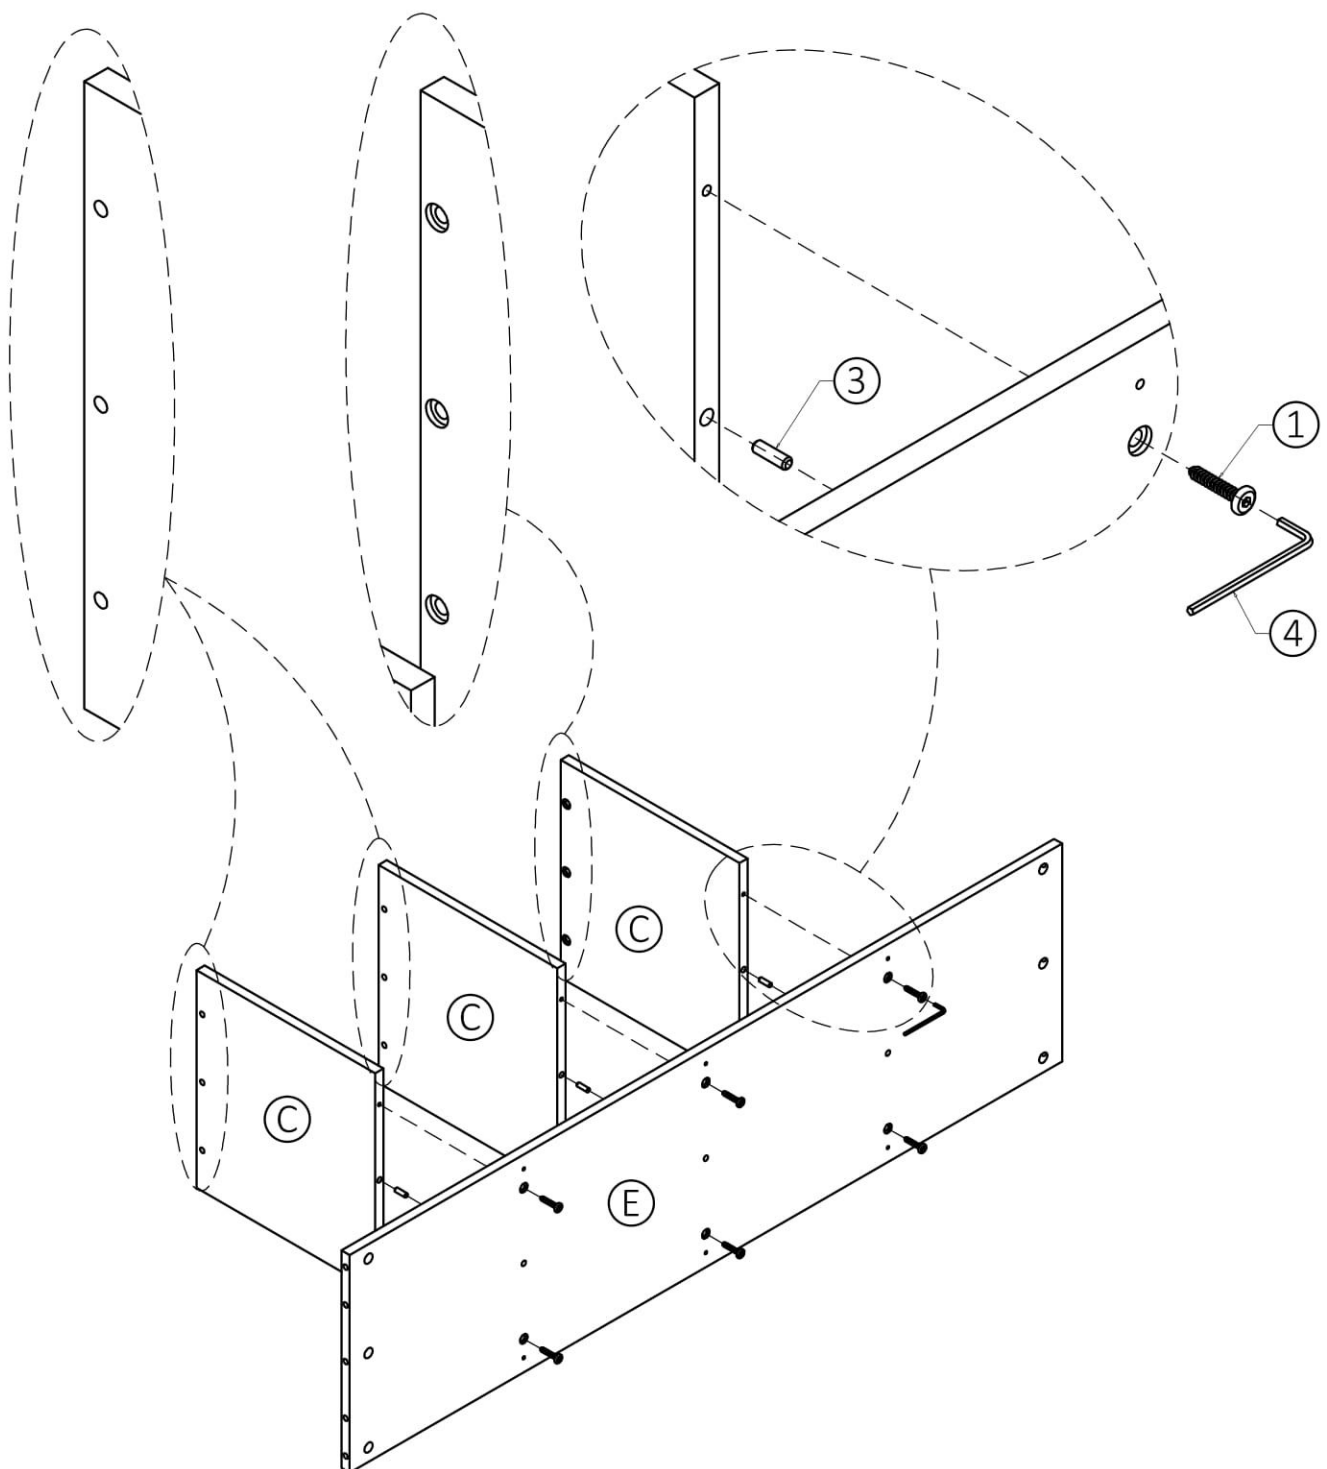

1. Insert 1 Dowel (3) into pre-drilled hole on each Top Divider (C).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach 3 Top Dividers (C) to Top Shelf (E) using 6 Allen Key Screws (1) (2 Screws on each Divider).
4. Use Allen Key (4) to tighten screws. Do not over-tighten.

ASSEMBLY


STEP-2

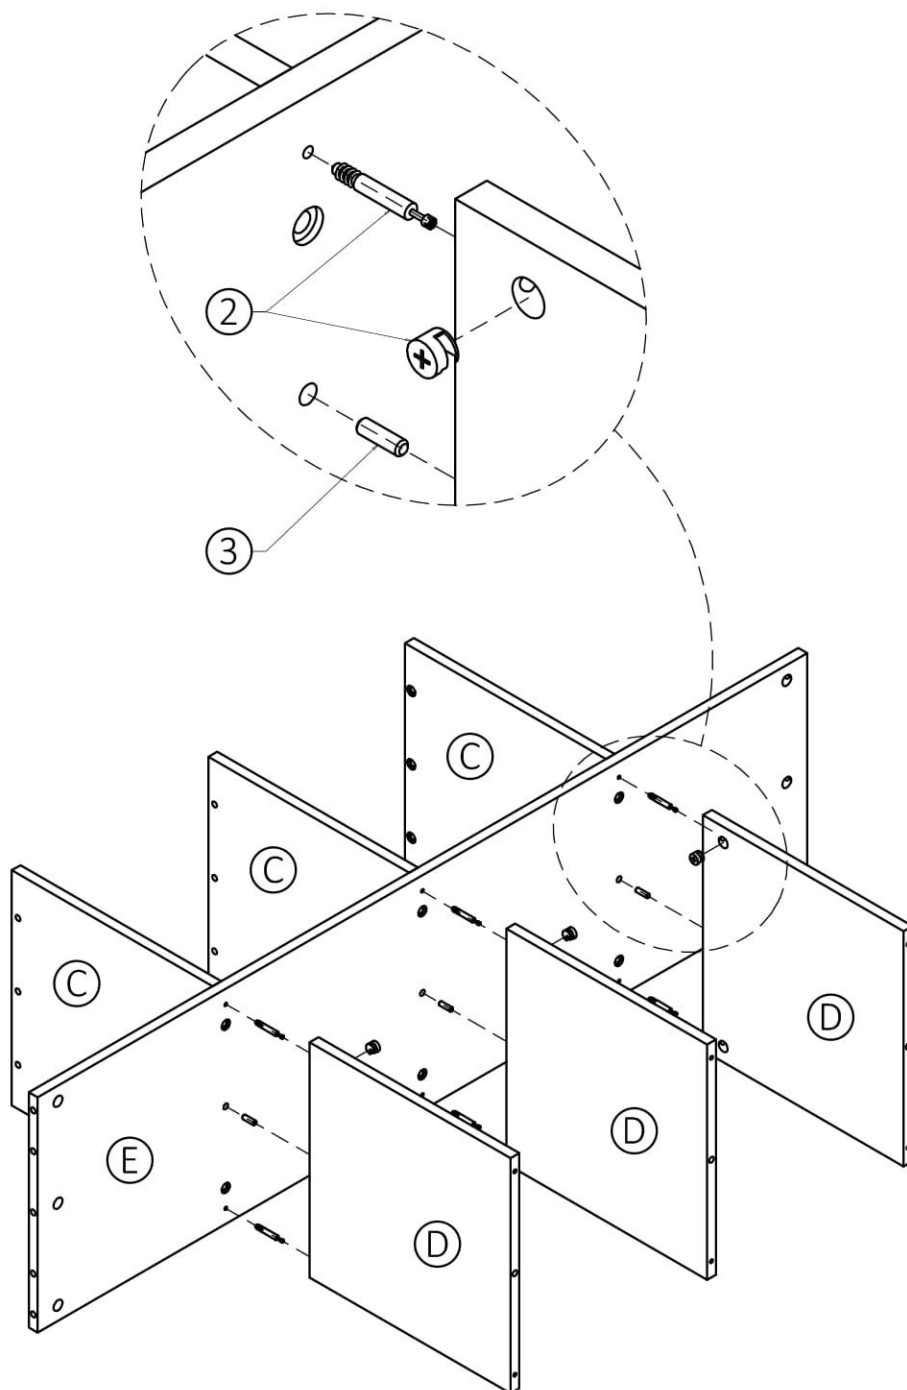

1. Insert 1 Dowel (3) into pre-drilled hole on each Bottom Divider (D).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach 6 Cam Lock Pins (2) to Top Shelf (E) using guide holes.
4. Align Cam Lock Pins with pre-drilled holes on Bottom Dividers (D).
5. Insert 2 Cam Locks (2) into pre-drilled holes on each Divider (D).
6. Use flathead screwdriver secure Cam Locks.

ASSEMBLY


STEP-3

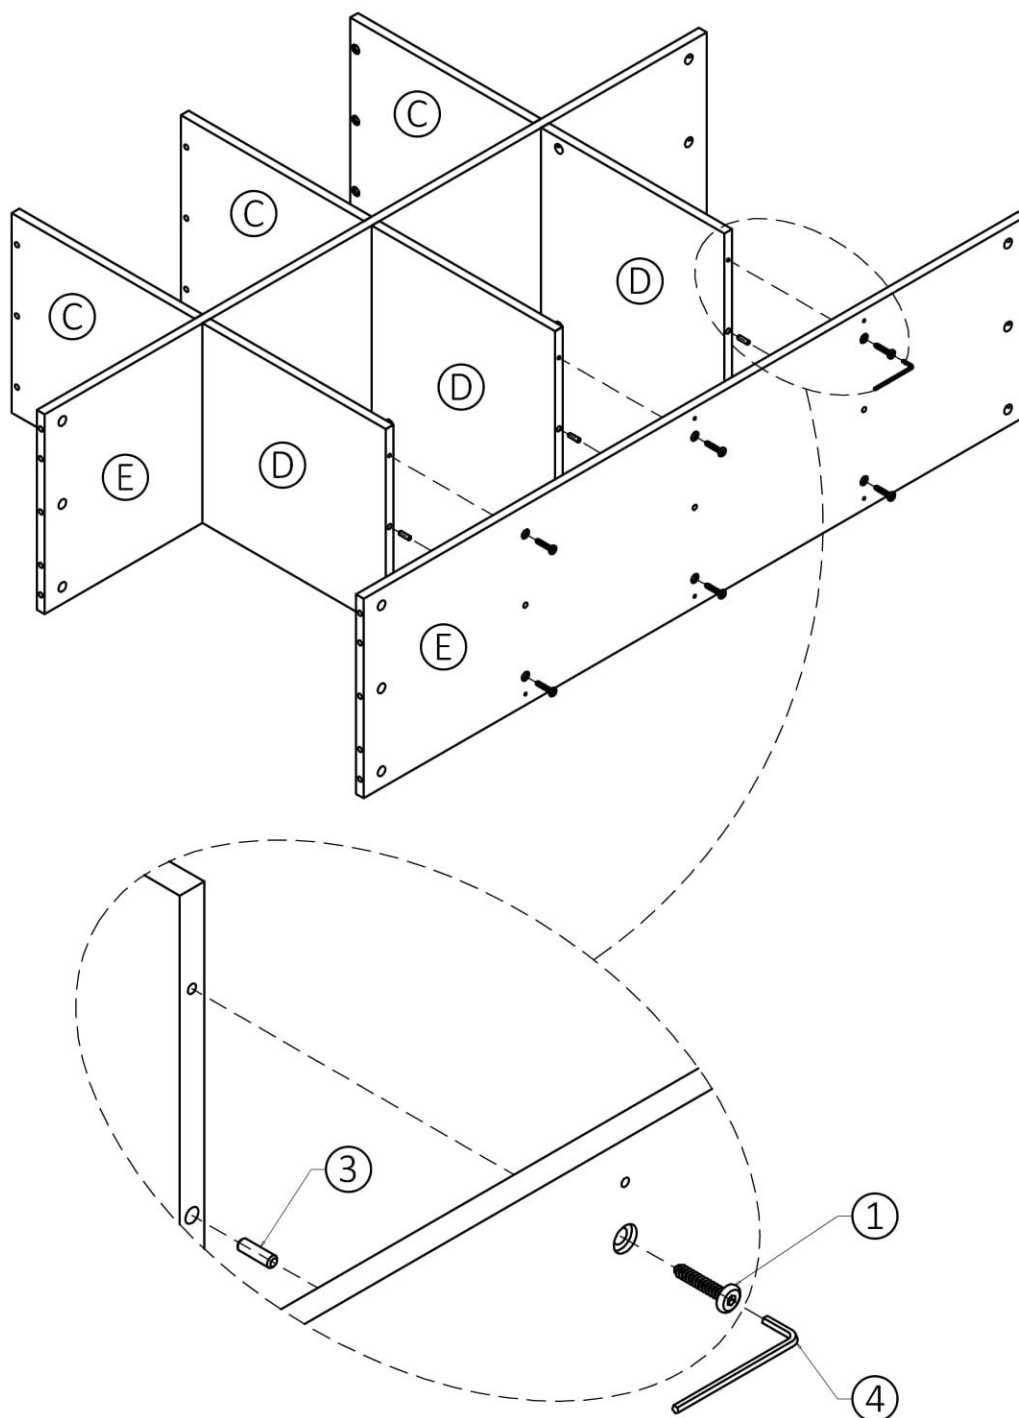

1. Repeat Step-1 for the second Top Shelf (E).

ASSEMBLY


STEP-4

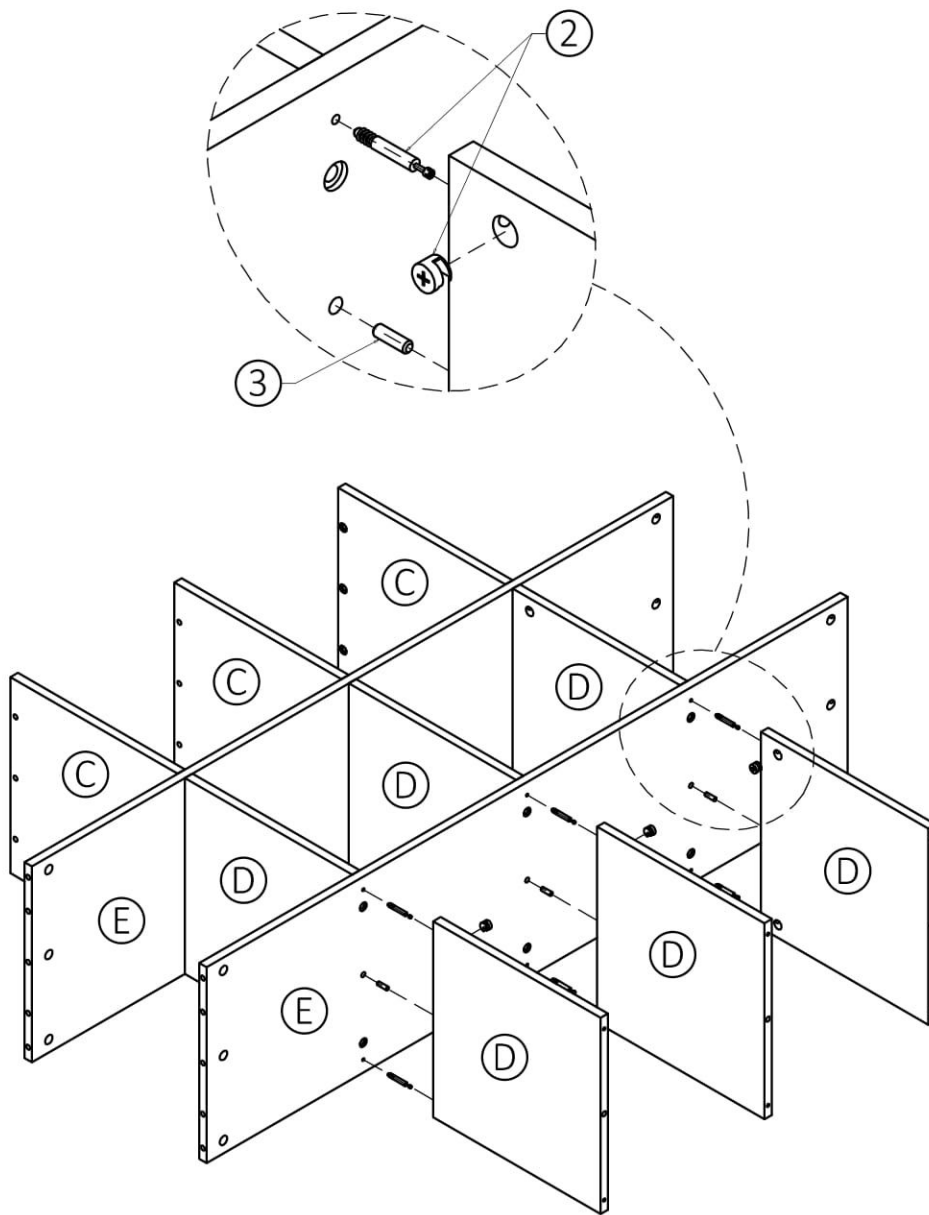

1. Repeat Step-2 for the other three Bottom Dividers (D).

ASSEMBLY


STEP-5

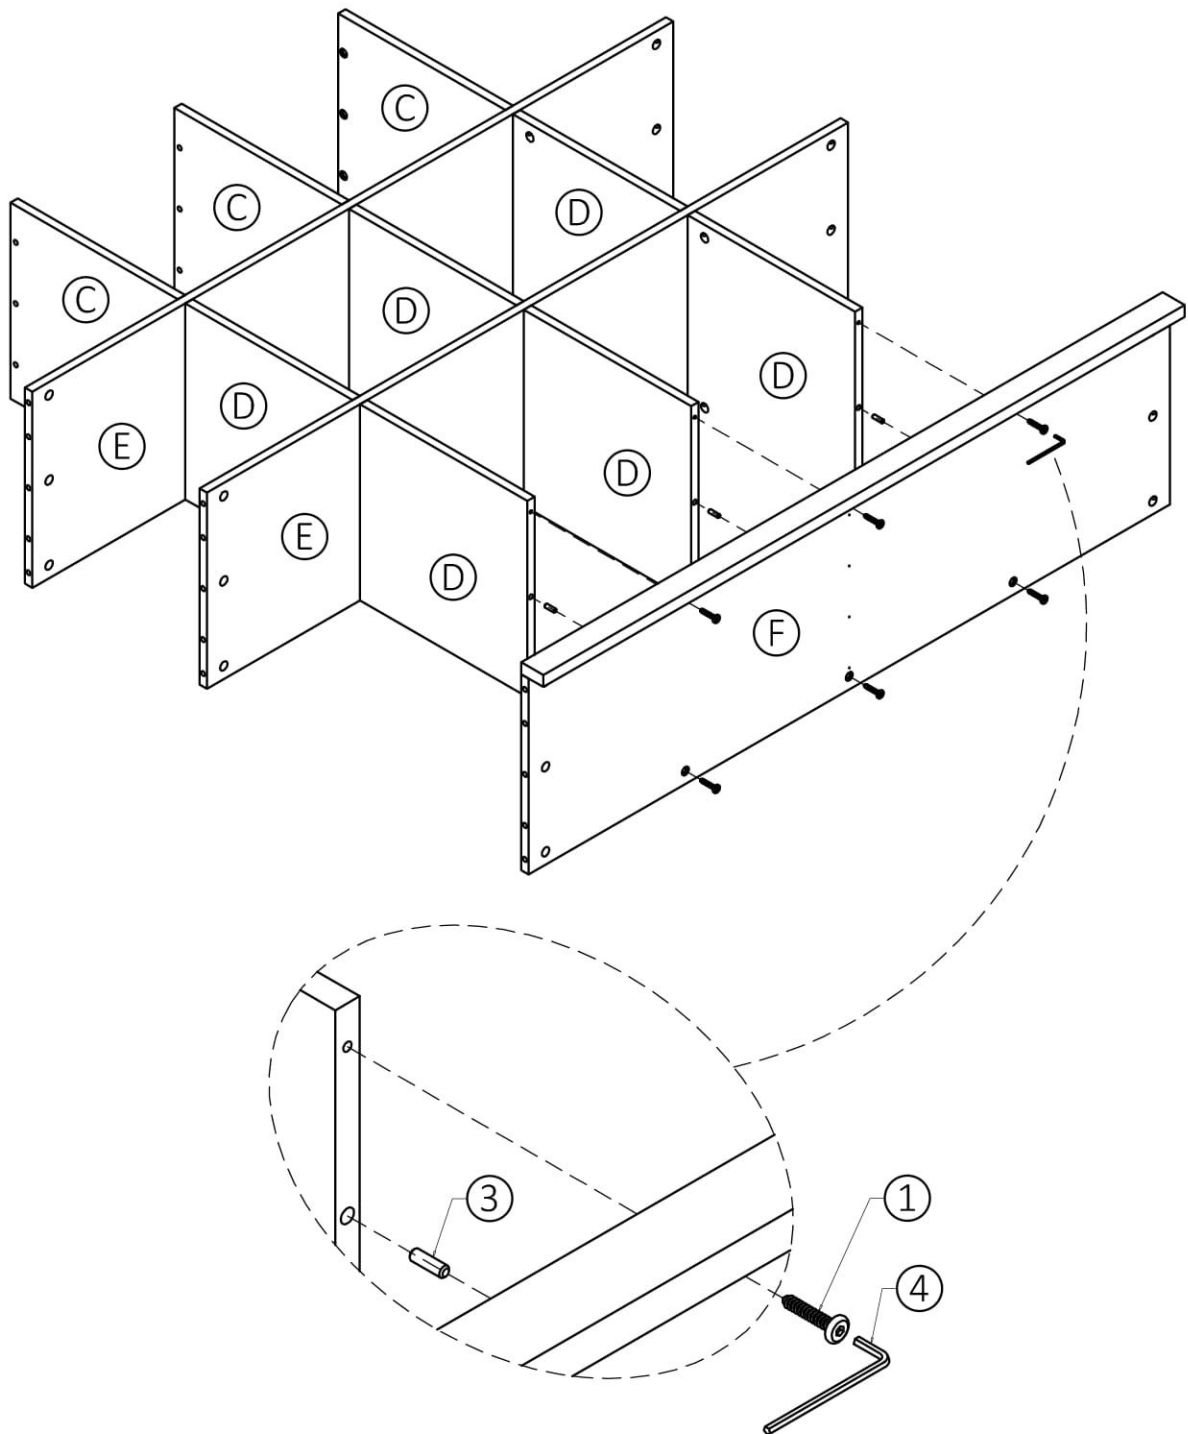

1. Insert 1 Dowel (3) into pre-drilled hole on each Bottom Divider (D).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach 3 Bottom Dividers (D) to Bottom Shelf (F) using 6 Allen Key Screws (1) (2 Screws on each Divider).
4. Use Allen Key (4) to tighten screws. Do not over-tighten.

ASSEMBLY


STEP-6

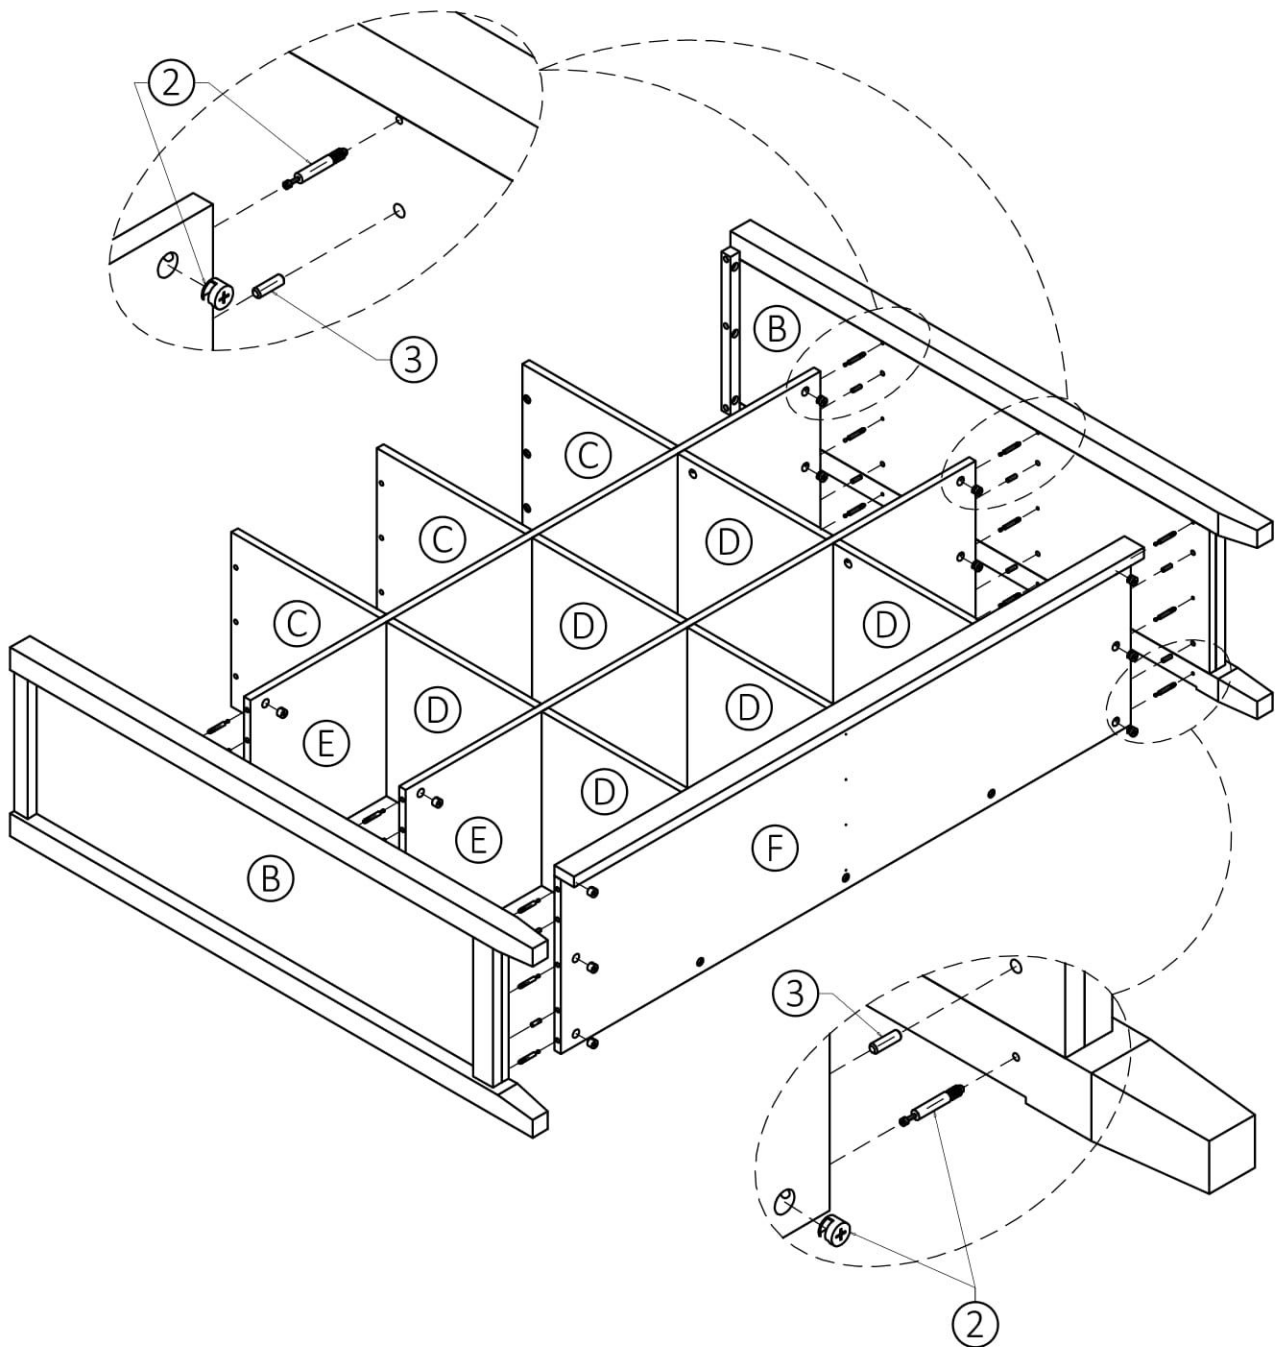

1. Insert 8 Dowels (3) into pre-drilled holes on each Top Shelf (E) and Bottom Shelf (F) (4 dowels on each shelf).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach 9 Cam Lock Pins (2) to each Side (B) using guide holes.
4. Align Cam Lock Pins with pre-drilled holes on Top Shelves (E) and Bottom Shelf (F).
5. Insert 6 Cam Locks (2) into pre-drilled holes on each Top Shelf (E) and Bottom Shelf (F) (3 Cam Locks on each side of shelf).
6. Use flathead screwdriver secure Cam Locks.

ASSEMBLY

STEP-7

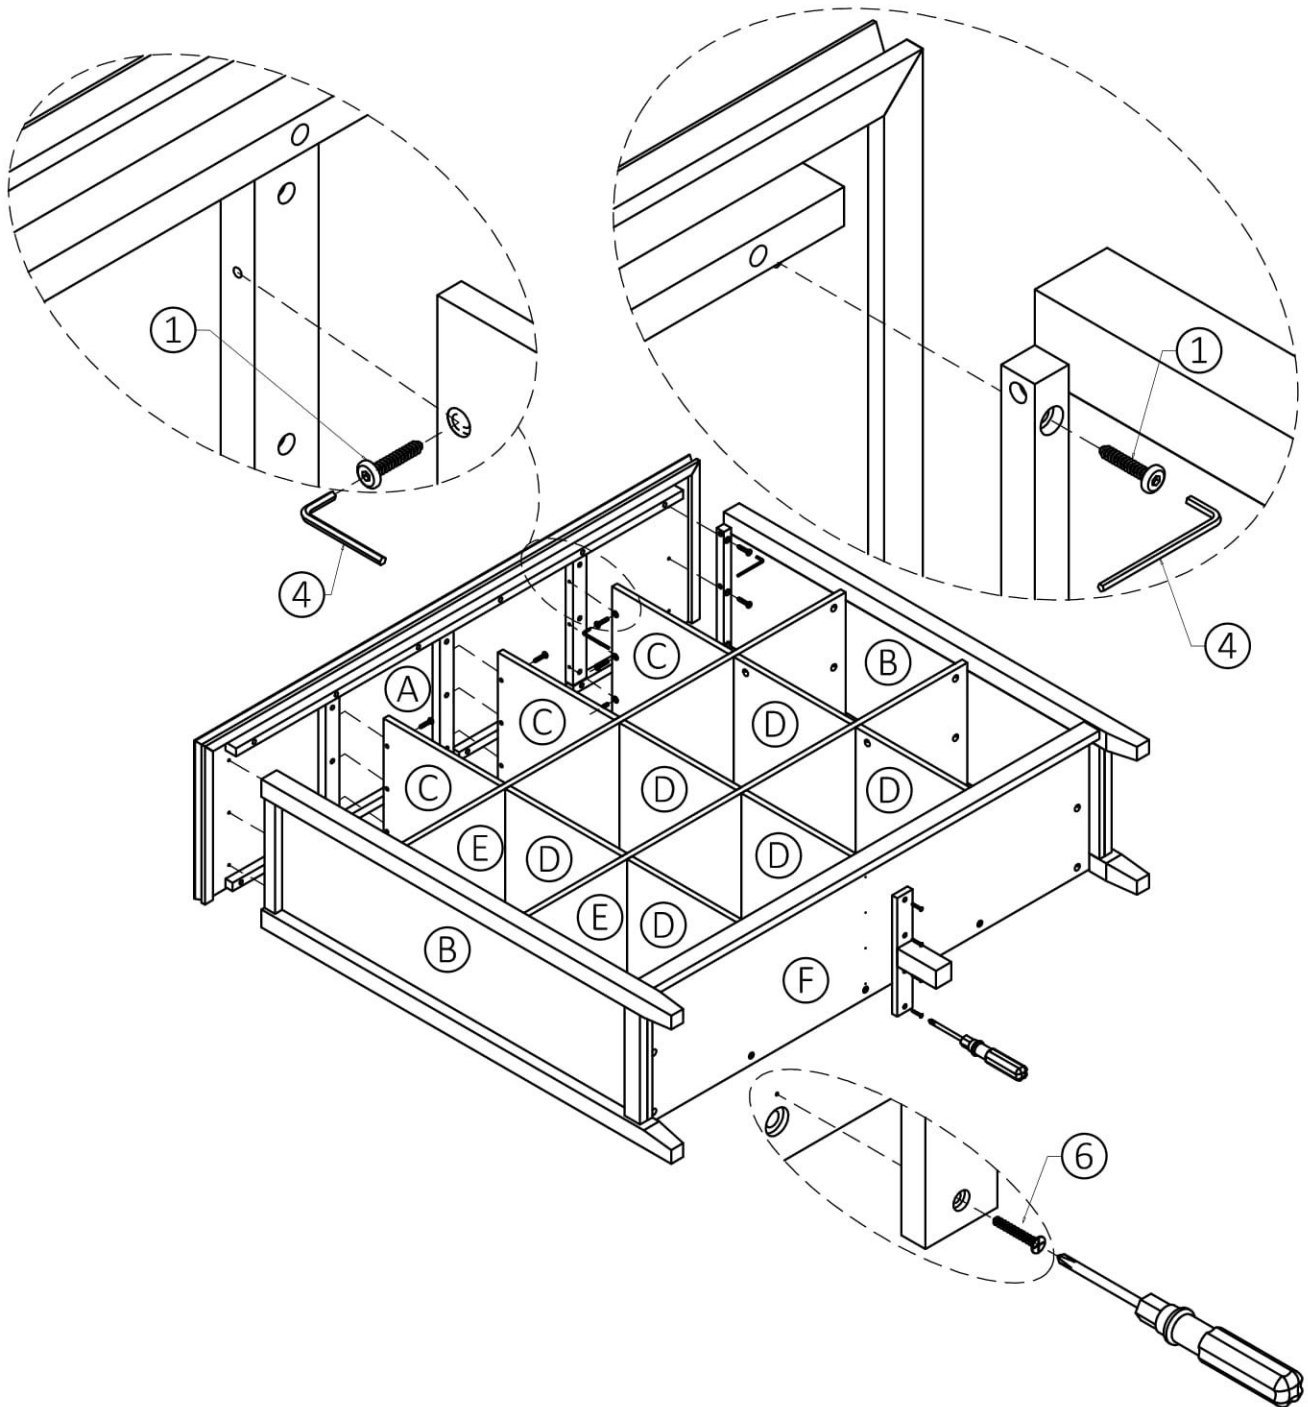

1. Attach Top (A) to Sides (B) and 3 Top Dividers (C) using 15 Allen Key Screws (1) (3 screws on each Side and Divider).
2. Use Allen Key (3) to tighten Screws. Do not over-tighten.
3. Attach Bottom Support Leg (G) to Bottom Shelf (F) using 4 Phillips Screws (6)
4. Use Phillips screwdriver to snugly tighten screw.


ASSEMBLY

NOTE: Injuries and damage can occur from furniture tip-over. It is important to use the safety bracket included. If the tipping restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

STEP-9



NOTE: The screwdriver is not included in the hardware pack.

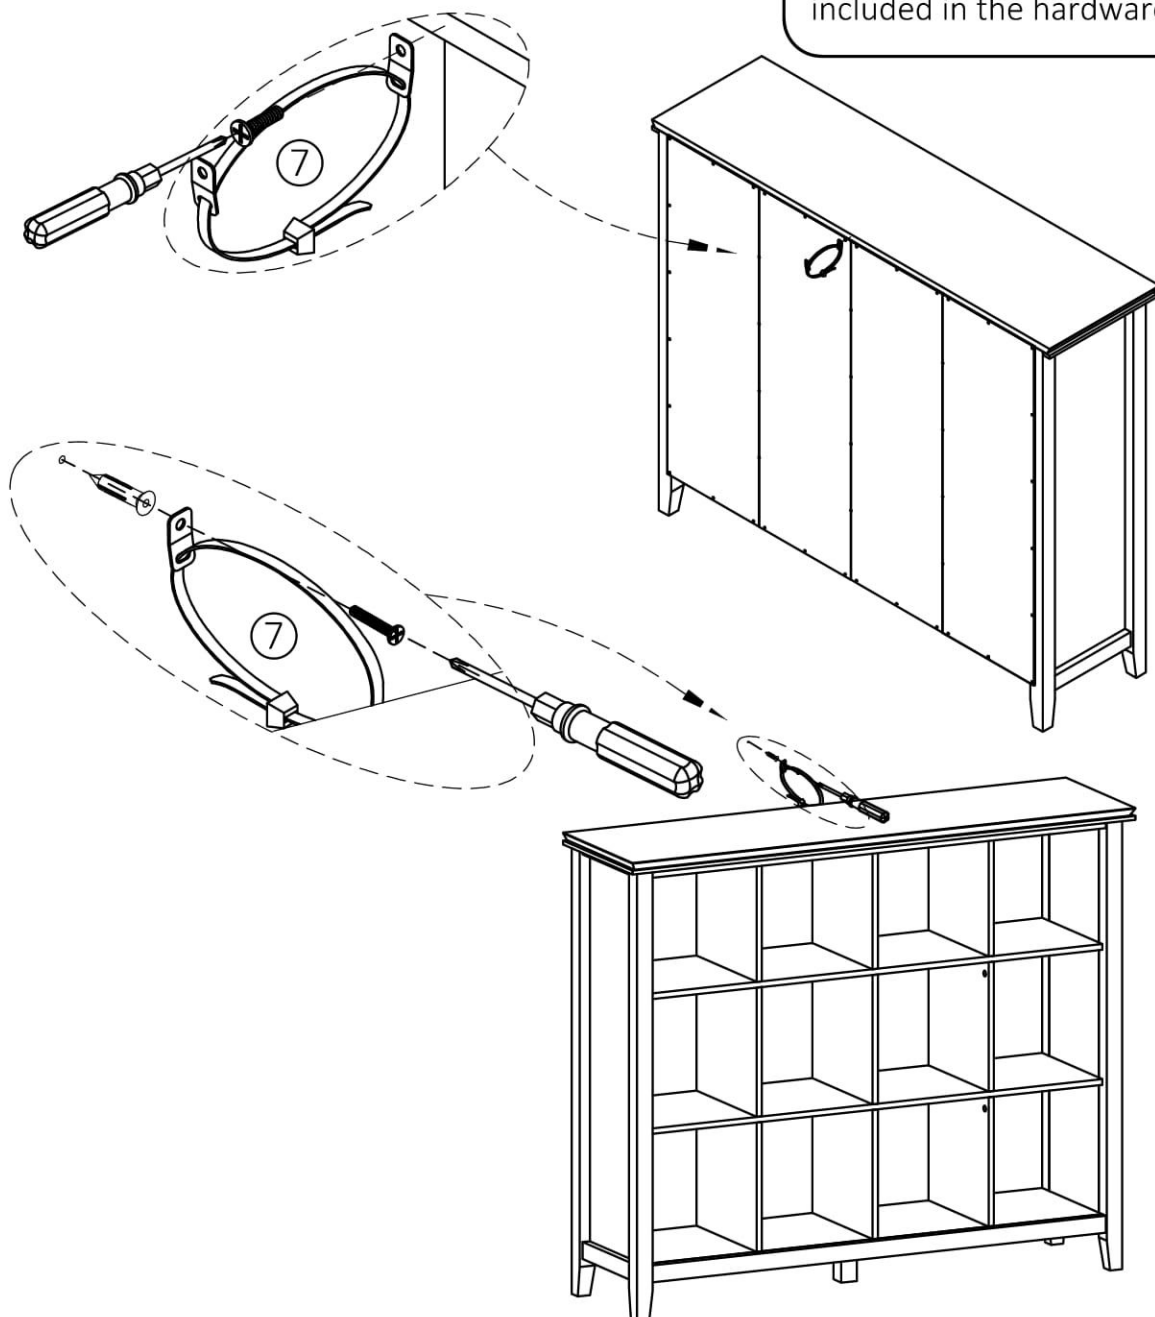

1. To attach Tipping Restraint (7), follow instructions on Tipping Restraint package.

When you determined the location for your unit, install the Furniture Tipping restraint. Carefully follow the instructions contained on the package.