


Assembly Instructions

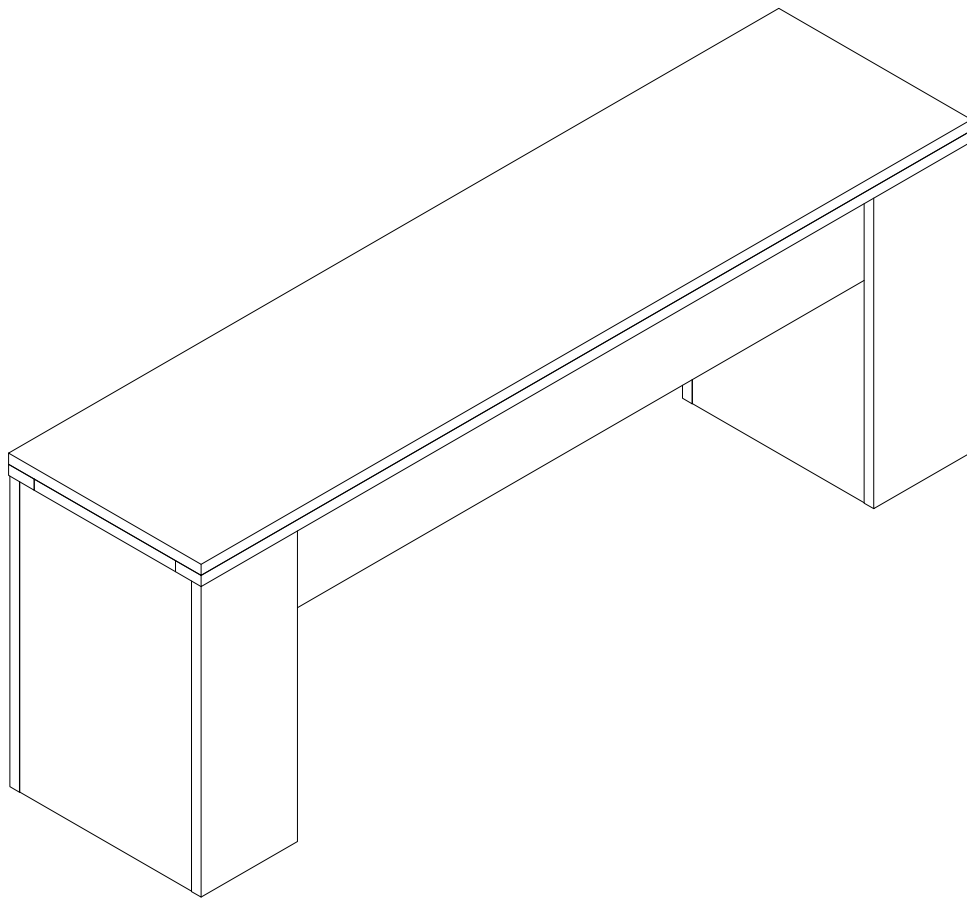


Side Chair

Model No.
HOGA-HL0331

Contact Us




We're here to help you.

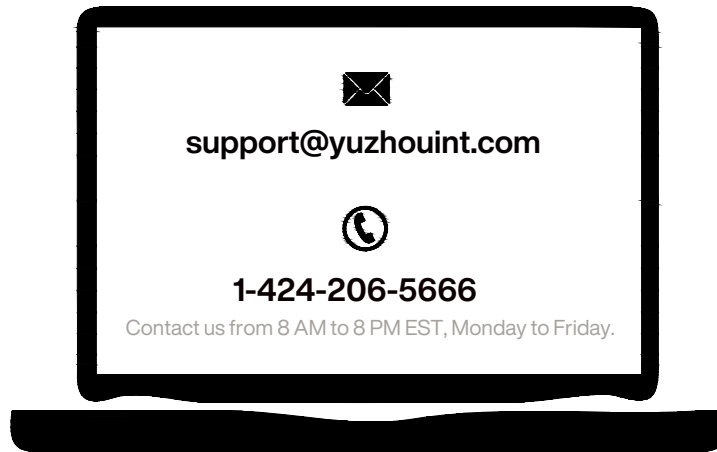

Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

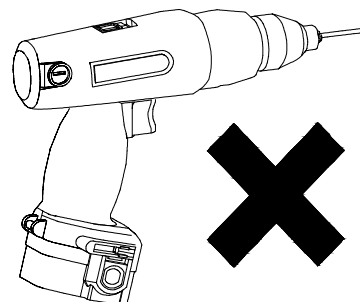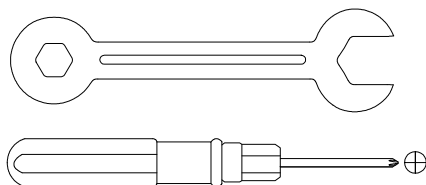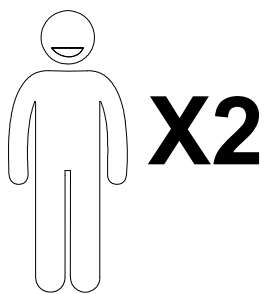



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

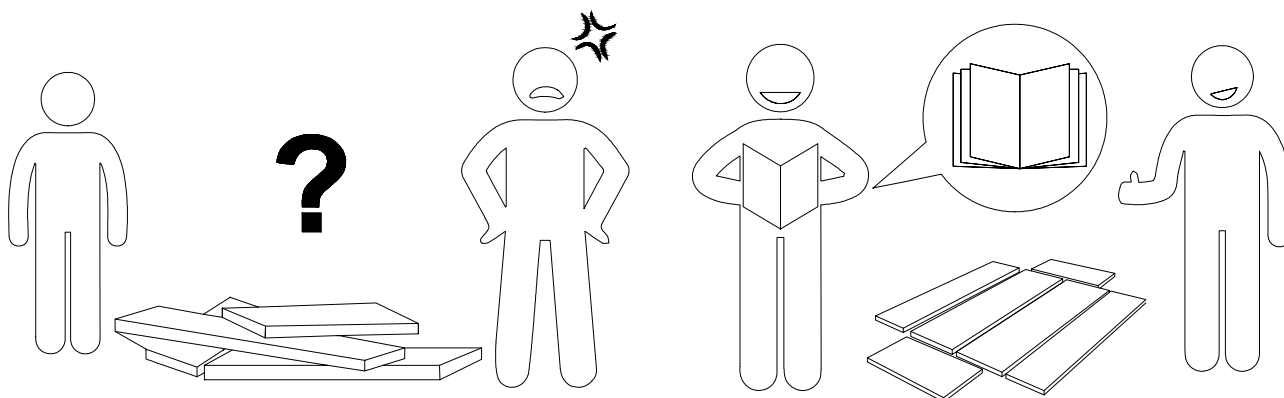

AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.




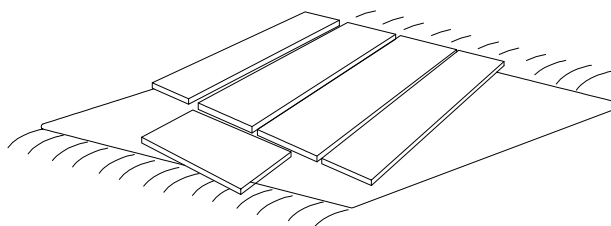
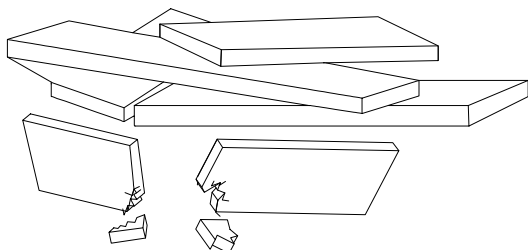


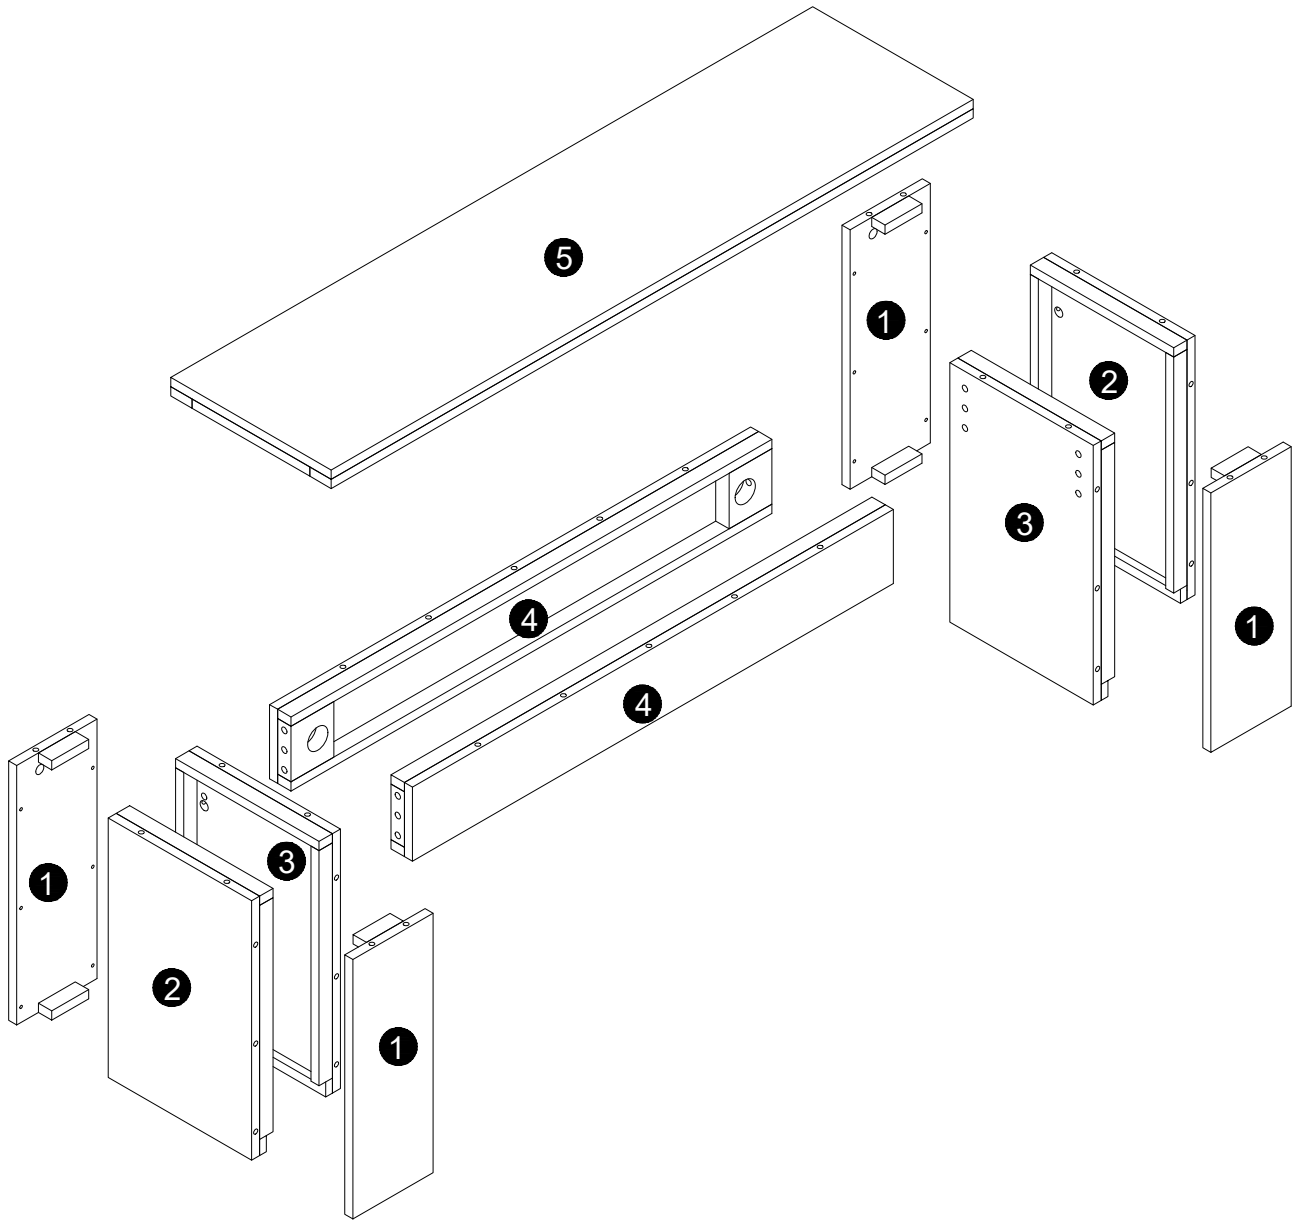









⚠ Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

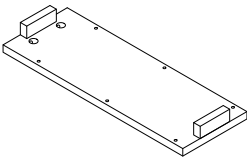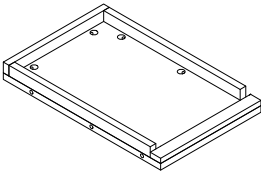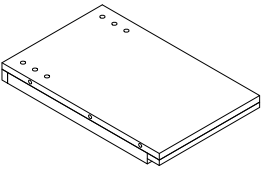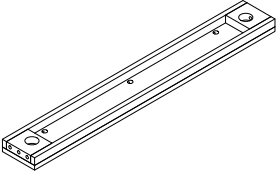
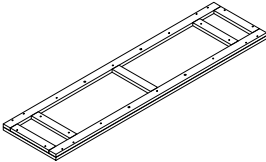
1  4 pcs	2  2 pcs	3  2 pcs	4  2 pcs	5  1 pc
---	---	---	--	--

Hardware List

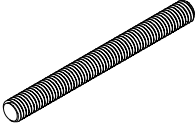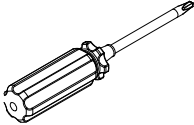
A	B	C	D	E	F
 M6x35mm 46 pcs	 Ø15x12mm 46 pcs	 Ø8x30mm 12 pcs	 M8x70mm 4 pcs	 1 pc	 4 pcs
G	H	I			
 M8mm 4 pcs	 M10x3mm 8 pcs	 Screwdriver 1 pc			

Installation of Cams and Pins


Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

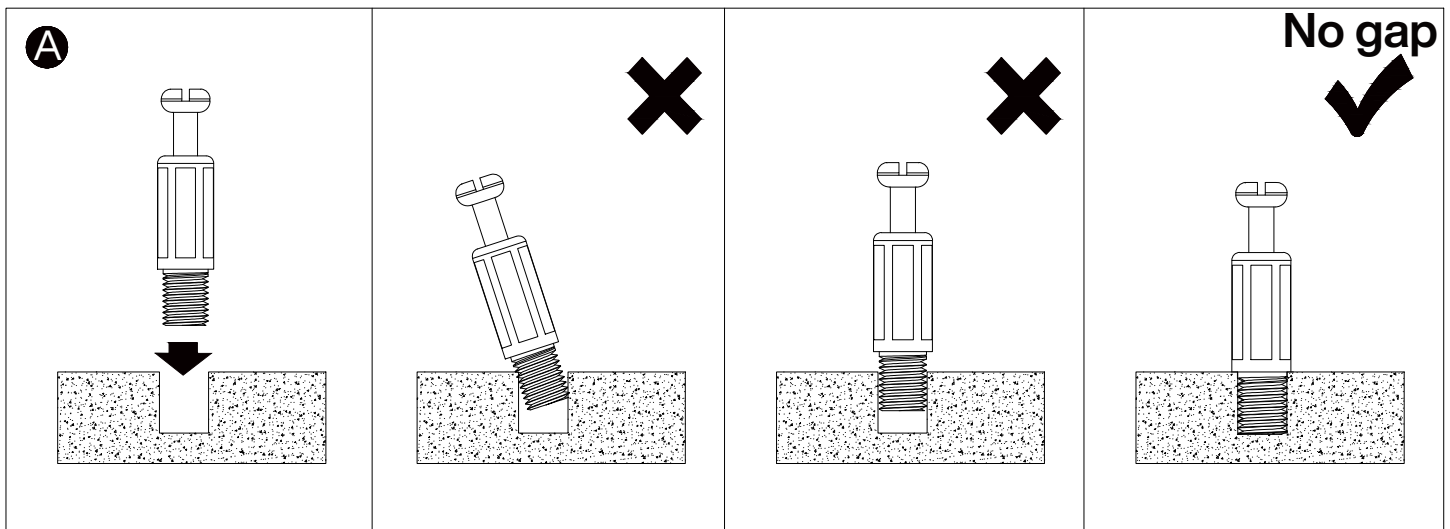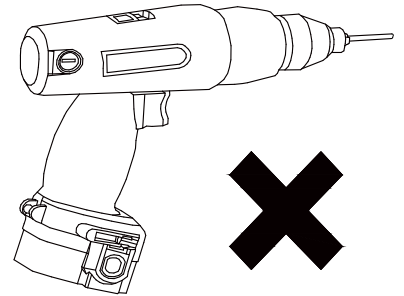

Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

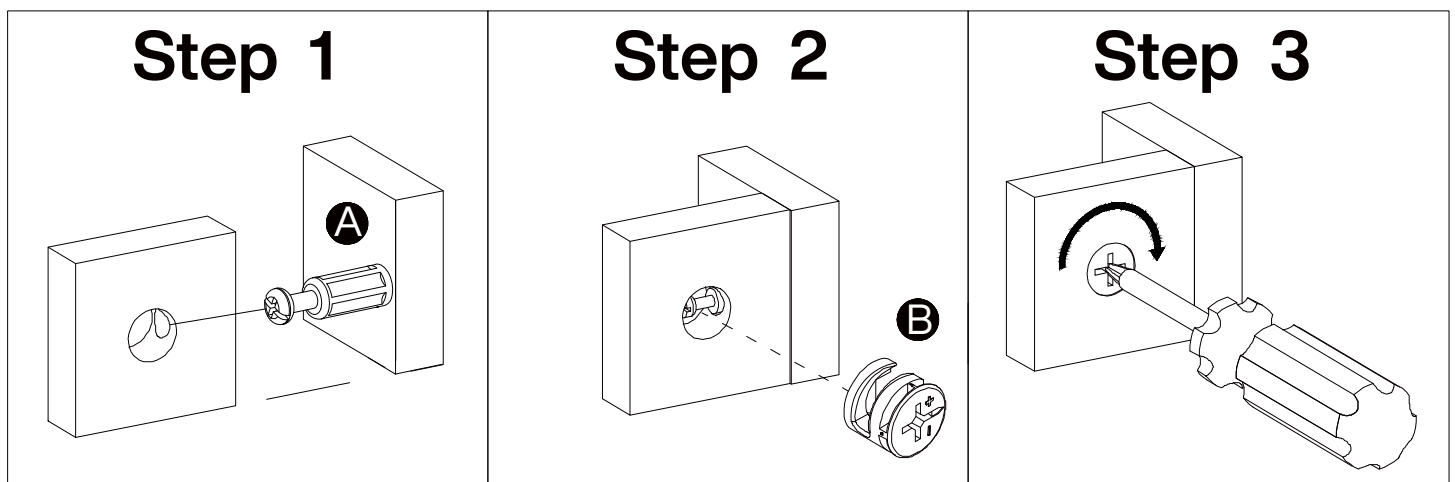


1

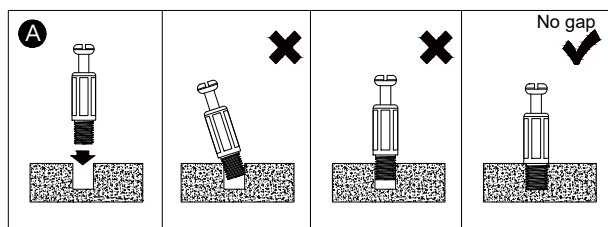



A

M6x35mm
24 pcs

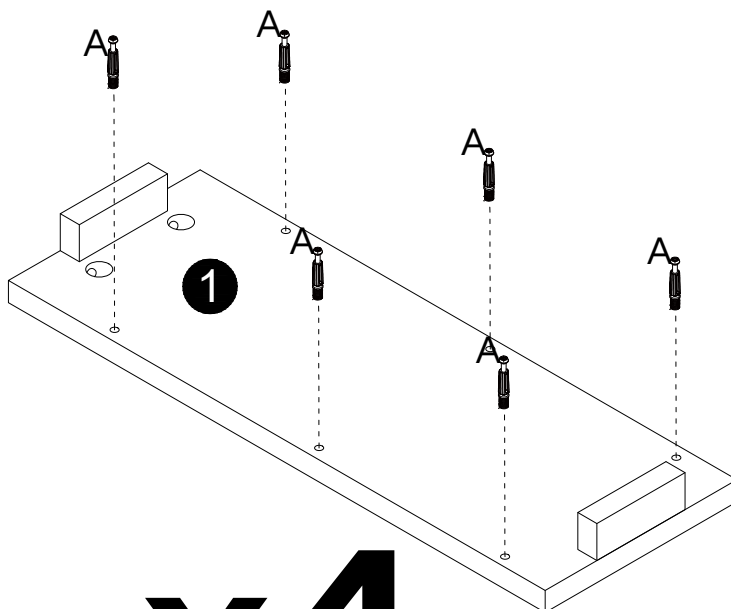

x4

2

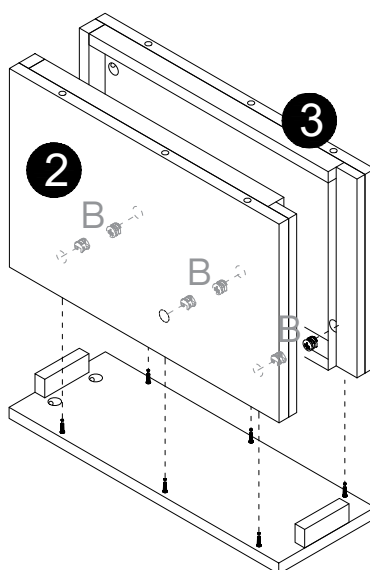
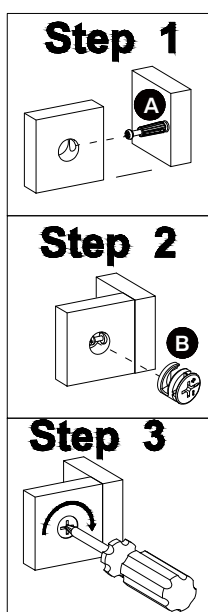


x2

B

Ø15x12mm
12 pcs

3

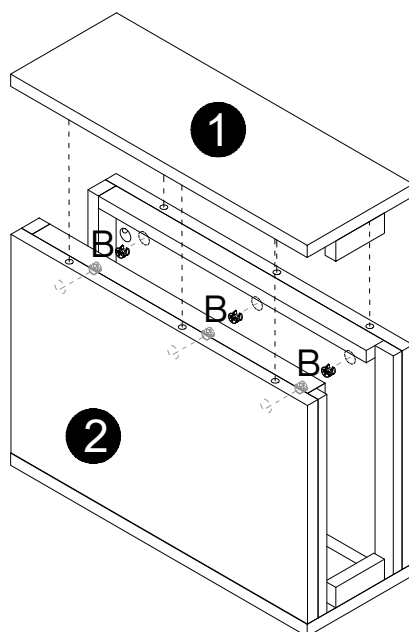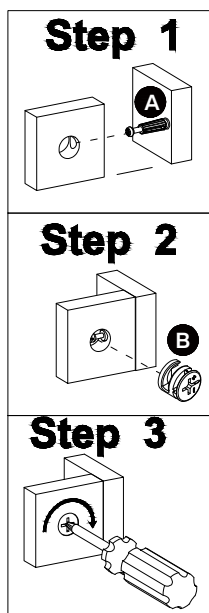


x2

B

Ø15x12mm
12 pcs

4

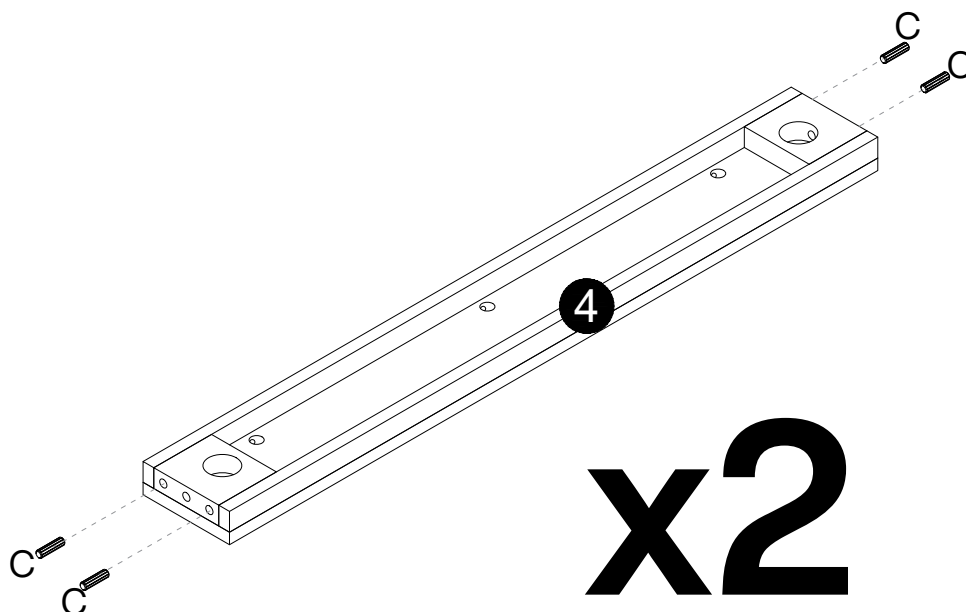


x2

C

Ø8x30mm
8 pcs


5

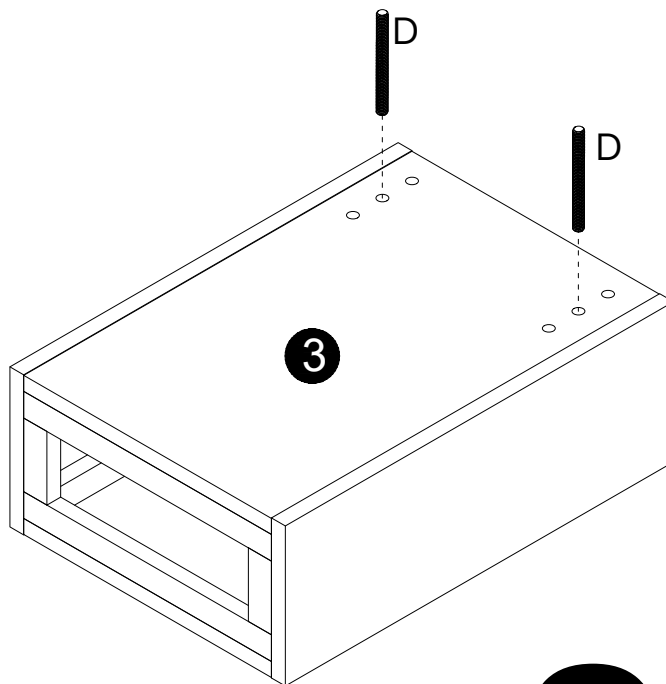


D
M8x70mm
4 pcs

x2


6

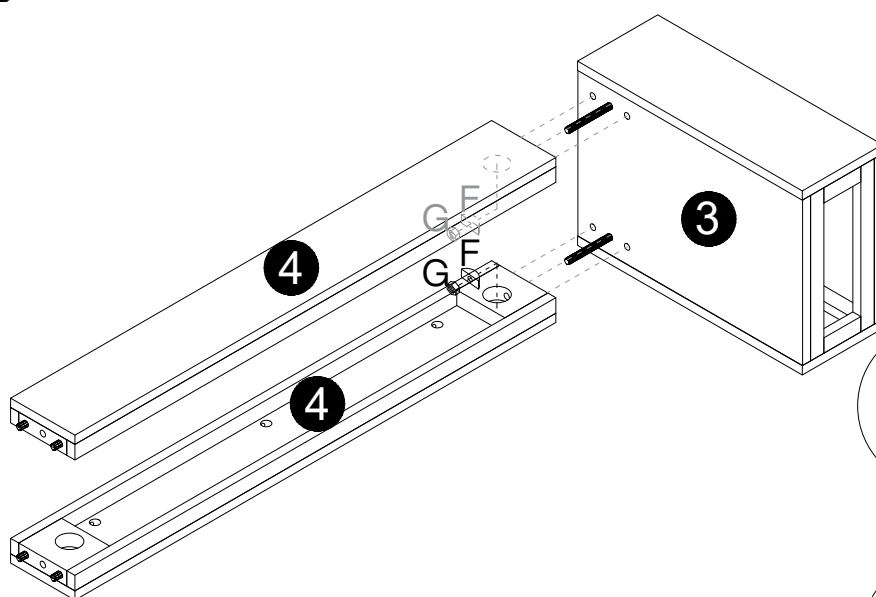


G	F
M8mm	
2 pcs	2 pcs

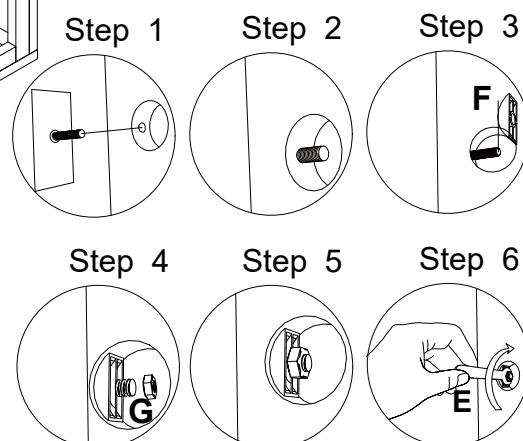


7

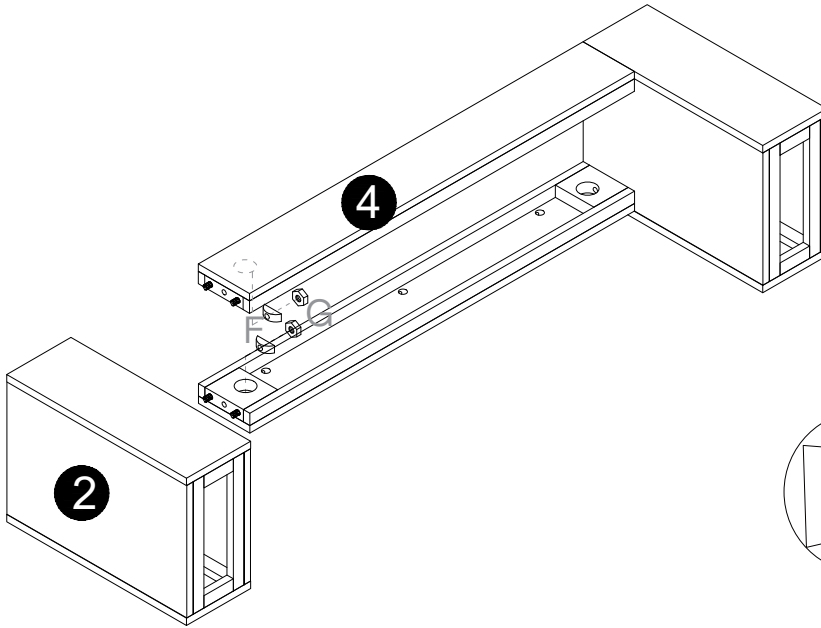



G	F
	
M8mm 2 pcs	2 pcs

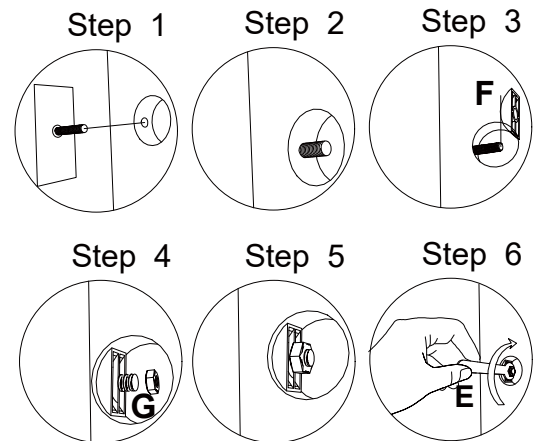



8

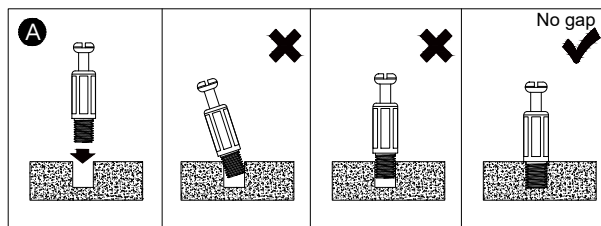

A	C
	
M6x35mm 22 pcs	Ø8x30mm 4 pcs


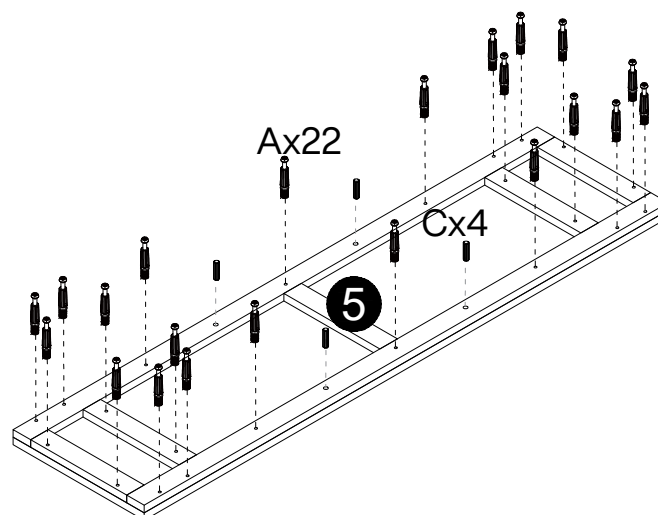


9

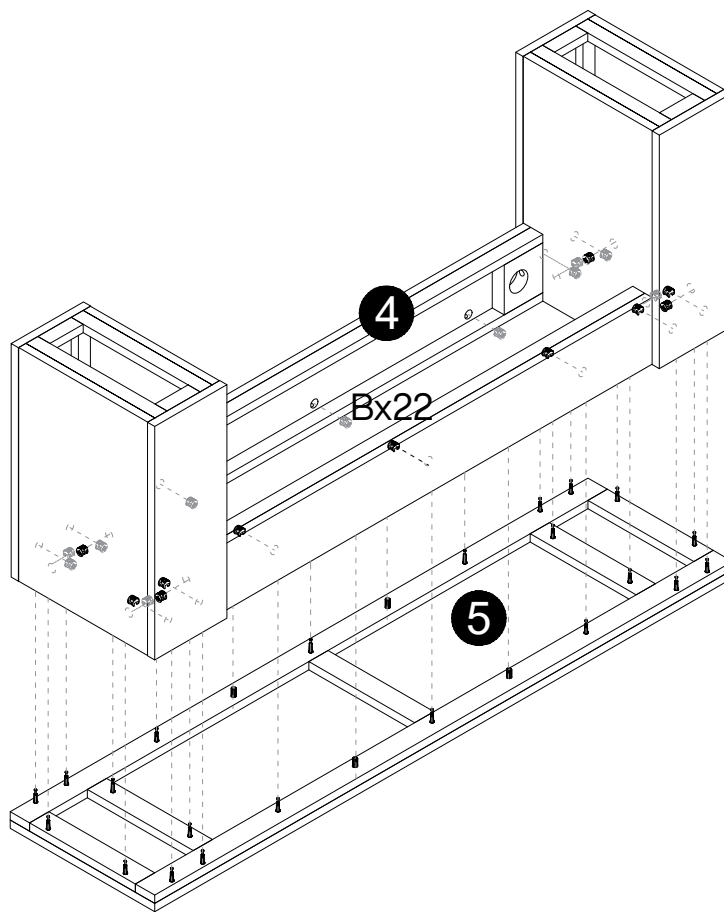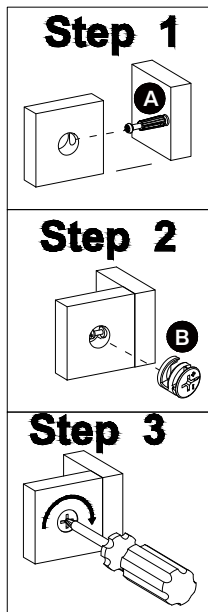

B
Ø15x12mm
22 pcs

10

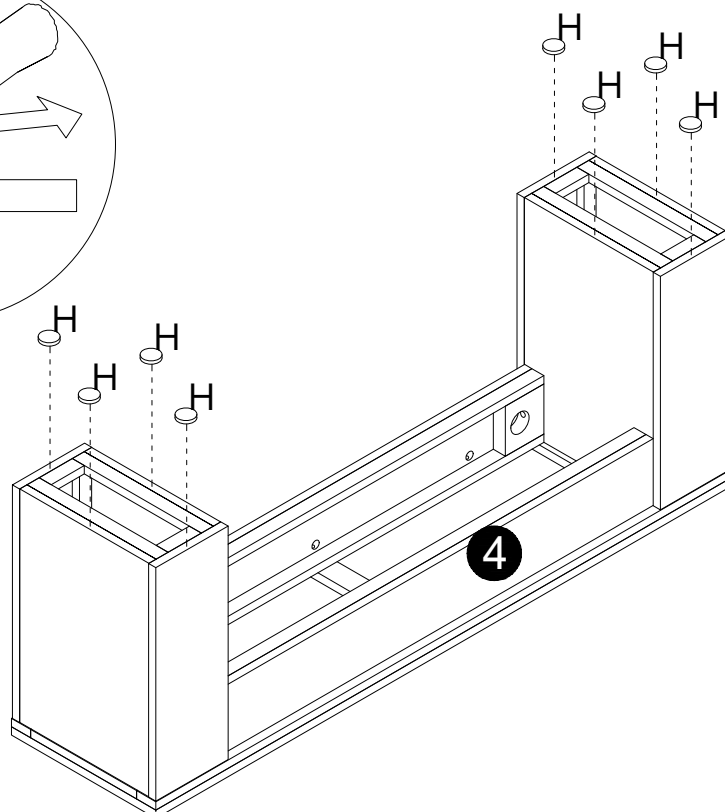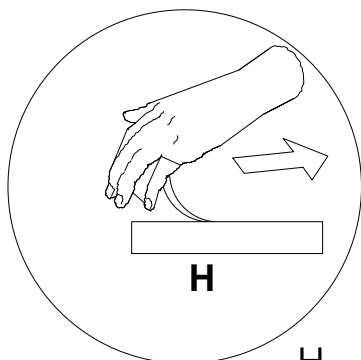

H
M10x3mm
8 pcs

Thank you for your support!

