

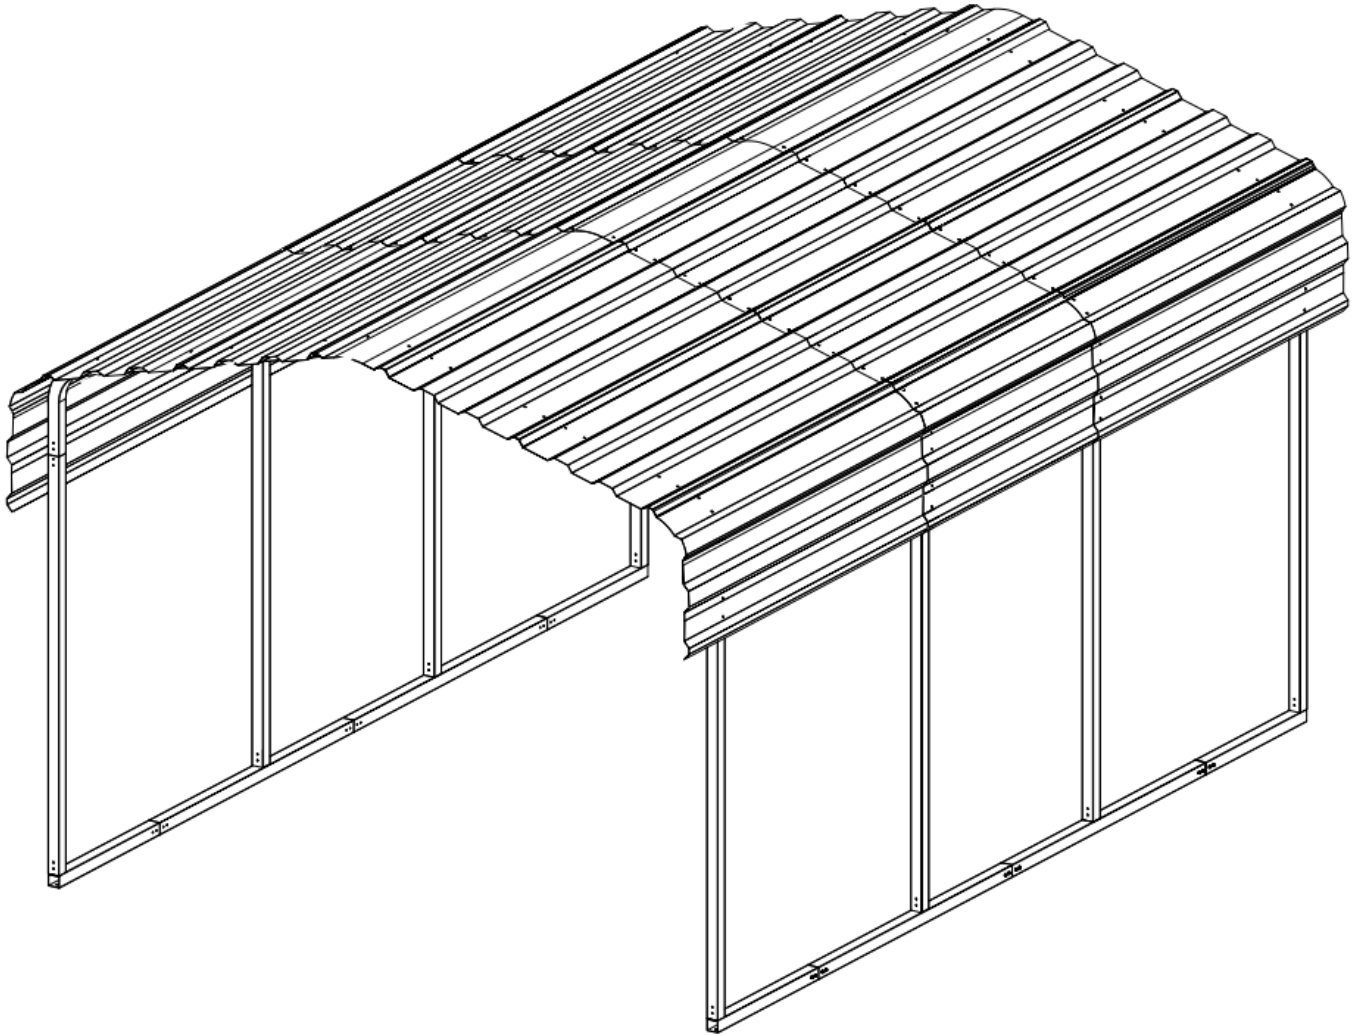
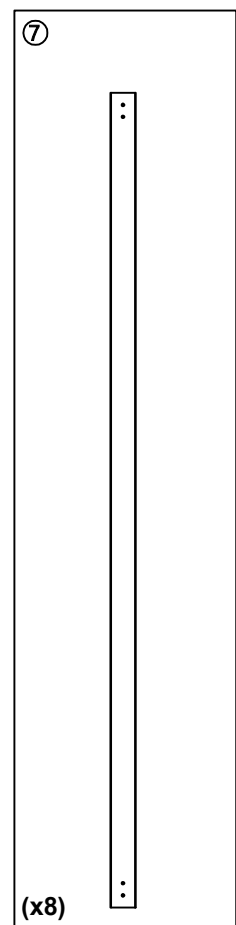
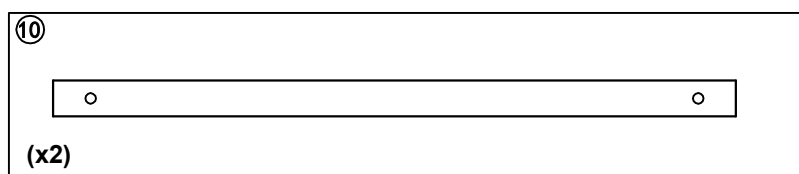
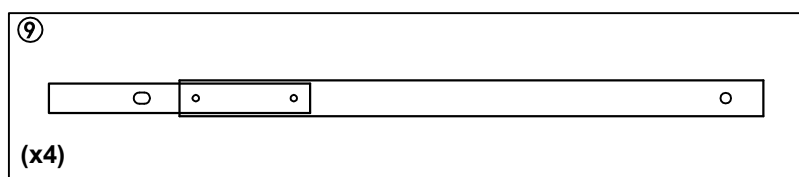
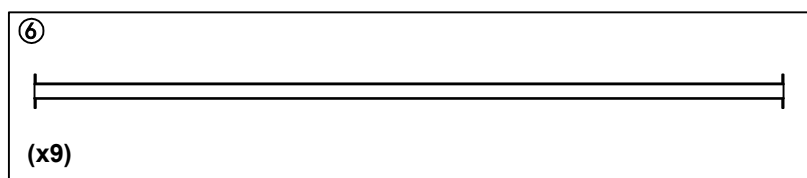
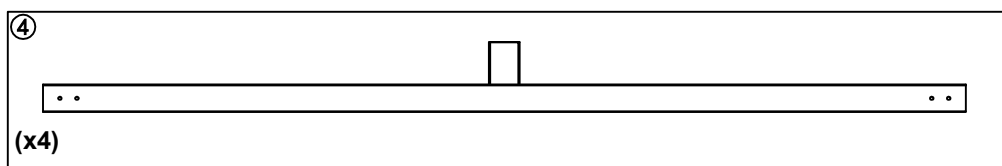
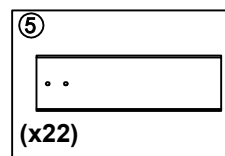
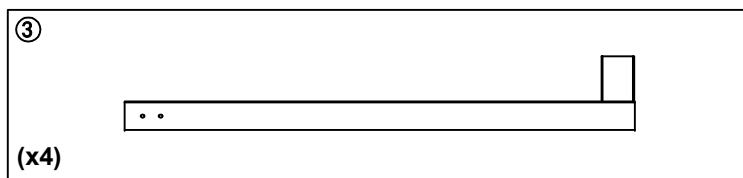
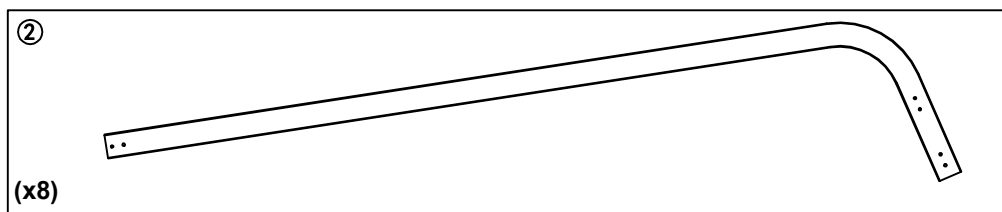
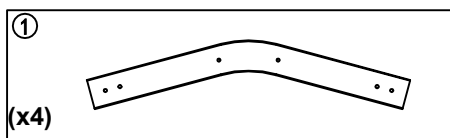

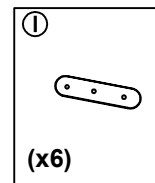
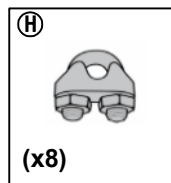
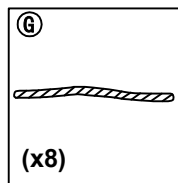
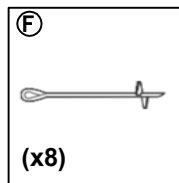
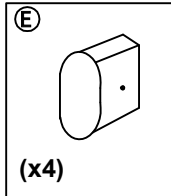
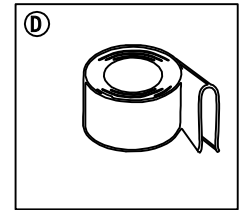
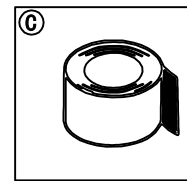
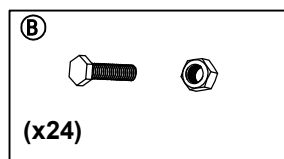


10'x15' Carport
BAAP001BK

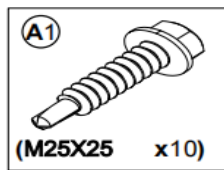


10X15 CCESSORIES

A BOX

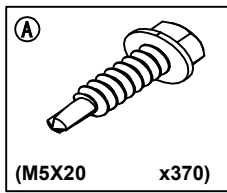


10X15 CCESSORIES






B BOX

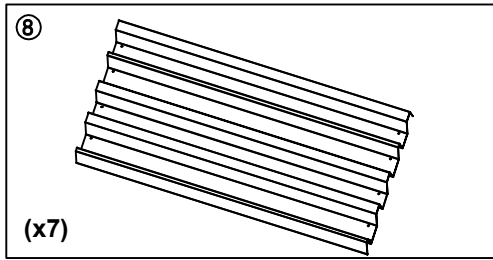


C BOX

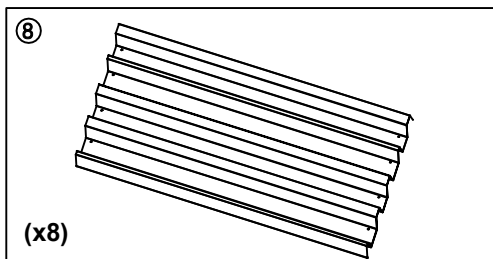



Step 1

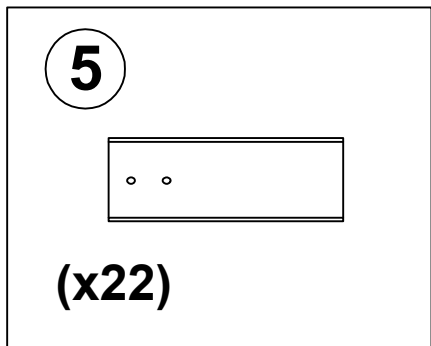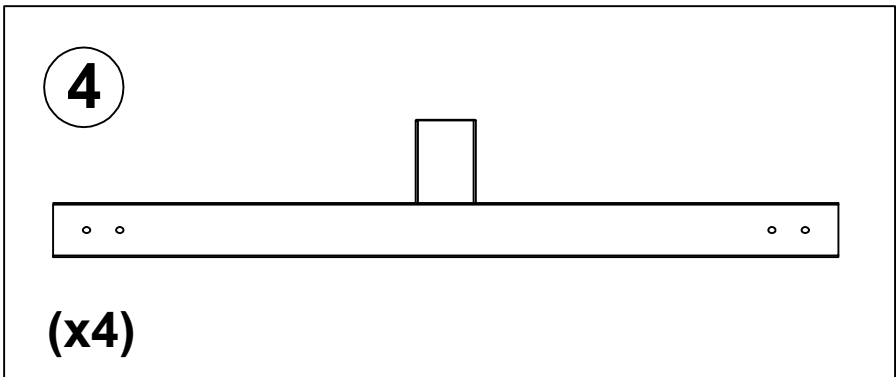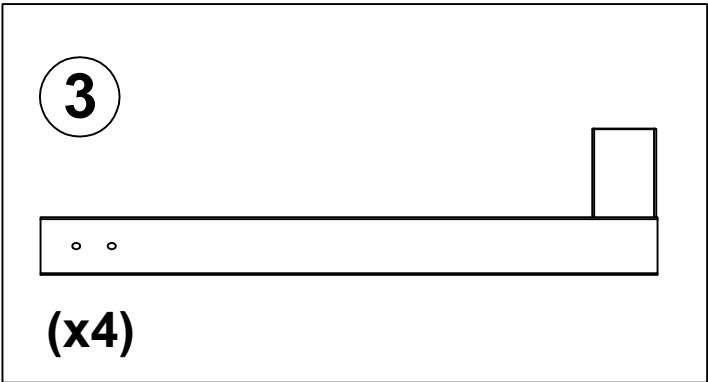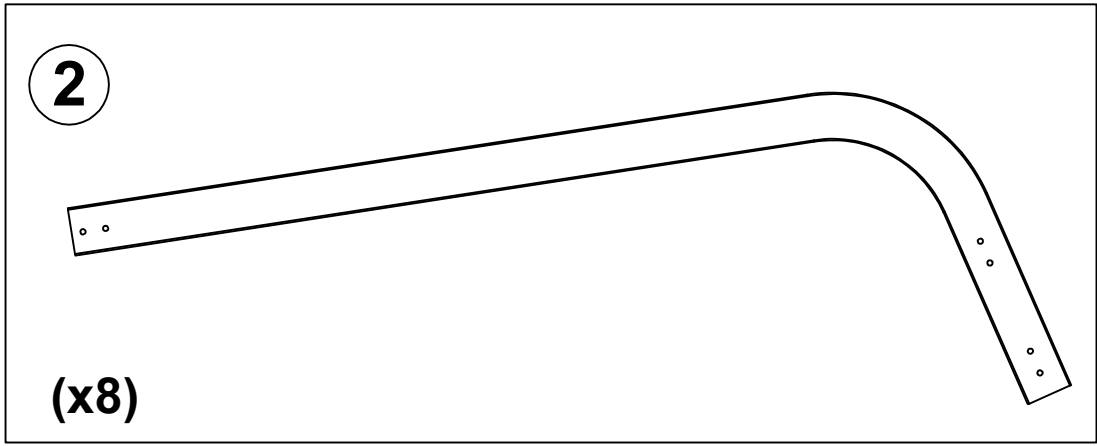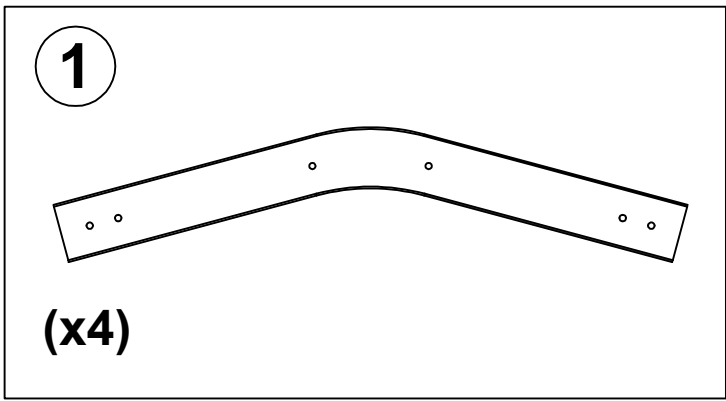


Place each part on the open space as shown in the figure

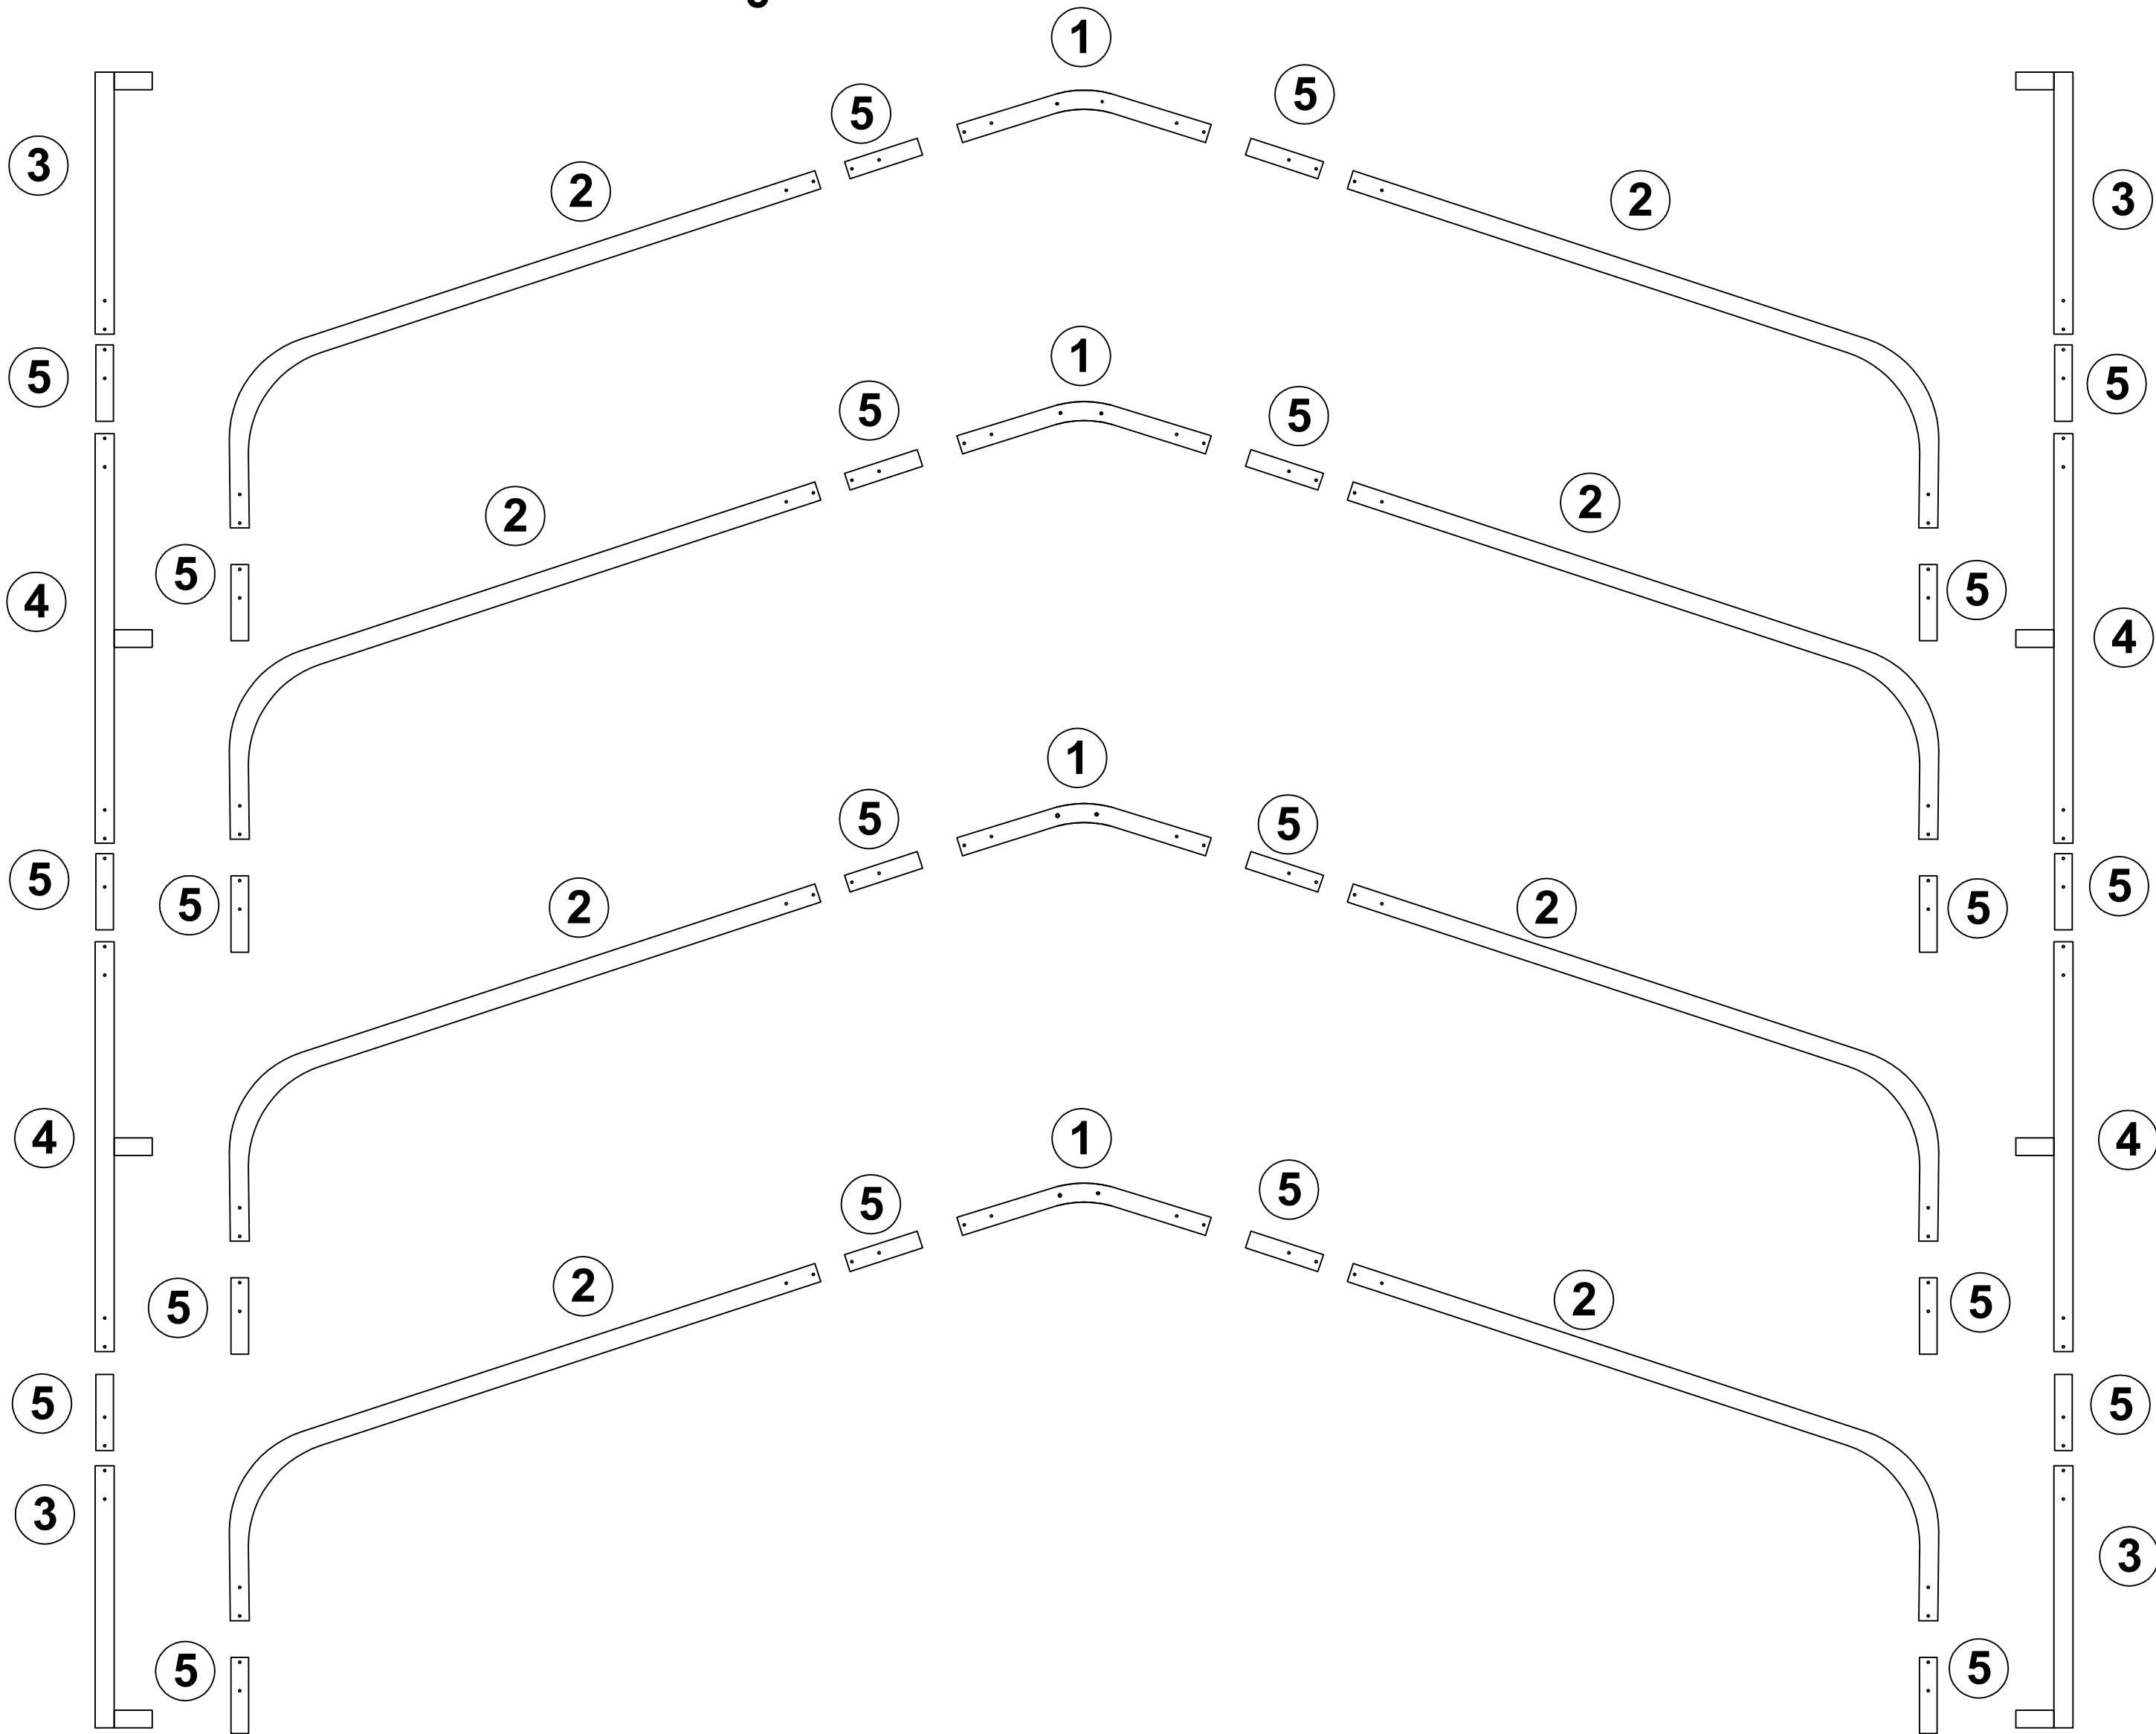





Step 2

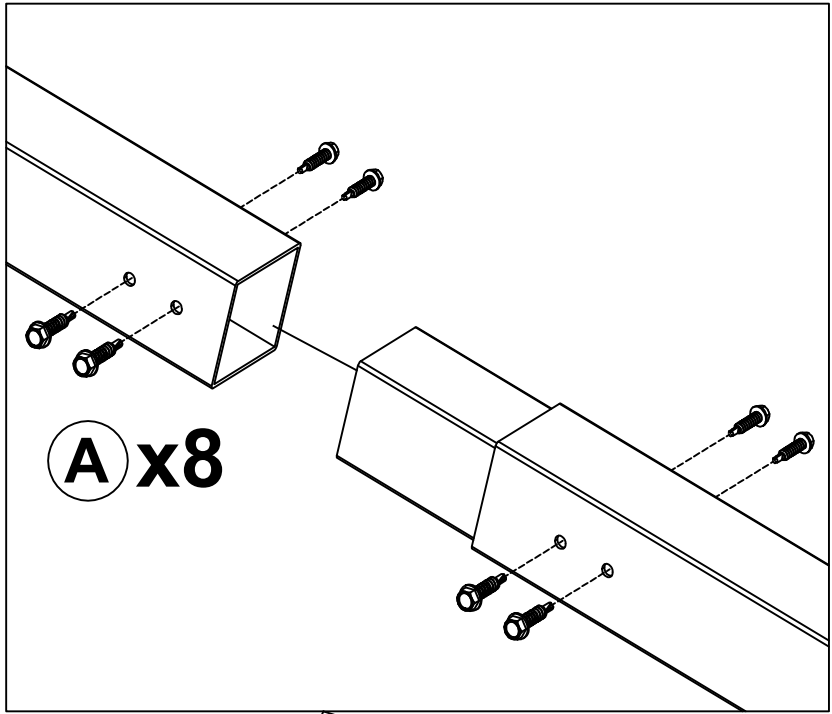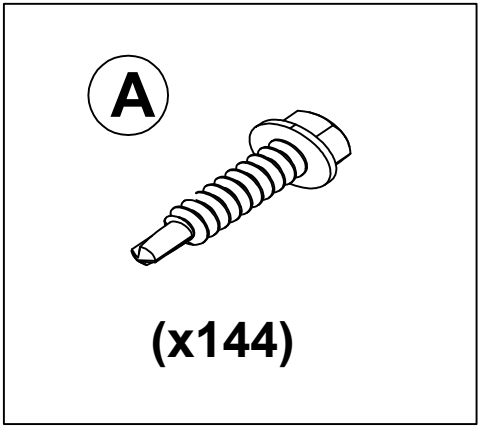




Connect the fittings with screws as shown in the figure

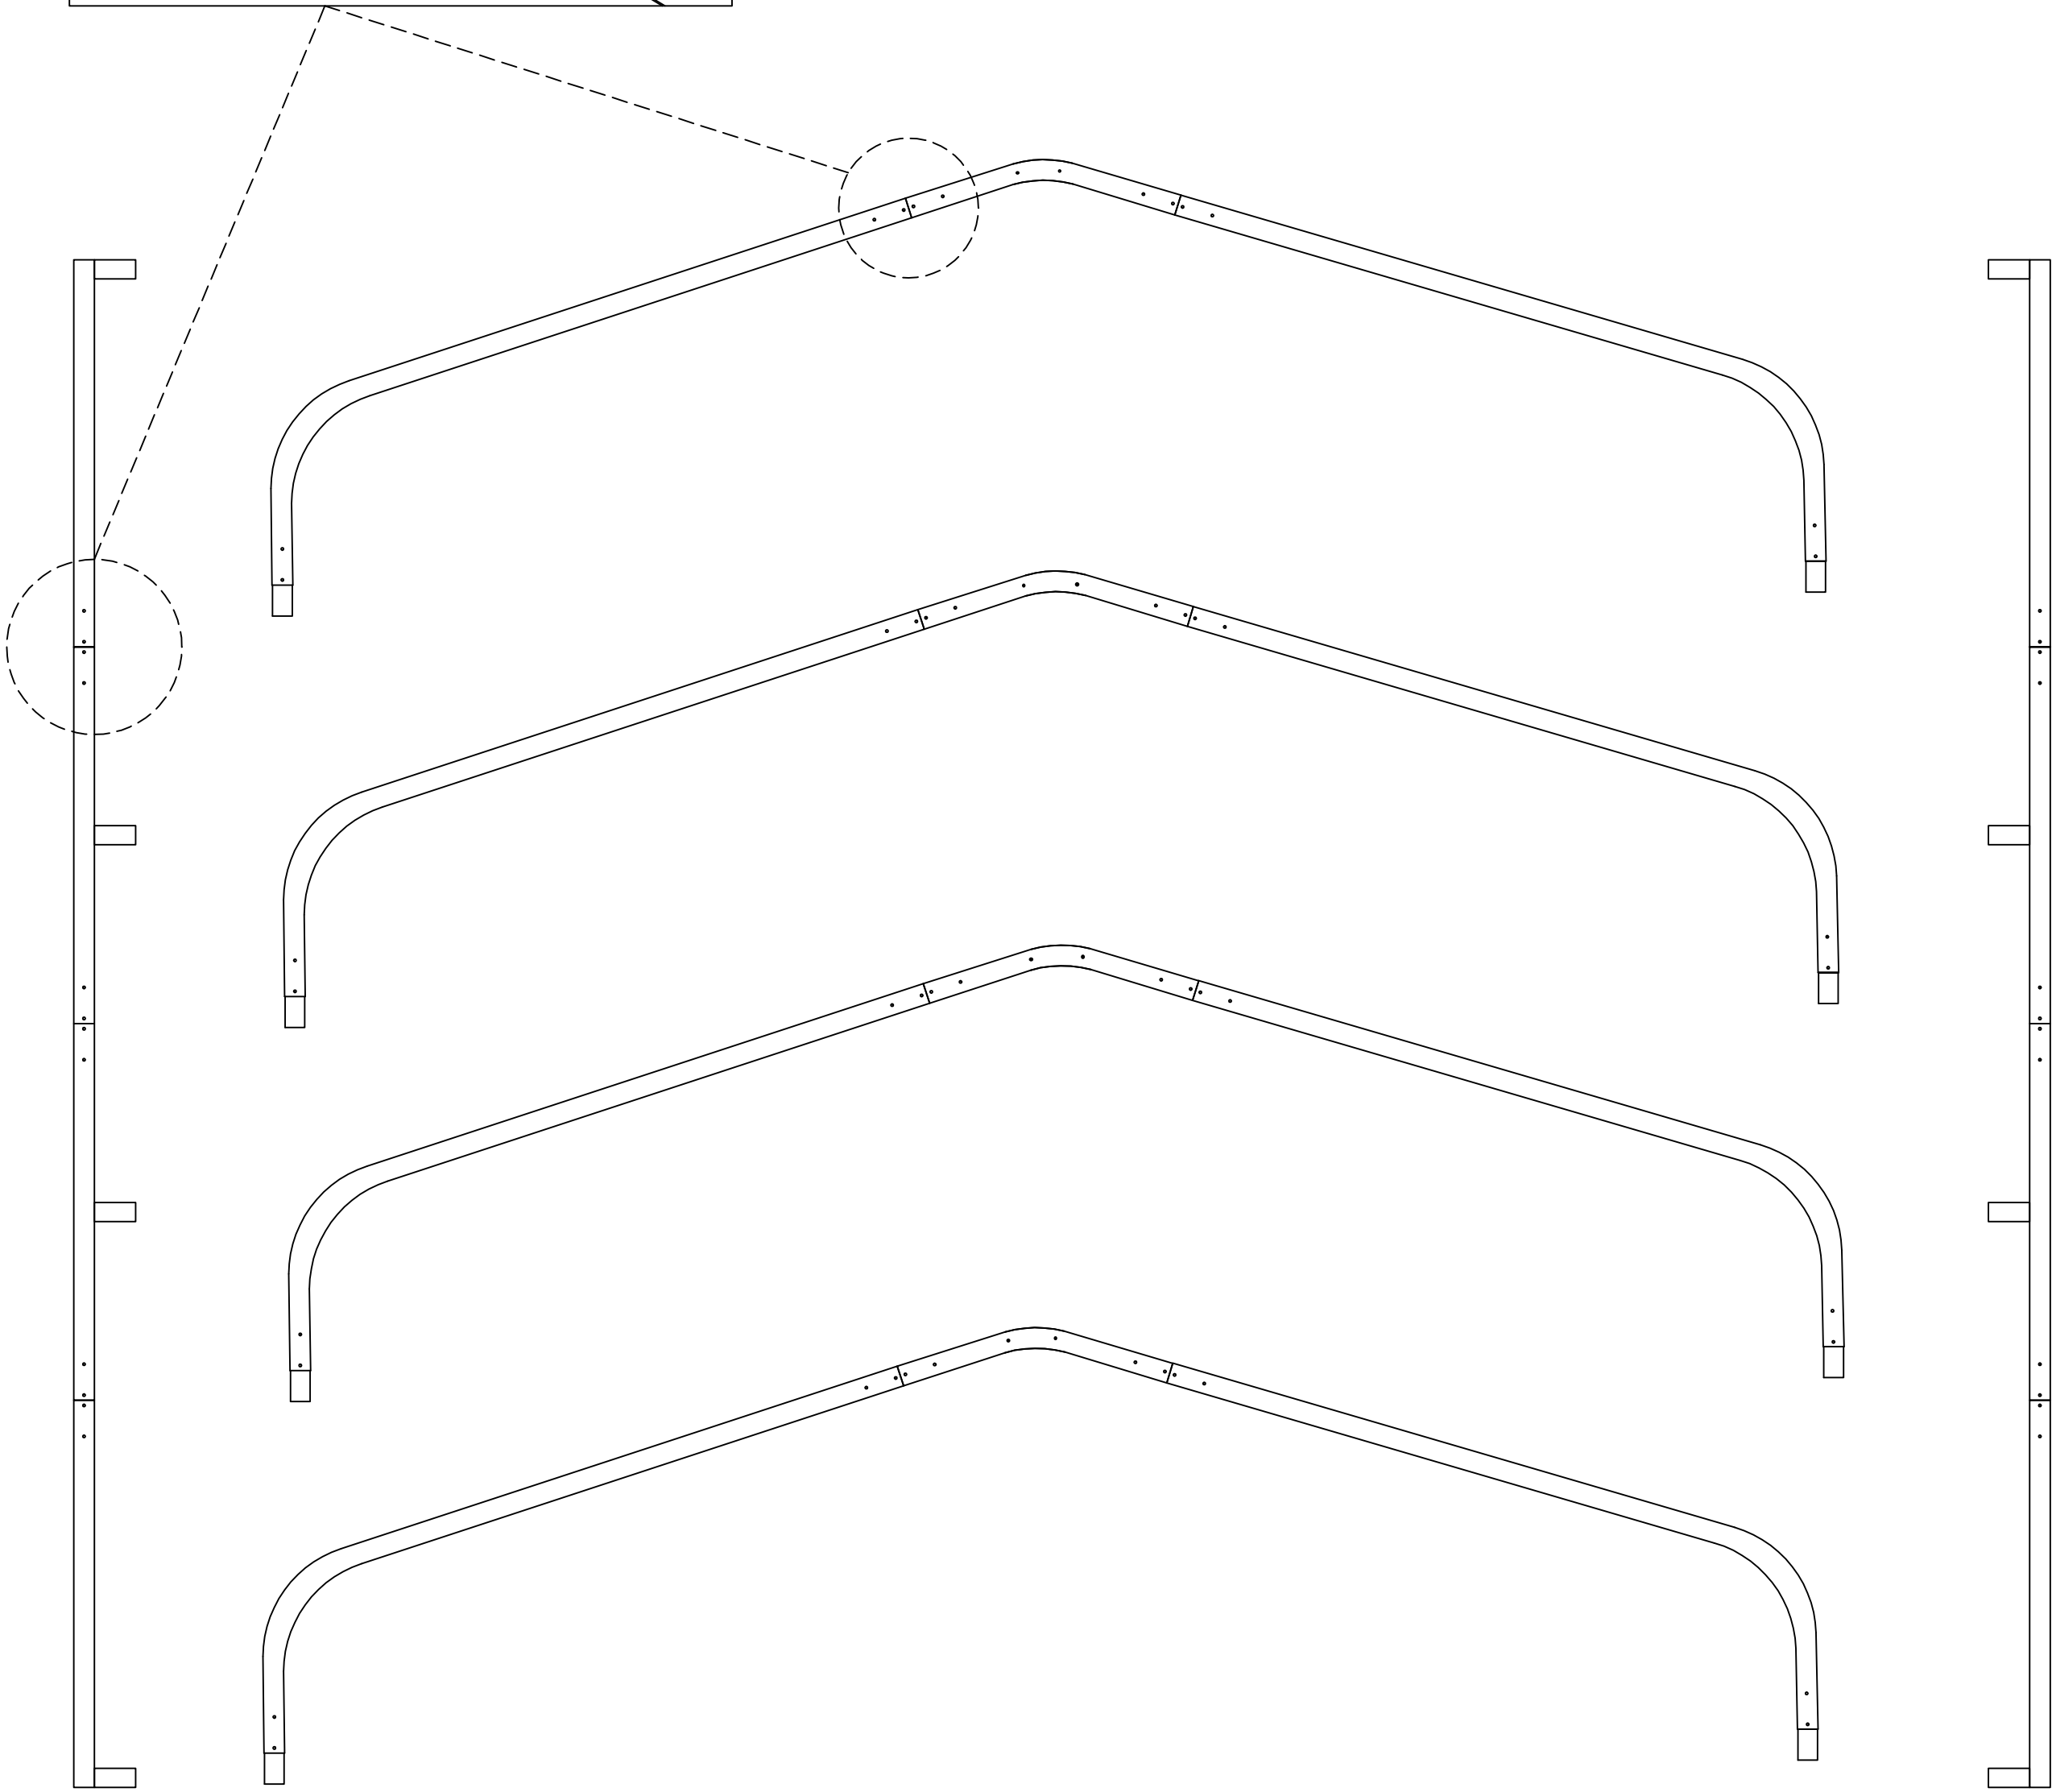

Step 3

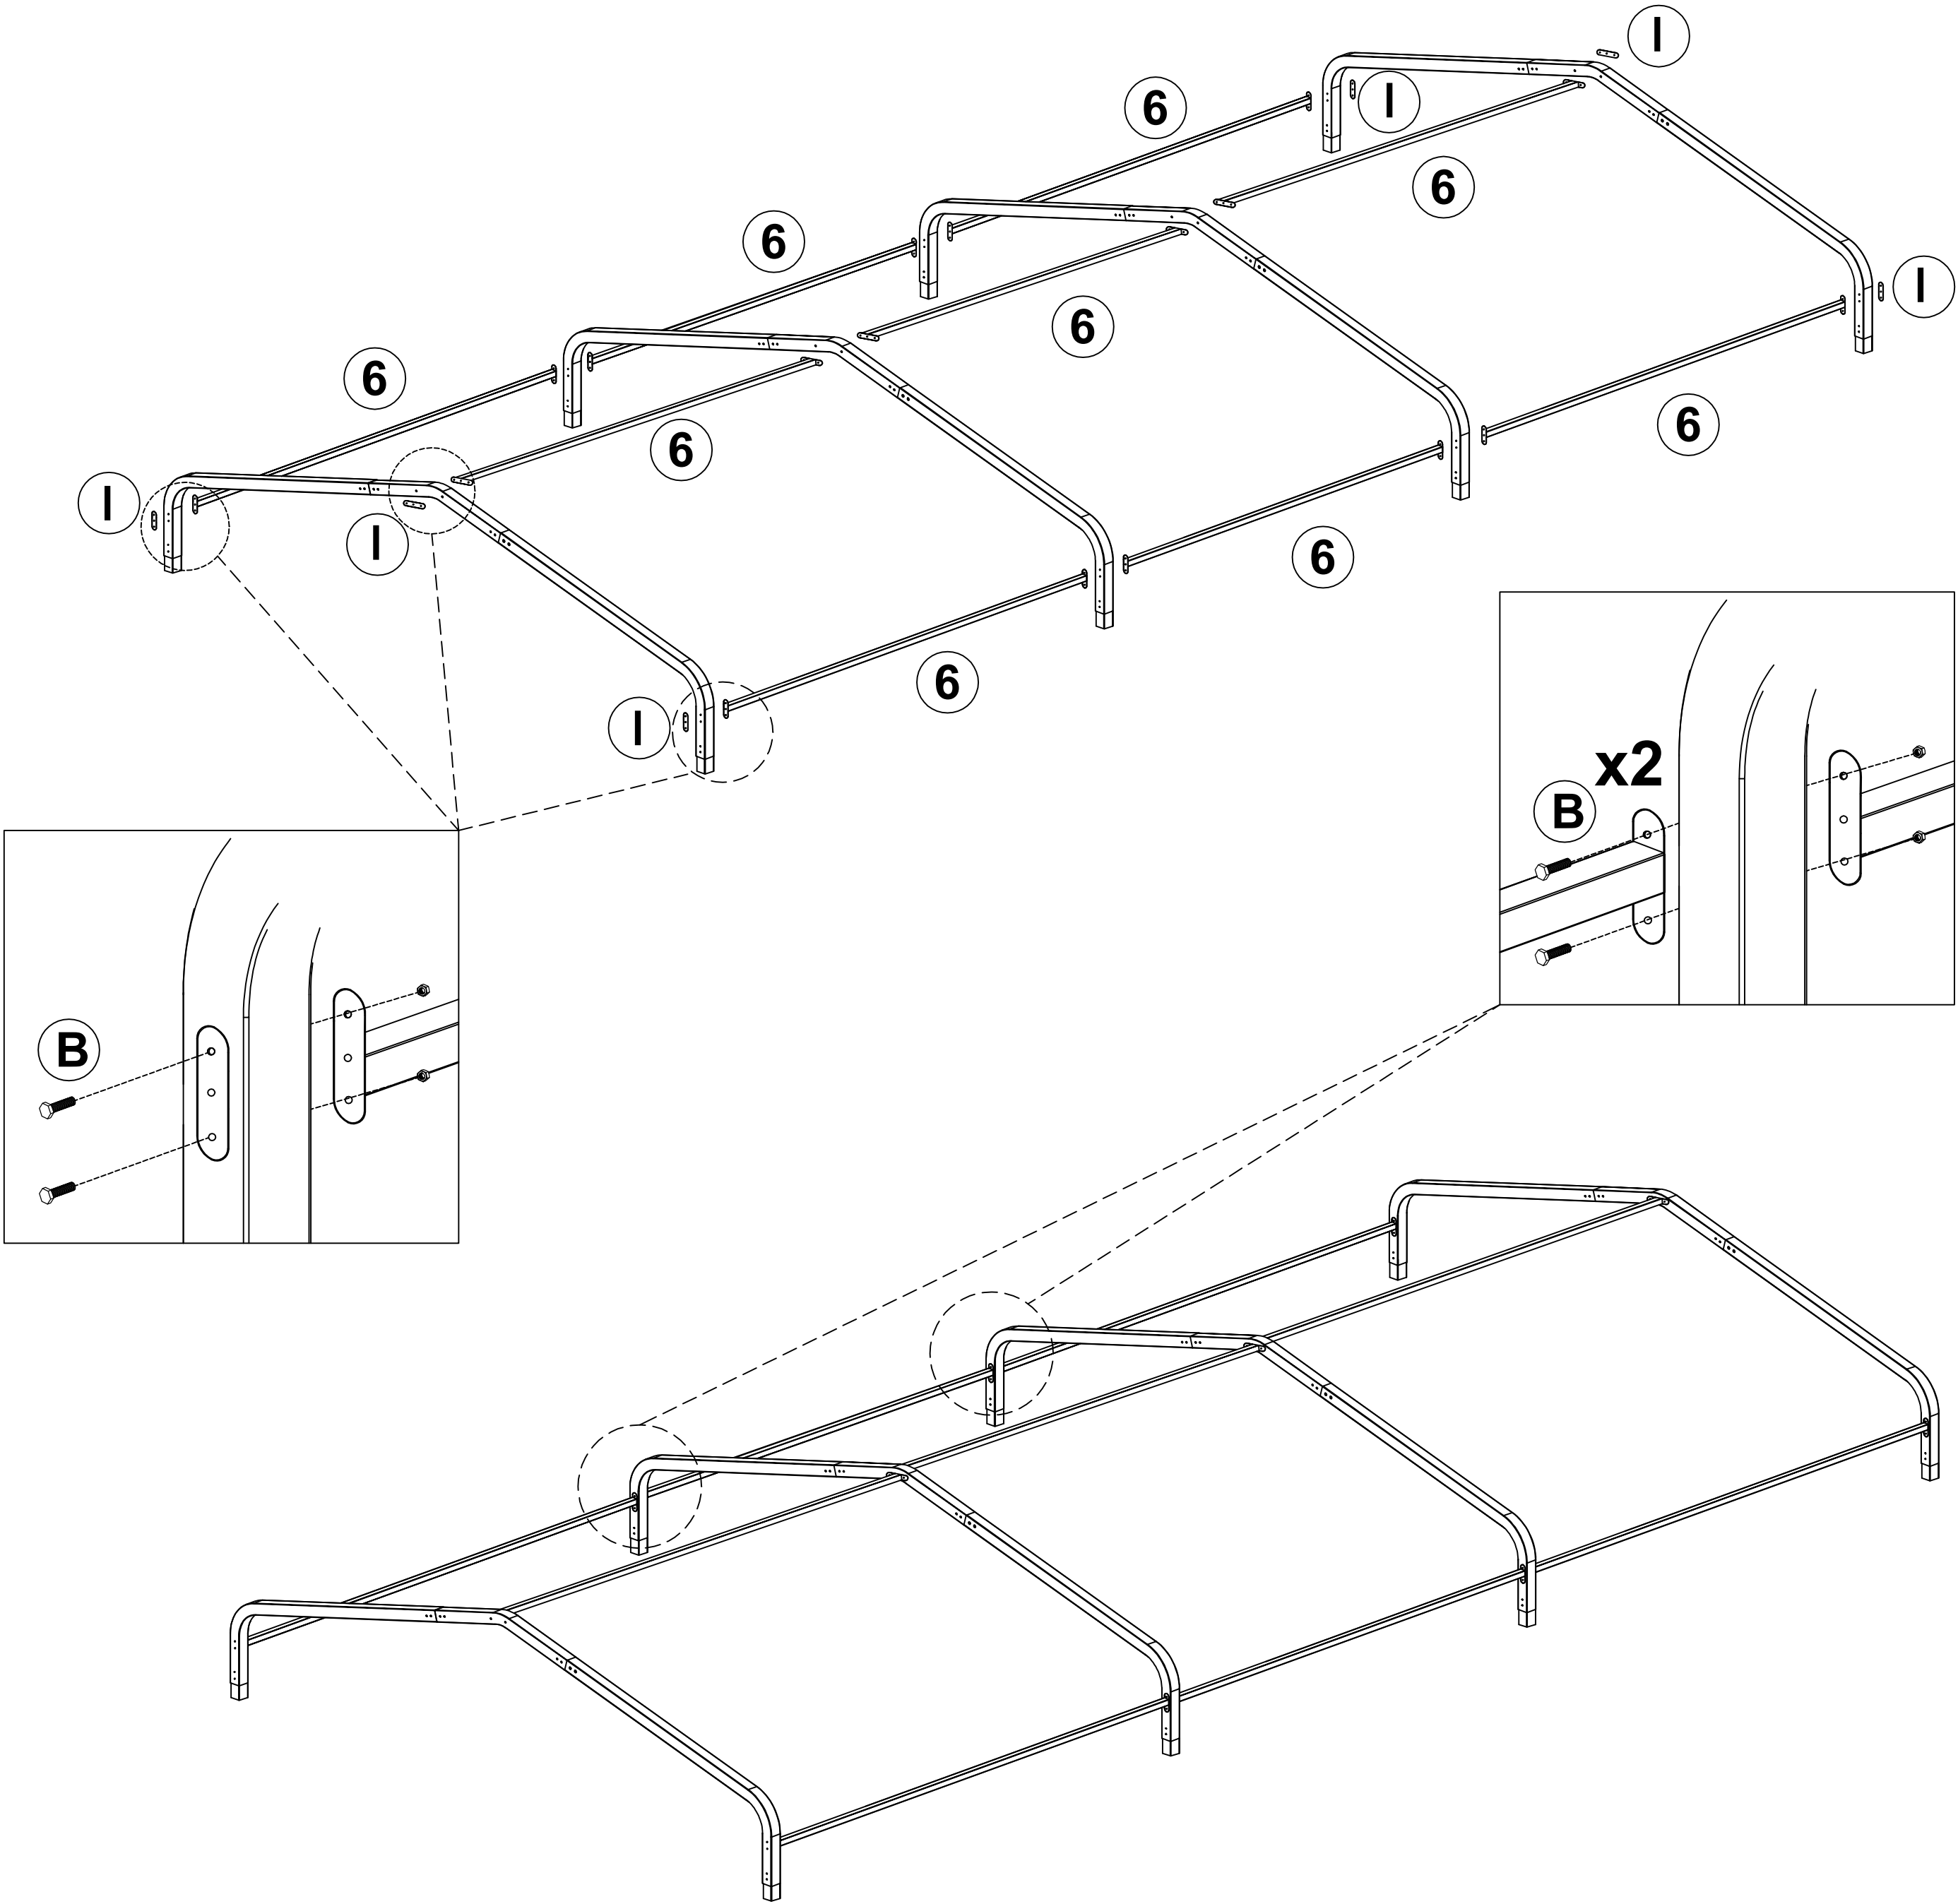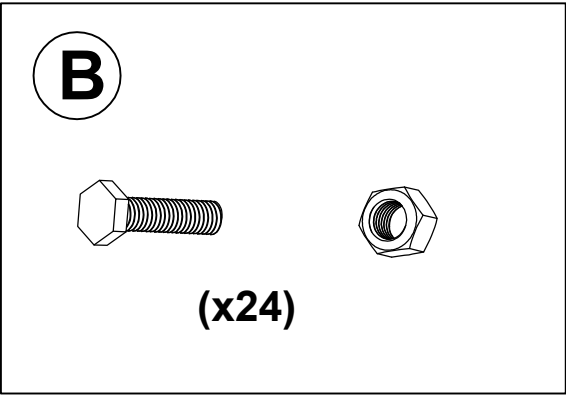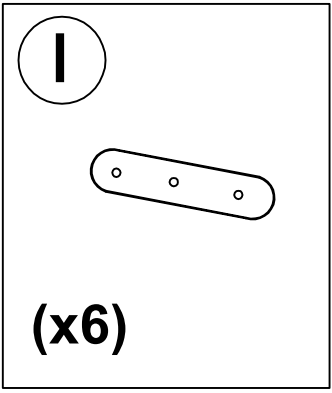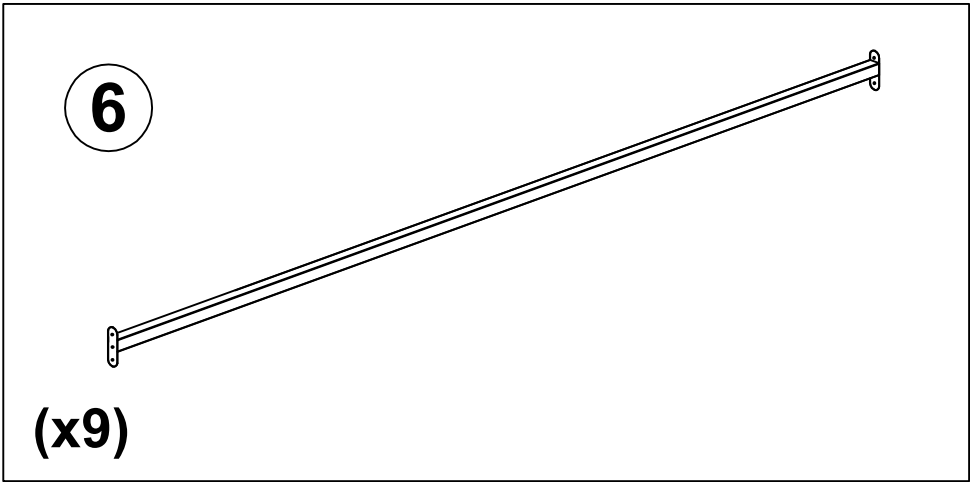


Step 4

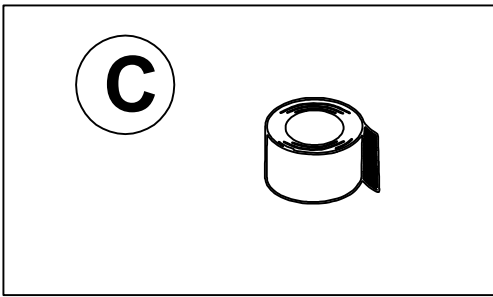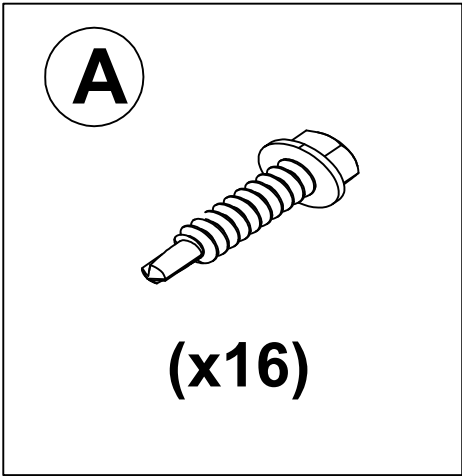
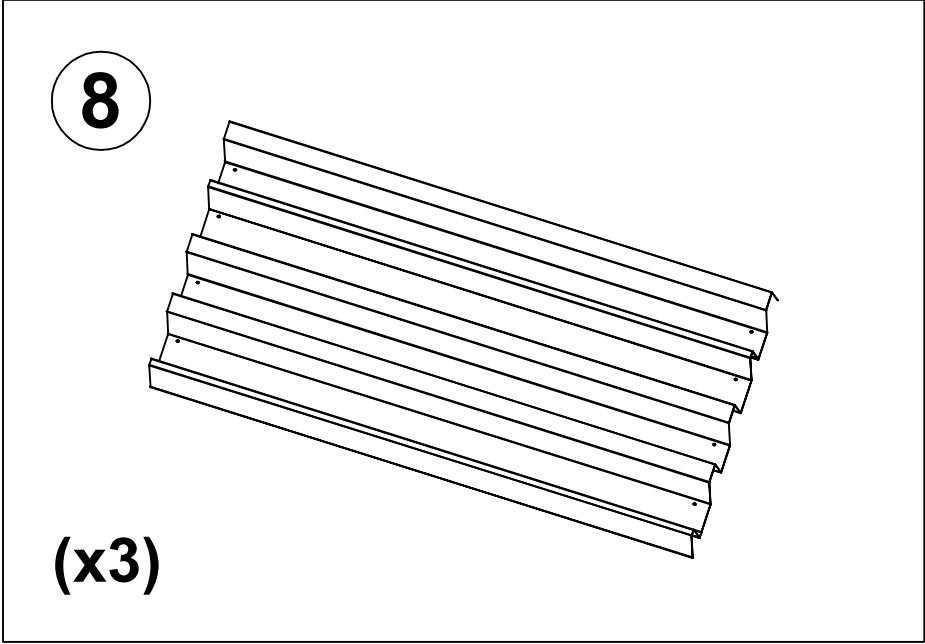


Top tiles should be laid in the same direction to facilitate drainage.




Stick the waterproof strip on the iron pipe, do not cover the screw holes.

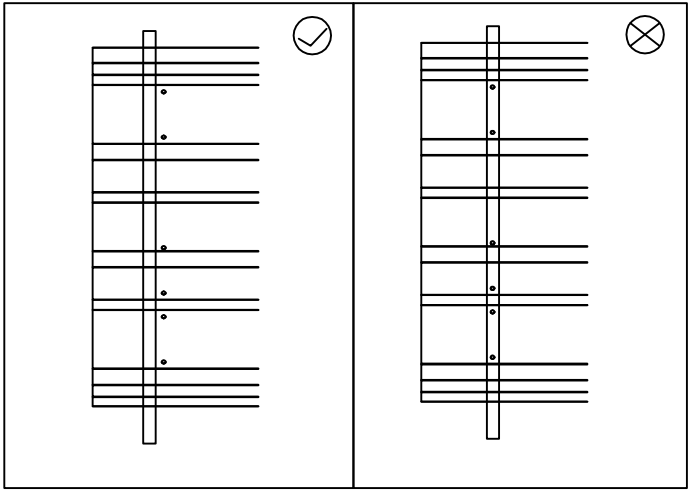





The position of the top tile installation should be 8 cm beyond the column.

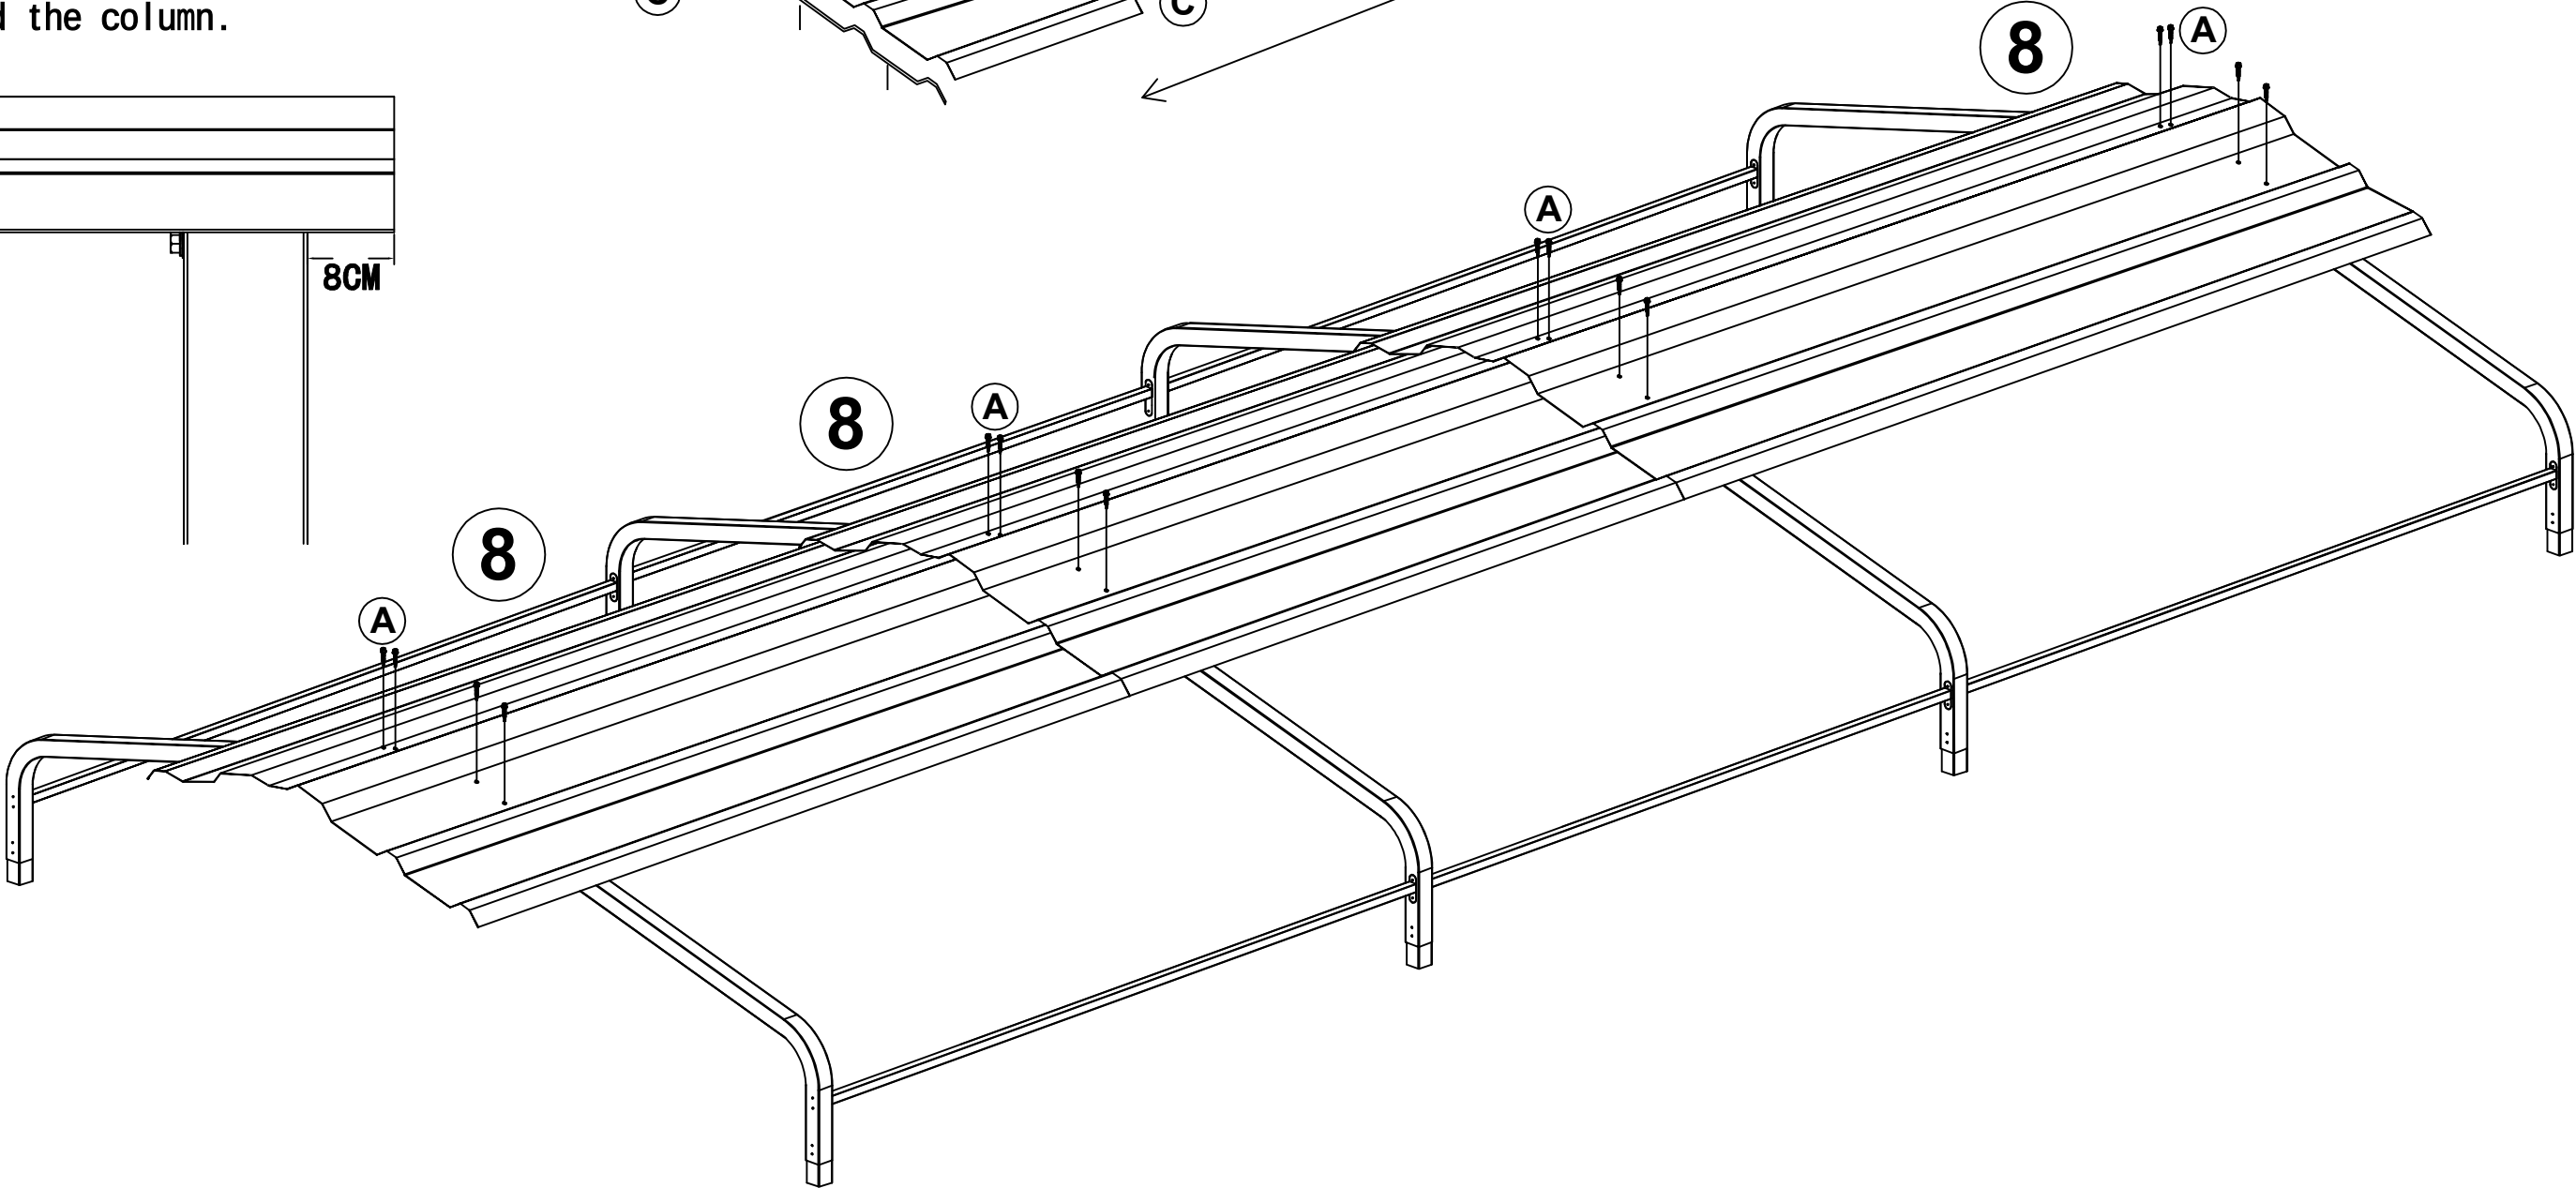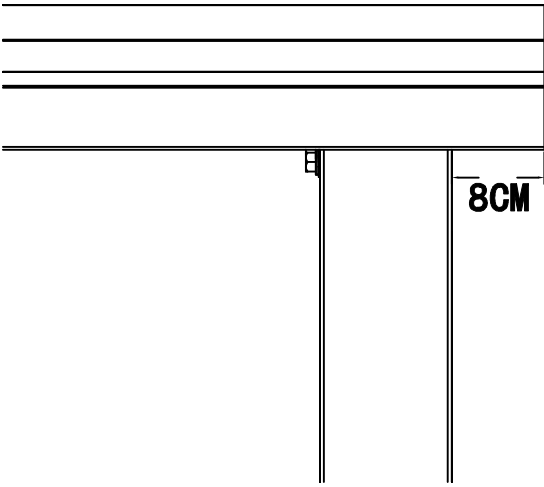



Step 5

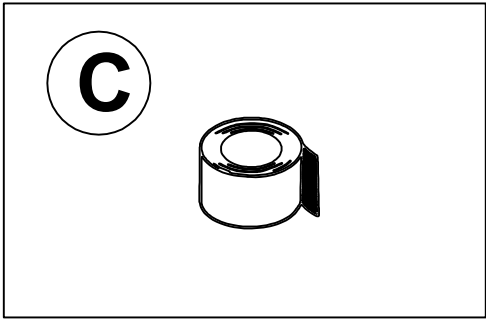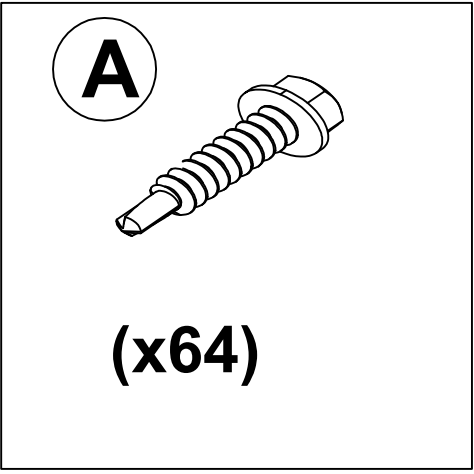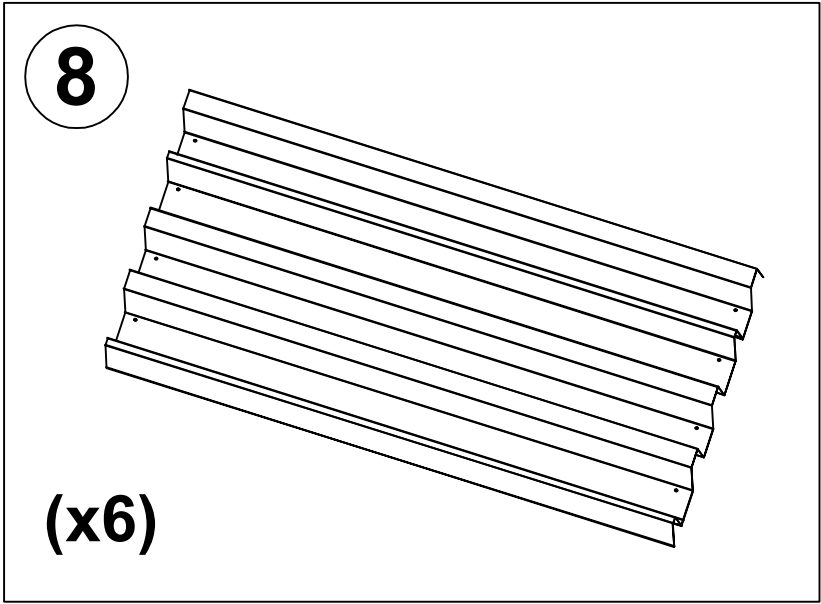




Stick the waterproof strip on the iron pipe, do not cover the screw holes.

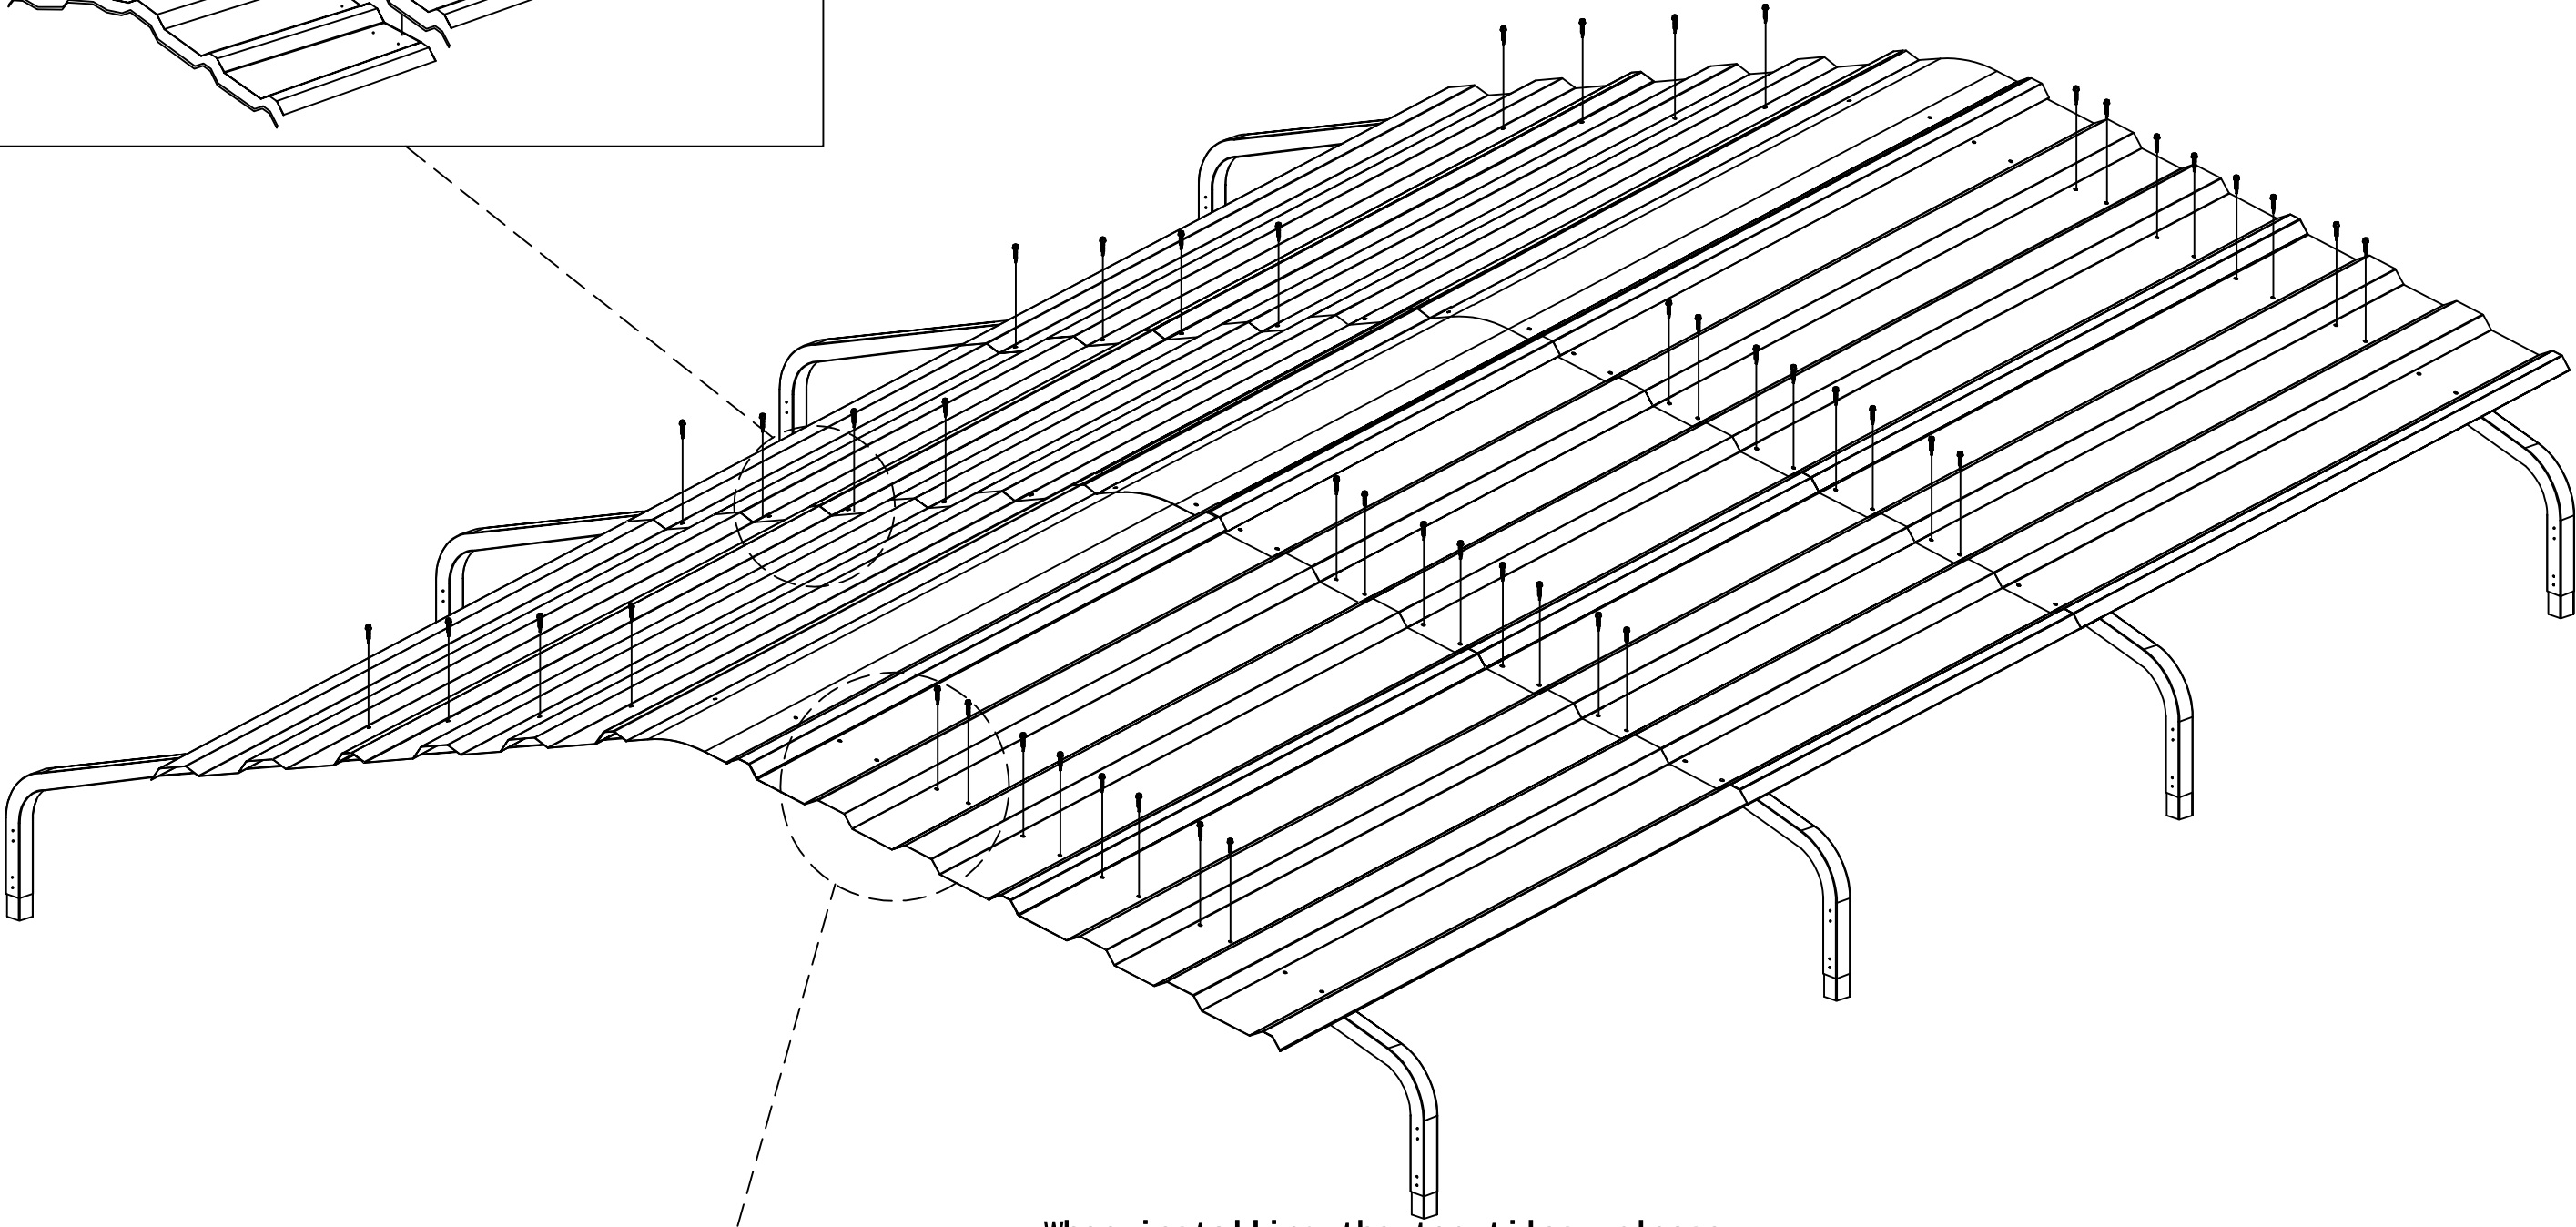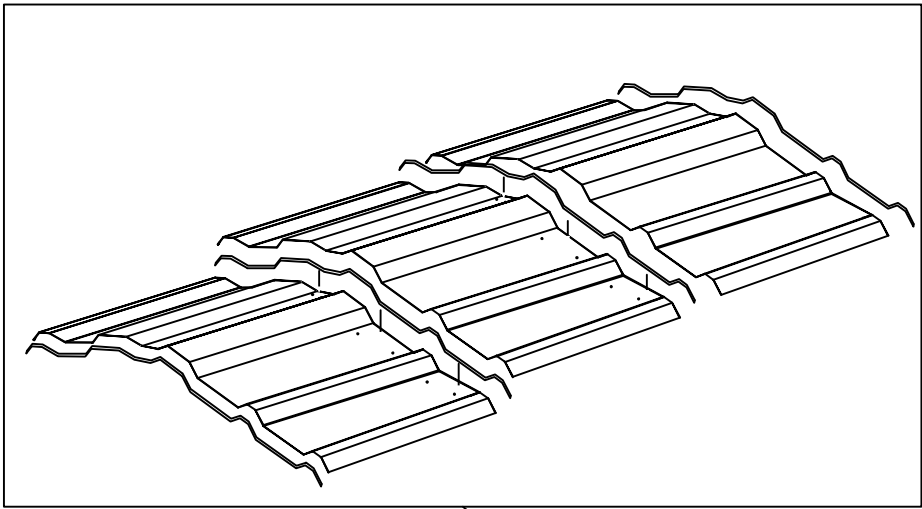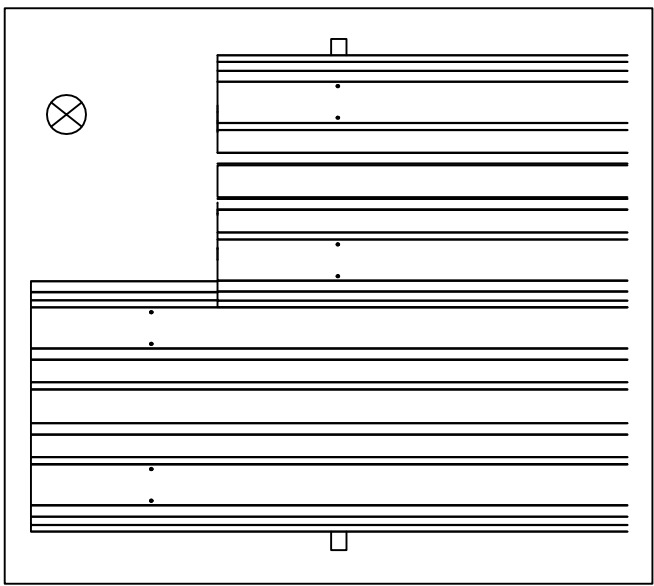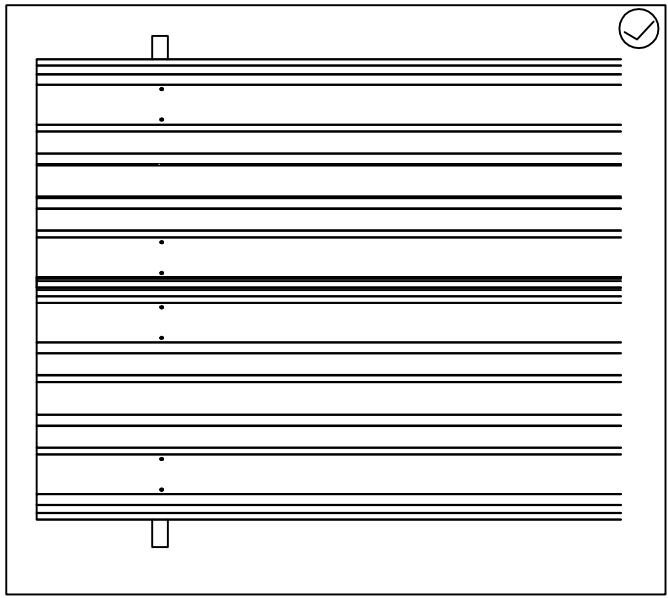



When installing the top tiles, please note that the upper tiles must be pressed against the lower tiles to avoid water ingress.

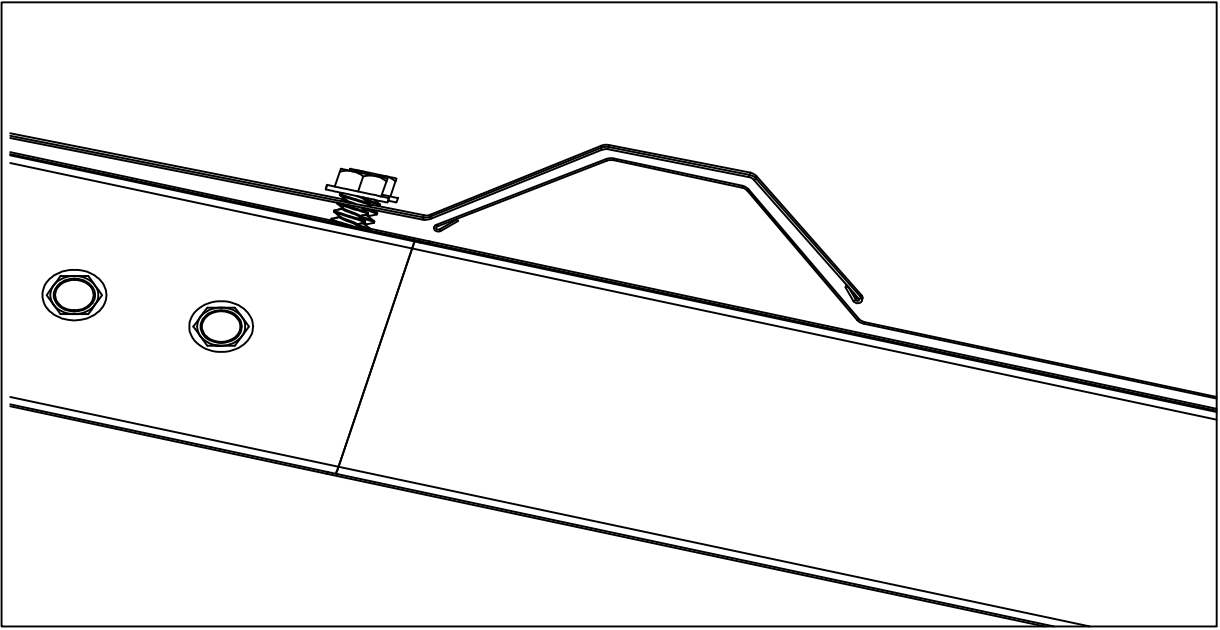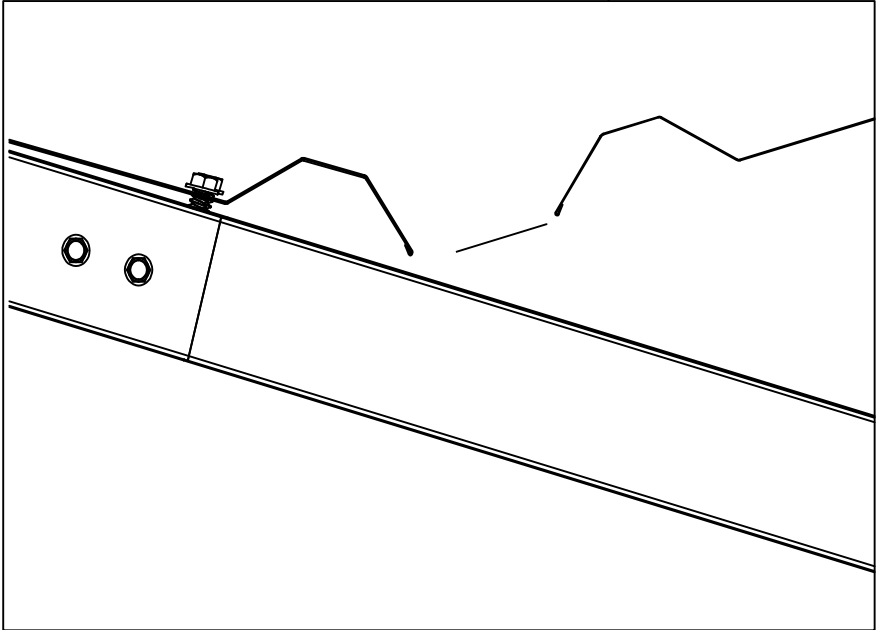










Step 7

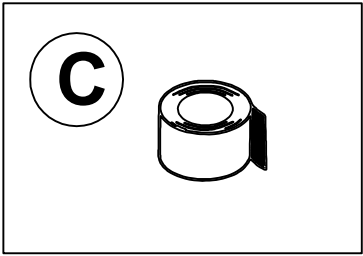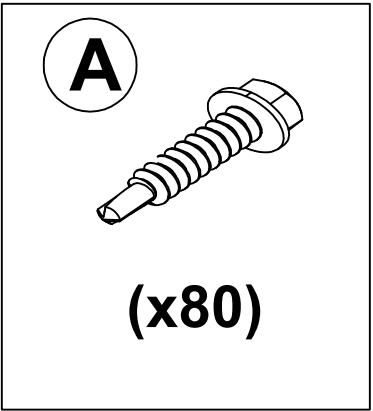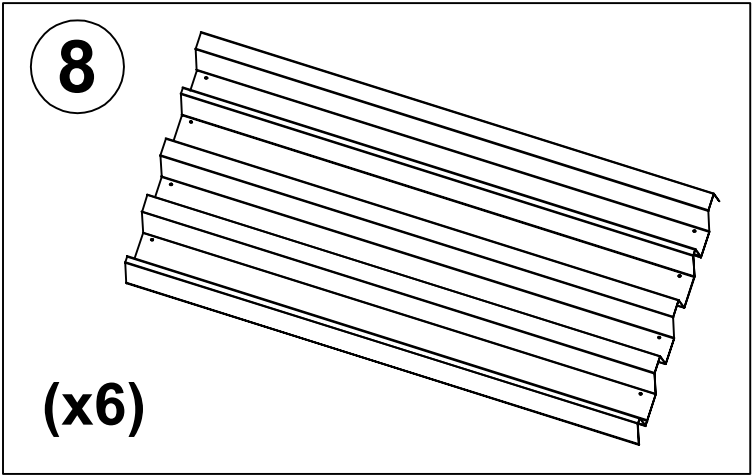



Stick the waterproof strip on the iron pipe, do not cover the screw holes.

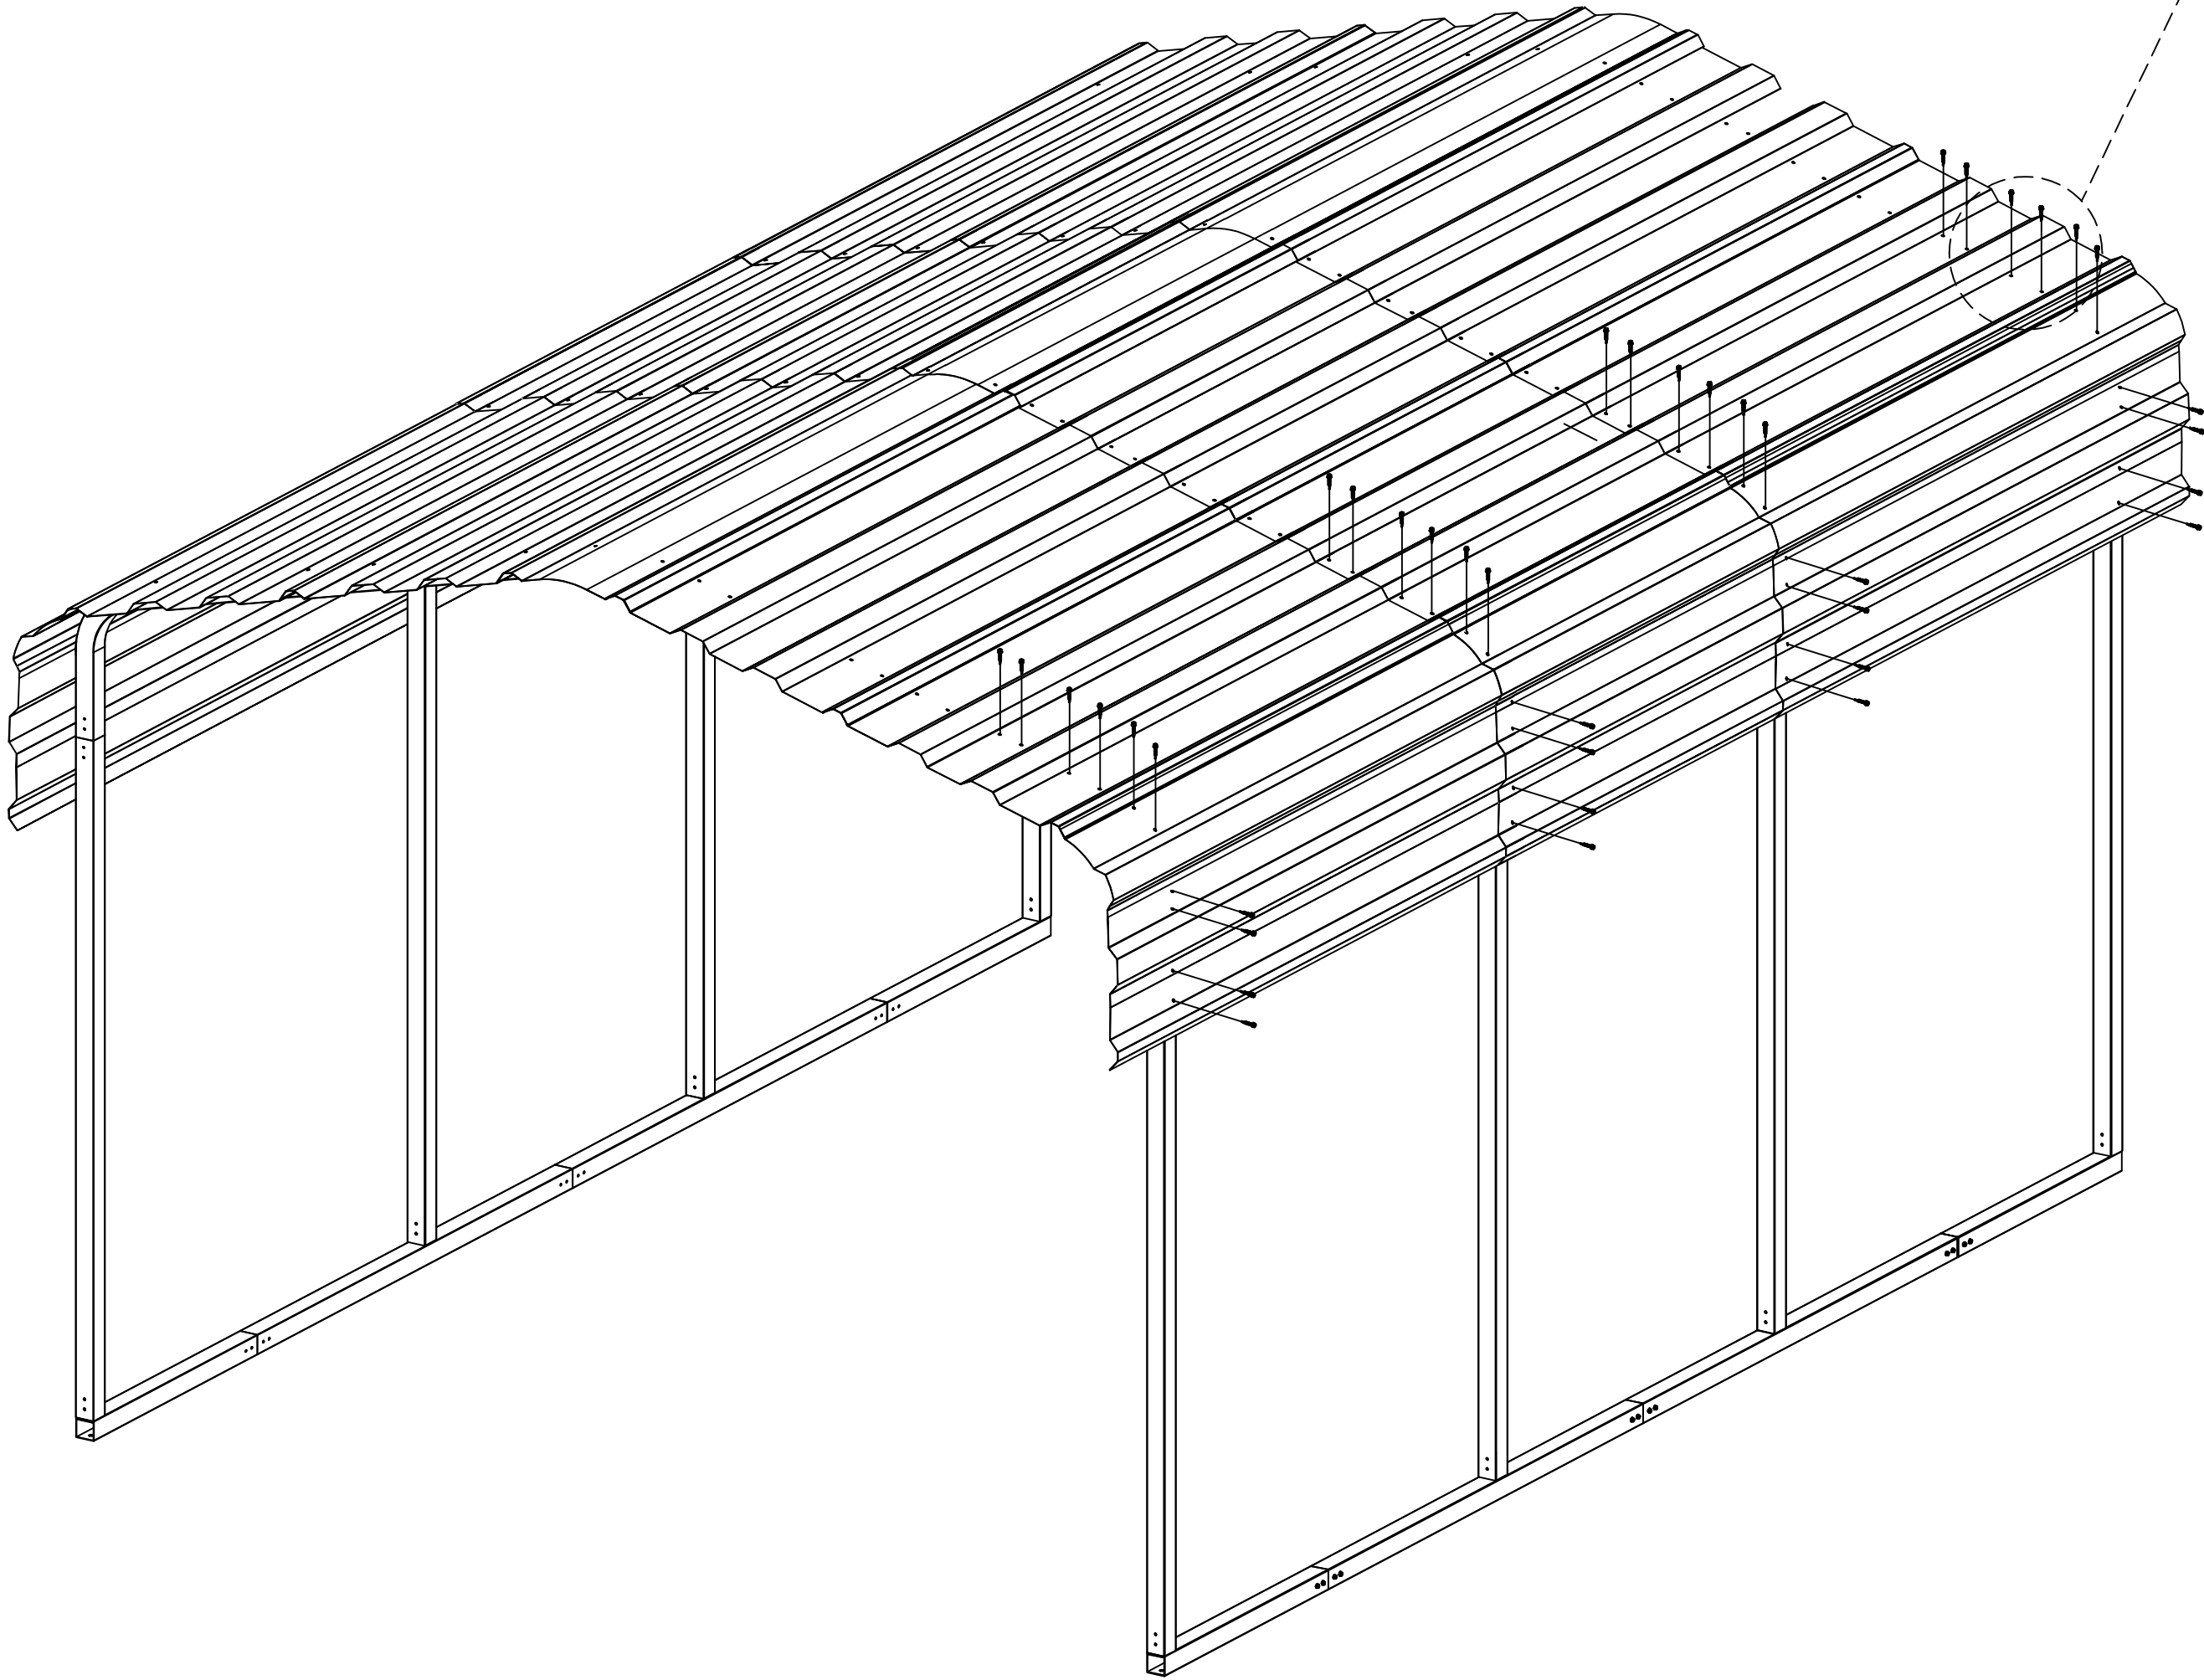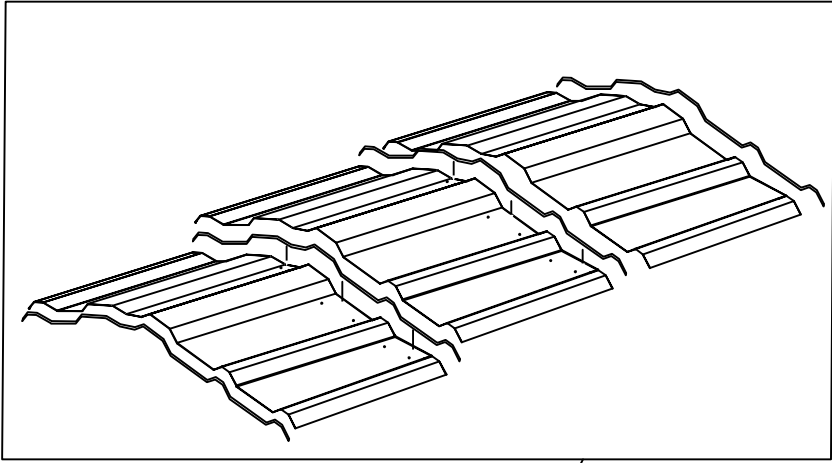

Step 8

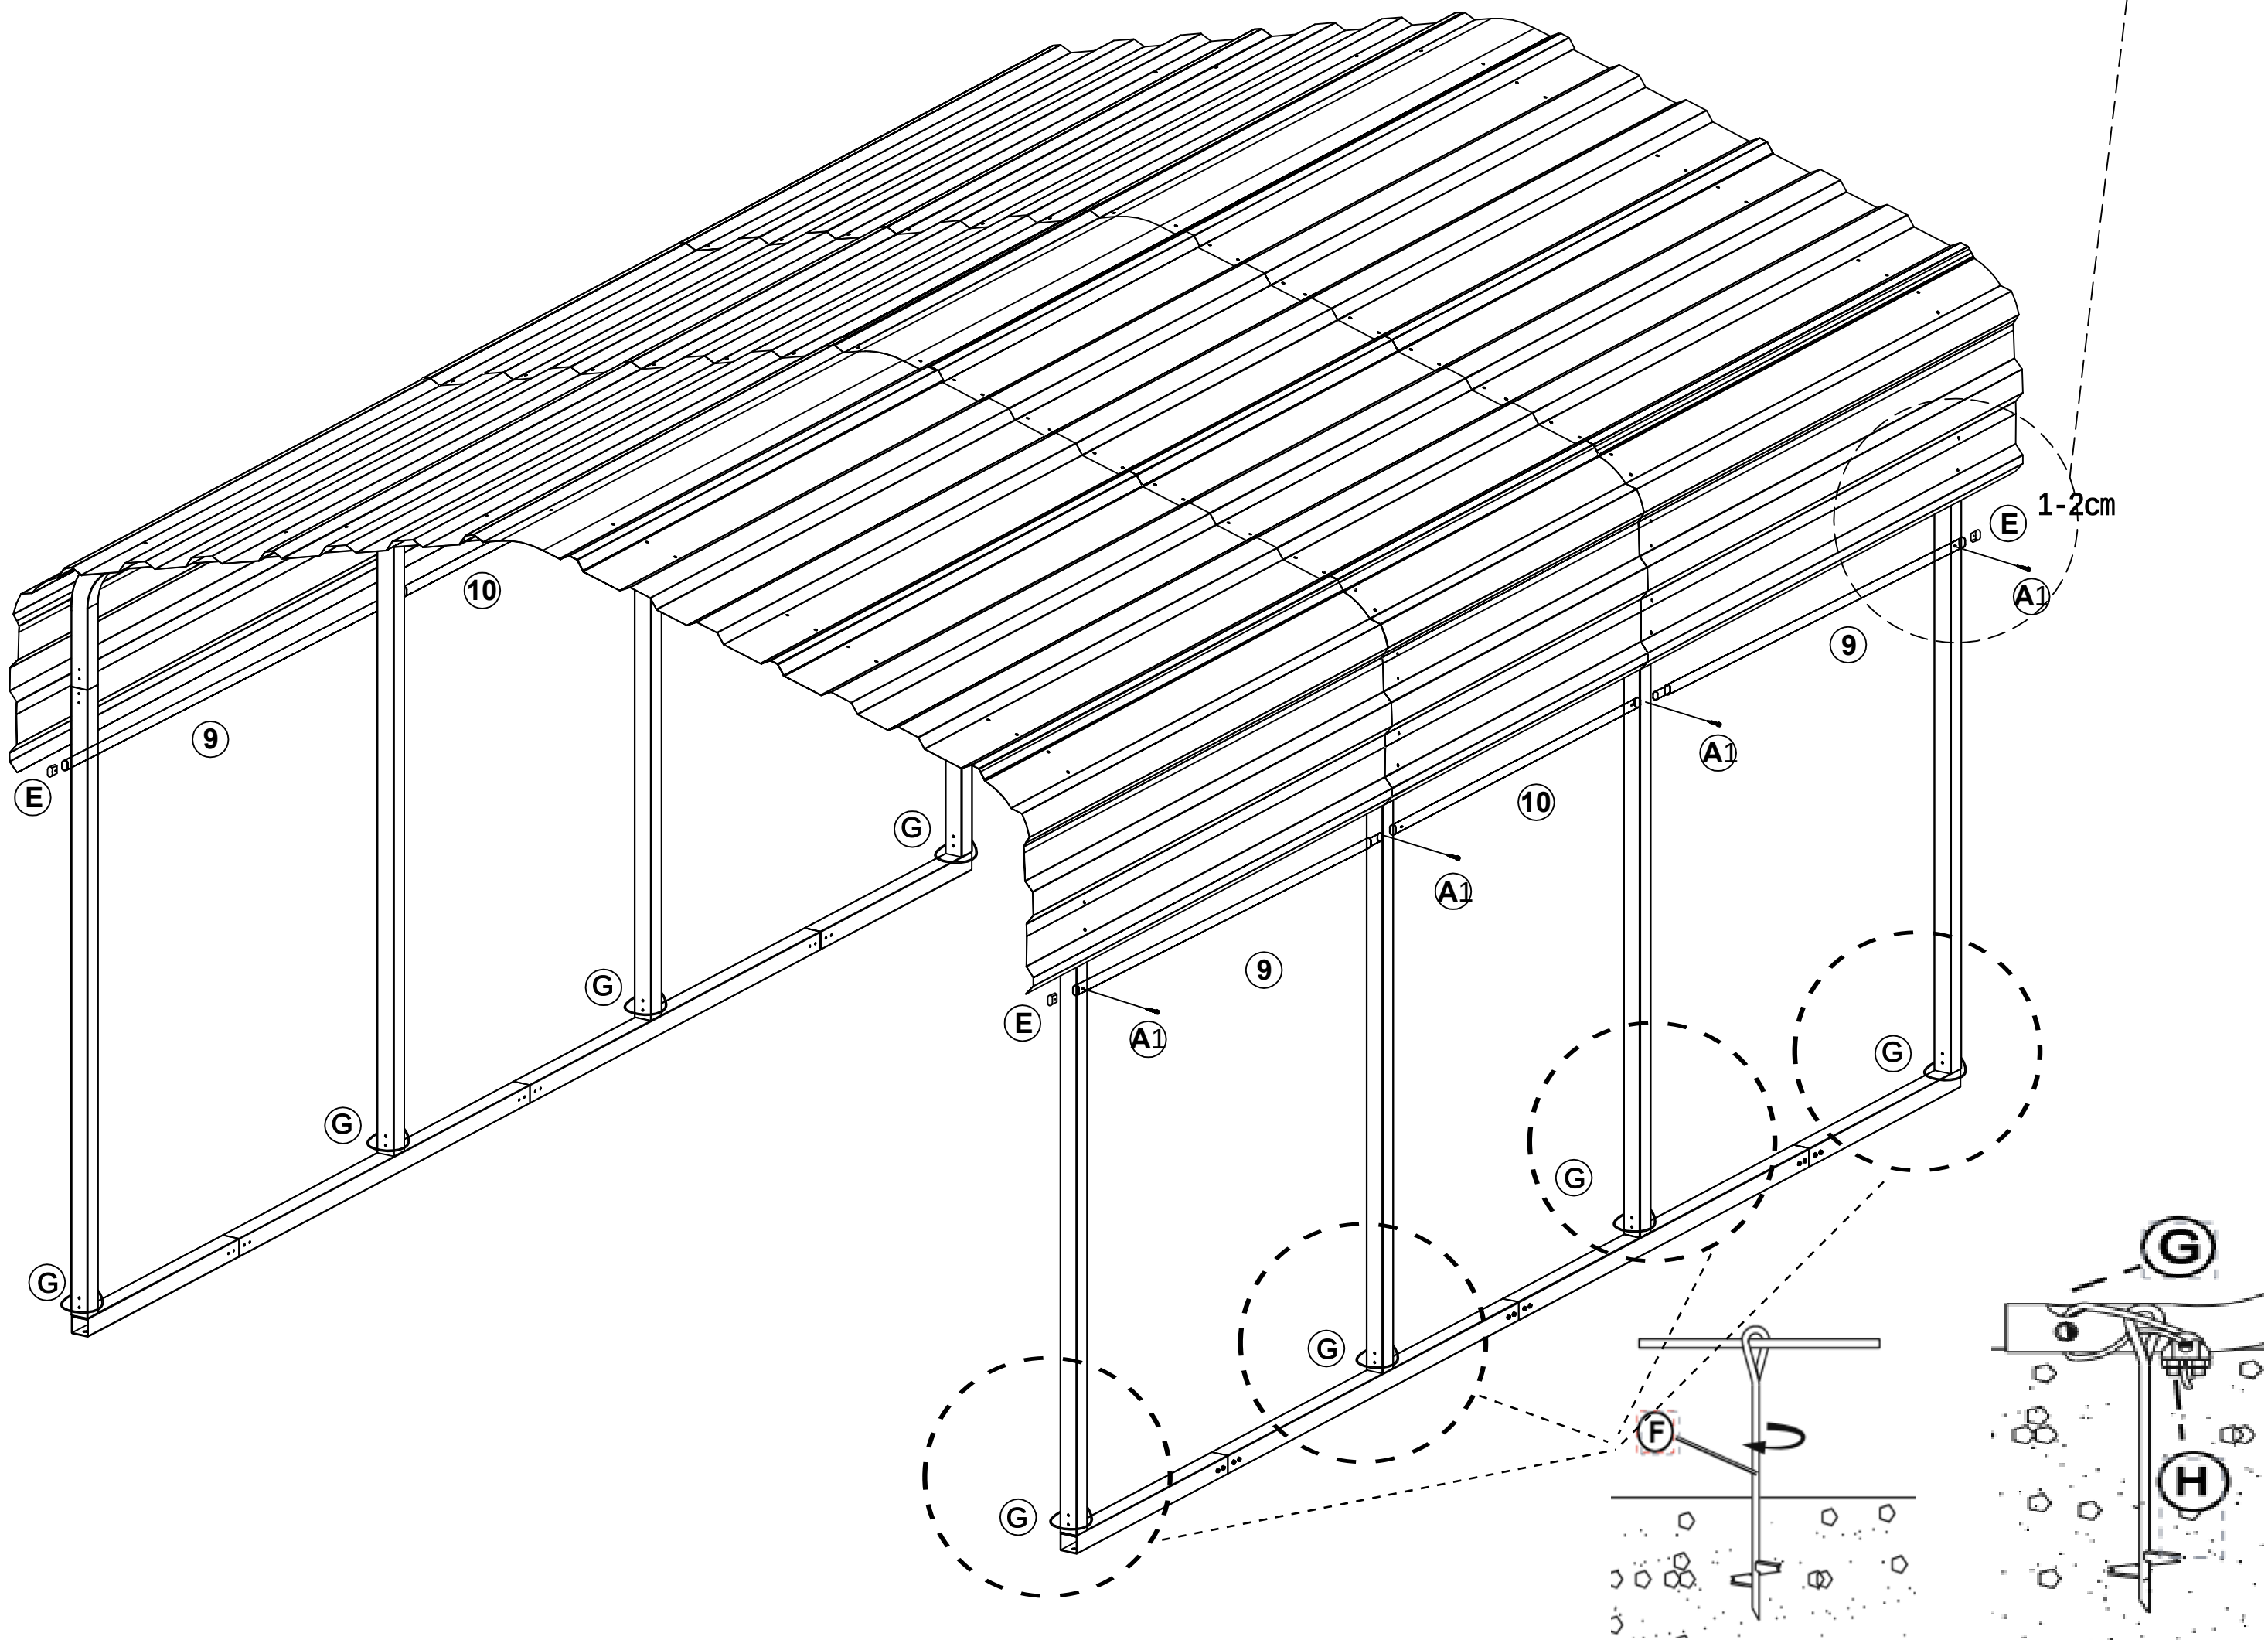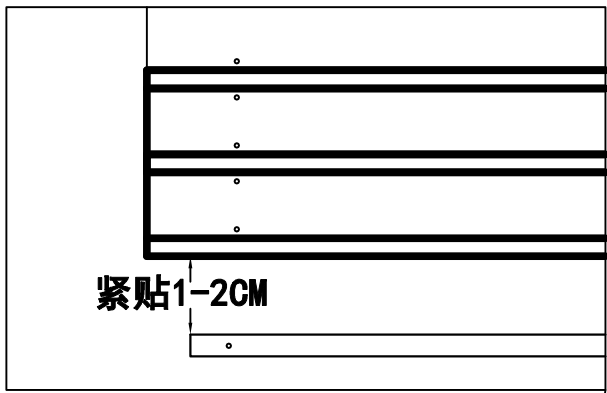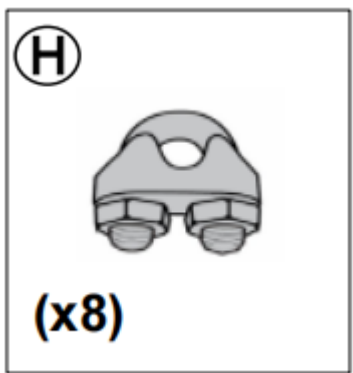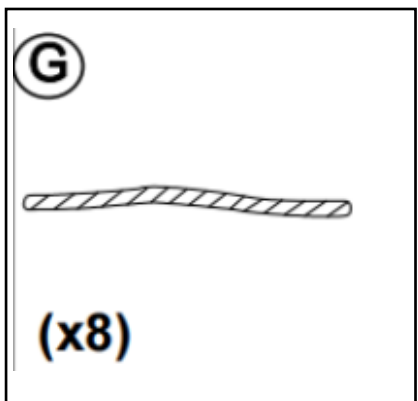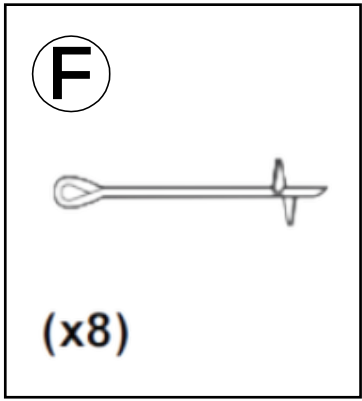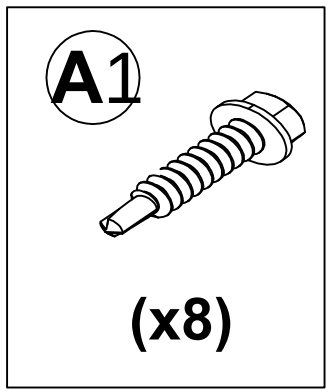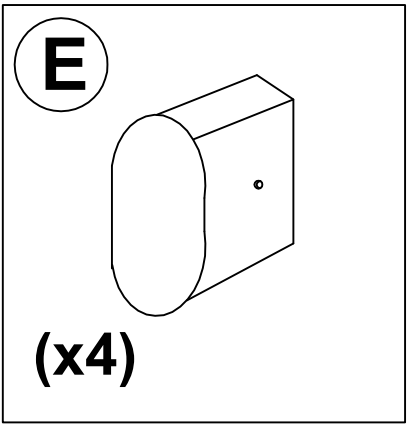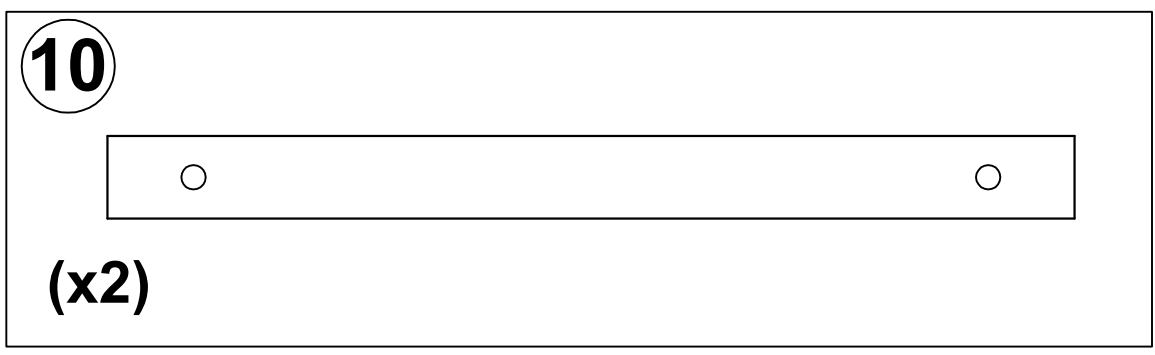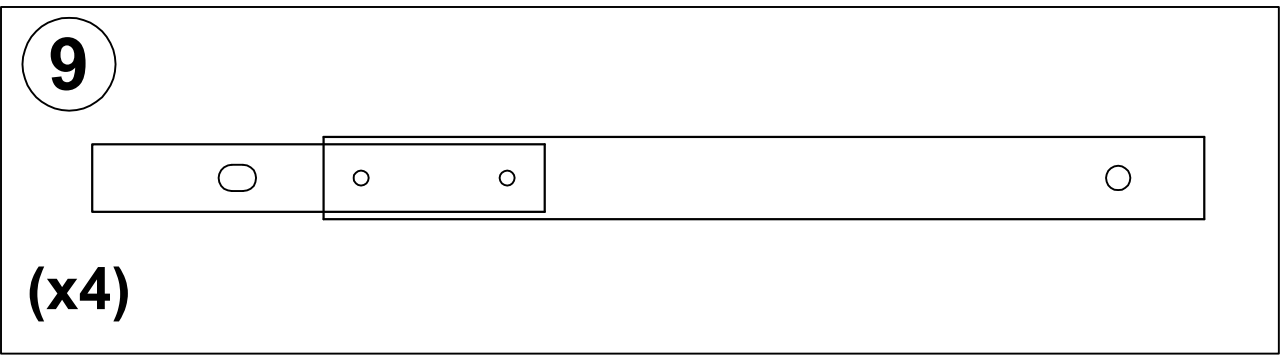

Step 9

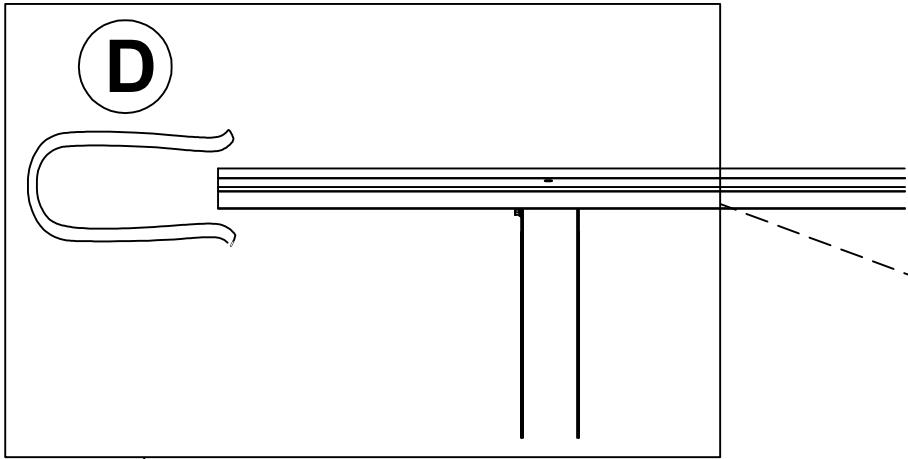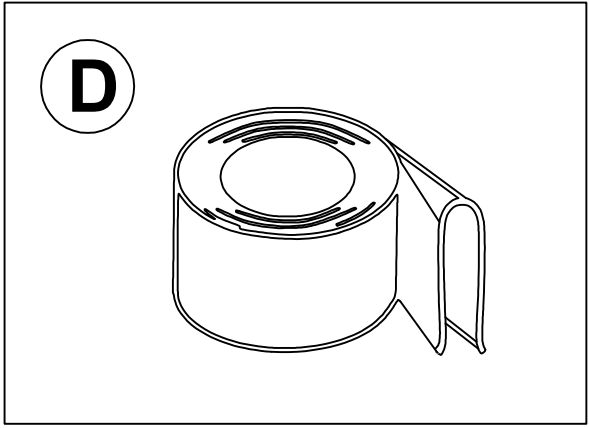

Wrap the edges of the tiles with protective rubber to avoid hurting people.

