

Owner Manual



30 : 00

estimated assembly



2 or more

people required

Ok, let's
get started!



- Put on mood music!
- To prevent damage to product, use the clean side of package carton or rug as working surface.
- In the event of missing or damaged parts, delivery problems etc., please reach out to our team.
We will be happy to fix the problem!

care guide


- Clean regularly with a soft and dry cloth.
- To protect finish, avoid use of abrasive cleaners.
- Wipe up spills immediately. Please!



product parts



(A) Top
x1

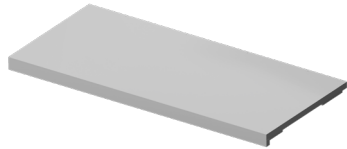


(B) Bottom
x1



(C1) Left Side
x1



(C2) Right Side
x1

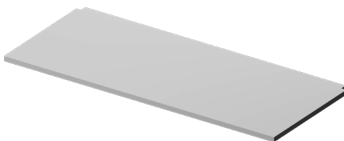


(D) Shelf
x1




(E) Bottom Leg
x4

product parts

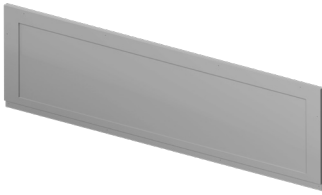

(F1) Back Upper Part
x1

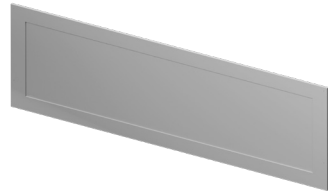

(F2) Back Lower Part
x1



(G1) Left Door
x1




(G2) Right Door
x1


what's included



(H)
Bolt (6x40)
26 Pcs



(I)
Bolt (6x20)
2 Pcs




(J)
Bolt (4x25)
2 Pcs




(K)
Washer (6x16)
16 Pcs



(L)
Lock Washer (6x12)
16 Pcs



(M)
Ball Allen Key (4mm)
1 Pcs



(N)
Knob
2 Pcs



Green Sticker



(YS) Yellow Sticker



(RS) Red Sticker

assembly instructions


Friendly Tip: Take a deep breath going in. This may be a tricky part, but nothing too overwhelming. Just follow these steps to the T and the outcome will be worth it!



- ⓘ While assembling the product, tighten the bolts up to 50%. Once all parts are in place, only then fully tighten the bolts.


step 1:

Start by bringing the Back Upper Part (F1) and Back Lower Part (F2) on a flat surface. Align the edges and pre-drilled holes as shown below. Ensure the green stickers (GS) on each part meet together & are facing towards you.

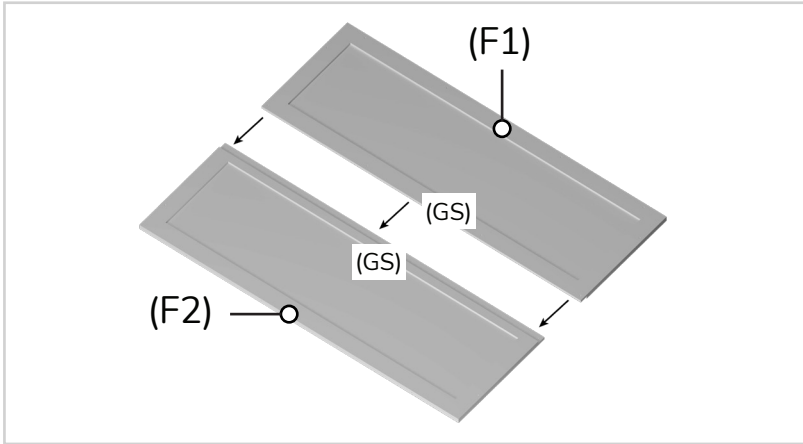


step 2:

Then, secure them by inserting the (I) bolts into the D-nuts. Tighten using the allen Key (M).

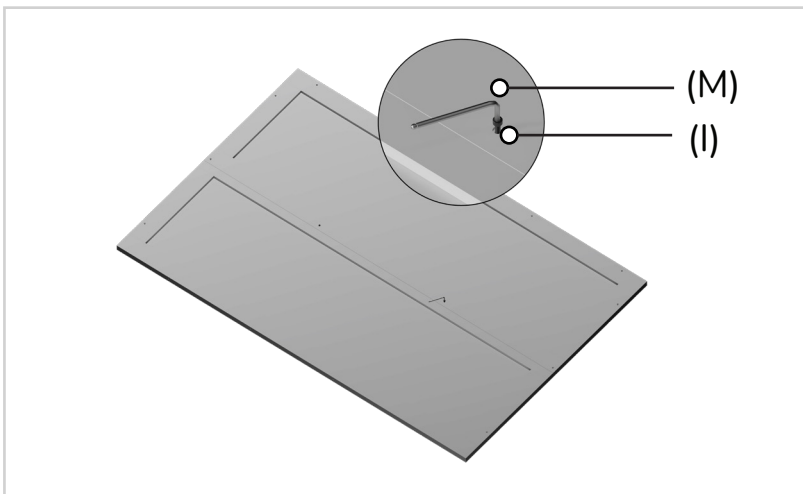


step 3:

Next, place the bottom (B) of the cabinet vertically with a yellow sticker on the left and align it with the slots on the left side (C1) of the cabinet as shown in the image below. Ensure the sticker on (B) & (C1) matches.

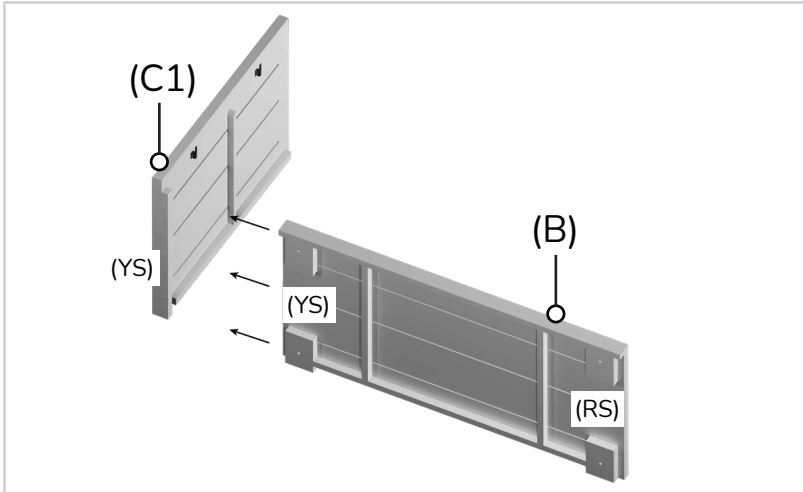


step 4:

Now, fix them together by using washers (K), lock washers (L), and bolts (H) in the given slots. Tighten using allen key (M).

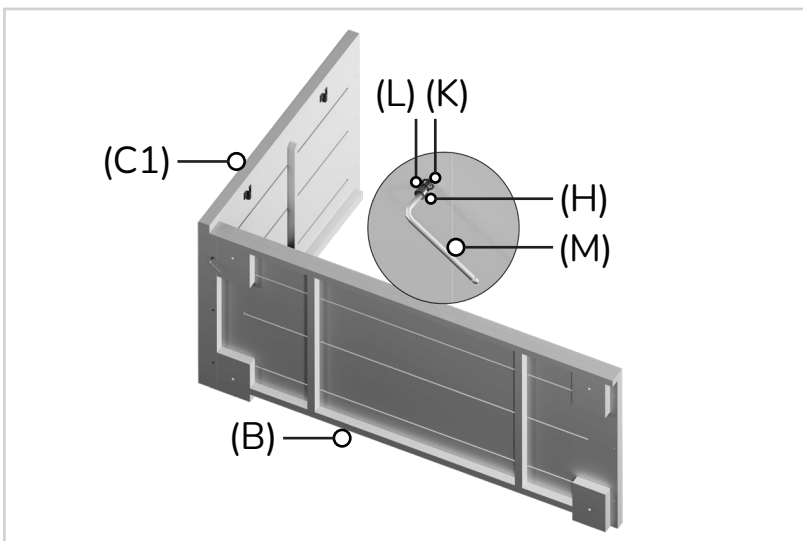


step 5:

Now, align the right side (C2) to the slots & edges of the cabinet bottom (B).

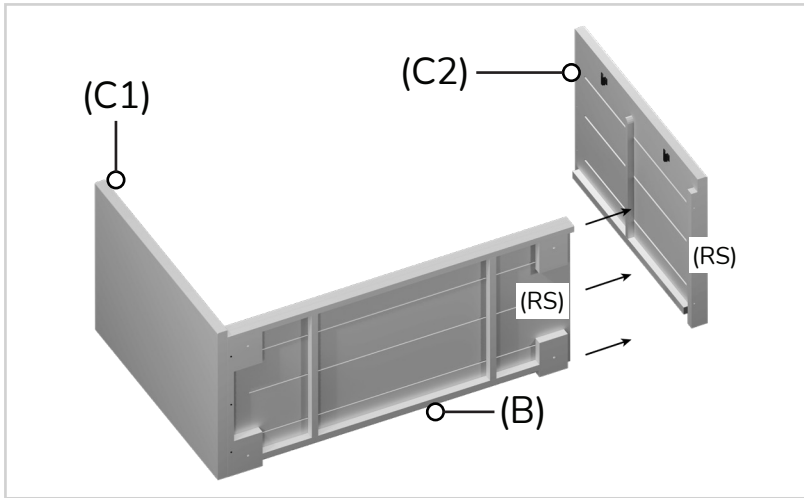


step 6:

Fix them together by using washers (K), lock washers (L), and bolts (H) in the given slots. Tighten using allen key (M).

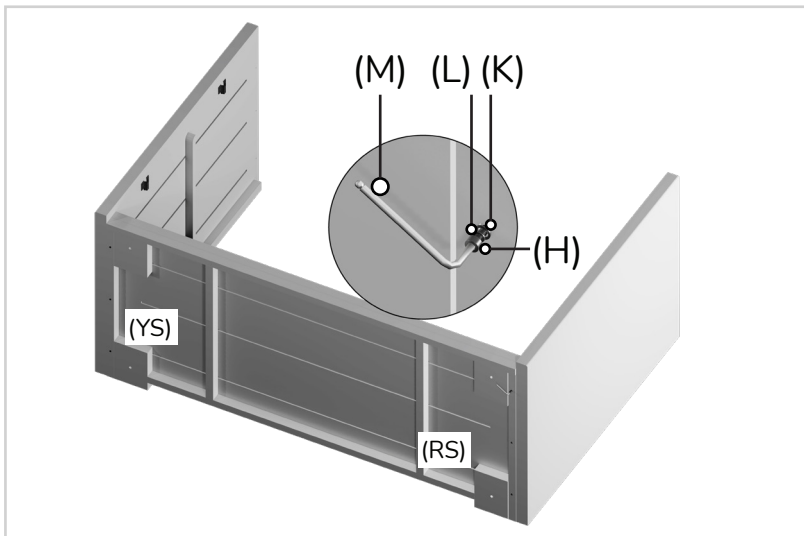


step 7:

Now, rotate the cabinet to the other side to place the back part of the cabinet (F1, F2) over the bottom (B) & sides (C1, C2). Use the image below as a reference.

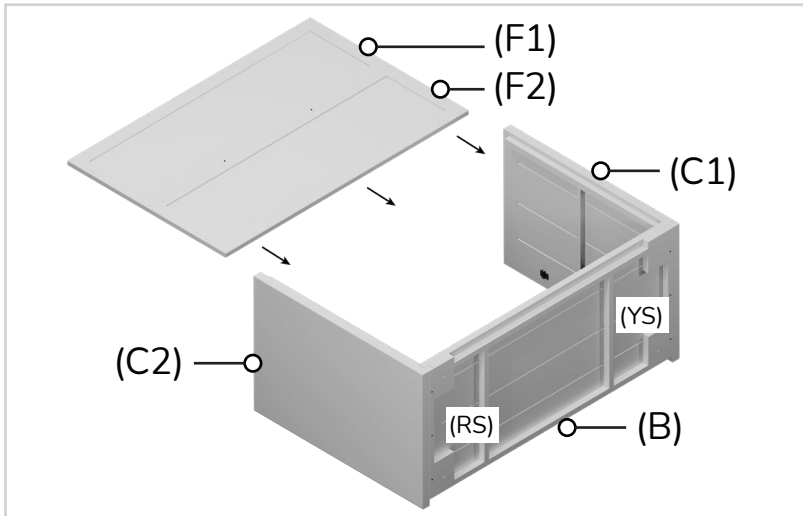


step 8:

Fix it in place by using washers (K), lock washers (L), and bolts (H) in the given slots. Tighten using allen key (M).

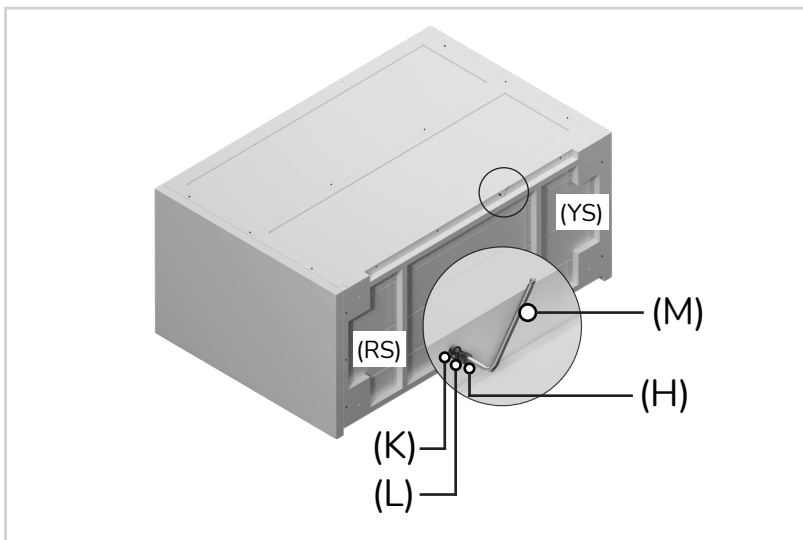


step 9:

Now fix to the back parts (F1, F2) to the sides (C1, C2) by inserting the (H) bolts into the D-nuts. Tighten using the allen Key (M).

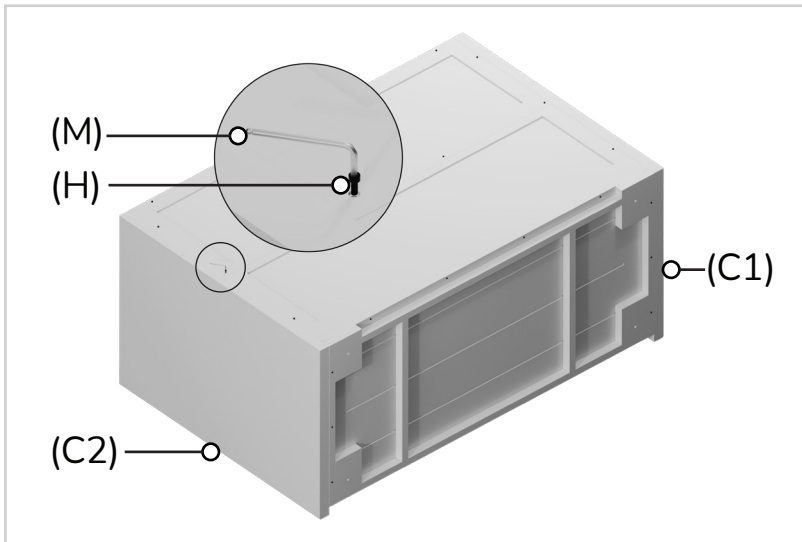


step 10:

Now, rotate the cabinet back and take the top (A) and align it to the slots on the cabinet sides (C1) & (C2) as per the matching stickers.

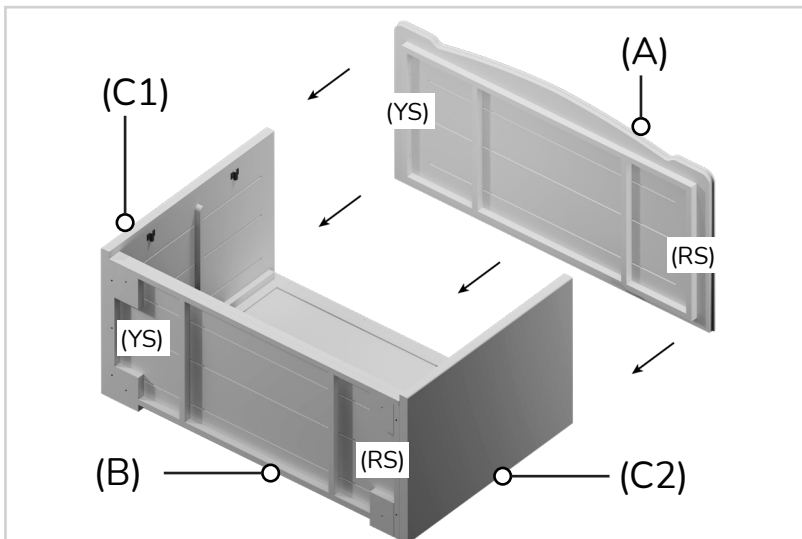


step 11:

From the inner side of the cabinet, fix the top (A) to the sides by using washers (K), lock washers (L), and bolts (H) in the given slots. Tighten using allen key (M).

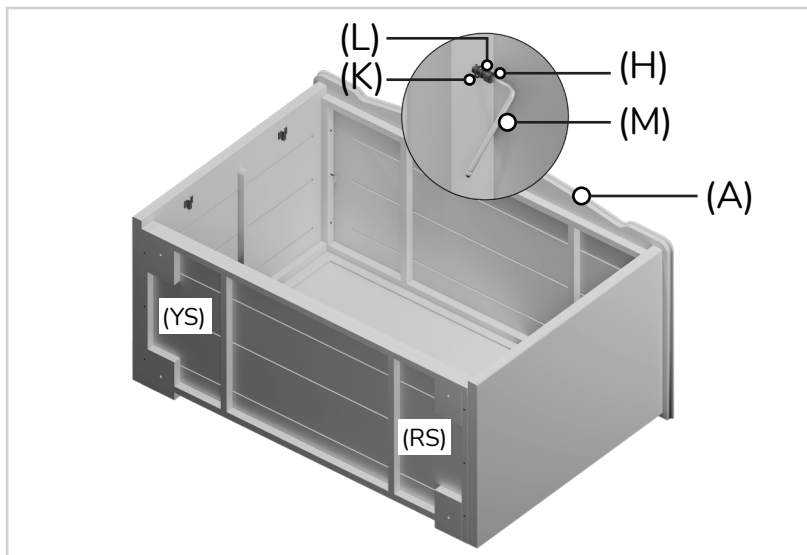


step 12:

When done, take the leg (E) and fix it to the slot on the cabinet bottom (B) by rotating clockwise.

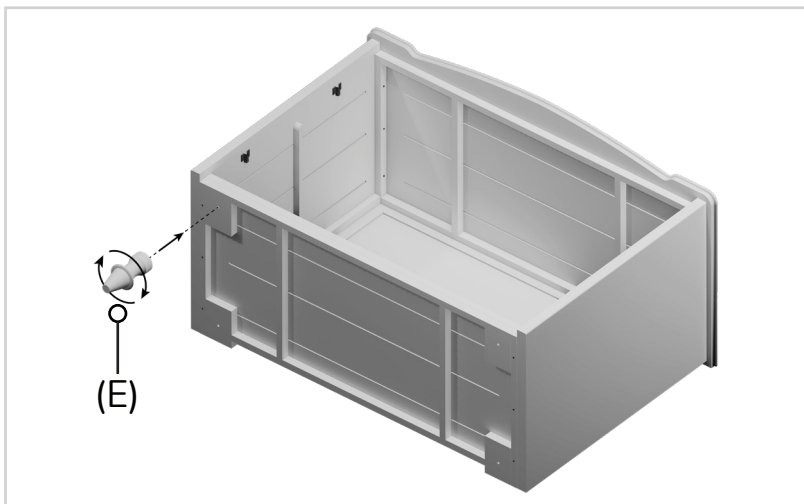


step 13:

Repeat step 12 with the remaining legs.

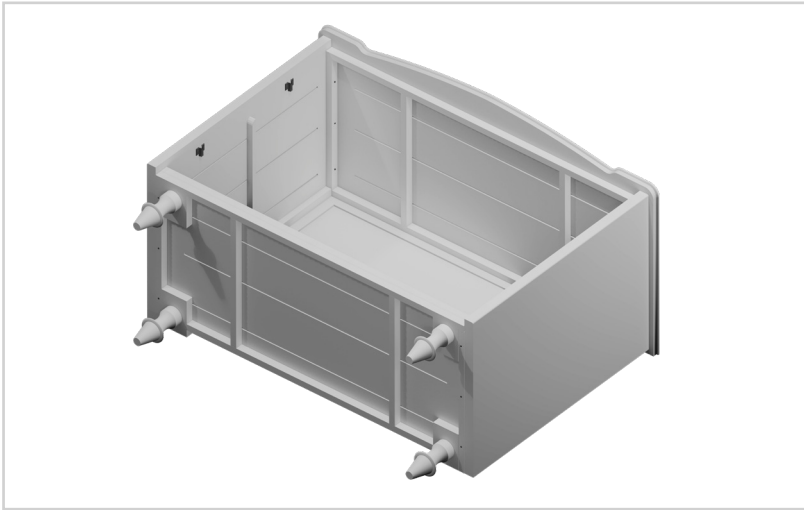


step 14:

Turn the cabinet upright and fix the top (A) to the back parts (F1, F2) by inserting the (H) bolts into the D-nuts. Tighten using the allen Key (M).

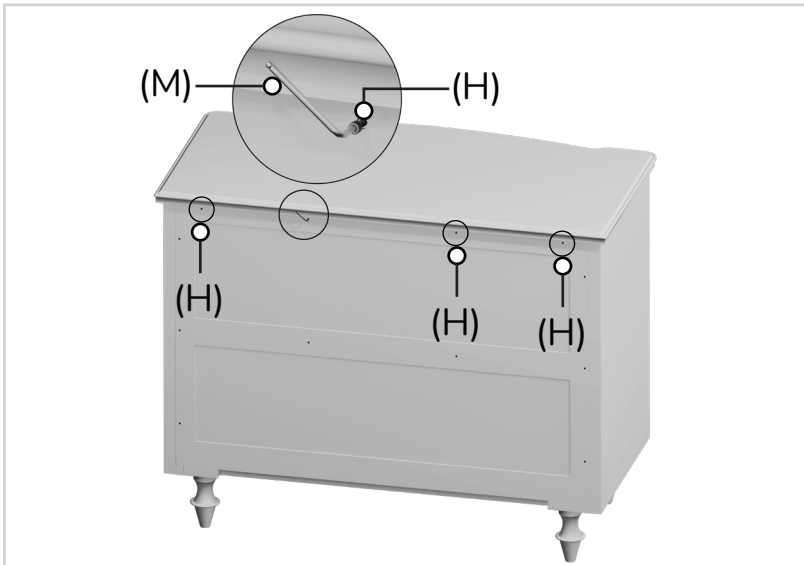


step 15:

When done, take the left door (G1) and align it with the left-side panel (C1). Fix it in place by attaching the hinges on the door with the hinge clips on the side panel.

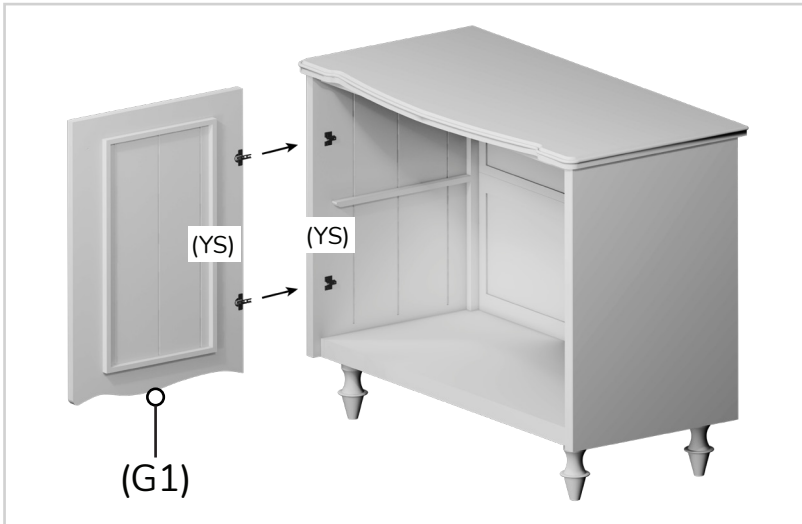


step 16:

Repeat step 15 with the remaining door (G2).

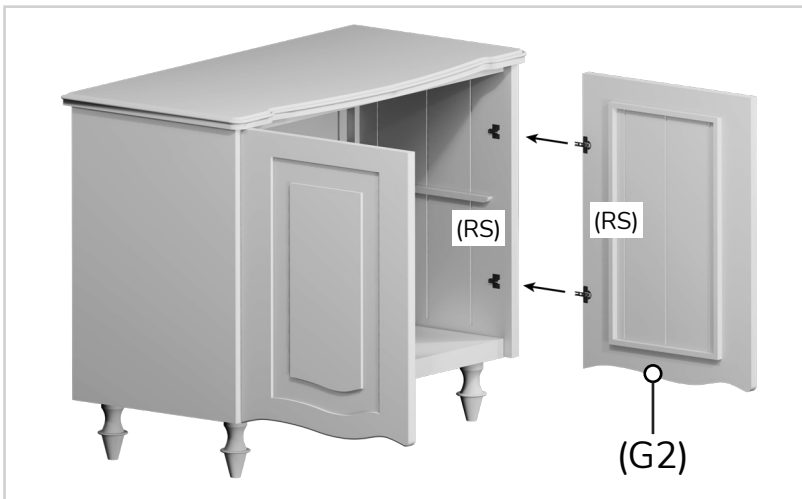


step 17:

Next, insert the shelf (D) into the cabinet. Tilt the shelf while placing it inside, then adjust and align it over the batons on the sides.

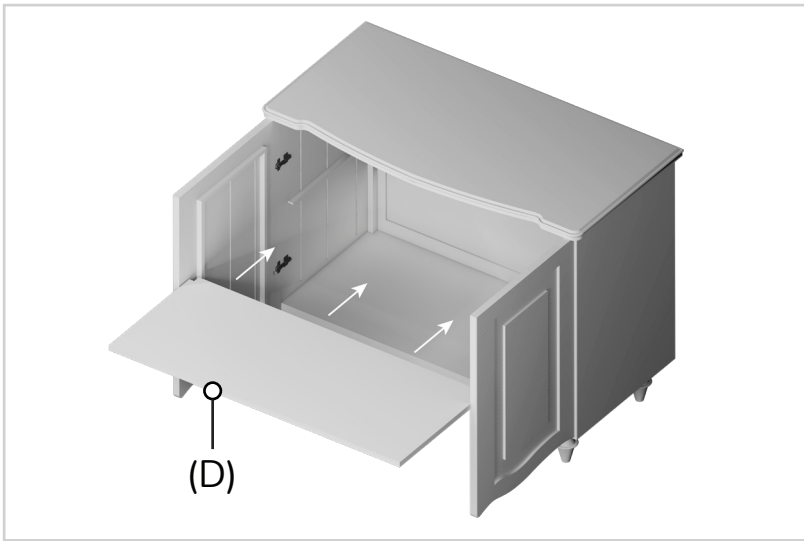


step 18:

When done, take the Knob (N) and fix it outside the door by using Bolts (J). Tighten using Allen key (M). Repeat the same step with the other remaining knob & door.

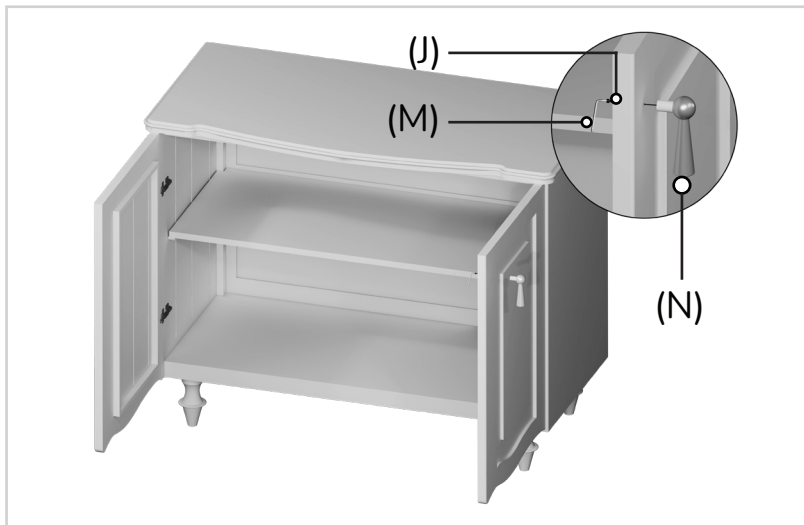

step 19:

If required, adjust the levellers according to the floor.

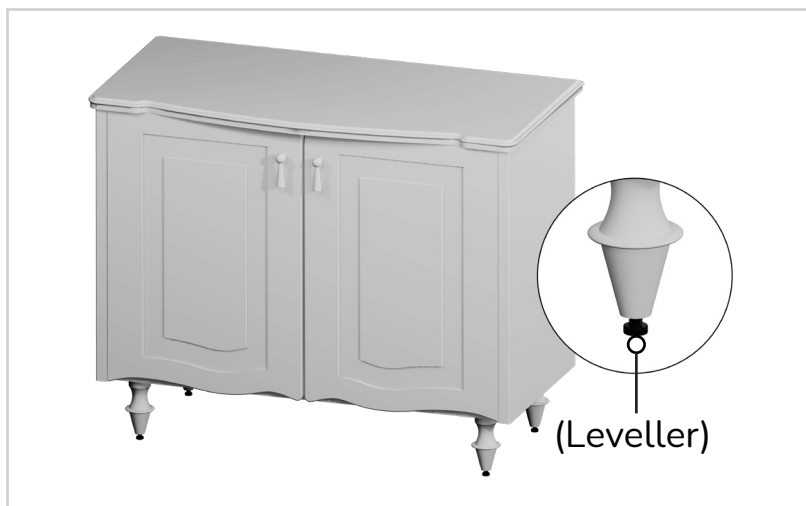



Voila! Your accent cabinet is now assembled and secure!

installation instructions



- ⚠ While assembling the product, tighten the bolts up to 50%. Once all parts are in place, only then fully tighten the bolts.

Hardware Included



a X 04
4 X 16mm



b X 04
4 X 30mm





c X 04



d X 04



e X 02

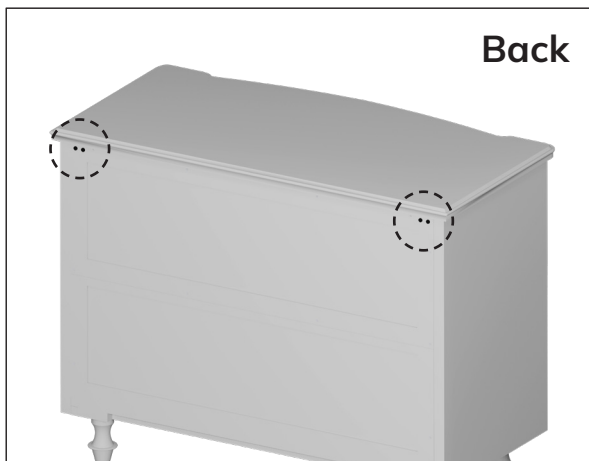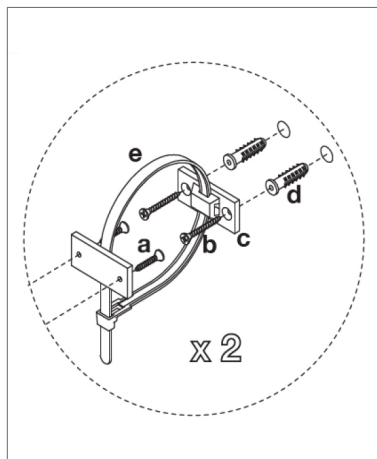

Wall Mounting Instructions

1. Using screws provided and a screwdriver, secure mounting plate(s) to the back of product.
2. Noting the location of the product's mounting plate(s), mark and drill holes on the wall for mounting plate(s). Drill pilot holes into marked positions and into a wall stud. NOTE: if wall studs are not available, drill holes slightly smaller than the drywall anchors and insert each anchor until its flange is flush with the wall.
3. Using a screwdriver, secure mounting bracket(s) to the wall stud or drywall anchors with screws provided.
4. Position product in final location, and secure to the wall by lacing one end of plastic tie(s) through both the and product mounting plates, and through the other end, pulling tightly to remove slack. Do not over tighten.