



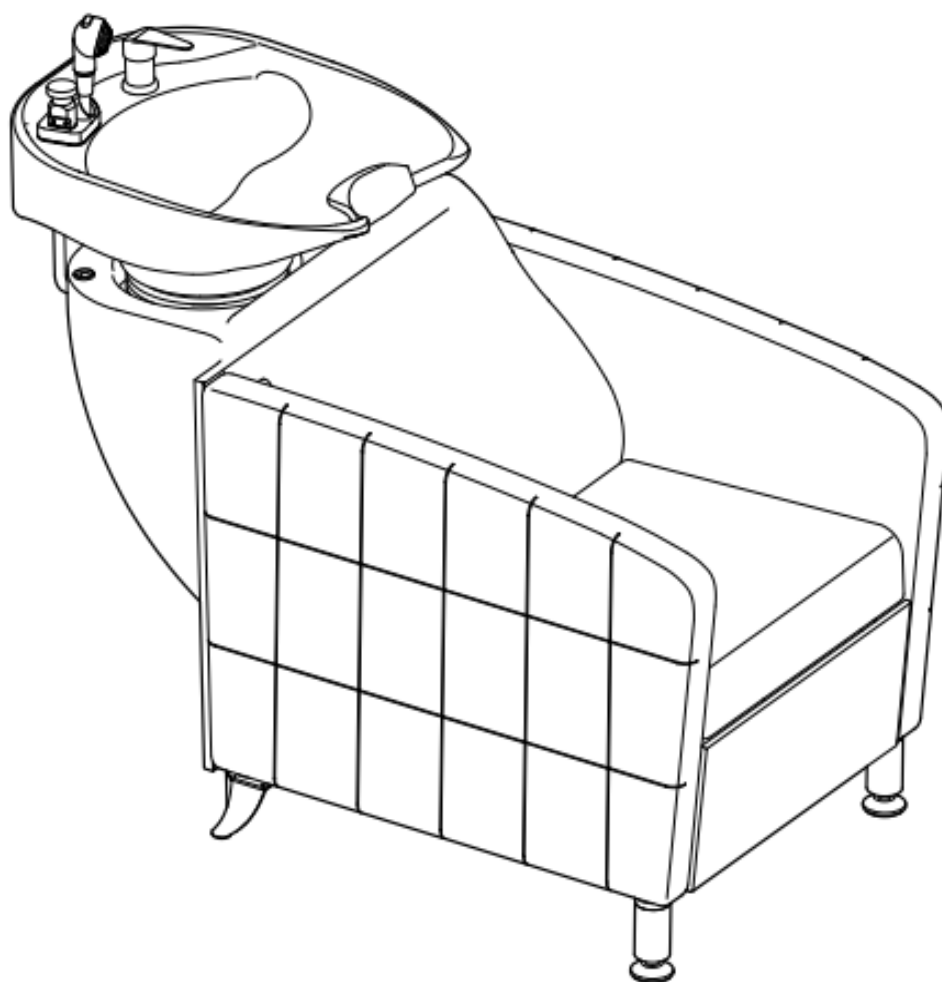
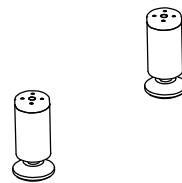
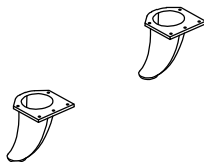
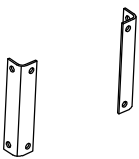
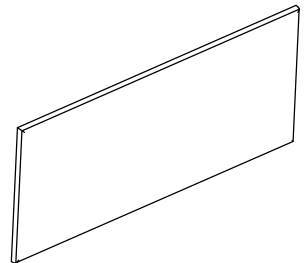
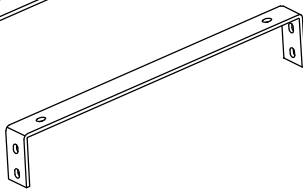
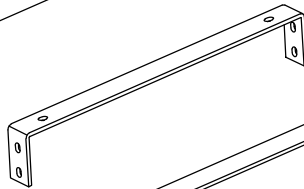
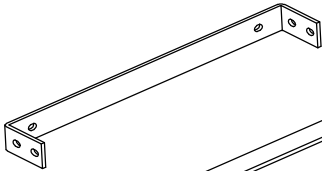
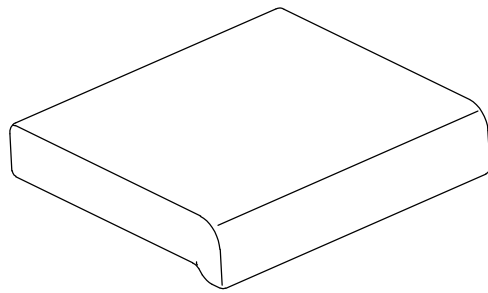
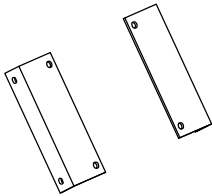
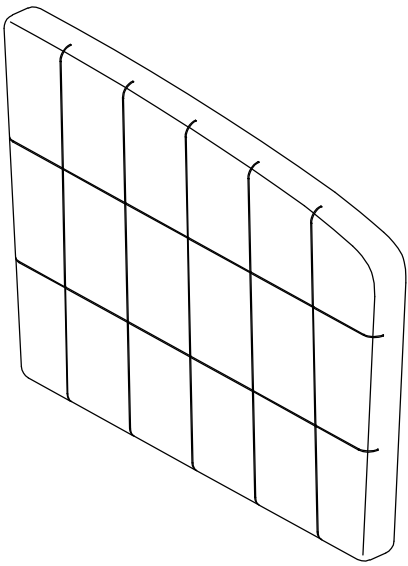
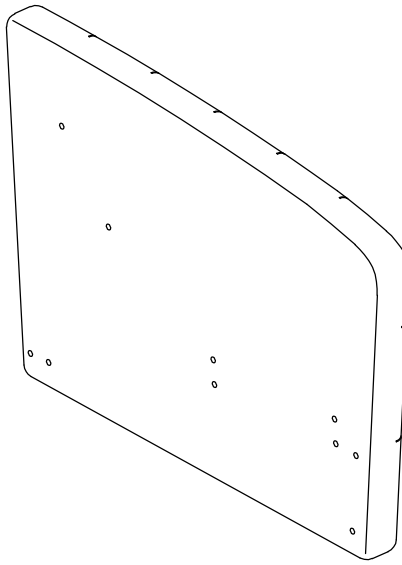
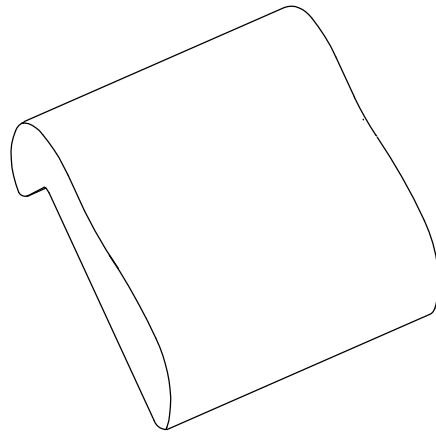
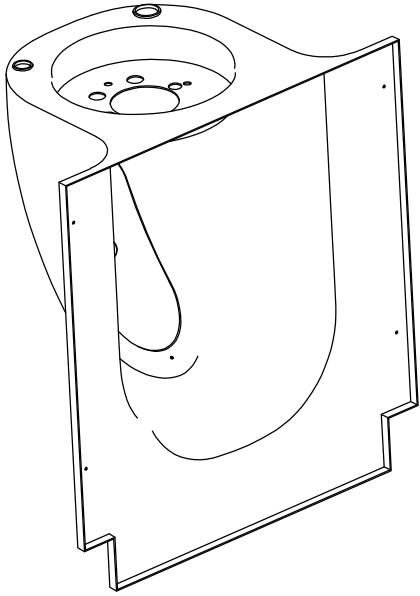

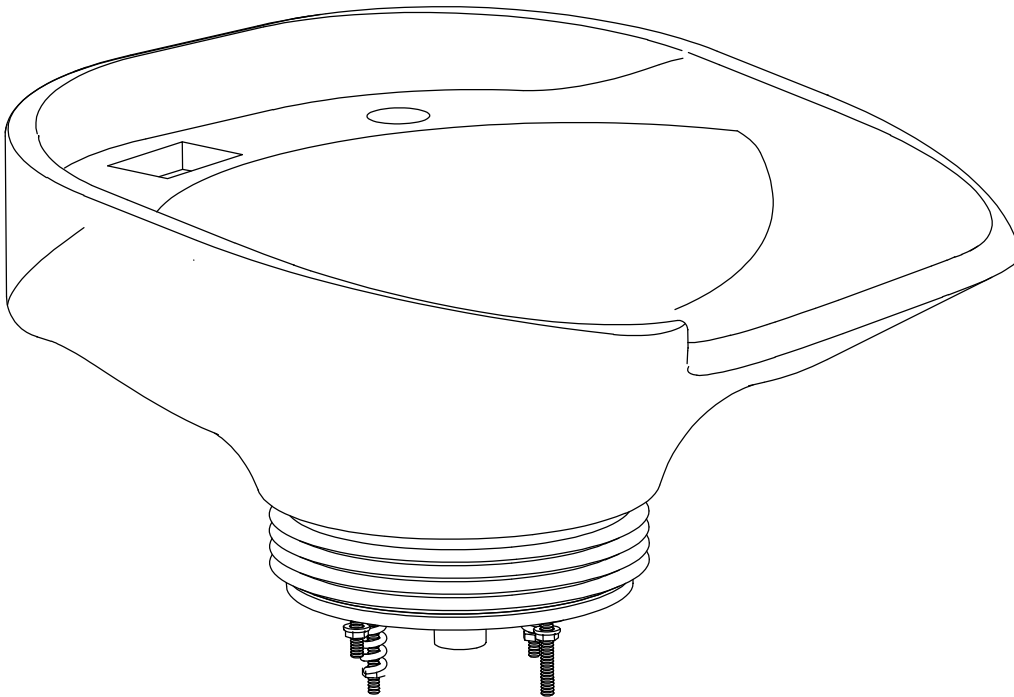
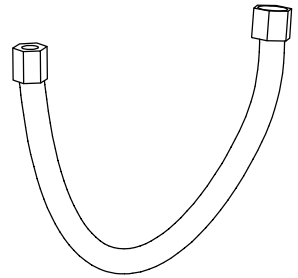
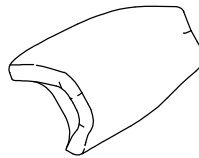

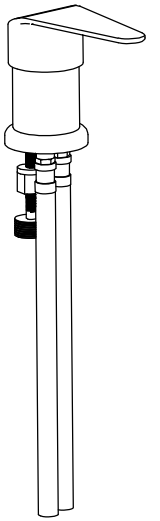



SHAMPOO CHAIR










$\phi 5 \times 60$

Self tapping screw



$\phi 5 \times 35$

Self tapping screw



X1

12-10 Open end wrench





X1


M5 Hexagon wrench with a cross

1

tighten the butterfly nut

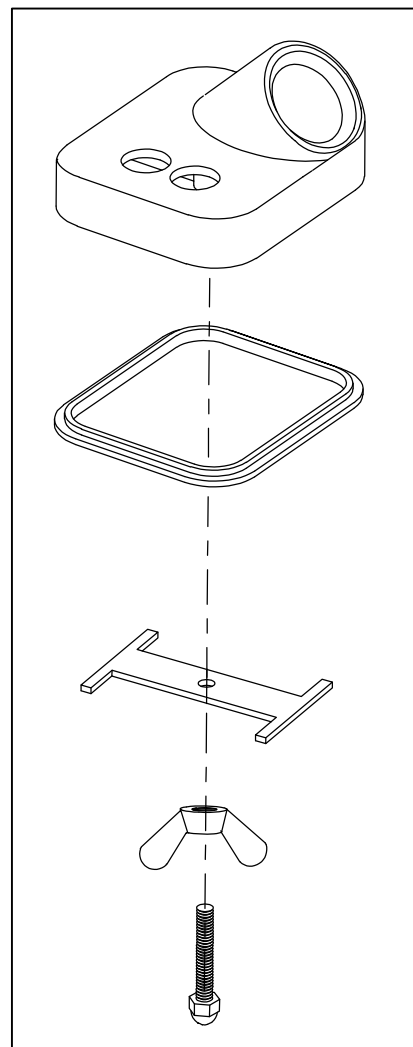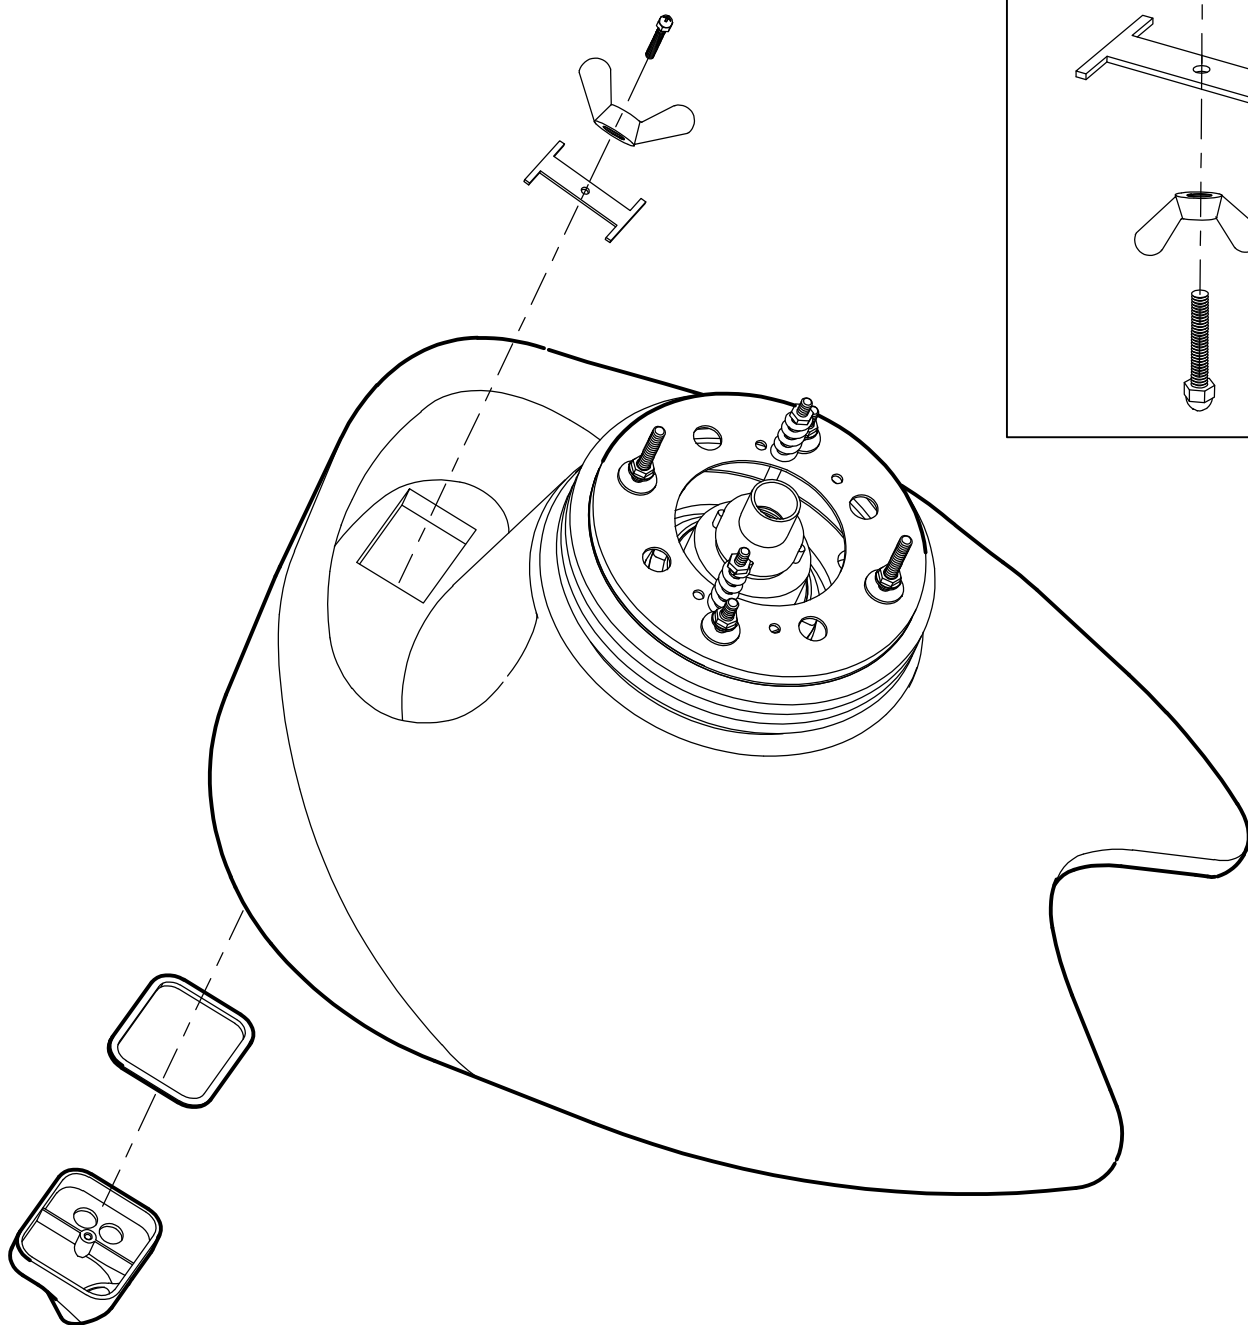


2

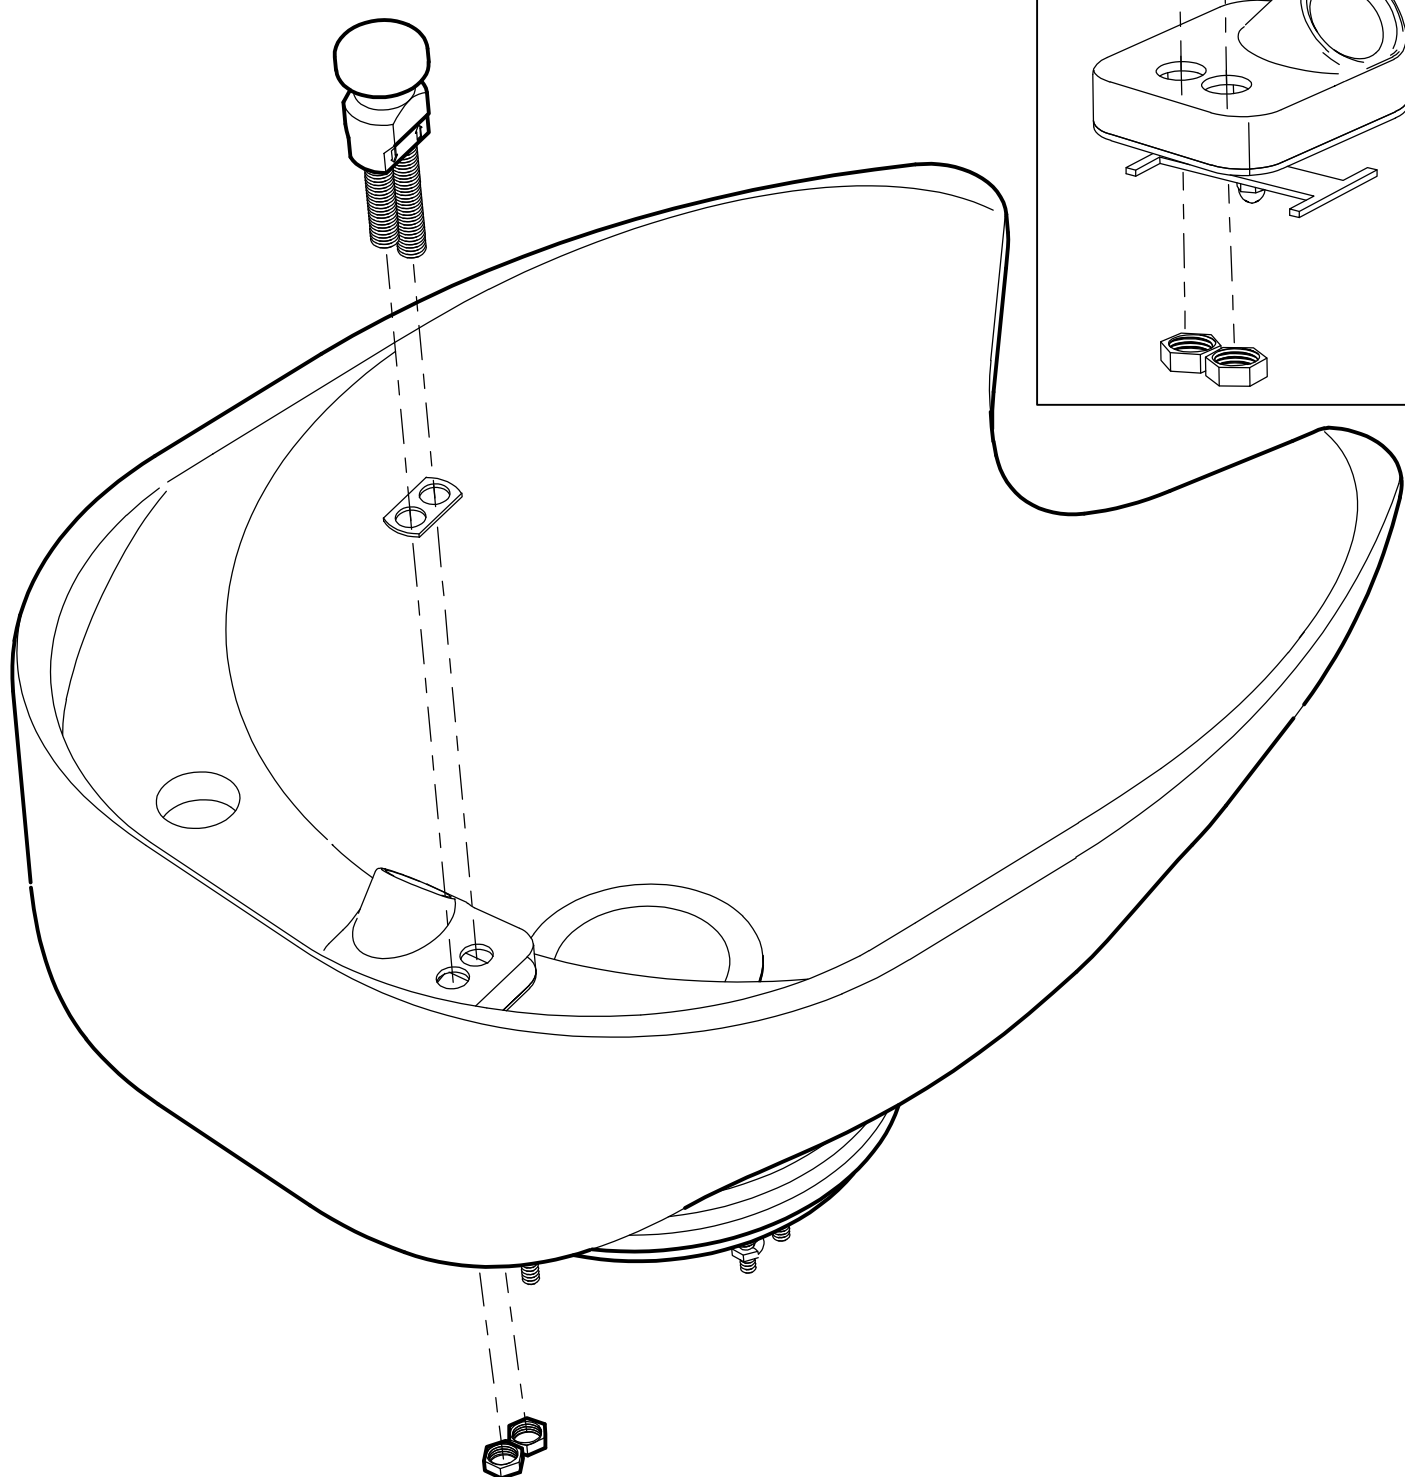

3

↑input



↓output

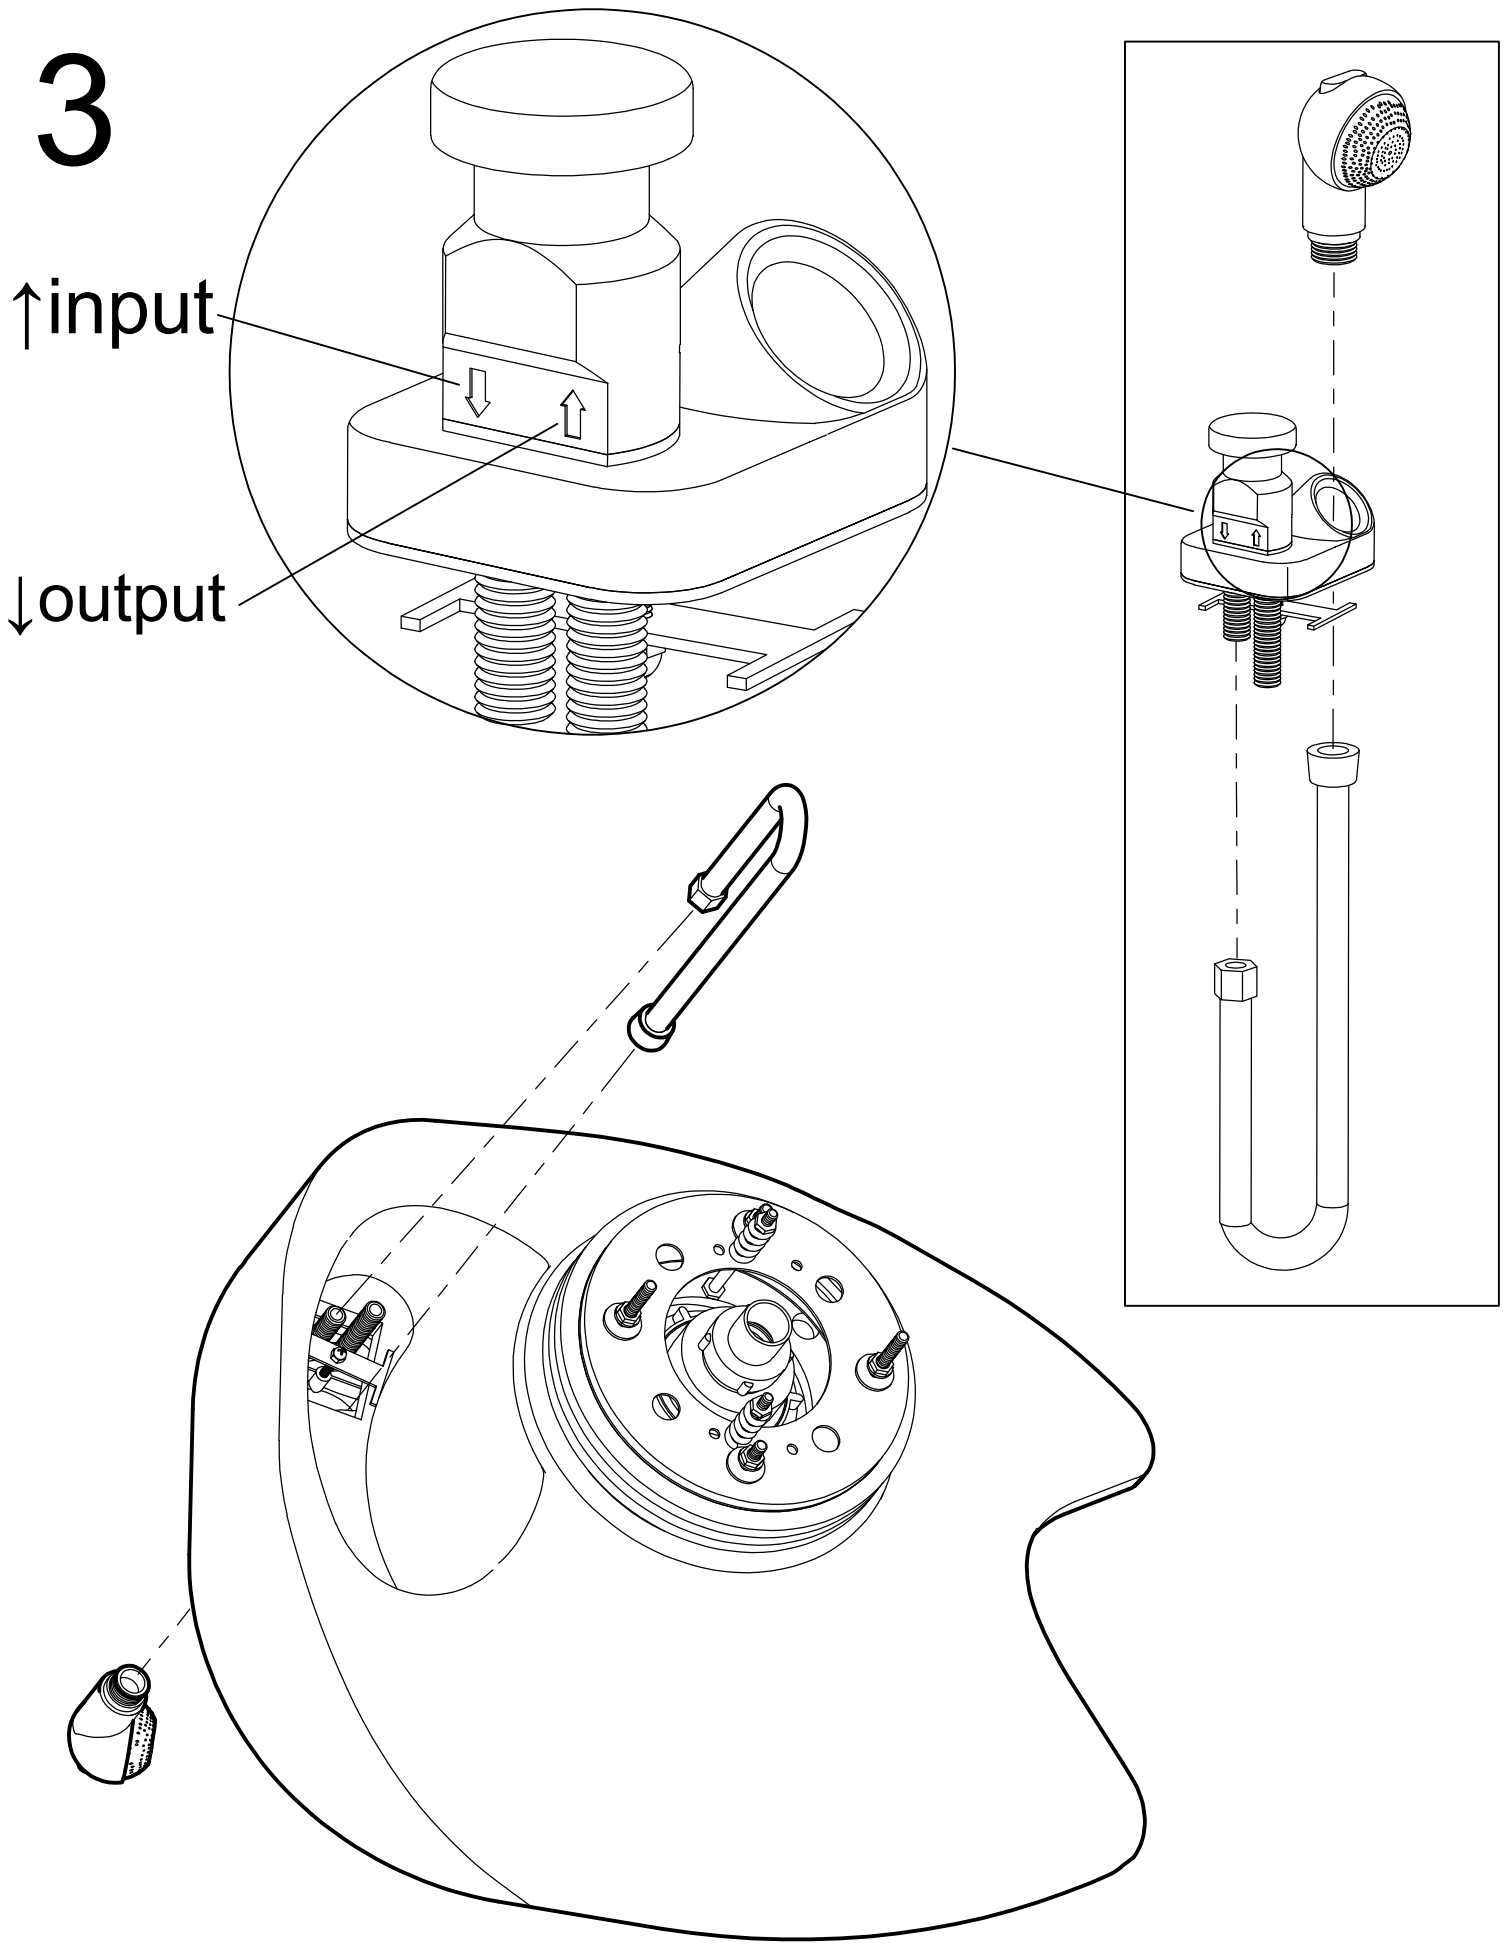

connect to the shorter

4


the two gaskets
are the back

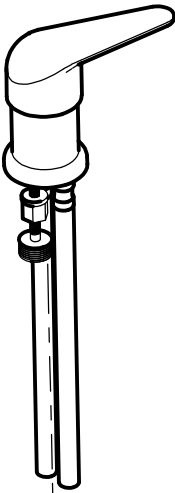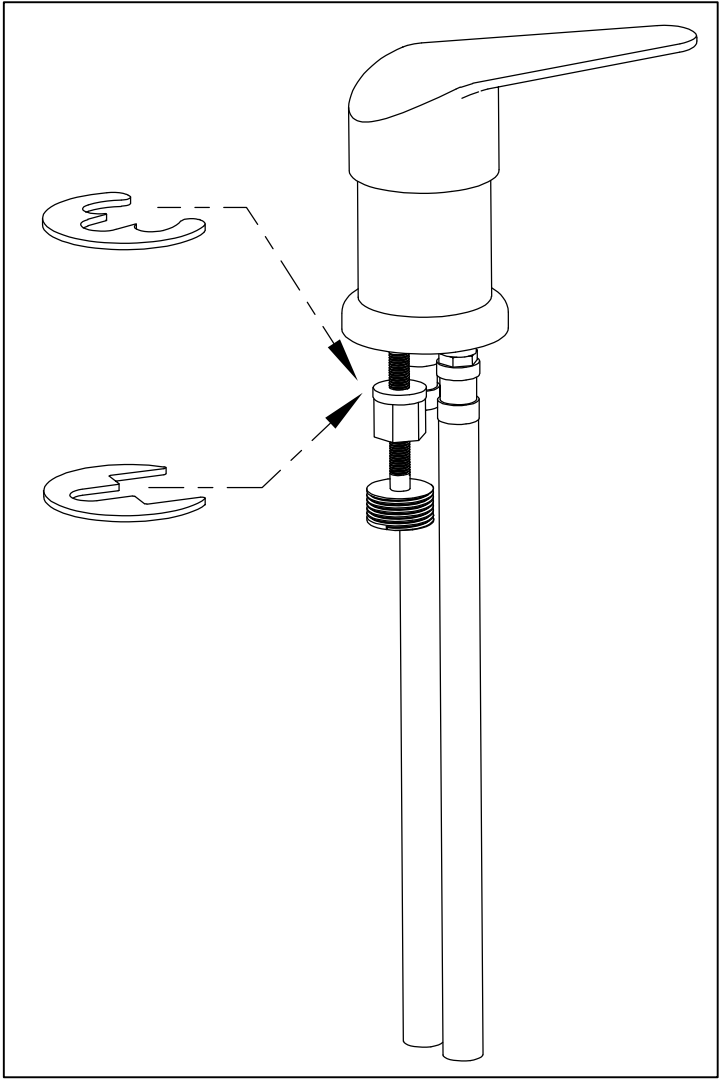



plastic gasket




iron gasket

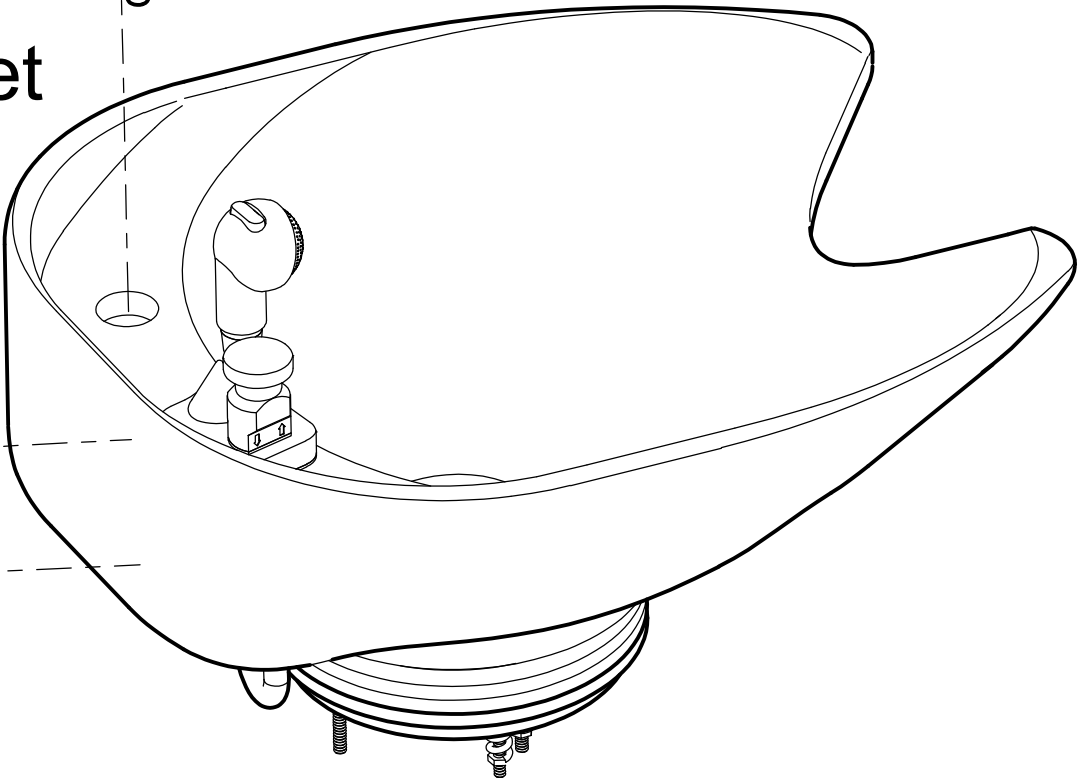

5

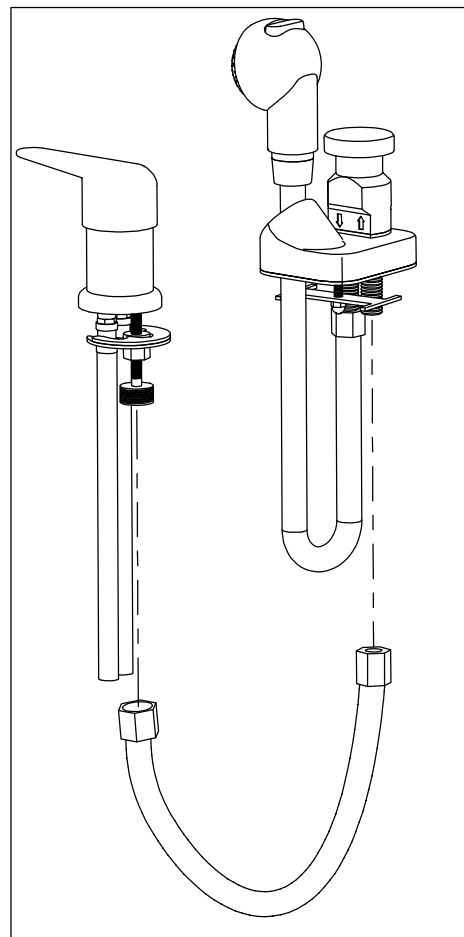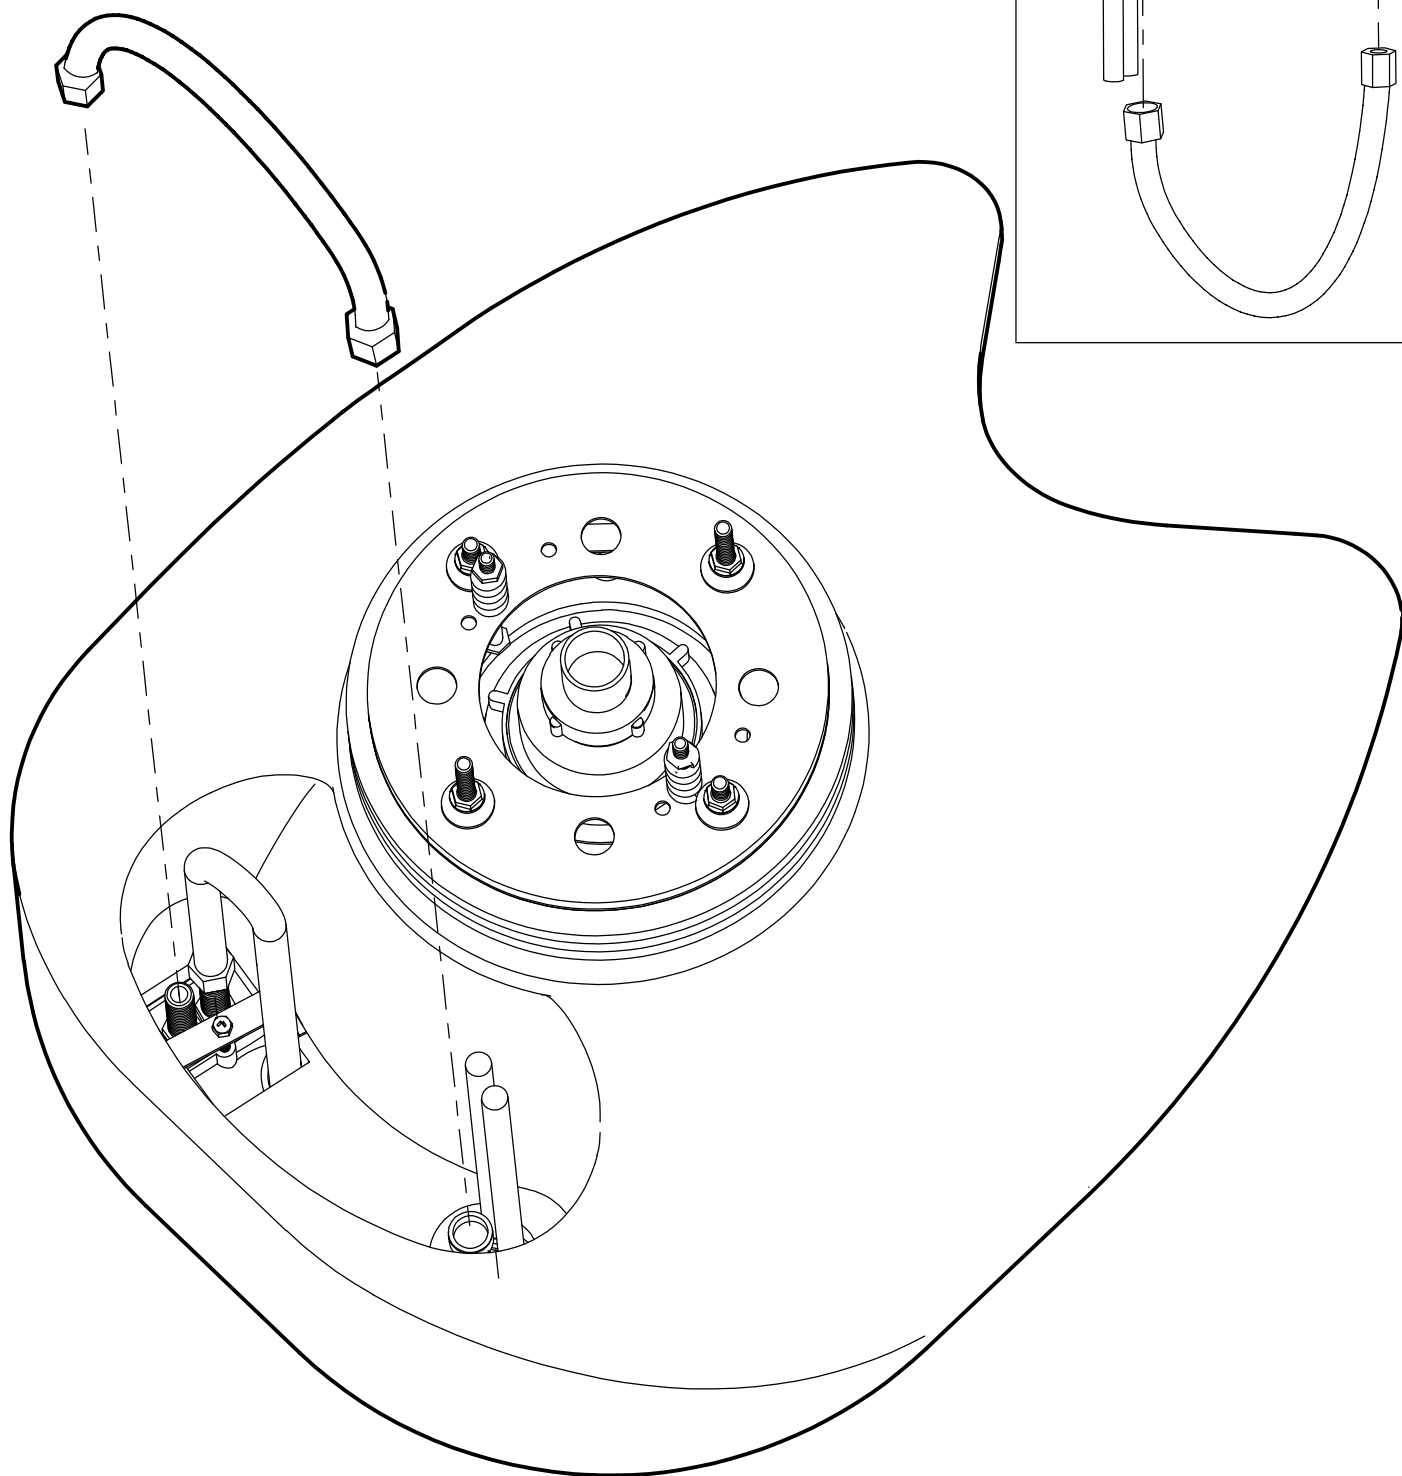


6

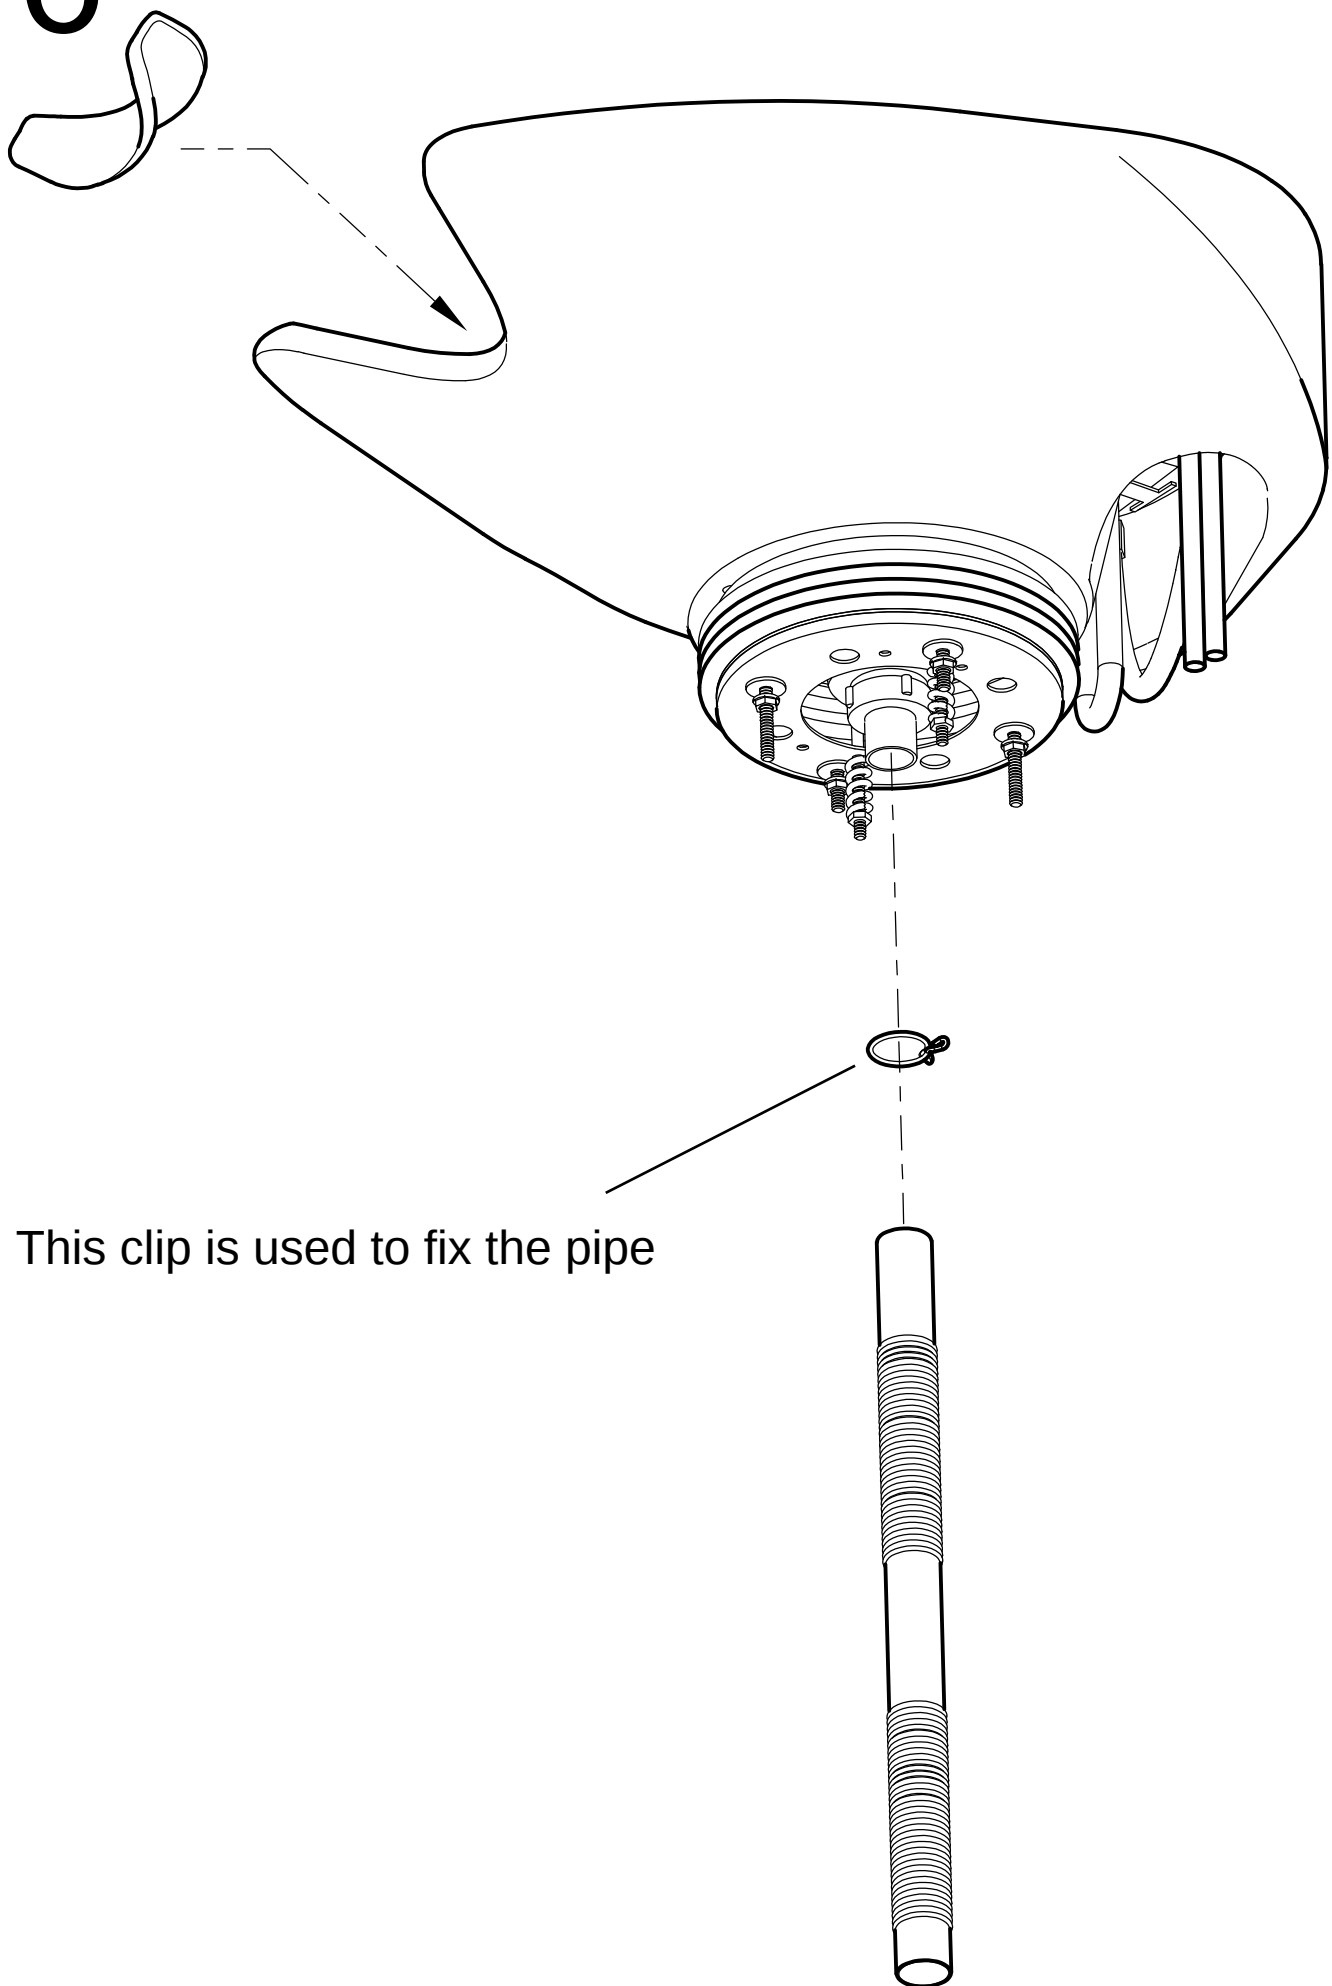



This clip is used to fix the pipe

7

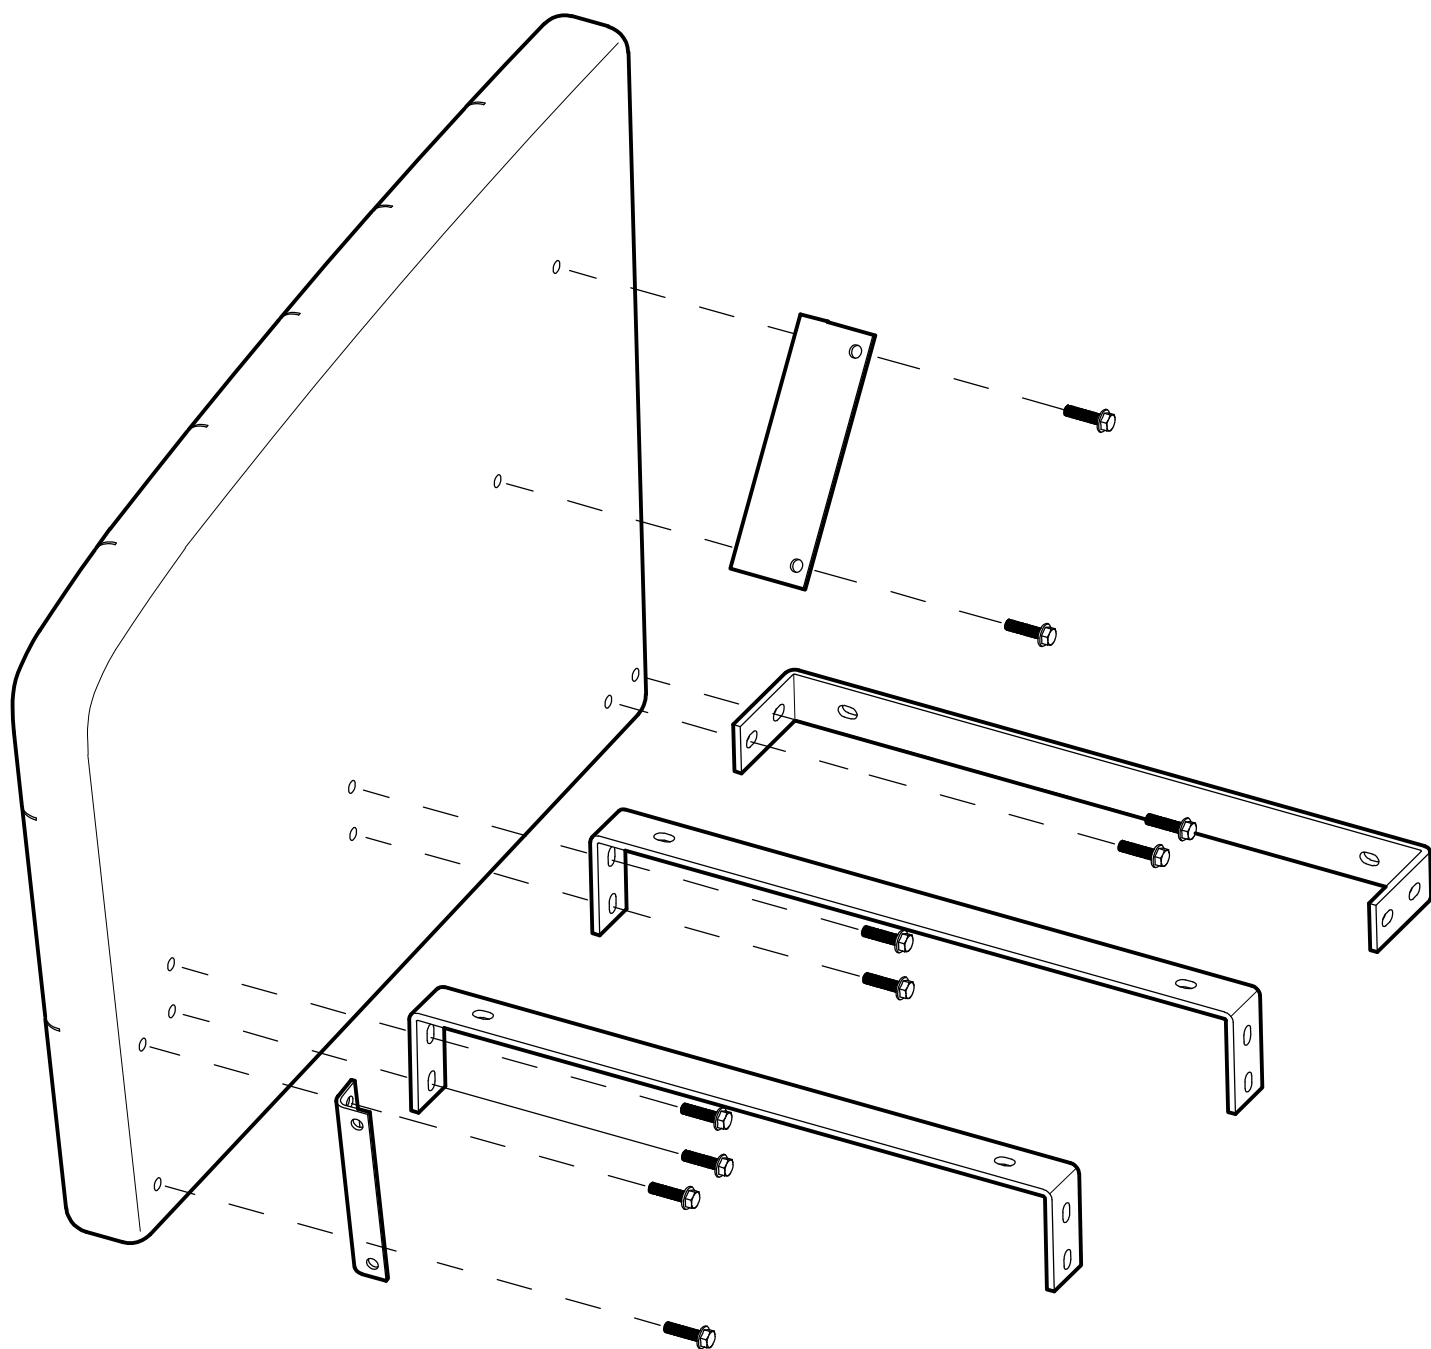



Same installation method on both sides

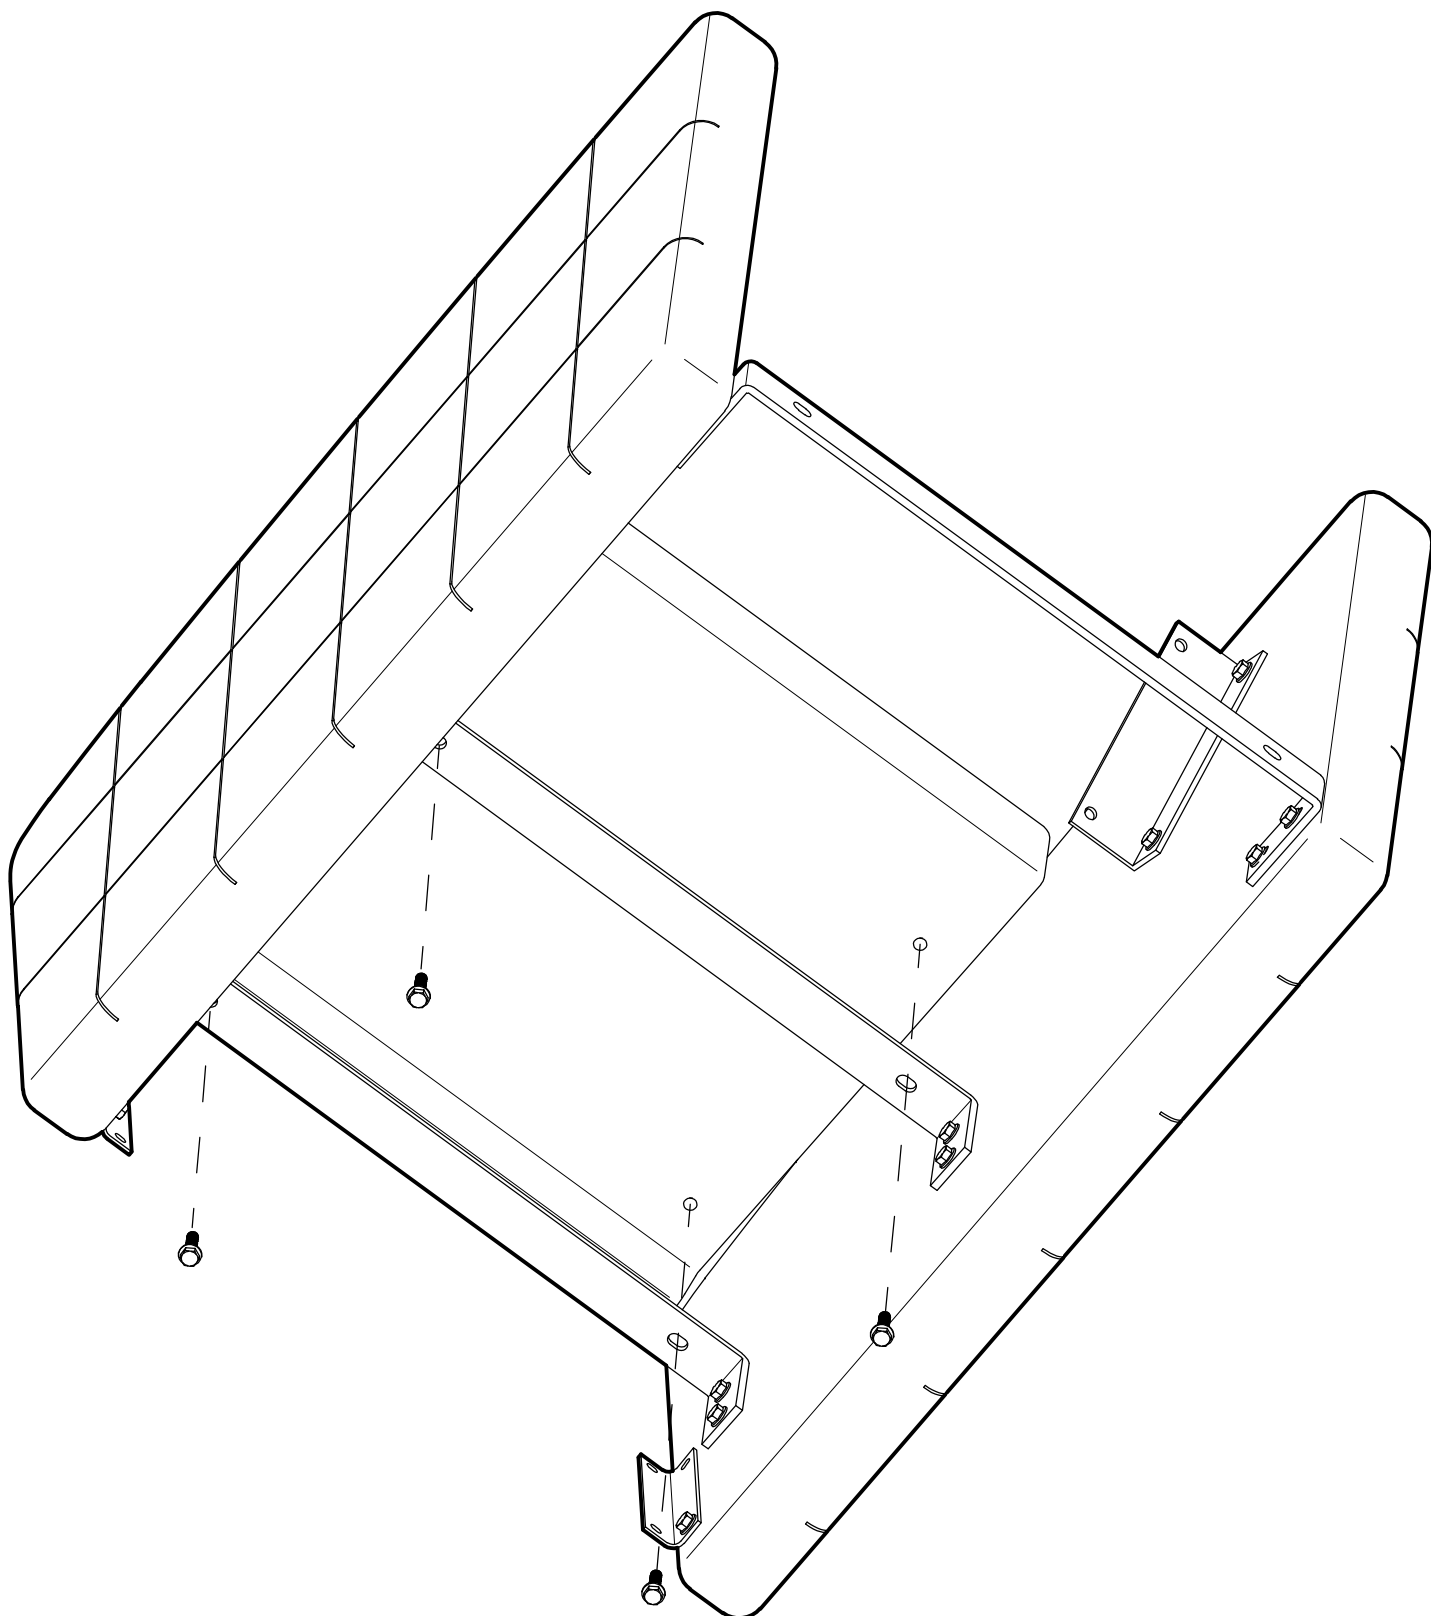


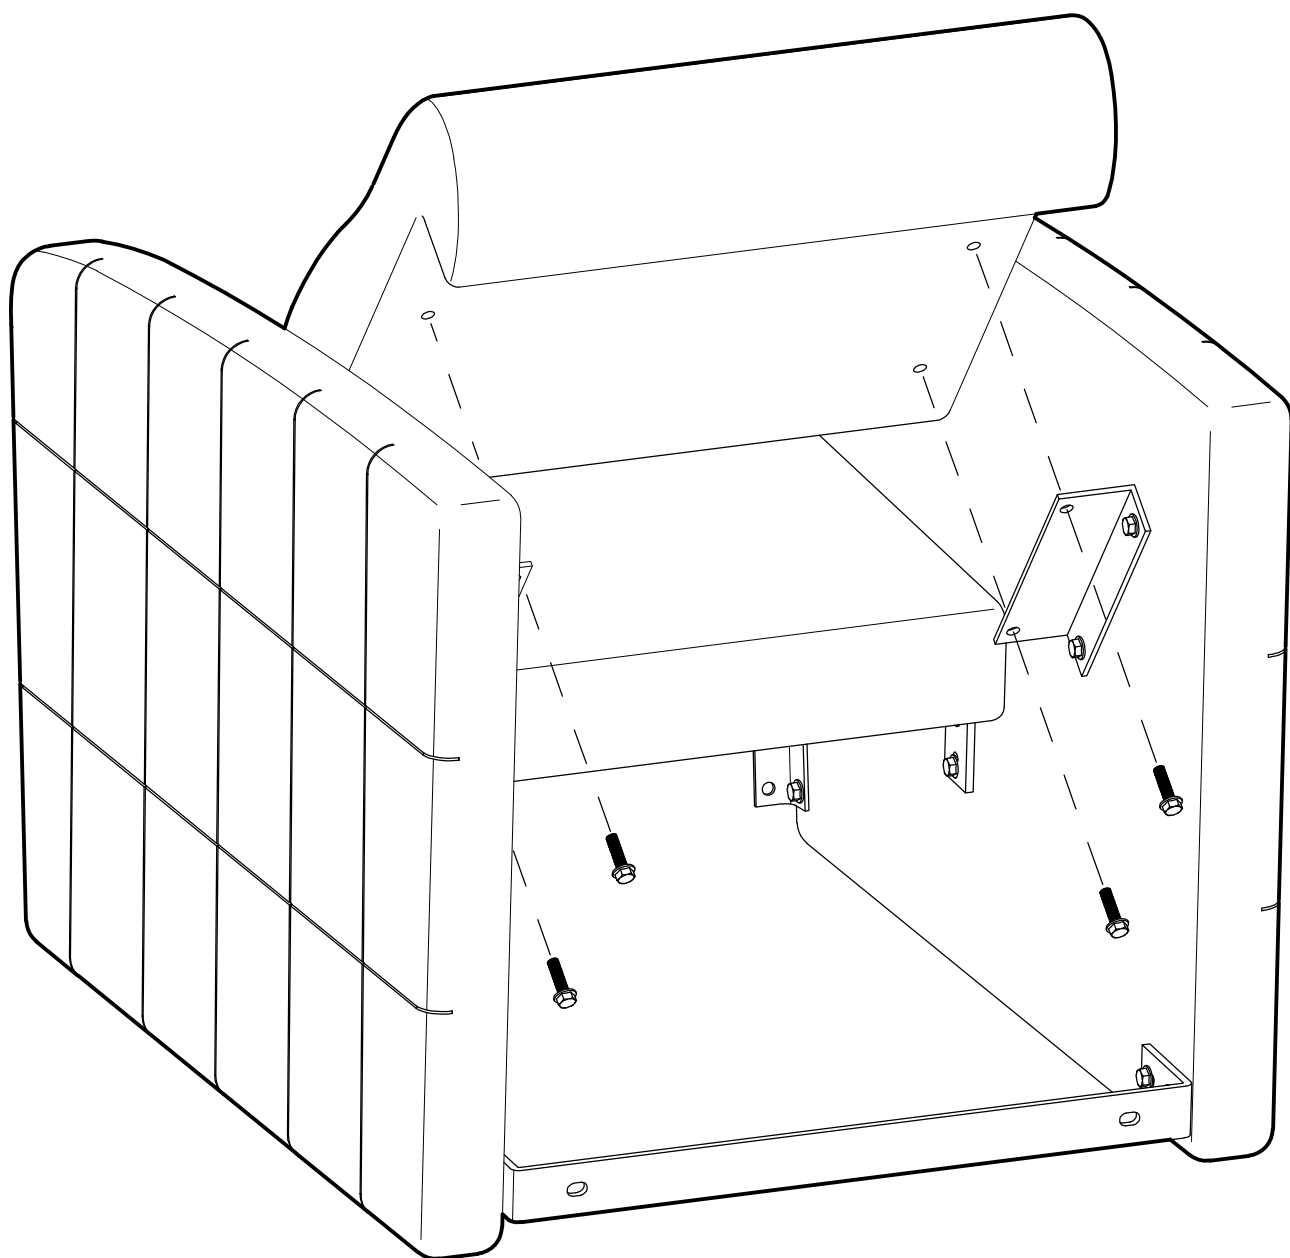


10

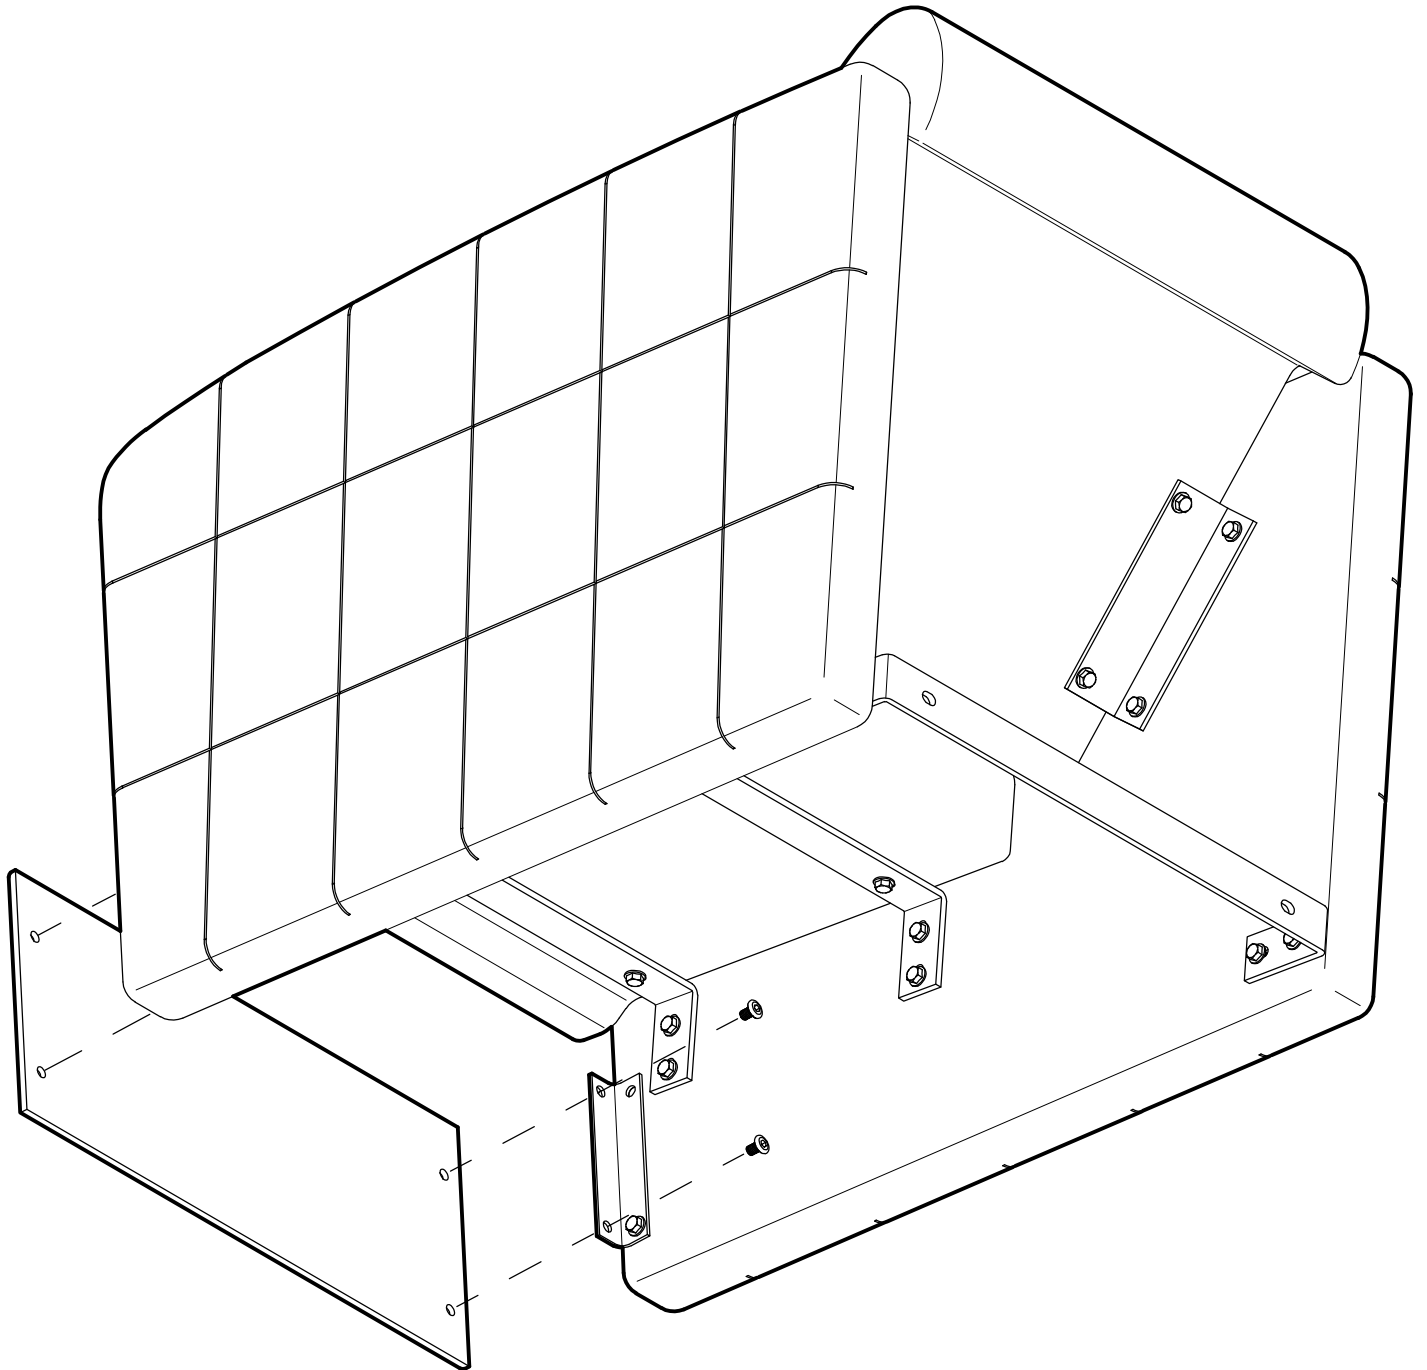

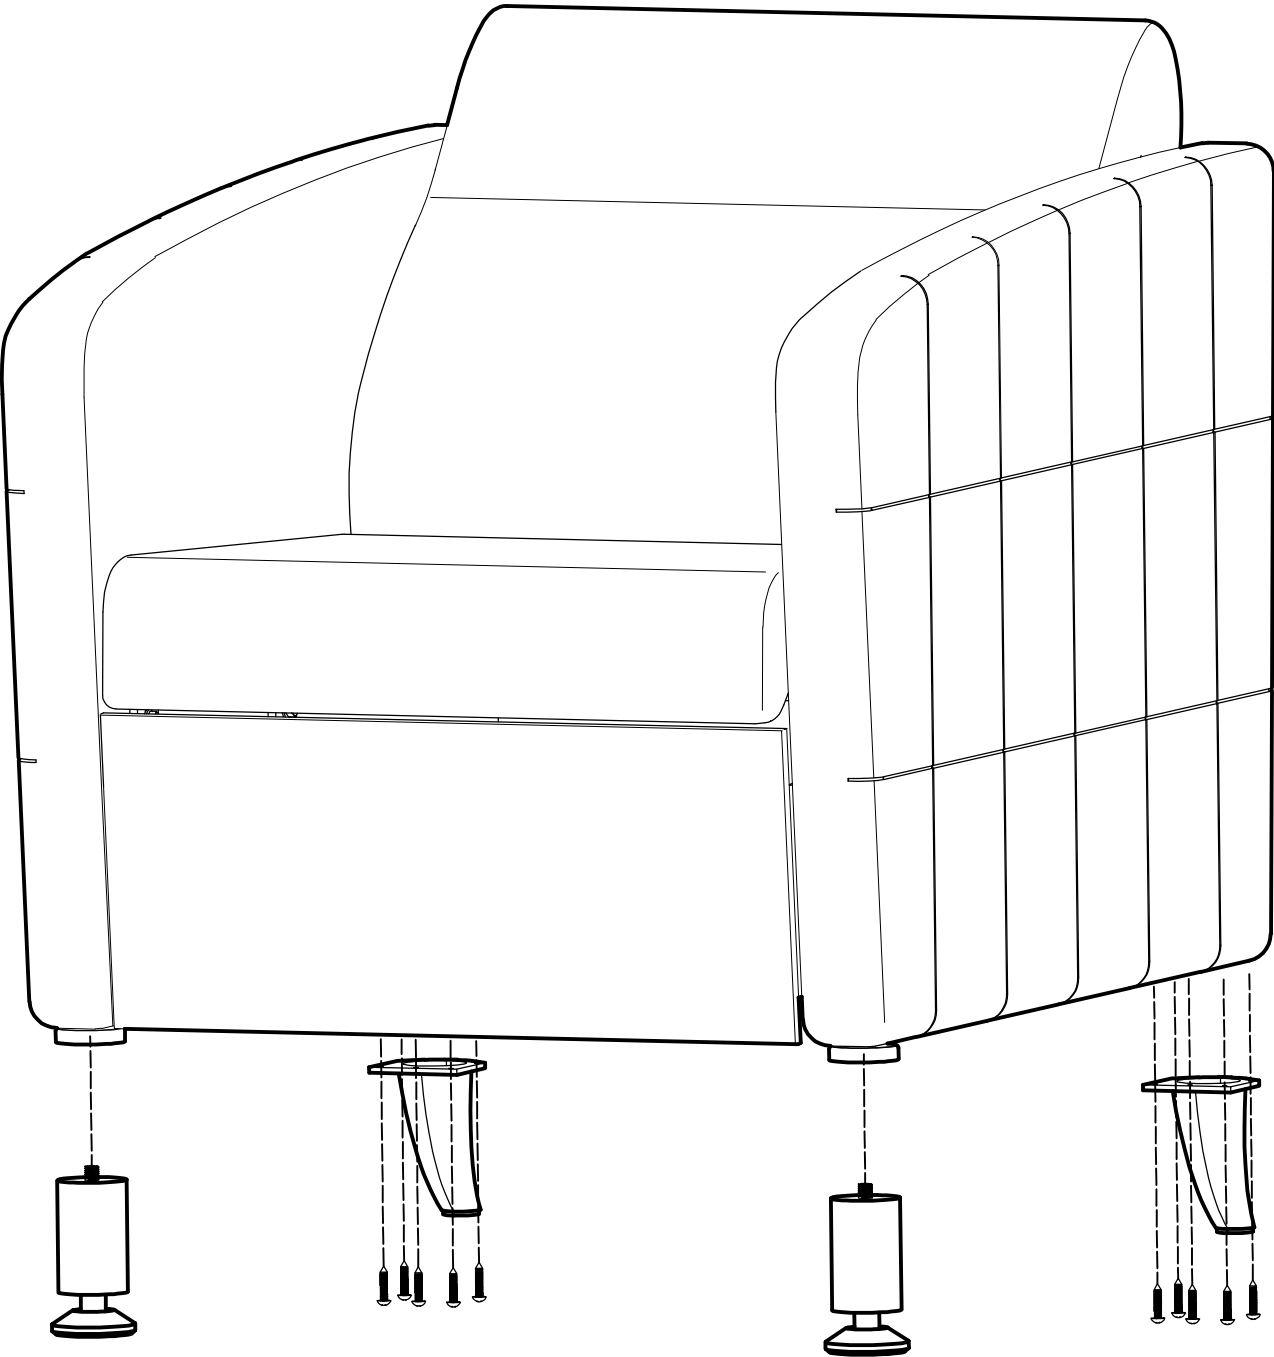

12

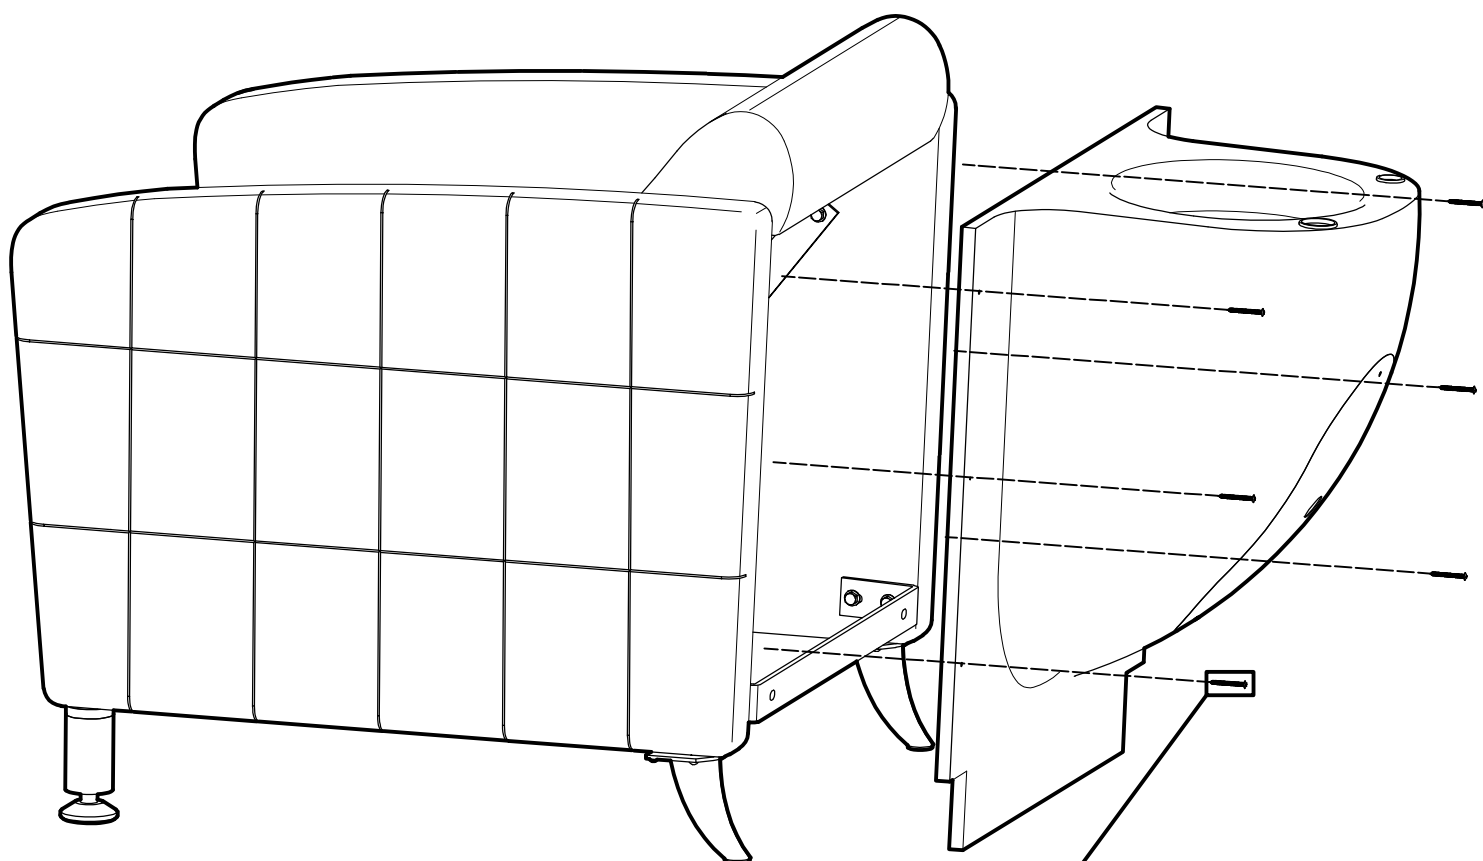

X6

$\phi 5 \times 60$

Self tapping screw

13

