



**STEP 3:**

Place the upper panels D,E,F onto the Hex Bolts.  
Lock all Hex Bolts G by using Bolt Caps H.  
Bottom Panel F has an inner groove for floor  
Guide installation.

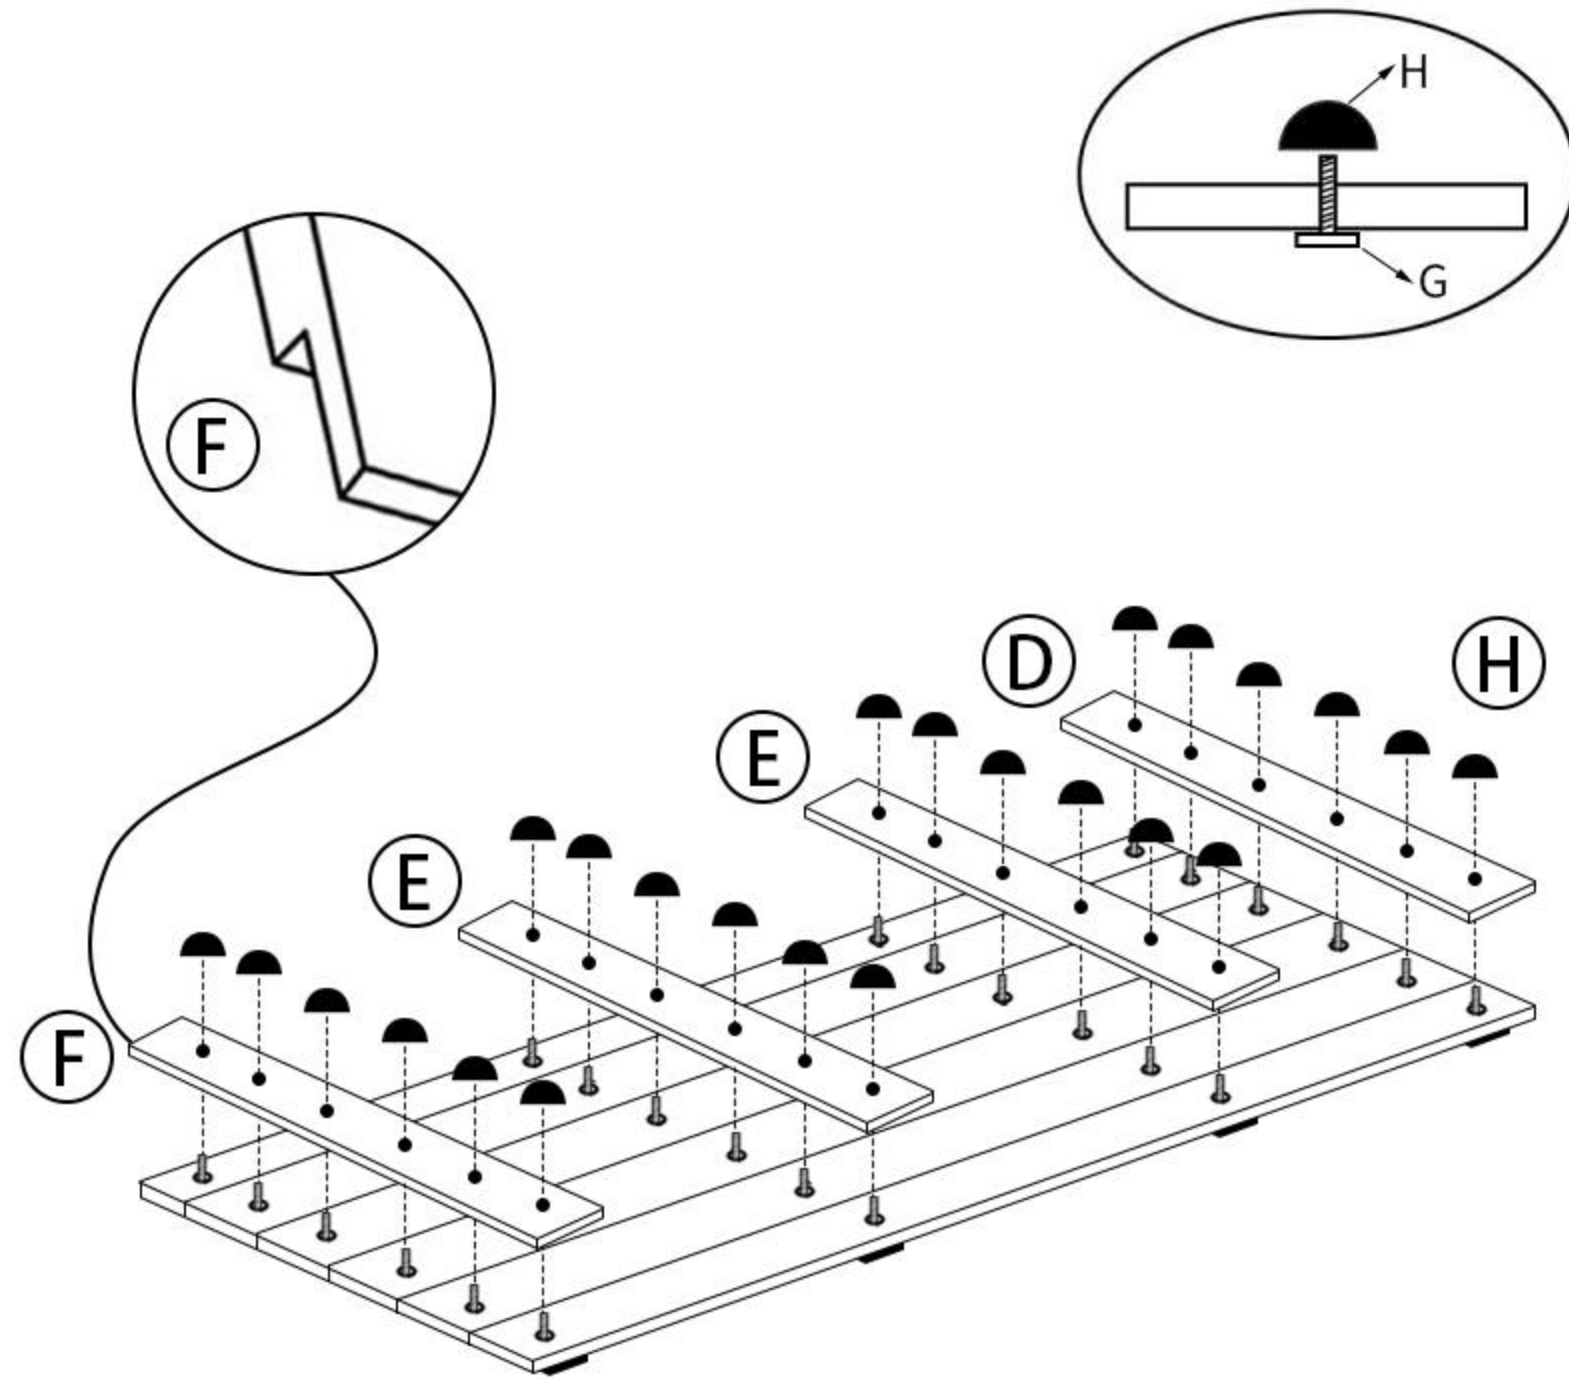

Remarks: The quantity of holes and bolts will vary depend on the size of the product.

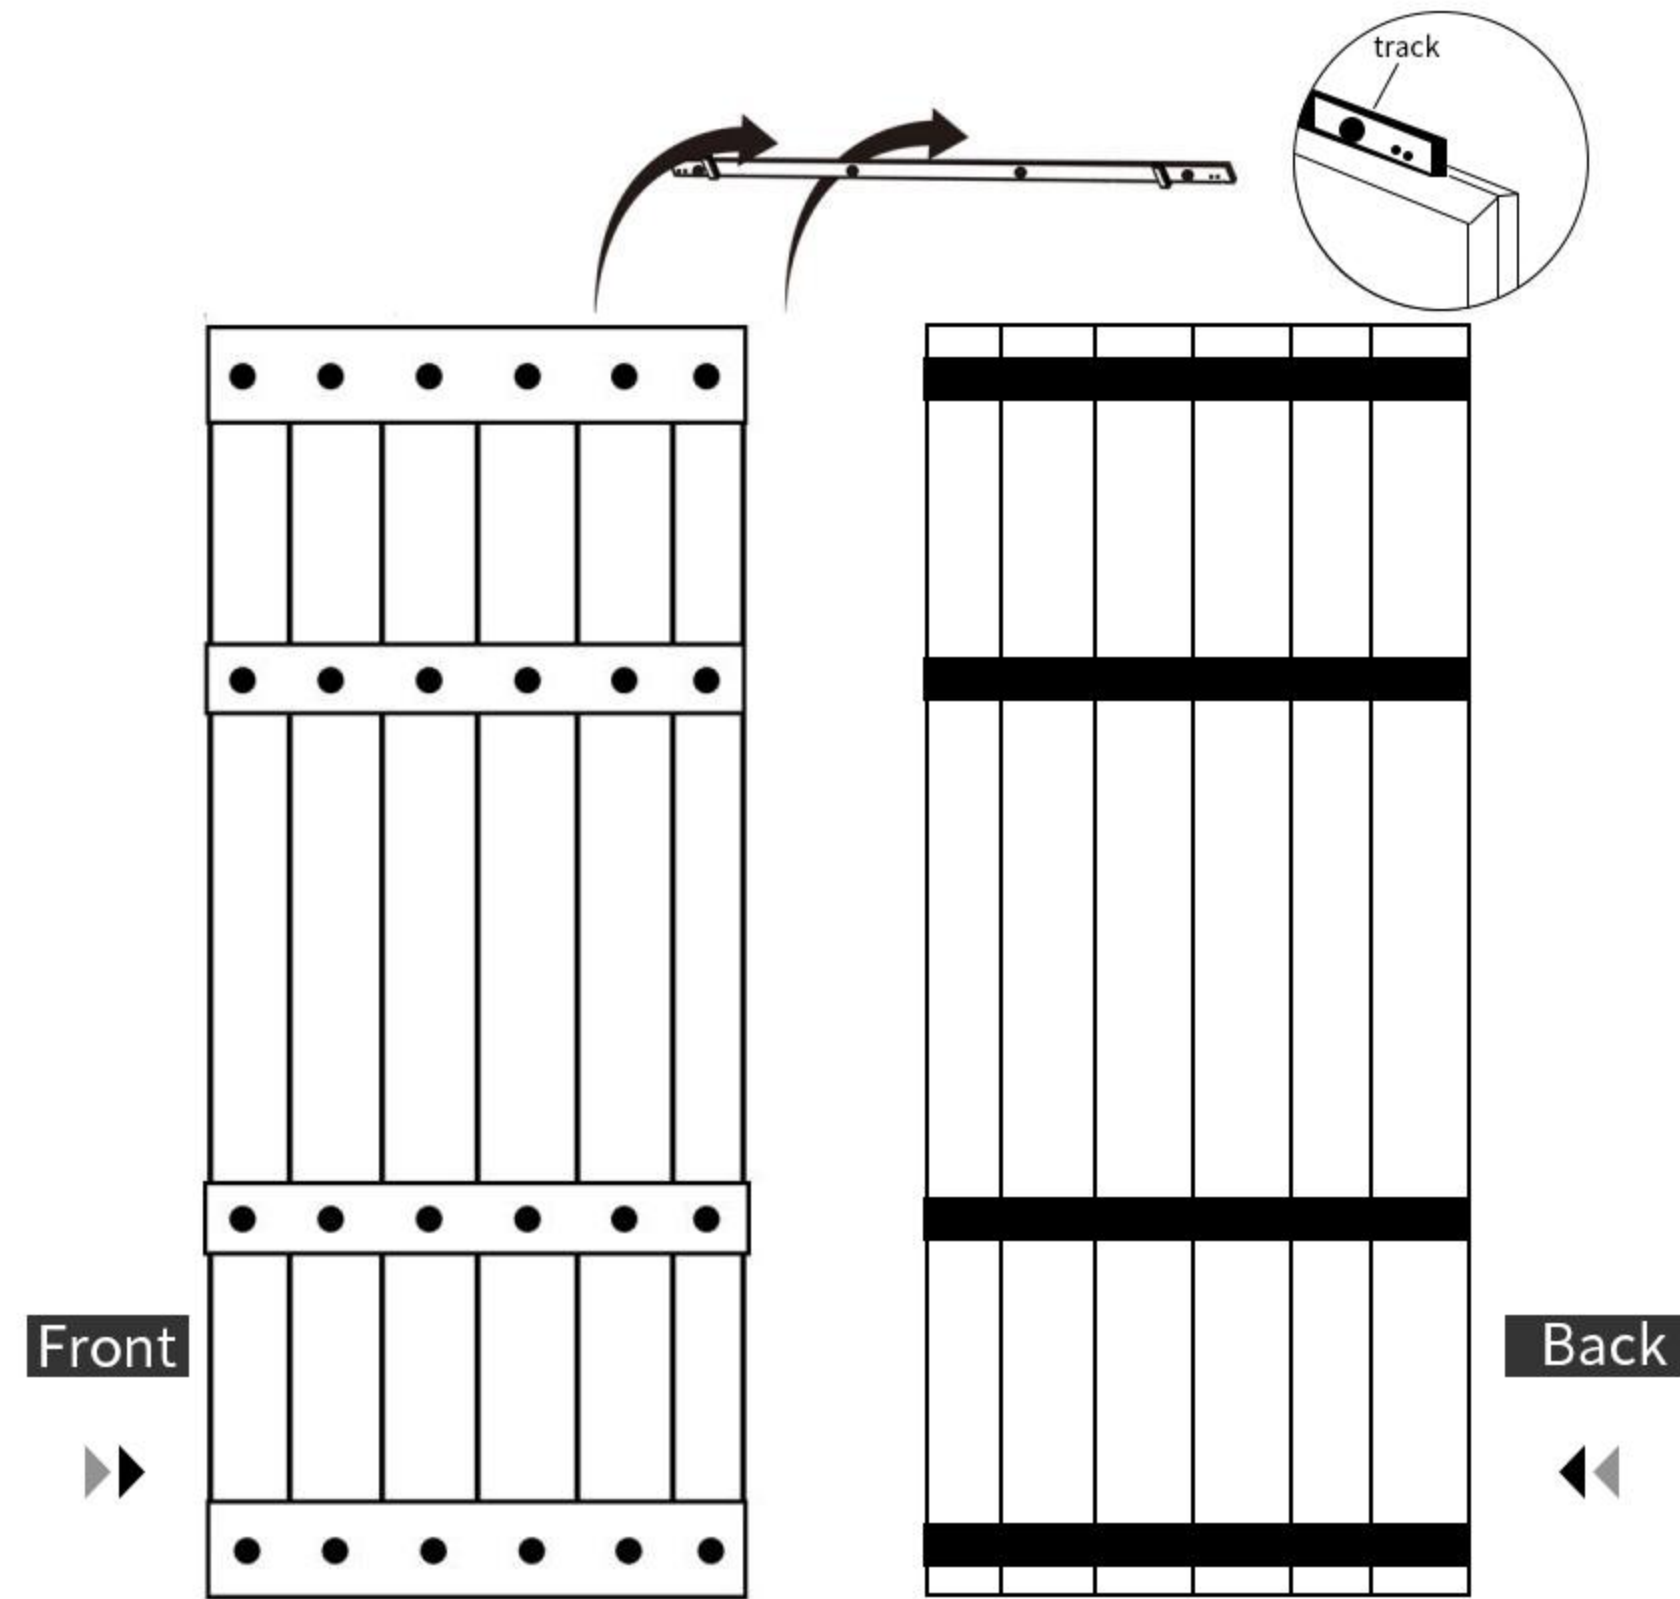

For installation of the sliding hardware kit, please refer to the sliding hardware kit installation instruction included in the package.

**—Return & Refund Policy**

If, for any reason, you are not satisfied with a purchase, we invite you to review our policy on returns and refunds. The following terms are applicable for any product(s) that you purchased with us. You are entitled to return your order within 30 days from the date on which you received the product or on which a third party you have appointed, who is not the carrier, takes possession of the product delivered. The delivery date will be subjected to the information provided by the shipping carrier. In order for the product(s) to be eligible for a return, please ensure the products are in original packaging and were not used or damaged. If you ordered the product through a marketplace, their return and refund policy takes precedence. Coast Sequoia Inc reserves the right to refuse returns of any merchandise that does not meet the return conditions in our sole discretion.



**COAST SEQUOIA INC**

**Castle - Series**

**Sliding Barn Door  
Installation Instruction**

Website: [www.coastsequoia.com](http://www.coastsequoia.com)

Email: [info@coastsequoia.com](mailto:info@coastsequoia.com)

## PARTS INCLUDED

Description	Side View	Part	24" Qty	30" Qty	36" Qty	42" Qty
Left Side Panel		(A)	1	1	1	1
Middle Panel		(B)	2	3	4	5
Right Side Panel		(C)	1	1	1	1
Top Panel		(D)	1	1	1	1
Center Panel		(E)	2	2	2	2
Bottom Panel		(F)	1	1	1	1
Hex Bolt with washer		(G)	16	20	24	28
Bolt Cap		(H)	16	20	24	28
Horizontal Brace Bar (Pre-Drilled)		(I)	4	4	4	4


## PRE-INSTALLATION

### Product Cautions:

1. Avoid Direct Sunlight
2. Avoid Moisture
3. Avoid Rain



### Tools Required

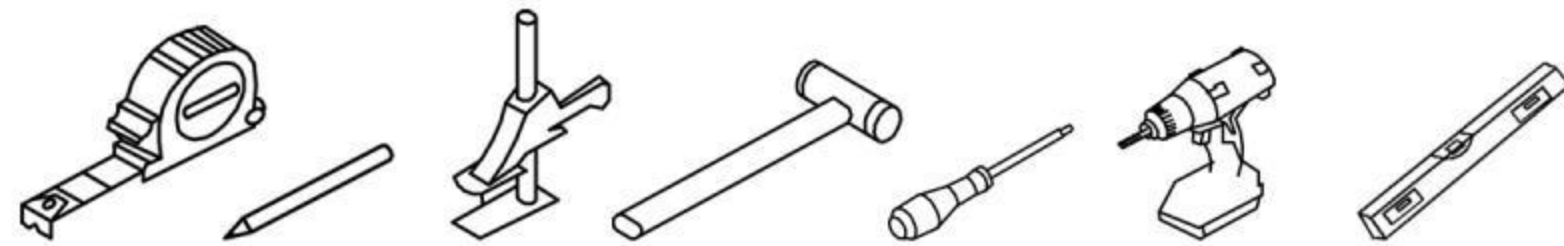


Assembly with a partner is recommended.  
Wear working gloves.

1

## INSTALLATION

### STEP 1:


Combine lower Panel A, B, and C.  
Make sure all panels with 45 degree incline side corners are facing upward.

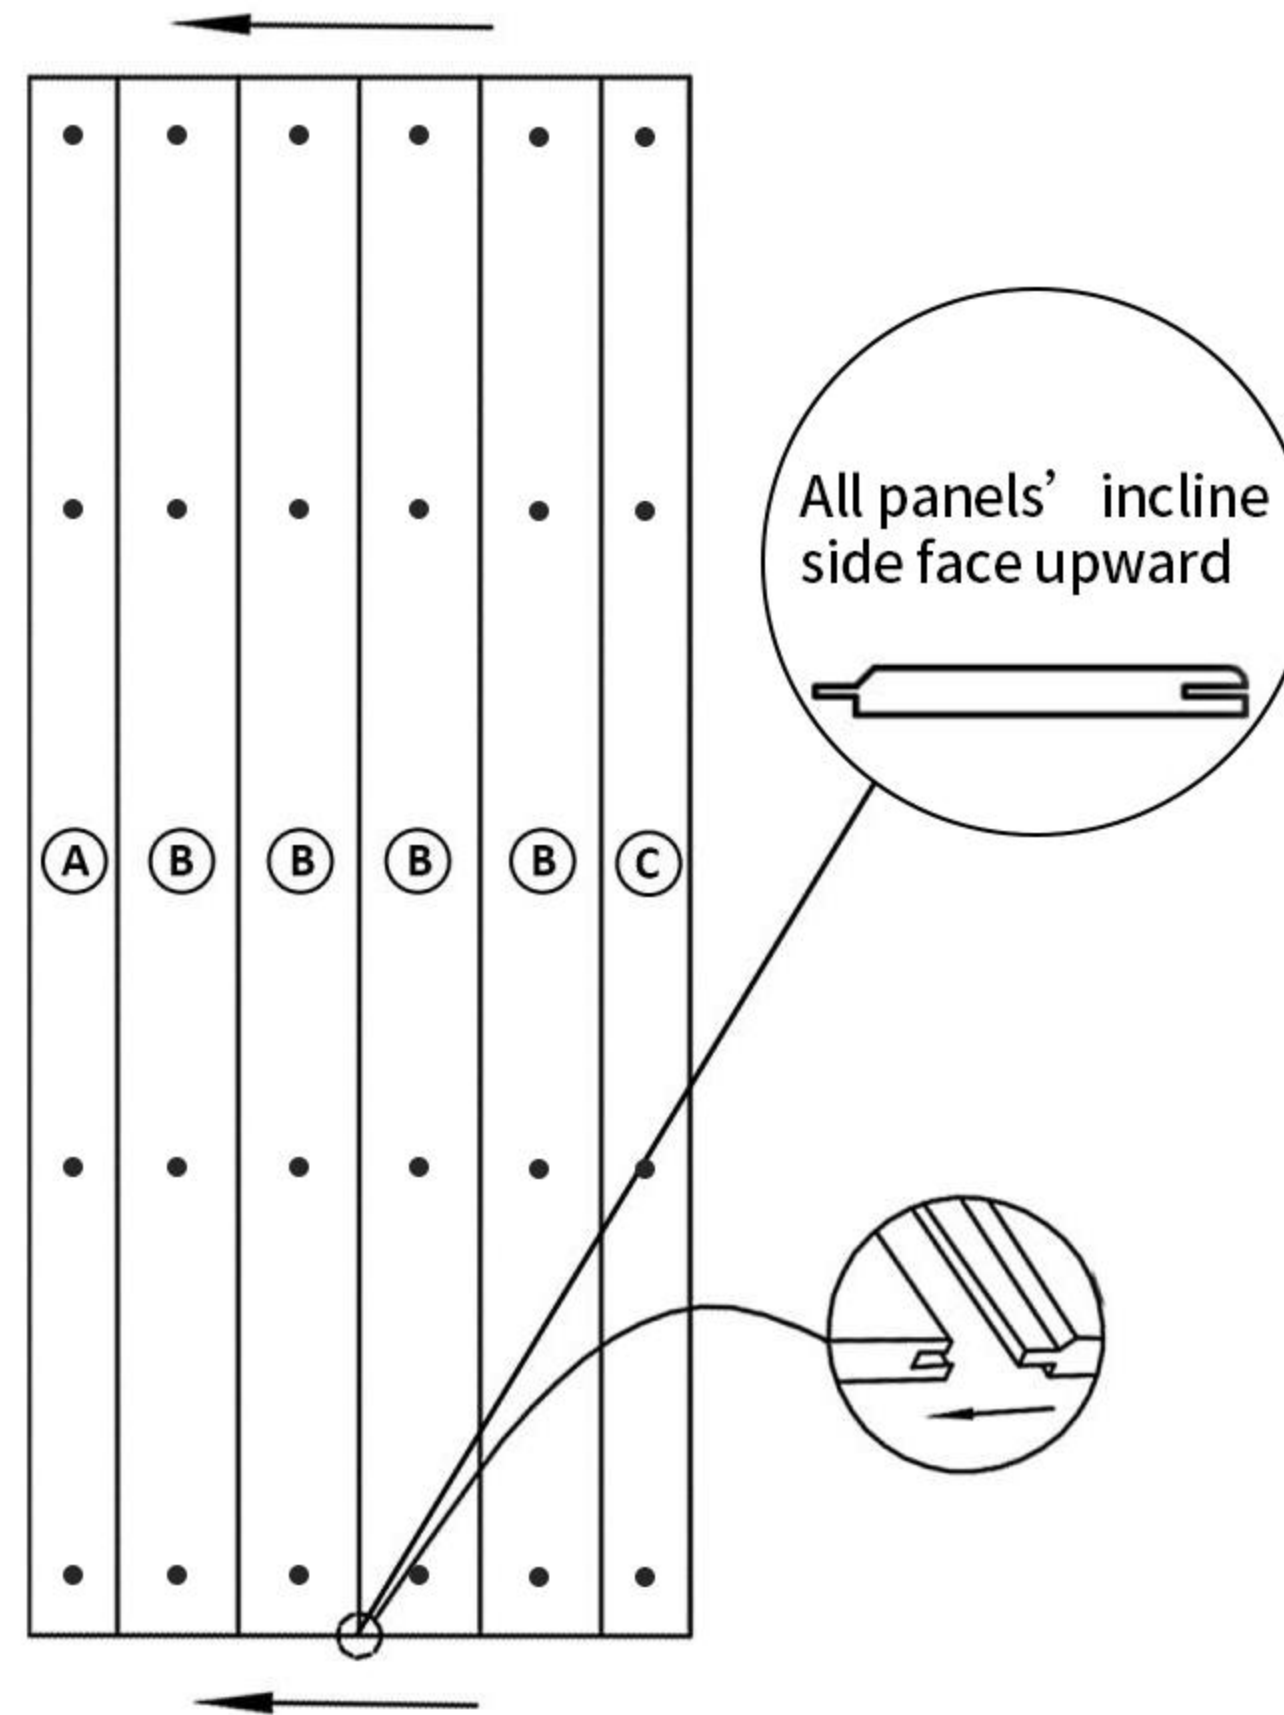

2

### STEP 2:

Align lower panels A,B,C  
and Horizontal Brace Bar I by the pre-drilled holes.  
Thread the Hex Bolts with washers through the Horizontal  
Brace Bar and lower panels.

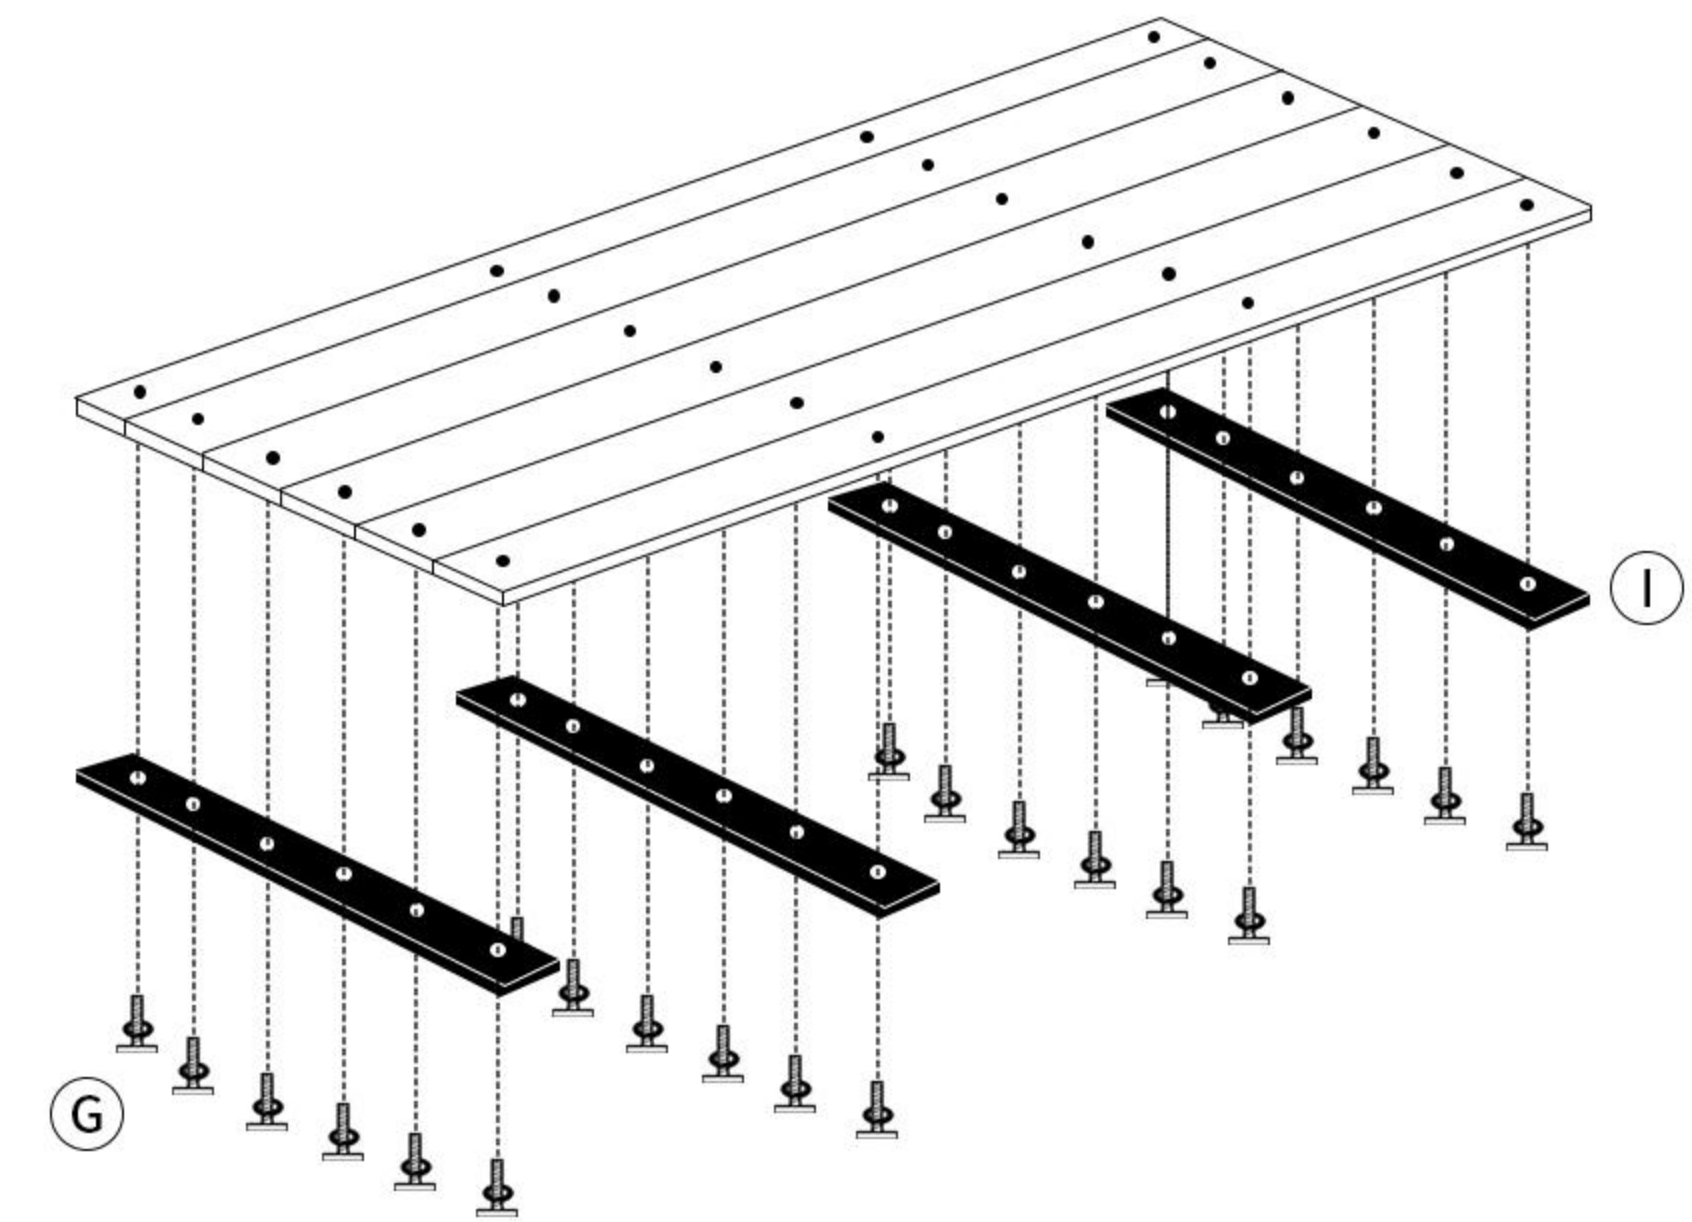

3