

100
SQUARE FOOT
1.4MM THICKNESS

QUIETWALK^{lv}

MULTIPURPOSE UNDERLAYMENT

Less Noise
More Comfort
Better Floor



For use under vinyl plank, laminate,
solid and engineered hardwood flooring.
Enhanced performance for attached pad flooring.

CAN BE USED OVER CONCRETE
& WOOD SUBFLOORS



**Recycled
Materials**
NO VOCs

Made in the U.S.A.


SOUND CONTROL



MOISTURE PROTECTION




DURABILITY

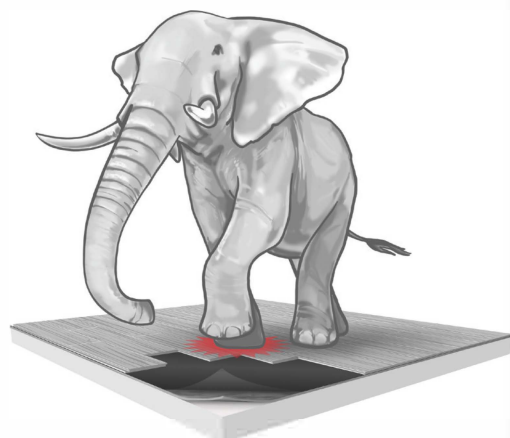

SOUND REDUCTION
Recycled fibers absorb sound and keep it
from traveling to other rooms.

FEATURING EXCLUSIVE
DRI-WICKTM
TECHNOLOGY

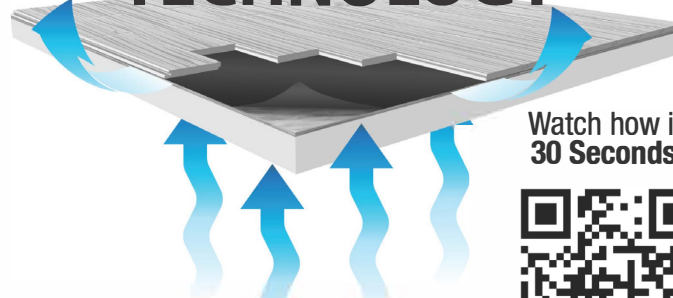


Watch how in
30 Seconds!



ANTIMICROBIAL PROTECTION
Wicks moisture and keeps floor dry

quietwalk.com/driwick

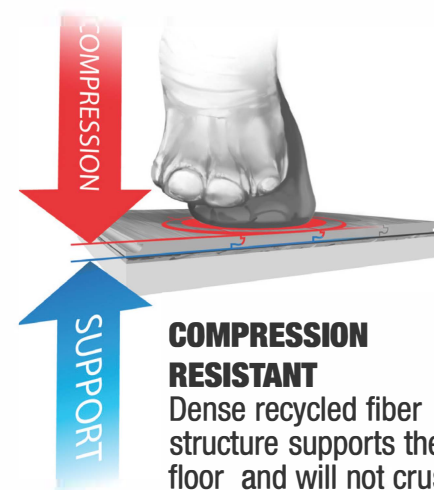

**COMPRESSION
RESISTANT**
Dense recycled fiber
structure supports the
floor and will not crush
over-time.

PRODUCT DETAILS

- **DIMENSIONS**
1.4 mm thick x 3 ft wide x 33.3 ft long
- **SOUND INSULATION**
IIC 70 STC 62 Delta IIC 28
- **MOISTURE VAPOR EMISSIONS**
.12 LBS / 1000 SQ FT / 24 HOURS
- **THERMAL INSULATION**
R-Value 0.528
- **COMPRESSION STRENGTH**
64.58 PSI

Installation Friendly - Built in Seam Seal!



MPglobalTM
2500 Old Hadar Road | Norfolk, NE USA

SAFETY & ENVIRONMENT

- Odorless, No VOCs
- Antimicrobial Protection
- Approved for use with radiant heat systems
- Made from 94% recycled materials
- LEED compliant



100 sq. ft Roll (3' x 33.3')
QW100LV

INSTALLATION INSTRUCTIONS

All wood and concrete subfloors must be flat within 1/8” over a 6’ span, or 3/16” over a 10’ span. All areas must be checked prior to installation.



- ▶ View Installation Videos and Tips at quietwalk.com/lv-install
- 🌐 View Limited Lifetime Warranty at quietwalk.com/lv-warranty

GENERAL INFORMATION

Product may be installed over:

- QuietWalk LV be used over any subfloor approved by the finished floor covering manufacturer
- Suitable with Radiant Heat Systems

Recommended Uses:

- Residential applications on all grade levels
- Floating Vinyl, Laminate and Engineered Wood Floors
- Commercial double glue applications (4mm or thicker flooring)
- Interior use in dry, heated areas

Subfloor and Preparation:

- All subfloors must be flat, clean, smooth and dry
- Sand any rough surfaces and/or uneven joists
- Fill any cracks on concrete or panel joints wider than 1/8” using a recommended patch/leveling product

INSTALLATION METHODS

Floating Floor Installation:

- Be sure the subfloor is clean, smooth and free of dust and debris
- Unroll the QuietWalk Luxury Vinyl Underlayment and flip it over so the film side is up (felt side down)
- Make sure that underlayment seams run perpendicular (at right angle) to the long dimension of the planks.
- Underlayment must be positioned with a minimum 4” separation between seams of underlayment and seams of finished flooring products
- Trim the perimeter edges of the QuietWalk Luxury Vinyl Underlayment ¼” from the wall
- Butt seams together and seal using the factory attached lip and tape system.
- For seams that do not have the lip and tape feature, use a good quality single faced tape to seal the seams
- Install the floor covering product according to the manufacturer’s instructions

Double-Glued Installation:

- Double Glue Down installations are approved with flooring that is a minimum thickness of 4mm.
- Be sure the subfloor is clean and free of dust and debris
- Unroll the first drop of QuietWalk Luxury Vinyl Underlayment and flip it over so the film side is up (felt side down)
- Make sure that underlayment seams run perpendicular (at right angle) to the long dimension of the planks
- Remove the lip portion of the lip and tape system with a utility knife and discard
- Remove the tape strip cover portion of the lip and tape system and discard
- Trim to fit the QuietWalk Luxury Vinyl Underlayment into the target areas.
- Move the trimmed-to-fit underlayment to the side to apply the adhesive
- Apply a recommended pressure sensitive adhesive using the flooring manufacturer recommended trowel

- Once the adhesive has flashed (dried to a tacky touch) place the trimmed-to-fit underlayment into the adhesive
- Butt seams together and apply 2” wide clear packaging tape centered over the seam
- Roll the adhered QuietWalk Luxury Vinyl Underlayment with a 100 lb flooring roller
- Mark starting lines on Underlayment for placement of finished flooring product
- Apply a recommended pressure sensitive adhesive using the flooring manufacturer recommended trowel
- Once the adhesive has flashed (dried to a tacky touch) you can begin flooring installation according to the manufacturers recommendations
- Make sure the staggered end joints fall at least 2” away from the underlayment seams
- Maintain a minimum expansion gap of ¼” around the perimeter of the room
- Follow flooring manufacturer recommendations for installing transitions in large span applications and doorways
- Roll the finished floor with a 100 lb flooring roller
- Be sure not to slide flooring into position which could potentially displace adhesive

Mechanically Fastened Hardwood Floors

- Unroll the underlayment and ensure vapor side is up and fibers are to the subfloor.
- Install underlayment in opposite direction to the flooring material. You can tape the seams but it is not necessary.
- Install the hardwood per manufactures written instructions, using their recommended fastening materials.

Trim and Molding:

- All finish trim and transition moldings must be installed without binding or restricting the free movement of the above finished flooring products

LAS INSTRUCCIONES DE INSTALACIÓN

Toda la madera y los subsuelos concretos debe ser plana en más de 1/8” a 6” span o 3/16” durante un lapso de 10’. Todas las áreas deben ser verificados antes de la instalación.



- ▶ Vea videos y sugerencias de instalación en quietwalk.com/lv-install
- 🌐 Ver Garantía limitada de por vida en quietwalk.com/lv-warranty

INFORMACIÓN GENERAL

El producto puede instalarse sobre:

- QuietWalk LV se puede utilizar sobre cualquier contrapiso aprobado por el fabricante del revestimiento de piso terminado
- Adecuado con sistemas de calor radiante

Usos Recomendados:

- Aplicaciones residenciales en todos los niveles de grado
- Pisos flotantes de vinilo, laminados y madera de ingeniería
- Aplicaciones comerciales de doble cola (pisos de 4 mm o más gruesos)
- Uso interior en áreas secas y calientes

Subsuelo y preparación:

- Todos los contrapisos deben ser planos, limpios, lisos y secos
- Lije cualquier superficie rugosa y / o viguetas irregulares
- Rellene cualquier grieta en las juntas de concreto o paneles de más de 1/8” usando un producto de parche / nivelación recomendado

MÉTODOS DE INSTALACIÓN

Instalación de piso flotante:

- Asegúrese de que el subsuelo esté limpio, liso y libre de polvo y escombros
- Desenrolle la base de vinilo de lujo QuietWalk Luxury Vinyl y déle la vuelta para que la cara de la película quede hacia arriba (boca abajo)
- Asegúrese de que las costuras del contrapiso se extiendan perpendicularmente (en ángulo recto) a la dimensión larga de la tabla
- El contrapiso debe colocarse con una separación mínima de 4” entre las uniones de contrapiso y las costuras de los productos de piso terminado
- Recorte los bordes perimetrales del contrapiso QuietWalk Luxury Vinyl ¼” de la pared
- Junte las juntas y selle con el sistema de cintas y labios adjunto.
- Para las costuras que no tienen la característica de punta y cinta, use una cinta de una cara de buena calidad para sellar las costuras
- Instale el producto que cubre el piso de acuerdo con las instrucciones del fabricante

Instalación con doble encolado:

- Las instalaciones de Double Glue Down están aprobadas con pisos de un espesor mínimo de 4 mm.
- Asegúrese de que el subsuelo esté limpio y libre de polvo y desechos
- Desenrolle la primera gota del contrapiso QuietWalk Luxury Vinyl y déle la vuelta para que el lado de la película quede hacia arriba (boca abajo)
- Asegúrese de que las costuras del contrapiso se extiendan perpendicularmente (en ángulo recto) a la dimensión larga de la tabla
- Retire la parte del labio del labio y el sistema de cinta con un cuchillo y deseche
- Retire la parte de la cubierta de la tira de cinta del labio y el sistema de cinta y deséchela
- Corte para ajustar el contrapiso QuietWalk Luxury Vinyl en las áreas objetivo.
- Mueva el contrapiso recortado para ajustar hacia un lado para aplicar el adhesivo

- Aplique un adhesivo sensible a la presión recomendado utilizando la paleta recomendada por el fabricante del piso
- Una vez que el adhesivo ha destellado (secado hasta un toque pegajoso) coloque la base recortada para ajustar en el adhesivo
- Junte las juntas y aplique cinta de embalaje transparente de 2” de ancho centrada sobre la costura
- Haga rodar la capa base QuietWalk Luxury Vinyl adherida con un rodillo para piso de 100 lb.
- Marque las líneas de partida en el contrapiso para la colocación del producto de piso terminado
- Aplique un adhesivo sensible a la presión recomendado utilizando la paleta recomendada por el fabricante del piso
- Una vez que el adhesivo ha brotado (secado hasta un toque pegajoso) puede comenzar la instalación del piso de acuerdo con las recomendaciones del fabricante
- Asegúrese de que las uniones finales escalonadas caigan al menos a 2” de las costuras de la base
- Mantenga un espacio de expansión mínimo de ¼” alrededor del perímetro de la habitación
- Siga las recomendaciones del fabricante de pisos para instalar transiciones en aplicaciones de gran envergadura y puertas
- Haga rodar el piso terminado con un rodillo para piso de 100 lb.
- Asegúrese de no deslizar el piso en su posición, lo que podría desplazar el adhesivo

Pisos de madera noble con sujeción mecánica

- Desenrolle el contrapiso y asegúrese de que el lado del vapor esté hacia arriba y las fibras estén al contrapiso.
- Instale el contrapiso en dirección opuesta al material del piso. Puede pegar las costuras con cinta adhesiva, pero no es necesario.
- Instale la madera dura según las instrucciones escritas del fabricante, utilizando los materiales de sujeción recomendados.

Recorte y moldura:

- Todas las molduras de acabado y molduras de transición deben instalarse sin atascarse o restringir el libre movimiento de los productos para pisos terminados anteriormente