


BOOKCASE 120 / 140CM INSTALLATION DRAWING

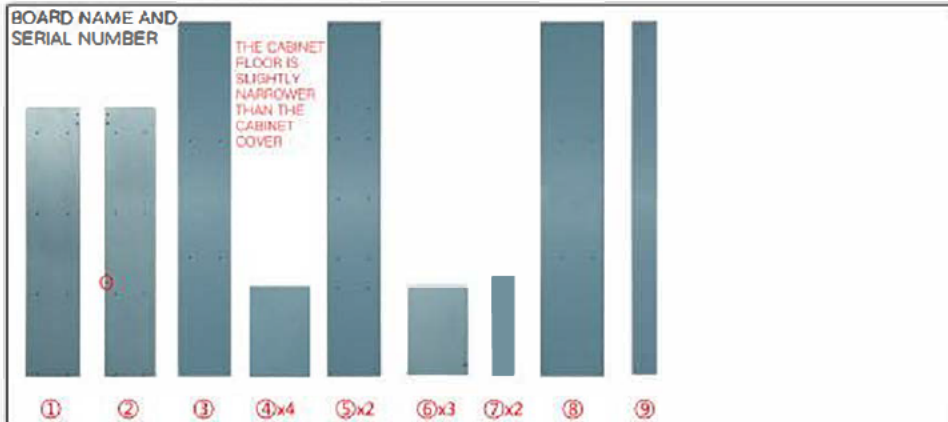






REMINDER: TIGHTEN SEVEN POINTS WHEN INSTALLING THE SCREWS. TIGHTEN AFTER ALL IS COMPLETED!

INSTALLATION STEPS




STEP 1: WHOLE PART INSTALLATION

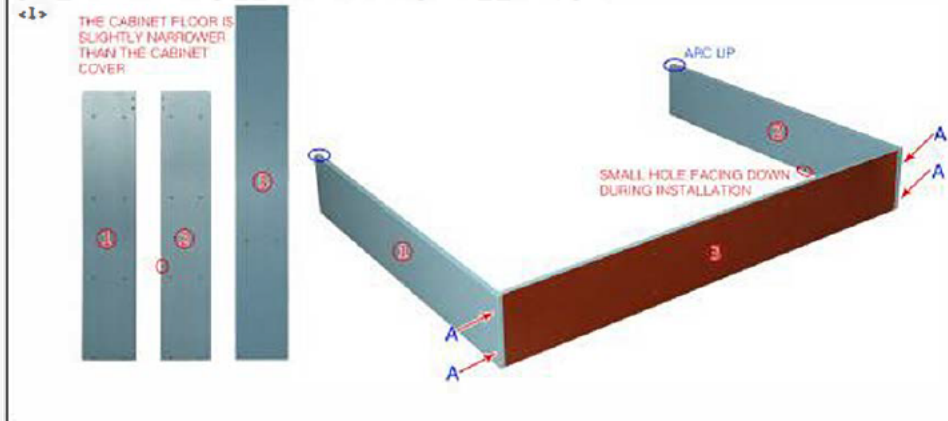

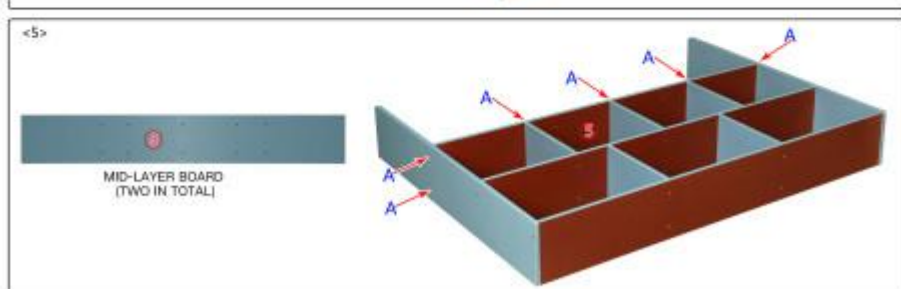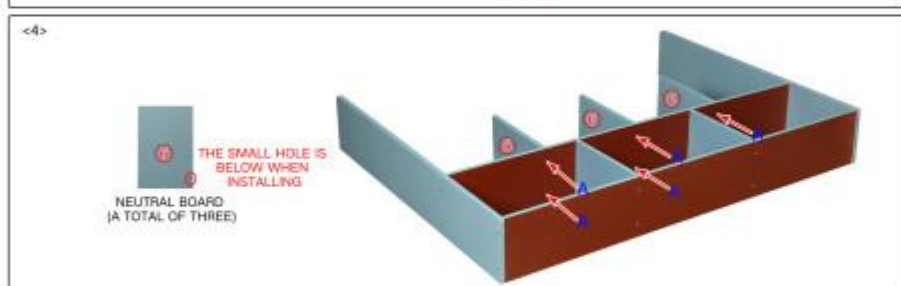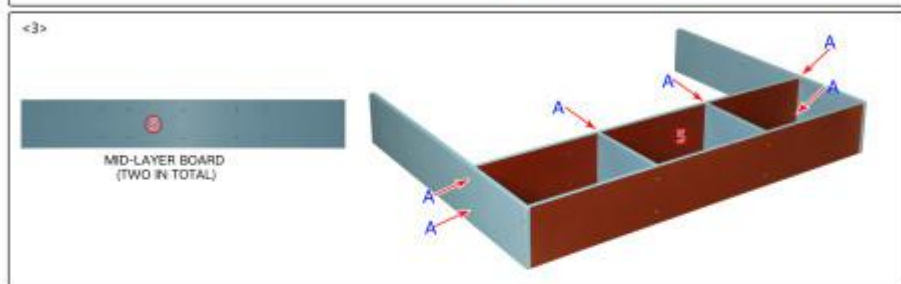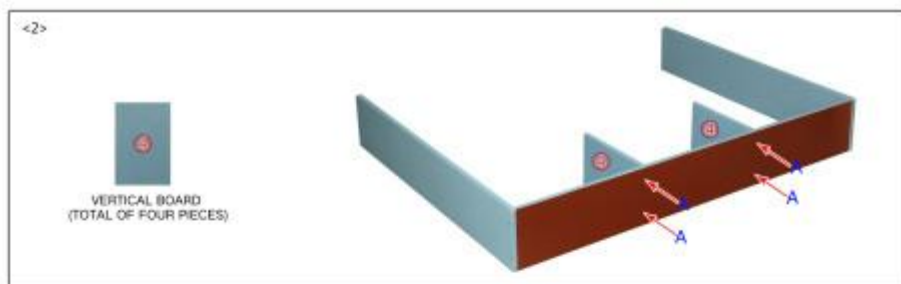


<6> COMPLETE THE INSTALLATION AND STRAIGHTEN THE WHOLE

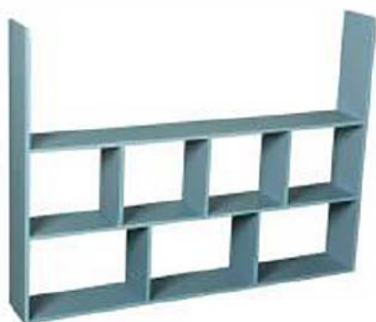


<7>

SMALL PULL BOARD (TWO PIECES)

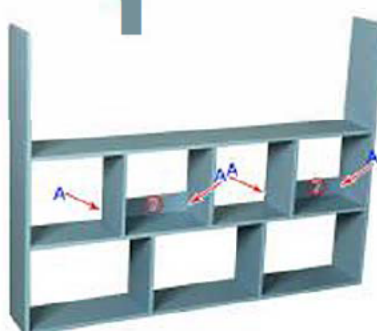

<8>

VERTICAL BOARD
(TOTAL OF FOUR PIECES)

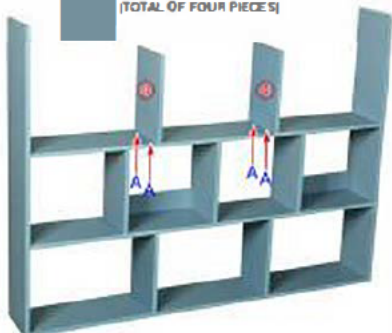

<9>

CABINET DOOR

THE SIDE WITH THE SMALL EYELET DISTANCE IS PAGED FORWARD DURING INSTALLATION



<10>

REAR PULL PLATE



STEP 2: INSTALLATION IS COMPLETE

