
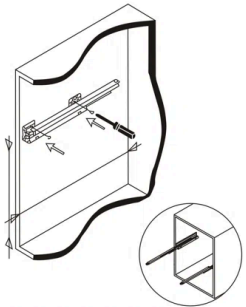
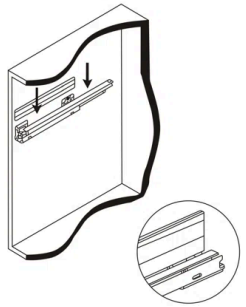
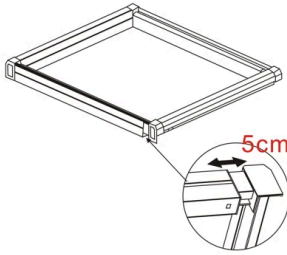
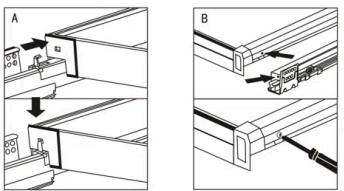
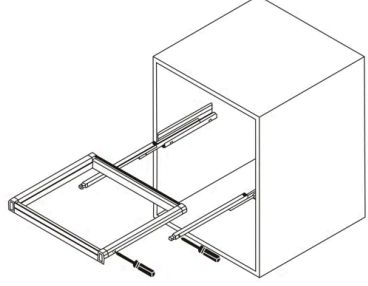
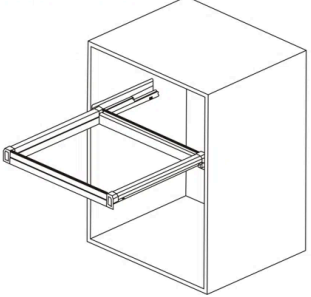
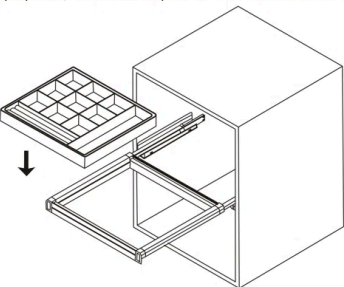


Installation Instructions

<p>1. Determine the installation positions of the left and right sliding tracks (ensure that both tracks are on the same horizontal level). Install the left and right tracks on the cabinet. The depth of the cabinet should be $\geq 46\text{cm}$.</p> 	<p>2. After installing the tracks, insert the track decorative covers and secure them with screws.</p> 	<p>3. Adjust the width of the frame to ensure it can smoothly fit into the left and right guides. (Each side can be adjusted by up to 5cm).</p> 
<p>4. A. Insert the hook at the end of the track into the hole at the back of the frame. B. Ensure that the screw holes on the sides of the track and the frame align. Once aligned, secure them with screws. Slide the track back and forth a few times to check if it moves smoothly and is properly installed.</p>  	<p>5. The frame installation is complete.</p> 	
<p>6. Insert the components from the corresponding kit. (The image provided is for illustration purposes; the actual components will be based on the kit purchased).</p> 		

Frame Door Panel Installation

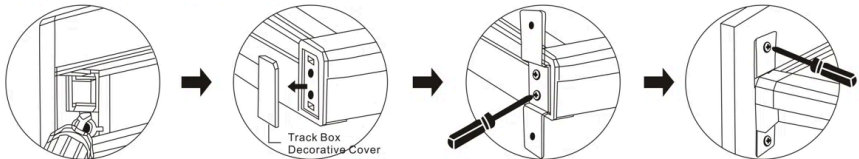

- 1.2. From the back, push the hooks of the track box decorative cover forward to remove it.
3. Use screws to attach the two middle holes of the door panel connection plate to the front end of the frame.
4. Use screws to secure the upper and lower holes of the door panel connection plate to the door panel. The installation is complete.