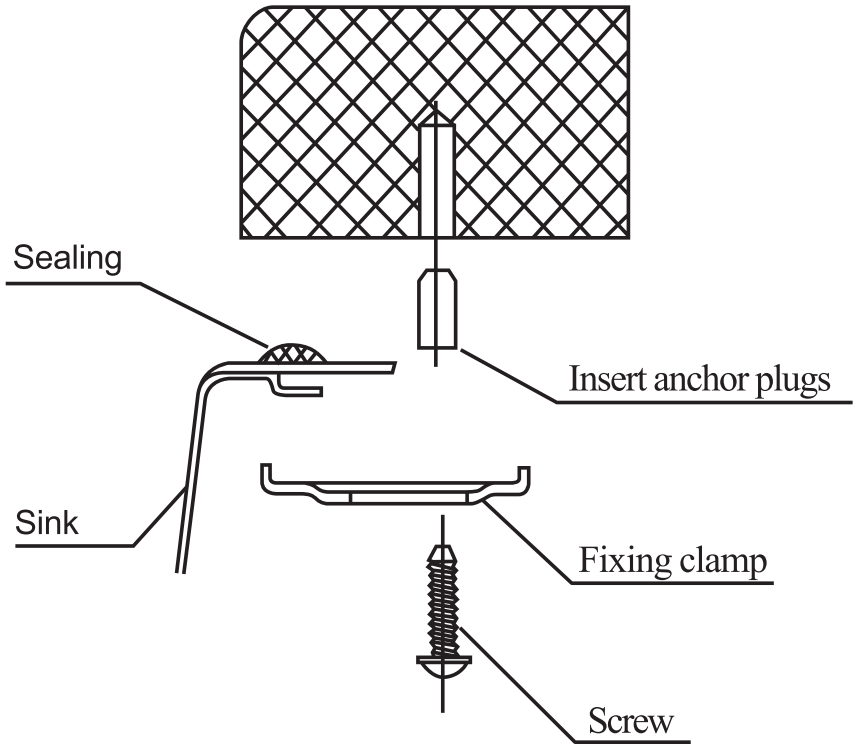


UNDERMOUNT OR TOPMOUNT INSTALLATION INSTRUCTION

This sink is specifically designed to be undermount or topmount in a solid surface countertop.

Caution: Sink edge may be sharp;handle with caution.

1. Cut out countertop using this template.
2. Determine placement of clip brackets as indicated by template.
   Predrill holes according to desired method based on countertop material.
3. Apply a bead of silicon evenly along edge on underside of countertop.
4. Position and align sink over opening. Press sink onto silicon seal.
5. After re-checking alignment,tighten clip brackets against sink edge.
6. Remove excess silicon.

Note: This template is only for a guide . Actual sink should be present to ensure perfect cut out.

Hint: After silicon cures, wipe inside edge with denatured alcohol.This will smooth out ony rough areas.