
TECHNI MOBILI

MODEL RTA-B005

ASSEMBLY INSTRUCTIONS

(REV.9-OL-8906-0625)

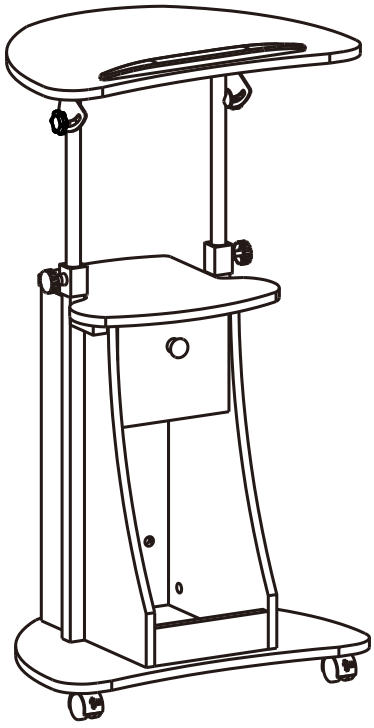


Thank you for purchasing our product!

Visit our Website
technimobili.com

View Assembly Video

Contact Us
support@rtaproducts.com

MAIN PARTS LIST

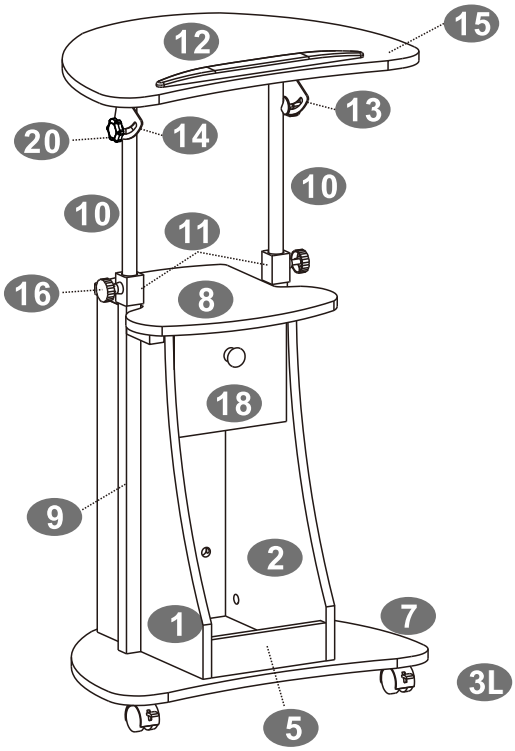

#1 Left Side



#2 Right Side



#3L Locking Casters

x2




#3N Non-Locking Casters

x2




#4 Back




#5 Front Lower



#6 Middle-Lower Shelf



#7 Bottom Base




Note: Image shows the *top* surface

#8 Middle-Upper Shelf




#9 Lateral Support Bars

x2




#10 Lift Tubes

x2

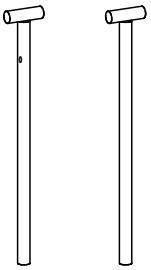

#11 Adjustment Covers

x2



#12 Tabletop



Note: Image shows the *top* surface








For Support, Assembly Questions & Replacement Parts Within the 48 *Contiguous* United States:
Please email us at: **support@rtaproducts.com**



Replacement Parts for International Customers & **AK-HI-PR** orders:
RTA Products will replace the part free of charge, while **the customer is responsible for shipping costs plus any International local taxes or duties**.

MAIN PARTS LIST (Cont.)
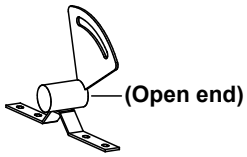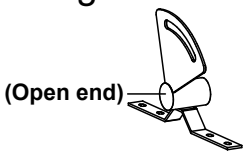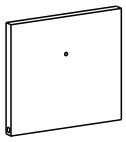
#13 Left Tilt Plate 	#14 Right Tilt Plate 
#15 Edge Stopper 	#16 Height Knob x2 
#17 Magnet Set 	#18 Door 
#19 Handle 	#20 Tilt Knob x2 

Hardware


No.	Item	Qty.	No.	Item	Qty.
A	 M4x14	16 Pcs	G	 M4x20	1 Pc
B	 M5x16	3 Pcs	H	 Ø5x17	2 Pcs
C	 M6x35	6 Pcs	I	 Ø25x15	4 Pcs
D	 M6x40	16 Pcs	J	 Connector	2 Pcs
E	 M6x12	8 Pcs	K	 Ø15mm	16 Pcs
F	 M3x15	4 Pcs	L	 Ø8x30	4 Pcs

Included Tools

Phillips Screwdriver 

Tools required (Not included)


Hammer or mallet  Or: 

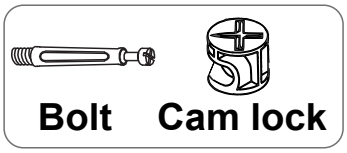


In some of the assembly steps you will use bolts and cam locks (also known as mini-fix). If you are not familiar with this kind of hardware, the below is a tutorial that explains how to use them.

The instructions below are ONLY A TUTORIAL for bolts and cam locks. The actual assembly starts on the next page.


1. Install the bolt into the first panel.

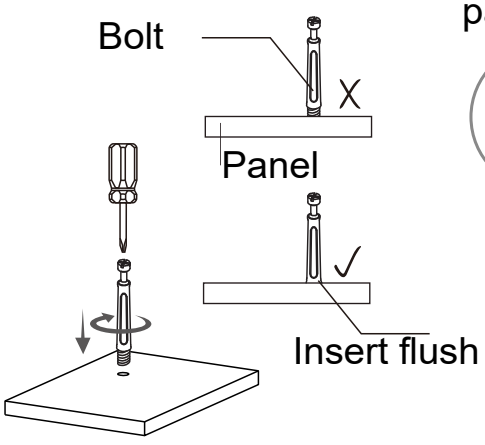

2. Join the second panel by inserting it into the bolt of the first panel.

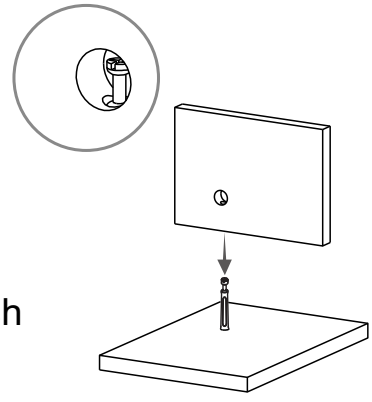

3. Insert the cam lock and turn it to lock both panels.

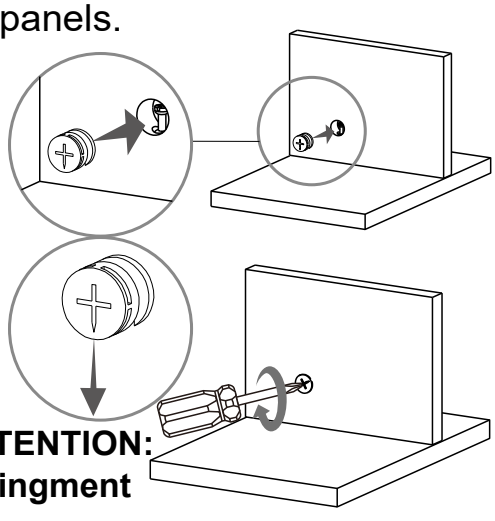

ATTENTION: Alingment

ASSEMBLY STEPS

WE RECOMMEND TO PLACE THE PIECES OVER BLANKETS OR TABLECLOTHS TO PROTECT THEIR FINISH DURING ASSEMBLY.

STEP 1

Hardware


D	M6x40	4 Pcs
K	Cam lock	4 Pcs
L	Dowel	4 Pcs

Tools (included)


Tools (Not included)

OR


FIRST: Attach L to #5.

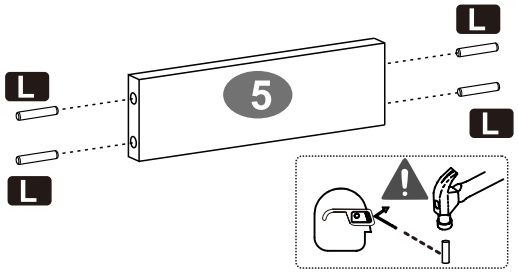

THEN: Attach D to #1.

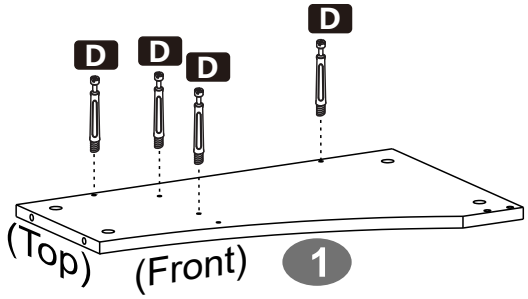


THEN: Attach #4 to #1 with K as explained previously in the Tutorial.

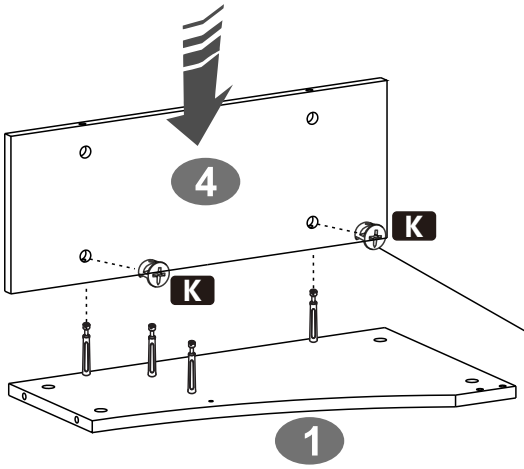


THEN: Attach #6 to #1 with K as explained previously in the Tutorial.


PAY ATTENTION: Side with cam locks face towards the BOTTOM

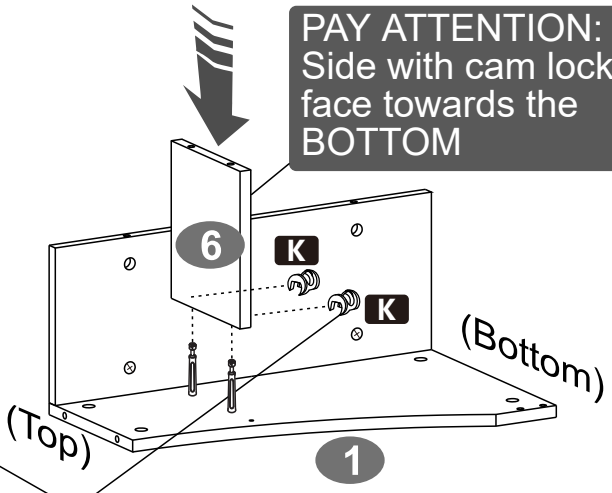

Refer to the Tutorial Page

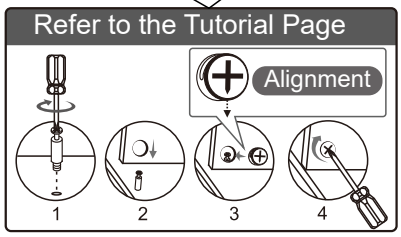

LAST: Attach #5 to #1.

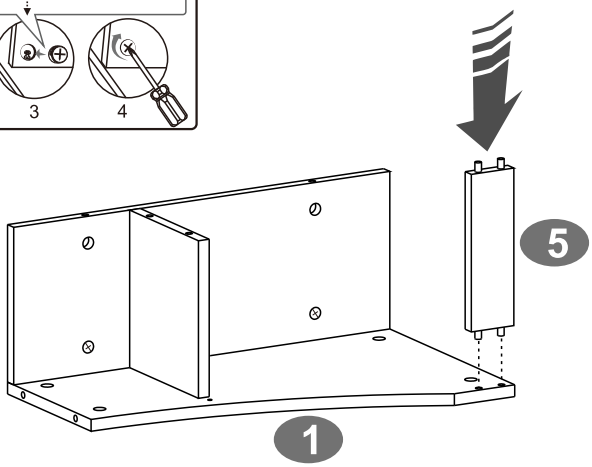

ASSEMBLY STEPS

STEP 2

Hardware


F	M3x15	4 Pcs
H	Ø5x17	2 Pcs

Tools (included)

Tools (Not included)


OR

FIRST: Use F to attach the magnet #17 to #8, and its plate to #8.

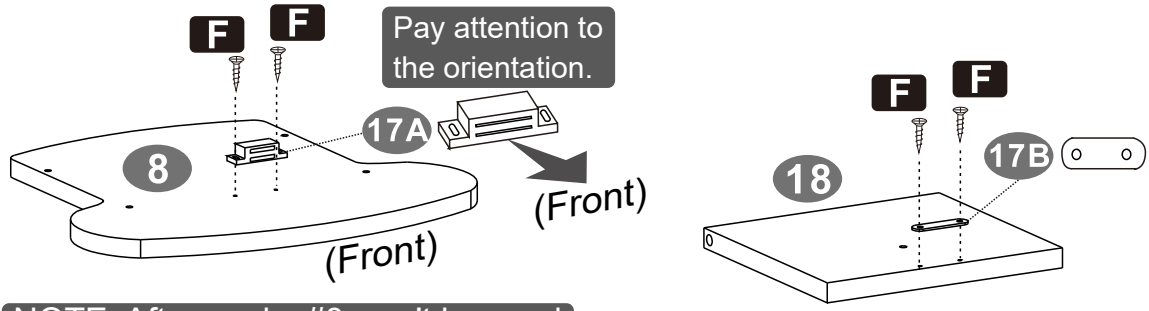


NOTE: Afterwards, #8 won't be used until Step 8, you may set it aside.

THEN: Attach H to #1.

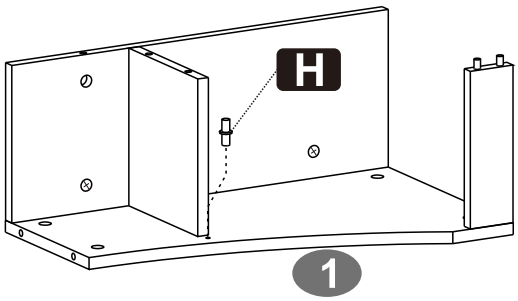

LAST: Place #18 over H and insert the second H into #18.

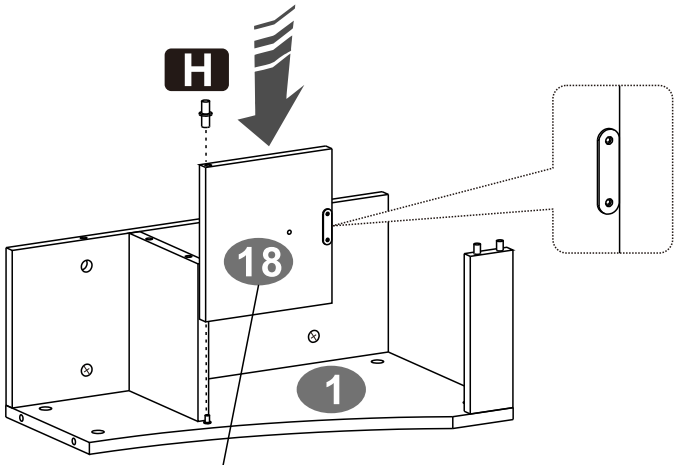

⚠ Pay attention to the orientation of #18!


STEP 3

Hardware


D	M6x40	4 Pcs
K	Cam lock	4 Pcs


Tools (included)

FIRST: Attach D to #2.

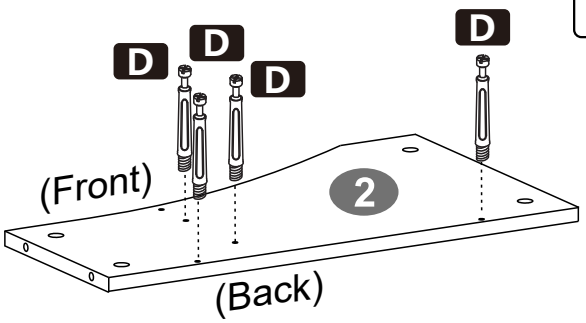

THEN: Attach #2 to #4 and #6 with K as explained previously in the Tutorial.

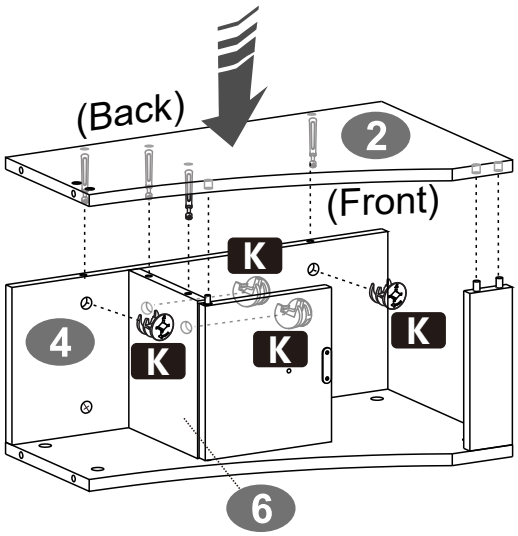

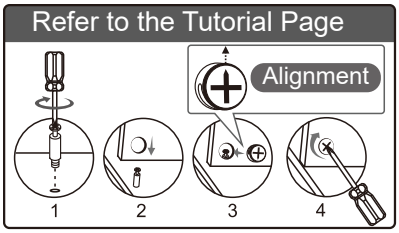

ASSEMBLY STEPS

STEP 4

Hardware

A	M4x14	16 Pcs


Tools (included)

Use A to attach to #7:
- #3L at the FRONT;
- #3N at the BACK.

⚠ PAY ATTENTION: Locking at FRONT.

⚠ PAY ATTENTION: Non-Locking at BACK.

⚠ PAY ATTENTION: Use the surface with 16 more tiny holes.

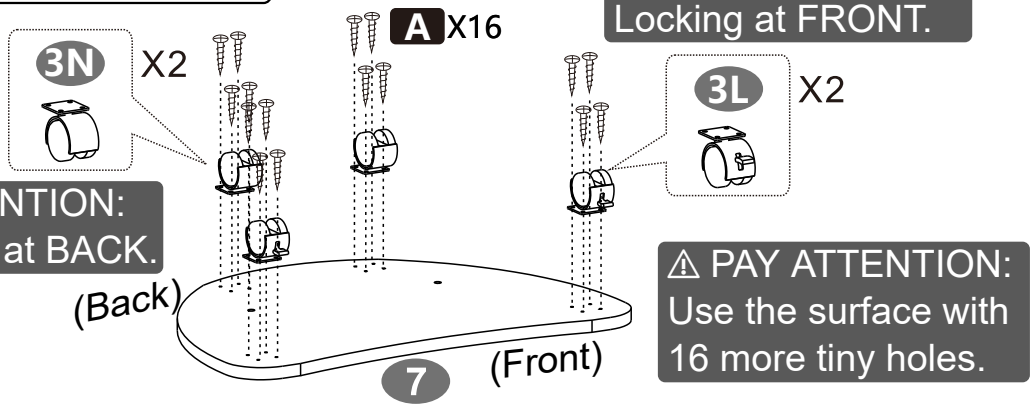


STEP 5

Hardware


D	M6x40	4 Pcs
K	Cam lock	4 Pcs

Tools (included)

Attach D to #7 and assemble to it #1 and #2 with K as explained in the Tutorial.

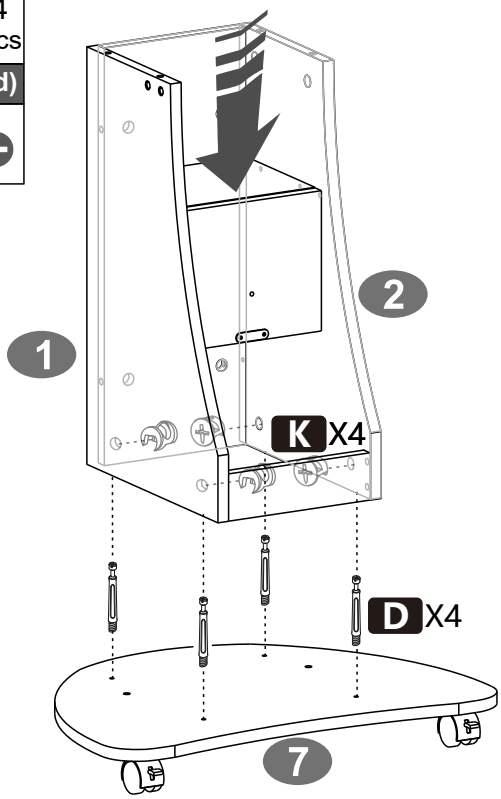

Refer to the Tutorial Page

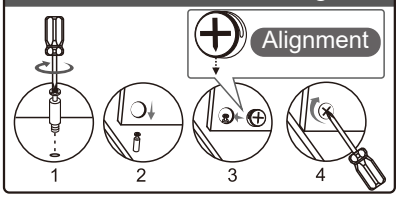


STEP 6

Hardware


D	M6x40	4 Pcs
K	Cam lock	4 Pcs

Tools (included)

Attach D to #8 and assemble it to #1 and #2 with K as explained in the Tutorial.

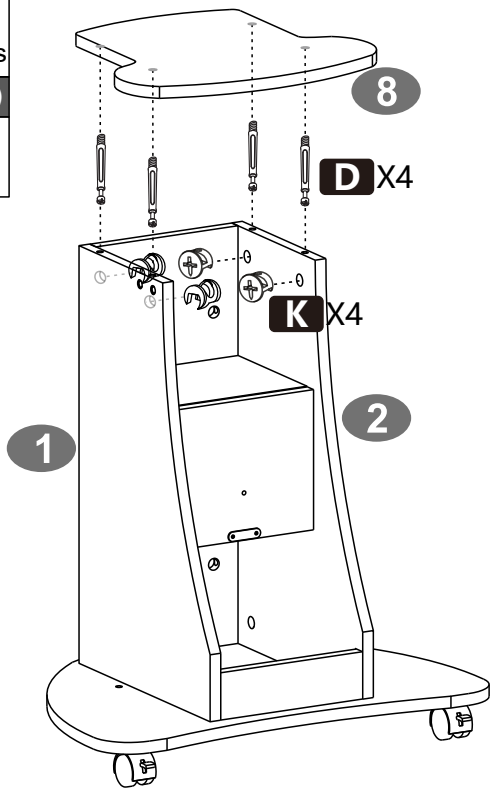

Refer to the Tutorial Page

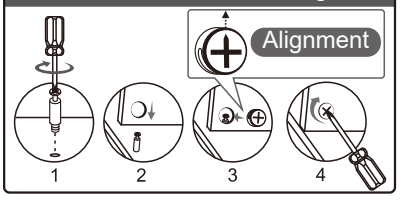


ASSEMBLY STEPS

STEP 7


Hardware

C	M6x35	6 Pcs


Tools (included)



FIRST: Attach #9 to #1 and #2 with C.

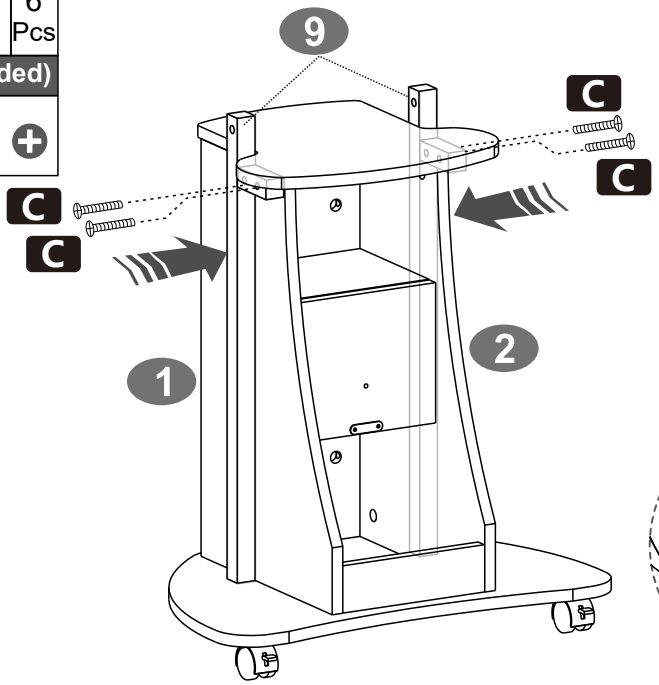

THEN: Secure #9 to #7 with C.

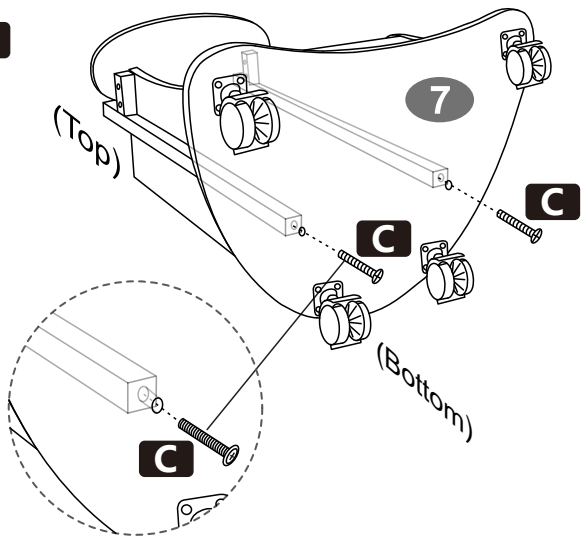


STEP 8

Hardware

I	Ø25x15	4 Pcs
J	Connector	2 Pcs

FIRST: Assemble #13 to #10 with #20, I and J **EXACTLY** as indicated.

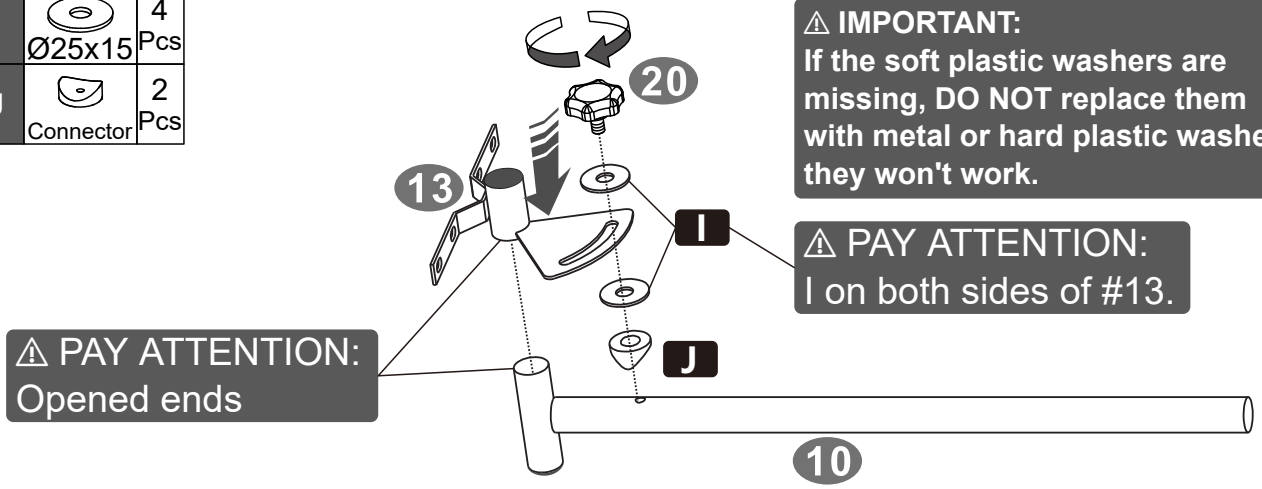


⚠ **IMPORTANT:**
If the soft plastic washers are missing, DO NOT replace them with metal or hard plastic washers, they won't work.

⚠ PAY ATTENTION:
I on both sides of #13.

⚠ PAY ATTENTION:
Opened ends

THEN: Do the same for #14.

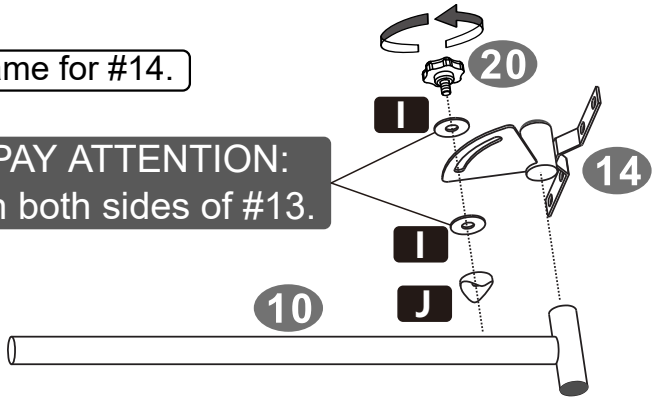

⚠ PAY ATTENTION:
I on both sides of #13.

⚠ Ensamble the tilting mechanism EXACTLY as instructed. The soft plastic washers will keep the tabletop in place by friction.


ASSEMBLY STEPS

STEP 9

Hardware


E	M6x12	8 Pcs

Tools (included)




FIRST: Assemble #13 and #14 to #12 on their respective sides with E.

⚠ PAY ATTENTION to the tilting direction.

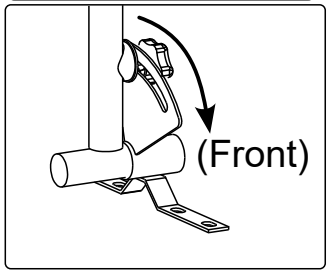


THEN: Adjust and tighten #20 to leave #10 at 90 degrees.

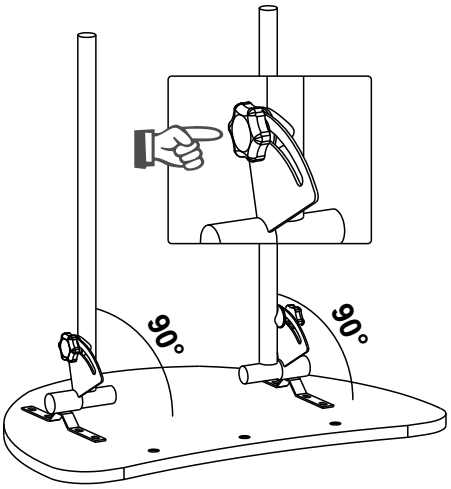


STEP 10

FIRST: Attach #11 to #9.

⚠ PAY ATTENTION: Threaded hole facing OUT.

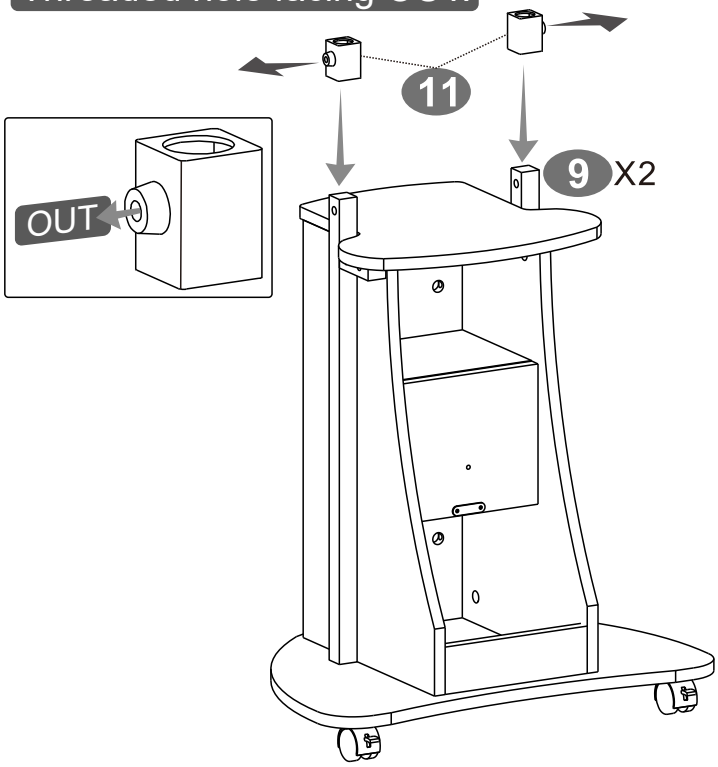

THEN: Slide #10 through #11 and into #9.

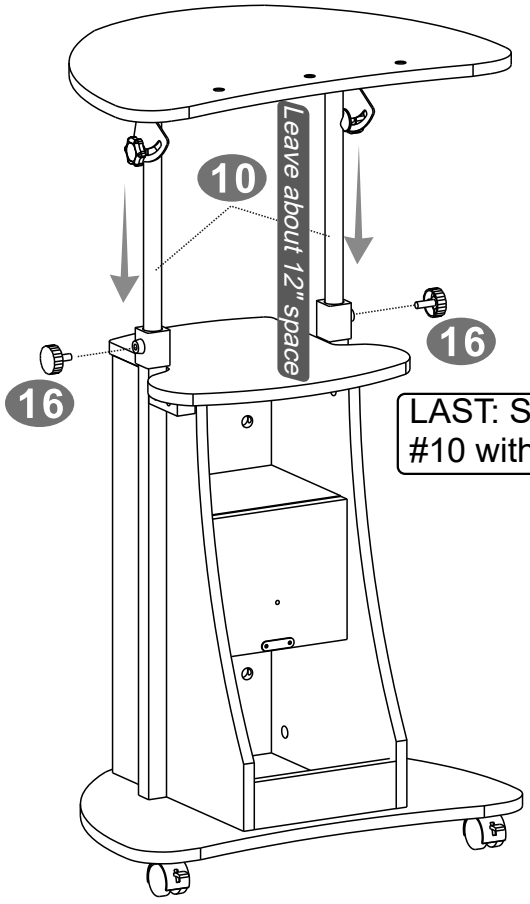

LAST: Secure #10 with #16.

ASSEMBLY STEPS

STEP 11


Hardware

B	M5x16	3 Pcs
G	M4x20	1 Pcs

Tools (included)




FIRST: Attach #15 to #12 with B.

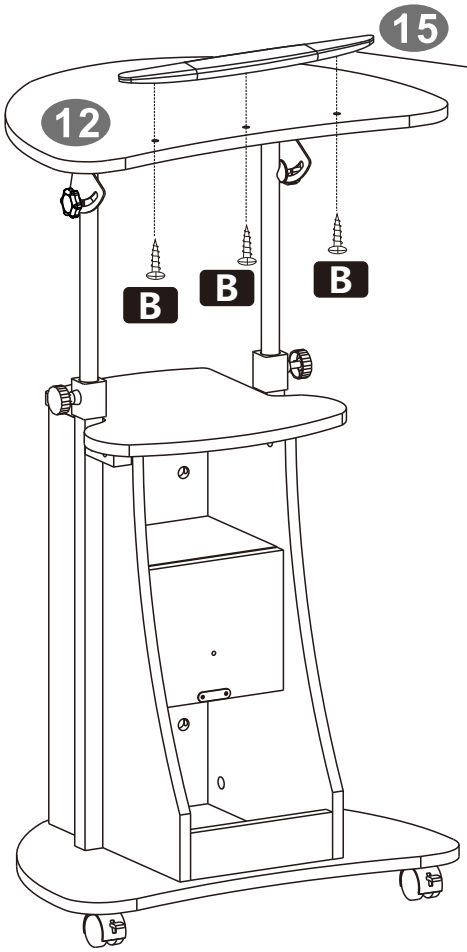

⚠ PAY ATTENTION:
The curvature on #15 faces towards the front.

FINALLY: Attach #19 to #18 with G.

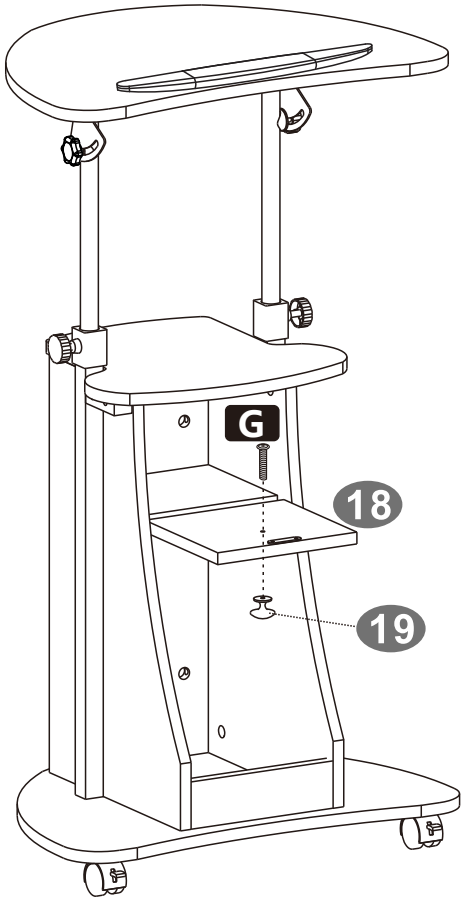




ALL DONE!

Give yourself a nice pat on the back, you did a great job!

Please read the warnings and other important information on the folloing page.

FUNCTIONS / ADJUSTMENTS / WARNINGS

LIFTING: Loosen #16, lift or lower the tabletop simultaneously on both sides, and tighten #16 again.

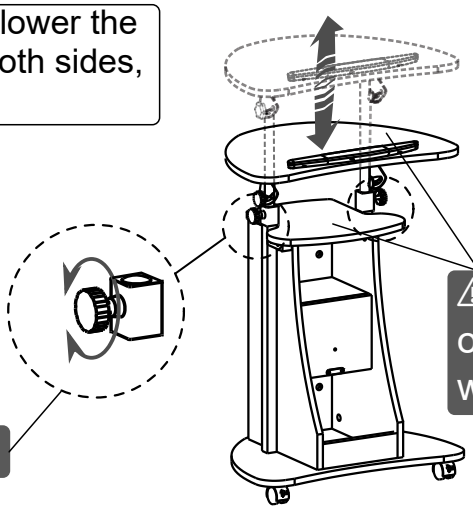


⚠ Use caution for objects over or under the tabletop when adjusting the height.

⚠ Do not overtighten.

TILTING: Loosen #20, tilt the tabletop to the desired angle, and tighten #20 again.

⚠ Make sure to have followed the assembly steps No.8 & No.9 EXACTLY as instructed. An incorrect assembly might result in the tabletop flippling down unexpectedly.

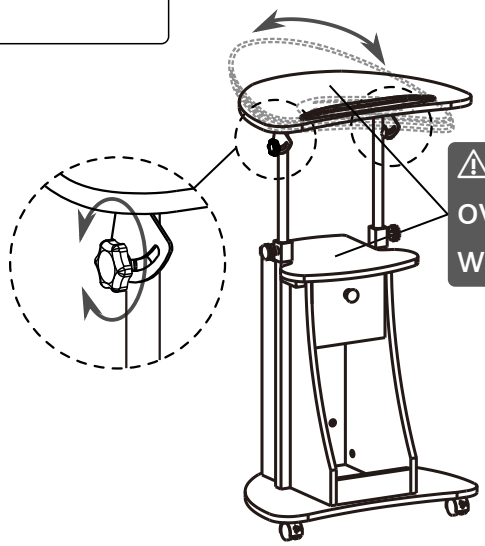


⚠ Use caution for objects over or under the tabletop when adjusting the tilting.

ROLLING: Unlock the front casters #3L to allow free movement.


⚠ Use caution for objects over or under the tabletop when rolling the unit.

⚠ Unlock the front casters before moving the unit.

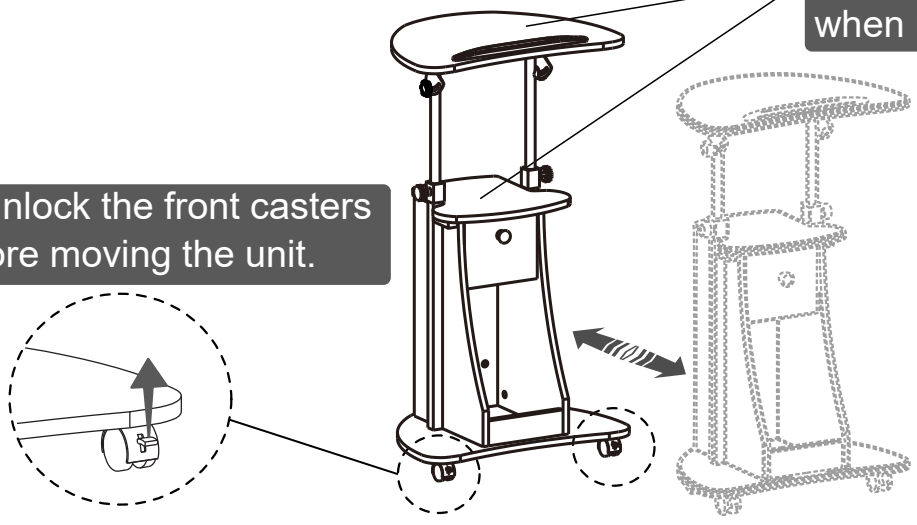

WARNINGS
Not paying attention to the following warnings could result in injuries.


WEIGHT LIMITS - DO NOT EXCEED

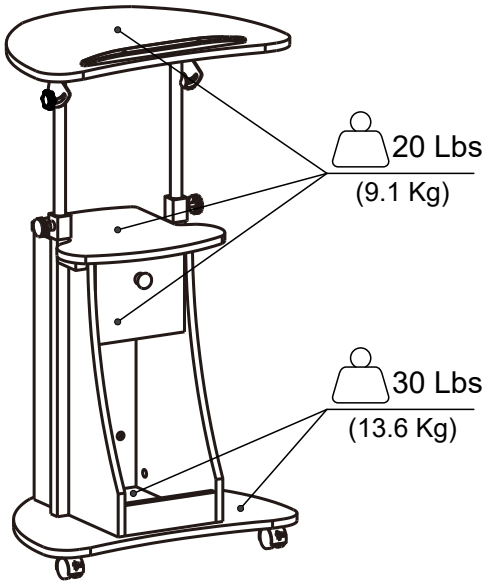

- Do not sit, climb or stand on the Unit.
- Do not allow children to climb or play with the unit.



Please refer to all the warnings in the previous page before adjusting the height, tilting or rolling functions on the unit.

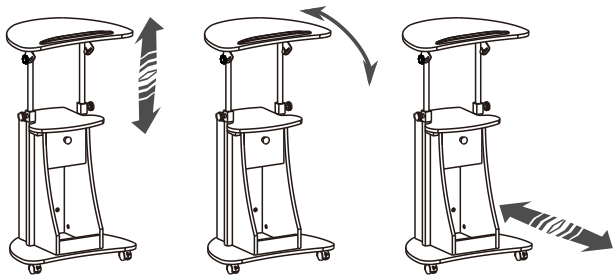


CARE AND MAINTENANCE

- Clean with a cloth lightly damped in a solution of mild soap and water.
- Do not use solvents or abrasive materials.



Do not expose to direct sunlight or extreme enviromental conditions.

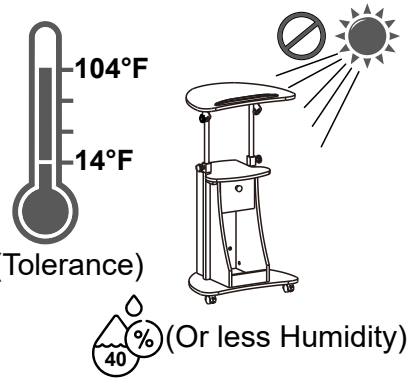

Inspect and re-tighten any loose screws every 4 months.



LIMITED WARRANTY

For details, please visit our website:
Technimobili.com

To file a claim or request information, please email to:
warranty@rtaproducts.com