

ASSEMBLY INSTRUCTION

ITEM : MV-5962-90251-480 BALI 5/0 UPH PANEL HEADBOARD
 MV-5962-90252-480 BALI 5/0 UPH PANEL FOOTBOARD
 MV-5962-90253-480 BALI 5/0-6/6 UPH RAILS
 MV-5962-90267-480 BALI 6/0-6/6 UPH PANEL HEADBOARD
 MV-5962-90268-480 BALI 6/0-6/6 UPH PANEL FOOTBOARD
 MV-5962-90263-480 BALI 6/0 UPH RAILS


Please read all instructions carefully before starting the assembly process. Please be sure to unpack carefully as small parts may have come loose during travel from paradise. Helpful tip--do not fully tighten bolts until assembly is complete. It will make assembly easier.

HARDWARE LIST OF RAILS				
NO	DRAWING	DESCRIPTION	SIZE	QTY
A		Wrench	Ø 12 mm	1 PC
B		Nut	Nut	8 PCS
C		Lock Washer	Ø M8	8 PCS
D		Threaded Rod	Ø M8*80mm	8 PCS
E		Half Moon Washer		8 PCS
F		Screw	Ø 8 * 32 mm	10 PCS

PARTS LIST			
NO	DRAWING	DESCRIPTION	QTY
1		Headboard	1 PC
2		Footboard	1 PC
3		Side Rail	2 PCS
4		Slat	5 PCS
5		Support Leg	5 PCS

TOOLS REQUIRED (NOT PROVIDED)


Phillips screwdriver

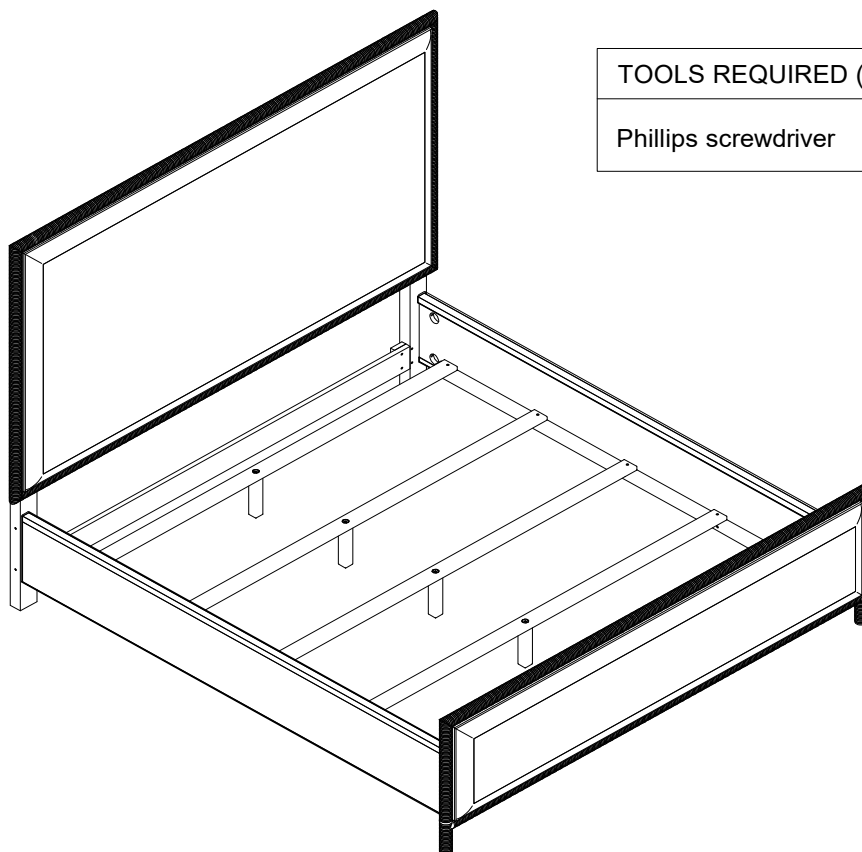


ITEM : MV-5962-90251-480 BALI 5/0 UPH PANEL HEADBOARD
 MV-5962-90252-480 BALI 5/0 UPH PANEL FOOTBOARD
 MV-5962-90253-480 BALI 5/0-6/6 UPH RAILS
 MV-5962-90267-480 BALI 6/0-6/6 UPH PANEL HEADBOARD
 MV-5962-90268-480 BALI 6/0-6/6 UPH PANEL FOOTBOARD
 MV-5962-90263-480 BALI 6/0 UPH RAILS

Please read all instructions carefully before starting the assembly process. Please be sure to unpack carefully as small parts may have come loose during travel from paradise. Helpful tip—do not fully tighten bolts until assembly is complete. It will make assembly easier.



Step.1

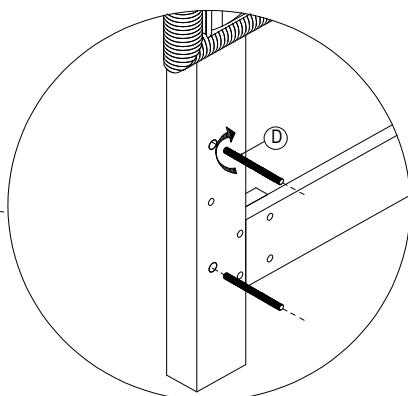

Step.2

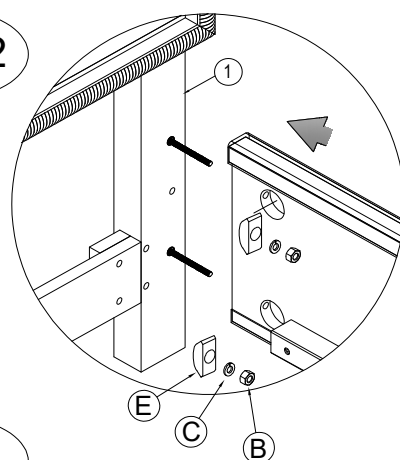

Step.3

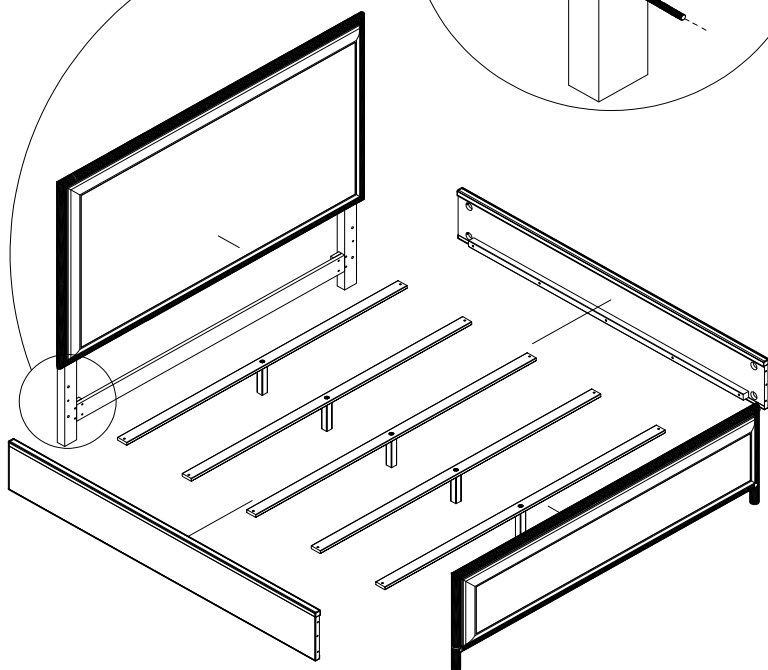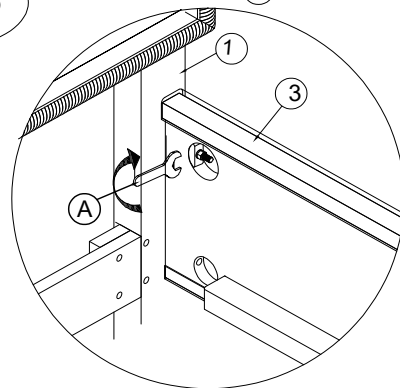




ASSEMBLY INSTRUCTION

ITEM : MV-5962-90251-480 BALI 5/0 UPH PANEL HEADBOARD
MV-5962-90252-480 BALI 5/0 UPH PANEL FOOTBOARD
MV-5962-90253-480 BALI 5/0-6/6 UPH RAILS
MV-5962-90267-480 BALI 6/0-6/6 UPH PANEL HEADBOARD
MV-5962-90268-480 BALI 6/0-6/6 UPH PANEL FOOTBOARD
MV-5962-90263-480 BALI 6/0 UPH RAILS

Please read all instructions carefully before starting the assembly process. Please be sure to unpack carefully as small parts may have come loose during travel from paradise. Helpful tip--do not fully tighten bolts until assembly is complete. It will make assembly easier.

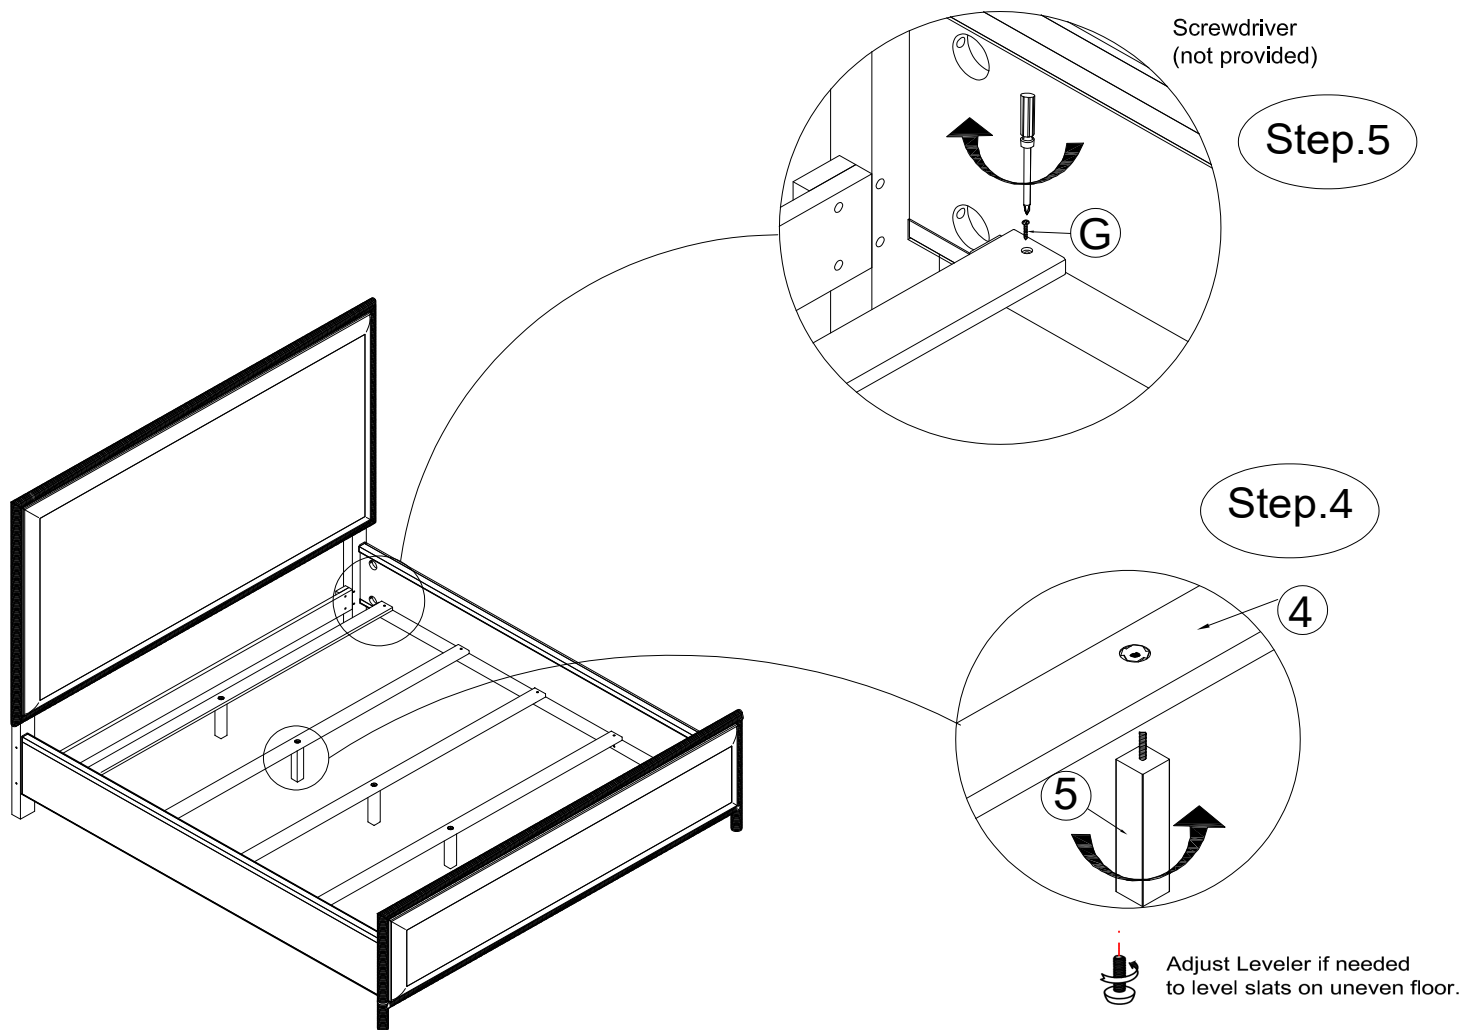



ASSEMBLY INSTRUCTION

ITEM : MV-5962-90251-480 BALI 5/0 UPH PANEL HEADBOARD
MV-5962-90252-480 BALI 5/0 UPH PANEL FOOTBOARD
MV-5962-90253-480 BALI 5/0-6/6 UPH RAILS
MV-5962-90267-480 BALI 6/0-6/6 UPH PANEL HEADBOARD
MV-5962-90268-480 BALI 6/0-6/6 UPH PANEL FOOTBOARD
MV-5962-90263-480 BALI 6/0 UPH RAILS

Please read all instructions carefully before starting the assembly process. Please be sure to unpack carefully as small parts may have come loose during travel from paradise. Helpful tip--do not fully tighten bolts until assembly is complete. It will make assembly easier.

Step 1 : Attach side rail (3) to headboard by using threaded rods (D), half moon washer (E), lock washer (C) and nuts (B).

Step 2 : Assemble footboard (2) to side rail (3) using threaded rods (D), half moon washer (E), lock washer (C) and nuts (B).

Step 3 : Tighten all components with wrench (A).

Step 4 : Install support legs (5) to the slat (4).

Step 5 : Attach the slats (4) to the side rails (3) and secure them with screws (F) with phillips screwdriver (not provided).