



ASSEMBLY INSTRUCTION

ITEM#: 13709

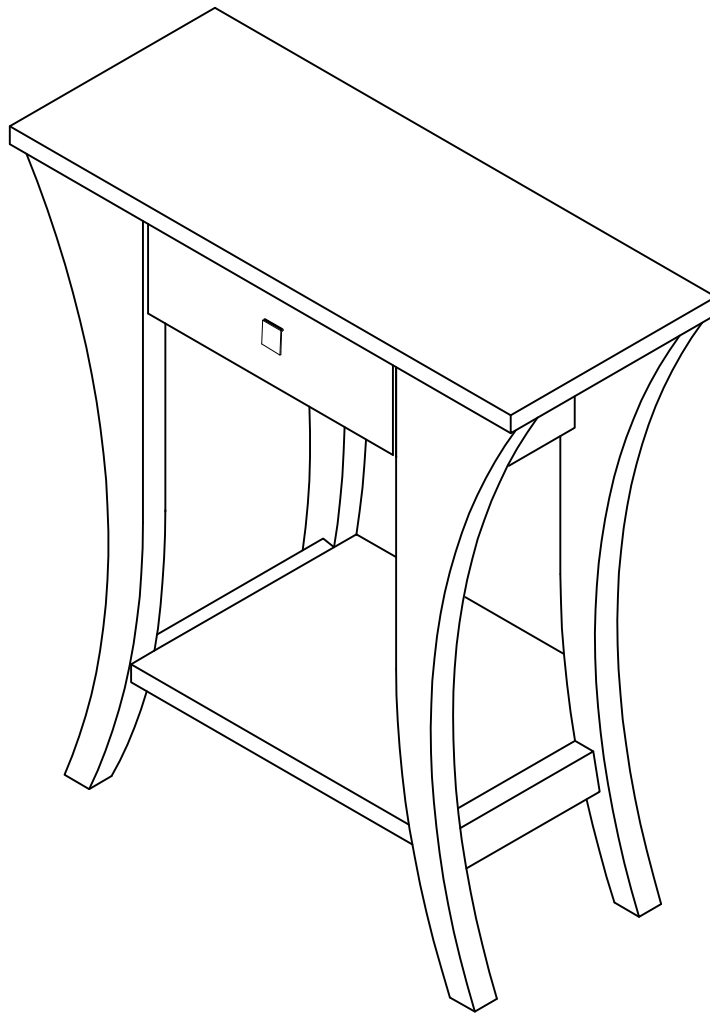

PARTS IDENTIFICATION






ITEM#:13709

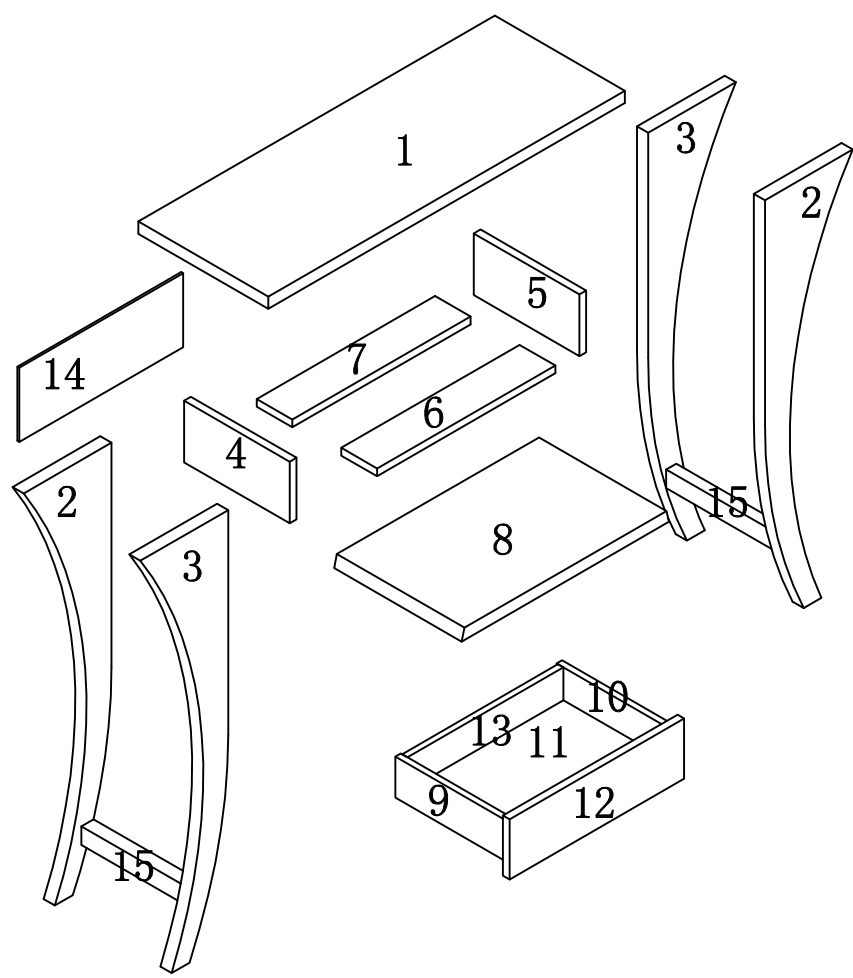

(1)	1pc	(9)	1pc
(2)	2pcs	(10)	1pc
(3)	2pcs	(11)	1pc
(4)	1pc	(12)	1pc
(5)	1pc	(13)	1pc
(6)	1pc	(14)	1pc
(7)	1pc	(15)	2pcs
(8)	1pc		


HARDWARE IDENTIFICATION

ITEM#:13709


A		L29	26pcs
B		Ø15	26pcs
C		Ø8×25	22pcs
D		Ø4×30	4pcs
E		Ø4×10	1set
F		48×48×14	1pc
G		L20	4pcs
H		Ø12	4pcs
I		Ø20	8pcs
J		Z1016	20pcs
K			1pc
L		Ø4×25	1pc
M		Ø5×40	1pc
N		Ø8×40	1pc
O		Ø16	4pcs
P		Glue: For securing please apply to wood dowel first before inserting into panel	1pc

ASSEMBLY INSTRUCTION

ITEM#: 13709

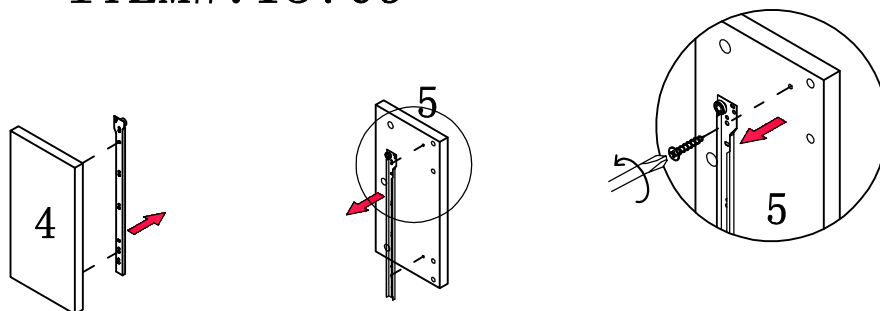


STEP 1

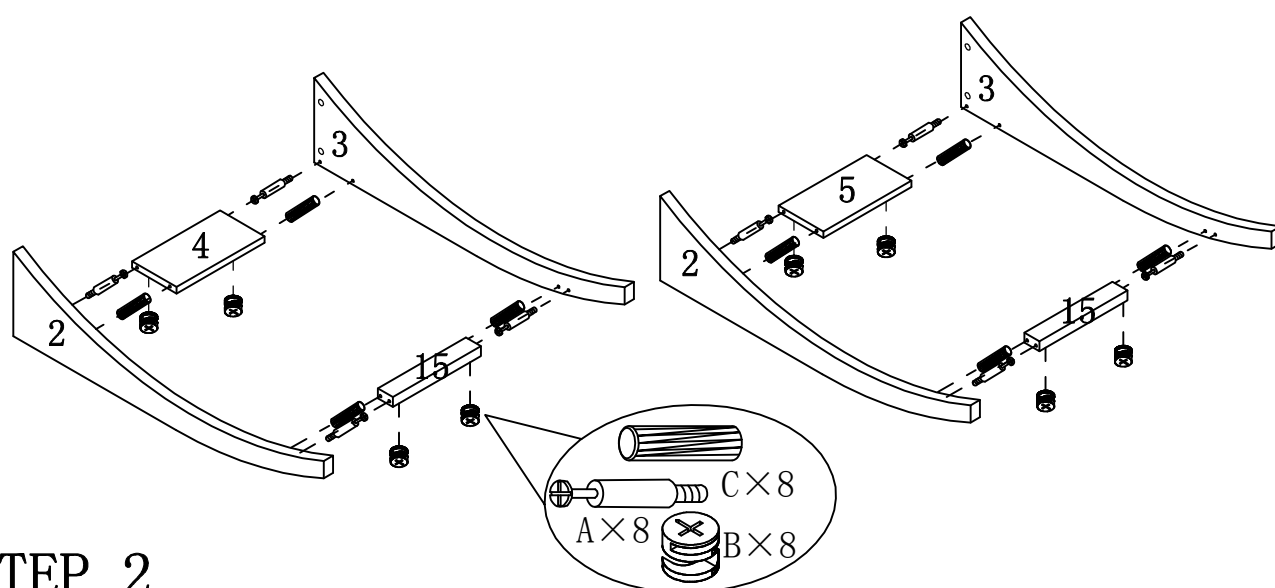


STEP 2

STEP 3

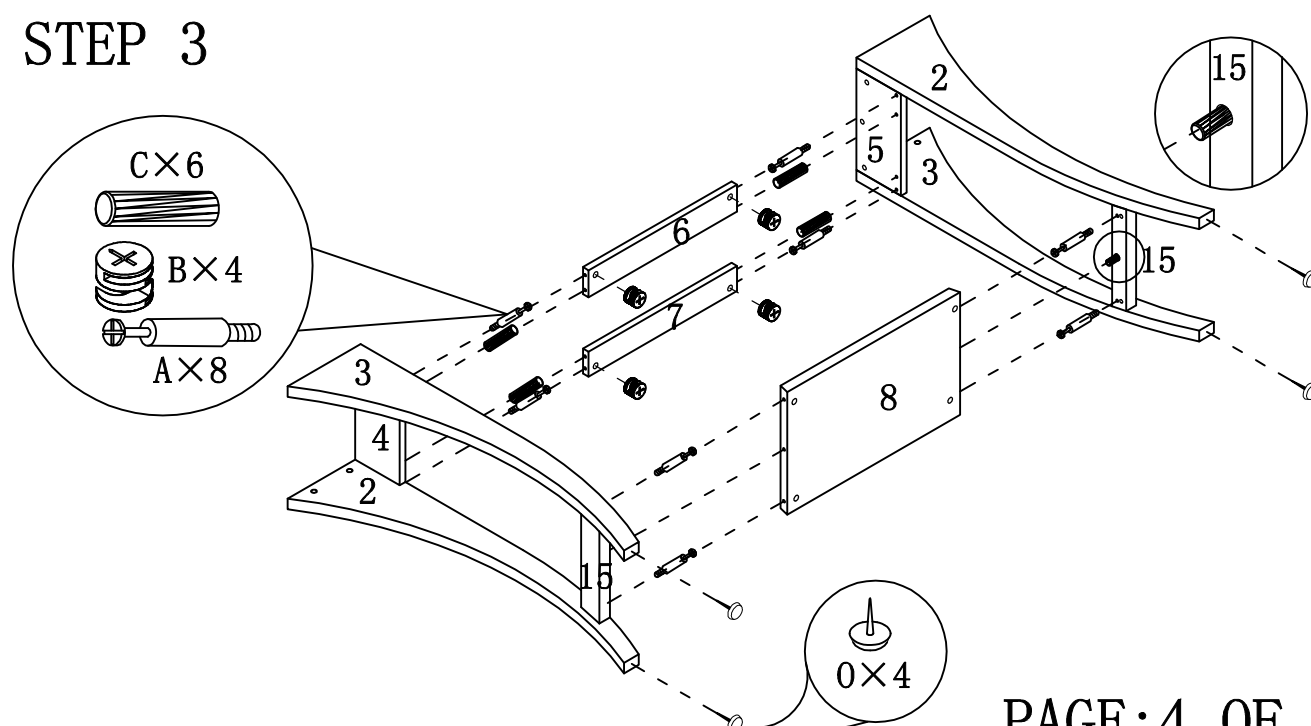


ASSEMBLY INSTRUCTION

ITEM#:13709

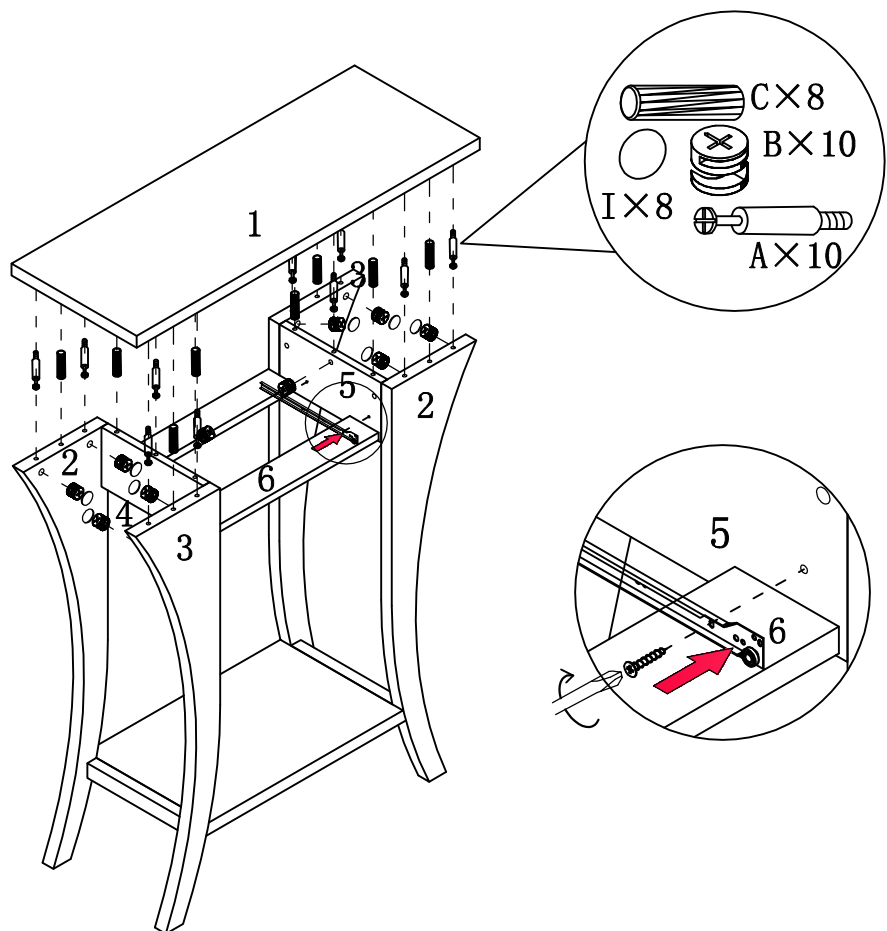


STEP 4

STEP 5

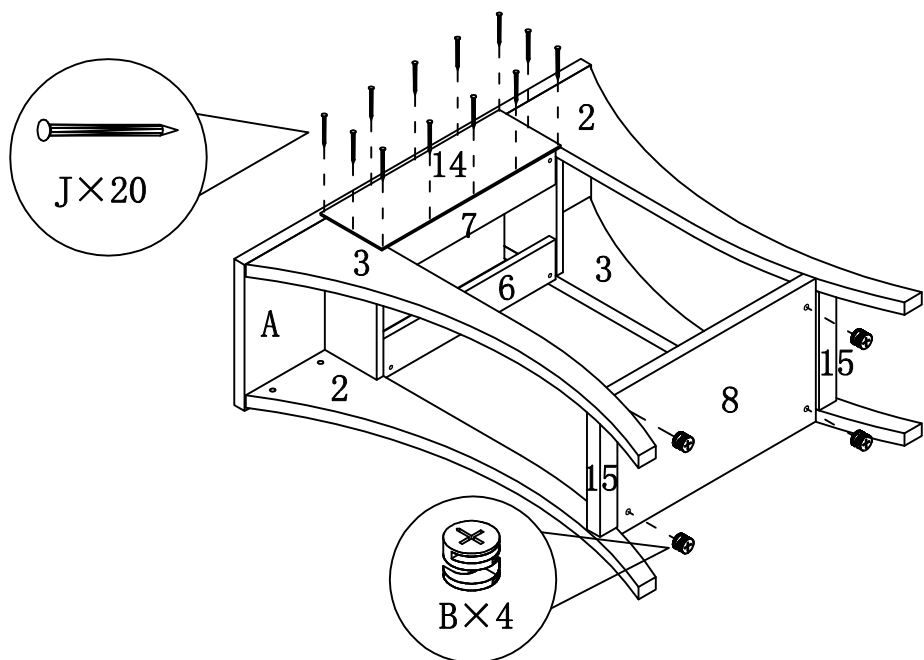


ASSEMBLY INSTRUCTION

ITEM#:13709

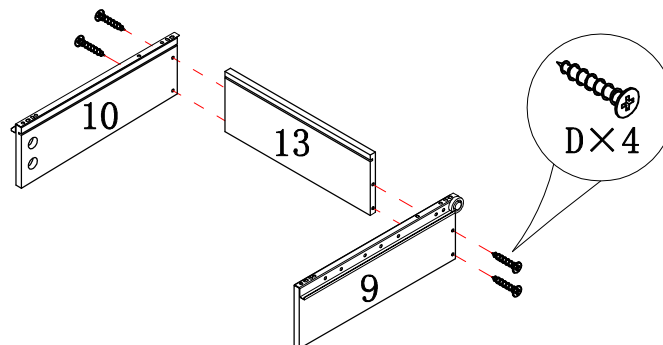

STEP 6

STEP 7

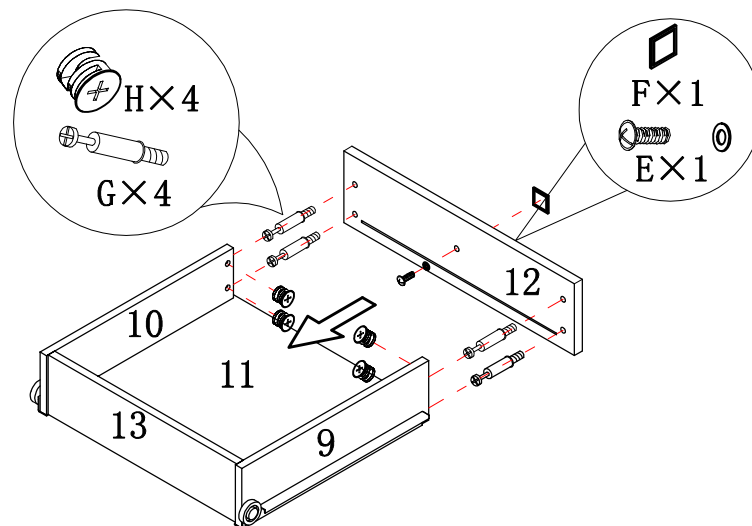

STEP 8

