


## ASSEMBLY STEPS


### Assembly tips:

1. Just tighten the screws to 70% before all of them are aligned. After all the screws are aligned, tighten the remaining parts.
2. The difference between metal tube (D\*2) and metal tube (E\*2) is that metal tube (D\*2) has a hole in the middle.

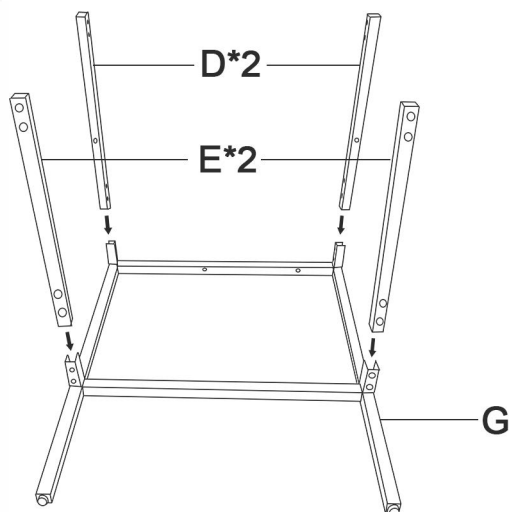

#### STEP 1.


Connect the metal tubes (D\*2) on the top of the frame and the metal tubes (E\*2) on the bottom of the frame to the metal frame (G).

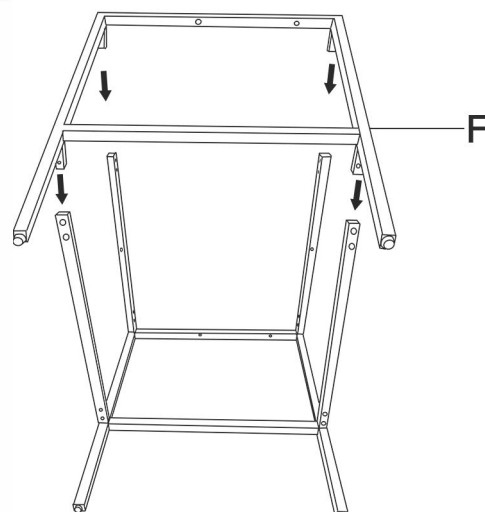

#### STEP 2.

Align the frame (F) and insert it into the holes of the tubes (D\*2) on the top of the frame and the tubes (E\*2) on the bottom of the frame.


Note: At this stage, do not fully tighten the screws.

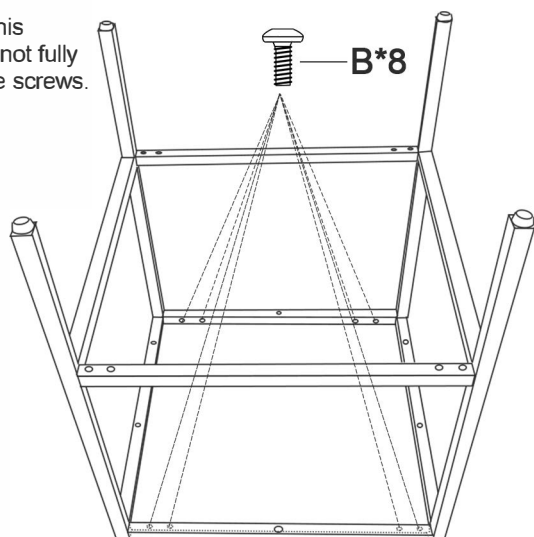

#### STEP 3.


Use screws (B\*8) to connect the metal tubes (D\*2) on the top of the frame to the metal frame (G & F).

Note: At this stage, do not fully tighten the screws.

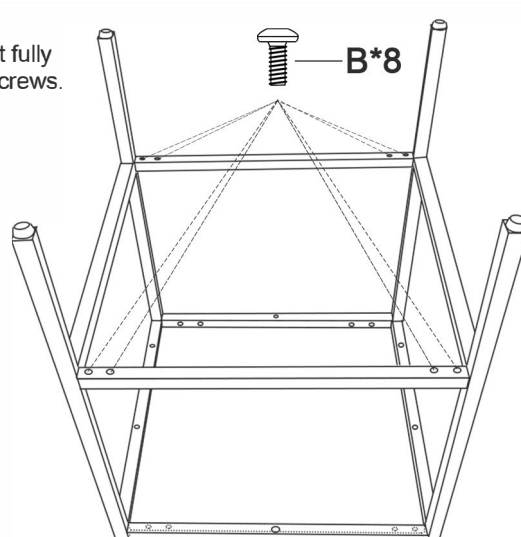

#### STEP 4.



Use screws (B\*8) to connect the metal tubes (E\*2) at the bottom of the frame to the metal frame (G & F).

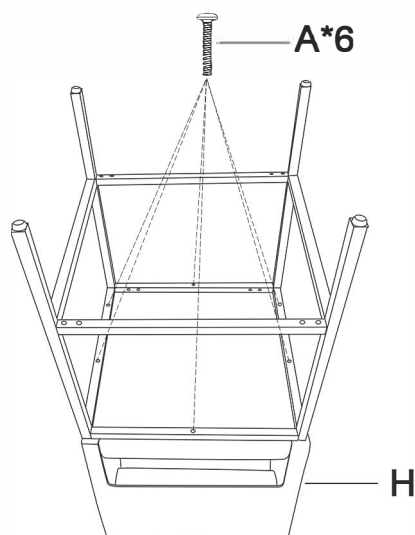

#### STEP 5.

Attach the metal base to the seat (H) with screws (A\*6). Align and insert all screws and then tighten all screws completely.

Tip: Adjust Pre-installed adjustable foot pads height to achieve balance.

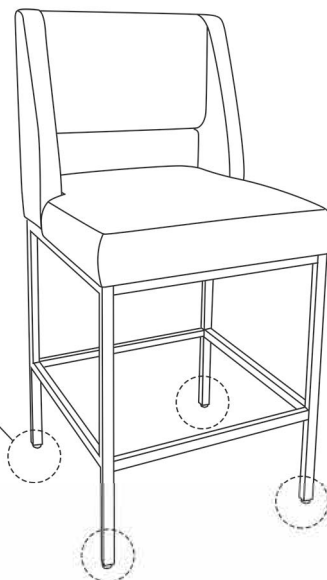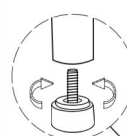

#### STEP 6.

Congratulations! You have possessed an exquisite bar stool.