

INSTRUCTIONS


Organize your parts and hardware.

Hardware Components should include:

- A) 8 Threaded Cams
- B) 8 Small Bolts
- C) 8 Large Bolts
- D) 1 Assembly Key
- E) 6 Lag Bolts

Wooden parts include:


- F) 2 Table Legs
- G) 2 Side Stringers
- H) 1 Center Stringer
- I) 1 Table Top

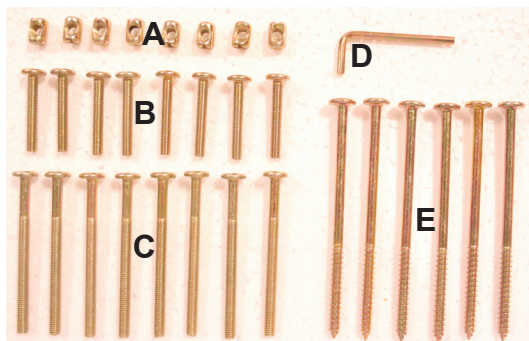

Step 1: Place Table Top (I) upside-down on table or floor. Position Table Leg (F) onto Table Top (I) so that the holes in the top of the Table Leg line up with the holes in the bottom of the Table Top.



Step 2: Position Side Stringers (G) and Center Stringer (H) onto Table Top (I). Insert dowel rods into holes in Table Leg (F). Holes for Threaded Cams in Side Stringers are facing toward Center Stringer.

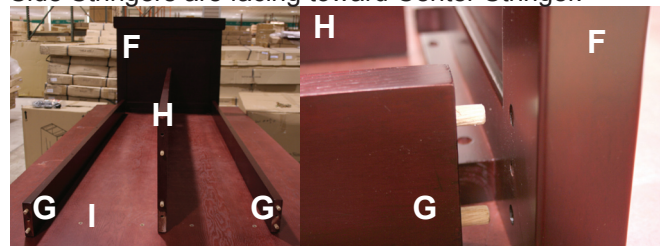


Step 3: Insert Threaded Cams (A) into holes in Side Stringers and Center Stringer. Turn so that the larger line is horizontal. Insert Large Bolts (C) into Table Leg (F) and thread into Cams (A). Do not overtighten.



Step 4: Attach other Table Leg (F) to Side Stringers (G) and Center Stringer (H) with Large Bolts (C). Secure both Table Legs (F) to Table Top (I) with Small Bolts (B).



Step 5: Insert Lag Bolts (E) into Side Stringers (G) and tighten.

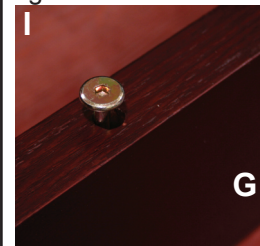

IMPORTANT NOTICE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until completely assembled.
- Keep all hardware parts out of reach of children.