

QUEEN & FULL UNIVERSAL SIZE
HEADBOARD ONLY

ASSEMBLY INSTRUCTION



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




Warning !

1. Don't attempt to repair modify parts that are broken or defective . Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION


Z HARDWARE PACKAGE

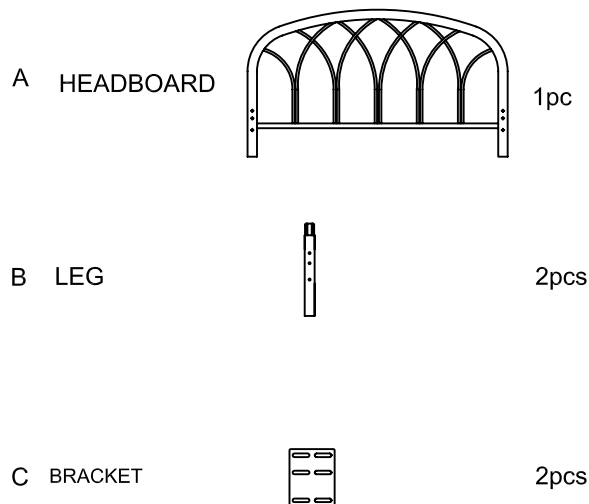

NO	DESCRIPTION	FIGURE	Q'TY
1	BOLT 1/4"x2 $\frac{3}{4}$ "mm		4pcs
2	BOLT 1/4"x $\frac{7}{8}$ "mm		4pcs
3	SMALL WASHER		12pcs
4	LARGE WASHER		8pcs
5	HEX. NUT		8pcs
6	CAP		2pcs
7	ALLEN WRENCH		1pc
8	OPEN WRENCH		1pc


60" ASSEMBLY INSTRUCTIONS

STEP 1: Locate the leg(B),and use the bolt(1),Nut(5) and washer (3,4) through the pre-drilled holes to attach it to the baseframe.

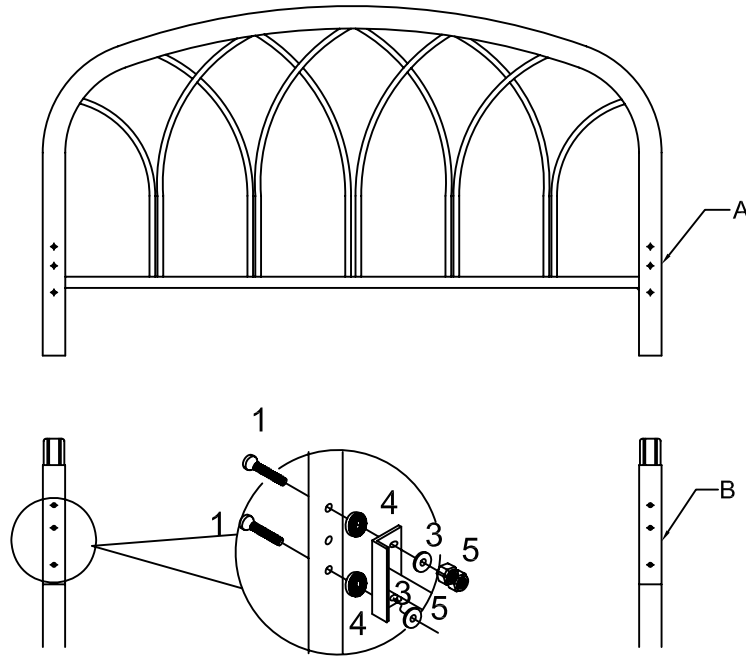

54" ASSEMBLY INSTRUCTIONS

STEP 2: Locate the bracket(C),and use the bolt(1),washer(3,4), Nut(5) through pre-drilled holes to attach it to the leg, and adjust it to be 54" bed,then using bolt(2),washer(3,4),Nut(5) to attach it to the baseframe.

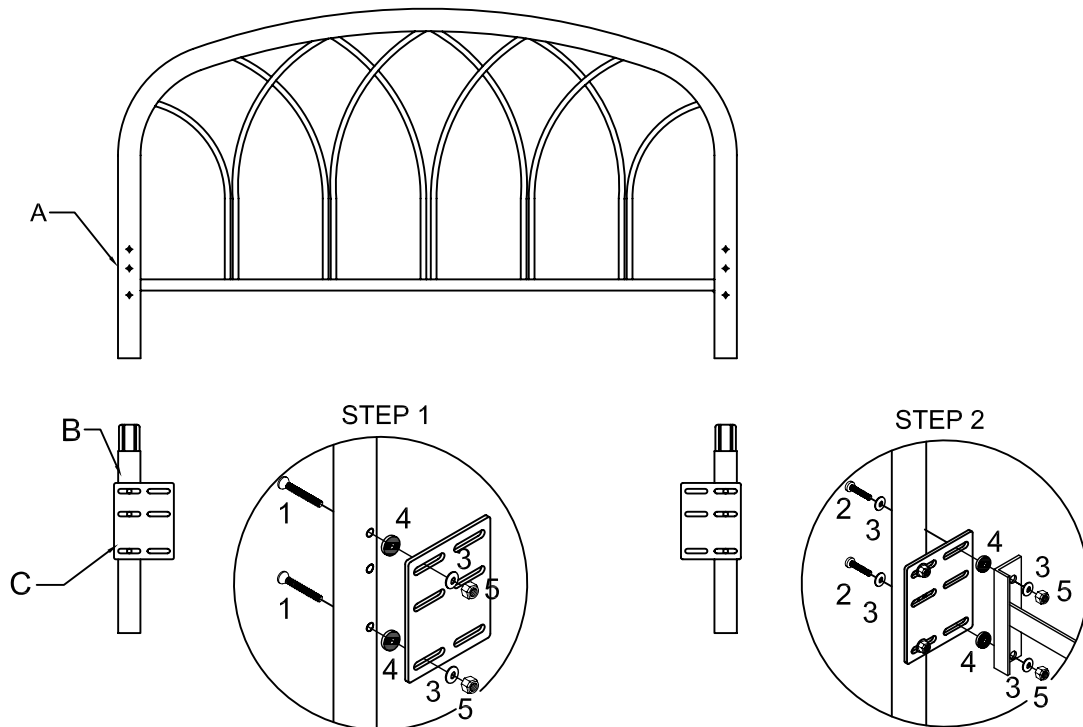

STEP 3: Push the cap(6) to the end of the headboard, and use the bolt(1), washer(4,5), Nut(6) to attach it to the baseframe.

