
Assembly Instructions

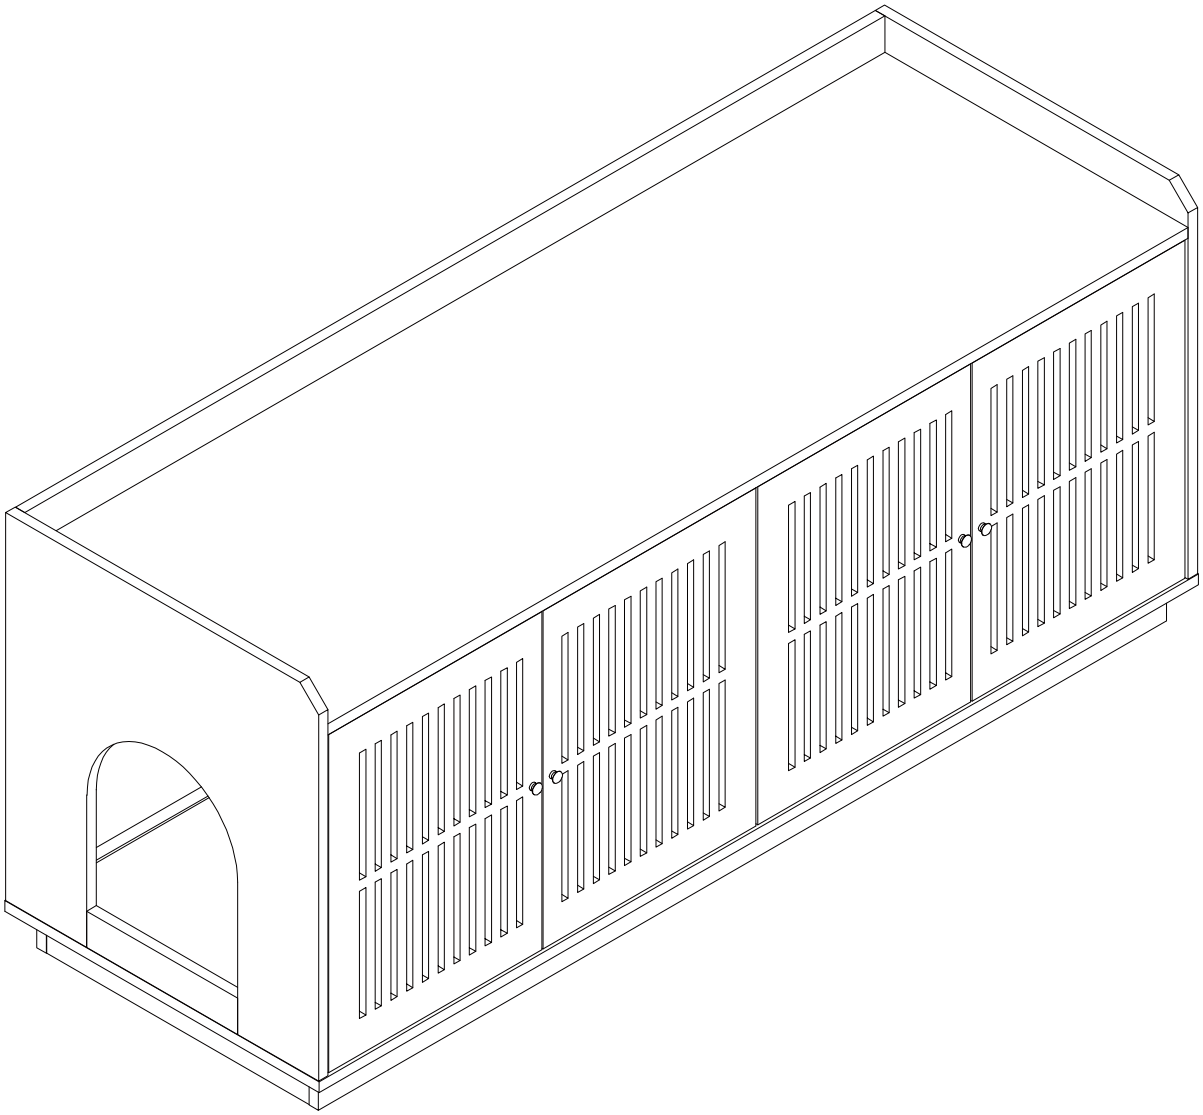

Cat Nest Stool

Model No.
HOGA-HL0178

Contact Us


We're here to help you.





Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.

Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

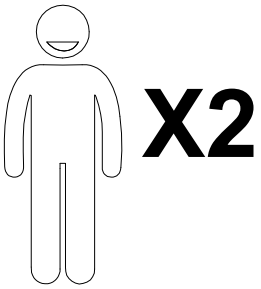


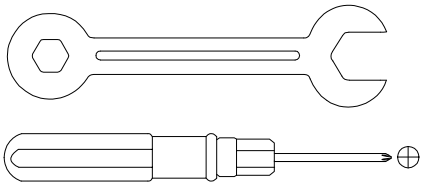


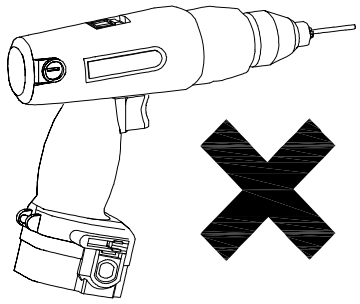

We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

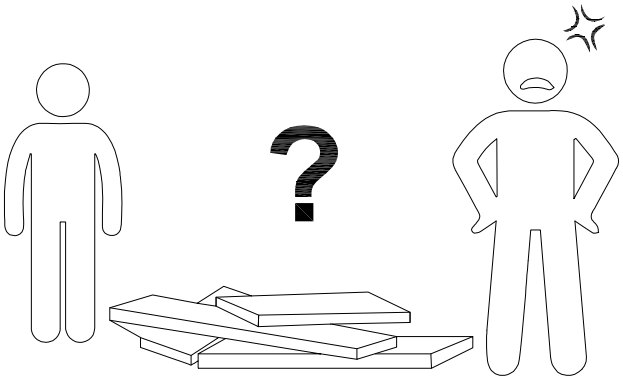


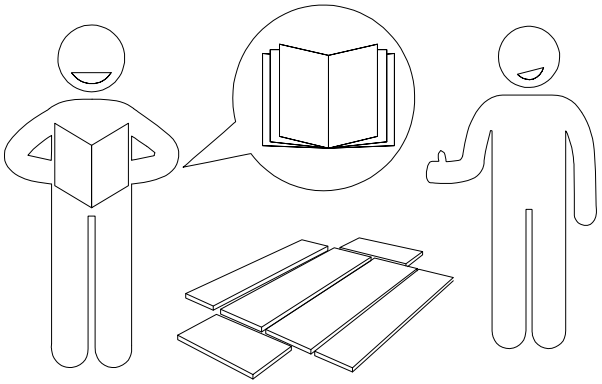


AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.

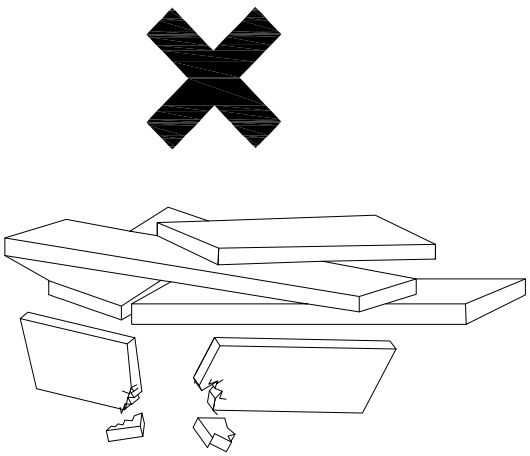













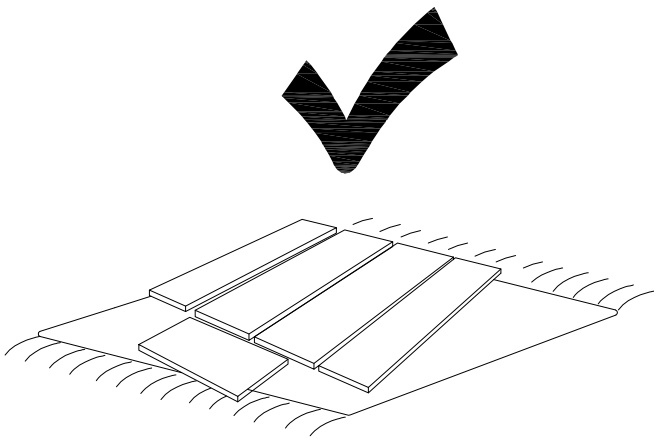


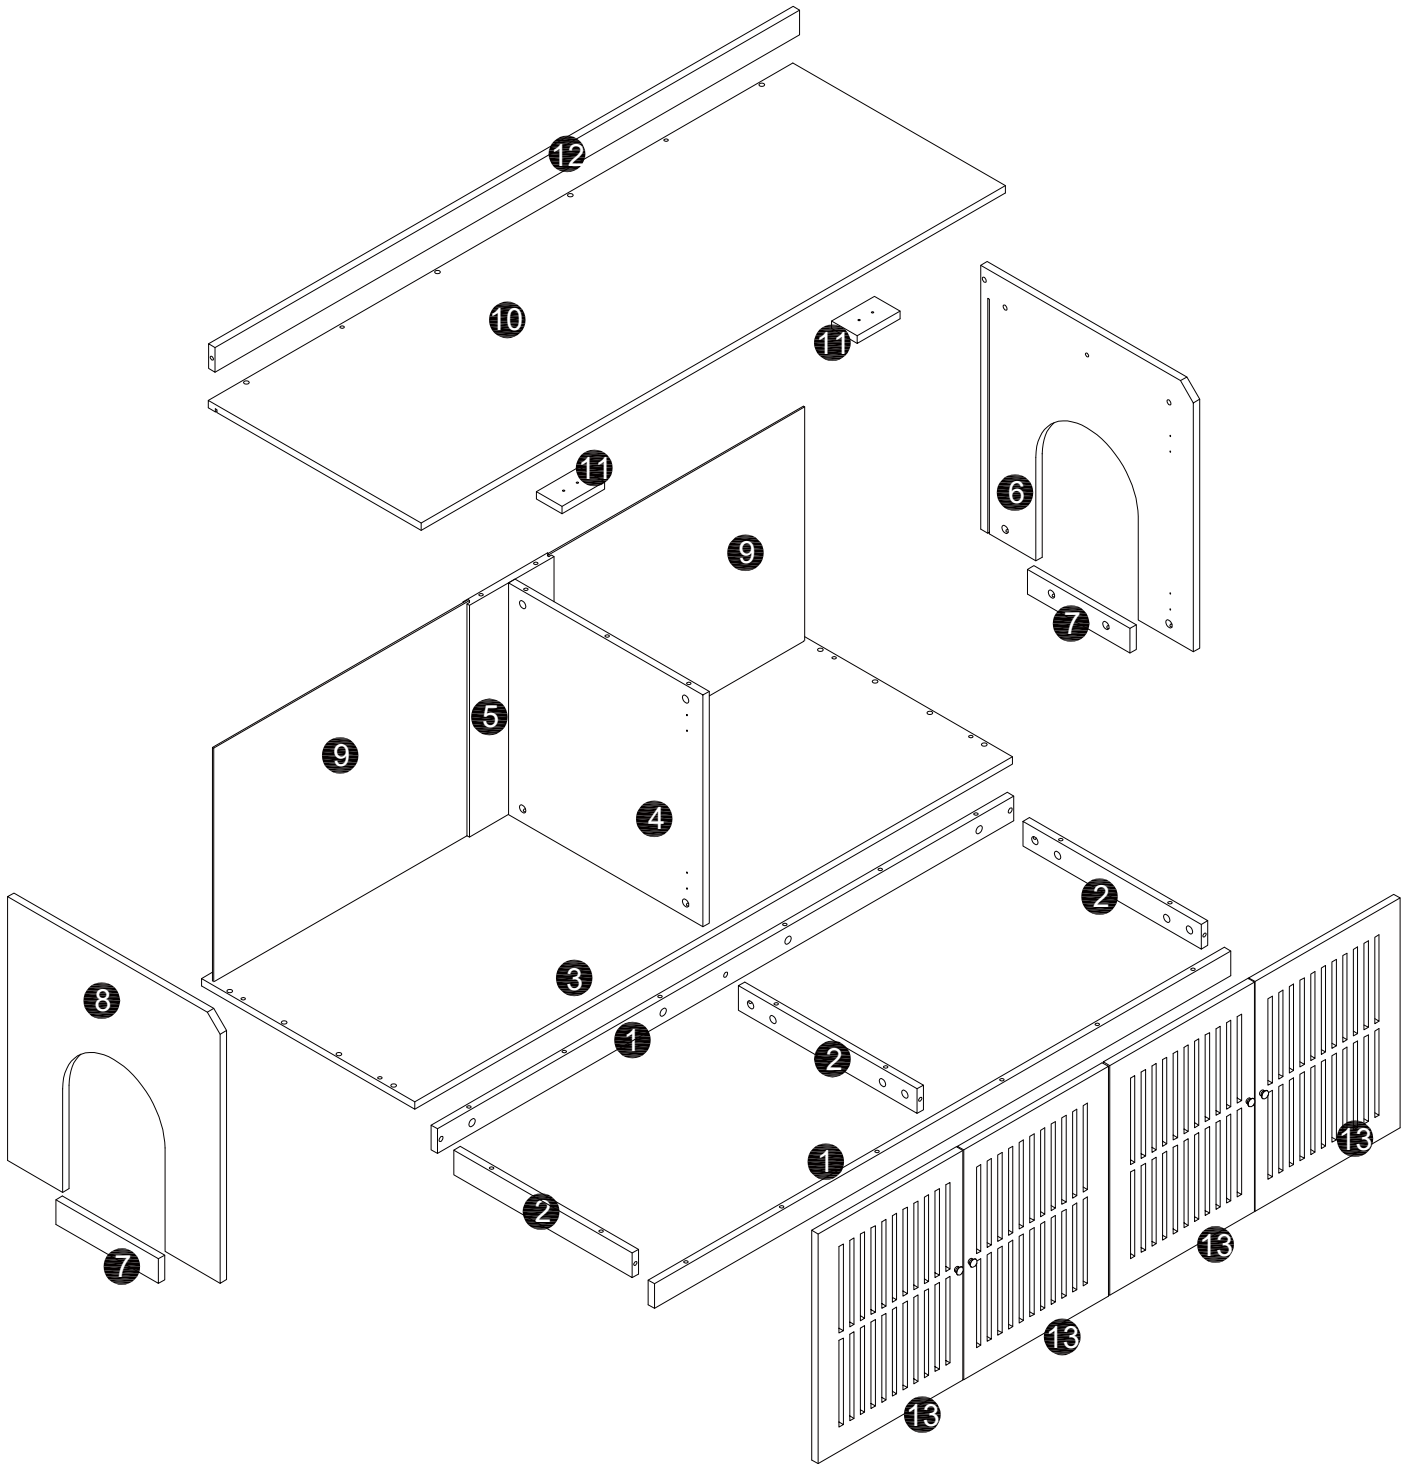






⚠ Caution





Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.
Contact us for a free replacement if you encounter any damaged or missing parts.


Parts List

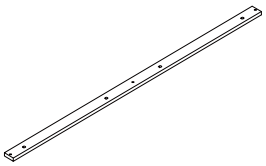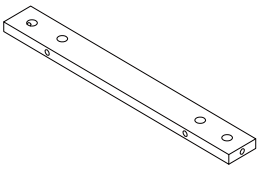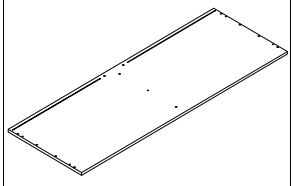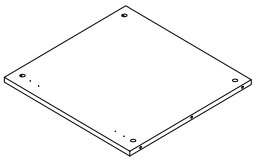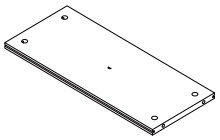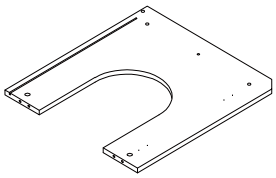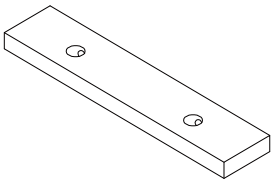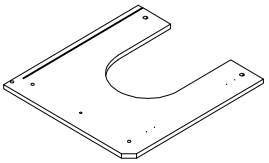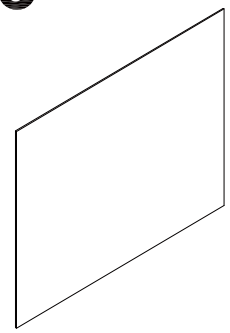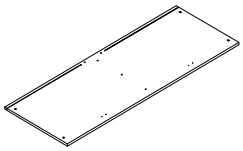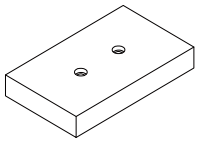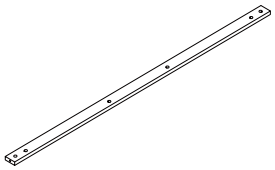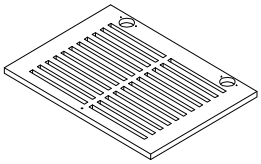1  2 pcs	2  3pcs	3  1 pc	4  1 pc	5  1 pc
6  1 pc	7  2 pcs	8  1 pc	9  2 pcs	10  1 pc
11  2 pcs	12  1 pc	13  4pcs		

Hardware List

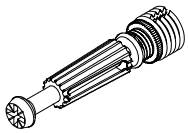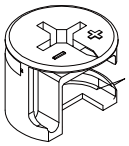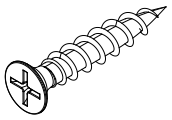
A	B	C	D	E	F
					
M6x35mm	Ø15x12mm	Ø8x30mm	Ø3.5x14mm	Ø3.5x25mm	M4x18mm
46 pcs	46 pcs	14 pcs	58 pcs	4 pcs	4 pcs

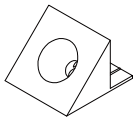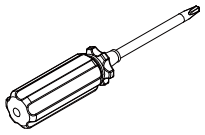G	H	I	J	K	M
					
Ø7x38mm	Screwdriver				
10 pcs	4 pcs	1 pc	1 pc	10 pcs	4 pcs


N					
					
4 pcs					

Installation of Cams and Pins

Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

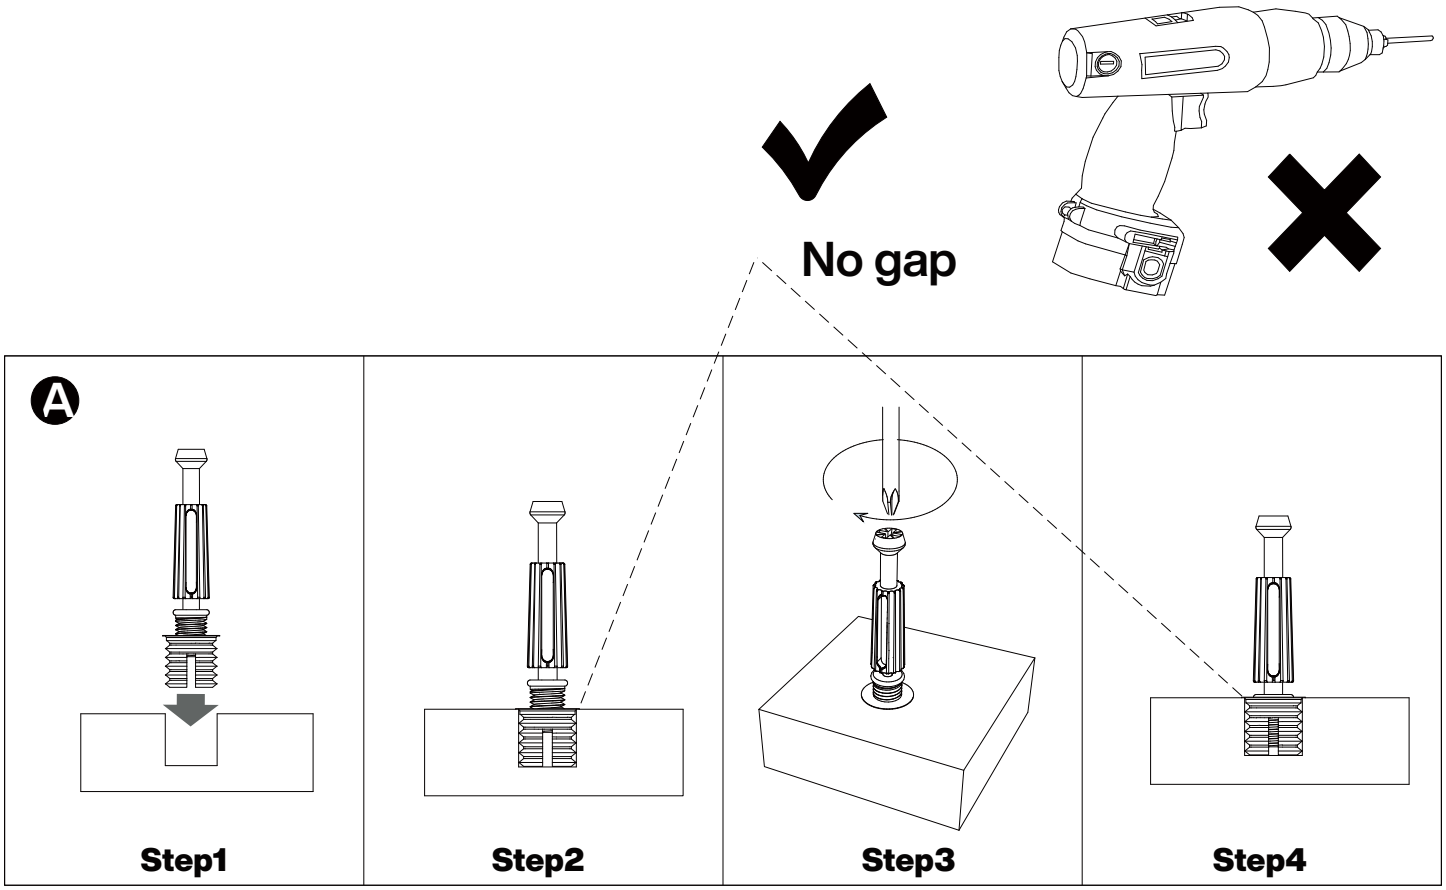


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

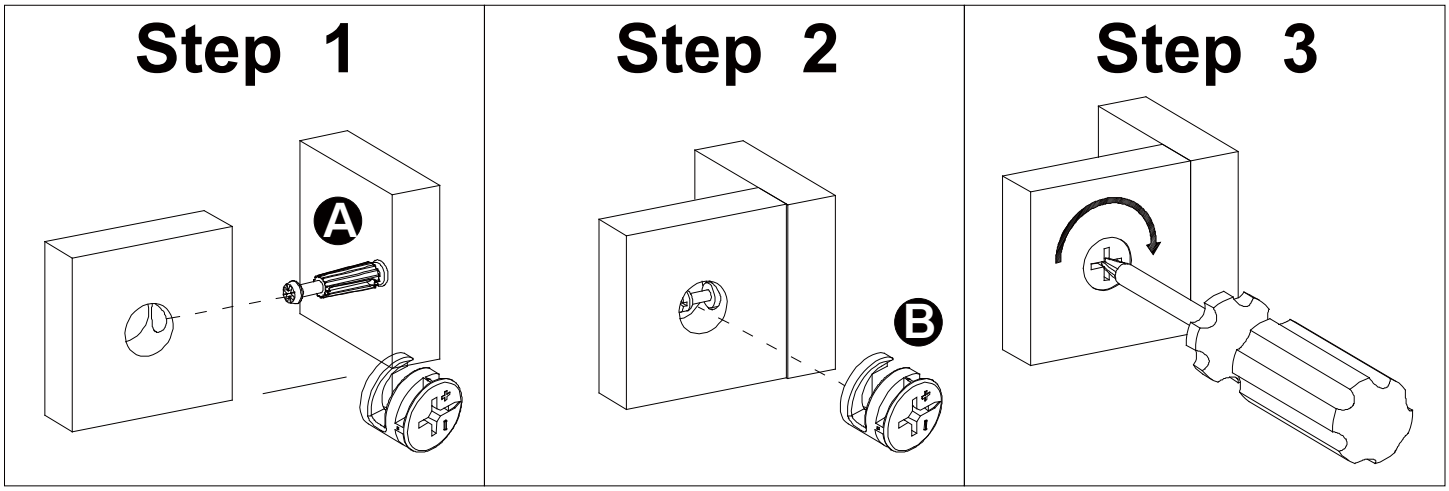


1

A

M6x35mm
6 pcs

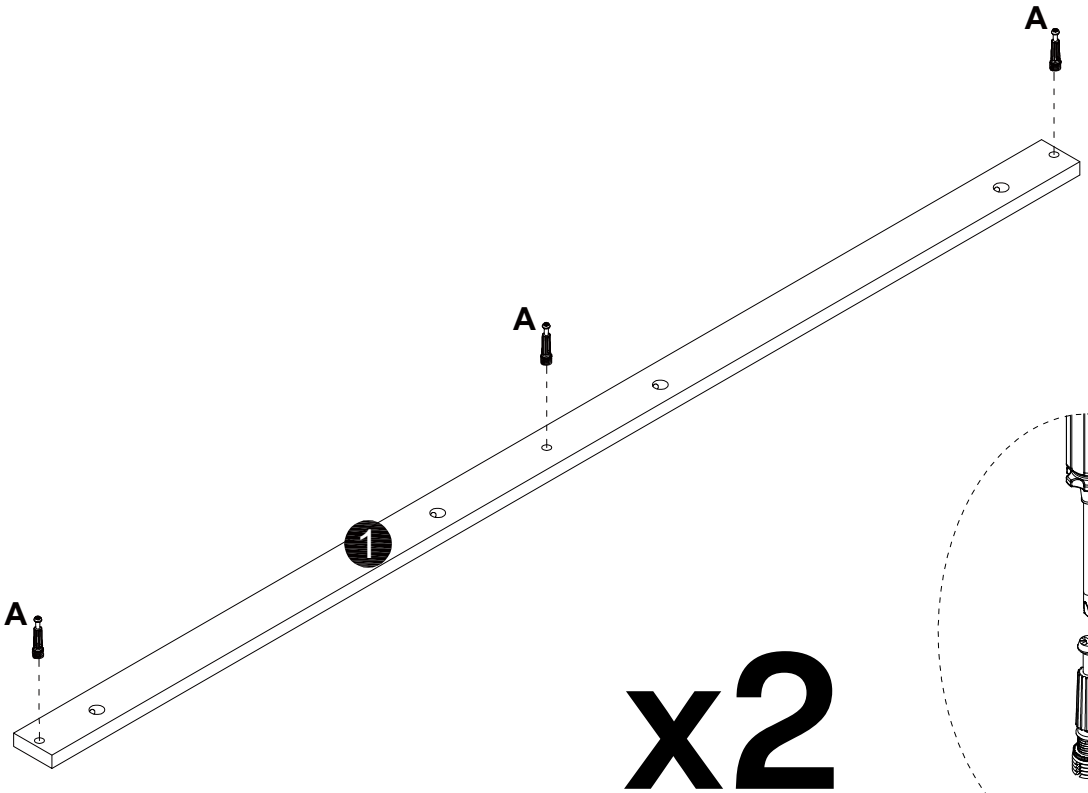


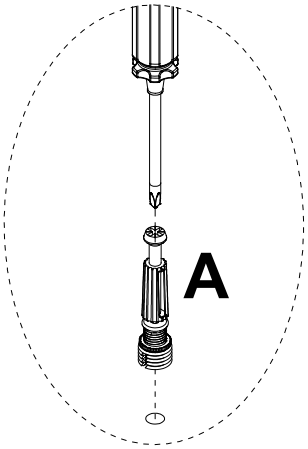


2


B

Ø15x12mm
3 pcs

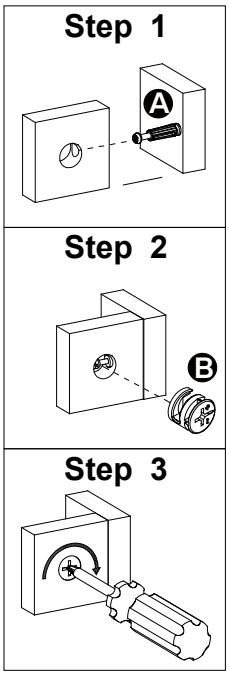

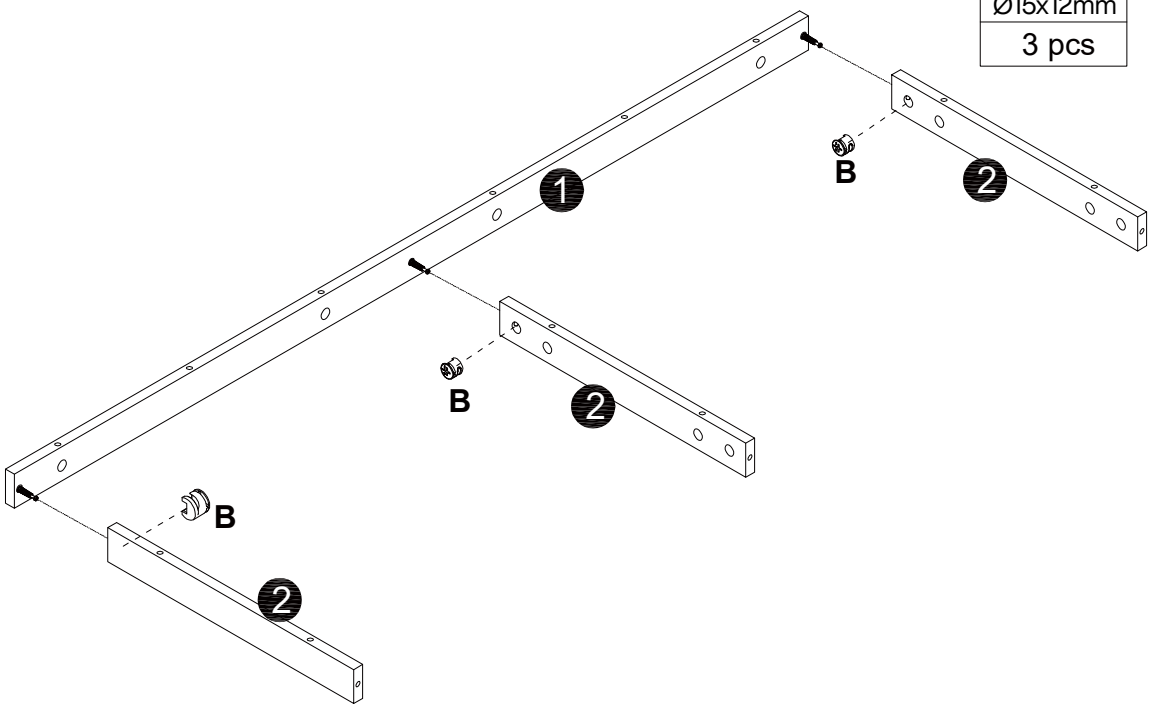


3

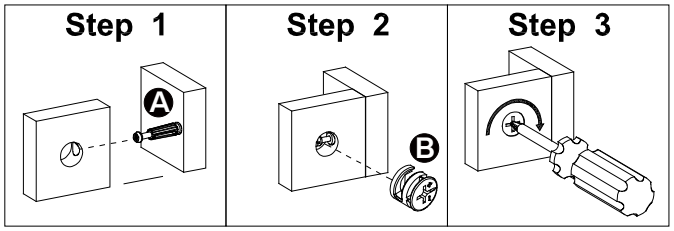



B


Ø15x12mm
3 pcs

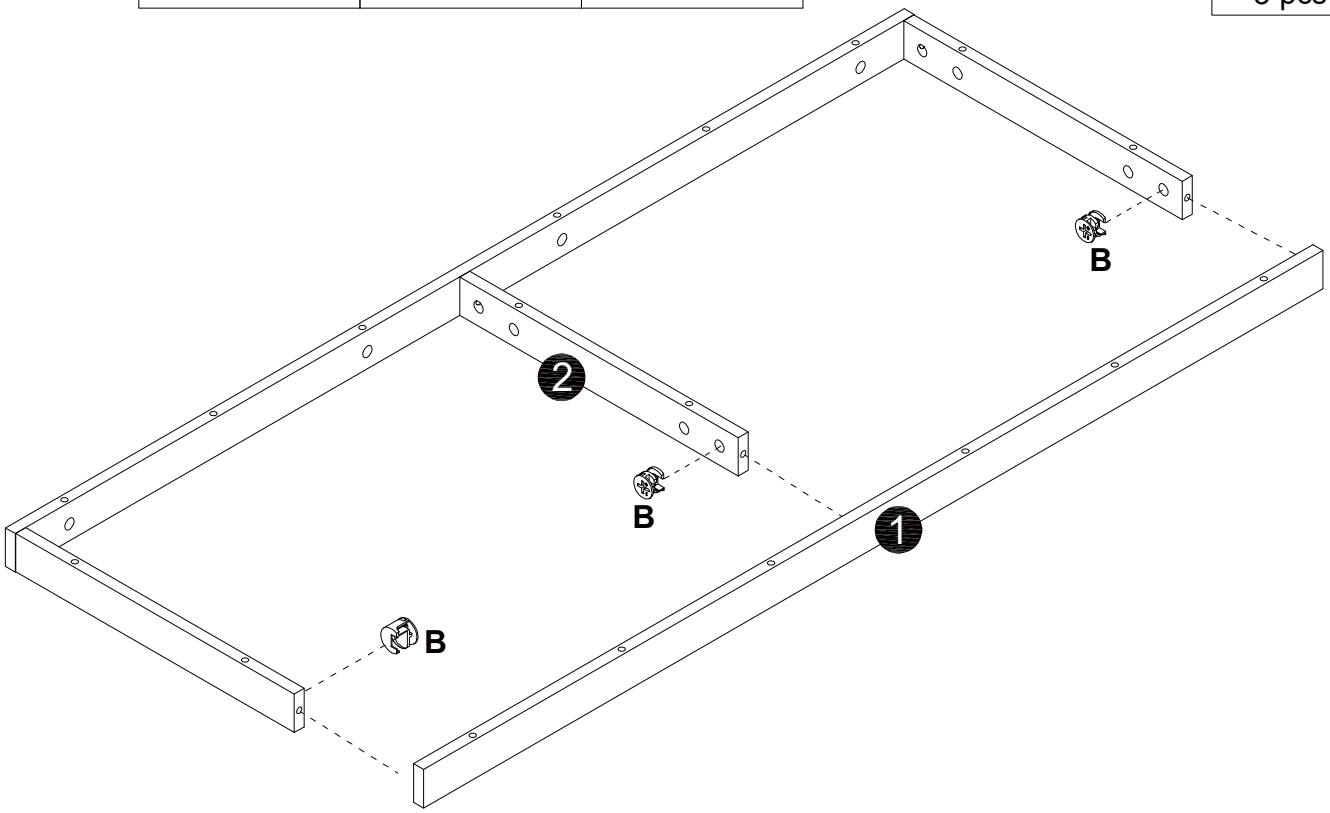

4

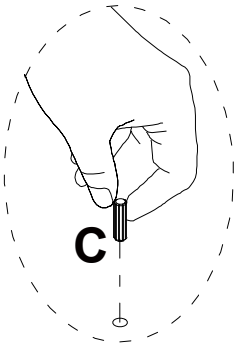


A	C
	
M6x35mm	Ø8x30mm
14 pcs	4 pcs

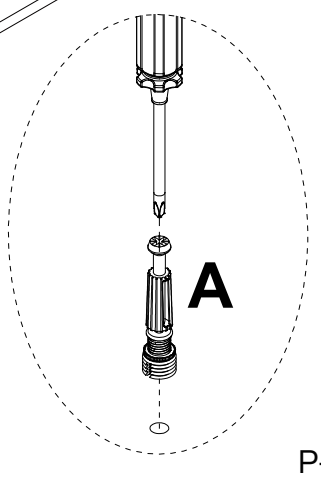


5


B

Ø15x12mm
14 pcs

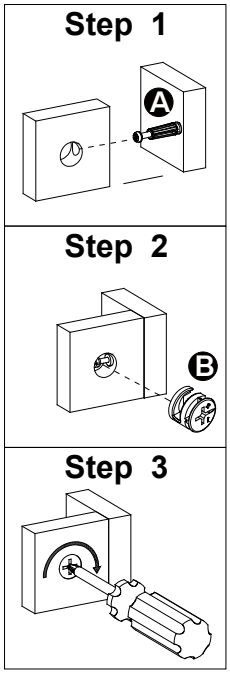

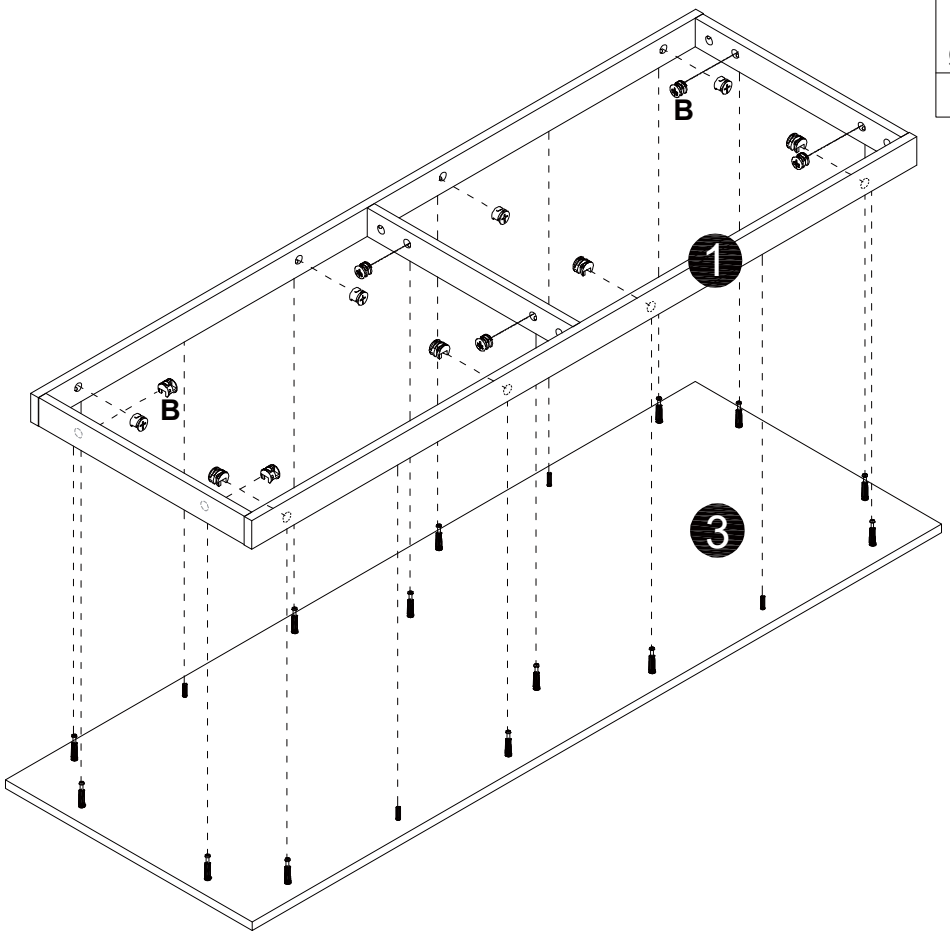



6

A	C	K
		
M6x35mm	Ø8x30mm	
12 pcs	5 pcs	10 pcs


⚠ Caution! Tap lightly


7

A	C
	
M6x35mm	Ø8x30mm
4 pcs	1pcs

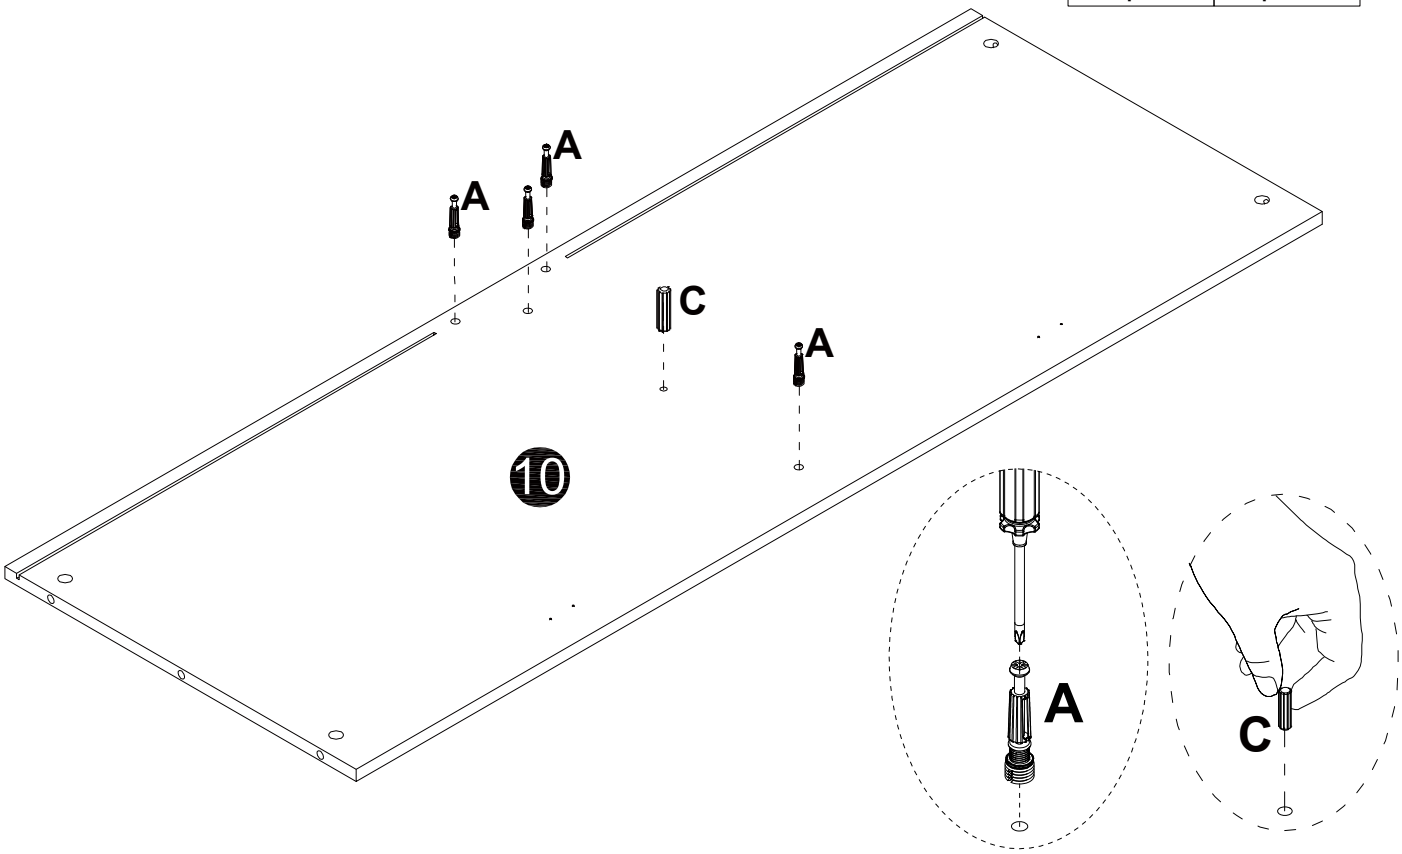



8


E

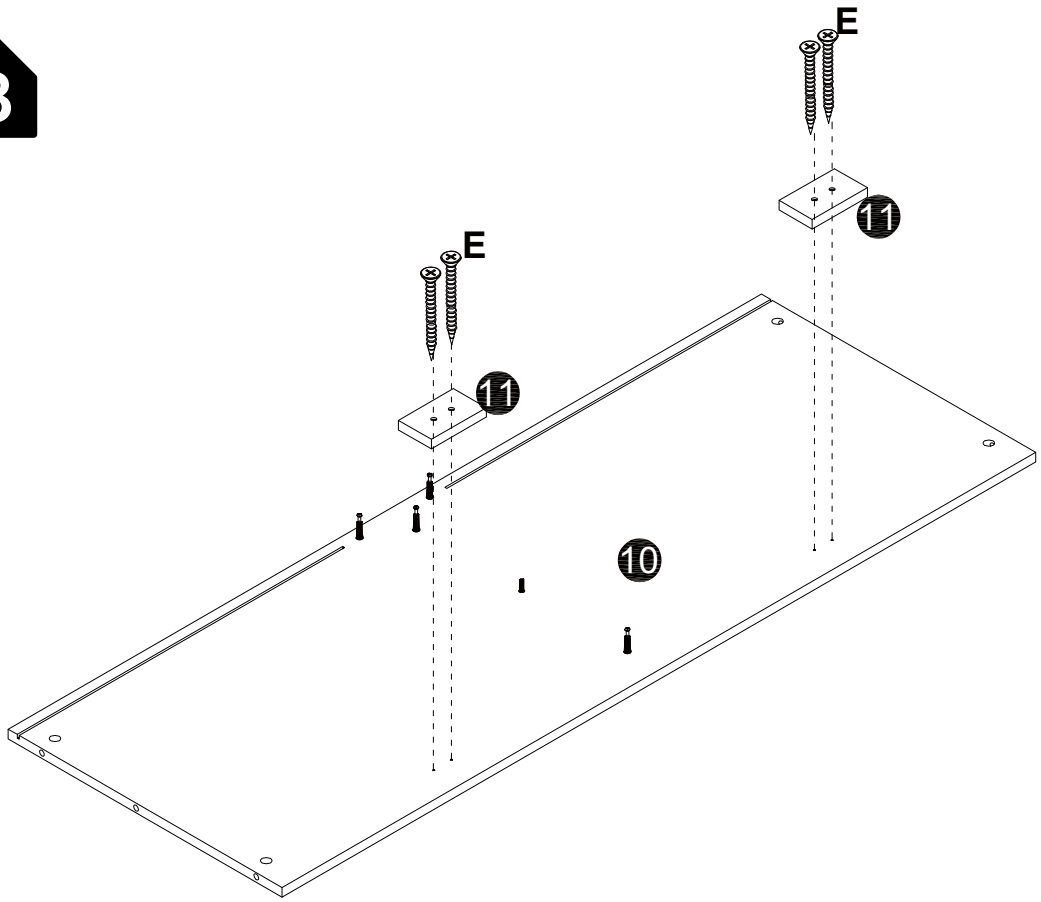Ø3.5x25mm
4pcs




9

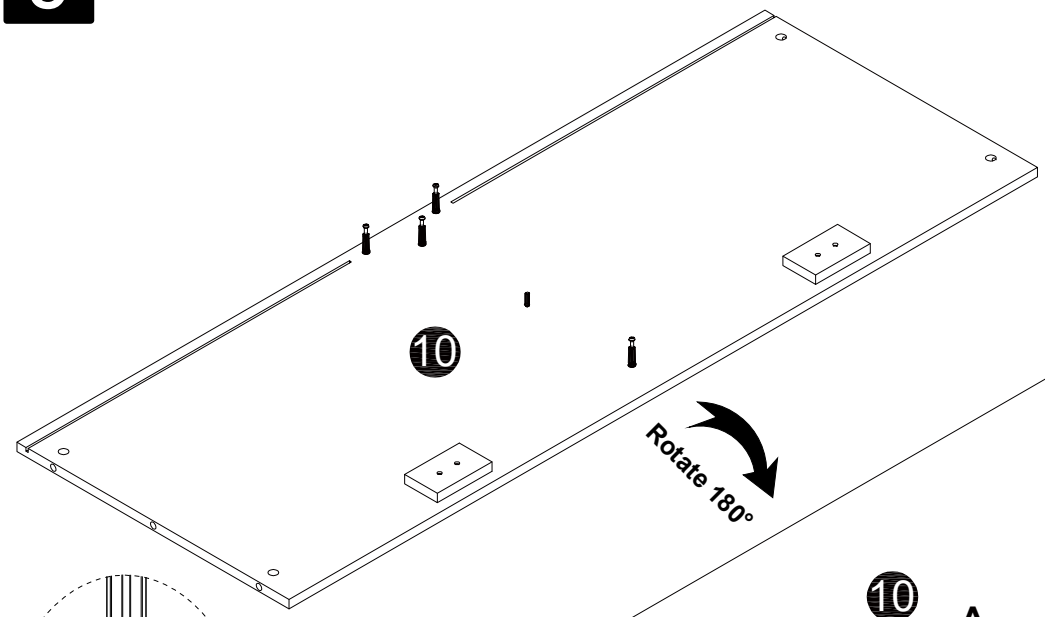
A	C
	
M6x35mm	Ø8x30mm
4 pcs	2pcs

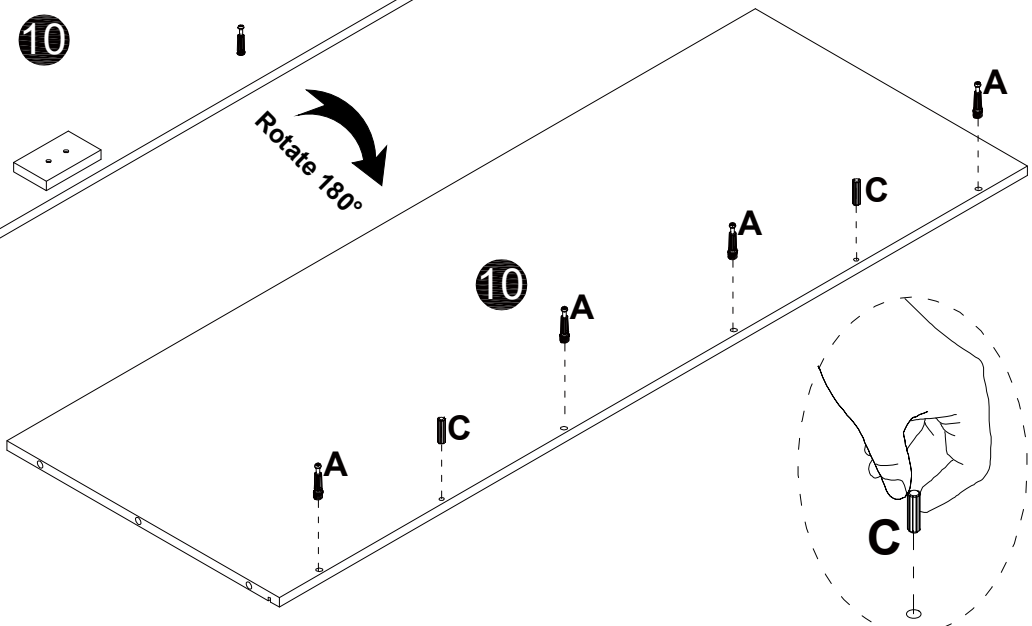



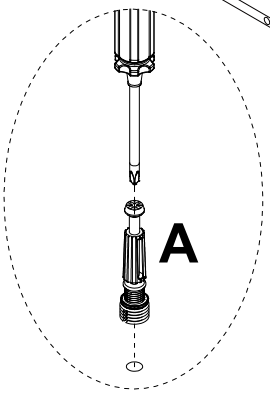


10

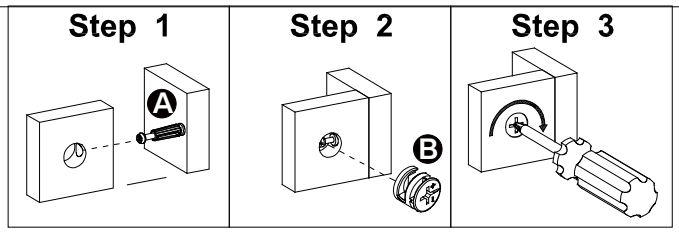

B


Ø15x12mm
14 pcs

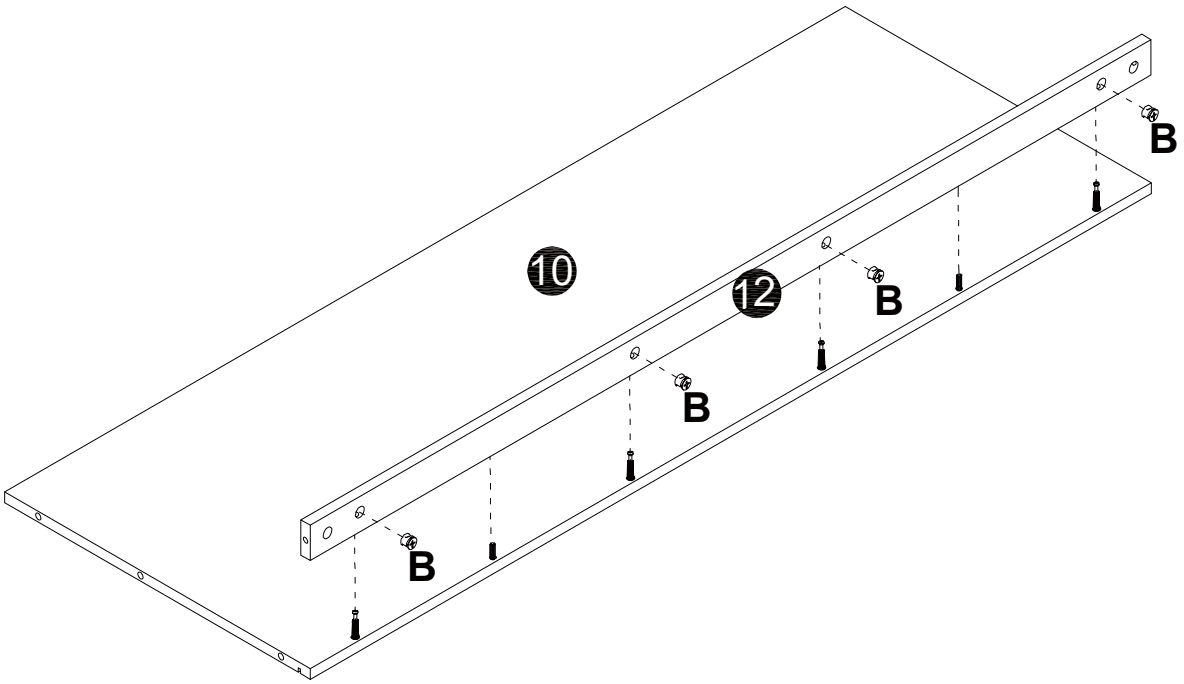

11

I


Ø7x38mm
1 pc

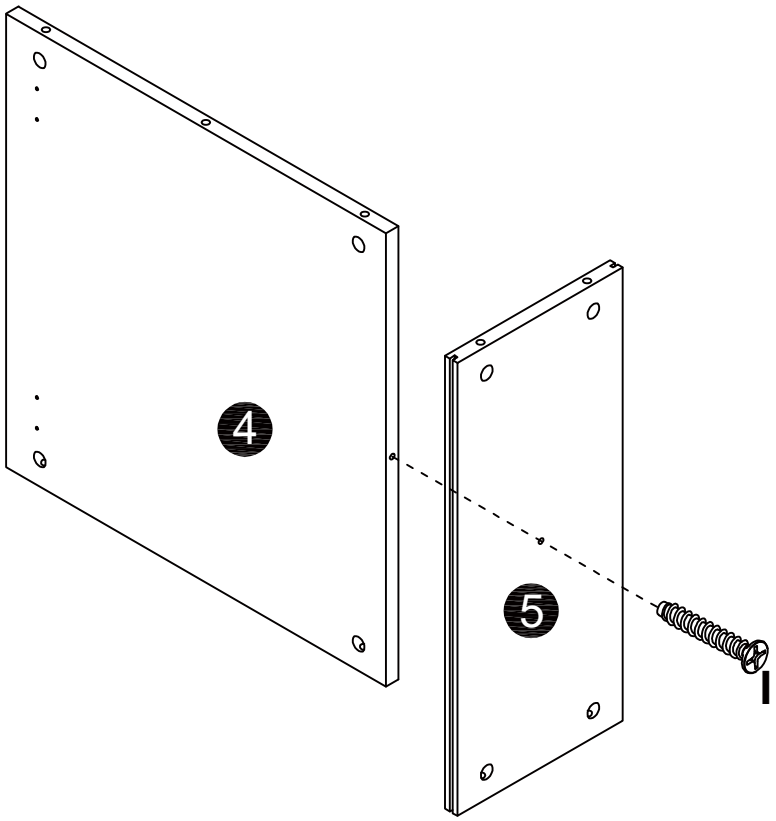


12


B

Ø15x12mm
4 pcs

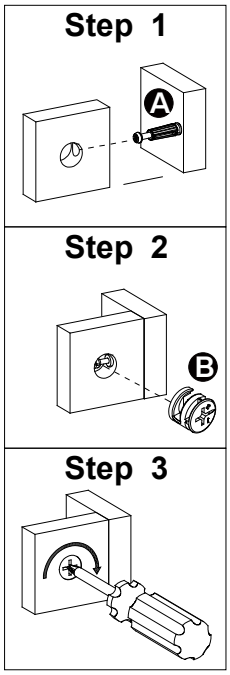

13


A	C
	
M6x35mm	Ø8x30mm
6 pcs	2 pcs

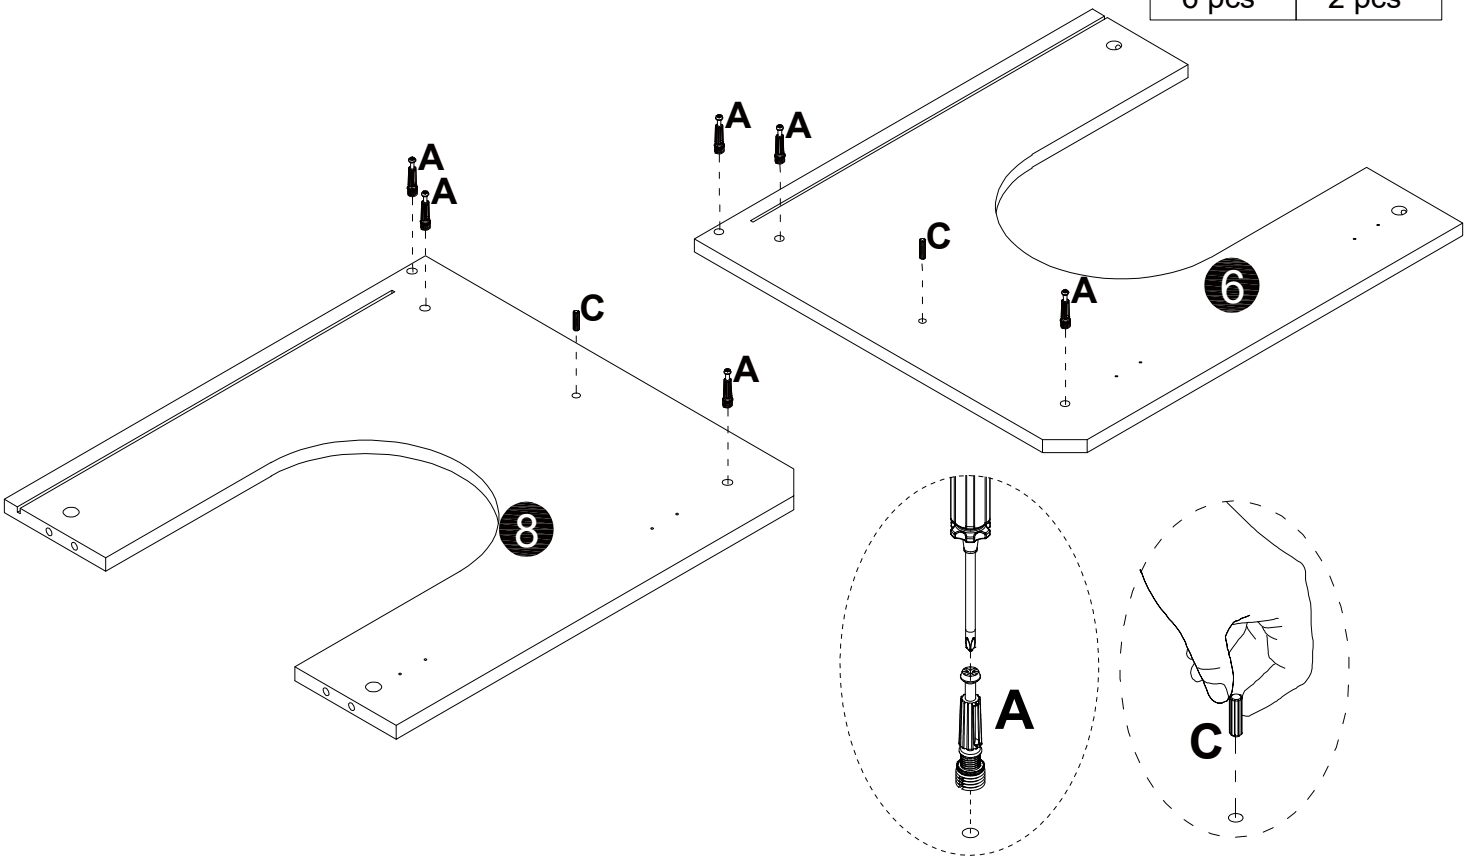


14

B

Ø15x12mm
6 pcs

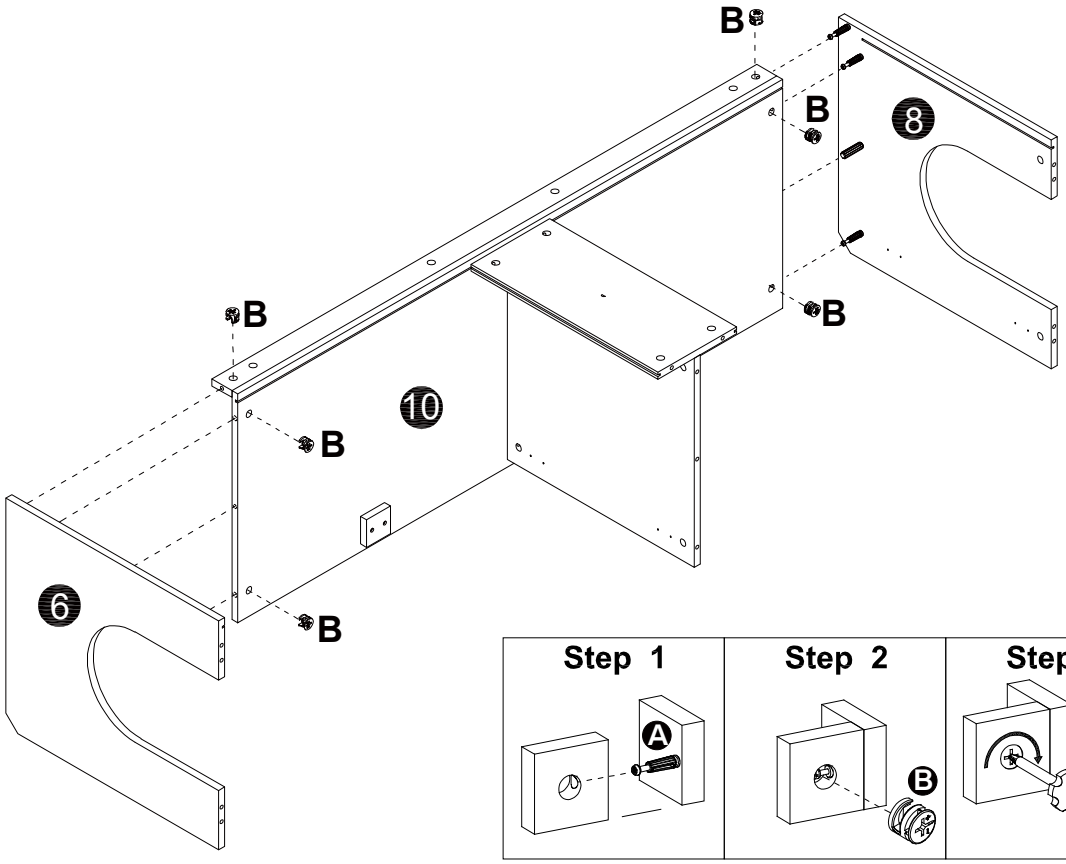


15

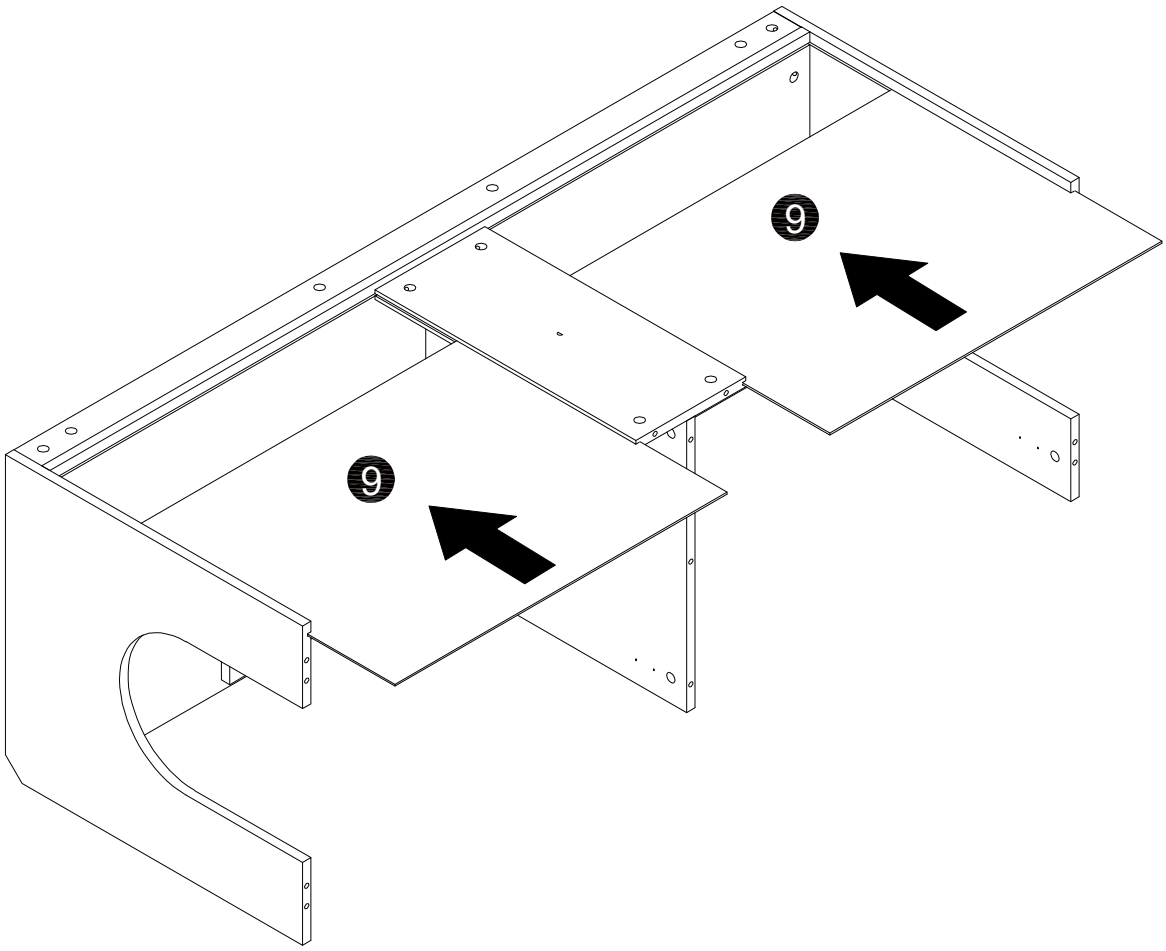



16

B

Ø15x12mm
6 pcs

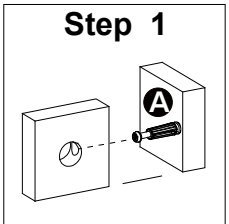

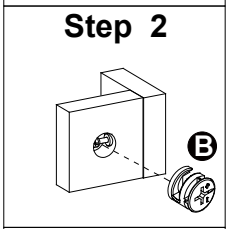


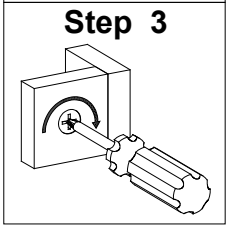


17

B

Ø15x12mm
4 pcs

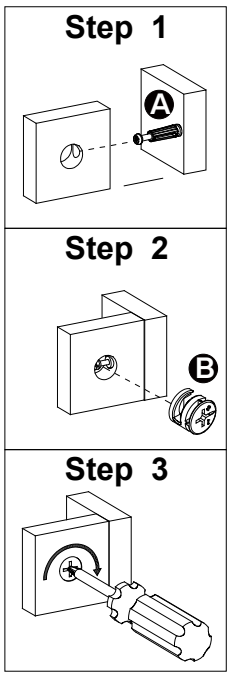


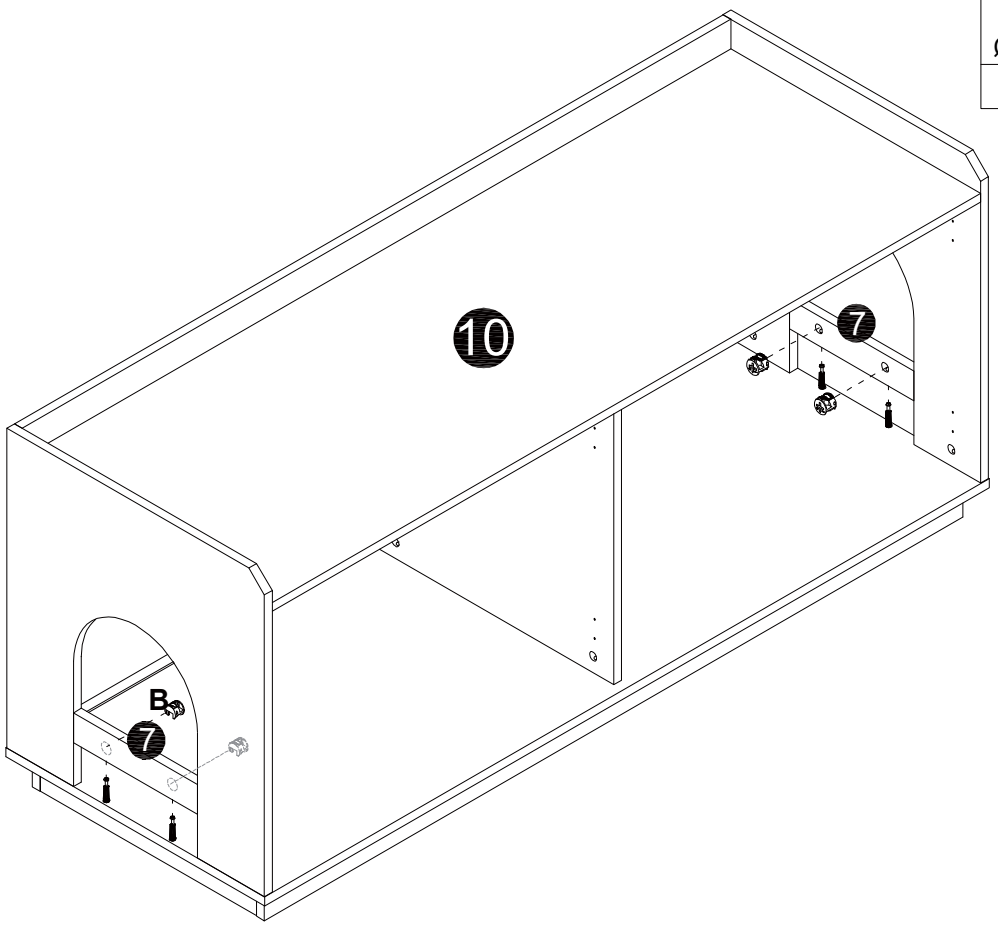


18


G	D
	
	Ø3.5x14mm
8 pcs	8 pcs


19

D	M
 Ø3.5x14mm	
8 pcs	4 pcs
F	**H**
	
2 pcs	2 pcs

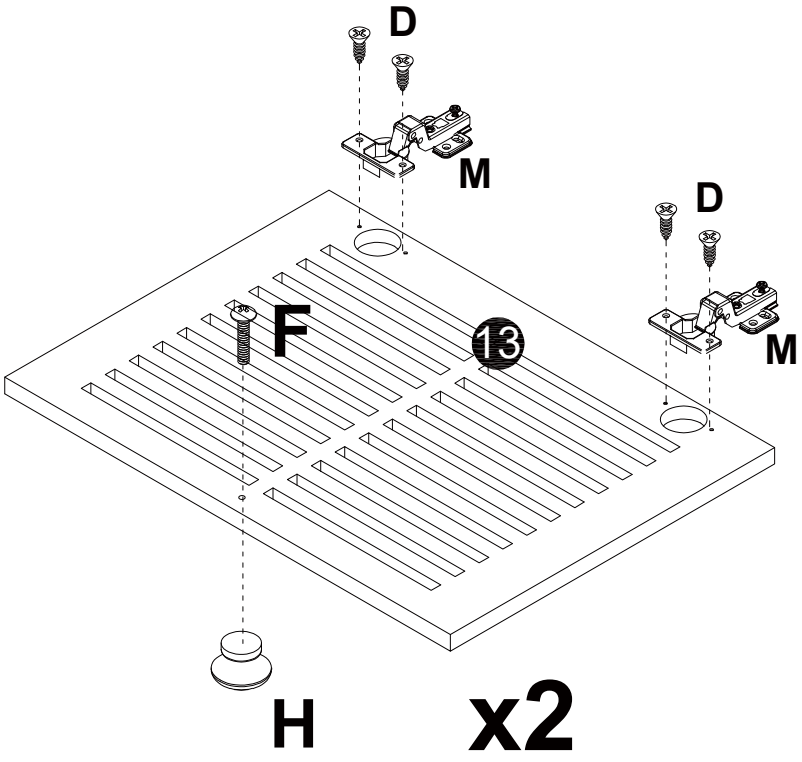

20


D	N
 Ø3.5x14mm	
8 pcs	4 pcs
F	**H**
	
2 pcs	2 pcs

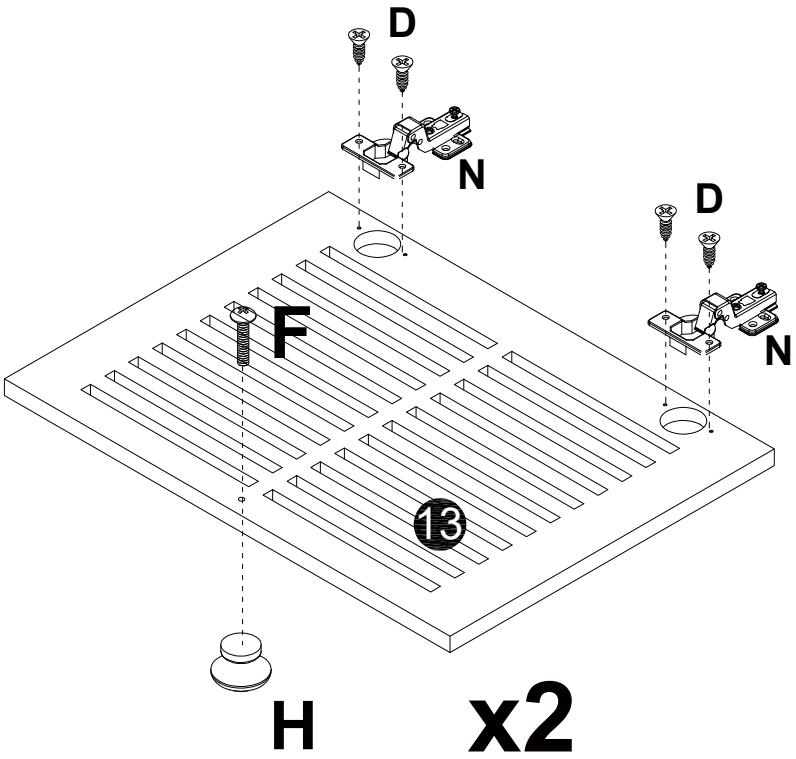

21

D

Ø3.5x14mm
16 pcs

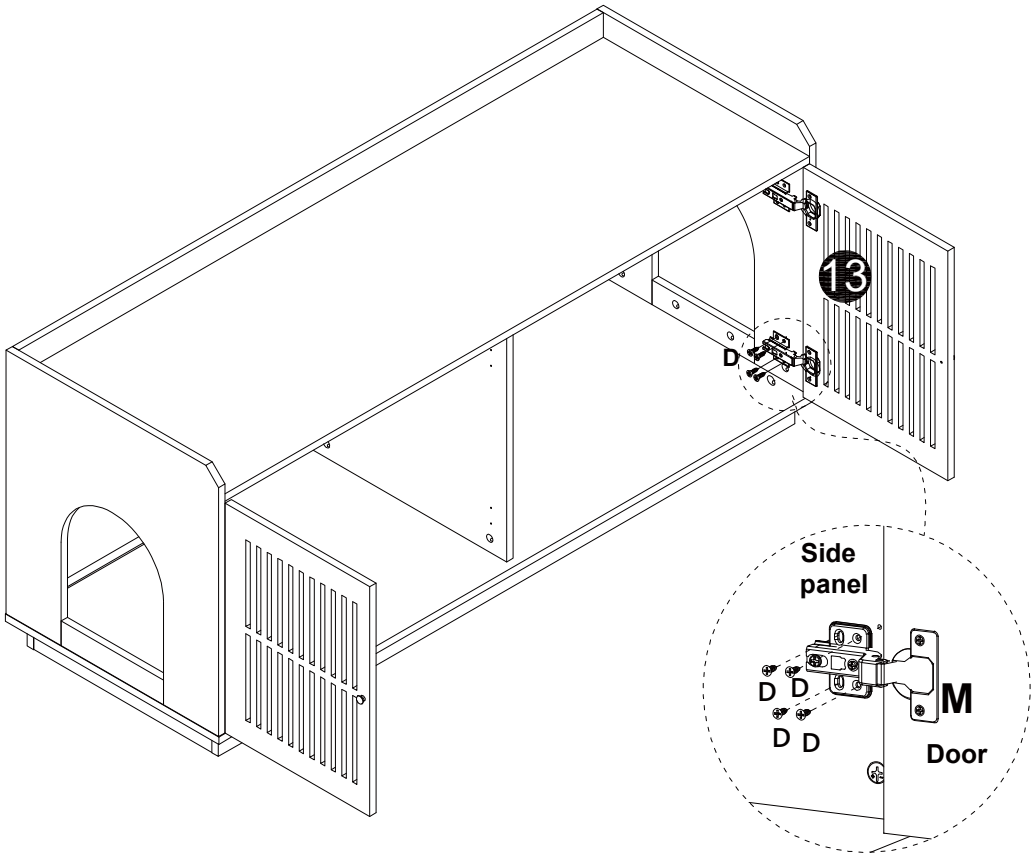


To prevent the door hinge from falling off, please install 4 screws

22

D


Ø3.5x14mm
16 pcs

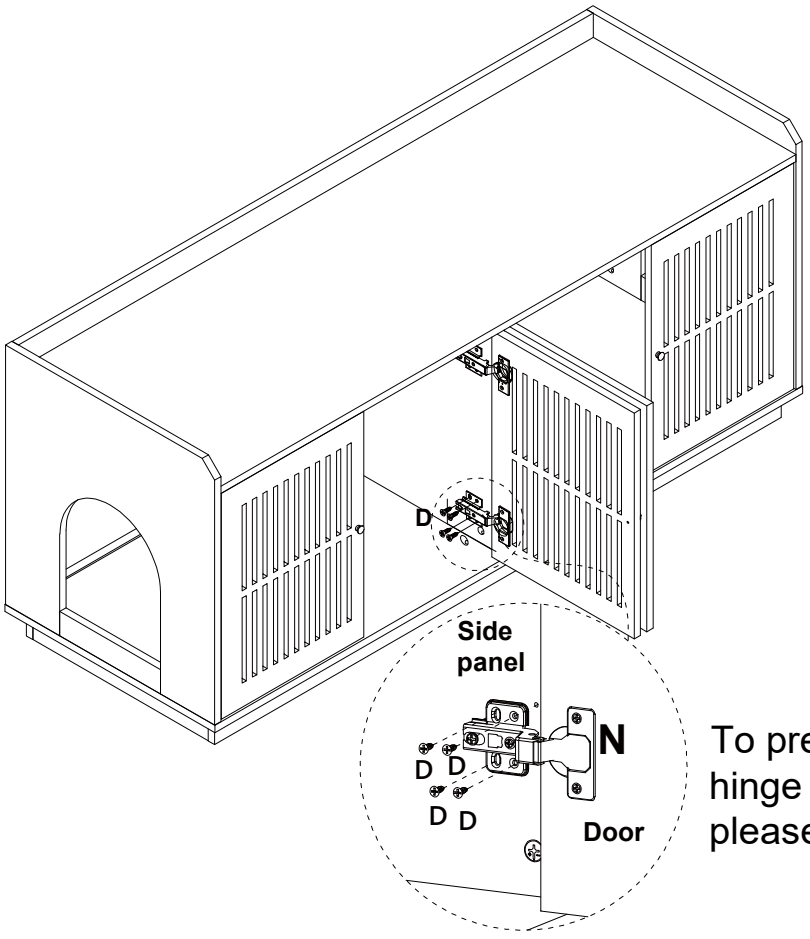

To prevent the door hinge from falling off, please install 4 screws

Step 1


Open the door.

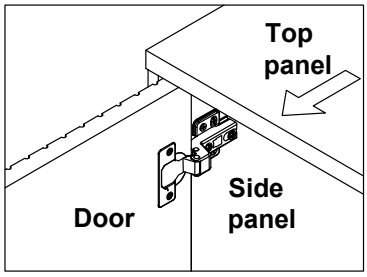

ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).


Step 2


Adjust the door panel to be flush with side panel and top panel edge.

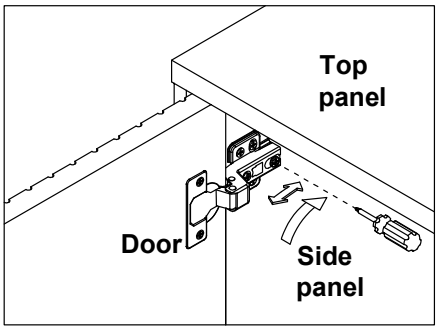

**Loosen the screw indicated a little,
adjust the hinge to the right position (see step 2a & 2b),
then tighten the screw.**


Step 2a MOVE DOOR OUT

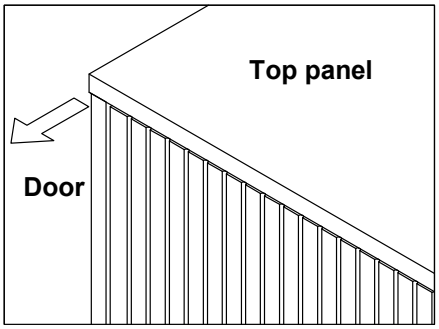


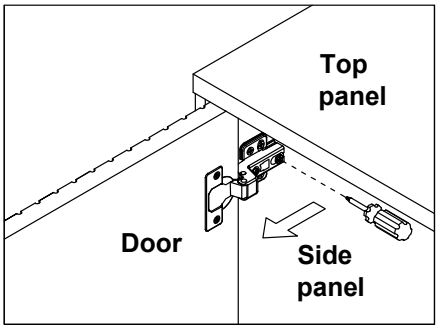

Pull the hinge forward a little.

Step 2b MOVE DOOR IN

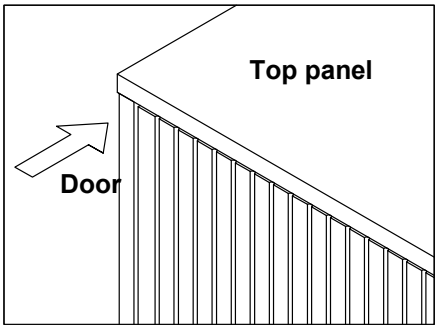


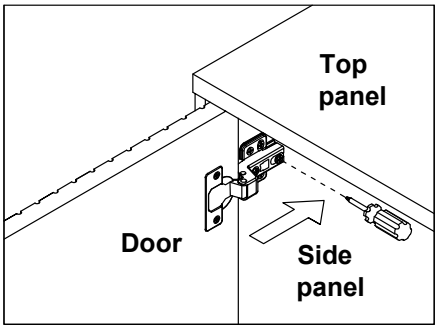

Push the hinge back a little.


Step 3


Adjust the gap between the door panel and the side panel.

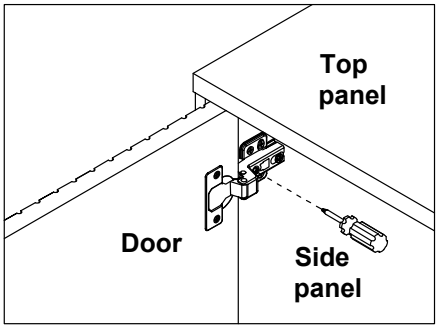

**Loosen or tighten the screw indicated a little to adjust the gap between the door panels,
adjust the hinge to the right position (see step 3a & 3b).**


Step 3a MOVE DOOR LEFT

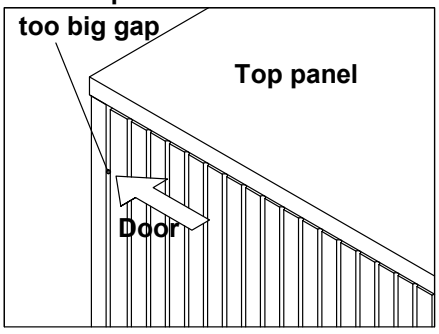


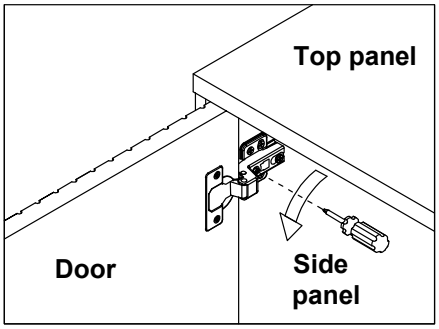

Turn the screw clockwise a little as shown to make the gap smaller

Step 3b MOVE DOOR RIGHT

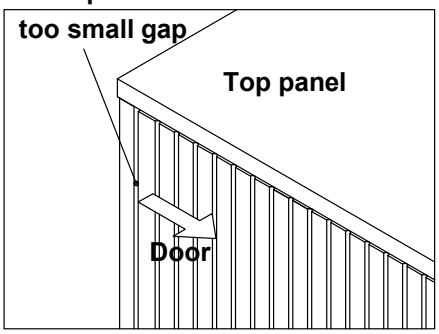

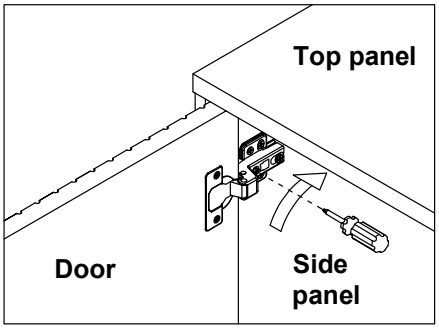

Turn the screw counterclockwise a little as shown to make the gap bigger

Thank you for your support!

