

Thank you for purchasing


Before you start, here are some helpful advice:

- 1. We suggest you spend a short time reading through this leaflet and then follow the simple step-by-step instructions.
- 2. Owing to the size and weight of the Sideboard, we recommend that it is assembled by two adults, on a carpeted or padded area, in the room that it is intended for. Approximate assembly time: 60 minutes.
- 3. Please do not use any tools other than those provided or recommended in these instructions.
- 4. Please do not throw away any of the packaging or instructions until you have checked all the components and hardware and the furniture is fully assembled.
- 5. Assemble all components loosely until advised to tighten. Depending on use, it may be necessary to tighten the components from time to time, so please save the tools that have been provided.
- 6. Please keep all pieces out of reach of children.

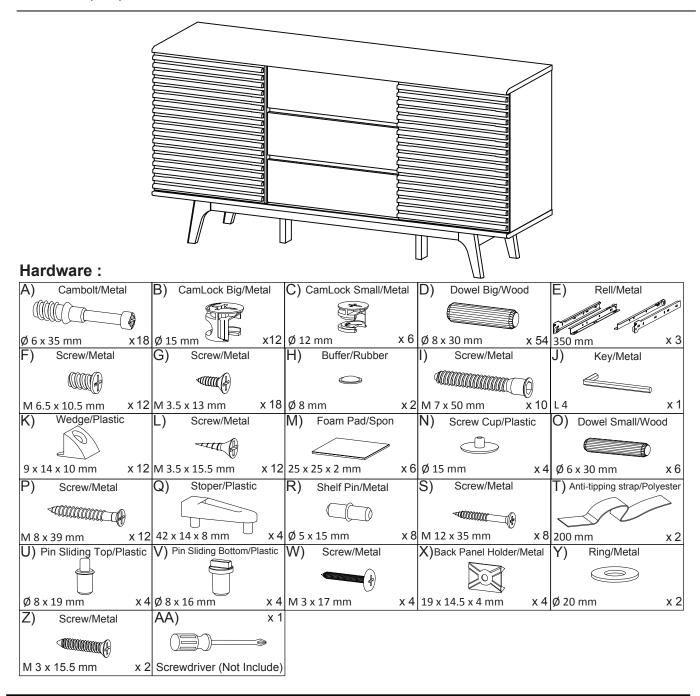


Components:

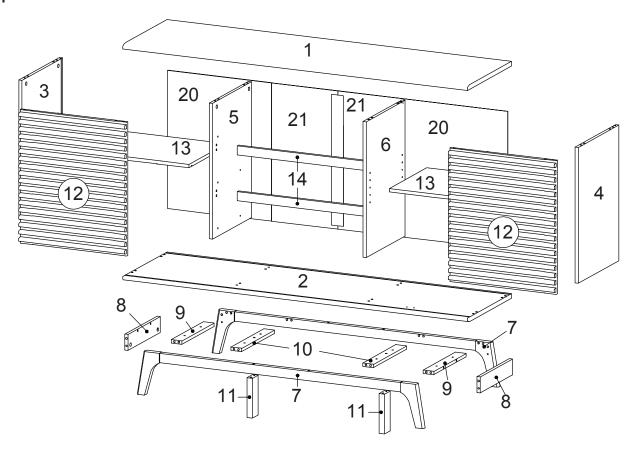

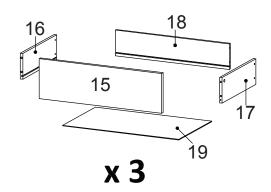


1	Top Board	x1	2	Bottom Board	x1	3	Side Board Left	x1	4	Side Board Right	x1
5	Centre Board Left	x1	6	Centre Board Right	x1	7	Assembly Leg	x2	8	Support 2	x2
9	Support 3	x2	10	Support 4	x2	11	Leg	x2	12	Frame Door	x2
13	Adjustable Shelf	x2	14	Front Skirt	x2	15	Front Drawer	x3	16	Side Drawer Left	х3
17	Side Drawer Right	х3	18	Back Drawer	х3	19	Bottom Drawer	x2	20) Back Board 1	x2
21	Back Board 2	x2									


STEP 1:

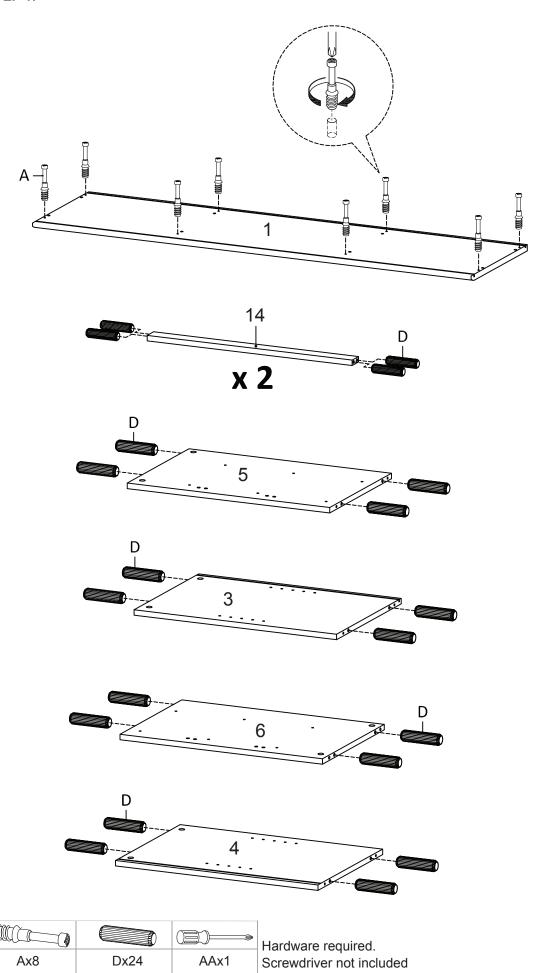


STEP 2:

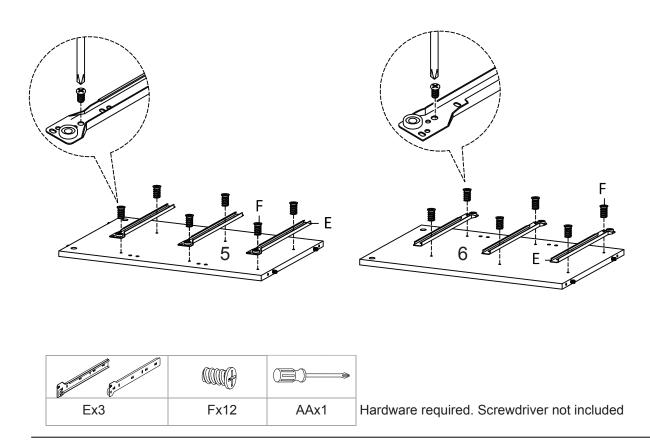


STEP 3:

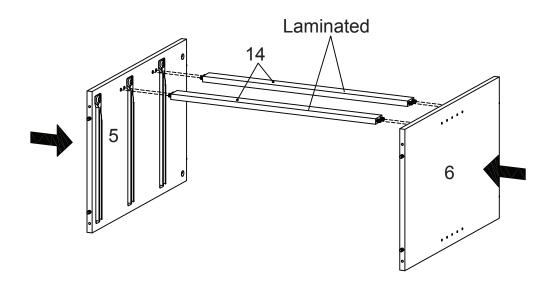


STEP 4:

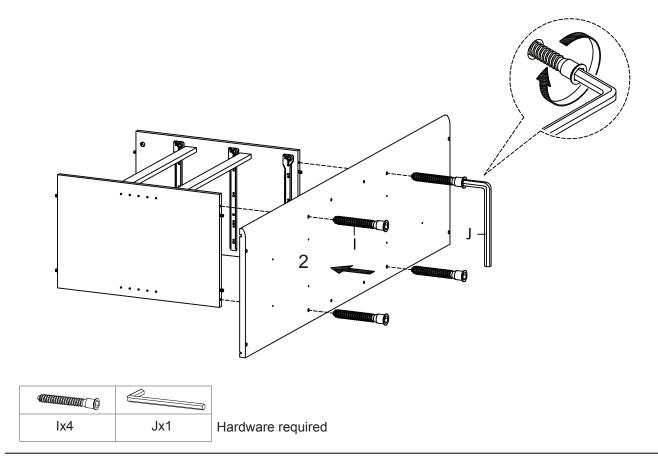


STEP 5:

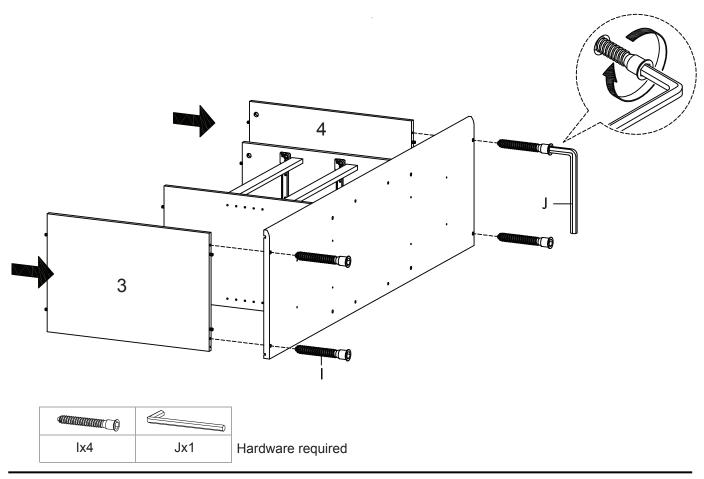

STEP 6:

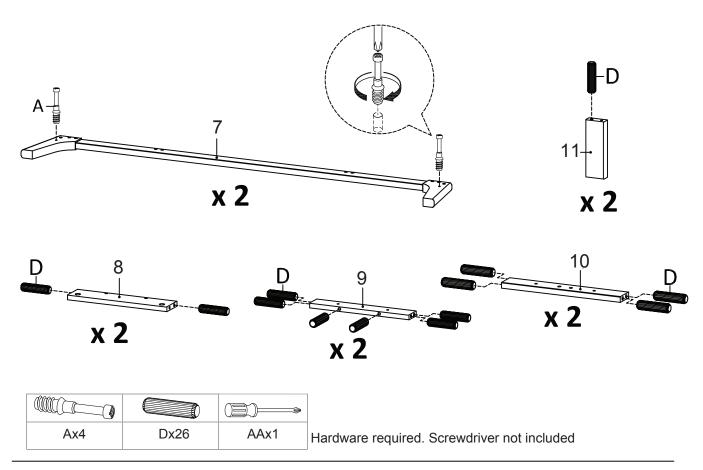


STEP 7:

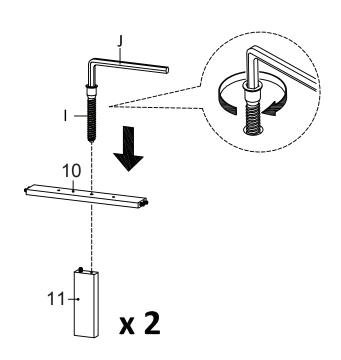





Hardware required

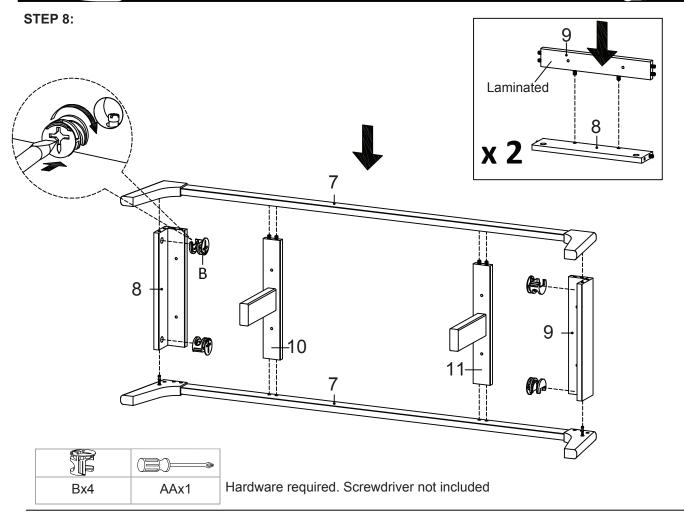


STEP 9:

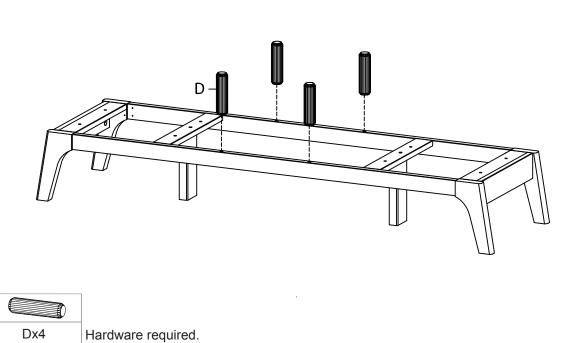


STEP 10:

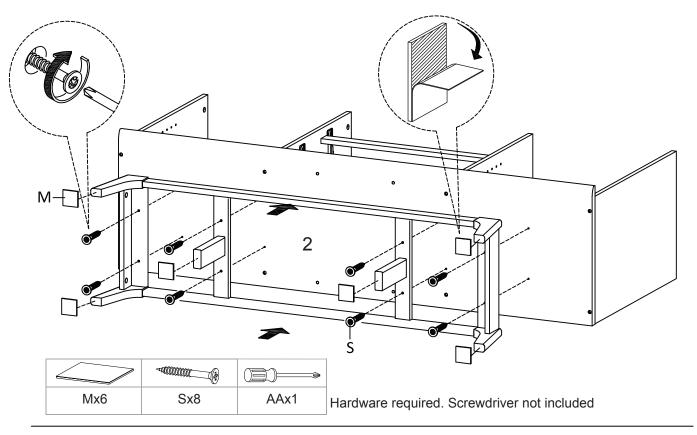

STEP 11:

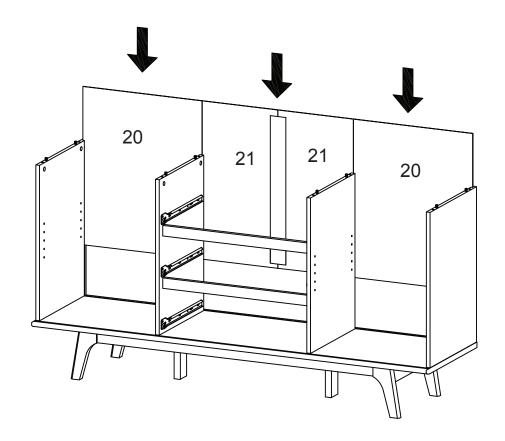


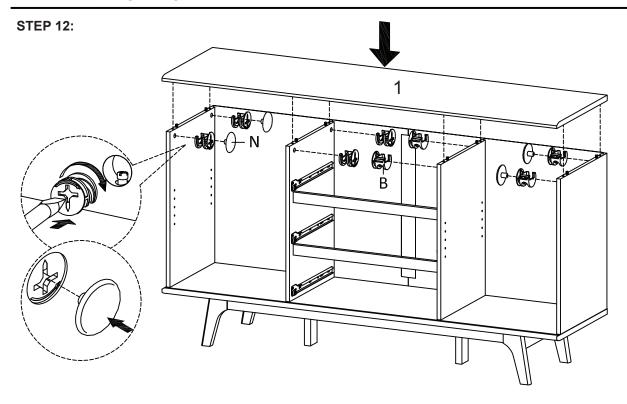

Bx8	Nx4	AAx1	

Hardware required. Screwdriver not included

STEP 13:

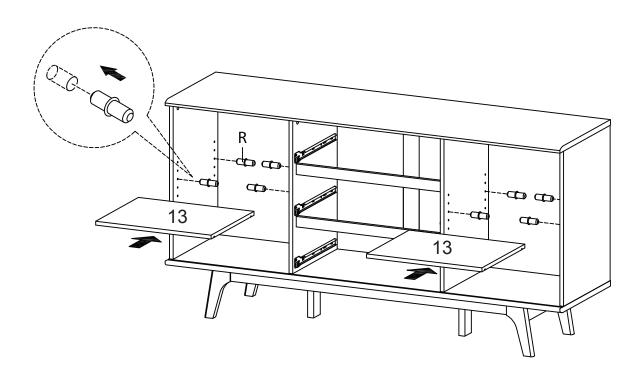




Px12


AAx1

Cx6


STEP 14:

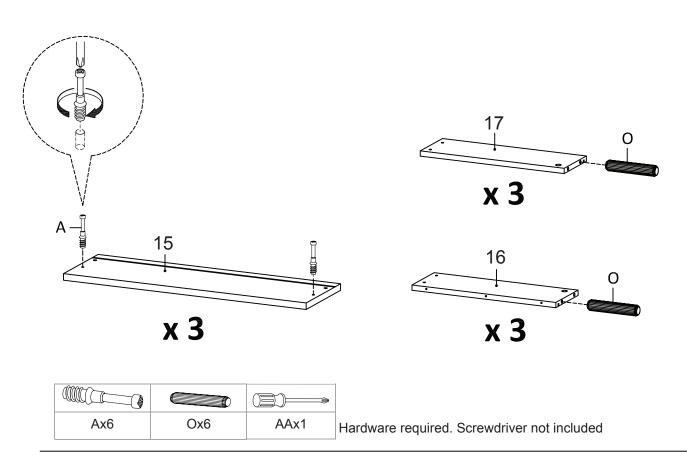

STEP 15:

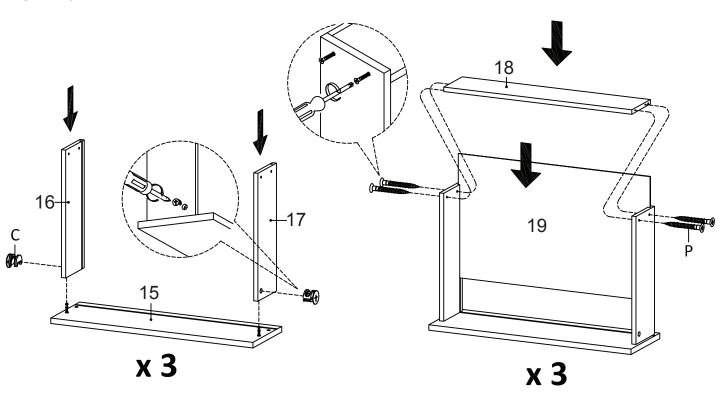


STEP 16:

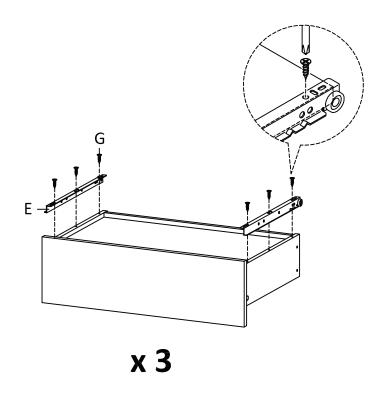


Ex3	Gx18	AAx1	١	

Hardware required. Screwdriver not included


STEP 17:

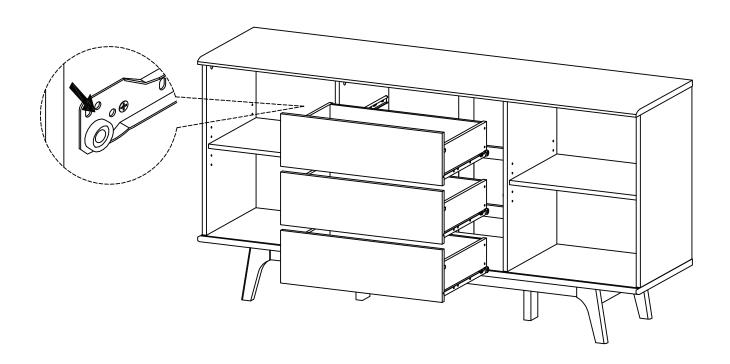


STEP 18:

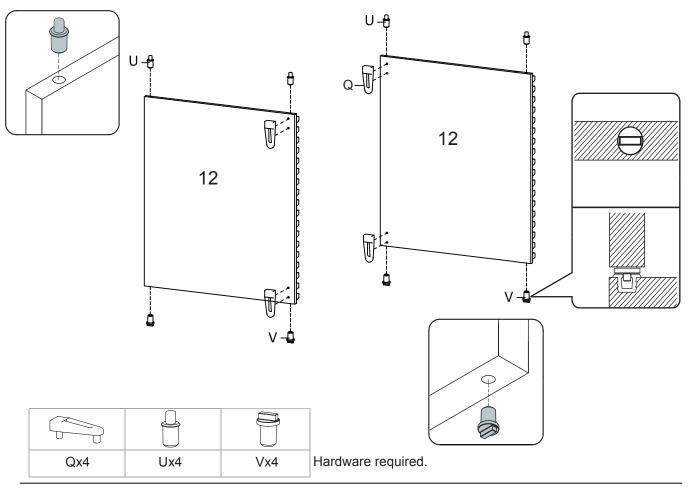


STEP 19:

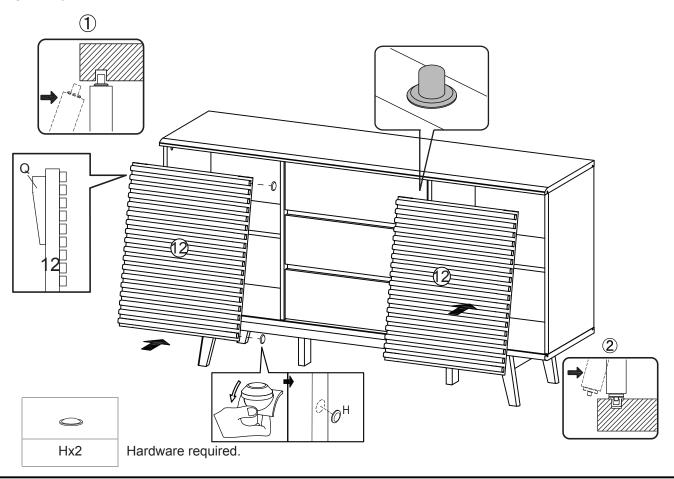

STEP 20:

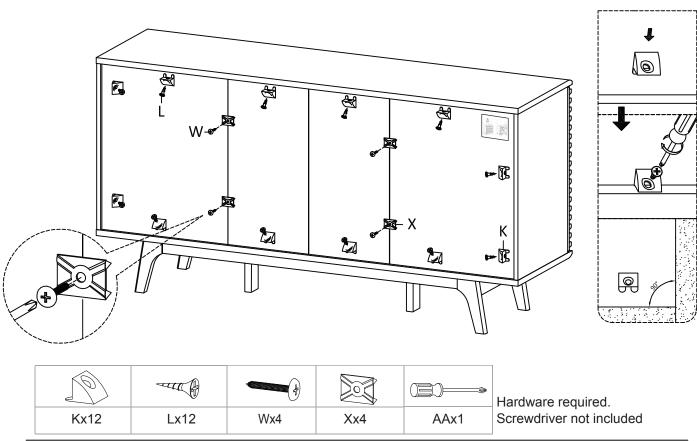


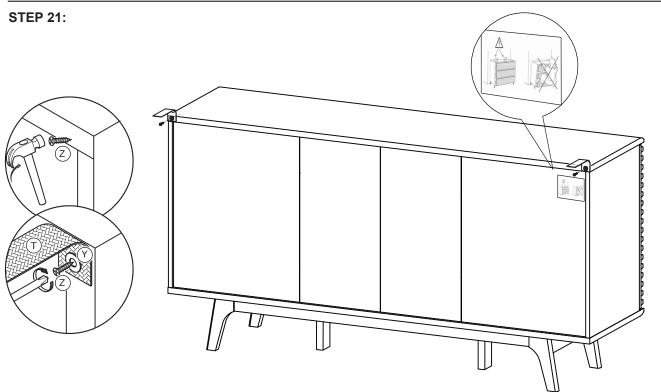


			□	
Tx2	Yx2	Zx2	AAx1	

Hardware required. Screwdriver not included

STEP 22:

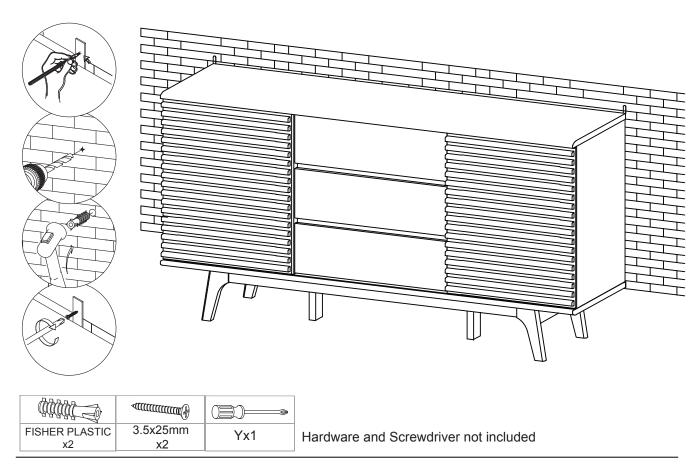

STEP 23:

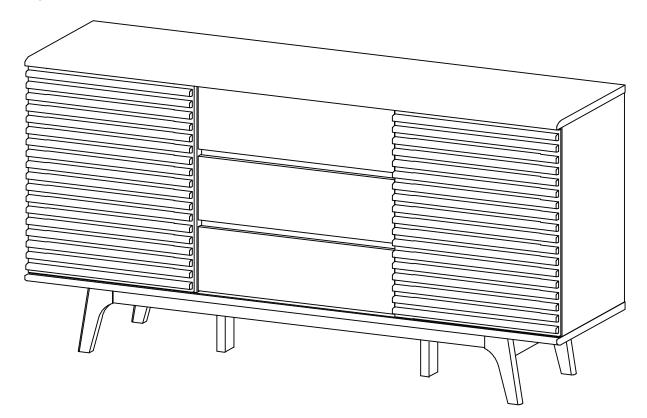

Assembly is complete. The Sideboard is ready to enjoy now!