

Full Length Mirror (3 Installation Options)



1.Free standing



2.Lean to the Wall



3.Hang on the Wall

Installation Instruction

Before
Installation

- * Please make sure that the installed wall is a load bearing wall.
- * Please attention to avoid wires or water pipes when drilling.

Product and accessories



Mirror*1



Power adapter*1



Non-slip Mat*6



Screw*2
Expansion screw*2

Tools Needs (not included in the package)



Pencil



Electric Drill



Hammer



Tapeline




Level Ruler



Screwdriver

1. Free standing

Attach two non-slip pads to the bottom of the mirror, and stretch the support under the ground directly .

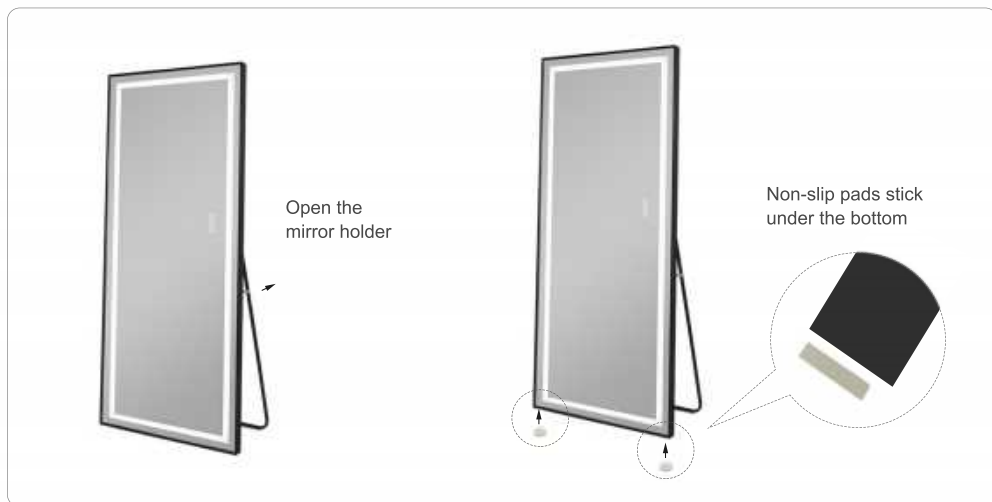

2. Lean to the Wall

Put two non-slip pads on the bottom, two non-slip pads on the back of the mirror, put the bracket away and lean against the wall.




3. Hang on the Wall


Remove the support of the mirror, paste four anti-slip pads on the back of the mirror, drill holes on the wall and screw into the expansion tube and screws, and hang the mirror on the screws



Unscrew with a screwdriver and remove the support

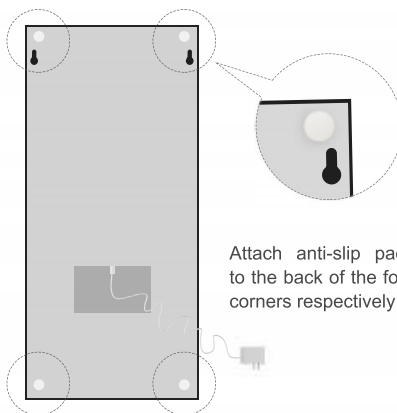

Attach anti-slip pads to the back of the four corners respectively

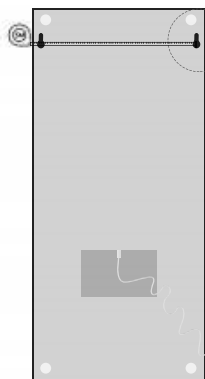

Use a tape measure to measure the distance between the two hanging holes



Make 6-8mm holes in the wall, screw in the expansion tube and screws, and hang the mirror on the screws