

CHAIR DO THIS TWO TIMES

A1		Left Arm Rest	1PC
A2	0	Right Arm Rest	1PC
В		Seat Back	1PC
С		Seat Base	1PC
D		M6 x 18 Socket Head Cap Screw	8PCS
Е		M6 x 40 Socket Head Cap Screw	4PCS
F	0	Washer	12PCS
G		adjusting knob	2PCS
Н		Linkage Rod	1PC

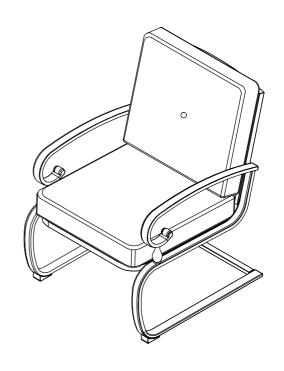

J	Allen Key	1PC
K	Back Cushion	1PC
L	Seat Cushion	1PC

Attach right arm rest (A2) to seat base (C) using M6 x 18 socket head cap screw (D) and washer (F) as shown. Attach right arm rest (A2) to seat back (B) using M6 x 40 socket head cap screw (D) and washer (F) as shown.

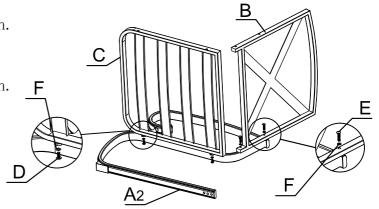


Loose attach all connections at the beginning, adjust alignments then fully tighten all joints

CHAIR


DO THIS TWO TIMES

2

Attach left arm rest (A1) to seat base (C) using M6 x 18 socket head cap screw (D) and washer (F) as shown. Attach right arm rest (A1) to seat back (B) using M6 x 40 socket head cap screw (D) and washer (F) as shown.

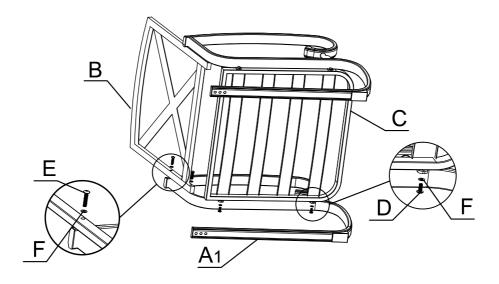

Attach left arm rest (A1) to Linkage Rod (H) using M6*18 socket head cap screw (D) and washer (F) as shown. twist the adjusting knob (G) after screws is tight as shown.

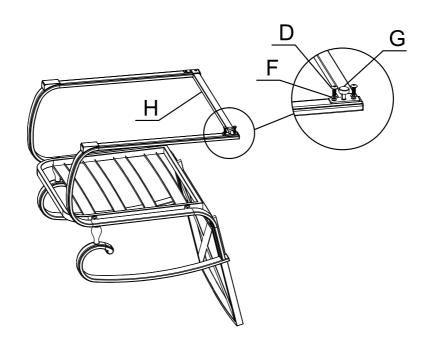

Loose attach all connections at the beginning, adjust alignments then fully tighten all joints


COFFEE TABLE

PART LIST	FIGURE	QUANTITY	DESCRIPTION
А		1 PC	TABLE TOP
В		4 PCS	LEG
С		1 PC	LEG CONNECTOR
D	(6)	12 PCS	BOLT (M6*25)
Е		12 PCS	FLAT WASHER
F		1 PC	ALLEN WRENCH

STEP 1


A. PLACE TABLE TOP (A) UPSIDE DOWN ON A FLAT, PROTECTED SURFACE.

B. ATTACH LEGS (B) TO TABLE TOP (A) WITH FLAT WASHER (E) AND BOLT (D) USING ALLEN WRENCH (F). DO NOT TIGHTEN COMPLETELY.

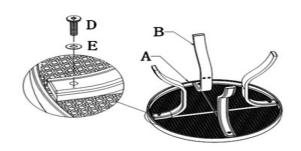

STEP 2

A. ATTACH LEG CONNECTOR (C) TO LEG (B) WITH FLAT WASHER (E) AND BOLT (D) USING ALLEN WRENCH (F). DO NOT TIGHTEN COMPLETELY.

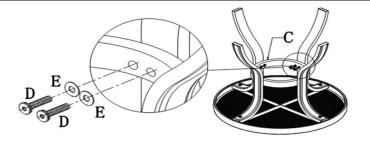

STEP 3

A. TURN TABLE TO UPRIGHT POSITION SO THAT IS STANDS SQUARELY ON THE FLOOR.

B. TIGHTEN ALL BOLTS SECURELY USING ALLEN WRENCH (F)

PLEASE TIGHTEN THE LEG CONNECTOR FIRST, THEN TIGHTEN THE LEG. $\,$

