

**MODEL:IG10600149-1012S**



OWNER'S MANUAL

# 10'x12' Aurora Louvered Pergola

## TABLE OF CONTENTS

ASSEMBLY GUIDE.....	02
USING YOUR PRODUCT.....	04

June 04, 2025

## QUESTIONS?



E-mail: [support@modernshade.org](mailto:support@modernshade.org)



Toll Free Number: 1-888-666-3070

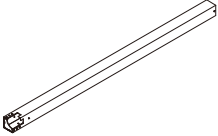

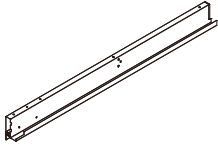
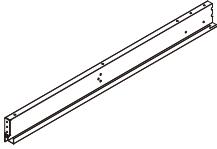
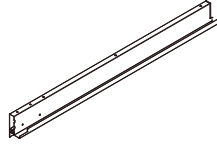
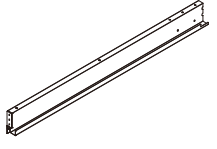
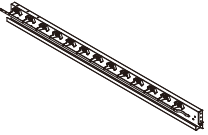
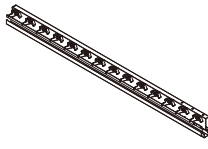
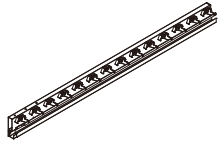
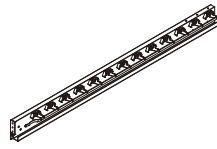

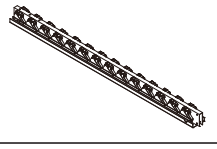

















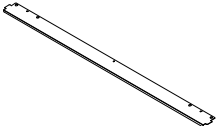
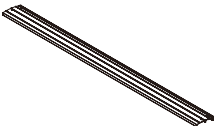






Mon-Fri: 9:00 AM - 5:00 PM PST

CONTACT CUSTOMER SUPPORT BEFORE RETURNING PRODUCT TO RETAILER.

# ASSEMBLY GUIDE

## PARTS LIST

<b>A1</b> Post 1 (4pieces) 	<b>B</b> Foot Base (4pieces) 	<b>C5</b> Cross Beam 5 (1piece) 	<b>C6</b> Cross Beam 6 (1piece) 	<b>C7</b> Cross Beam 7 (1piece) 	<b>C8</b> Cross Beam 8 (1piece) 
P0010006201	P0030000201	P0040013001	P0040013101	P0040013201	P0040013301
<b>C9</b> Cross Beam 9 (1piece) 	<b>C10</b> Cross Beam 10 (1piece) 	<b>C11</b> Cross Beam 11 (1piece) 	<b>C12</b> Cross Beam 12 (1piece) 	<b>D3</b> Middle Cross Beam 3 (1piece) 	<b>D4</b> Middle Cross Beam 4 (1piece) 
P0040013601	P0040013701	P0040013801	P0040013901	P0040014001	P0040014101
<b>E1</b> Connector 1 (4pieces) 	<b>E2</b> Connector 2 (4pieces) 	<b>E3</b> Connector 3 (1piece) 	<b>E4</b> Connector 4 (2pieces) 	<b>E5</b> Connector 5 (2pieces) 	<b>E6</b> Connector 6 (1piece) 
P0060008901	P0110004101	P0060009001	P0110004201	P0110004301	P0110004401
<b>E7</b> Connector 7 (2pieces) 	<b>E8</b> Connector 8 (4pieces) 	<b>E9</b> Connector 9 (1piece) 	<b>E10</b> Connector 10 (1piece) 	<b>E11</b> Connector 11 (4pieces) 	<b>E12</b> Connector 12 (2pieces) 
P0060009101	P0060009201	P0060009301	P0060009401	P0110004501	P0110004601
<b>E16</b> Connector 16 (2pieces) 	<b>F1</b> lever 1 (4pieces) 	<b>G</b> Manual Motor (2pieces) 	<b>H</b> Handle (1piece) 	<b>J3</b> Gutter 3 (2pieces) 	<b>J4</b> Gutter 4 (2pieces) 
P0060009701	P0170000101	P0170000201	P0180000101	P0120004801	P0120004901
<b>K</b> Louver (54pieces) 	<b>L</b> Gutter Guard (4pieces) 	<b>R</b> Power Strip Cover (1piece) 	<b>S</b> Power Strip Case (1piece) 	<b>T</b> Positioning Plate (1piece) 	
P0160000101	P0120004701	P0260000101	P0240000201	P0250000300	

# ASSEMBLY INSTRUCTIONS

•Please carefully unpack each of the components and hardware. check the components against the parts list and make sure there are no missing parts. lay pieces on cardboard or a soft mat to help protect the pieces from scratches.

## ⚠ CAUTION

Watch for sharp edges when handling the pieces, wear gloves to avoid injury.

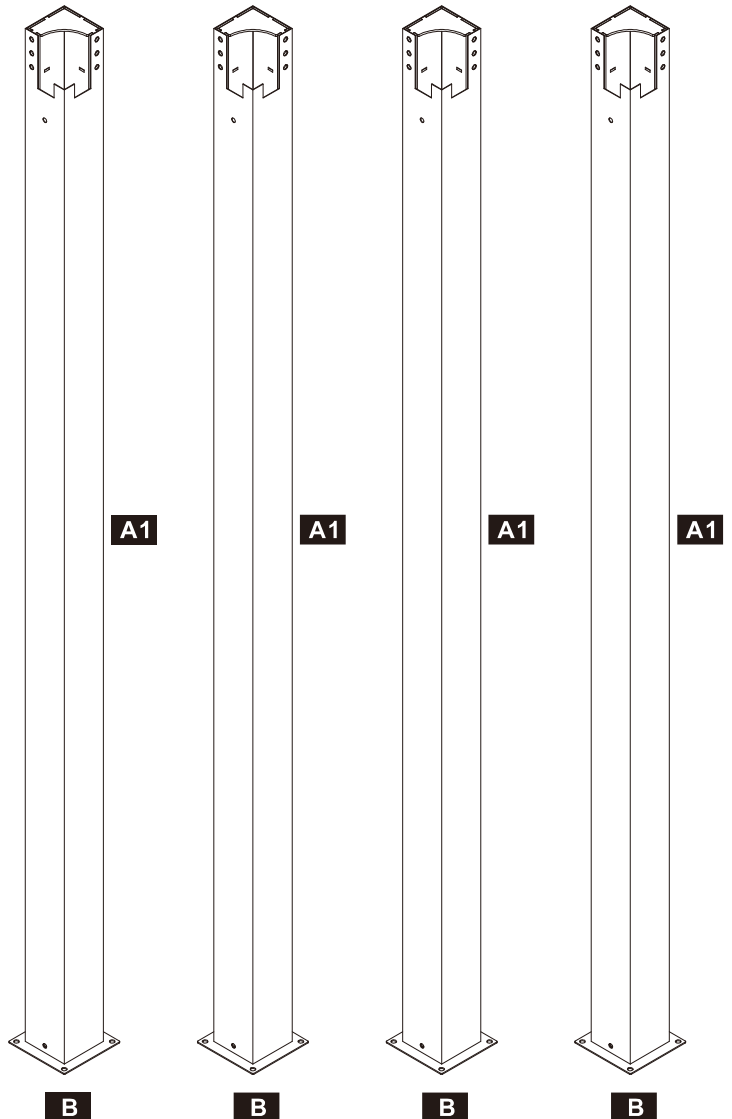
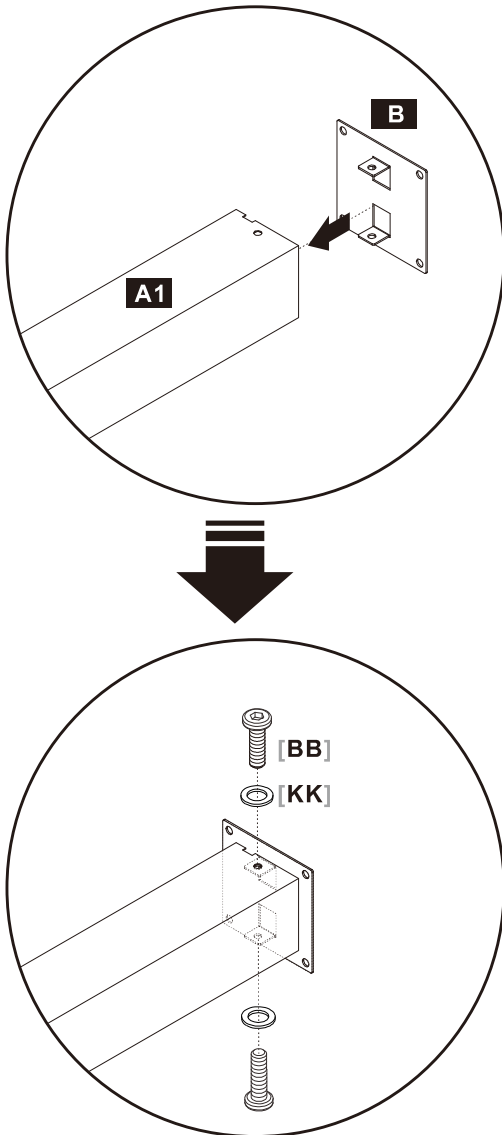
- For ease of assembly, it is recommended to have 3 or more people and allow enough time to completely finish the assembly. assembly can take 6-8 hours. a step-ladder is required for assembly (not included).
- Follow step by step instructions, and follow all safety warnings provided with your tools.
- DO NOT tighten screws until all the screws and washers are properly installed. Tighten screws securely, do not over tighten.
- Gazebo should not be used in inclement weather and high winds.

### STEP 01#

Attach Foot Base **B** to the bottom of Post **A1** using two (2) M6\*20 bolts **[BB]** and two (2) M6 flat washers **[KK]**. Repeat to make four (4) posts.

**[BB]** x8

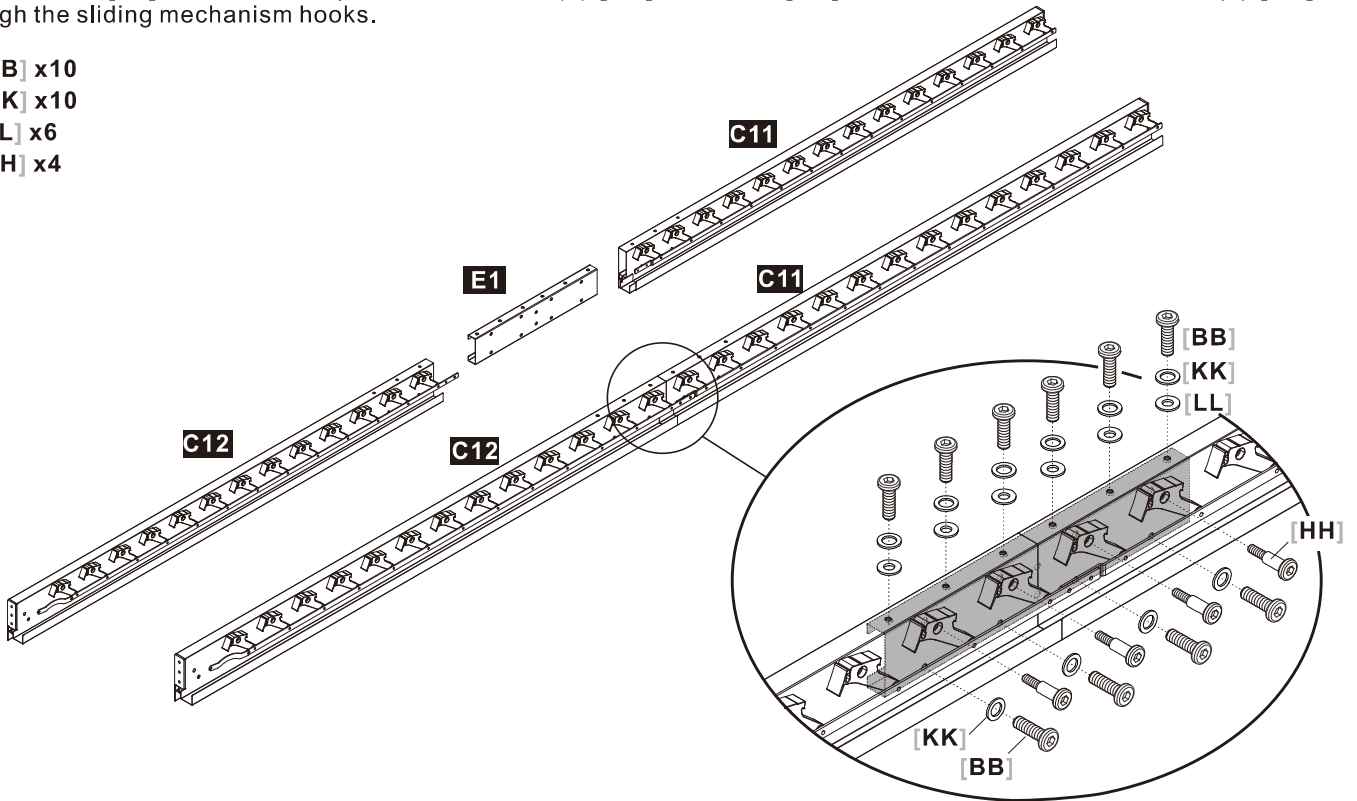
**[KK]** x8



**STEP 02#**

Use one (1) Connector **E1** to combine one (1) Cross Beam **C11** and one (1) Cross Beam **C12**. Use six (6) **[BB]** bolts, **[KK]** washers, and **[LL]** washers on top. Then, add four (4) **[BB]** bolts and **[KK]** washers to the side. Use four (4) **[HH]** bolts through the sliding mechanism hooks.

- [BB]** x10
- [KK]** x10
- [LL]** x6
- [HH]** x4



**STEP 03#**

Use one (1) Connector **E1** to combine one (1) Cross Beam **C10** and one (1) Cross Beam **C9**. Use six (6) **[BB]** bolts, **[KK]** washers, and **[LL]** washers on top. Then, add four (4) **[BB]** bolts and **[KK]** washers to the side. Use four (4) **[HH]** bolts through the sliding mechanism hooks.

- [BB]** x10
- [KK]** x10
- [LL]** x6
- [HH]** x4

