

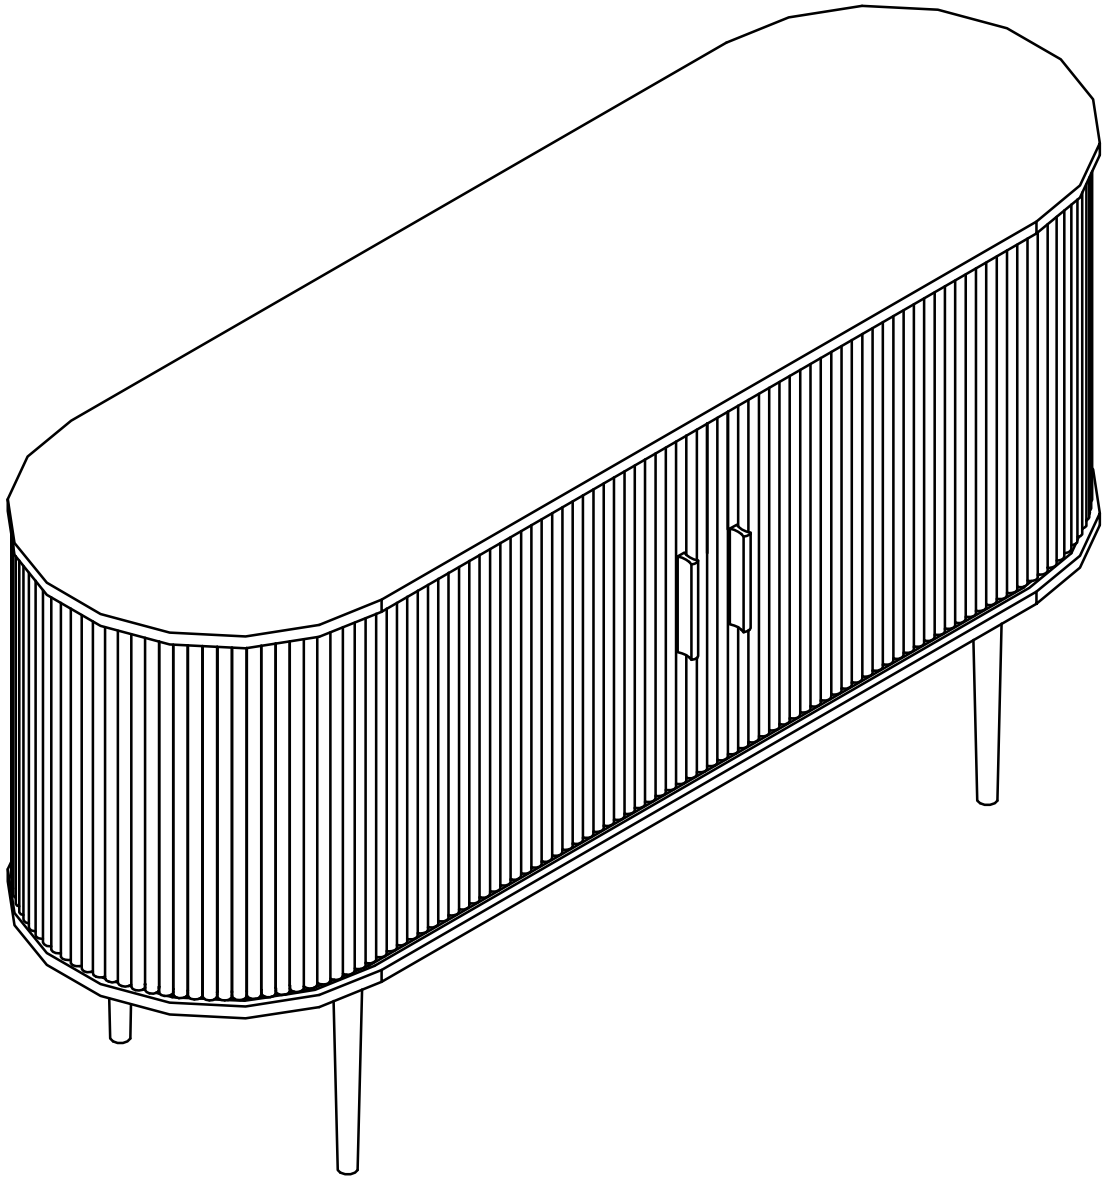
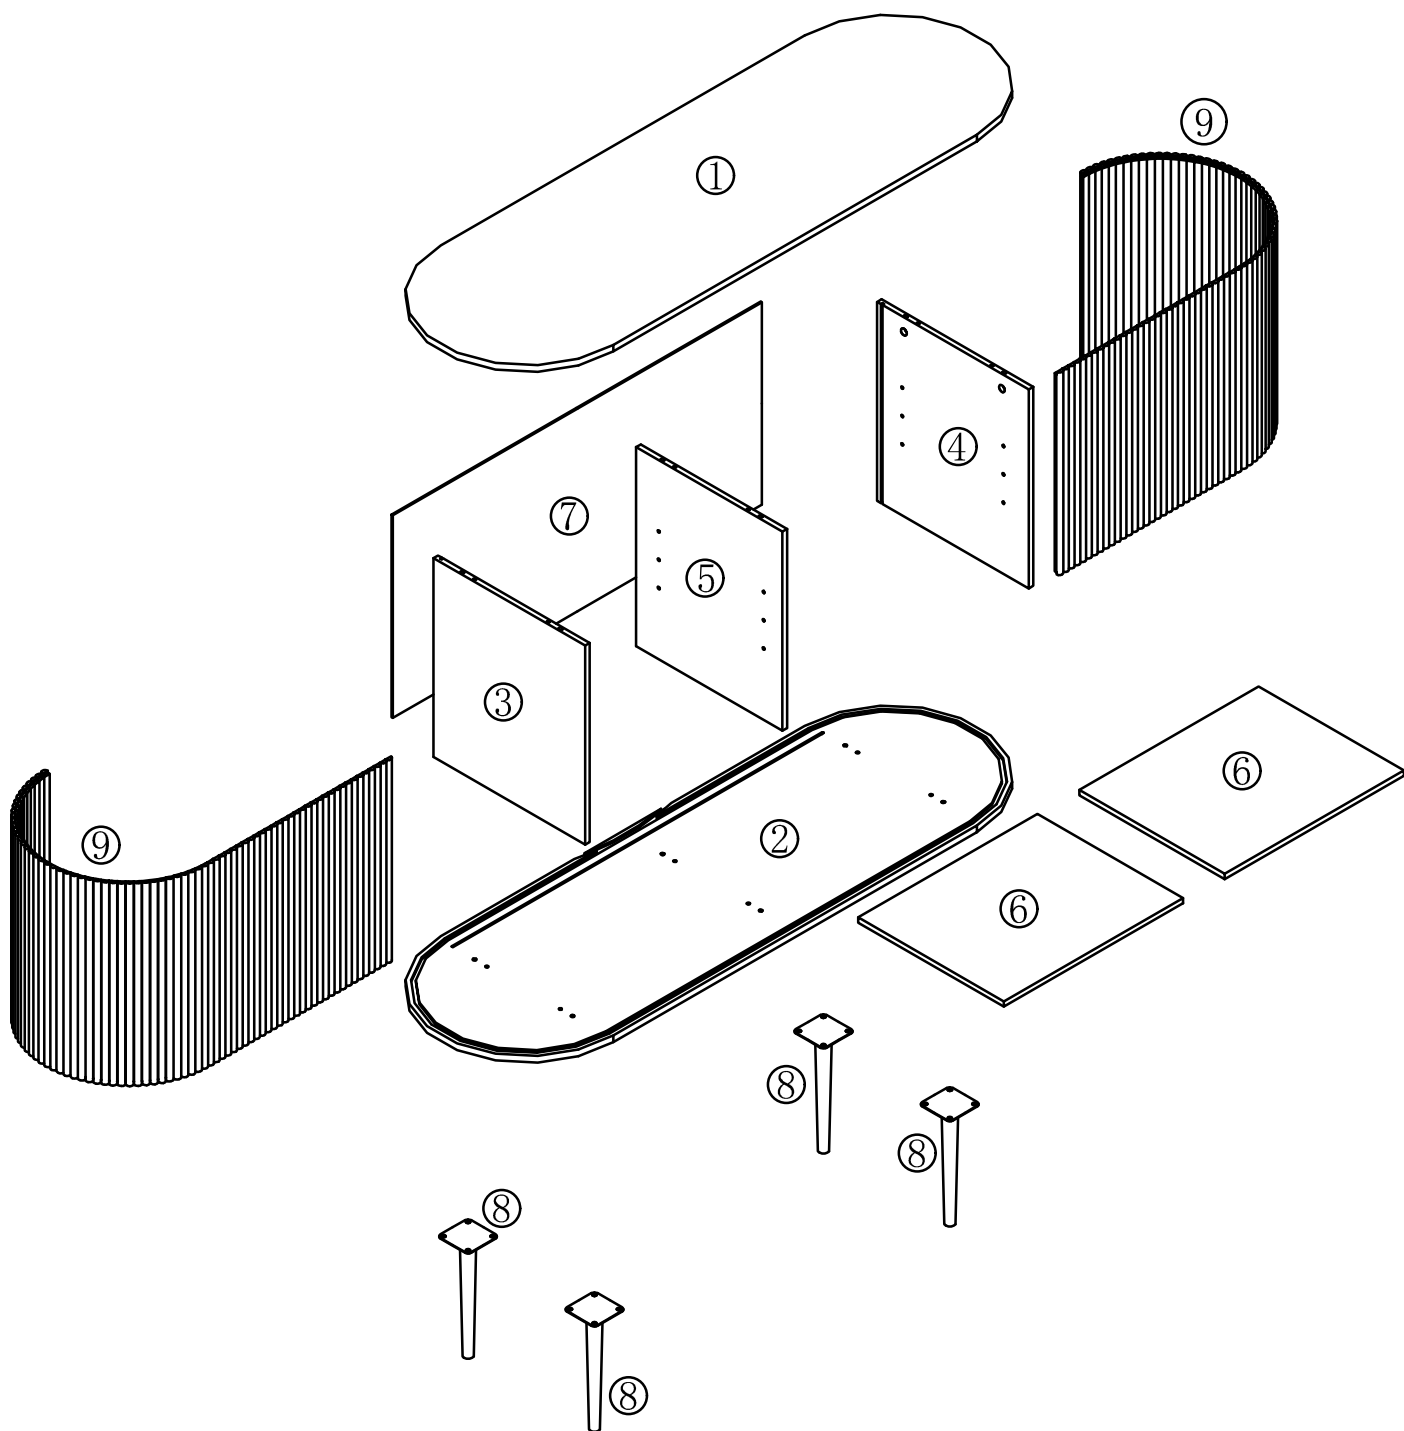
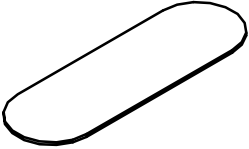
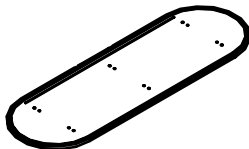


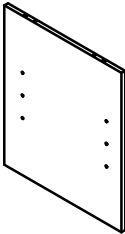
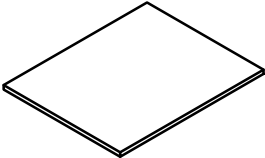
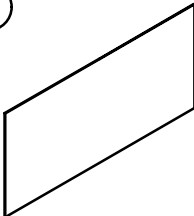


Assembly Instruction








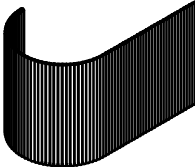


HARDWARE LIST

①  1PC	②  1PC	③  1PC	④  1PC	⑤  1PC
⑥  2PC	⑦  1PC	⑧  4PC	⑨  2PC	


HARDWARE LIST

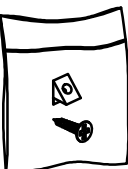A  Ø3.5x19mm 3PCS	B  6x40mm 6PCS	C  Ø15*12mm 6PCS	D  8x30mm 12PCS	E  M6x50mm 6PCS
F  6PCS	G  9PCS	H  M6x10mm 16PCS	I  2PCS	J  1PCS
K  1PCS	L  2PCS			



HARDWARE SPARE LIST

A  M8x19mm 1PCS	B  6x40mm 1PCS	C  Ø15*9mm 1PCS	D  8x30mm 1PCS	E  M6x50mm 1PCS
F  1PCS	G  1PCS	H  M6x10mm 1PCS		

This furniture requires two people to assemble and move.
Make sure no parts missing or damaged before assembly.

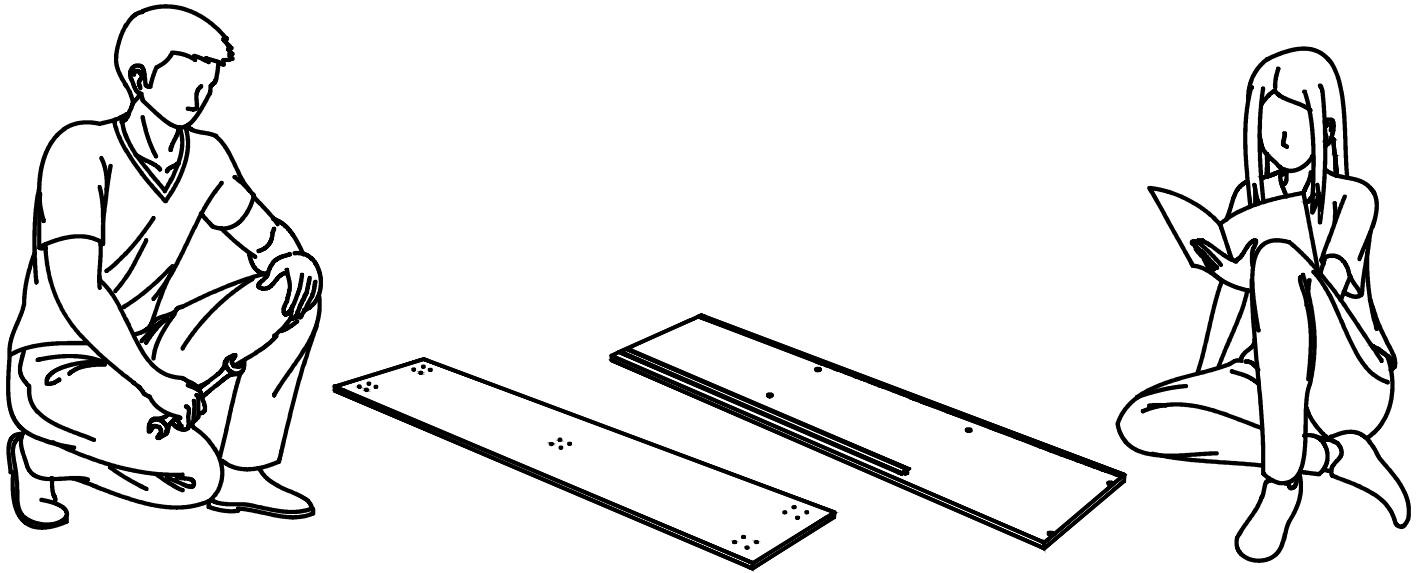


CAM BOLT INSTALLATION AS BELOW

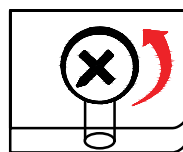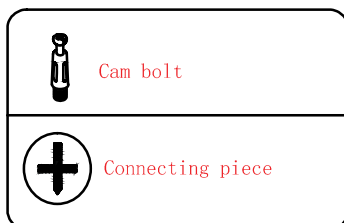







X

Rotate connecting piece if
found in position illustrated
above

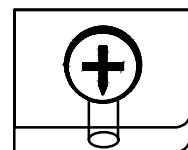

✓


Correct orientation to
receive bolts

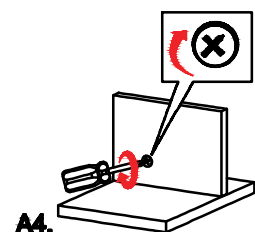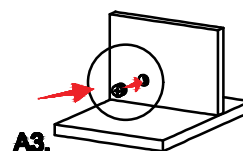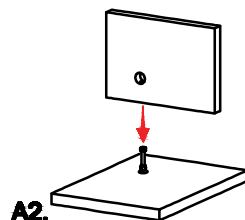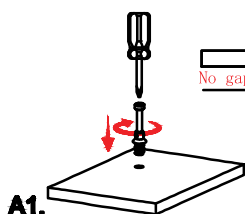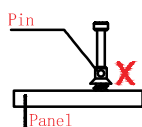

STEPS

STEP-1




	B x6PCS		D x6PCS
	K x1PCS		

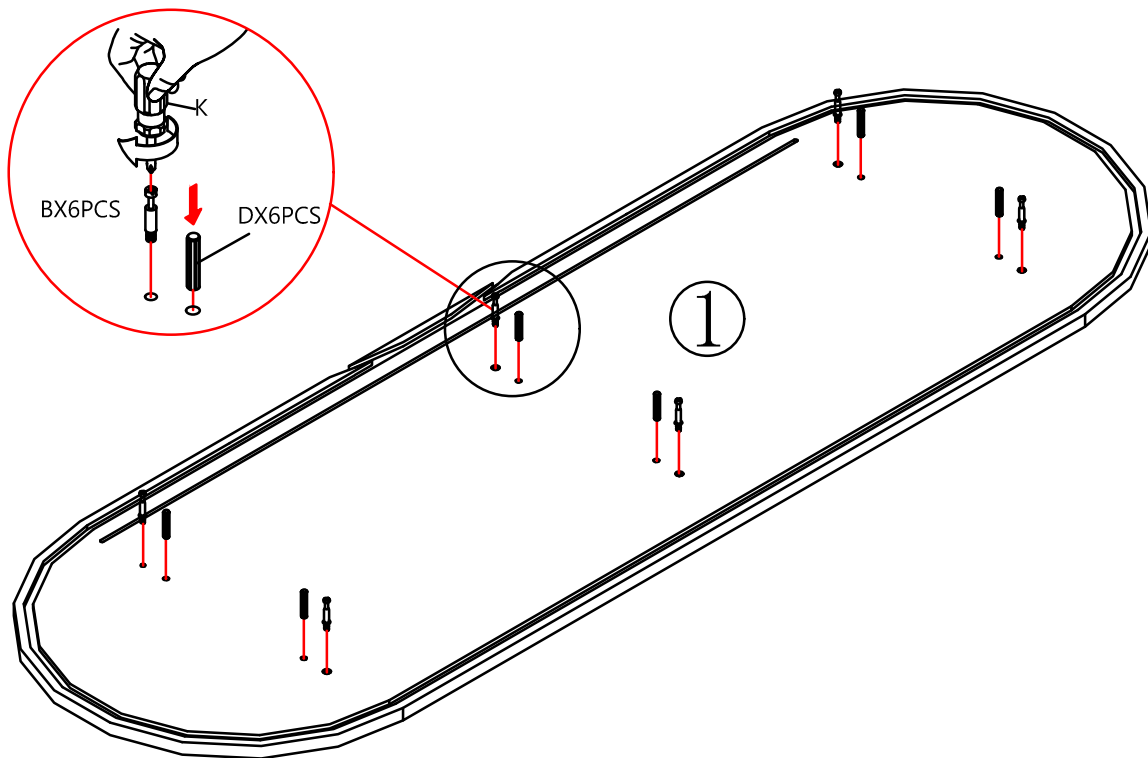

STEP-2


	C x6PCS
	K x1PCS

Note the orientation of fitting #5

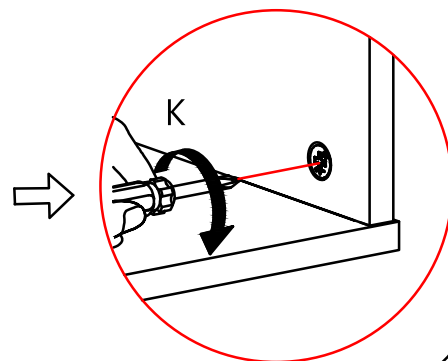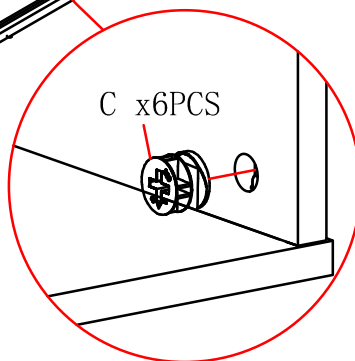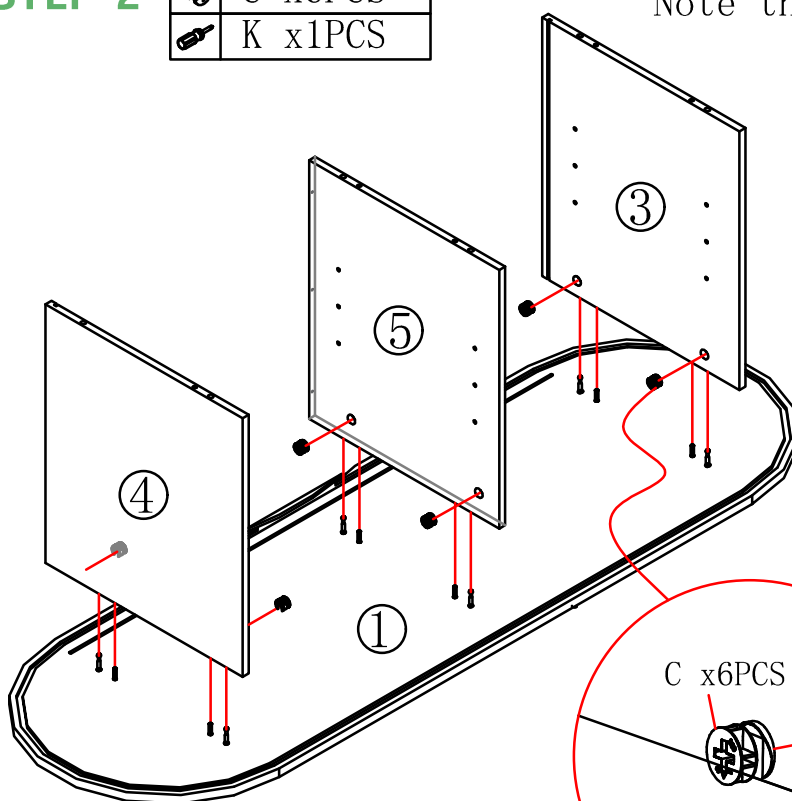


STEPS

STEP-3 D x6PCS

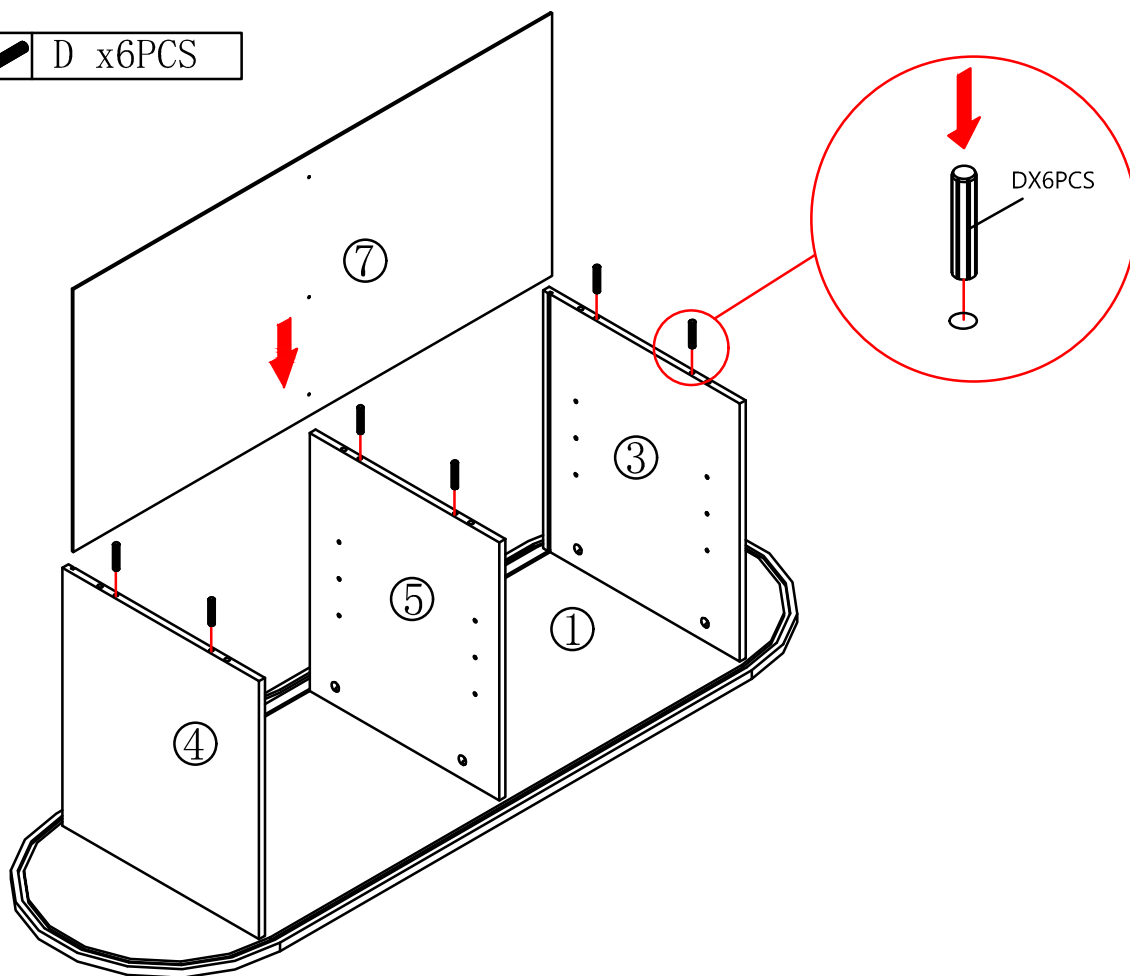


STEP-4 A x3PCS K x1PCS

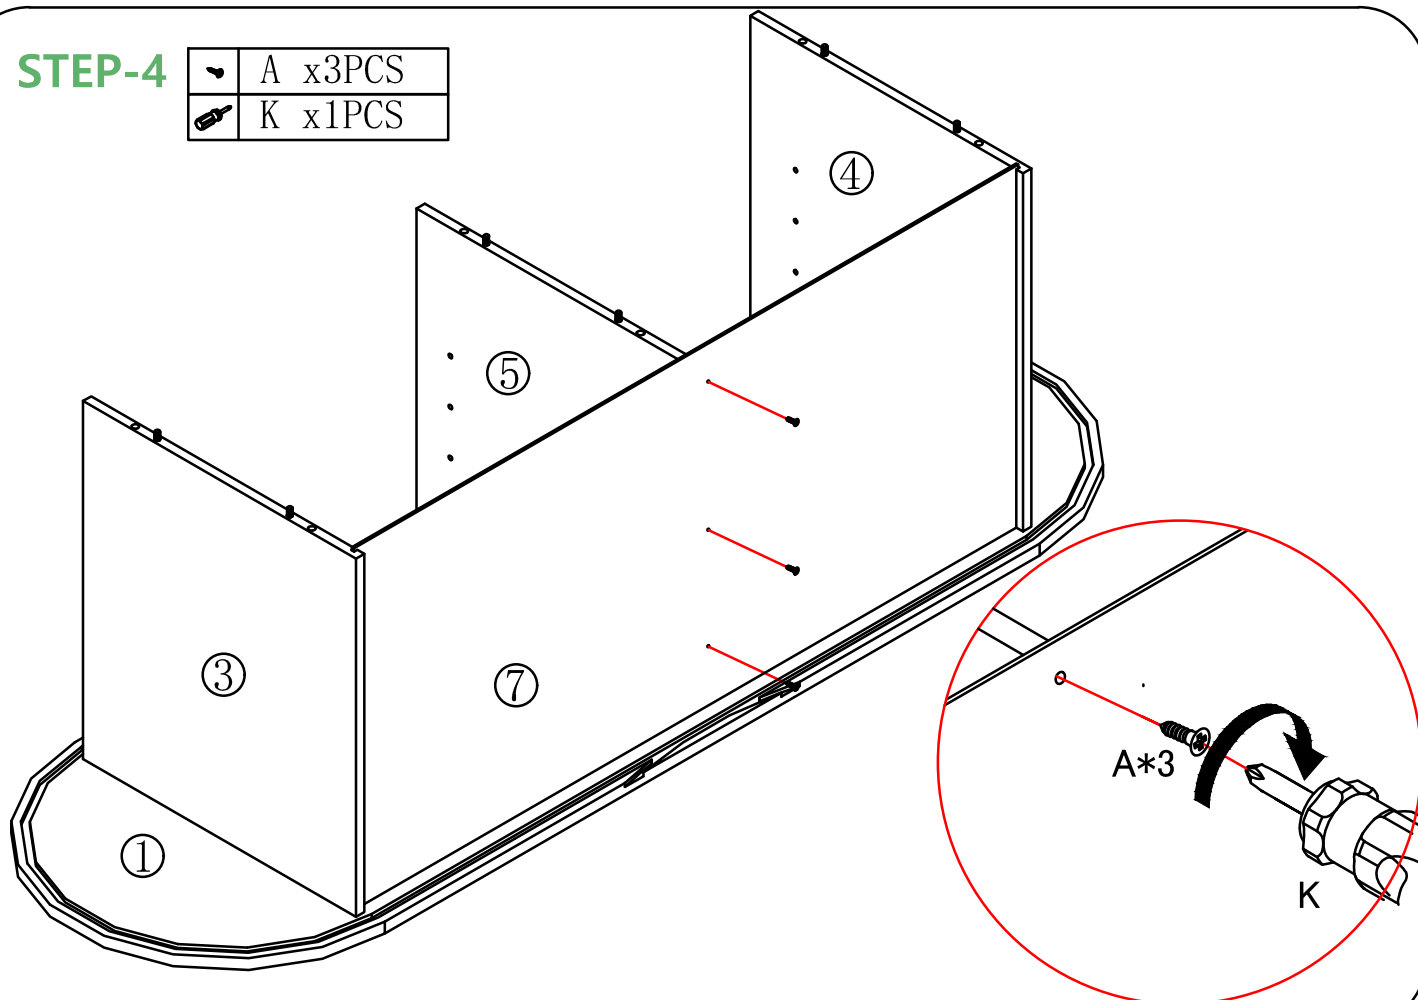

STEPS


STEP-5

	E x6PCS
	J x1PCS

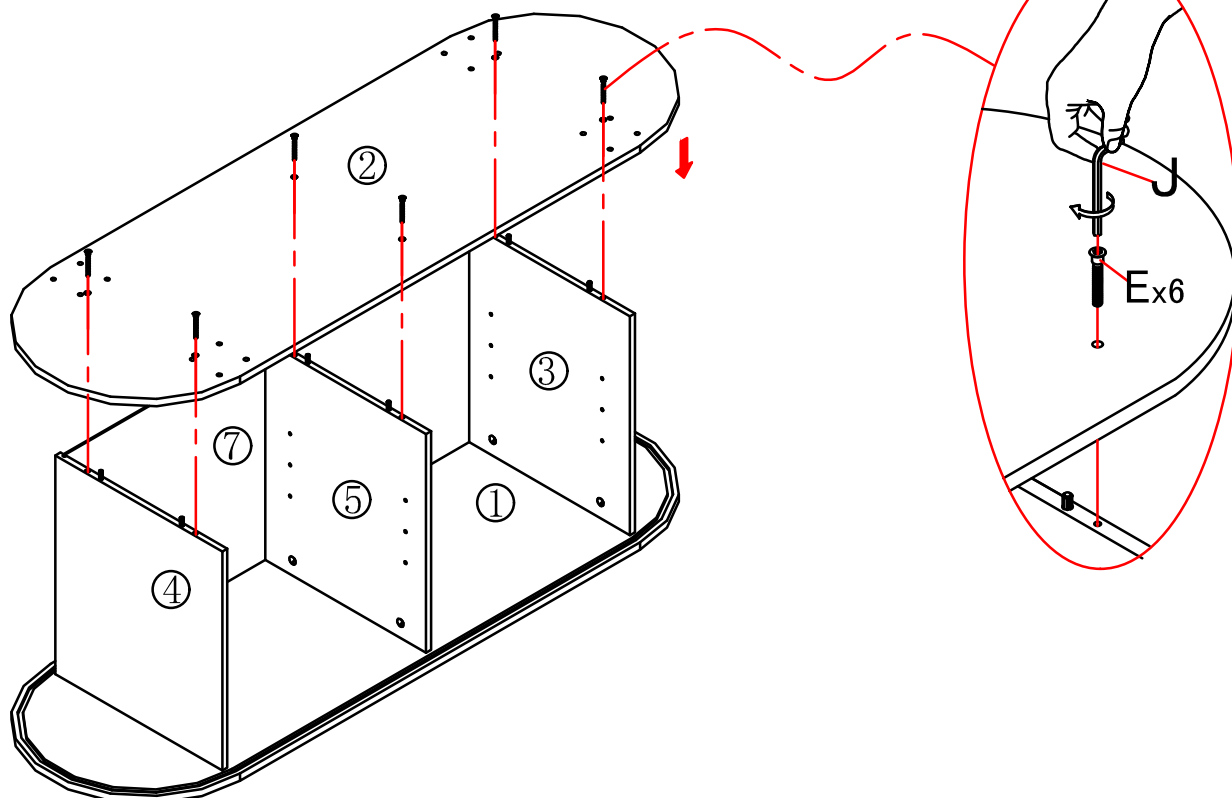

STEP-6


	H x16PCS
	J x1PCS

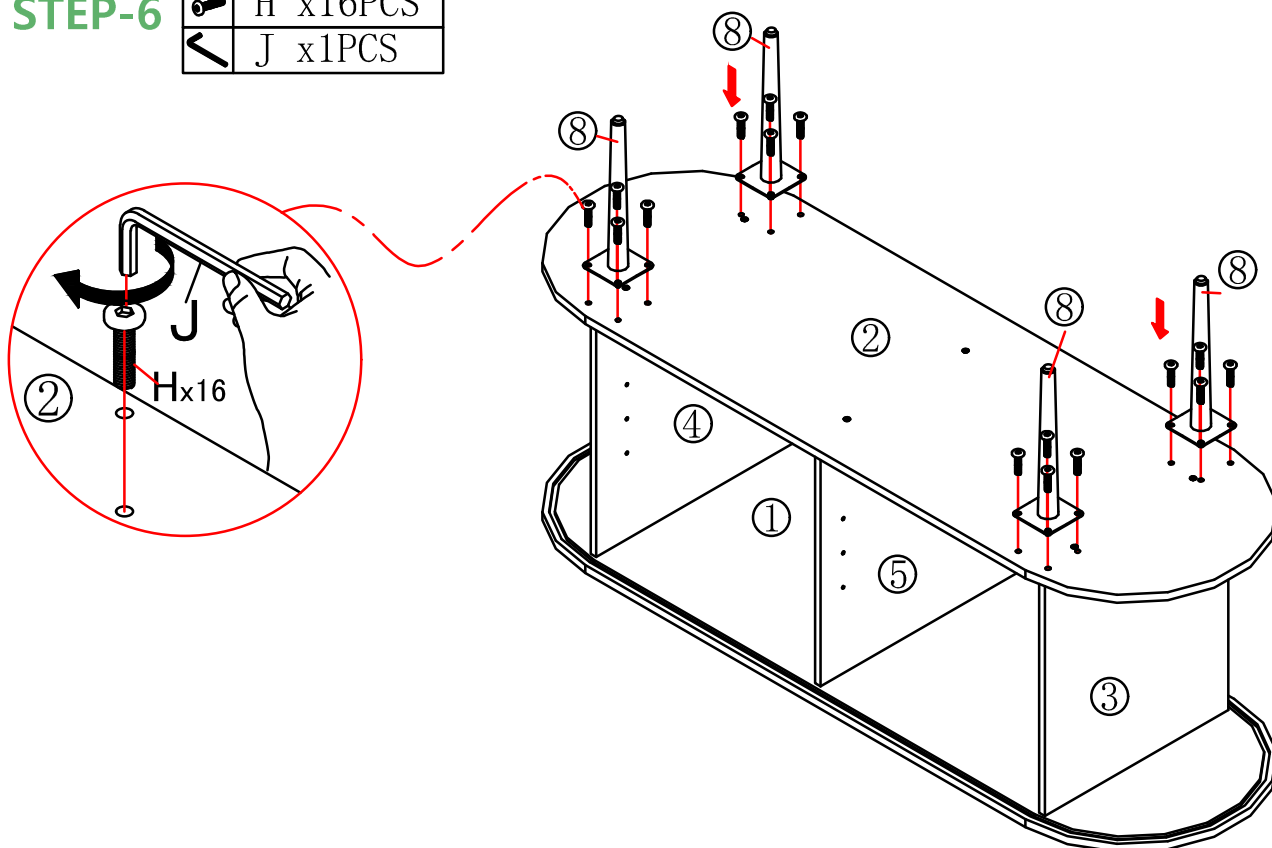


STEPS

STEP-7

	K x1PCS
	I x2PCS

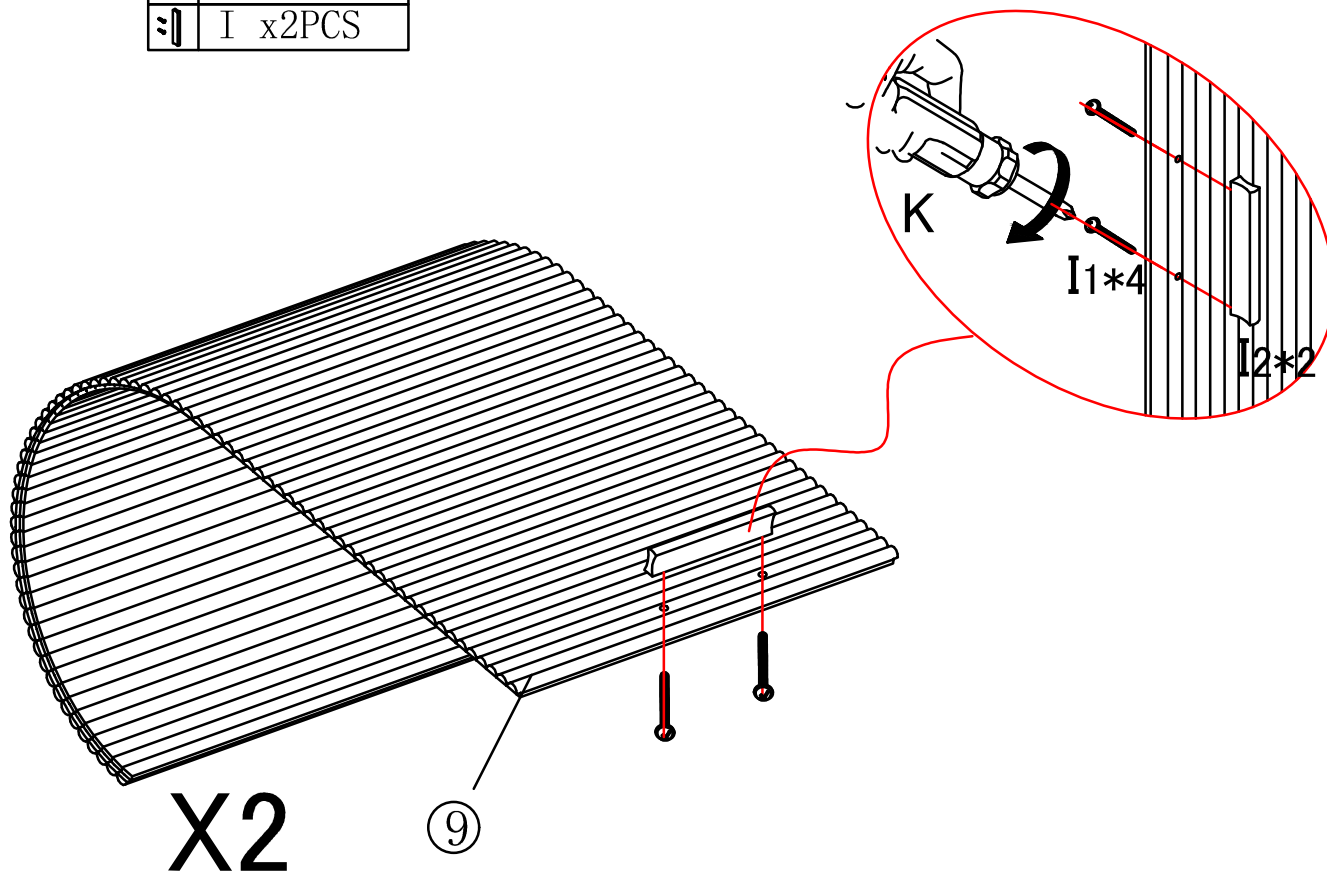


STEP-8

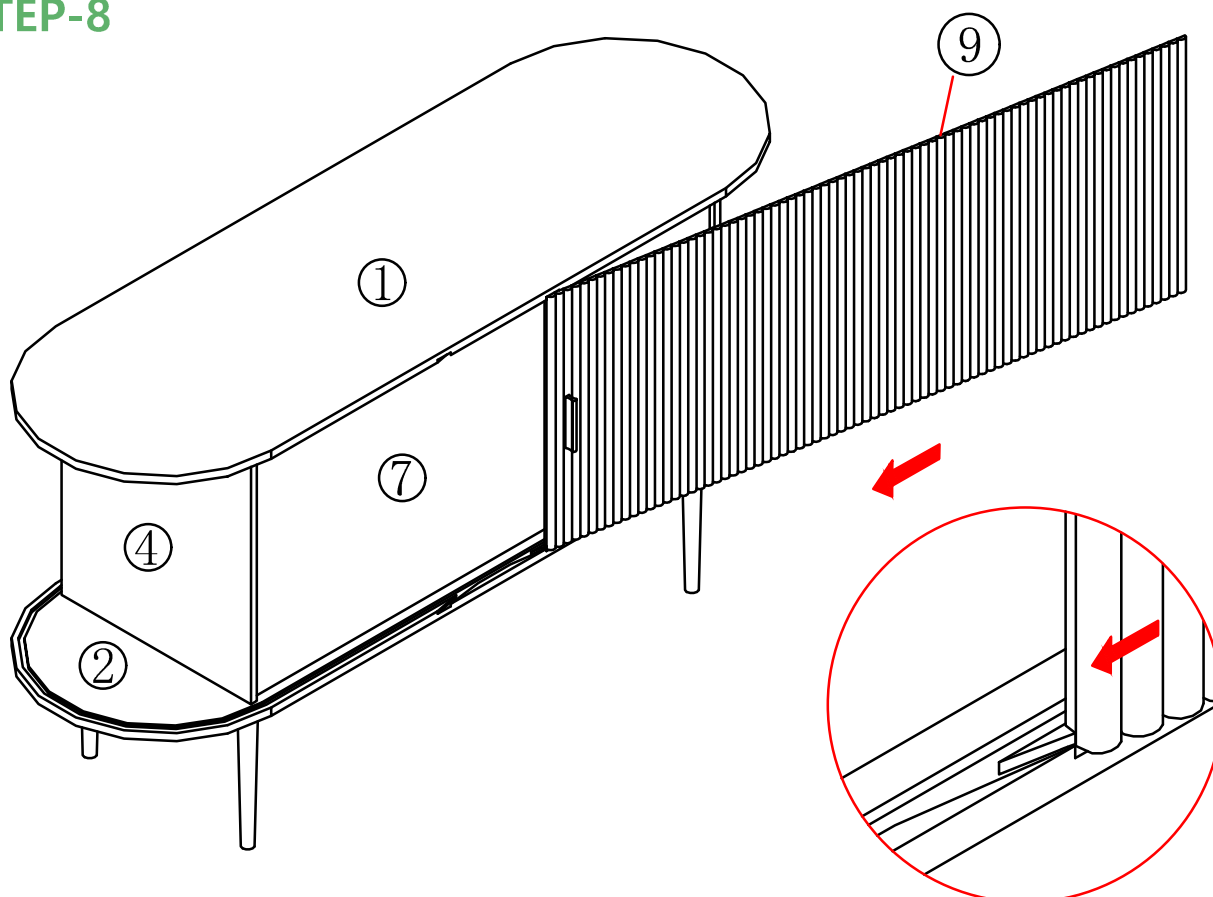


STEPS

STEP-9

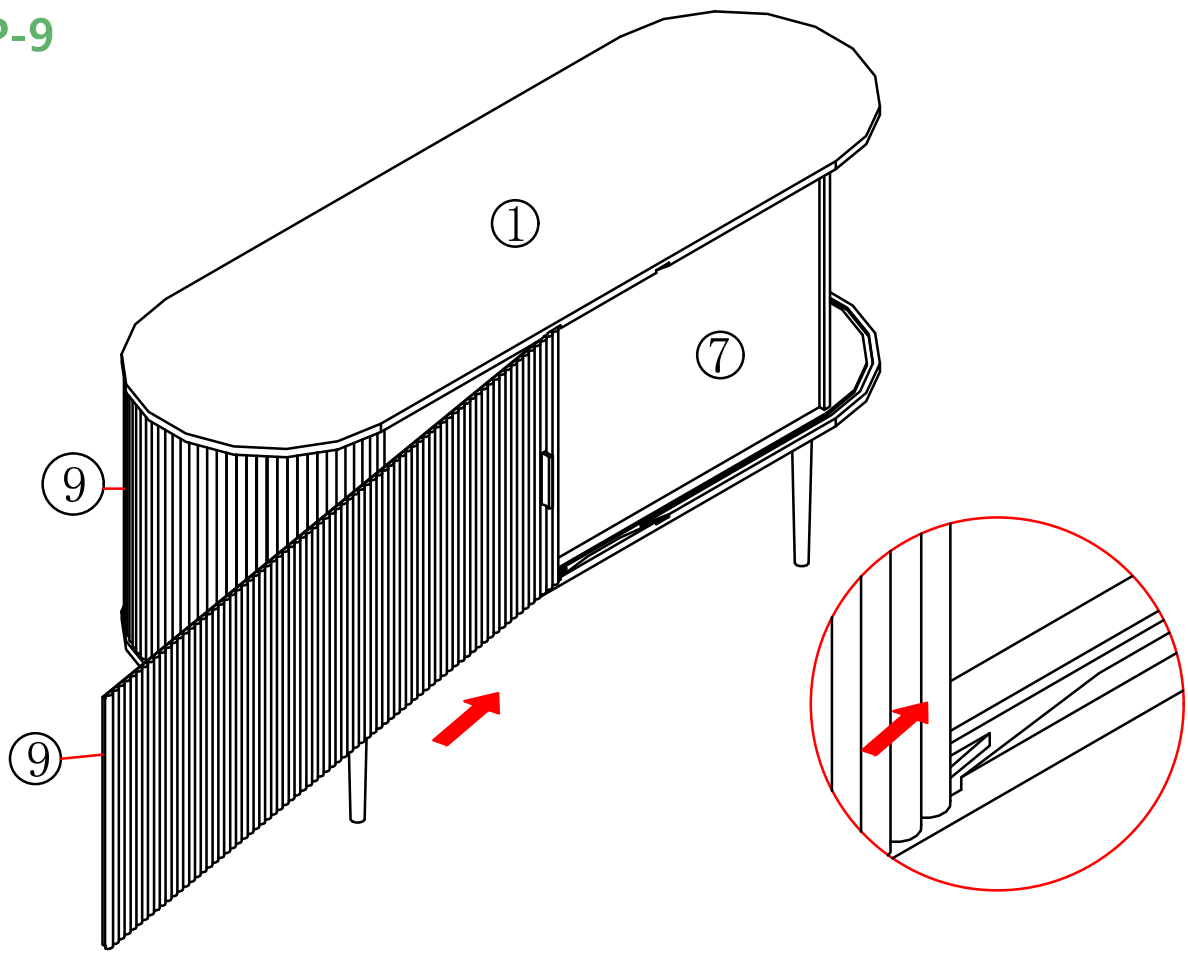



STEP-10 G x8PCS

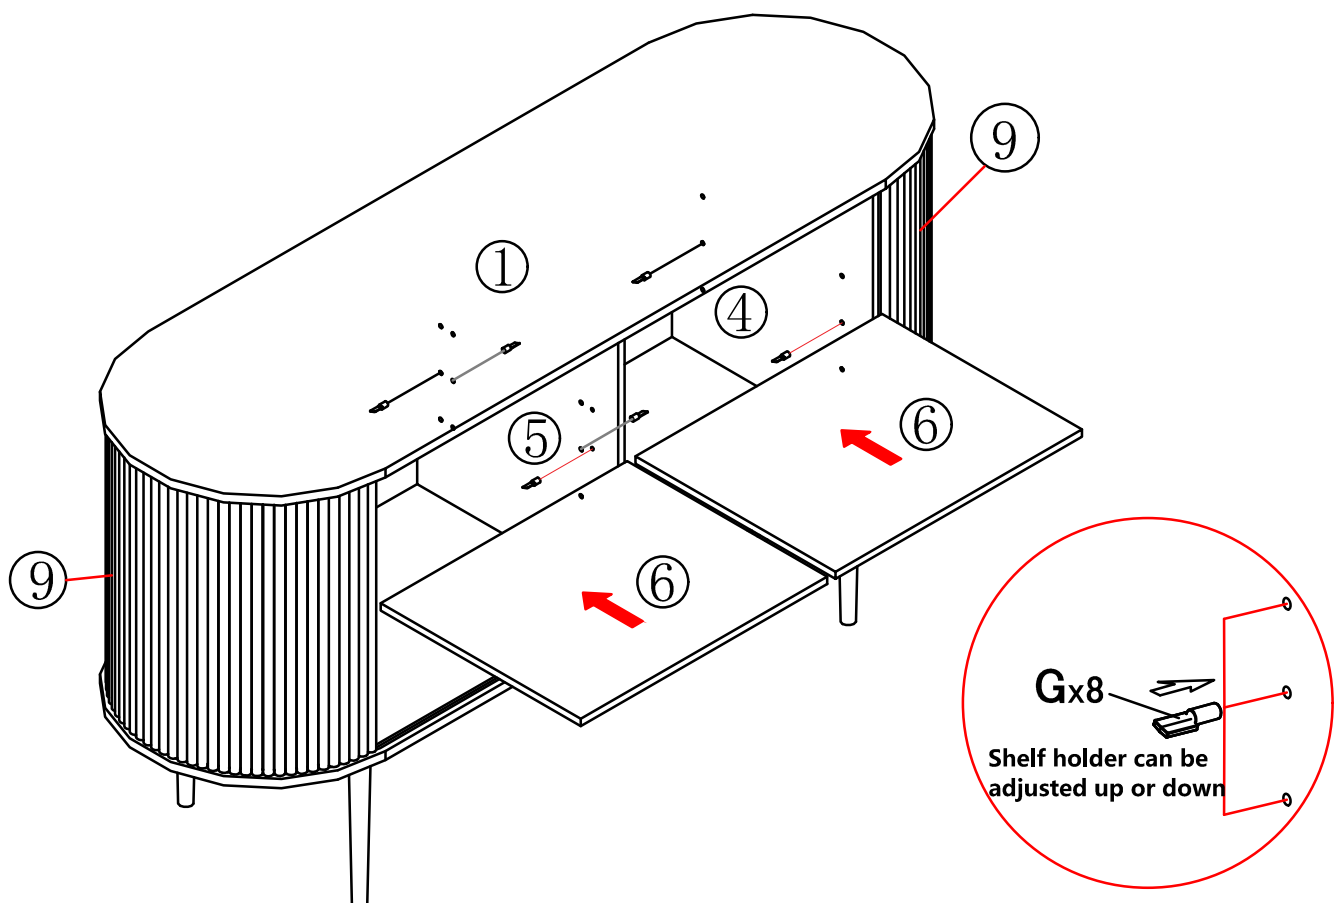

STEPS

STEP-11




	F x6PCS
	K x1PCS

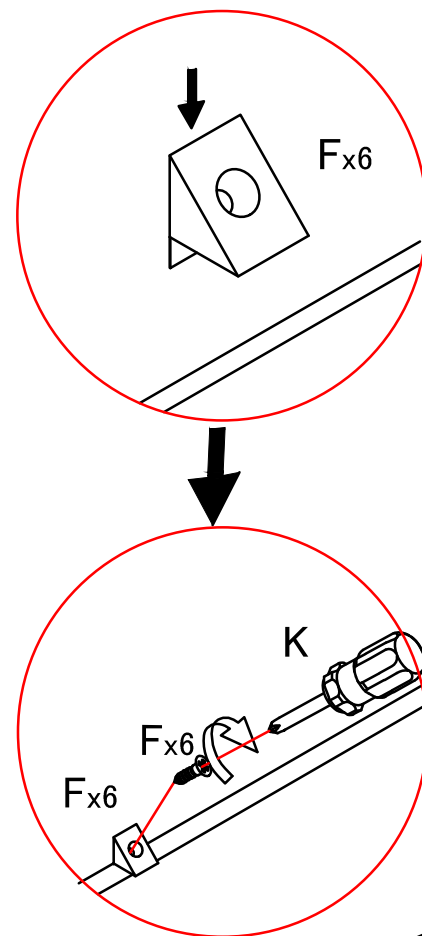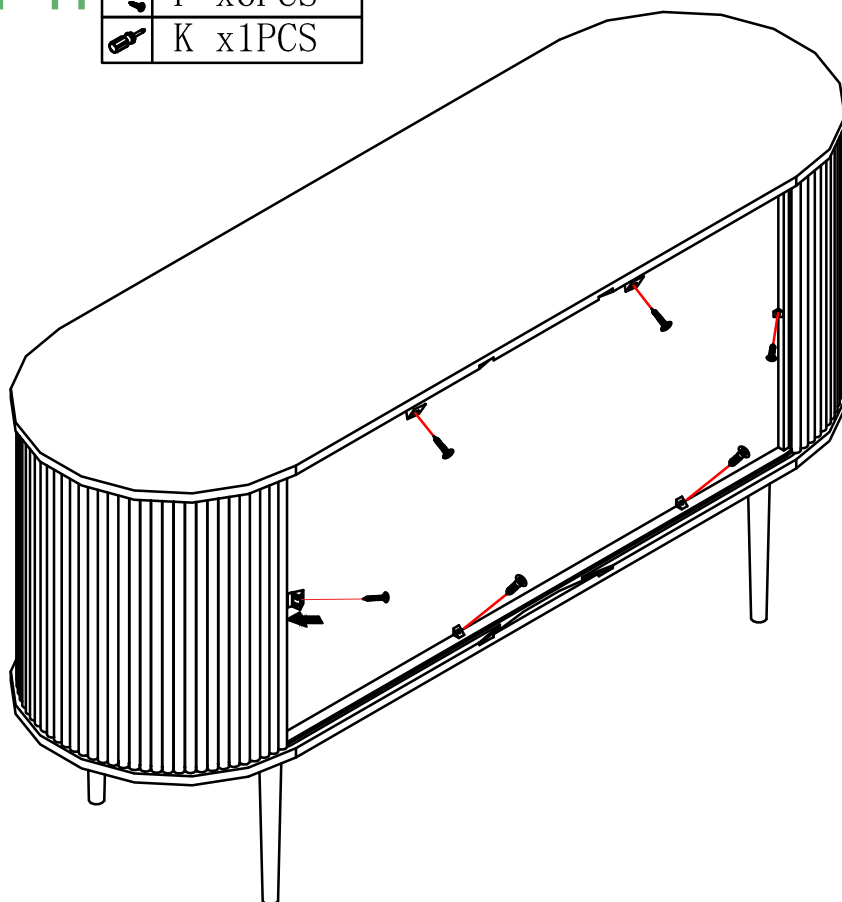

STEP-12

	L x2PCS
	K x1PCS
	G x1PCS


				
L1x2	L2x4	L3x4	L4x4	L5x2

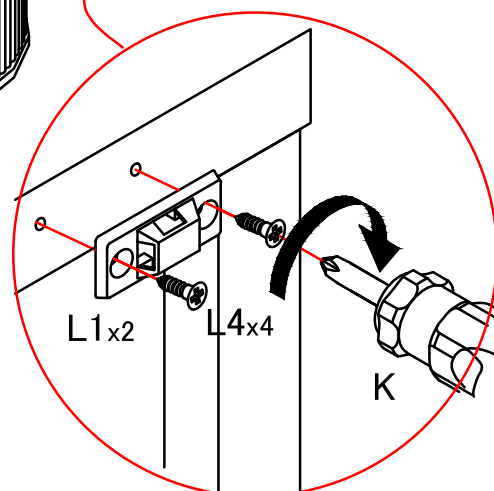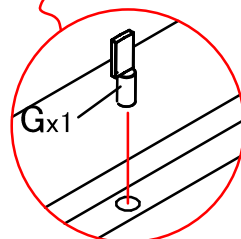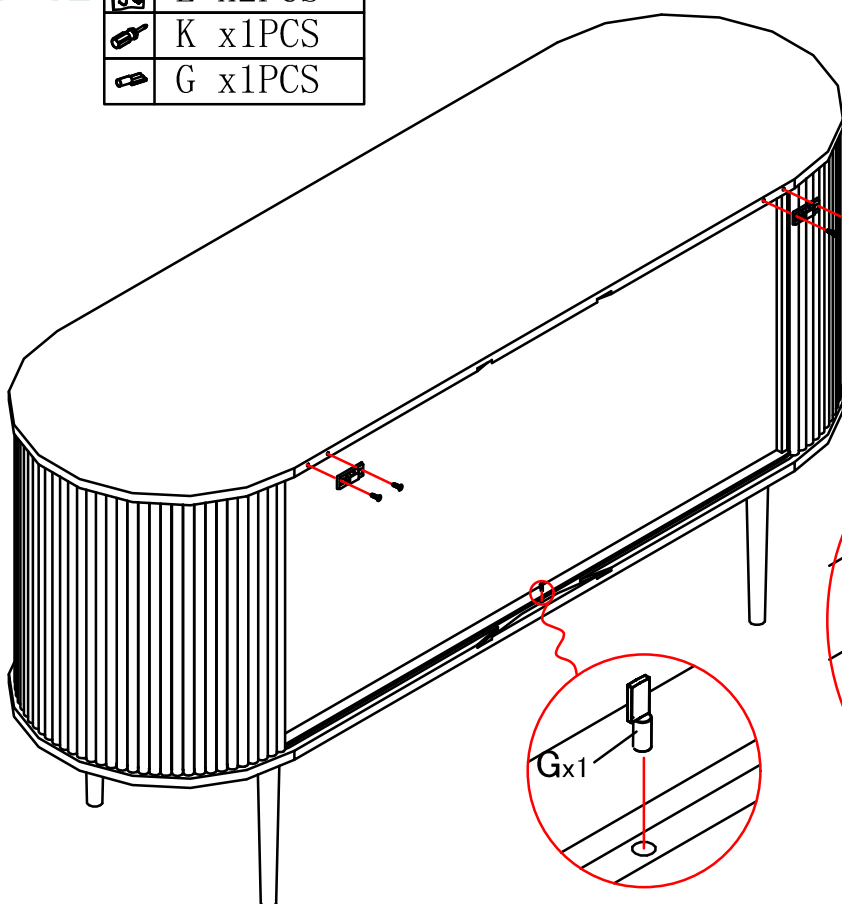




STEPS

STEP-13

	L x2PCS
	K x1PCS

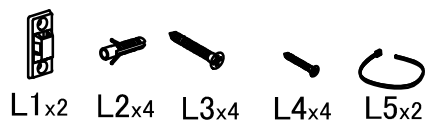

NOT PROVIDED

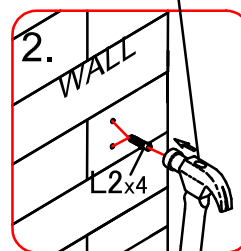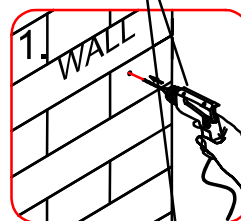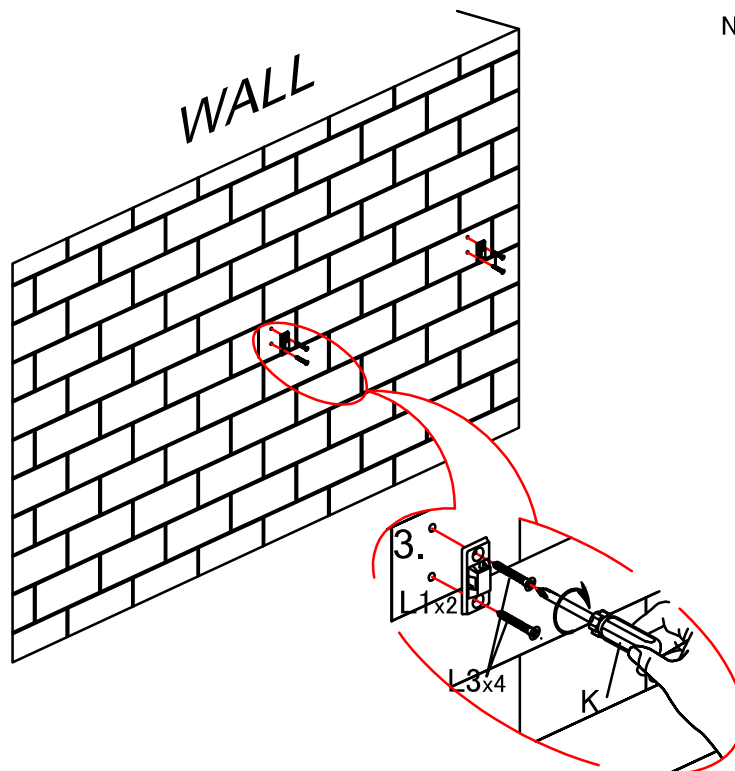

STEP-14

	L x2PCS
	K x1PCS

WALL

