Part	Quantity	Description
A	1	Seat cushion
B	1	Backrest
C	2	Curved support armrests
D	5	M8×60MM screws
E	1	M8 flat washer
F	1	Lumbar pillow
G	4	Circular washers
H	1	Allen wrench
(Clock)	—	Assembly timing reference

Step-by-Step Assembly

Step ①: Install support arms and prepare screws

• Place the curved support armrests (C) on the bottom of the seat cushion (A).

• Insert 4 of the M8×60MM screws (D) into the pre-drilled holes of the armrests and seat cushion.

• Use the Allen wrench (H) to lightly align the screws (do not fully tighten yet).

Step ②: Attach the backrest to the seat

• Align the mounting brackets on the backrest (B) with the corresponding slots on the seat cushion (A).

• Press the backrest firmly downward to lock it into place.

• Insert the remaining M8×60MM screw (D) through the backrest mounting hole to secure it to the seat.

Step ③: Secure all fasteners

• For the 4 screws connecting the armrests to the seat:

1. Place a circular washer (G) under each screw head.

• For the screw connecting the backrest to the seat:

1. Place the M8 flat washer (E) over the screw, then add a circular washer (G).

• Use the Allen wrench (H) to tighten all screws to 40% of full torque first (to allow for final alignment).

Step ④: Complete the assembly and final tightening





- Place the lumbar pillow (F) on the seat cushion, leaning against the backrest.
- After confirming all parts are aligned correctly, go back and tighten all screws to 100% torque.
- Your chair is now fully assembled and ready for use!

Important Tips


- Always fix all screws into their holes first and only tighten to 40% during initial assembly.
- Do not fully tighten any single screw until all parts are in place, to avoid misalignment.
- After the entire assembly is finished, go back and tighten every screw to 100% for maximum stability.

ASSEMBLY INSTRUCTIONS


Any problem contact service email: mffm_service@163.com

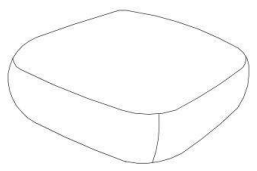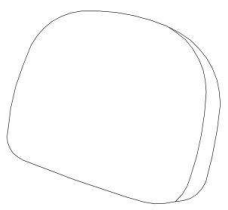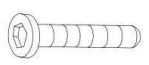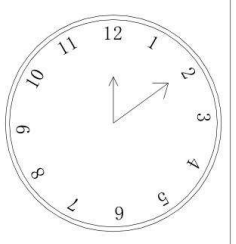A ×1	B ×1	C ×2	D ×5	E ×1	F ×1	G ×4	H ×1	
			 M8×60MM	 M8				


1

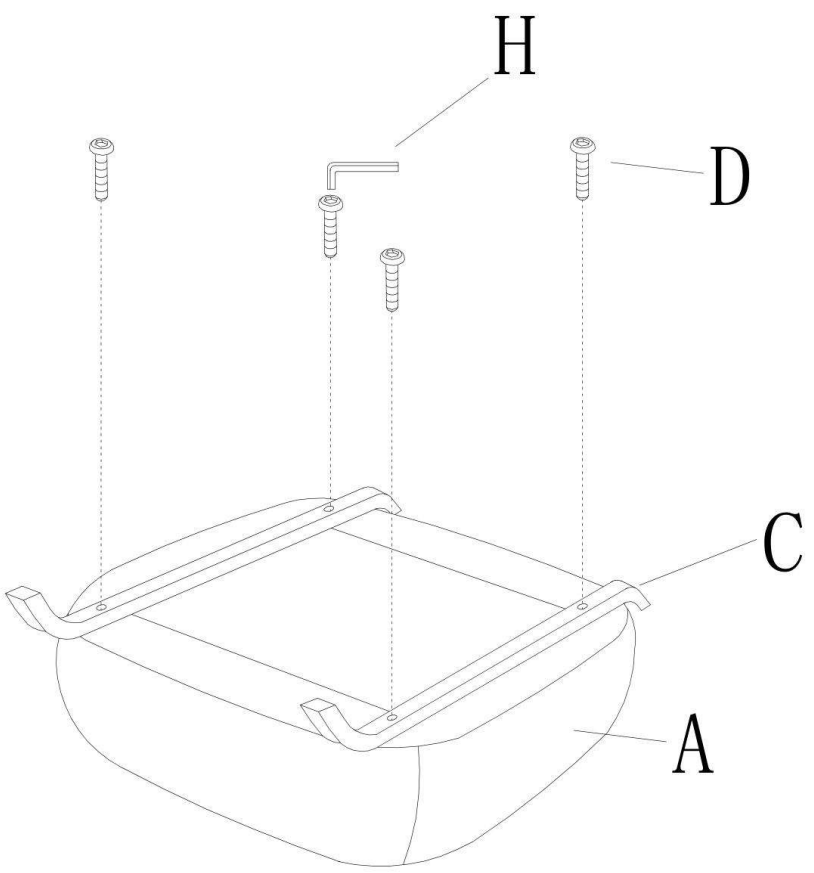


2

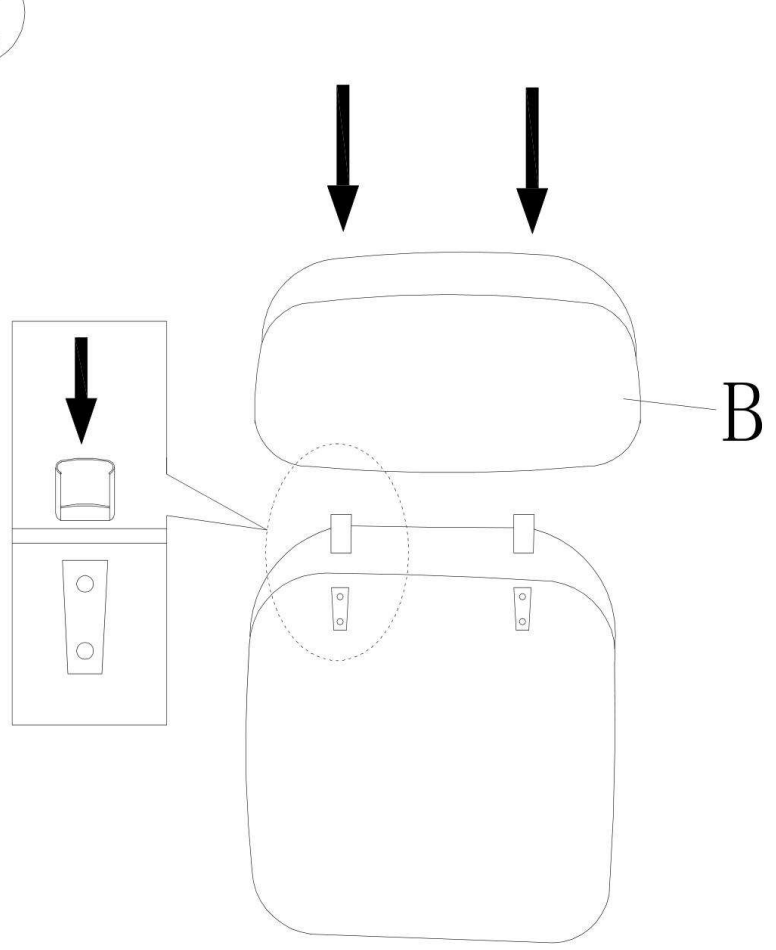

3

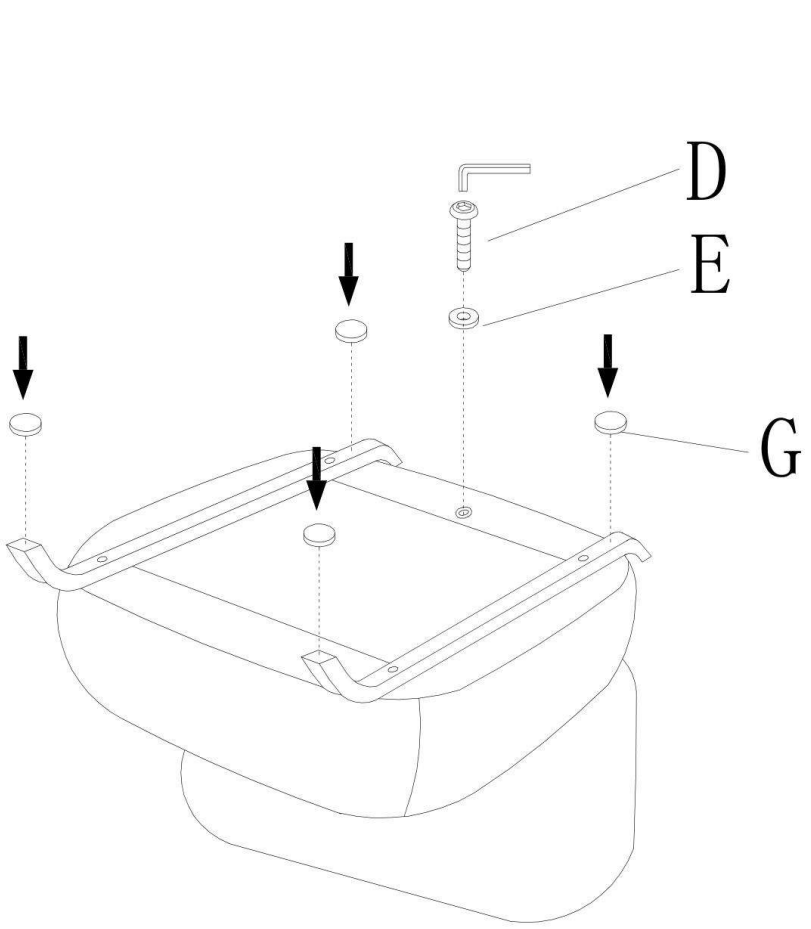

4

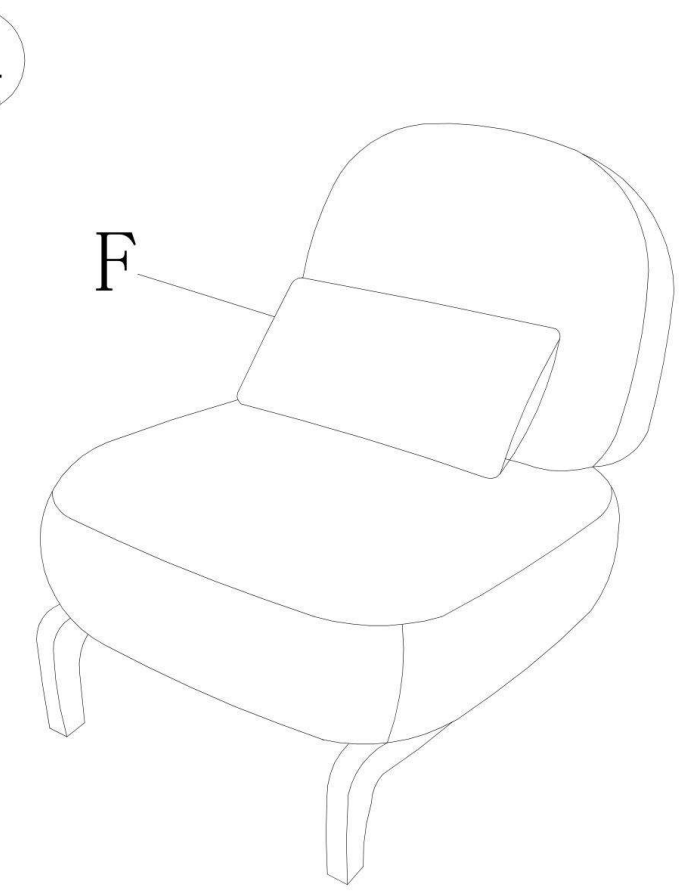

Fixing all the screws into the holes first, tighten 40%,
When finished the assemble, tight all the screews to 100%