


Carport instructions

(20*20FT)








Customer service.
Please contact us at anytime

Parts

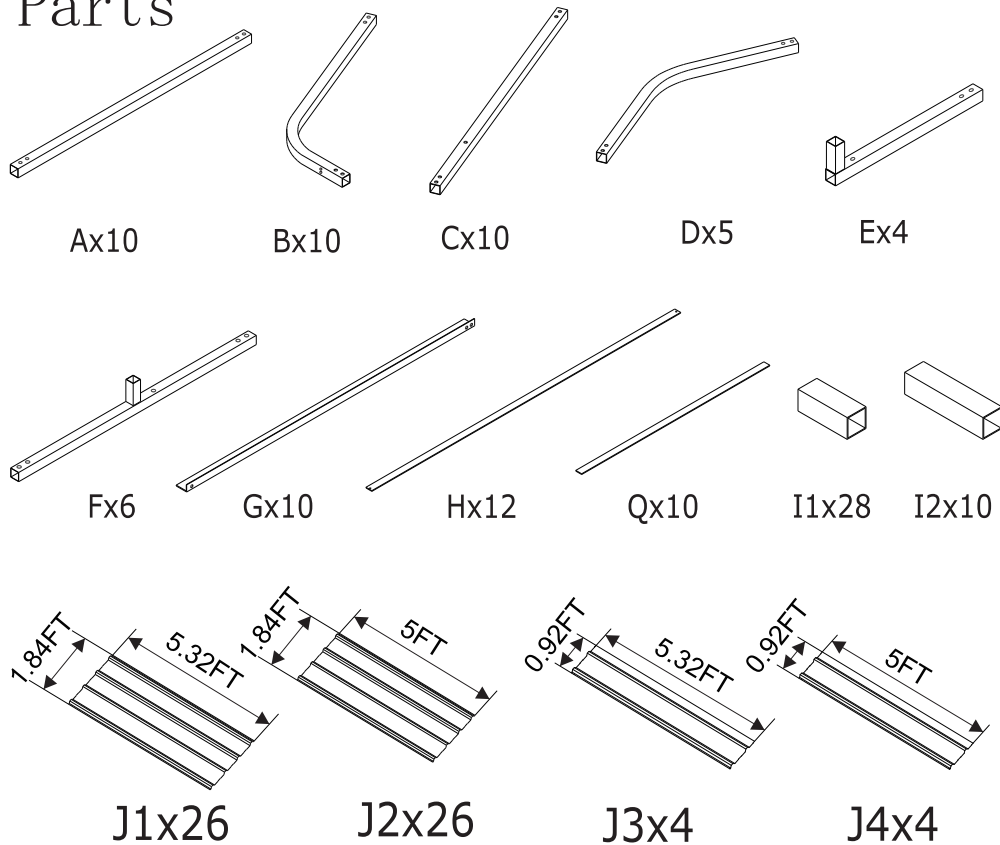

Hardware

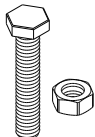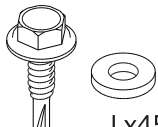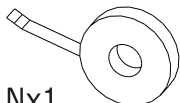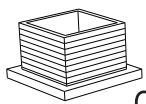
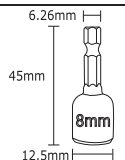


 Kx25	 Lx450	 Mx10	 Nx1
Hex Head Cap Bolt/ Screw	Hex Self Drilling Screw	Philips Flat Head Expansion Screws	Waterproofing Strip
 Ox4	 Px1	 Qx1	
Square Plugs	Edgeband	Sleeve	



STEP1:

Use the I2 square tube connector between Part B and Part C.




The long straight end of Part B must be connected to Part C, and the short bent end to Part A.

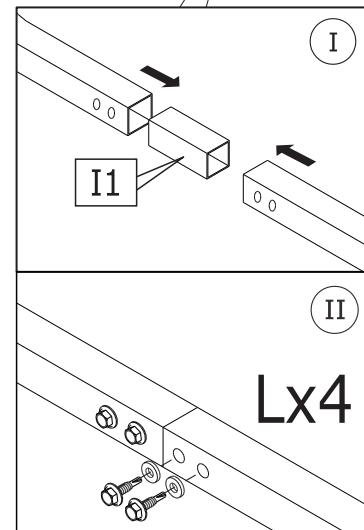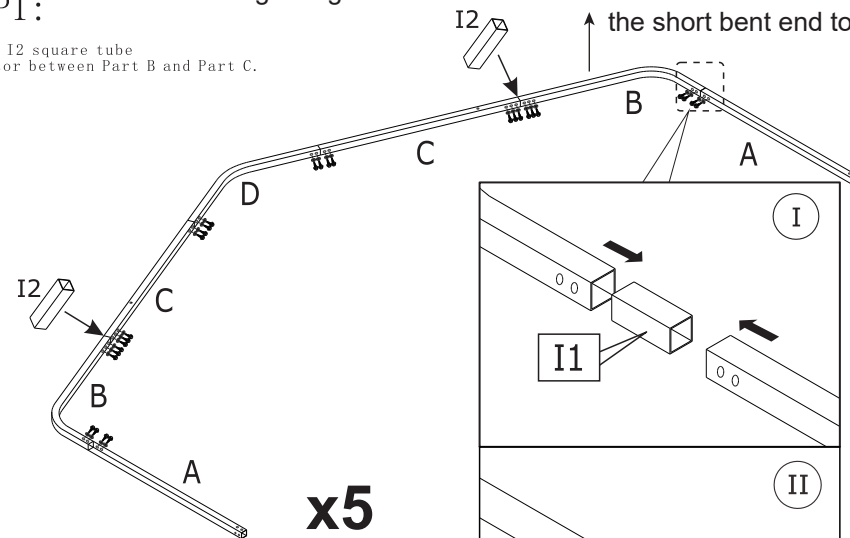

STEP2:

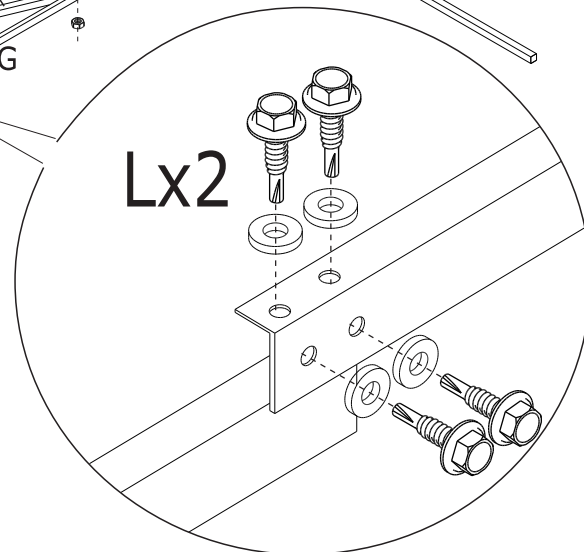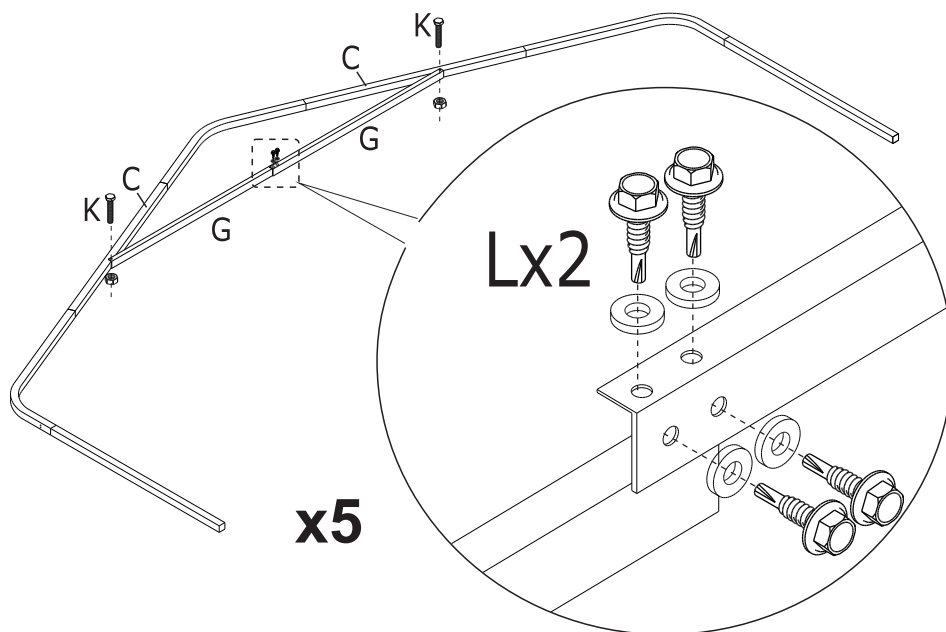


STEP3:

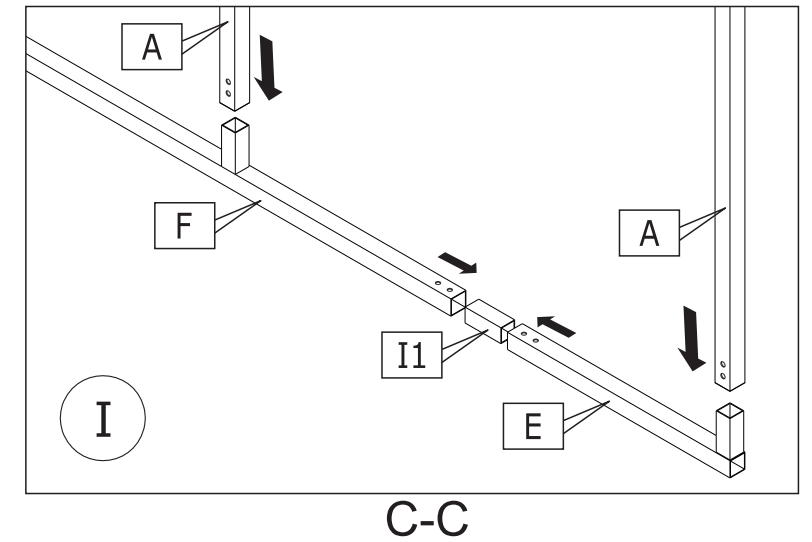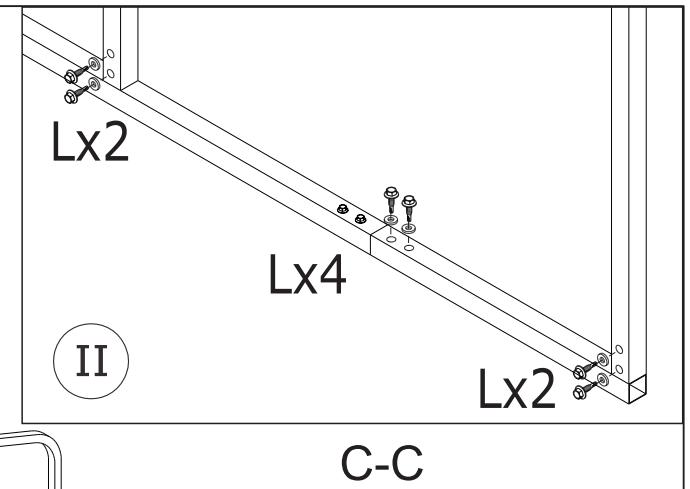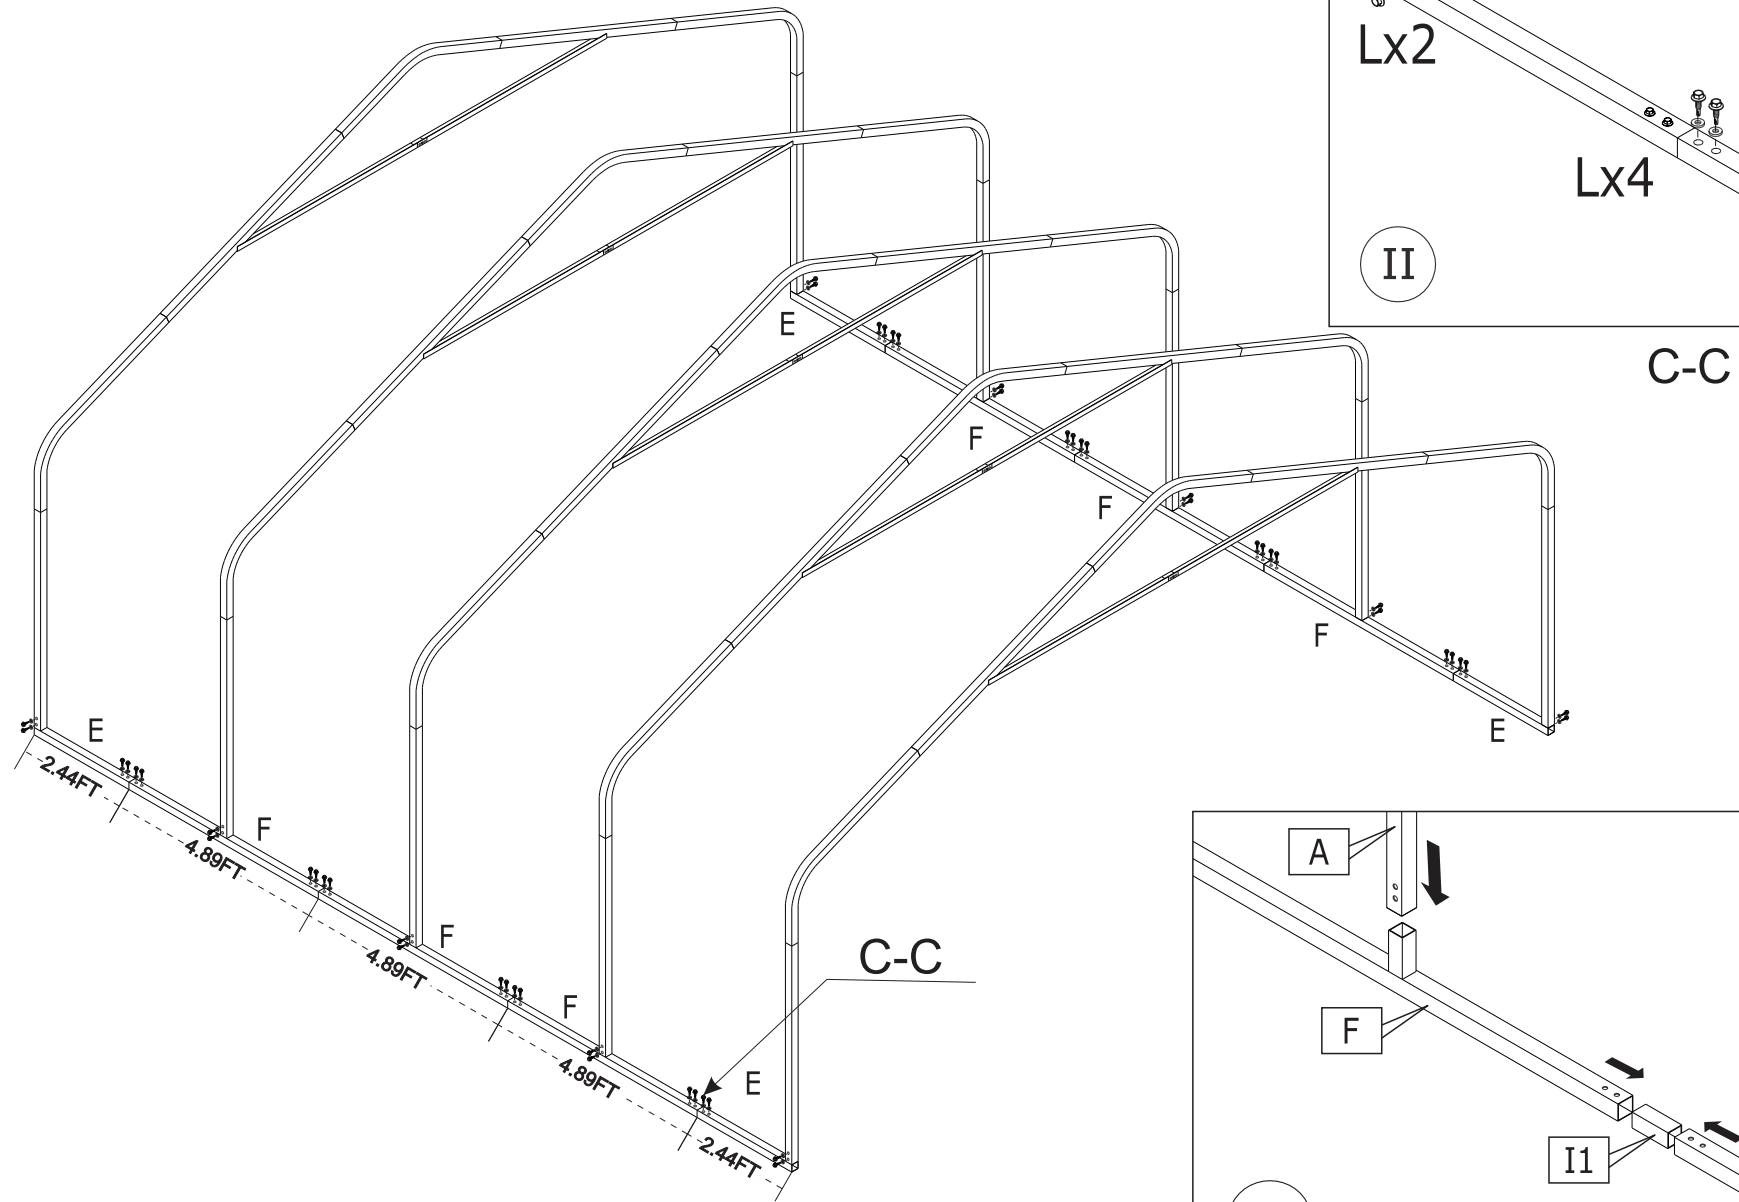


[According to the instructions of the size of the position of the placement of the installation, the other side of the size of the position as shown in the figure corresponds to one by one, in order to install the successful]

STEP4:





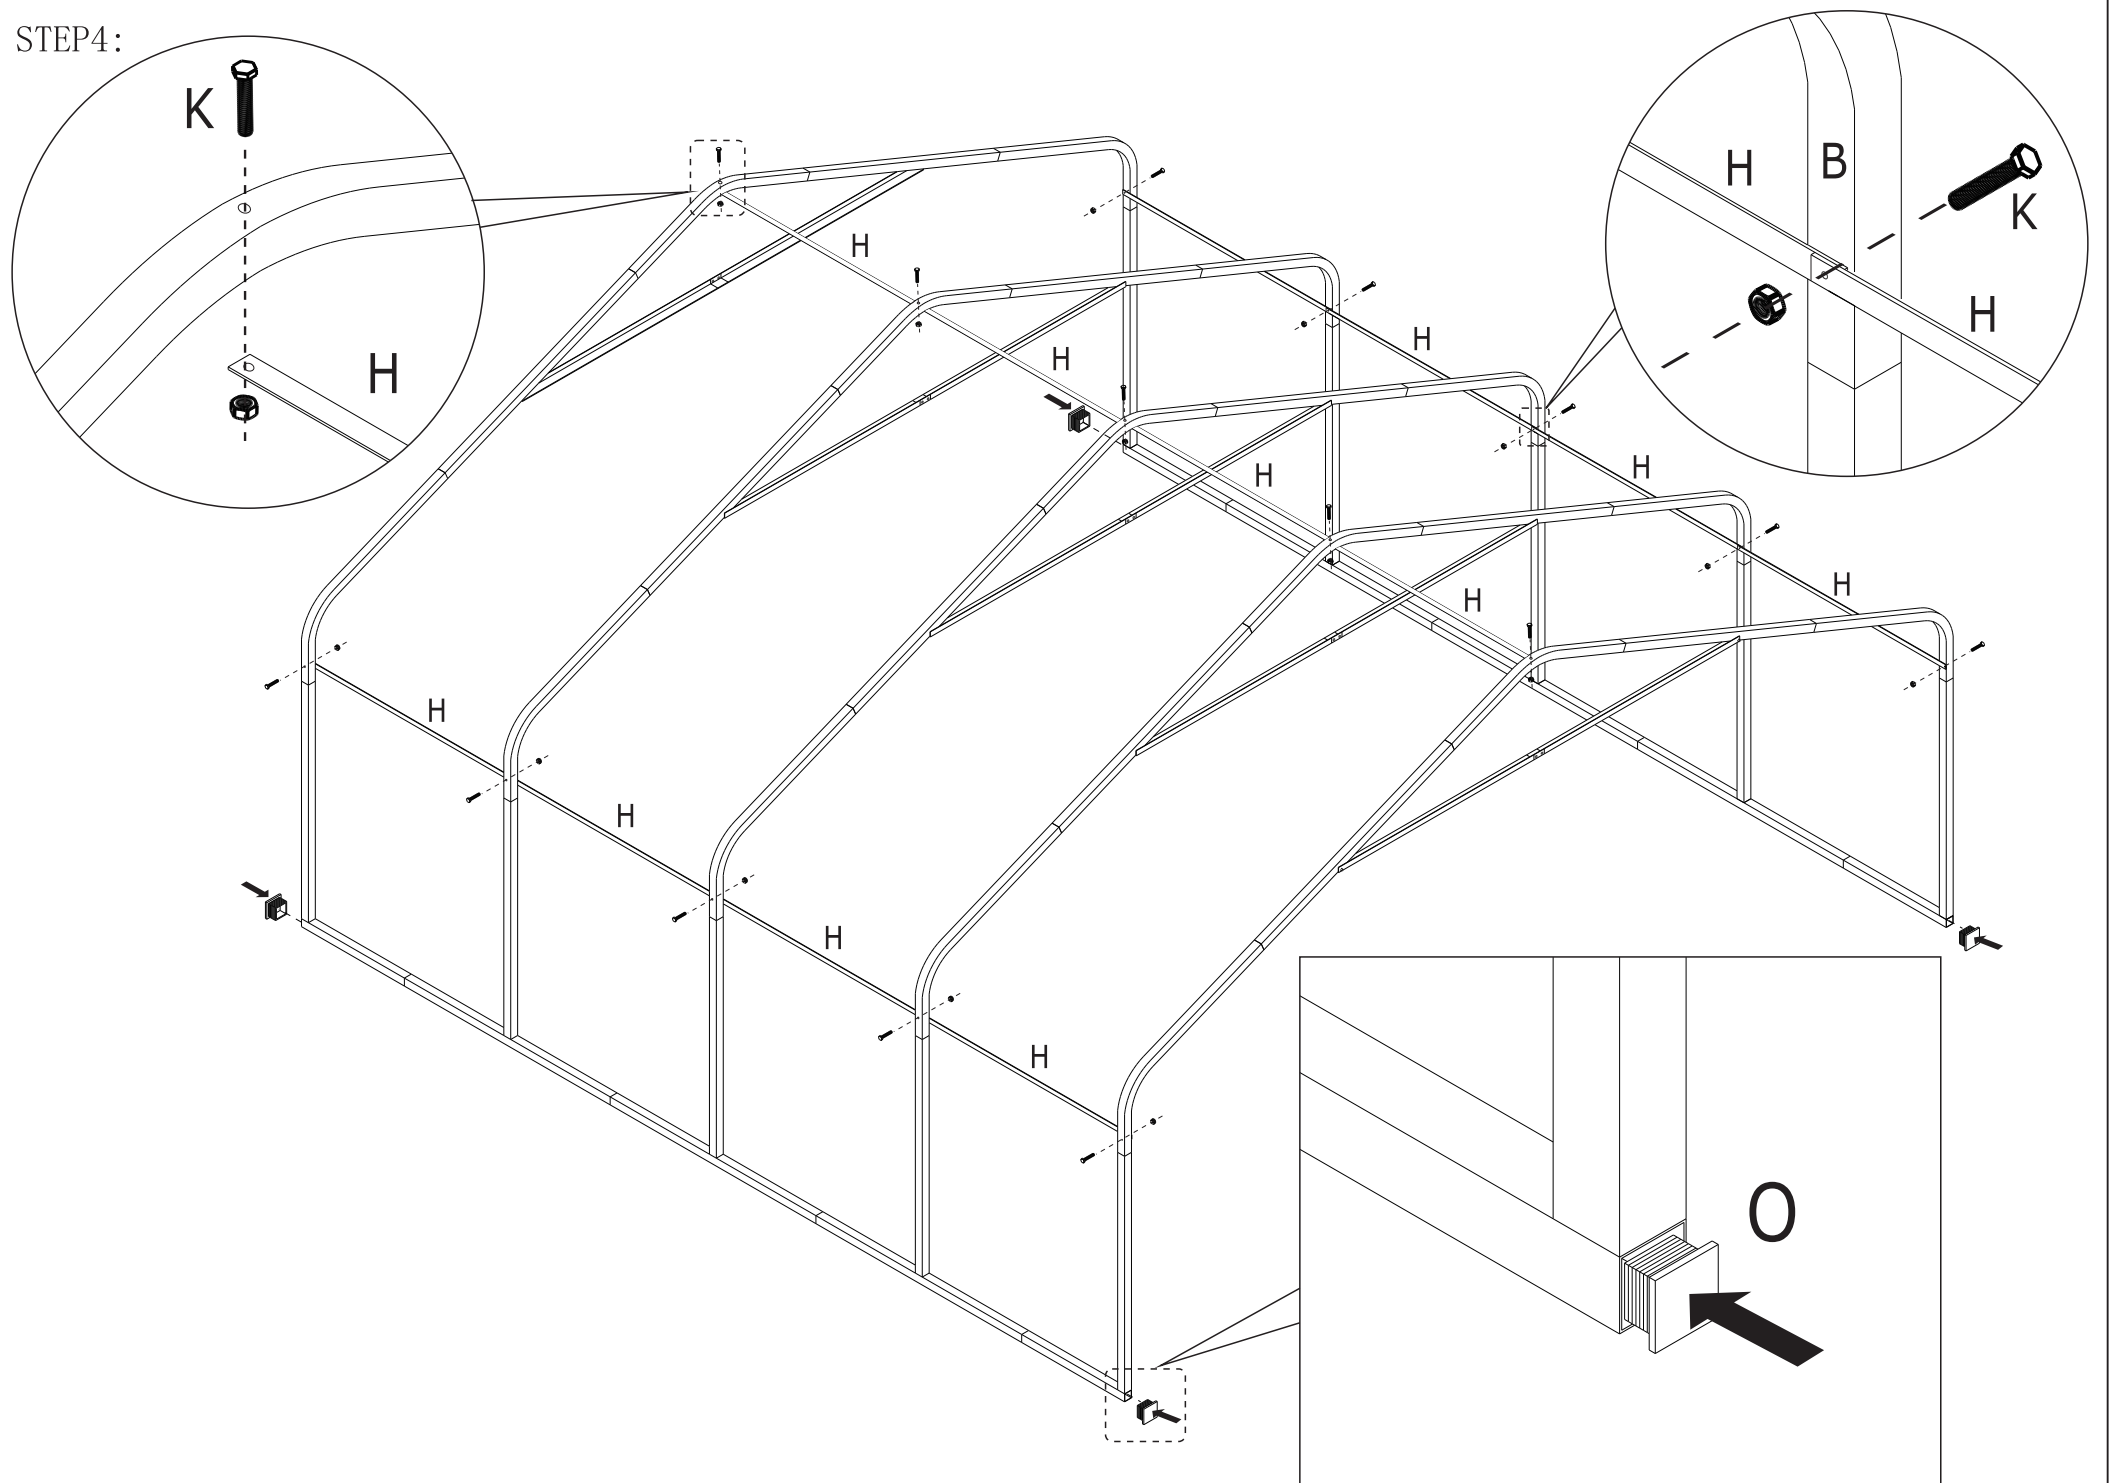


STEP5:

When installing Part Q,
you can use additional tile
nails (L) to secure both the
head and tail positions.

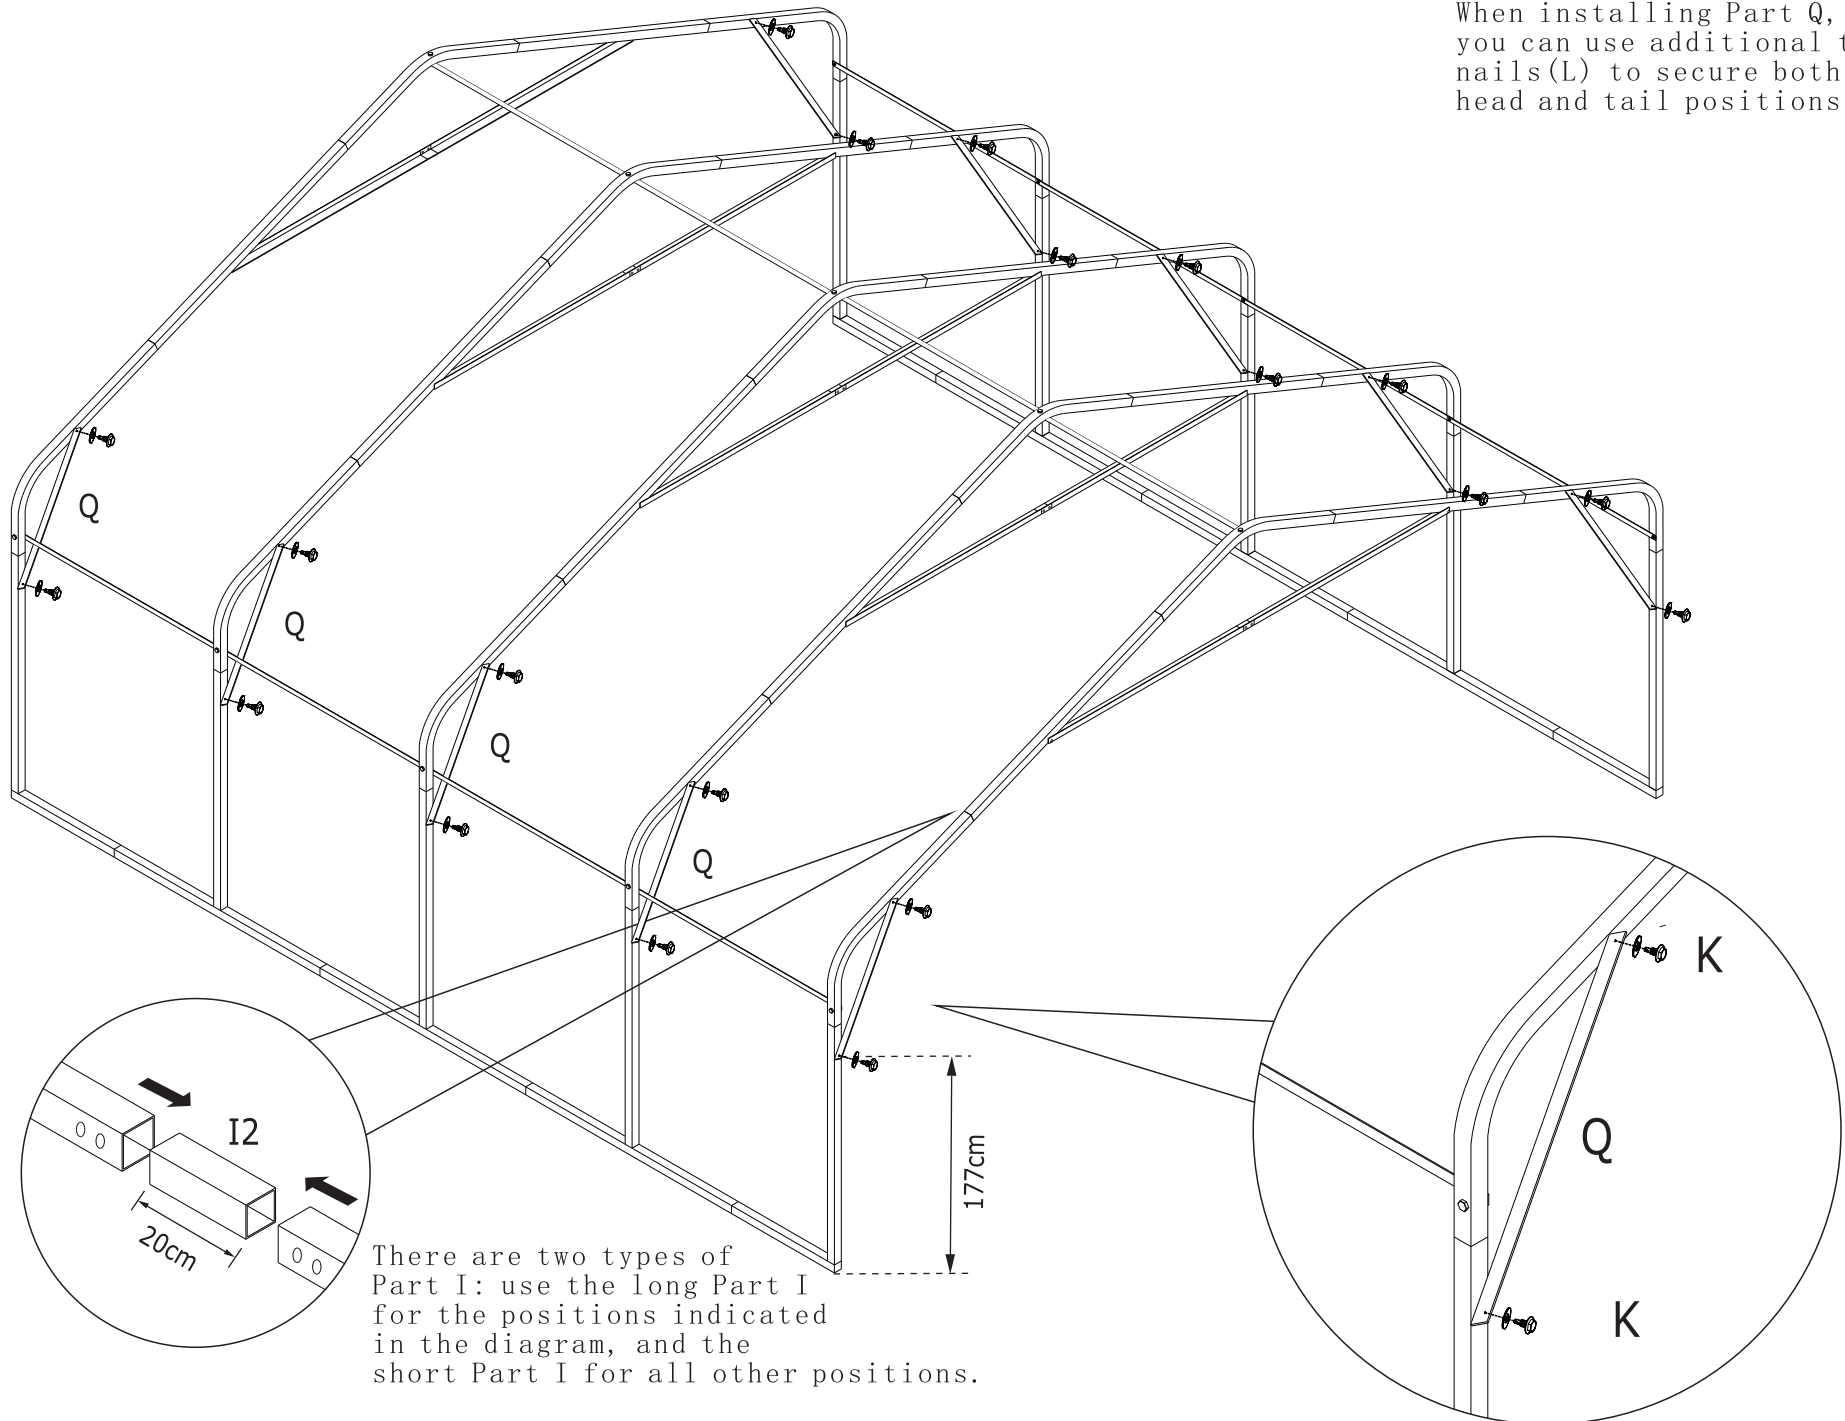

STEP6:

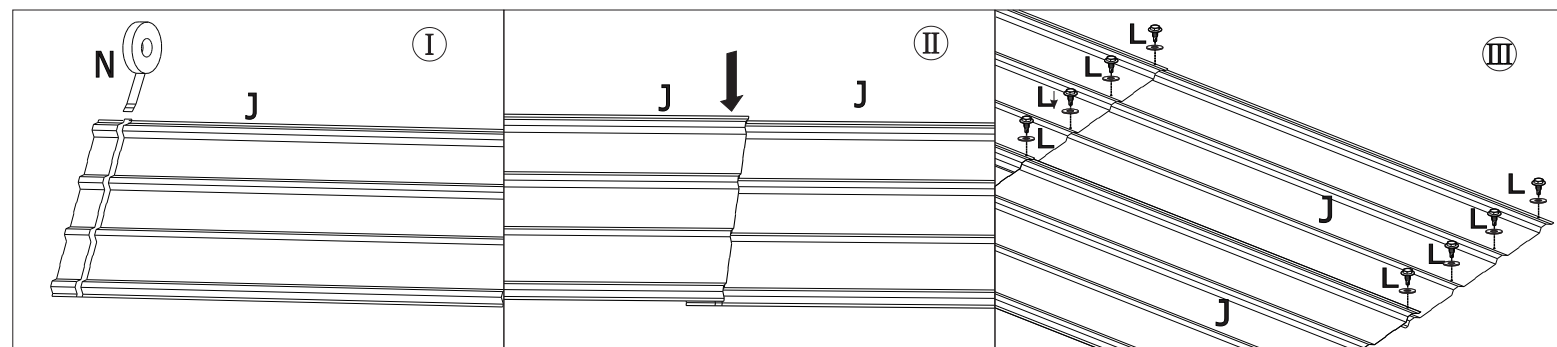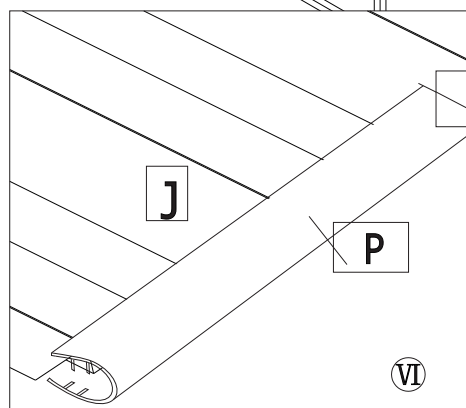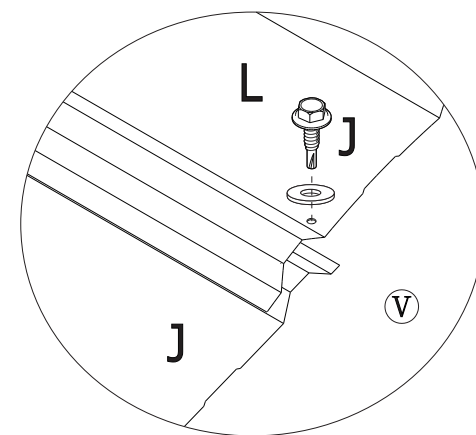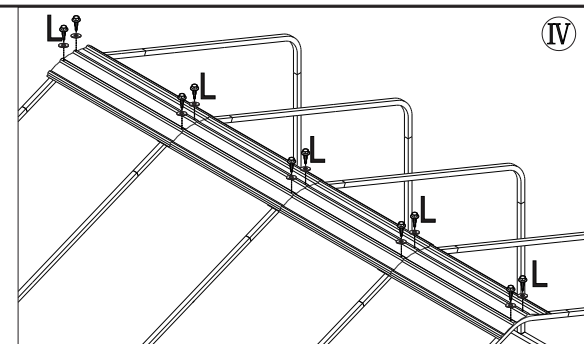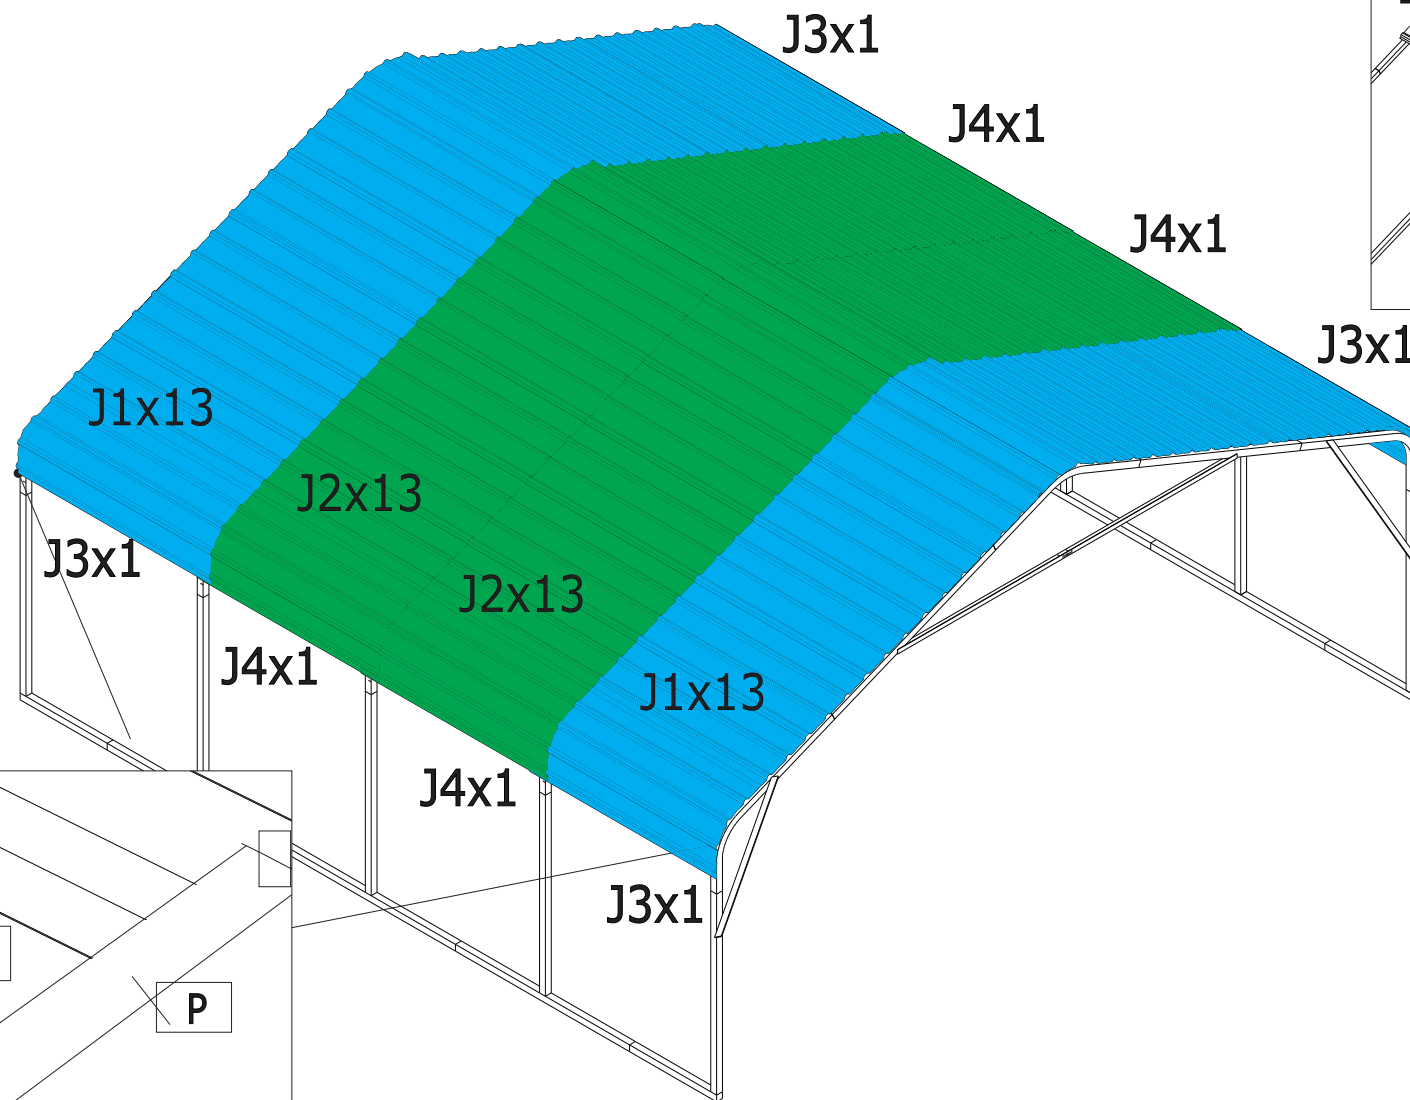

STEP7:

