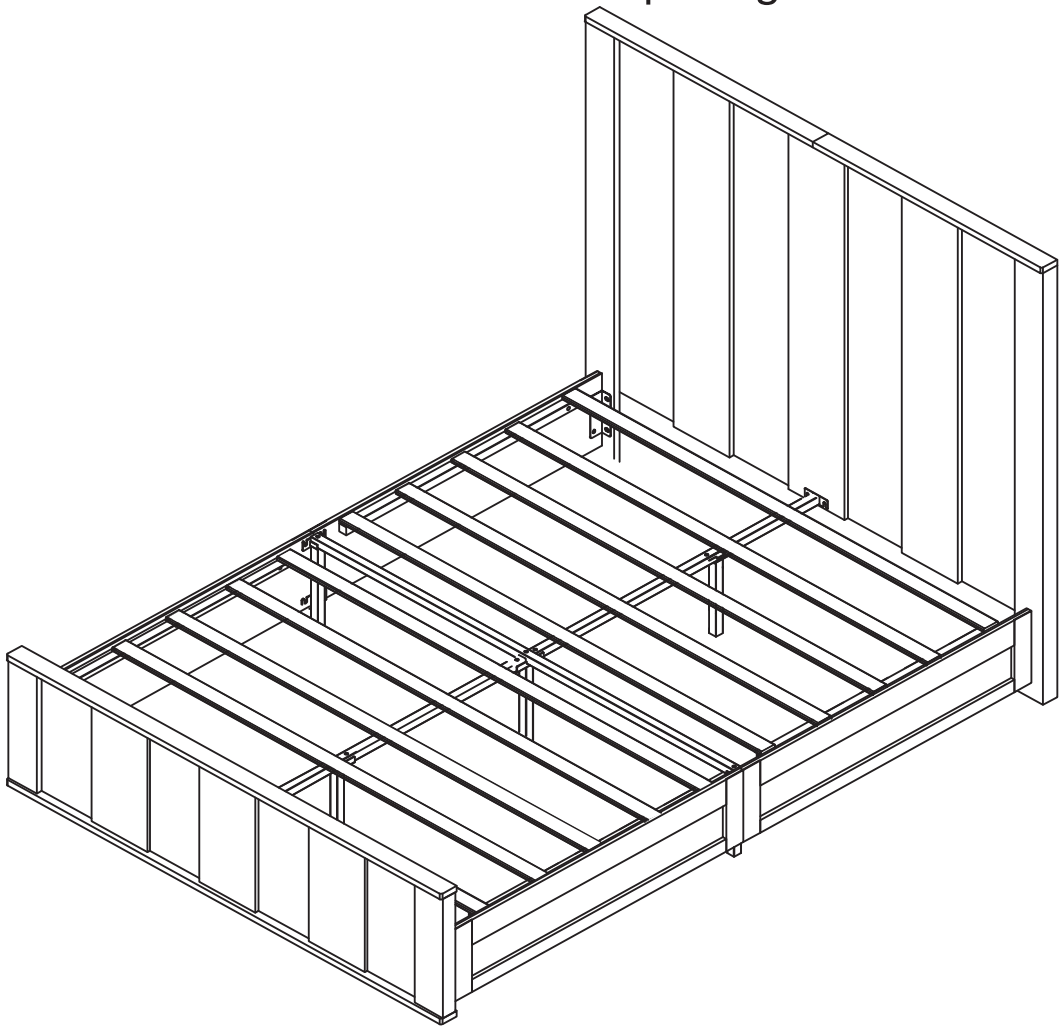
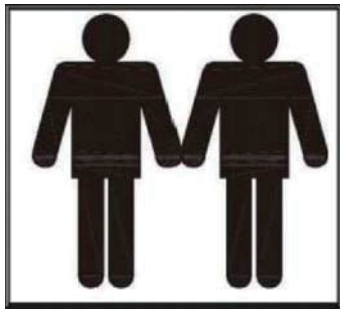
Assembly Instruction

Note:

1.Should be assembled on flat ground to keep balance.

2:Before completing the installation,do not tighten the screws.



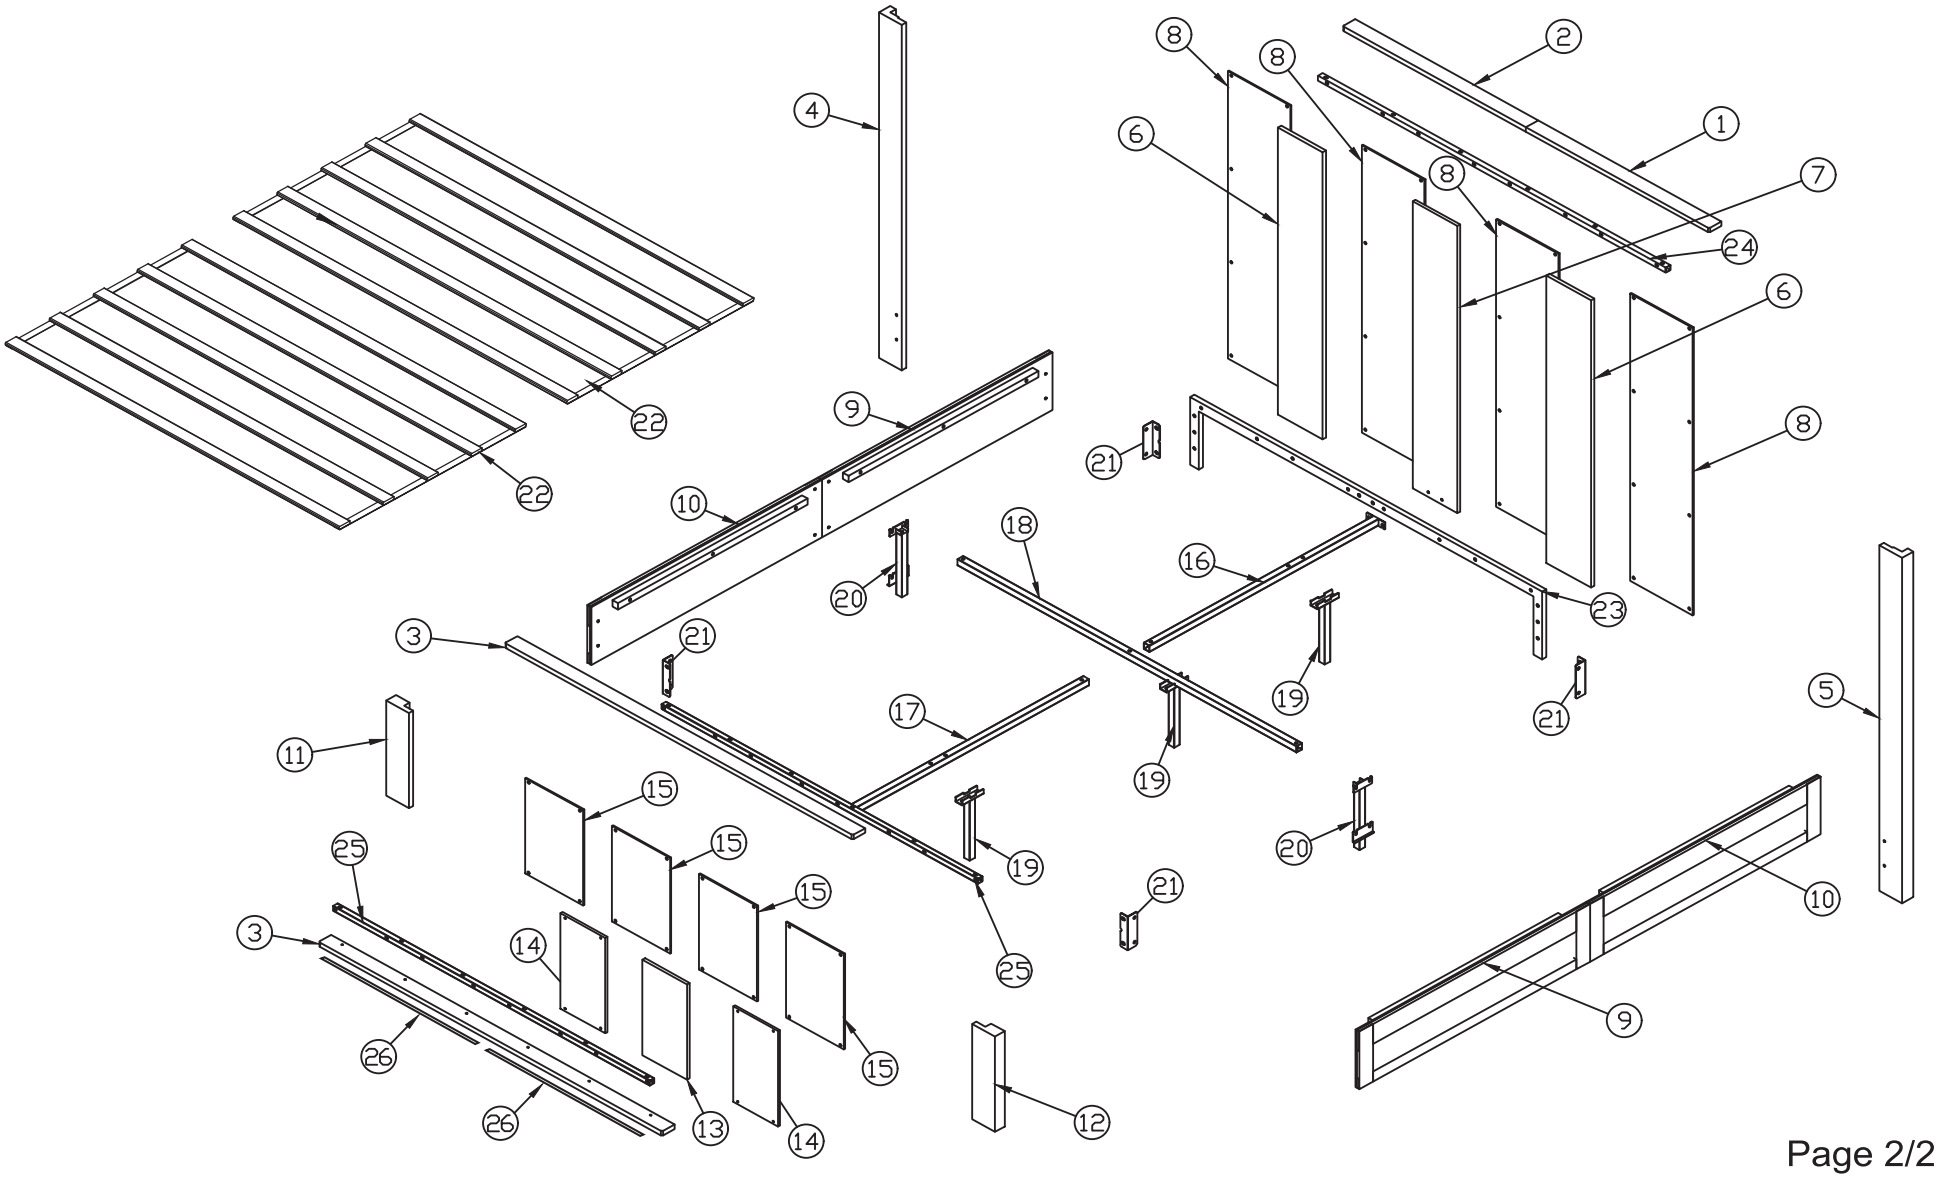


It needs at least
two people to install.



Before starting the
assembly,you must
read the whole
manual and follow
the instructions.

Assembly Instruction


























Assembly Instruction

Hardware Parts

Ⓐ	Ⓑ	Ⓒ	Ⓓ	Ⓔ	Ⓕ	Ⓖ
						
M6x12 16pcs	M6x32 50pcs	M8x12 26pcs	M8x35 14pcs	M8x50 1pc	4 # 1pc	M8x30 2pcs

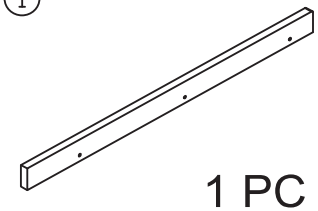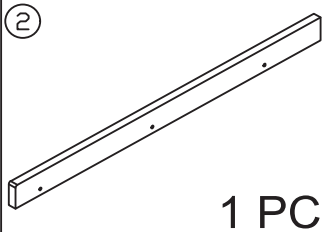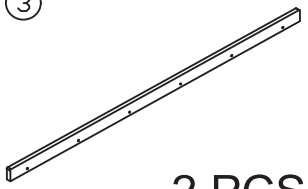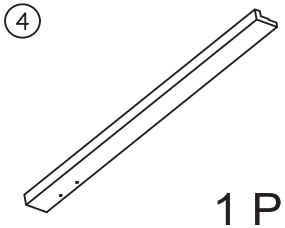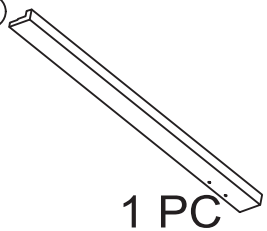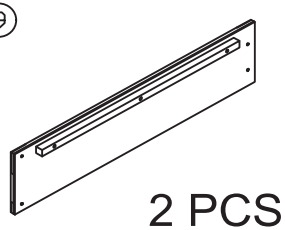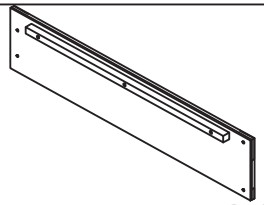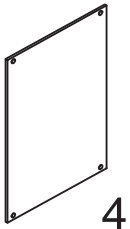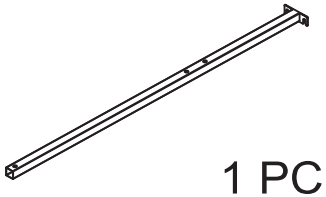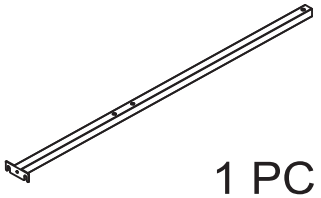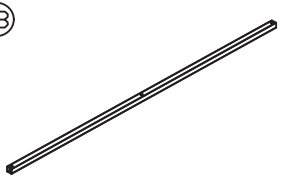
Part list

①  1 PC	②  1 PC	③  2 PCS	④  1 PC	⑤  1 PC	⑥  2 PCS
⑦  1 PC	⑧  4 PCS	⑨  2 PCS	⑩  2 PCS	⑪  1 PC	⑫  1 PC
⑬  1 PC	⑭  2 PCS	⑮  4 PCS	⑯  1 PC	⑰  1 PC	⑱  1 PC

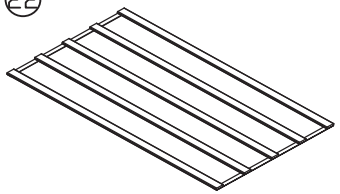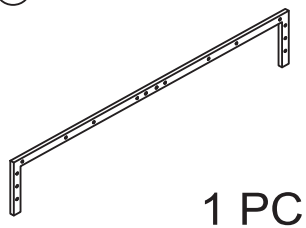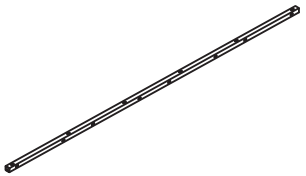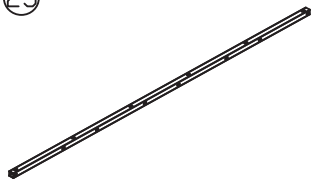⑲  3 PCS	⑳  2 PCS	㉑  4 PCS	㉒  2 PCS	㉓  1 PC	㉔  1 PC
㉕  2 PCS	㉖  2 PCS				

Assembly Instruction

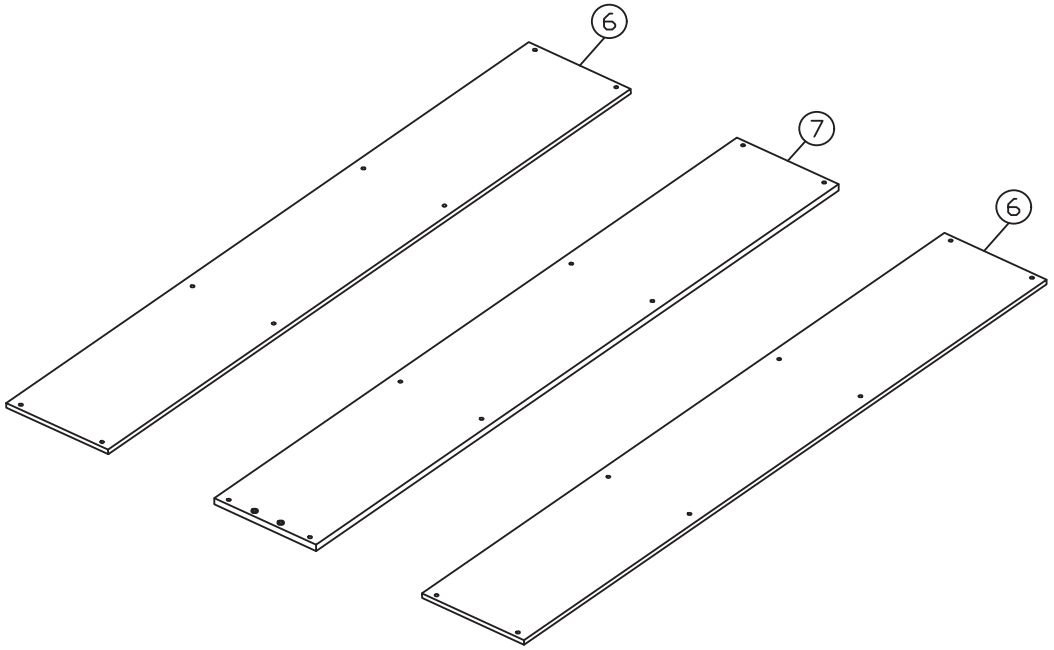
Note:Place the three boards as shown in the picture, leaving a small gap between each board.



Assembly Instruction

A	 M6x12	12pcs
F		1pc

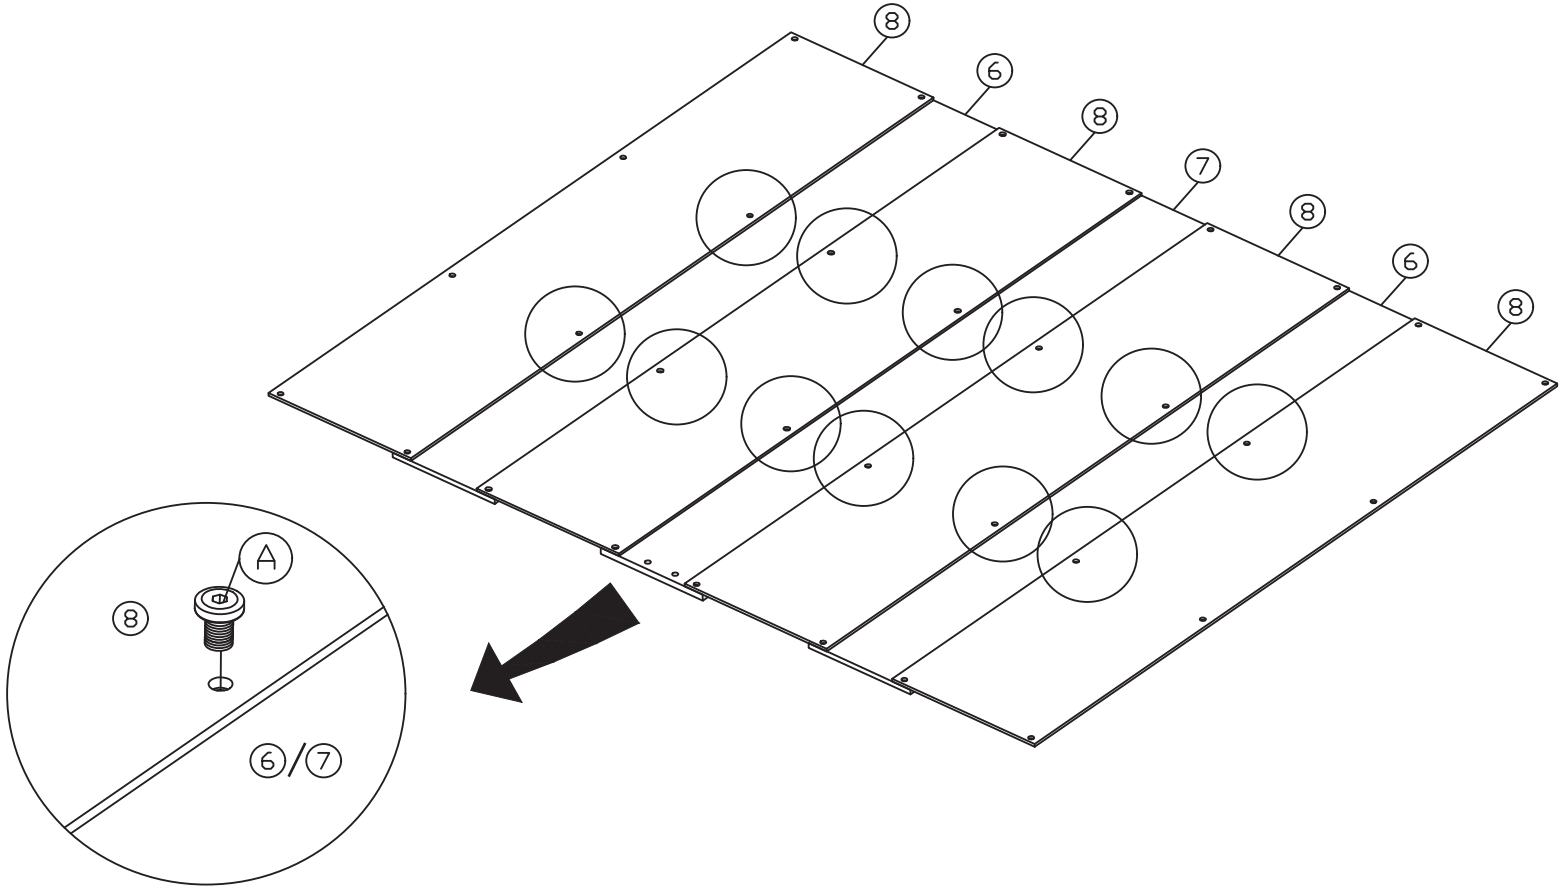Note: Next, place these 4 boards as shown in the diagram, aligning their holes with the three previously installed boards. Then start locking screws to secure the three boards underneath.



Assembly Instruction

B	 M6x32	12pcs
F		1pc

Assembly Instruction

A	 M6x12	4 pcs	B	 M6x32	4 pcs
D	 M8x35	6 pcs			
F		1pc			


Assembly Instruction

B	 M6x32	6 pcs
F		1 pc

Note: When installing the headboard top cover, make sure the side with the rounded feet faces outward.

Assembly Instruction

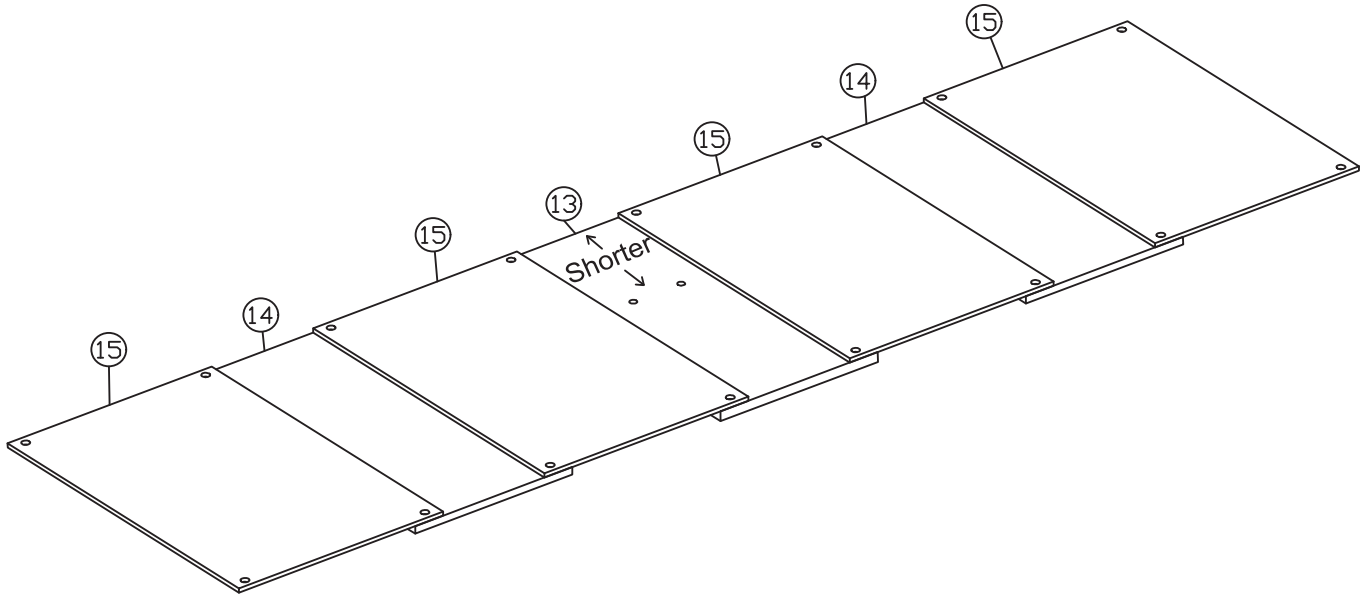
Note: Align the wooden boards exactly as shown in the diagram.



Assembly Instruction

B	M6x32	16pcs
F		1pc

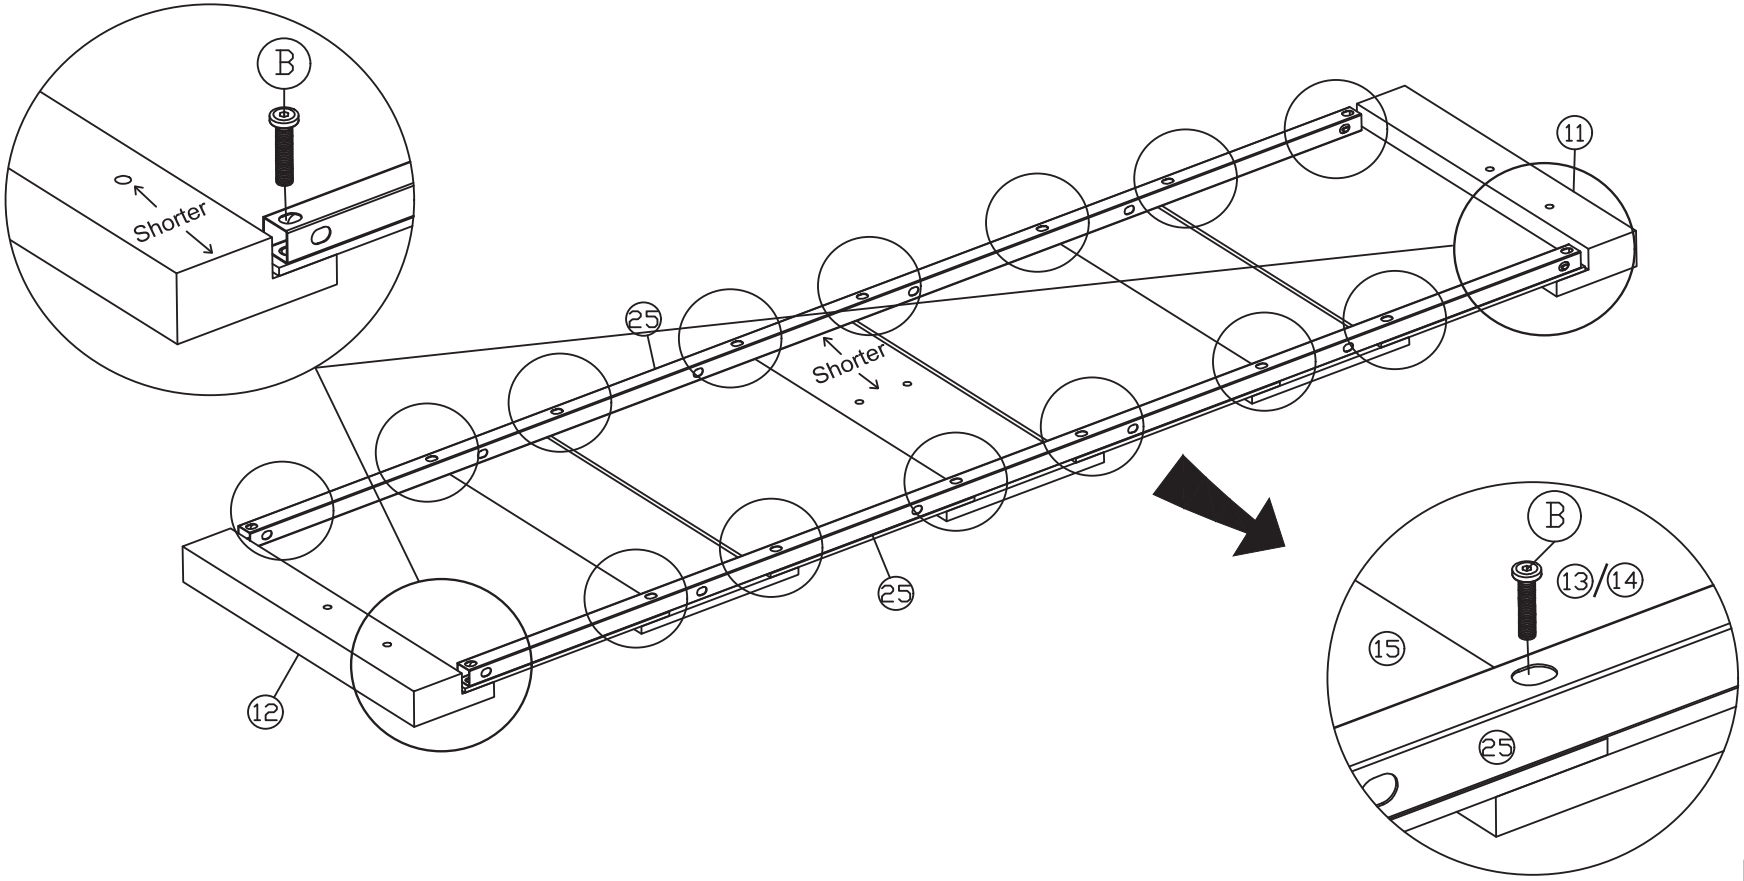Finally, position the left and right footboard legs and the two footboard tubes as shown in the diagram, align their holes, then start installing and tightening the screws.



Assembly Instruction


B	 M6x32	12pcs
F		1pc

Install this step with the rounded corner of Part 3 facing downward.

Note: No.26 EVA Stickers: Apply to the bottom of No.2 bed foot panel for wood protection.

Assembly Instruction

C	 M8x12	4 pcs
F		1 pc

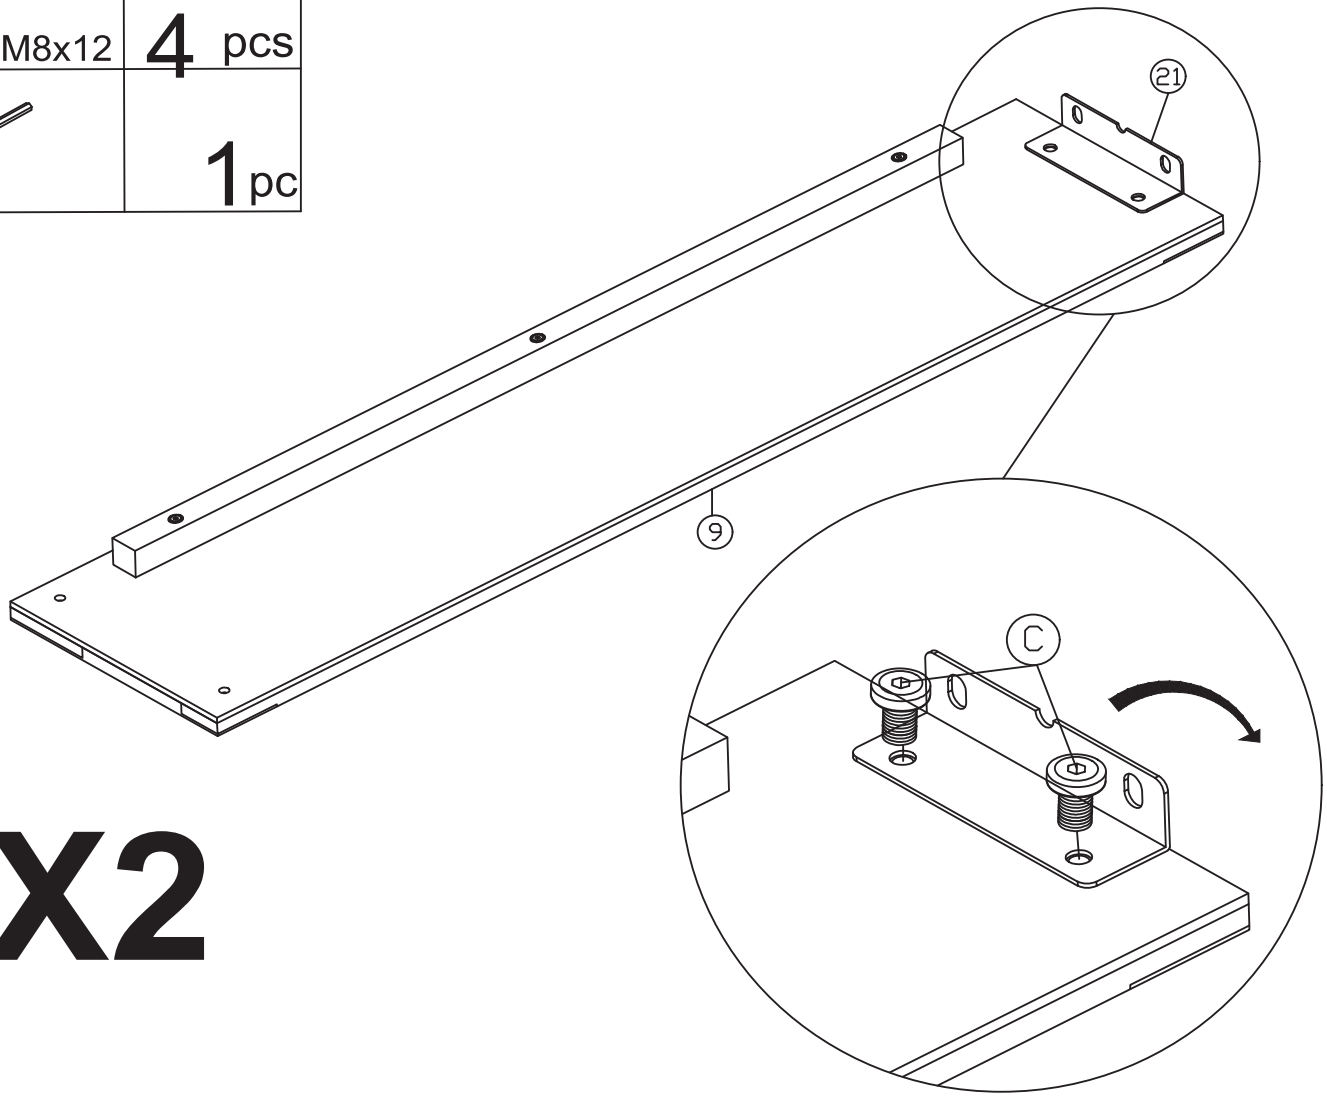



X2

Note:When installing, keep this notch facing upwards.

Assembly Instruction

C	 M8x12	4 pcs
F		1 pc

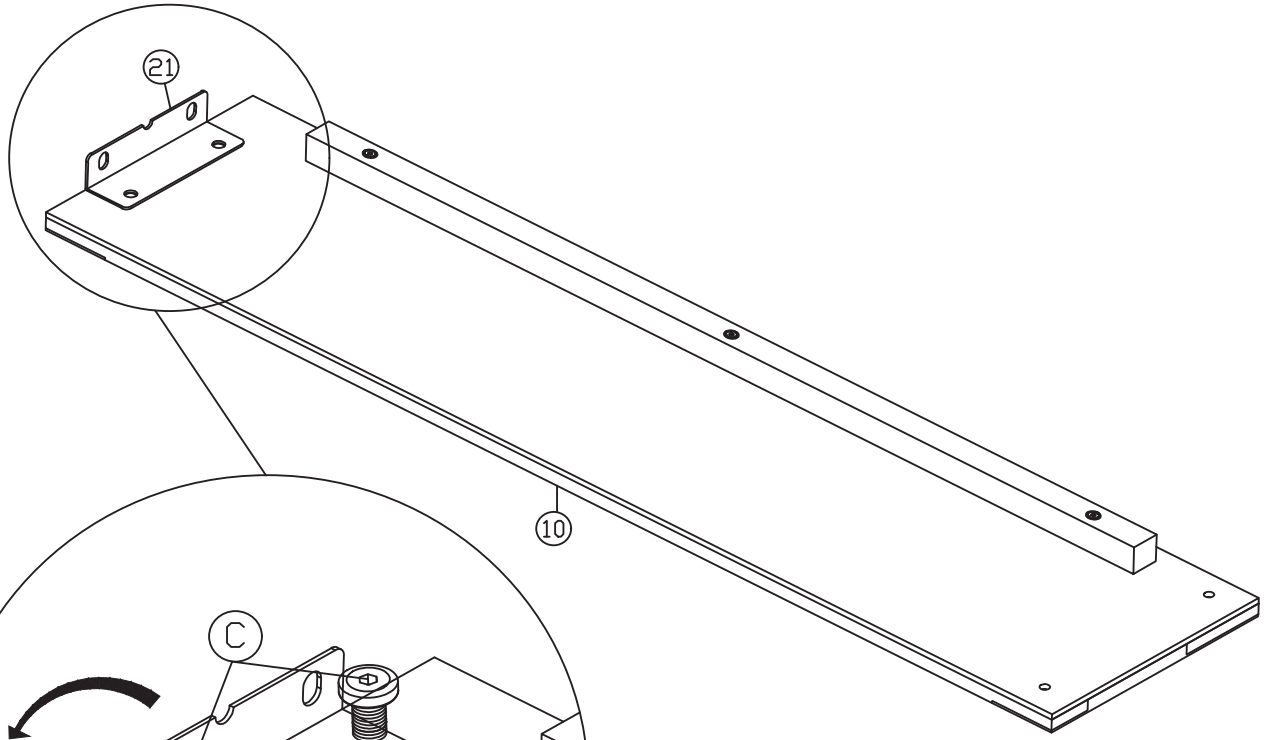

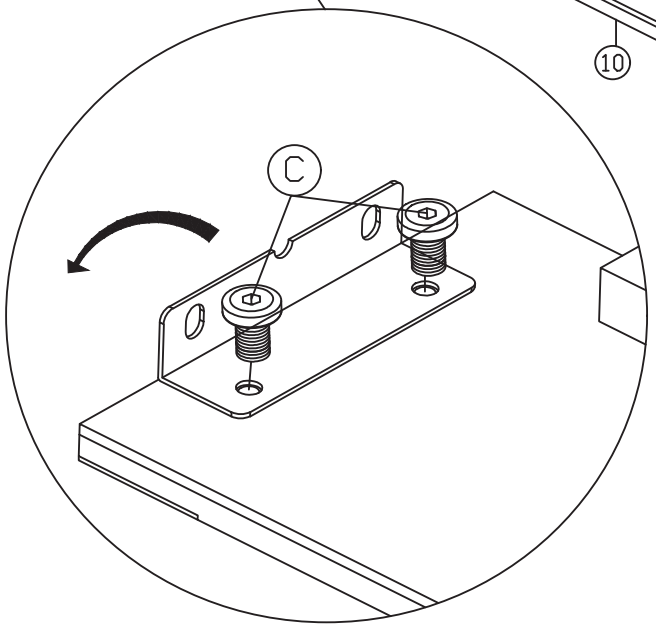


Note:When installing, keep this notch facing upwards.

X2

Assembly Instruction


C	 M8x12	8 pcs
F		1 pc

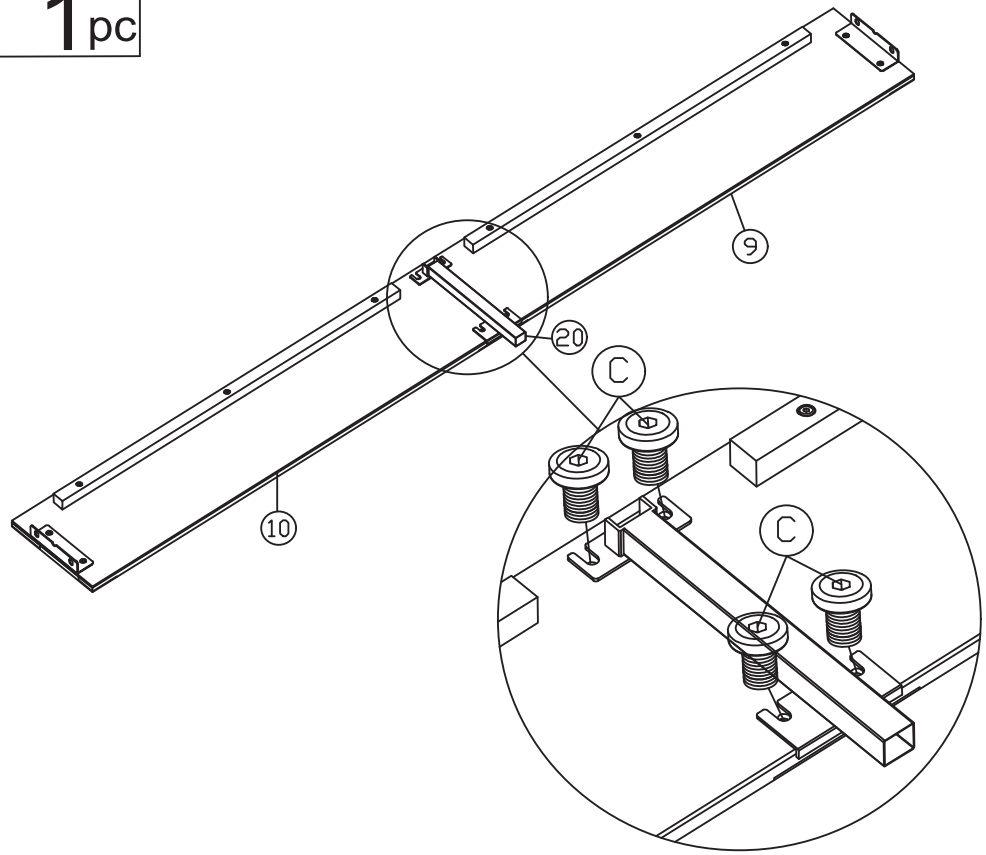

X2


Assembly Instruction

C	 M8x12	4 pcs
F		1 pc

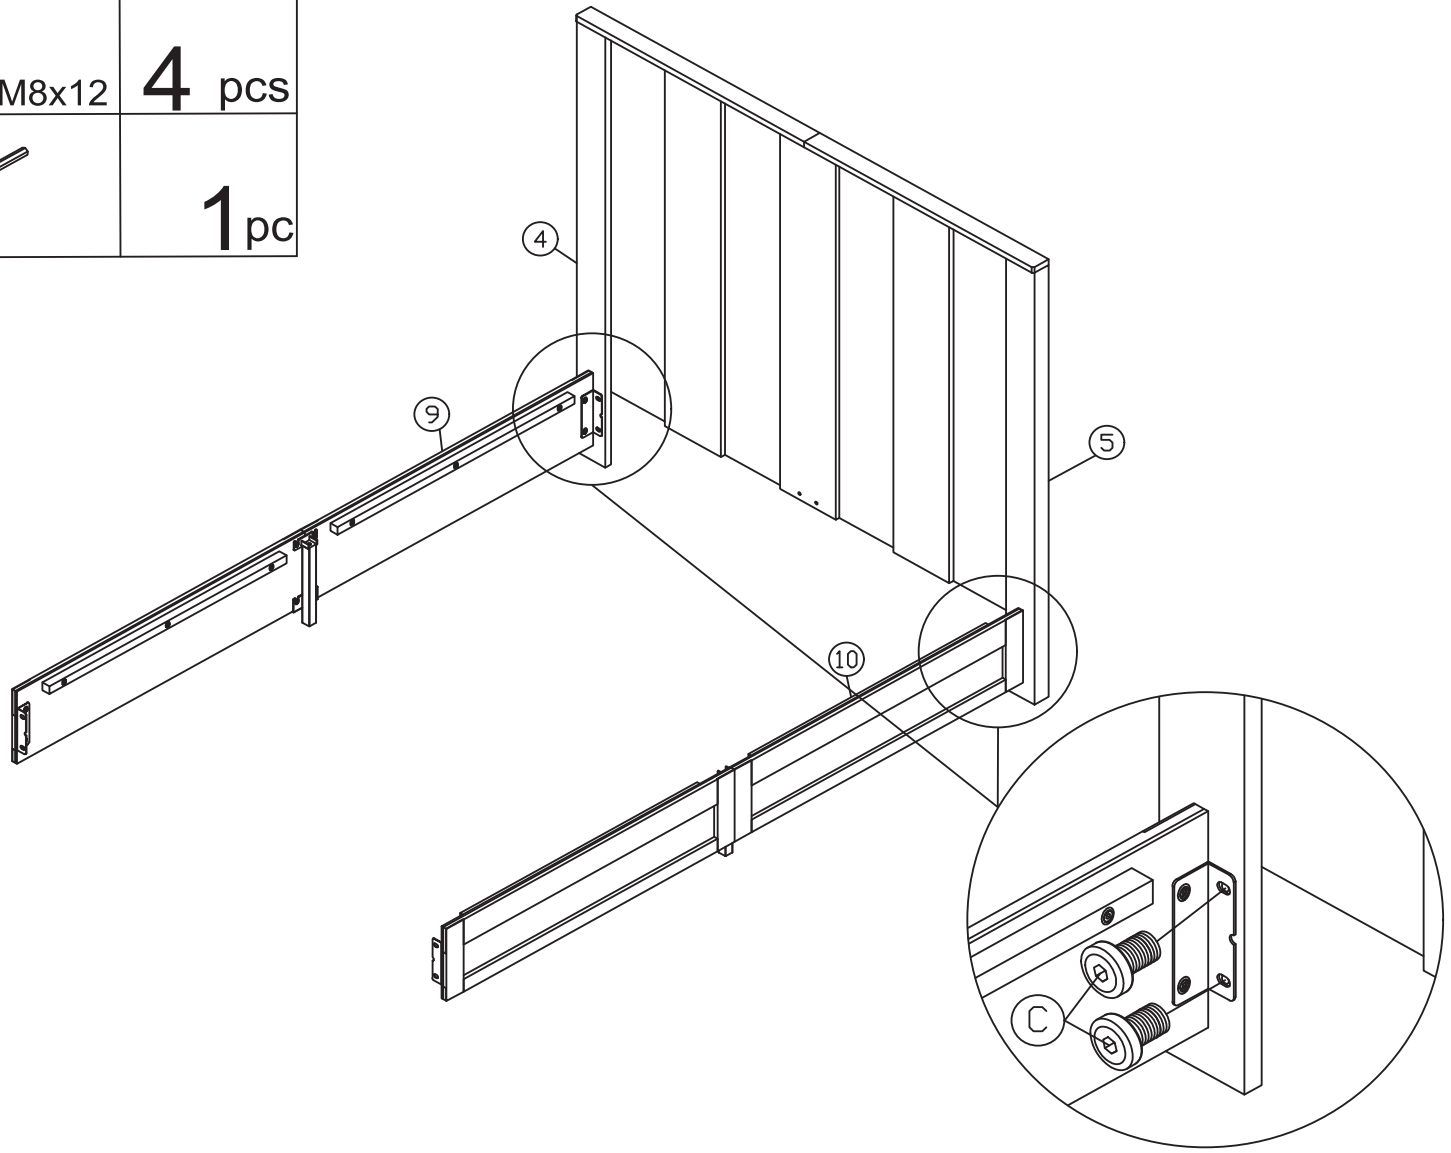


Assembly Instruction

C	 M8x12	4 pcs
F		1 pc

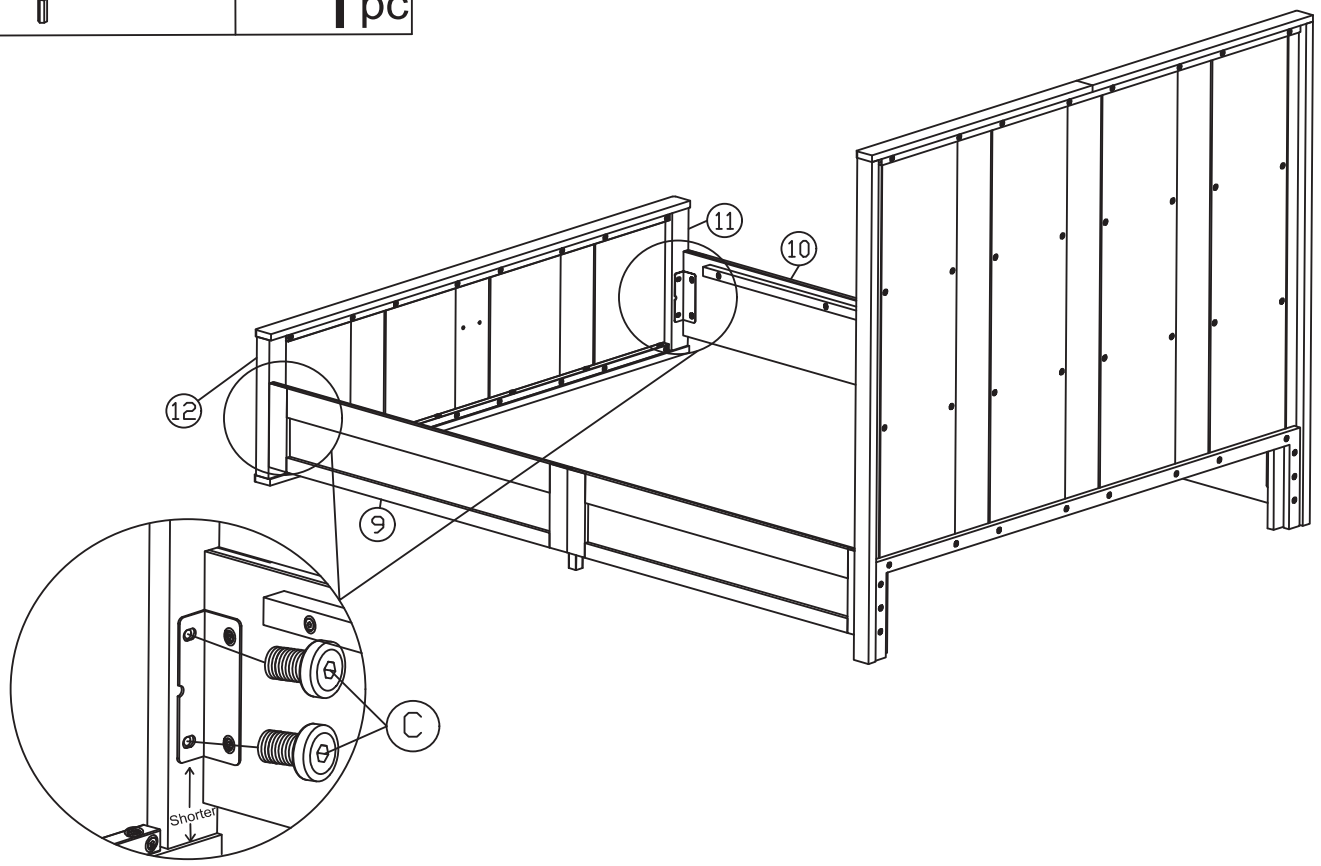

Assembly Instruction


D	 M8x35	2pcs
E	 M8x50	1pc
F		1pc

Assembly Instruction

D	 M8x35	4pcs
F		1pc

Assembly Instruction

C	 M8x12	2pcs
D	 M8x35	2pcs
F		1pc
G	 M8x30	2pcs

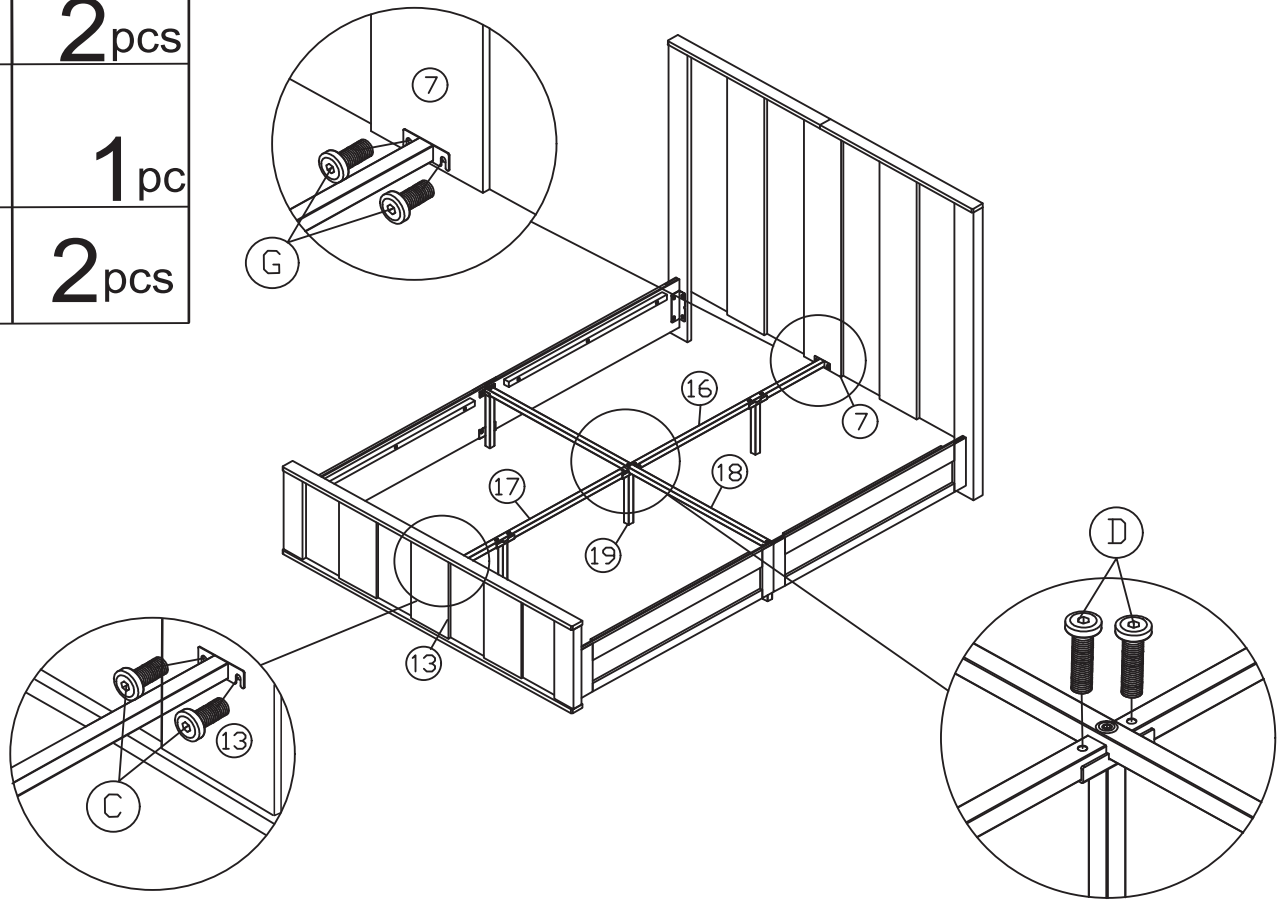

Assembly Instruction

