

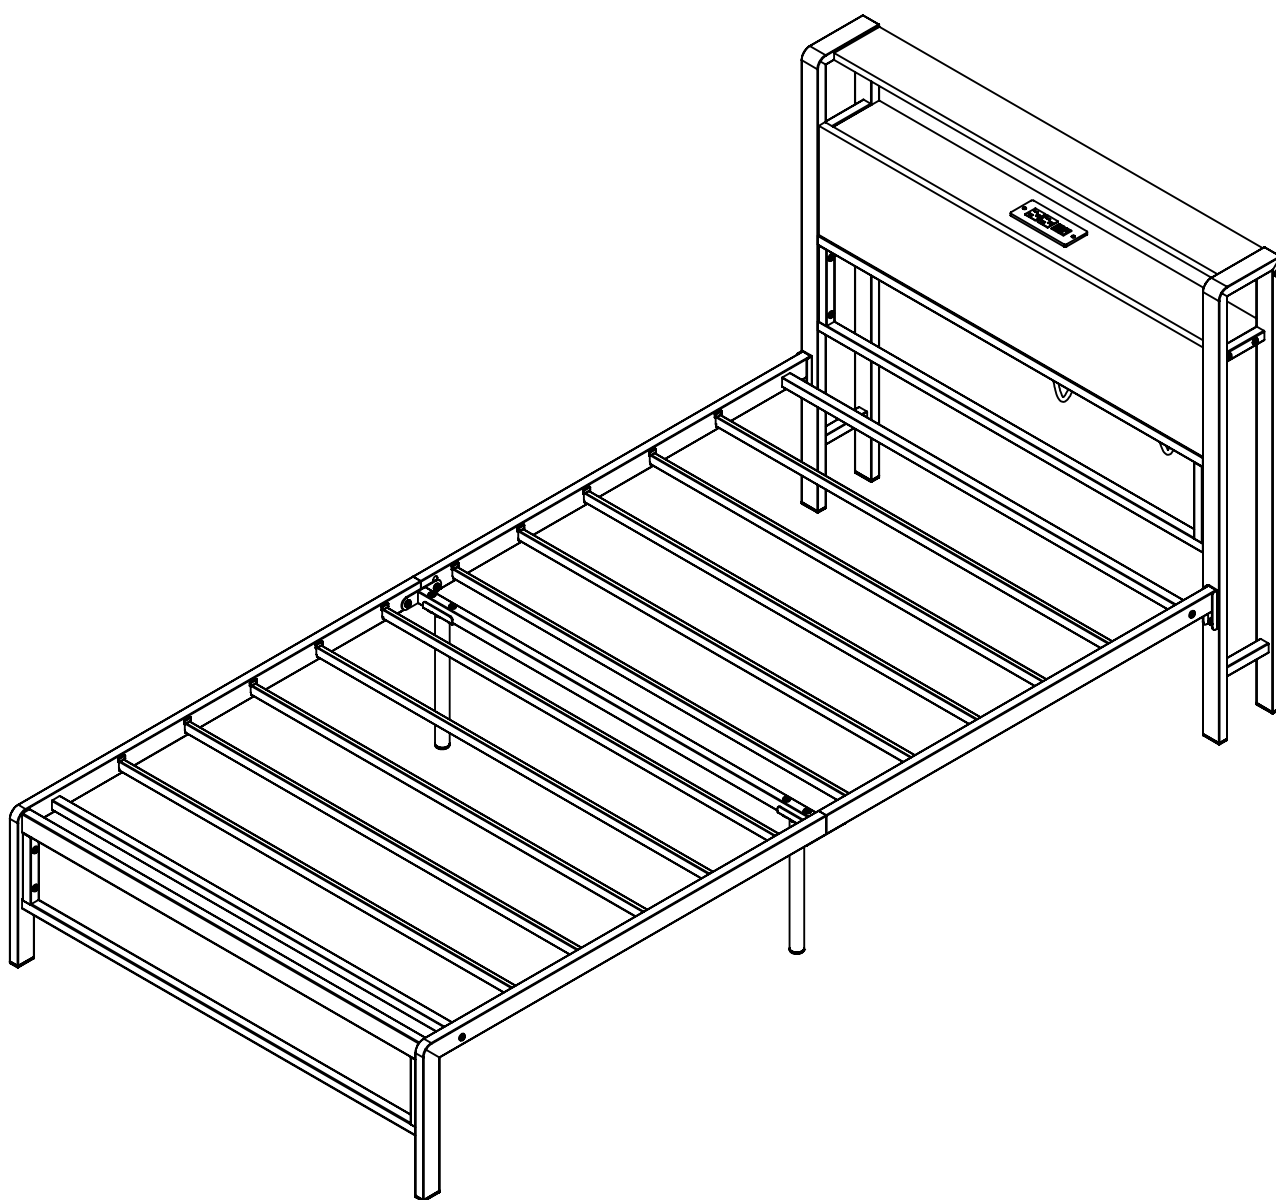
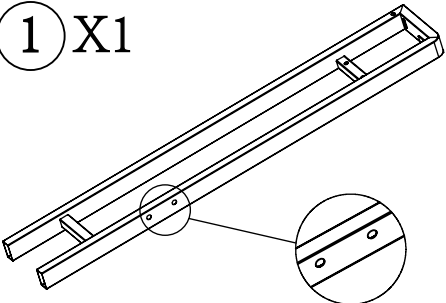
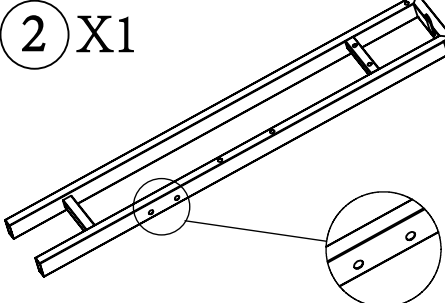
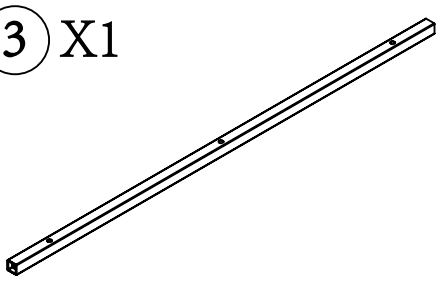
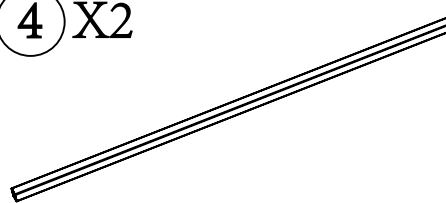
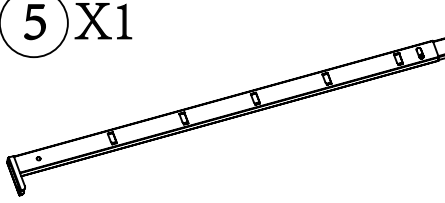
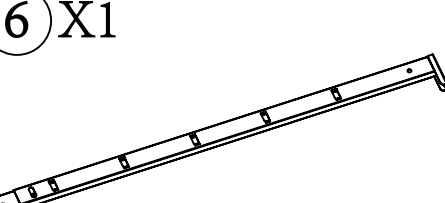
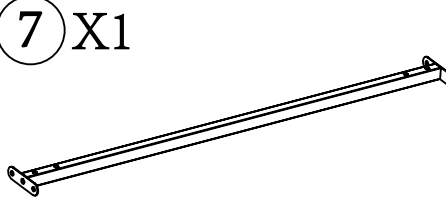
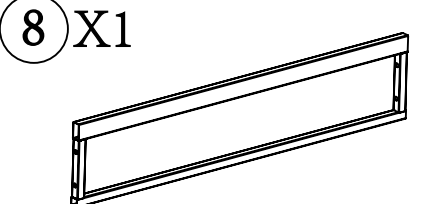
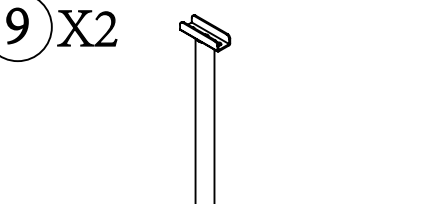
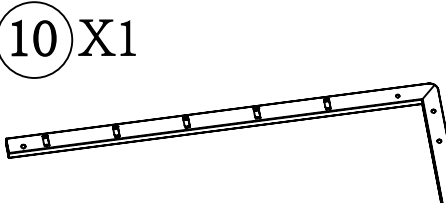
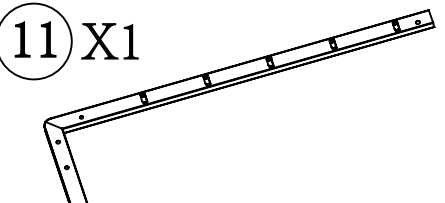
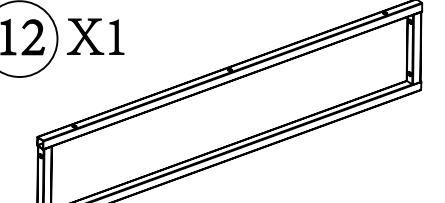
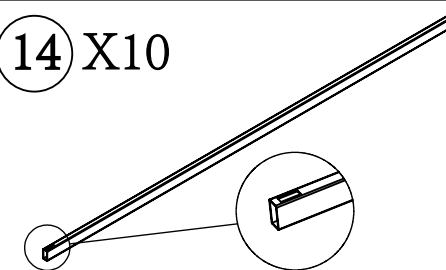
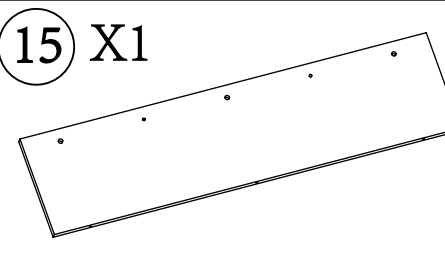
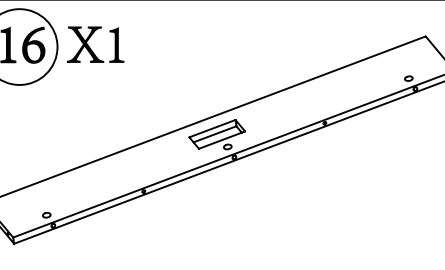
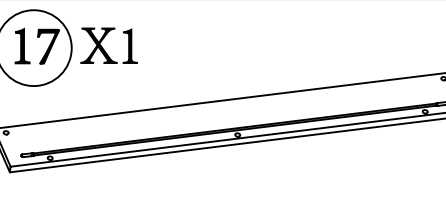
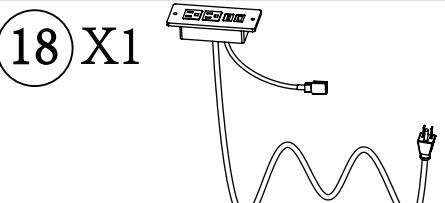
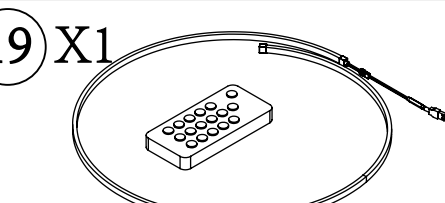





TWIN BED FRAME

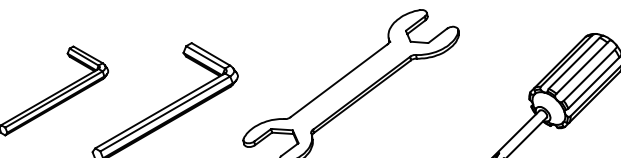


① X1 		② X1 		③ X1 	
④ X2 		⑤ X1 		⑥ X1 	
⑦ X1 		⑧ X1 		⑨ X2 	
⑩ X1 		⑪ X1 		⑫ X1 	
⑭ X10 		⑮ X1 		⑯ X1 	
⑰ X1 		⑱ X1 		⑲ X1 	
Ⓐ X4  M8X30	Ⓑ X4  M8X12	Ⓒ X4  M8	Ⓓ X7  M6X40	Ⓔ X2  M6X60	Ⓕ X16  M6X35
Ⓖ X3  M6X30	Ⓗ X4  M6	Ⓘ X2  M6X10	Ⓙ X2 	Ⓚ X3 	Ⓛ X3 
Ⓜ X2  ST4X12	Ⓝ X20 				

Difference screws display(1:1)

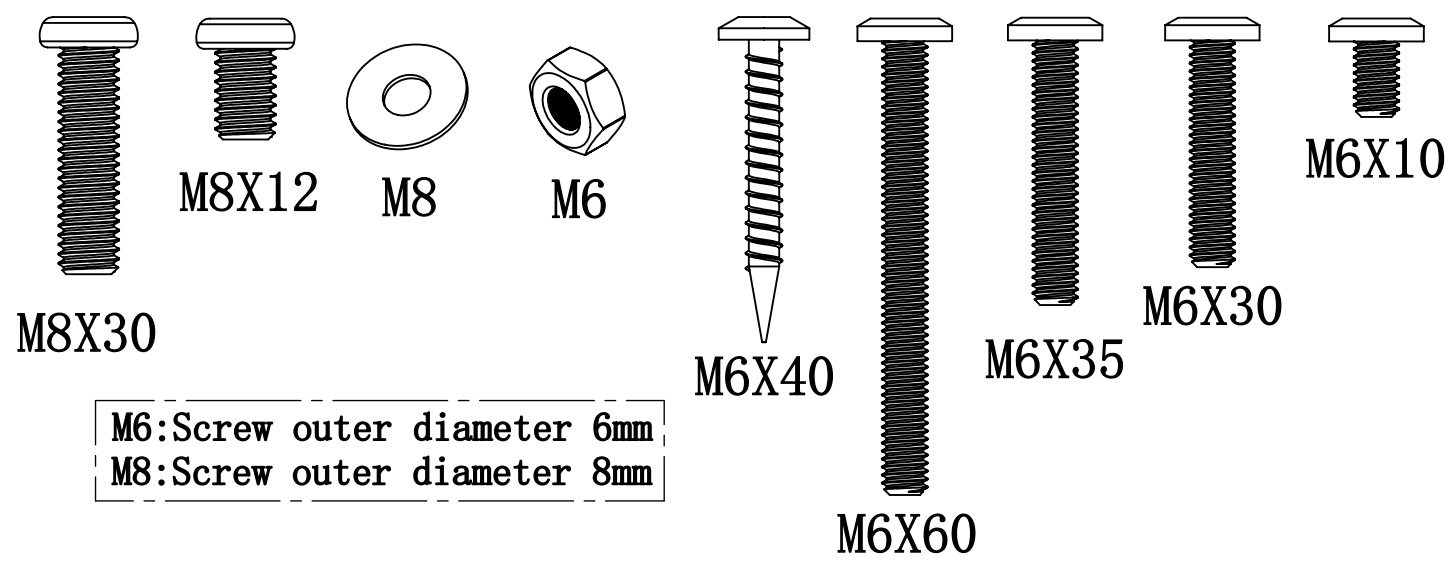


Step 1

E	M6X60	2
F	M6X35	4

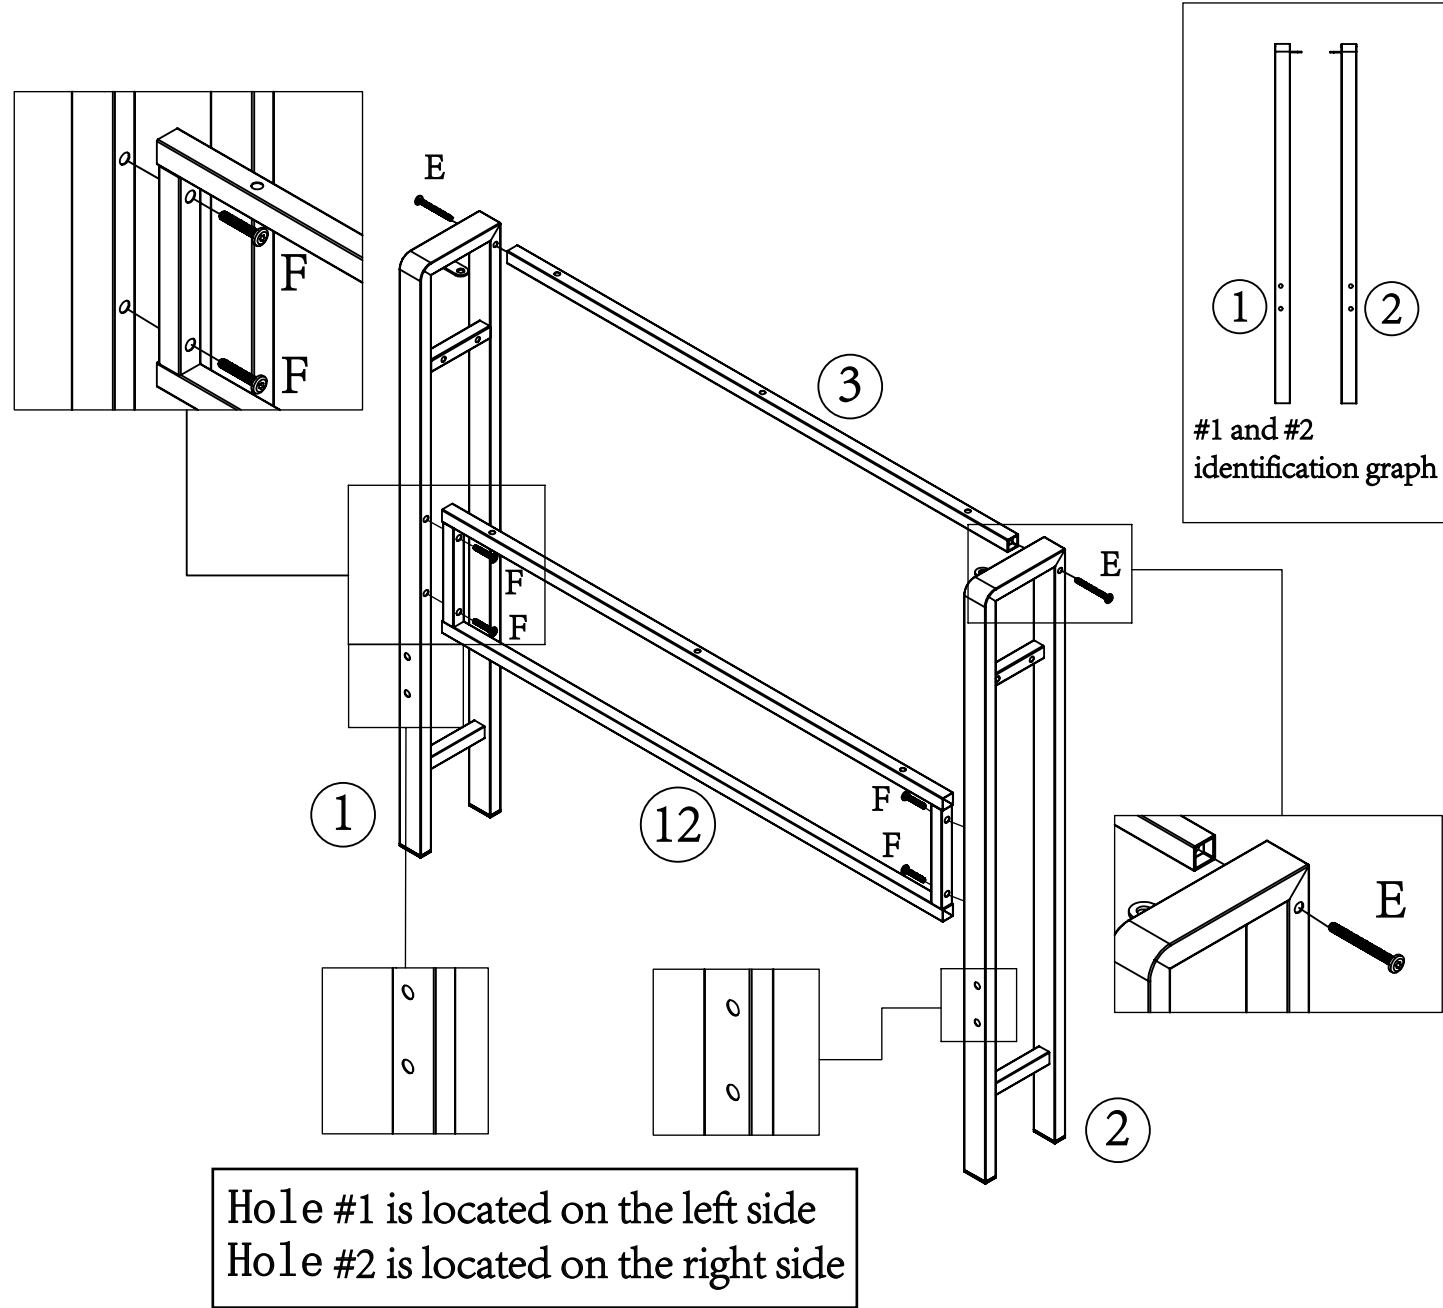


Step 2

M	ST4X12	2
---	--------	---

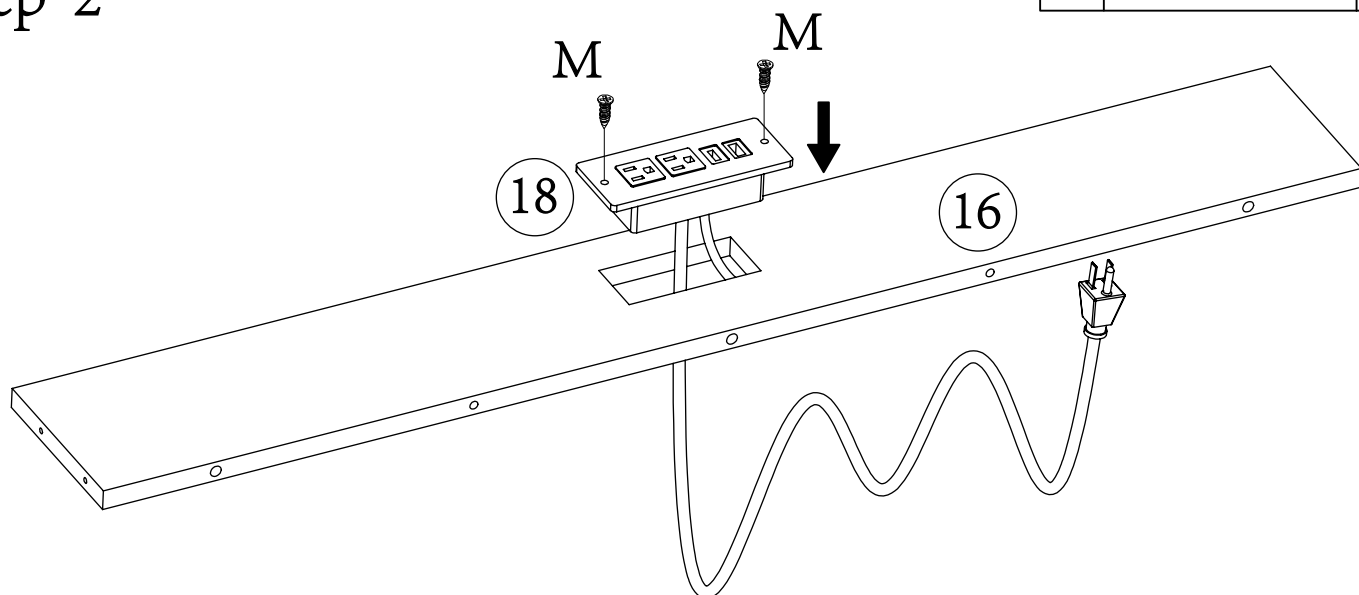



Step 3

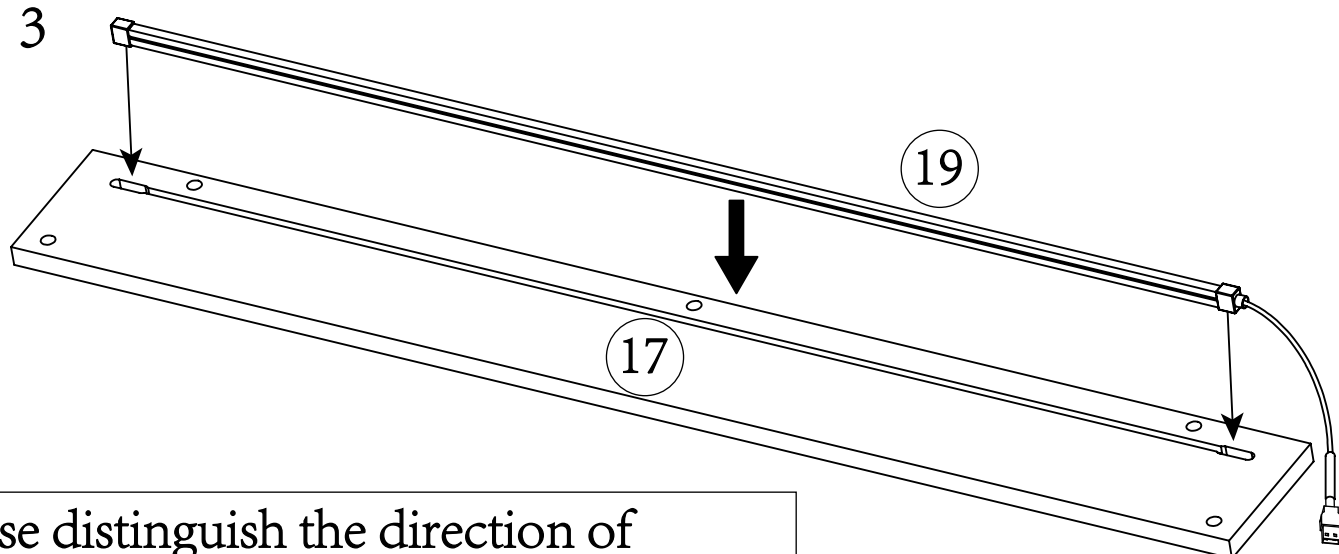

Please distinguish the direction of the LED lights and make it face outward

Step 4

J		2
K		3

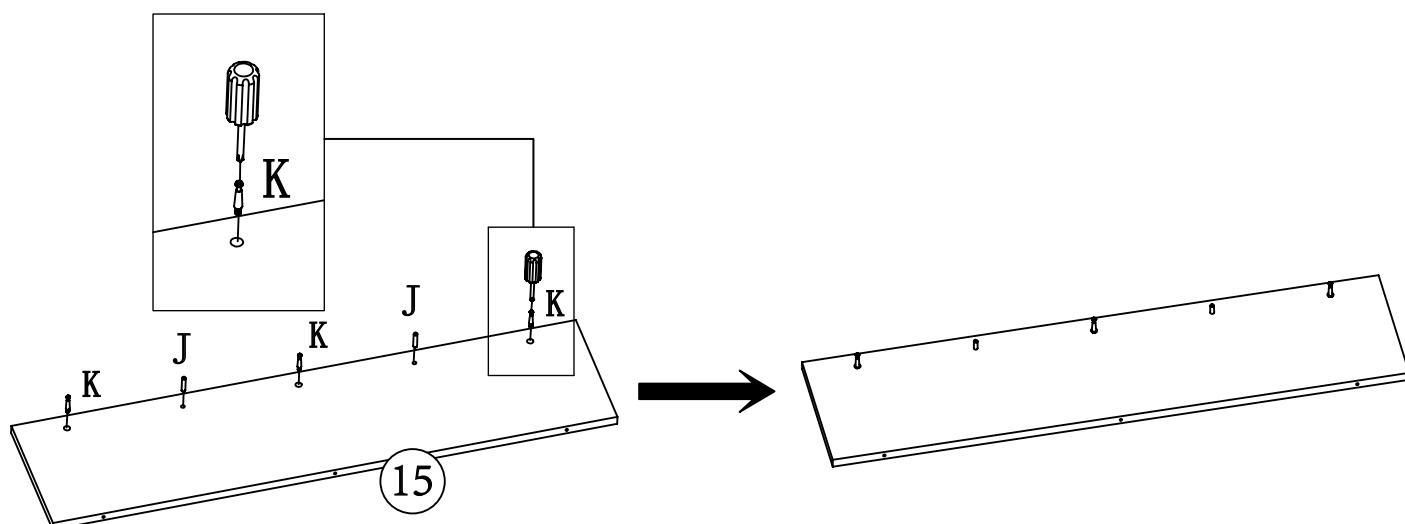


Step 5


D

M6X40

4

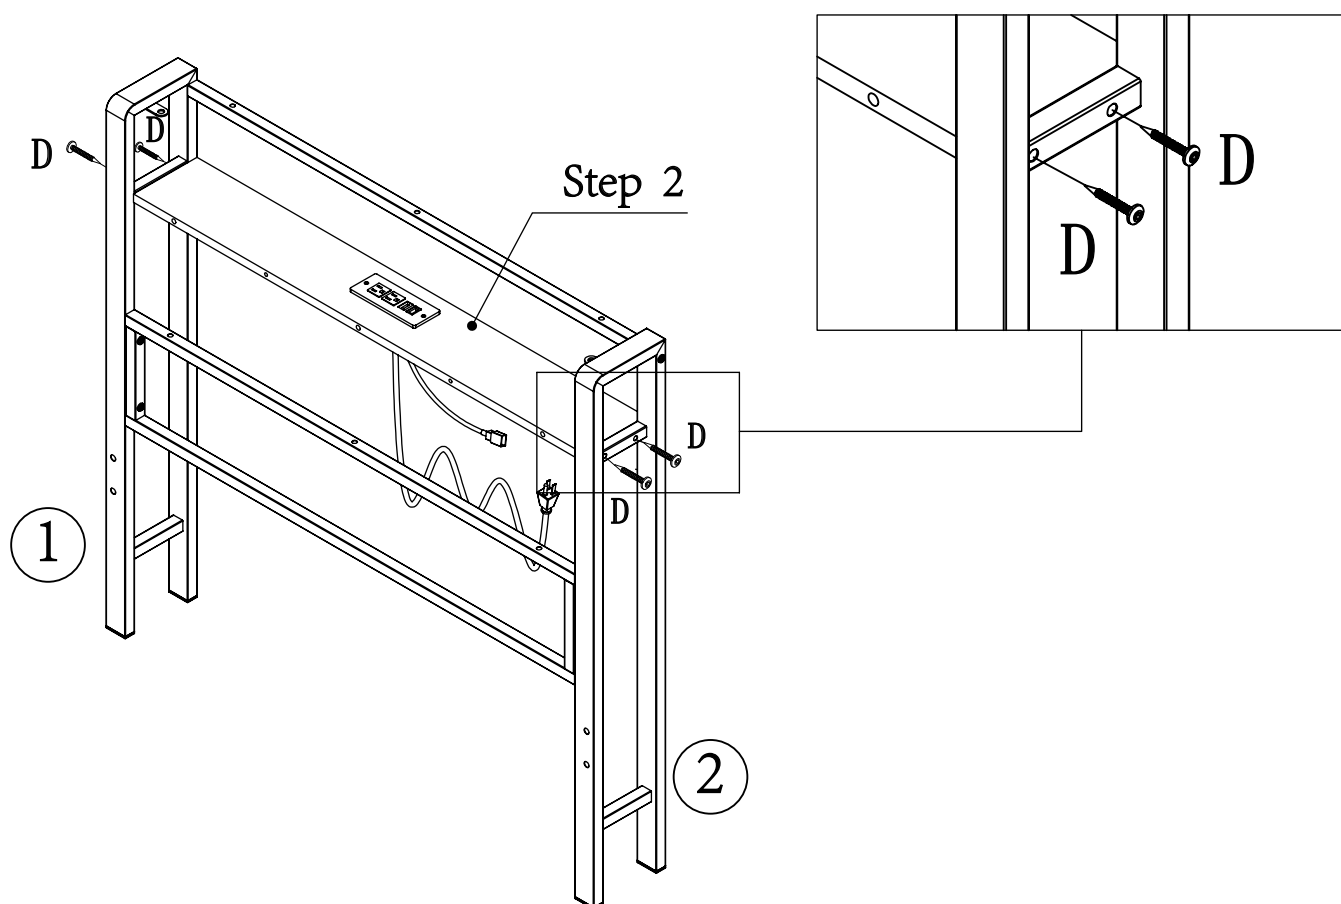

Step 6


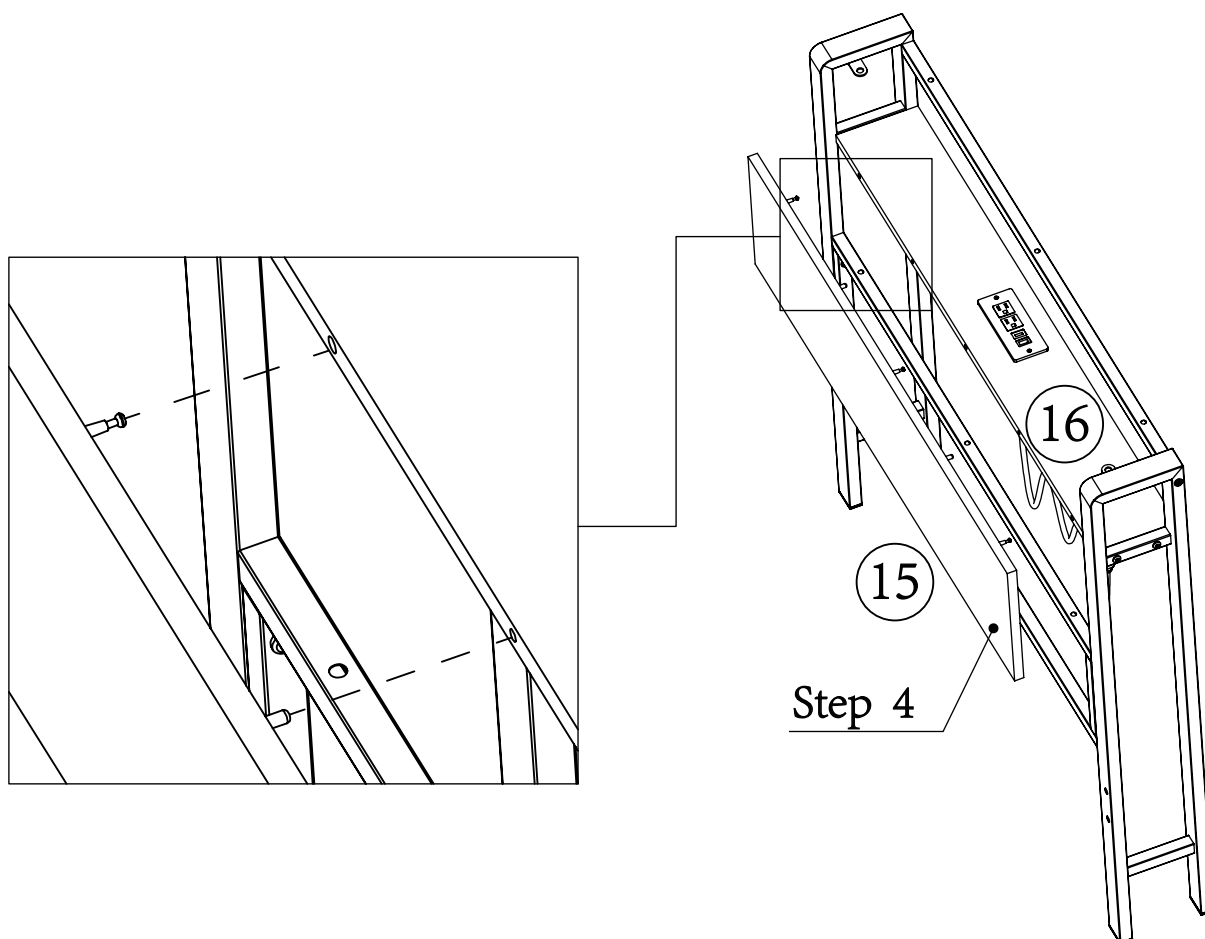


Step 7

D

M6X40

3

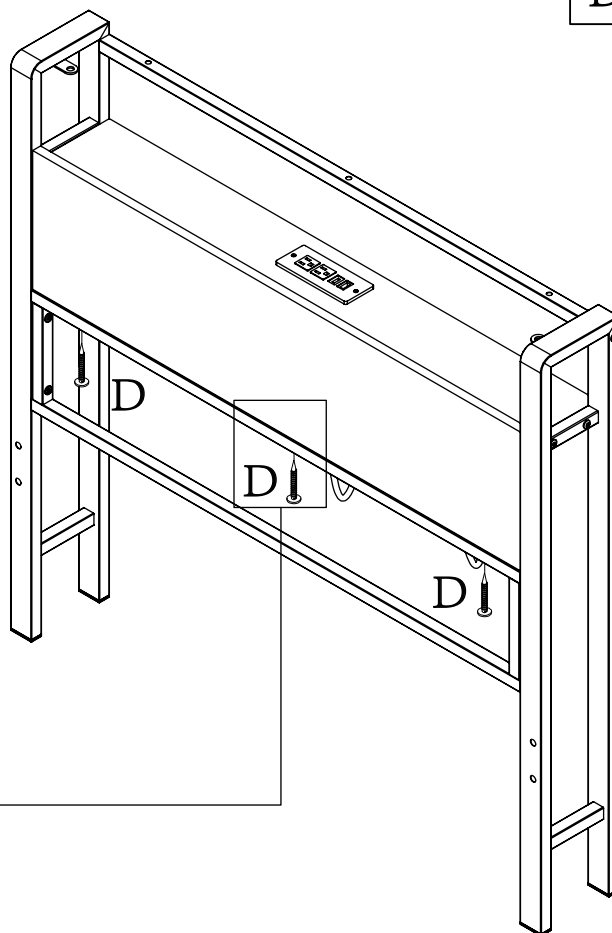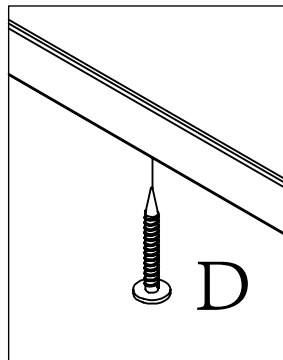


Step 8




L



3


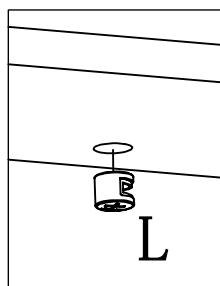


Get Part I and J connected:

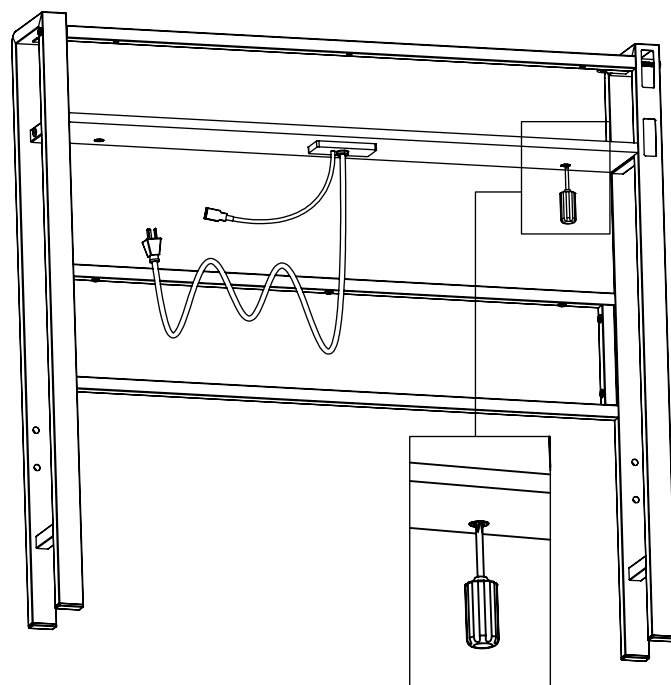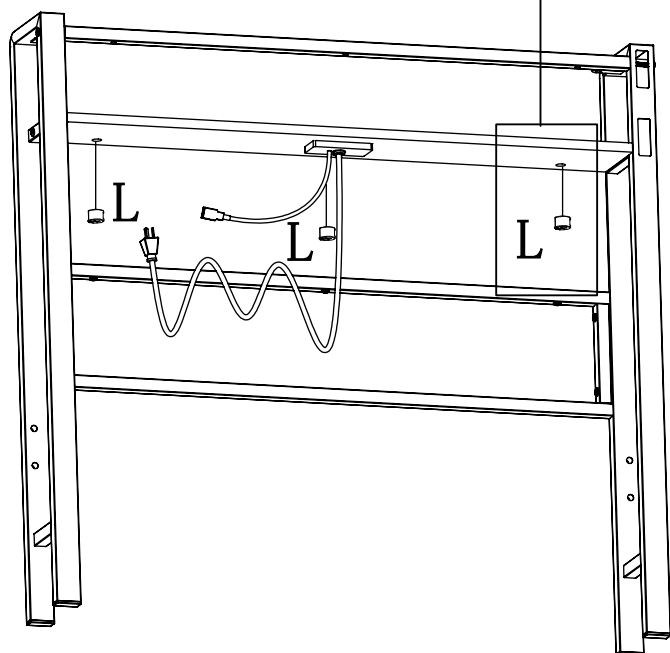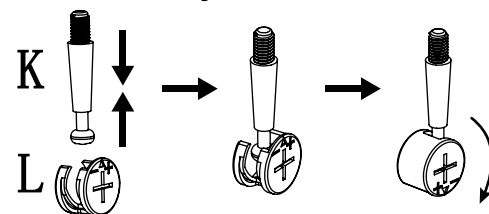


Step 9

G	M6X30	3
I	M6X10	2



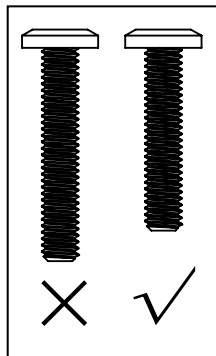
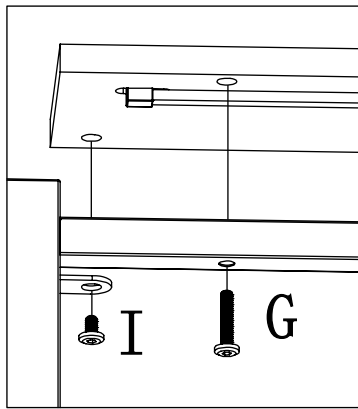


Please use M6X30 screws,
don't use M6X35 screws

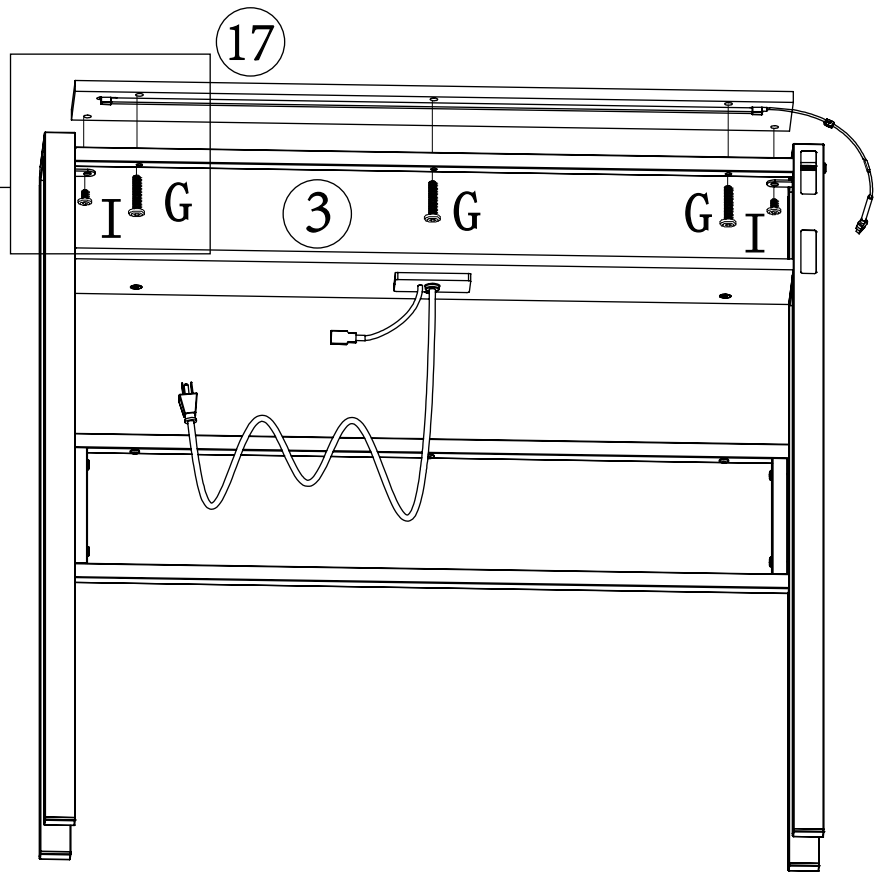


Step 10

The receiver modular should not be hidden,
otherwise the remote controller won't work.

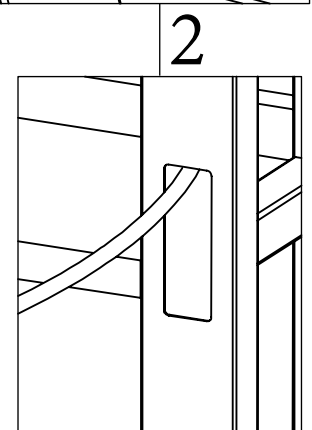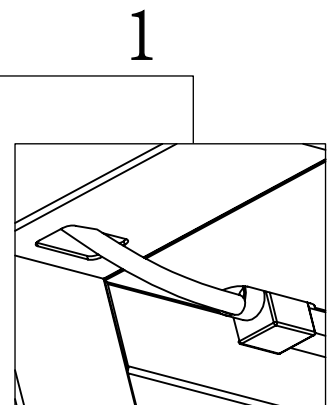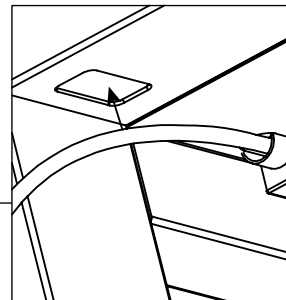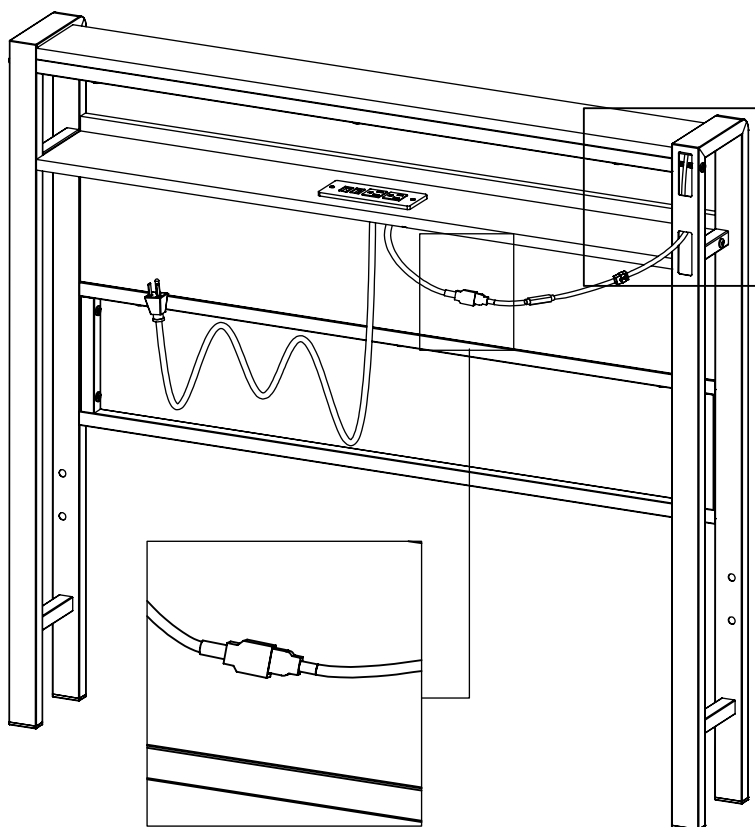


Step 11

A	M8X30	4
C	M8	4
F	M6X35	2

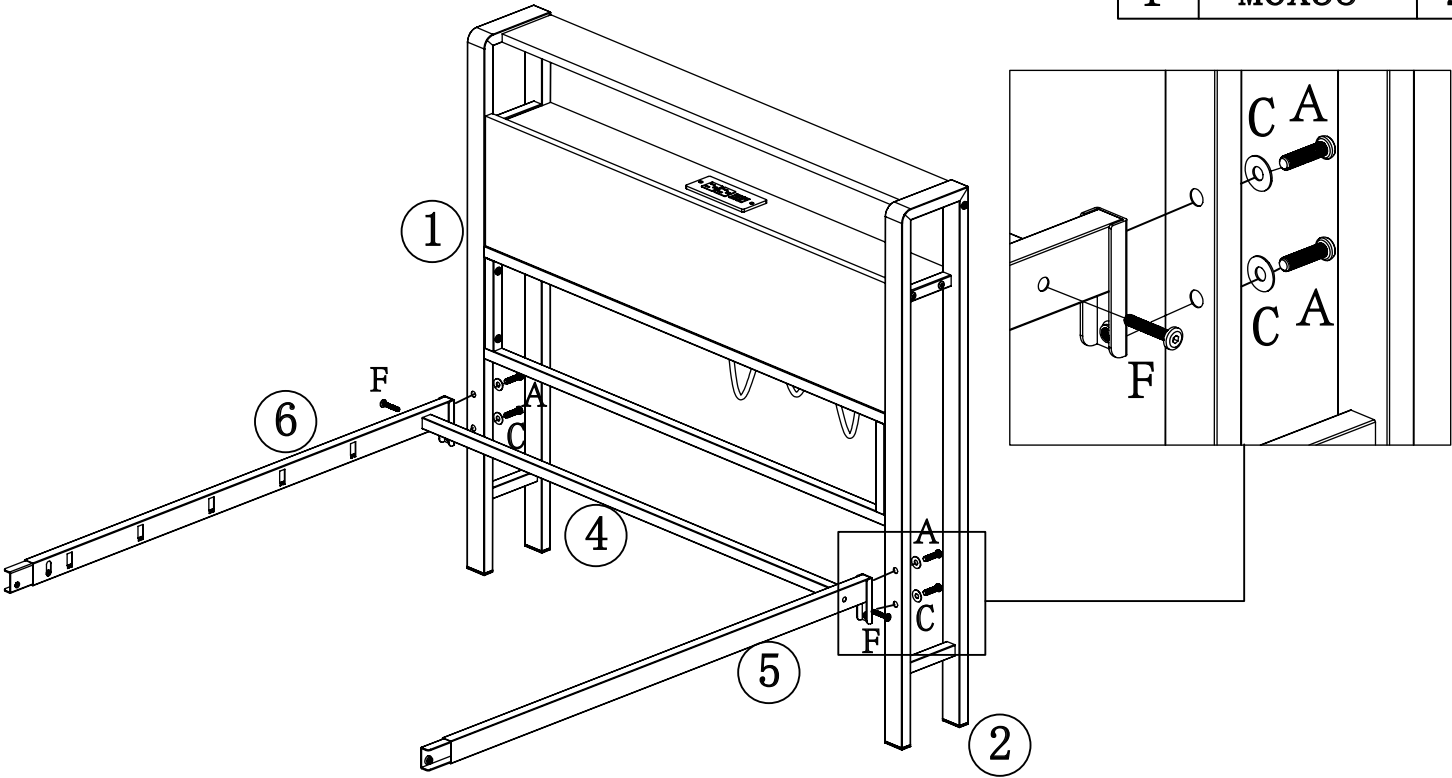


Step 12

F	M6X35	6
---	-------	---

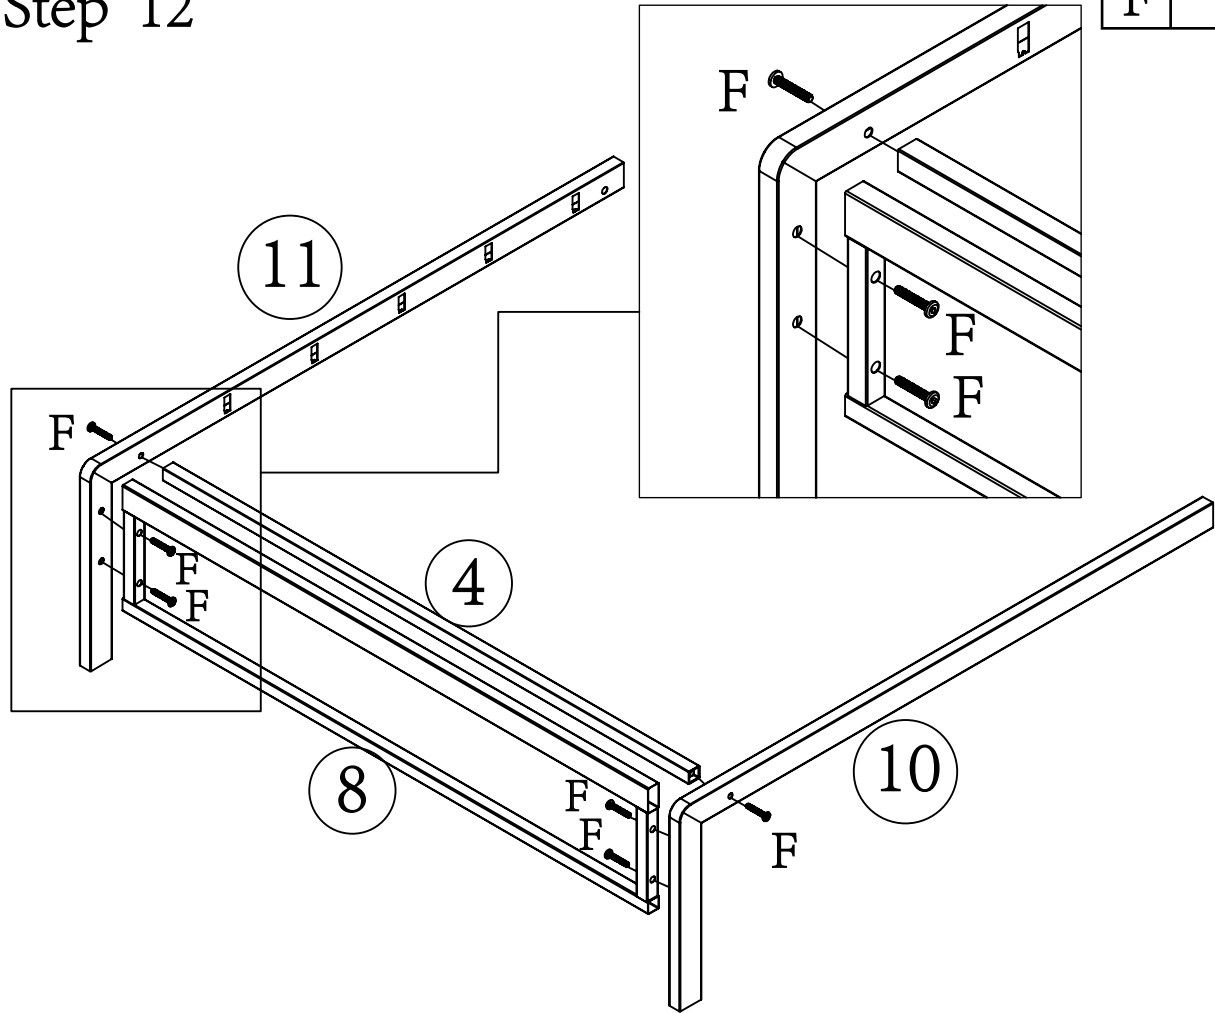


Step 13

F	M6X35	4
H		4

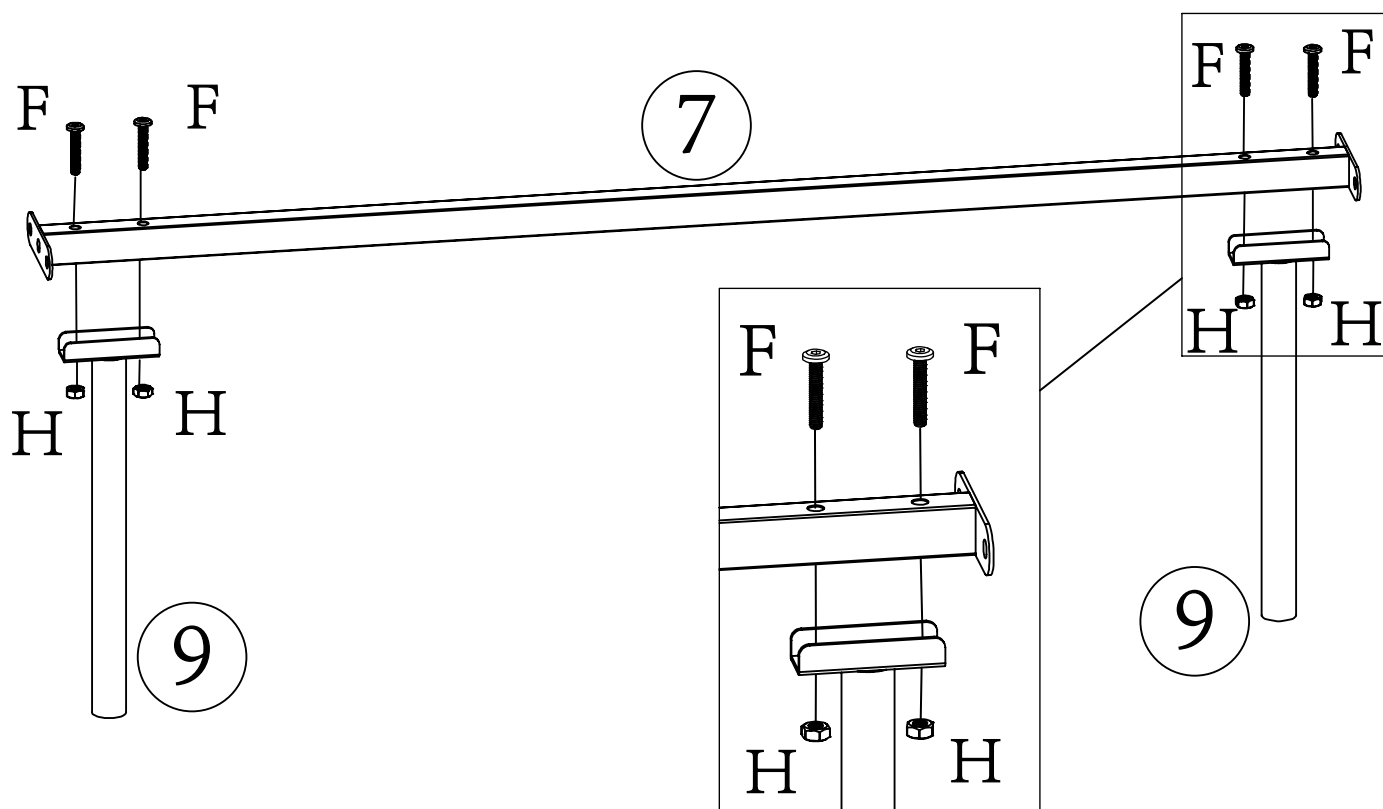


Step 14

B	M8X12	4
---	-------	---

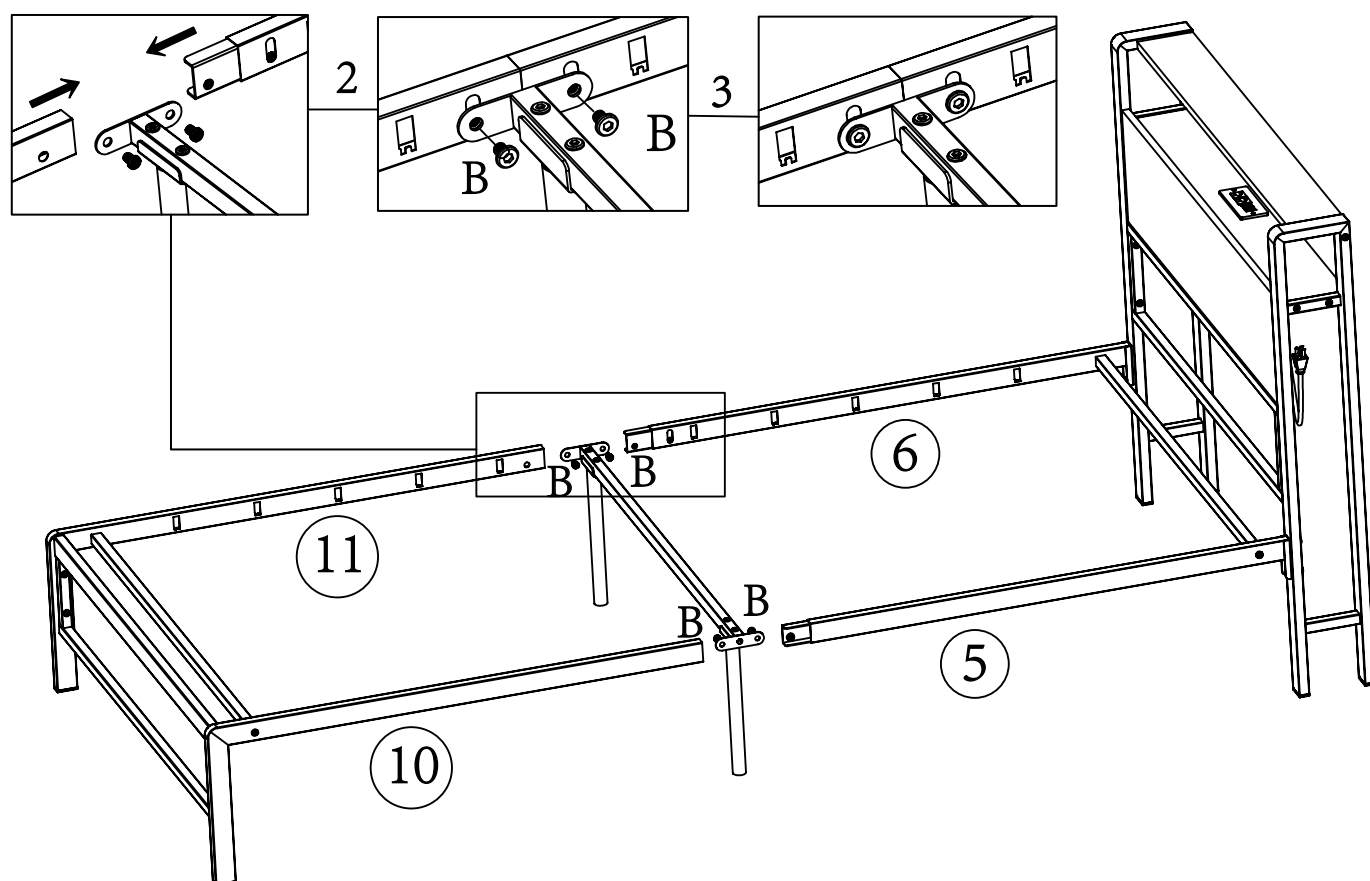

Step 15

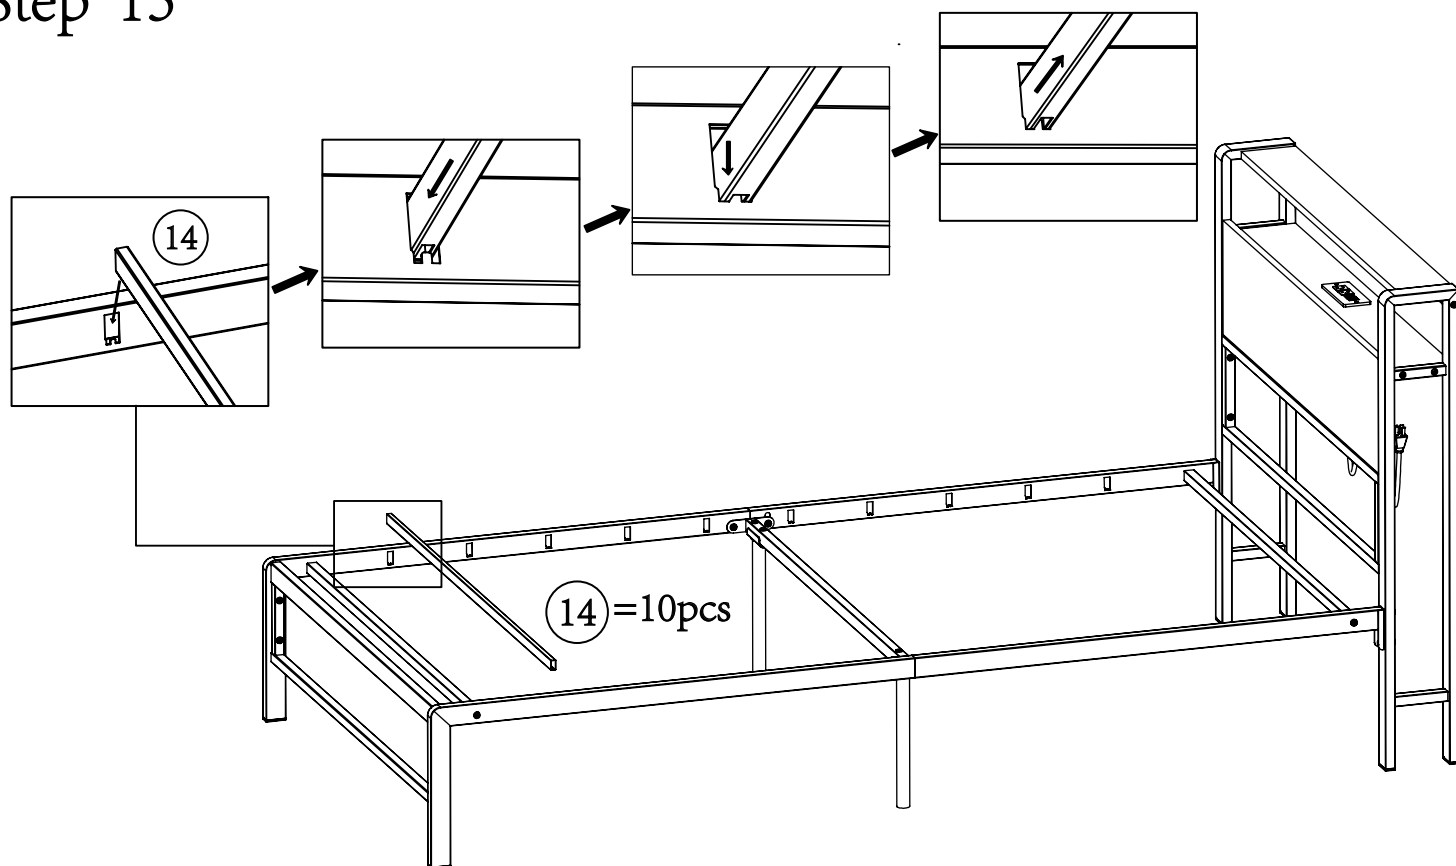

Step 16

