


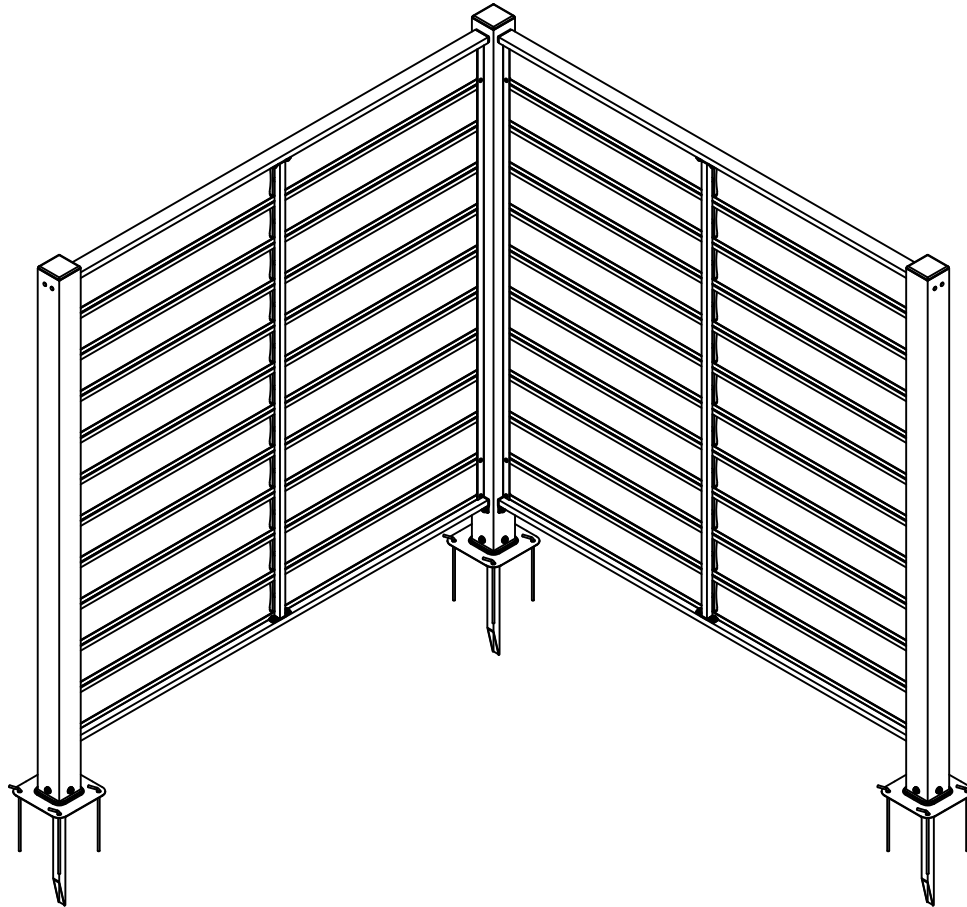


SKU: LNCF0622-2pcs

Outdoor Privacy Screen


Assembly Manual

READ & SAVE BELOW INSTRUCTIONS BEFORE ASSEMBLY

1. PLEASE SEPARATE AND IDENTIFY ALL PARTS, MAKING SURE THAT YOU HAVE ALL OF THE PARTS LISTED.
2. TO AVOID ANY SCRATCH DURING ASSEMBLY, PLEASE ASSEMBLE ON A SOFT MAT OR SIMILAR.
3. PLEASE ASSEMBLE STEP BY STEP AND FOLLOW THE INSTRUCTIONS.
4. WASHERS MUST BE USED.
5. WHILE EACH SCREW AND NUT IS PROPERLY FASTENED, DO NOT OVER FASTEN IT.
6. DO NOT COMPLETELY FASTEN EACH SCREW AND NUT UNTIL ALL THE SCREWS ARE PROPERLY FIXED.
7. WEARING PROTECTIVE GLOVES IS RECOMMENDED.










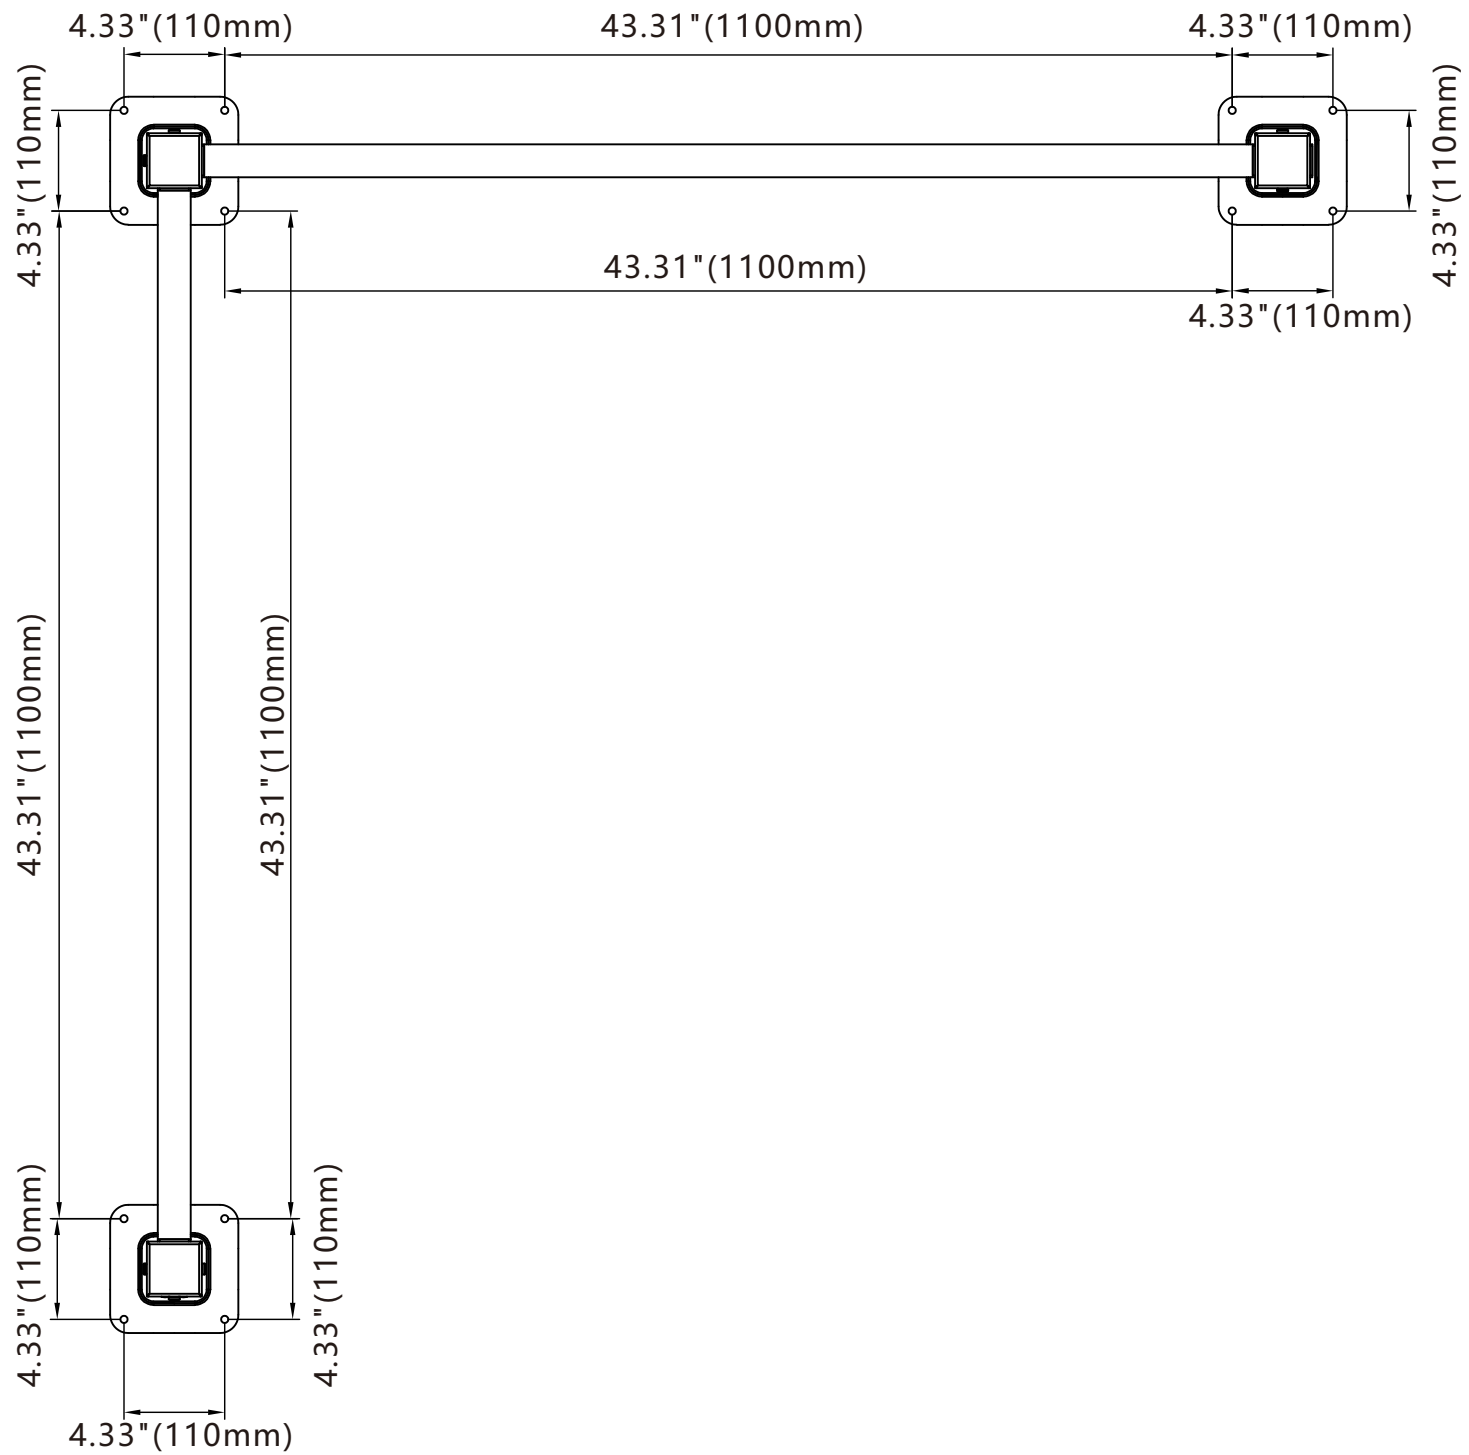




1

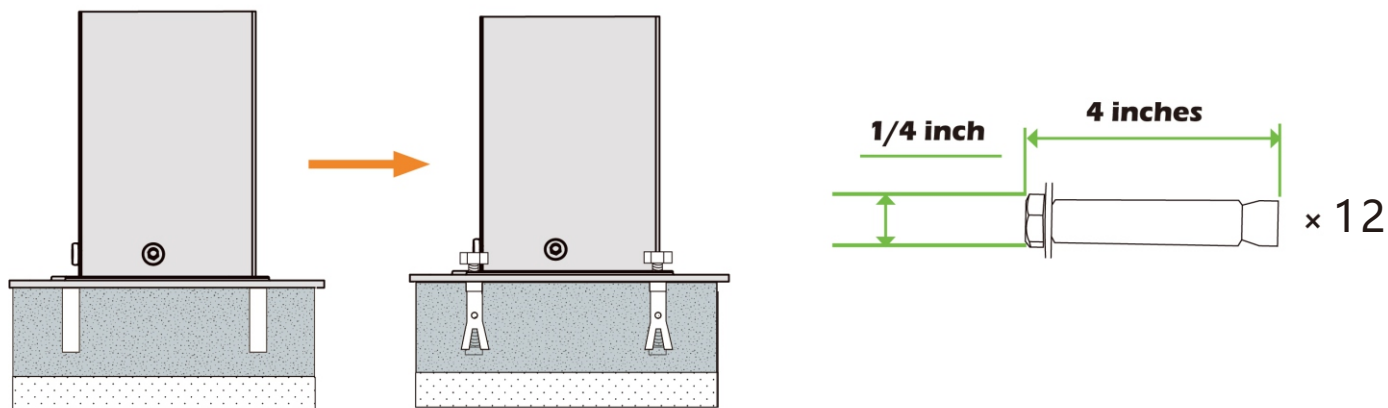

If the ground is concreted and the depth of it is over 3 inch, you can use 1/4 inch expansion bolts to mount the Outdoor Privacy Screen.


If the ground is grassy, you can use ground stakes to mount the Outdoor Privacy Screen. Make sure to drive the ground stakes deep enough into the soil to ensure stability.

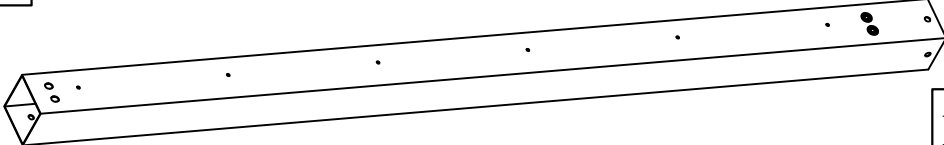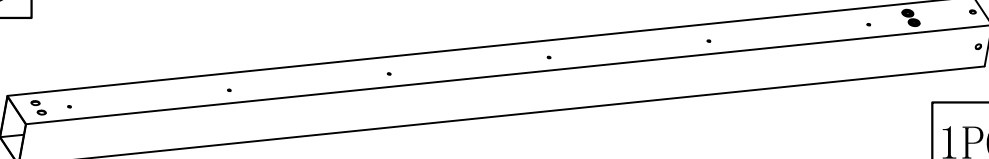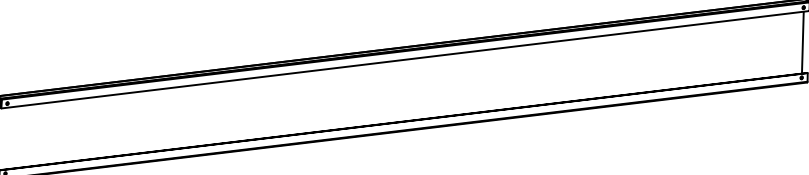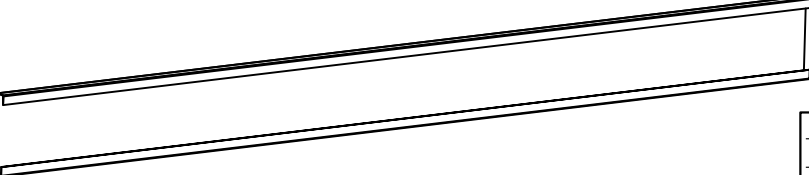A  1PC	G  2PCS
B  1PC	H  2PCS
C  1PC	I  2PCS
D  4PCS	J  3PCS K  3PCS L  12PCS M  3PCS N  48PCS O  36PCS
E  4PCS	P  40PCS Q  4PCS R  1PC S  1PC T  2PCS
F  18PCS	

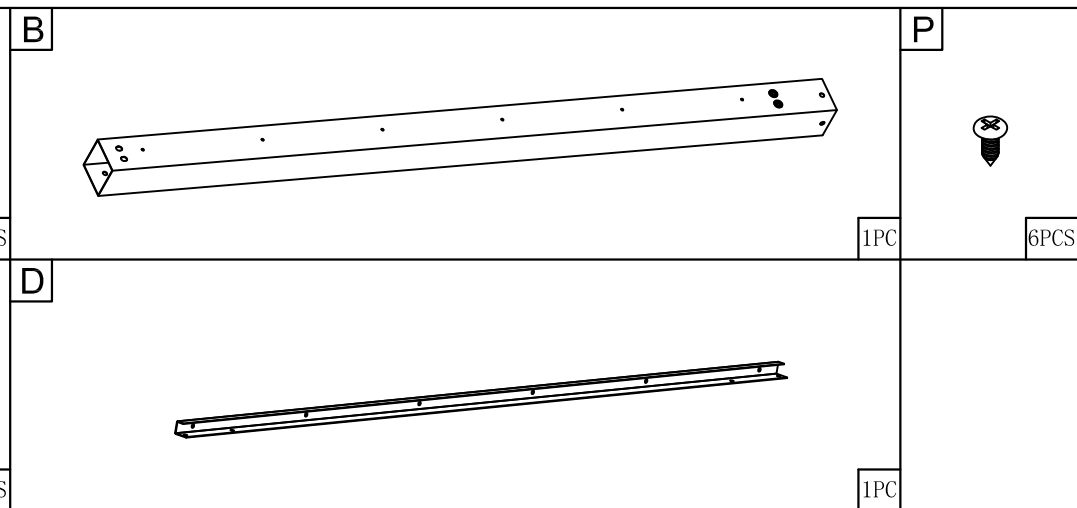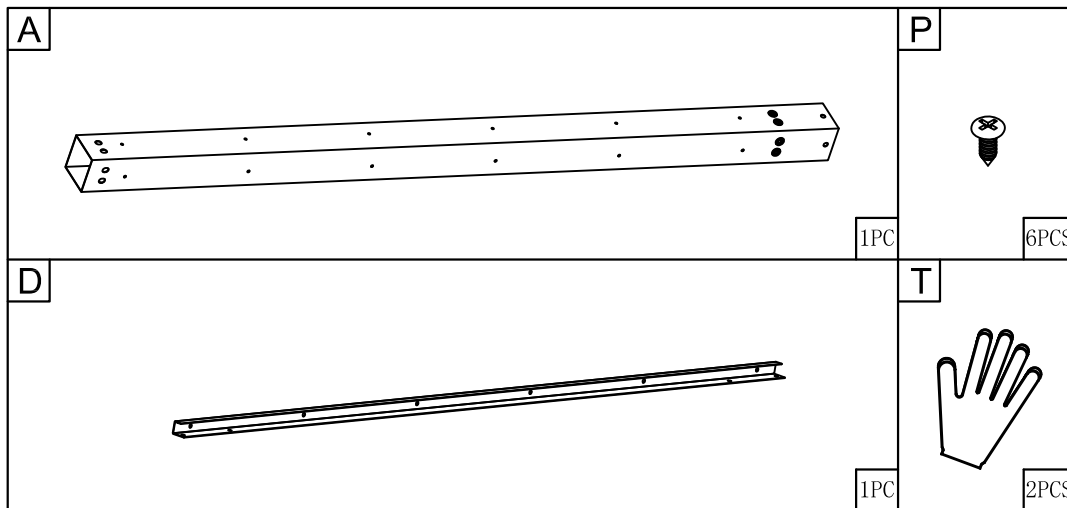

1


⚠ MAKE SURE TO WEAR PROTECTIVE GLOVES.


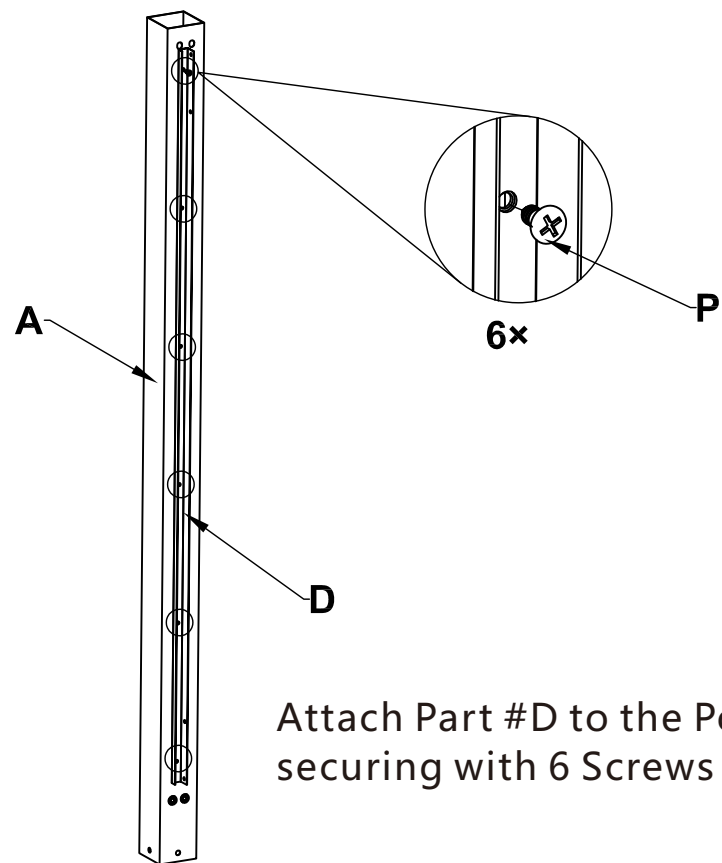


Attach Part #D to the Post #A by securing with 6 Screws #P.

2


Attach Part #D to the Post #B by securing with 6 Screws #P.

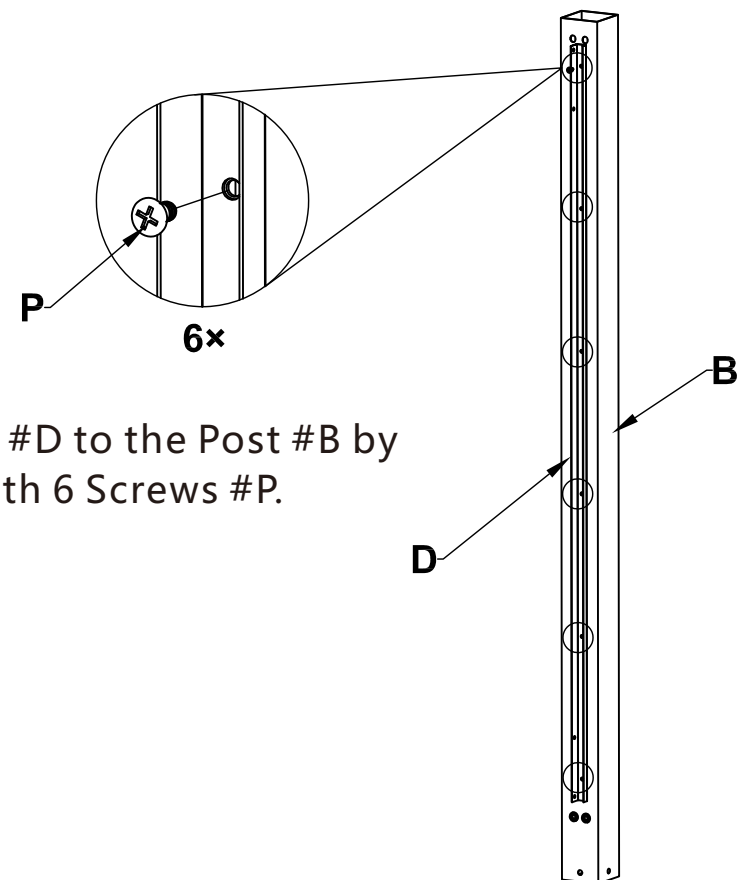

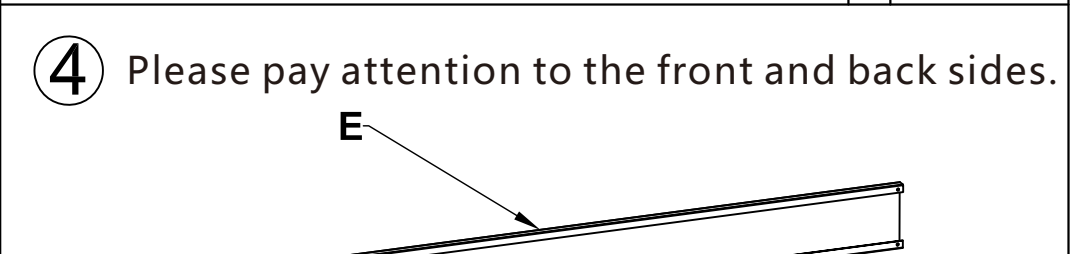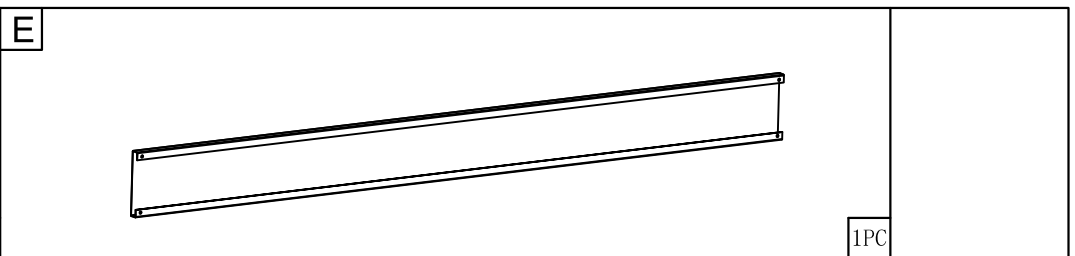


⚠ DO NOT TIGHTEN THE SCREWS COMPLETELY IN THIS STEP.


Use Part #I to connect the Post #A and #B,
securing with 4 Bolts #N and 4 Washers #O.

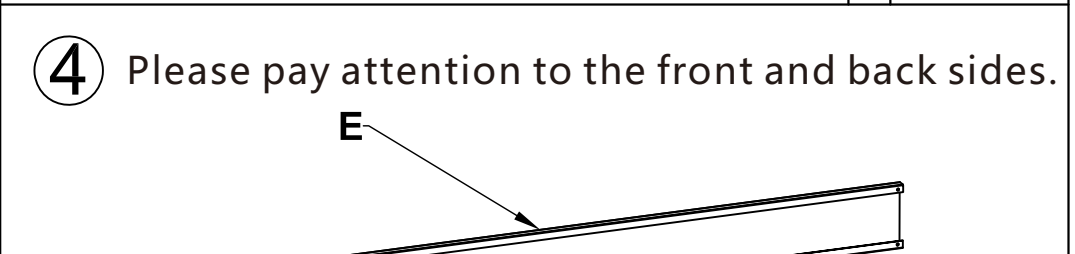

④ Please pay attention to the front and back sides.

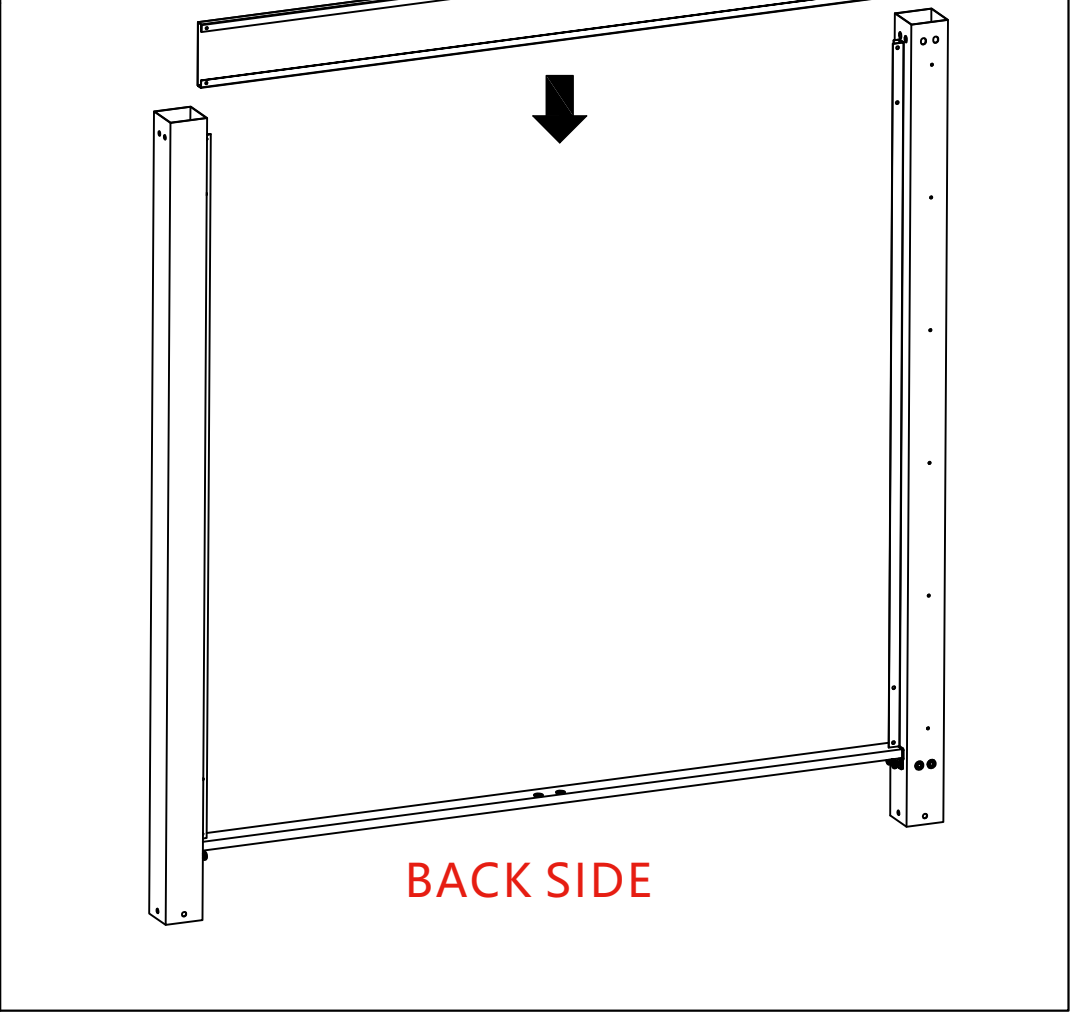


F

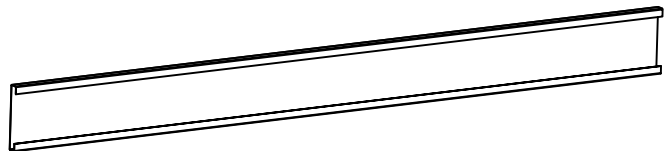


9PCS

E

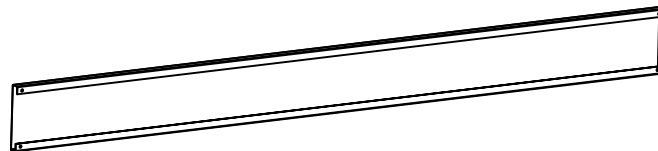


1PC

⑤

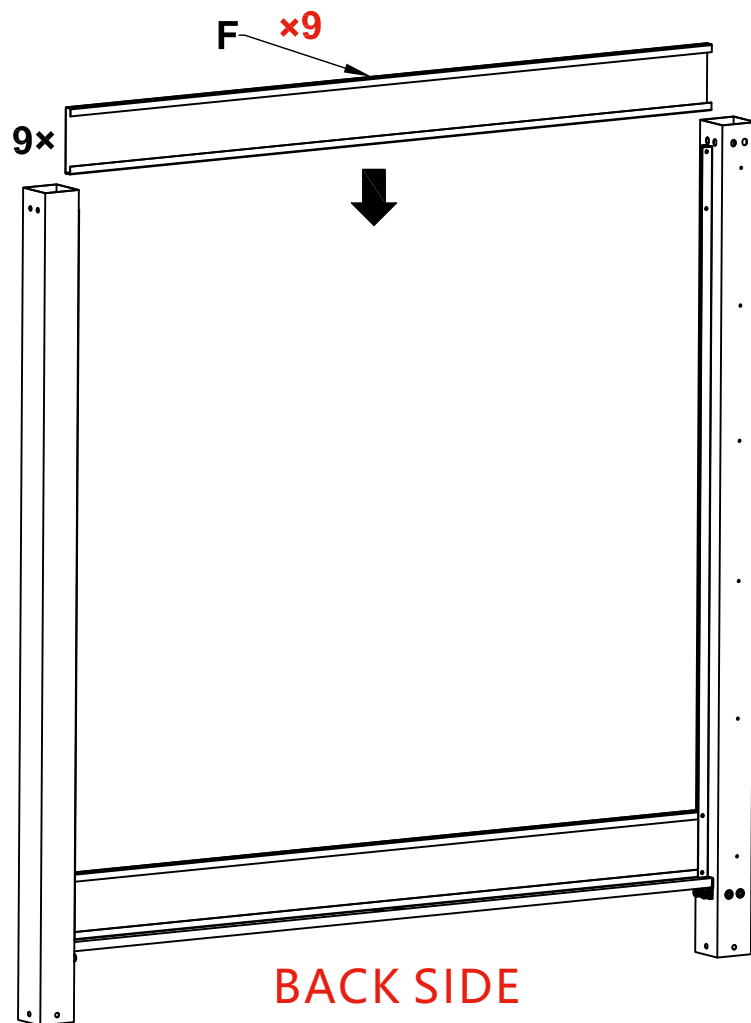

⑥

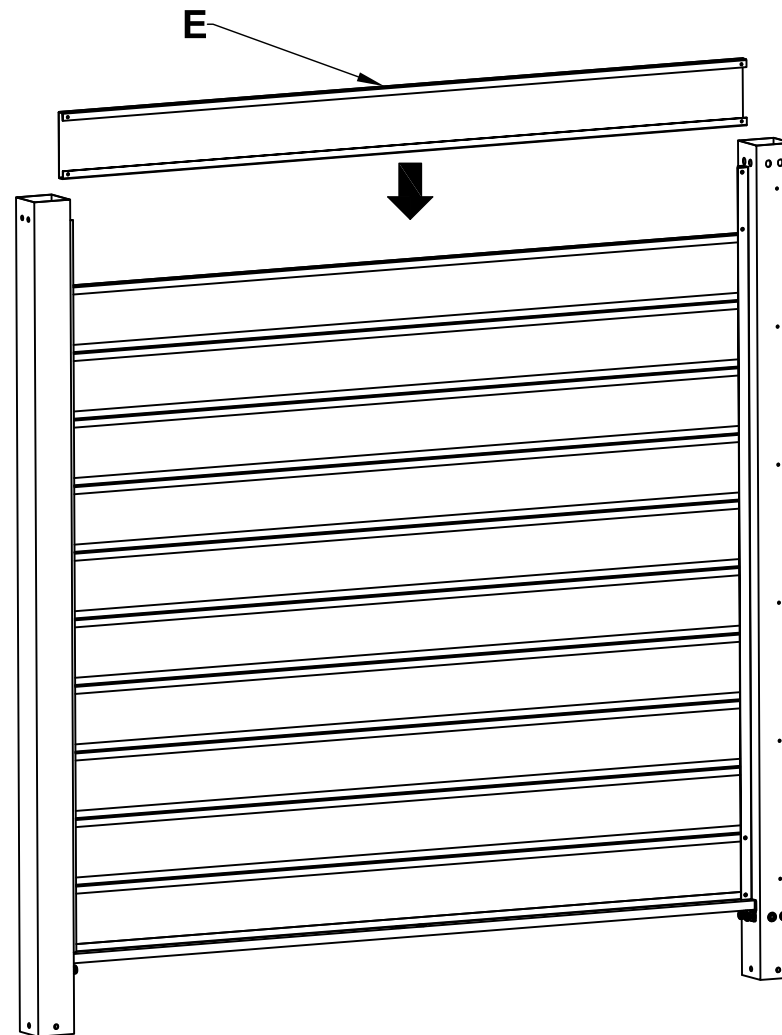

BACK SIDE

H



N



1PC

G



4PCS

1PC

O




4PCS

R



1PC


S



1PC

7


(1) Insert the Panel Edge Banding #H to fit the panel, use 4 Bolts #N and 4 Washers #O to fix the Panel Edge Banding #H onto the Posts.

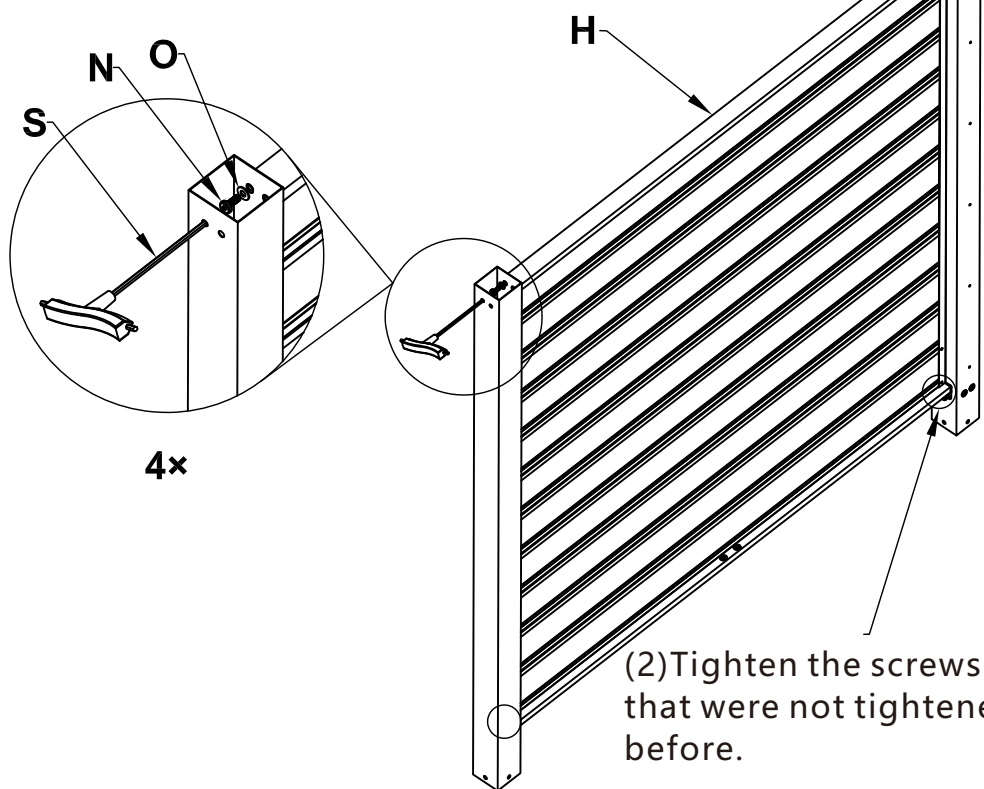

(2) Tighten the screws that were not tightened before.

8


Before installation, rotate each plastic clip 90° clockwise so that it is perpendicular to the connecting rod as shown.

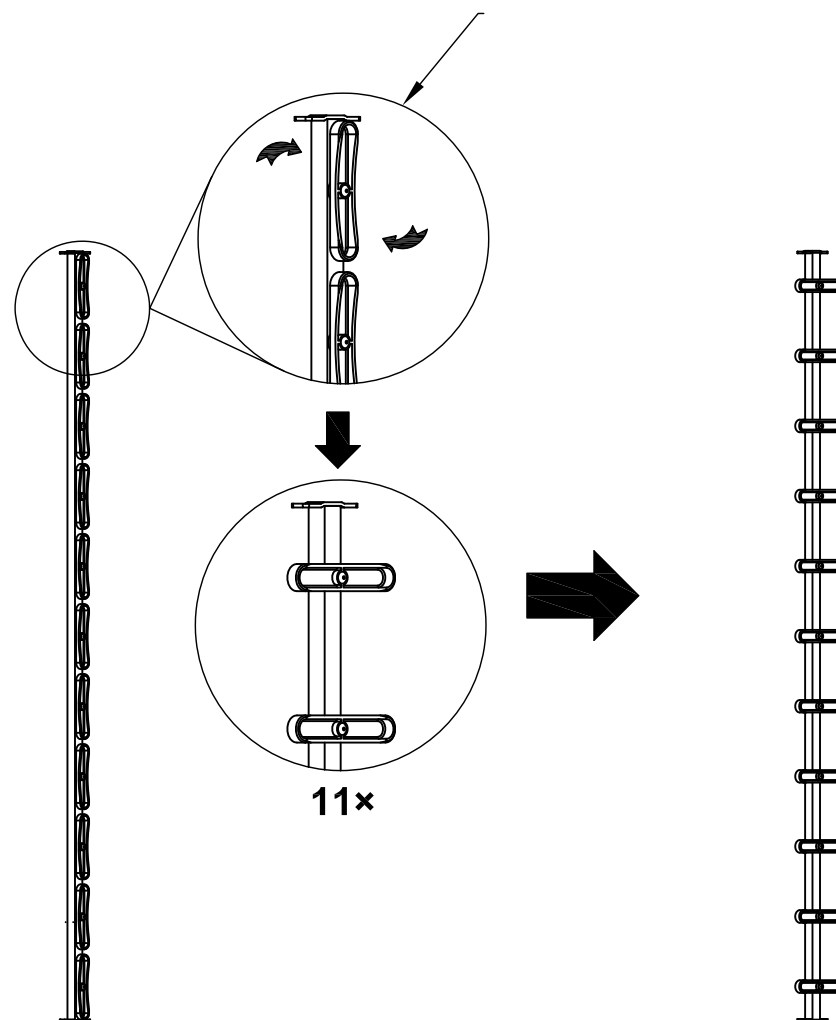

N	O	R			
					
4PCS	4PCS	1PC			



9

Secure Part #G with 4 Bolts #N and 4 Washers #O.

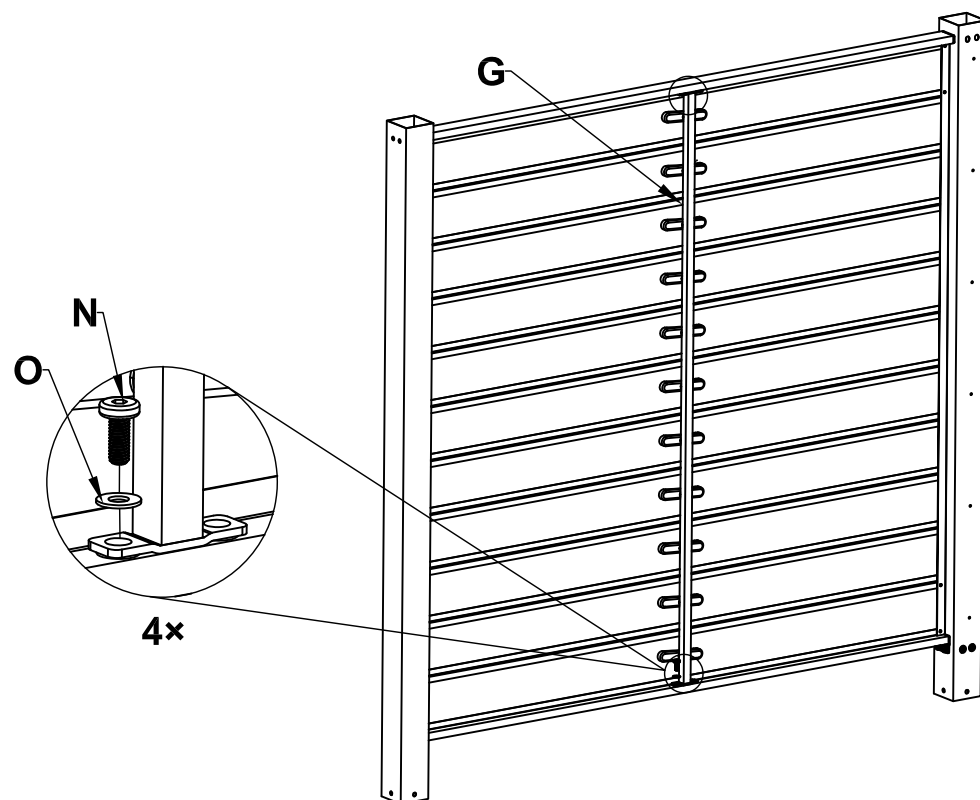

10

After installation, rotate each plastic clip for 90° to reset as shown.
Please wear protective gloves.

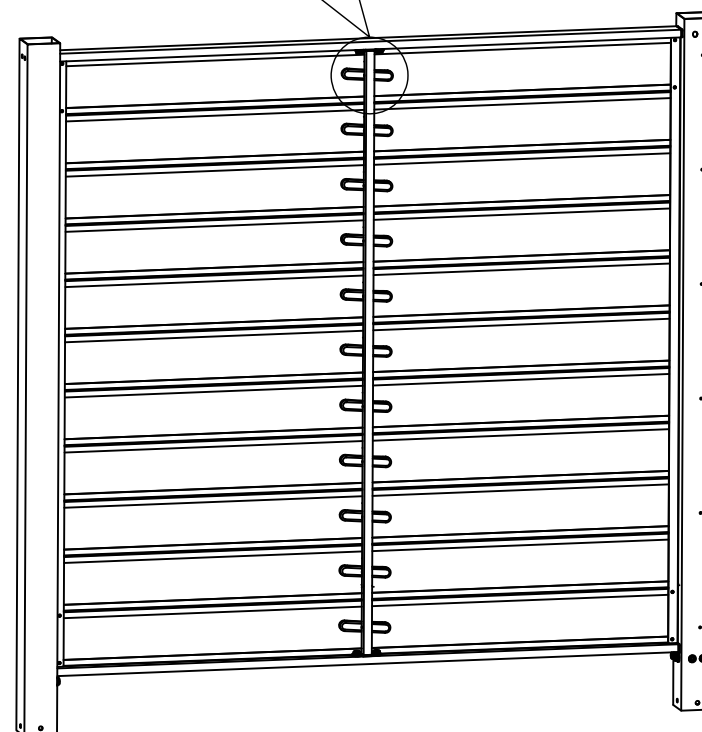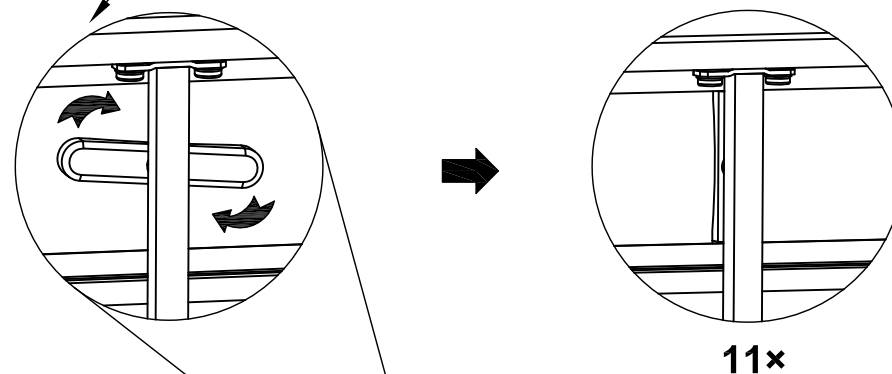

P



8PCS

D



P




1PC

6PCS


11


Use 8 Screws #P to secure Panels to the Posts.

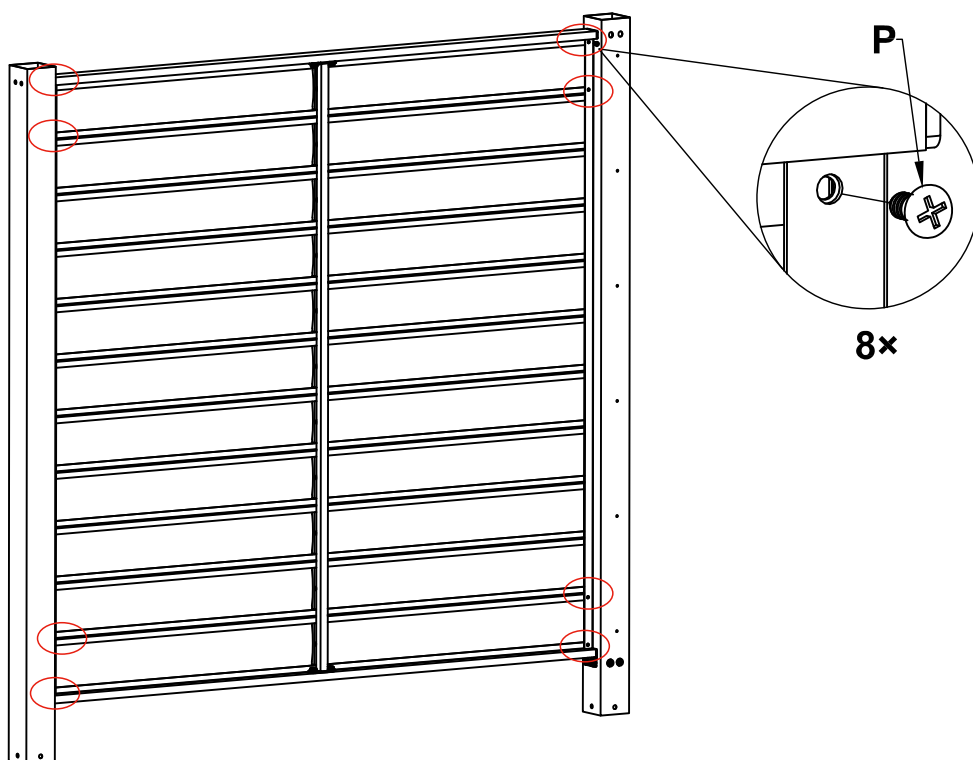


12

Attach Part #D to the Post #A, secure with 6 Screws #P.

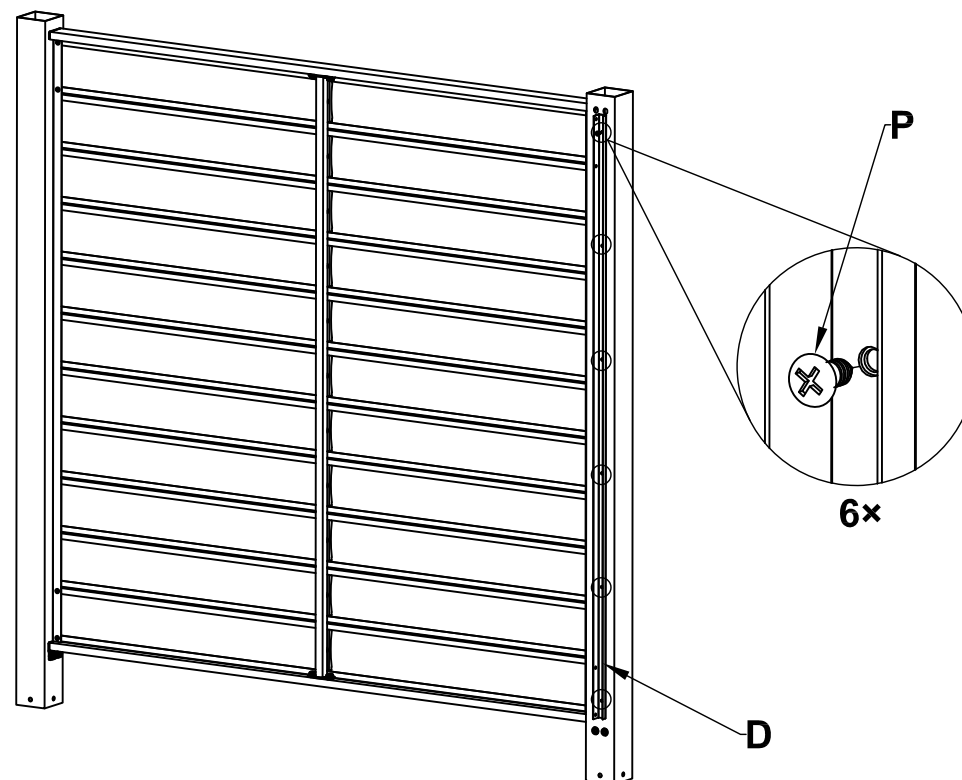

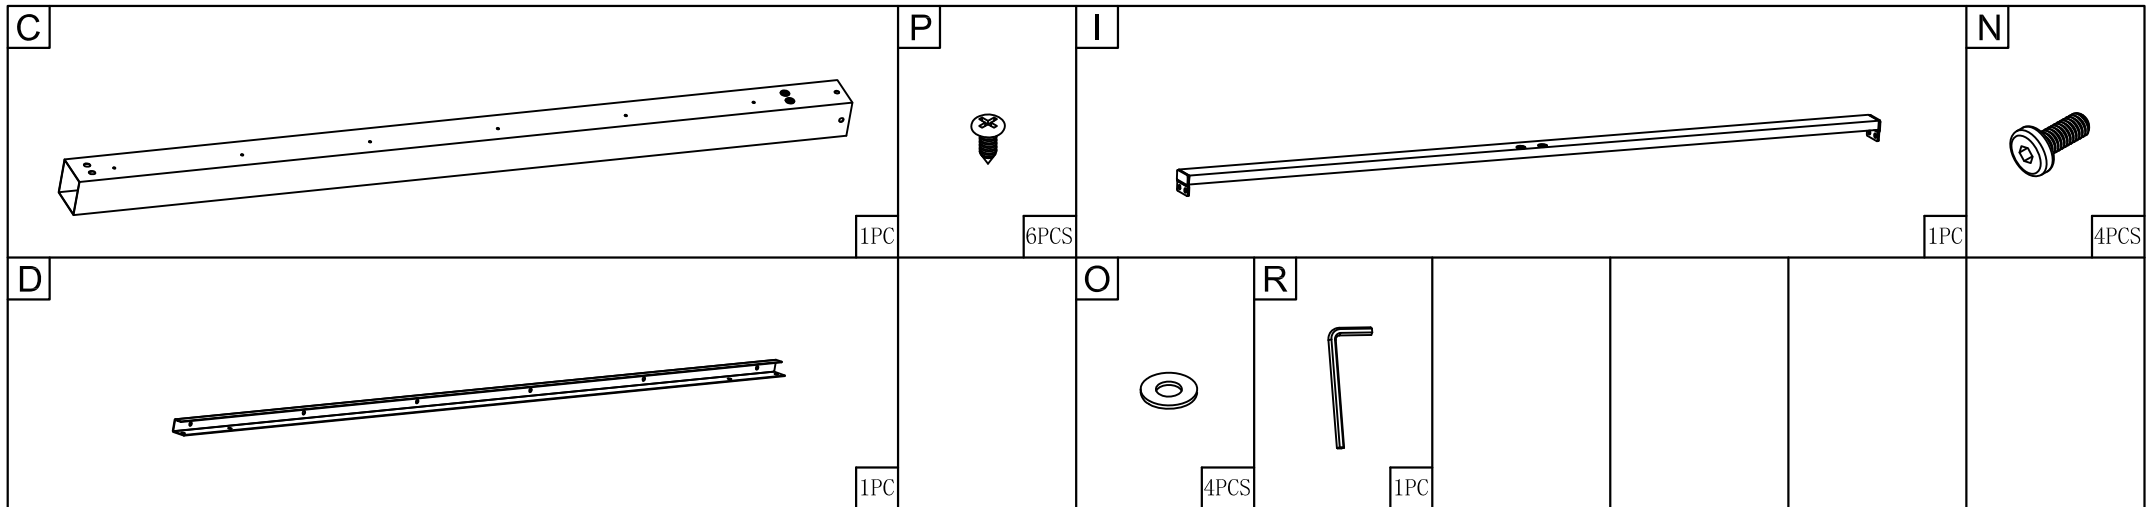


13 Attach Part #D to the Post #C, secure with 6 Screws #P.

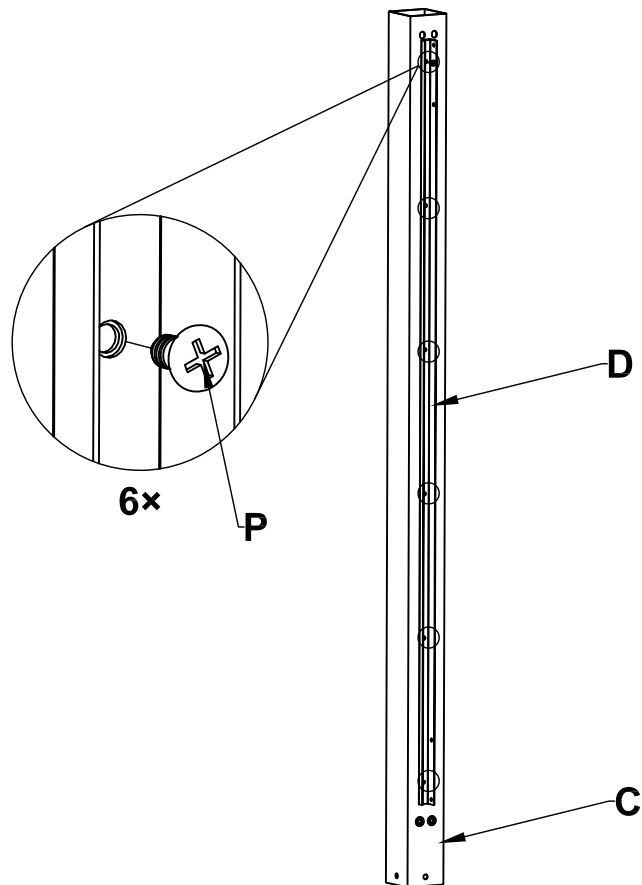


14 **⚠ DO NOT TIGHTEN THE SCREWS COMPLETELY IN THIS STEP.**

Use Part #I to connect the Post #A and #C, securing with 4 Bolts #N and 4 Washers #O.

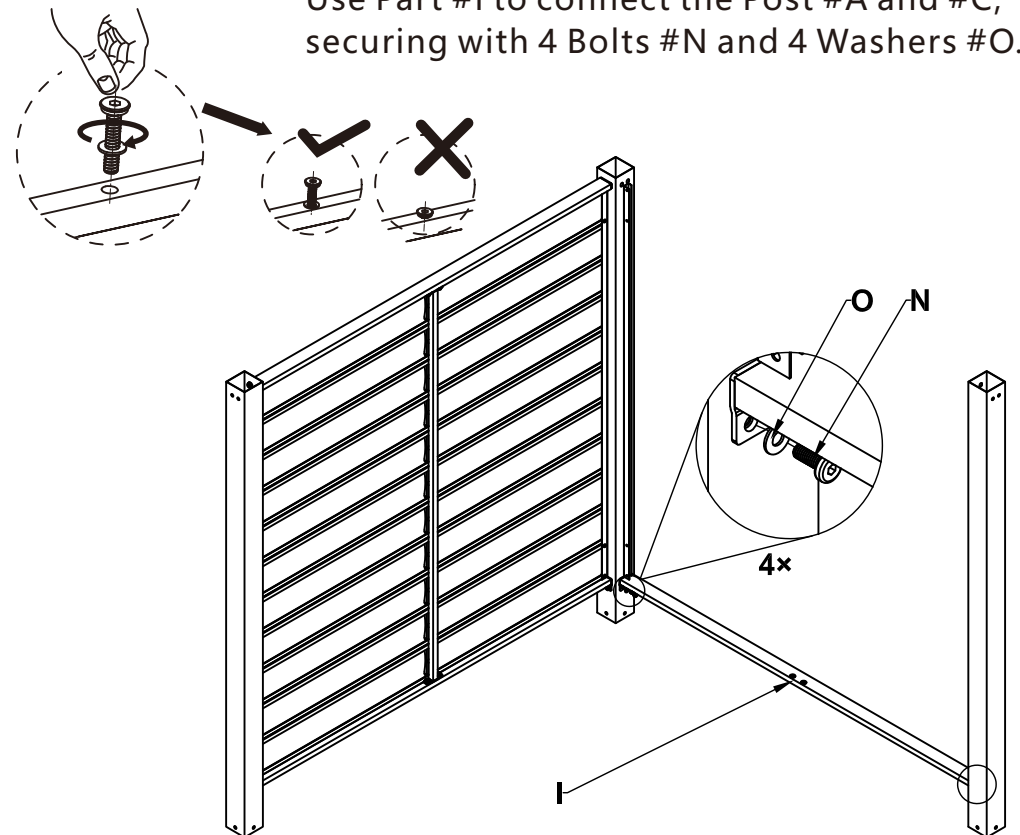


E

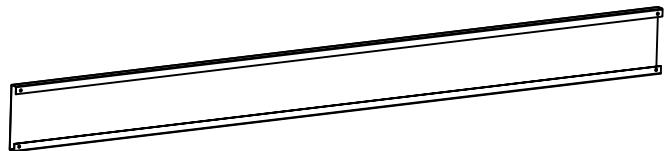

1PC


F

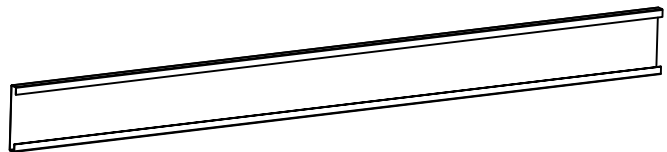


9PCS

15

Please insert Part #E and #F in the order as is shown.

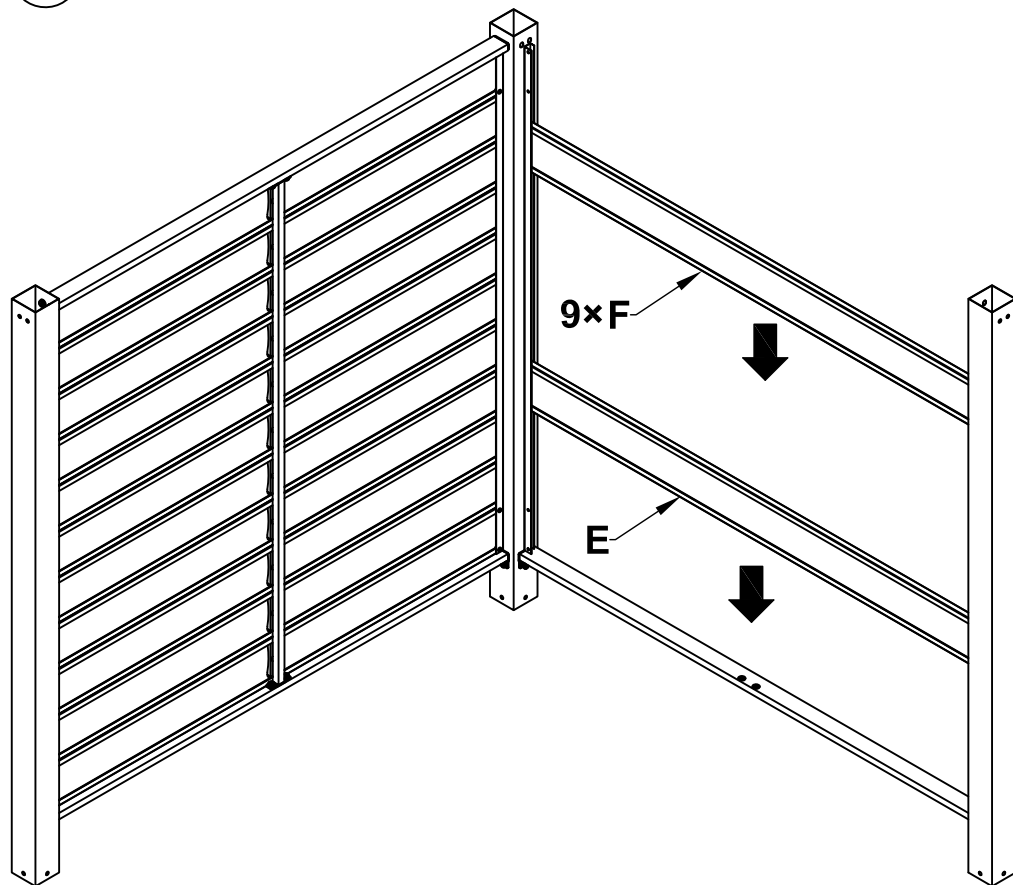


E

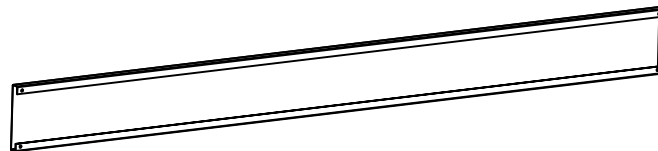

1PC

16

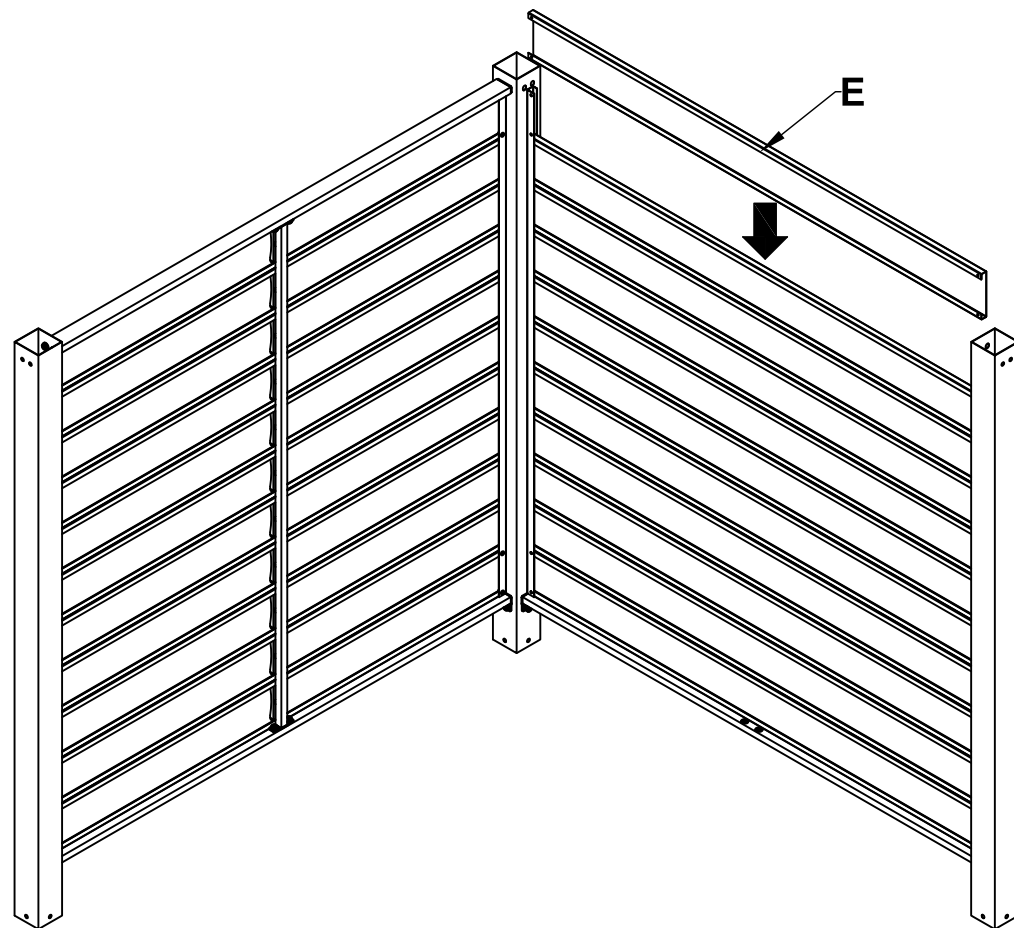

H



N



1PC

4PCS

G



1PC

O




4PCS

R



1PC


S



1PC

17


(1) Insert the Panel Edge Banding #H to fit the panel, use 4 Bolts #N and 4 Washers #O to fix the Panel Edge Banding #H onto the Posts.

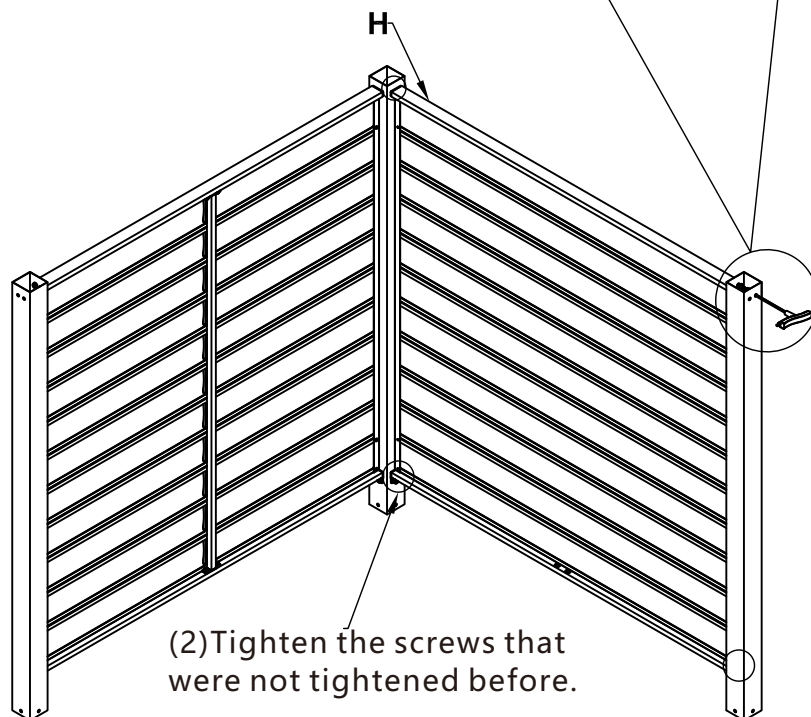

(2) Tighten the screws that were not tightened before.

18


Before installation, rotate each plastic clip 90° clockwise so that it is perpendicular to the connecting rod as shown.

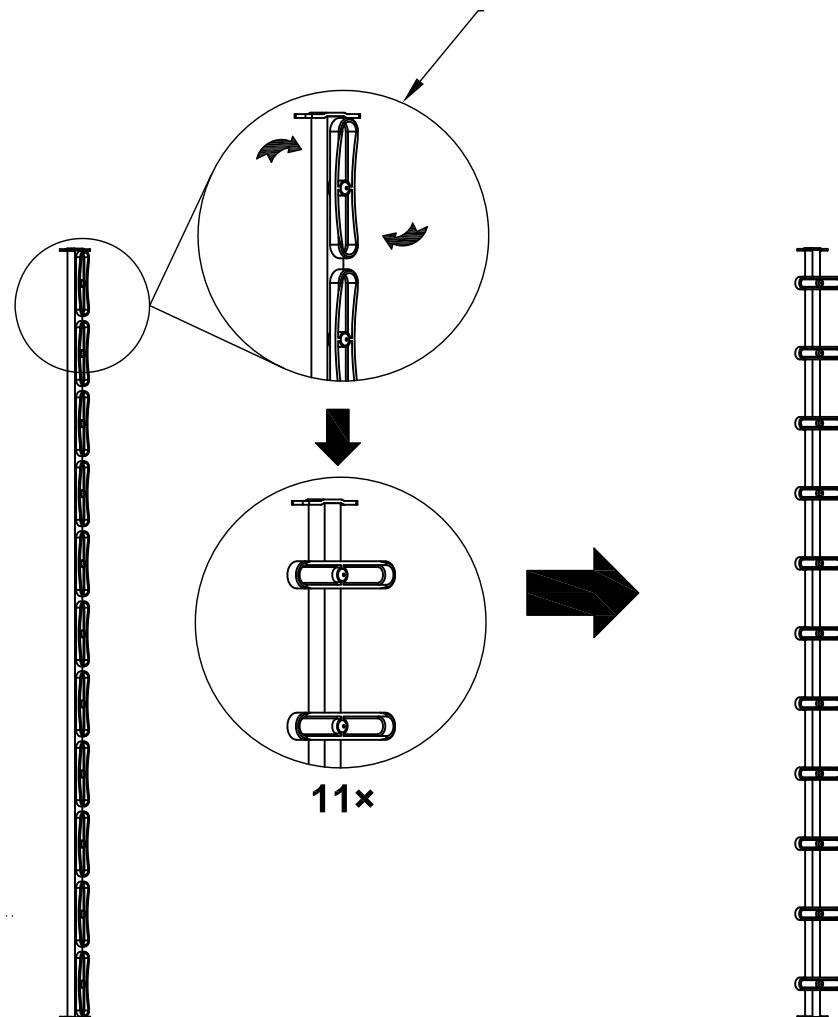

O	R	N			
					
4PCS	1PC	4PCS			



19

Secure Part #G with 4 Bolts #N and 4 Washers #O..

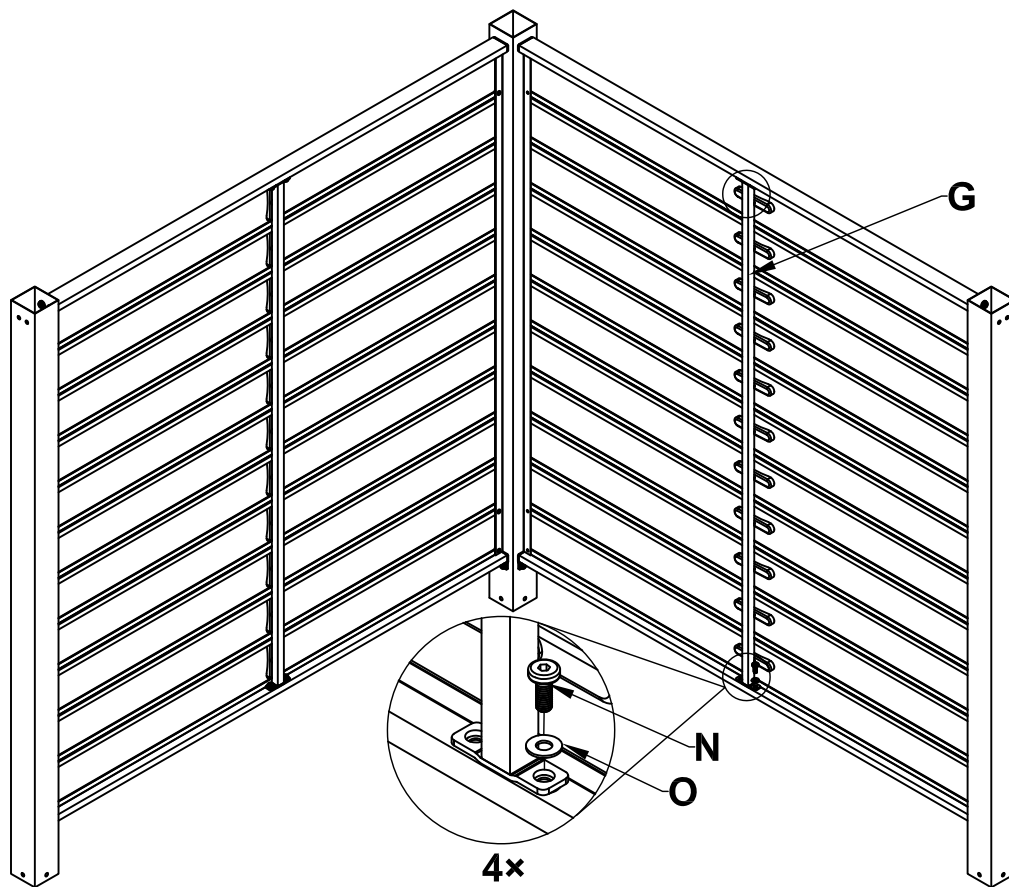


20

After installation, rotate each plastic clip for 90° to reset as shown.
Please wear protective gloves.

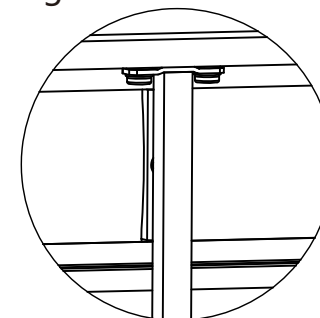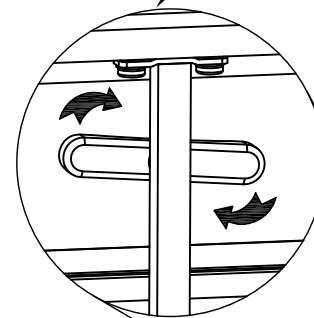

11x

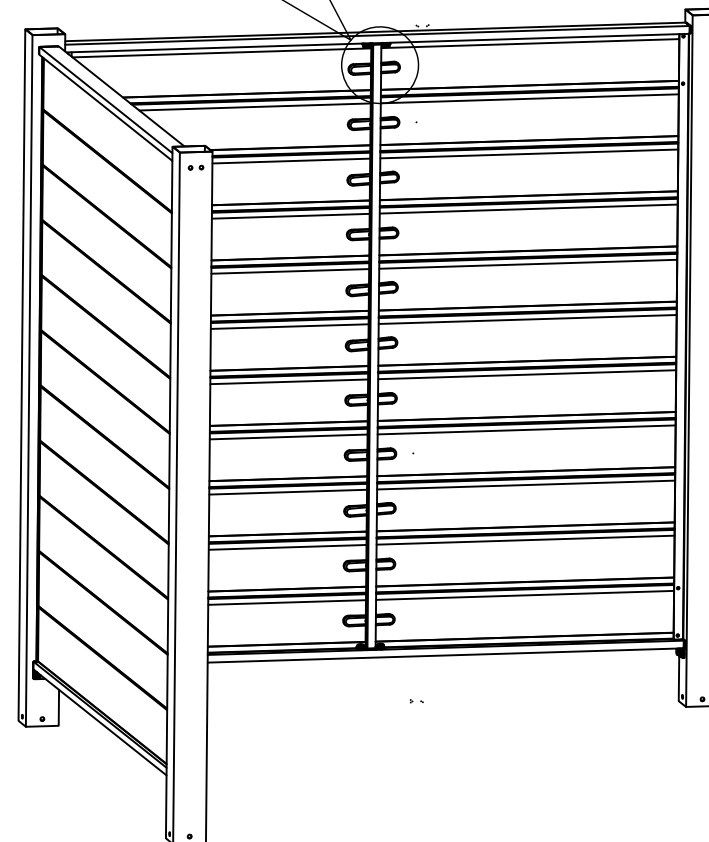

P



8PCS


M



3PCS


21

Use 8 Screws #P to secure Panels to the Posts.

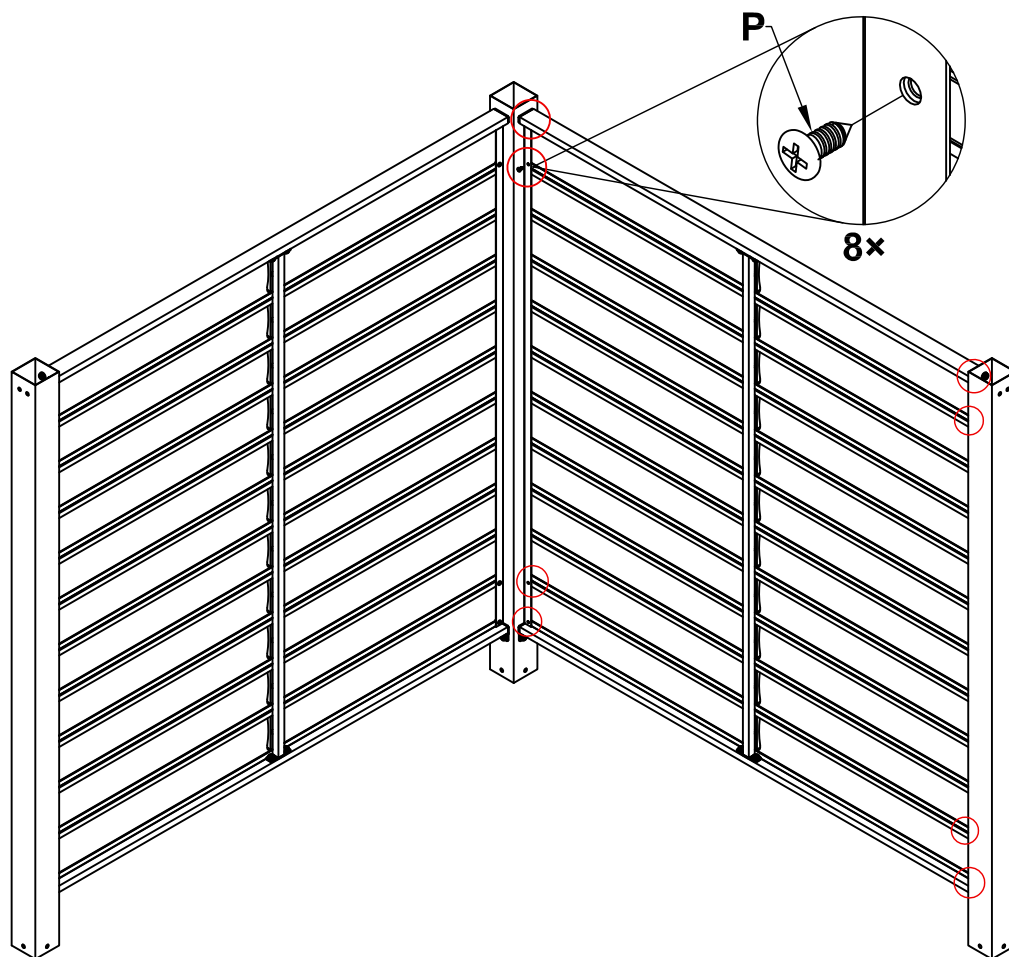

22

Install the 3 Plastic Cover #M onto the Posts.

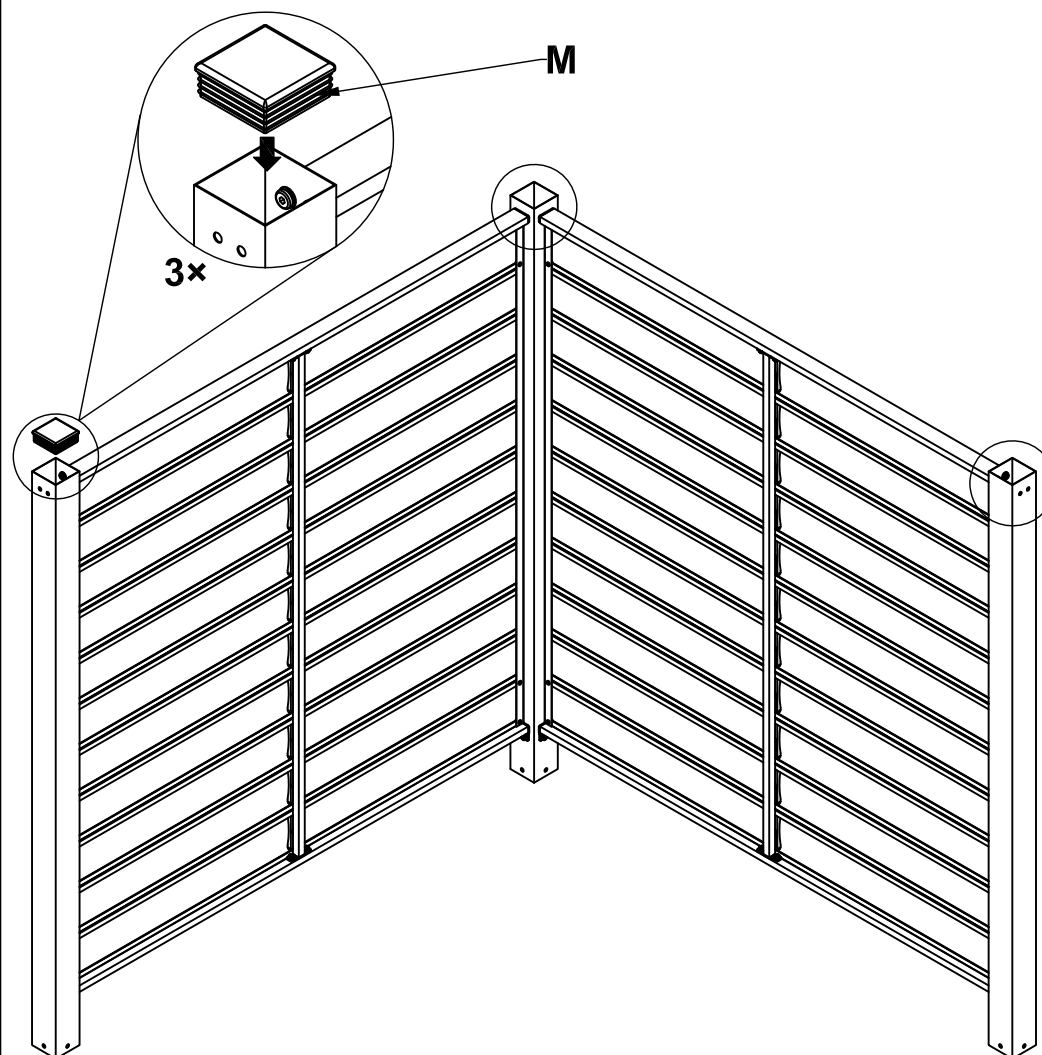


Q




4PCS

J



3PCS

K



3PCS

N



12PCS


R



1PC

23


Insert the 4 Plastic Caps #Q to the Post #B and #C.

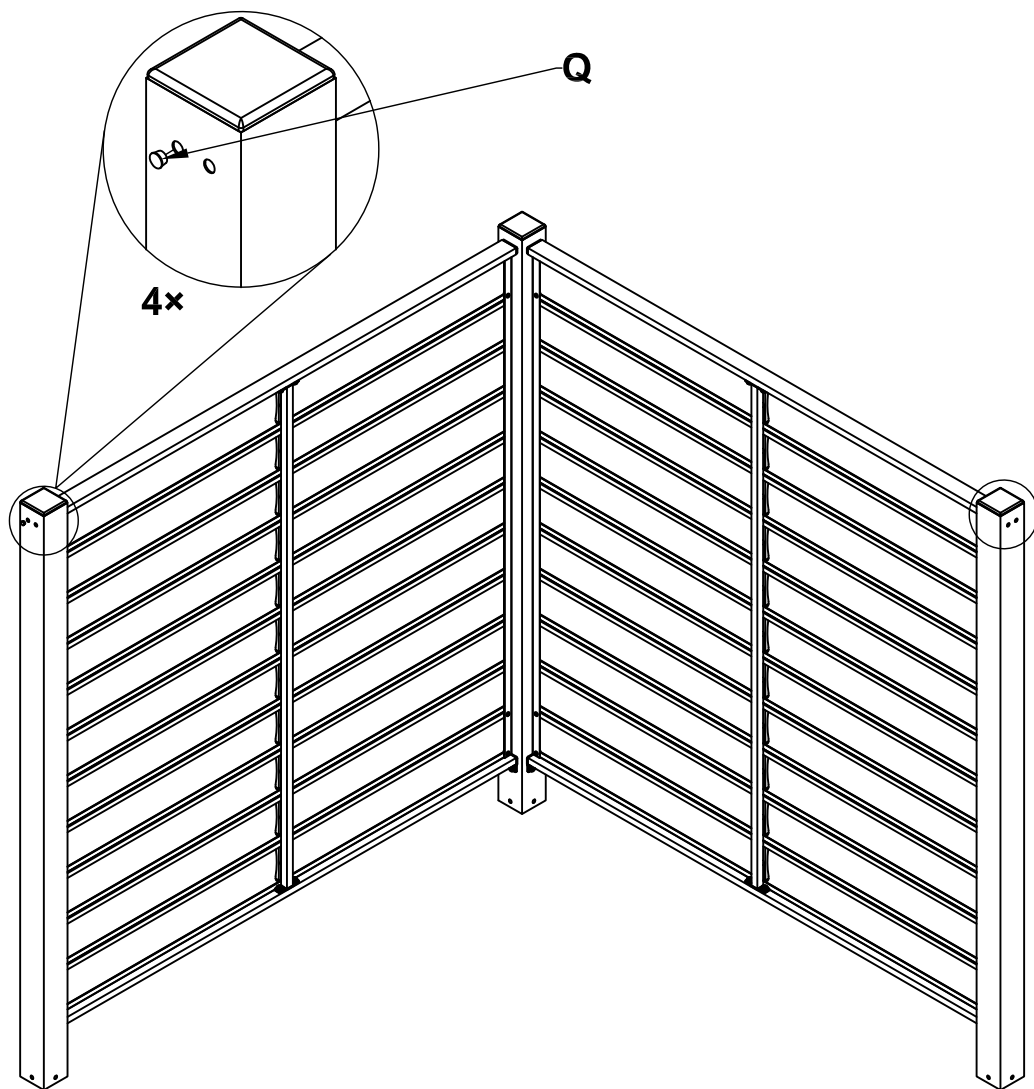

24


! Install this step if you need to fix it to the grassland. Otherwise please skip this step.

Insert Part #K into Part #J, secure with 4 Bolts #N.

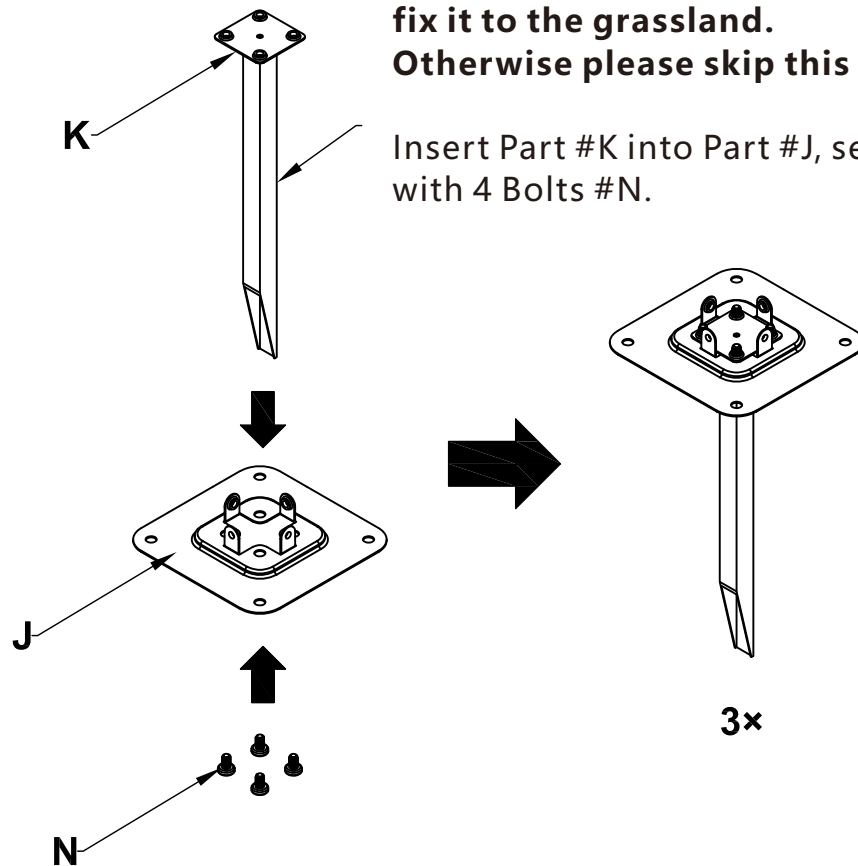

25



Based on the Posts positions, hammer the assembled Ground Stake into the grassland, then insert the assembled Panels into the Ground Stake (or Part #J).

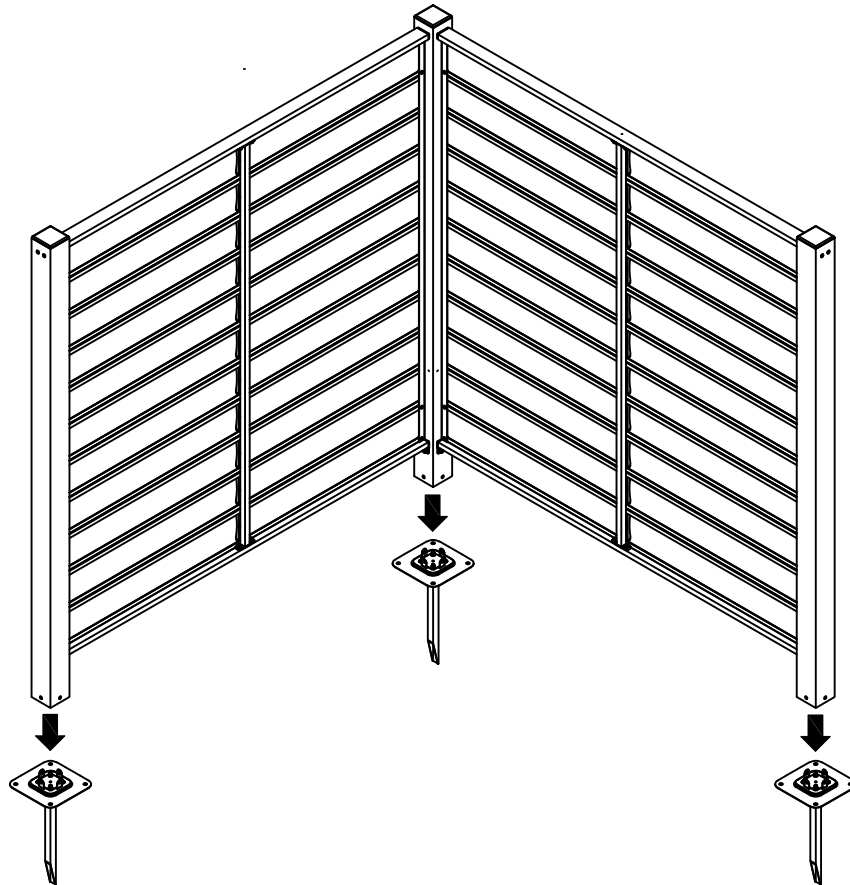

N	O	R			
					
12PCS	12PCS	1PC			

26

Use 12 Bolts #N and 12 Washers #O to secure the Poles to the Ground Stake (or Part #J).

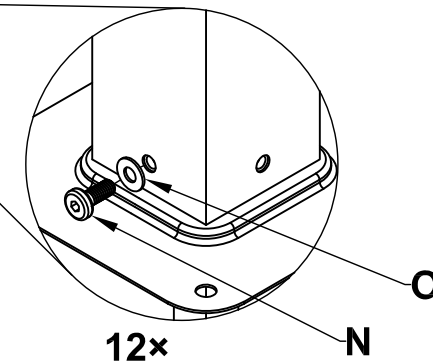
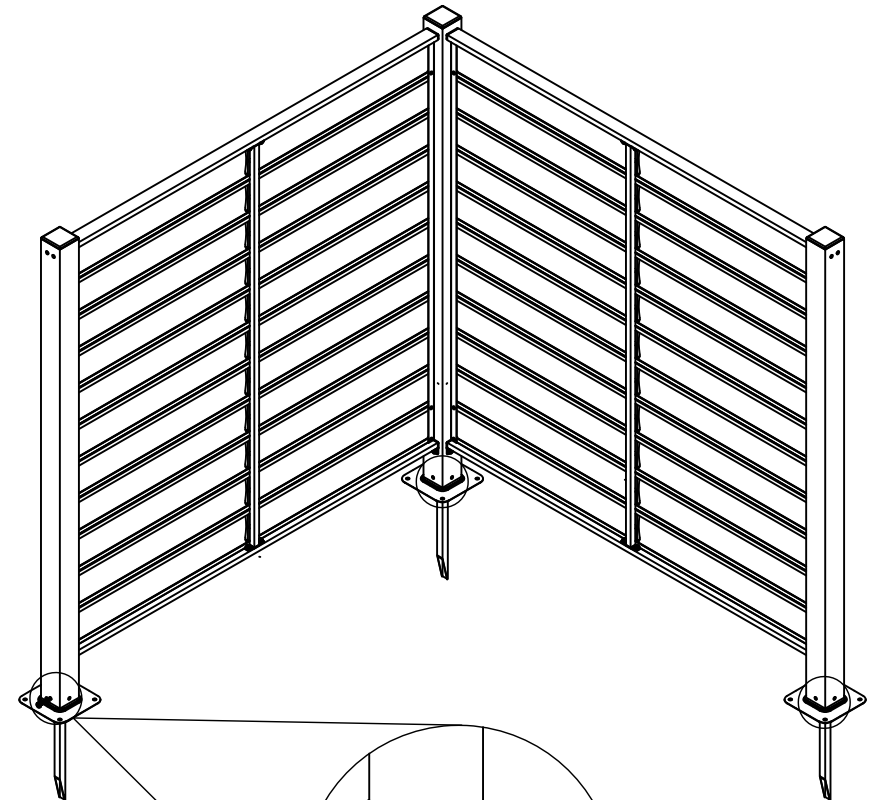


L



12PCS


27

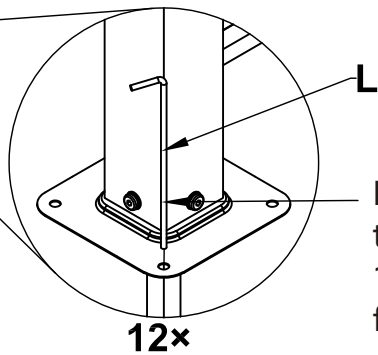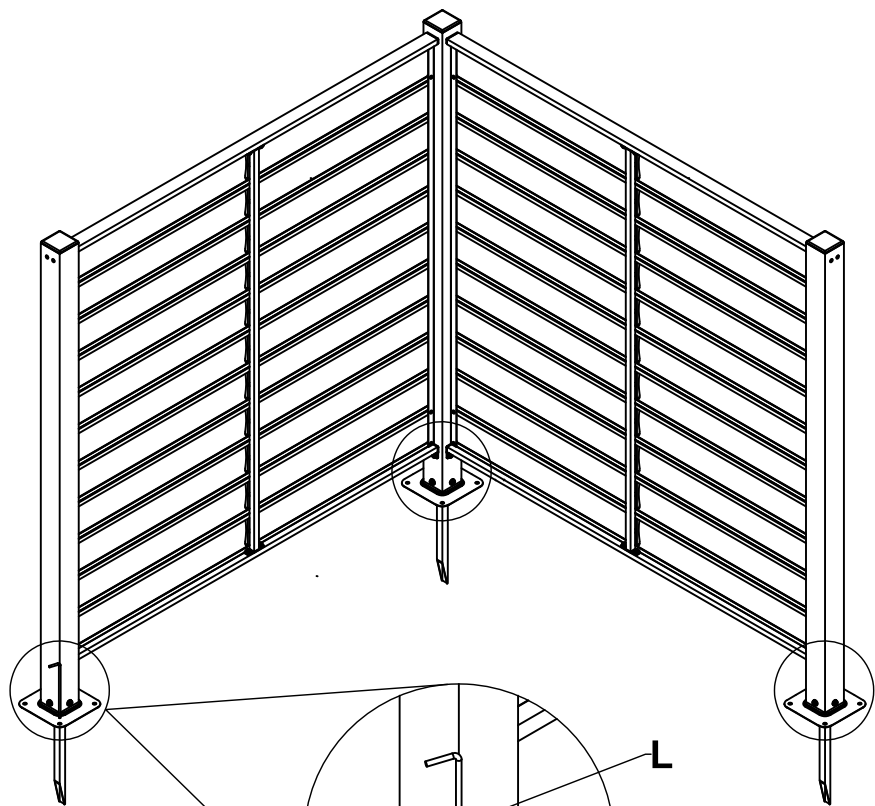

12x

If it is installed on
the grassland, add
12 Ground Nails #L
for fixation.

28

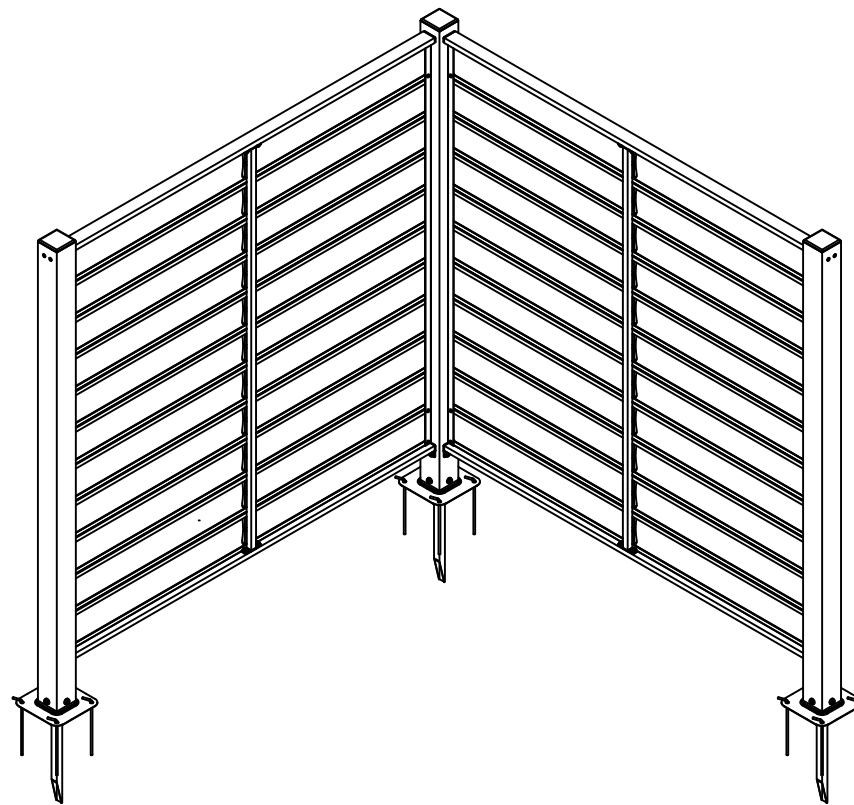



RESORT COMFORT IN YONR
OWN BACKYARD

Support:



Business cooperation contact email:

marketing@domioutdoorliving.com

After-sales contact email:

service@domioutdoorliving.com

Please tell us your order ID when contact.

Attach photos of damaged part for instant reply.