




V SHAPE DOOR ASSEMBLY INSTRUCTIONS

DOOR PANEL ASSEMBLY INSTRUCTIONS



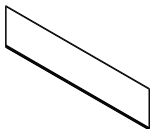








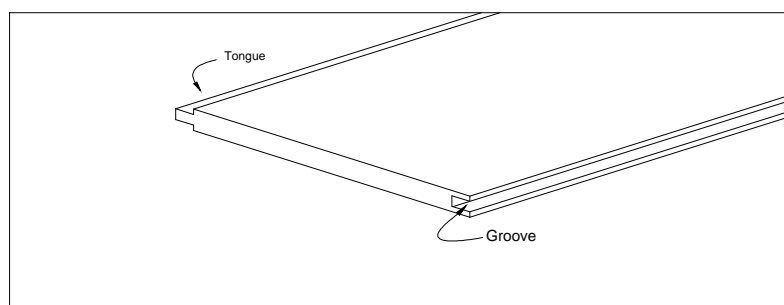
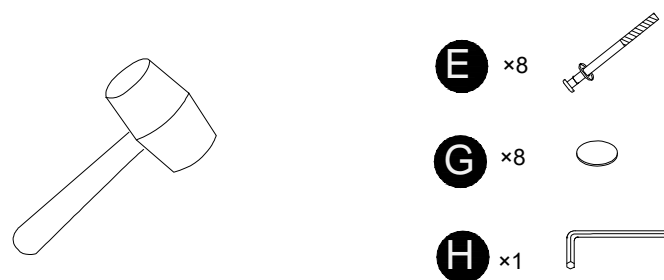
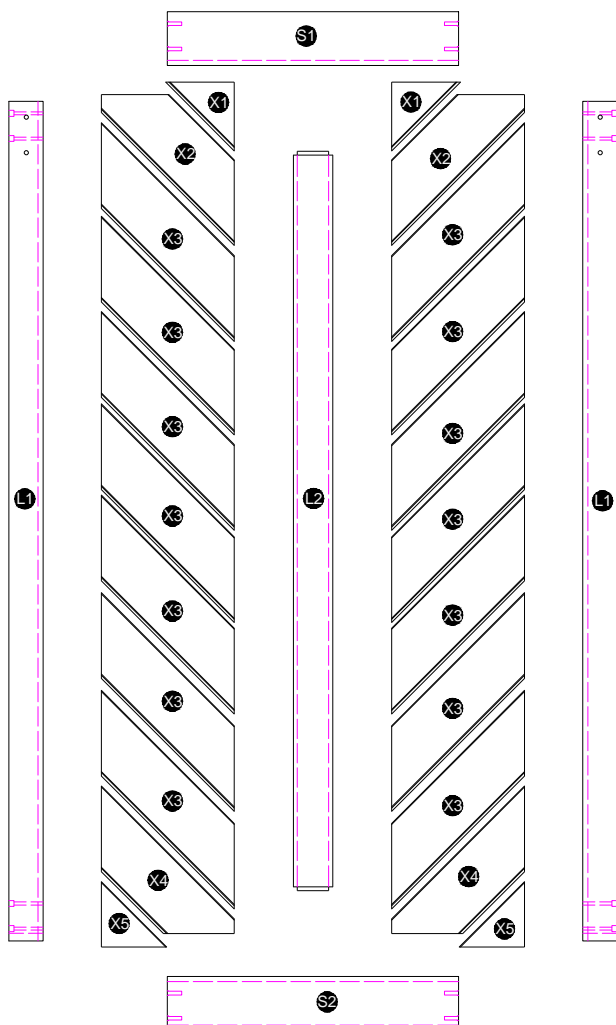


For best results, carefully follow the instructions in this guide. Glue and other adhesives are not required, and we do not recommend their use during the assembly process.

First, remove all parts from the box and place them on a flat, open surface. Then, using the guide drawings at the bottom of this page, identify each slat. Next, follow the drawing on the left to place each part as shown.

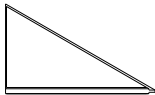Make sure to pay special attention to the direction of the tongues and grooves on each piece. S1, S2, L1 and L2 should have their grooves facing inward. Note the orientation of X2 and X4 when installing.

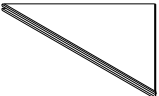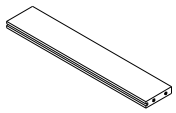

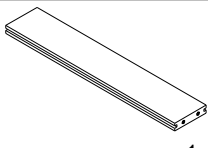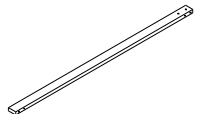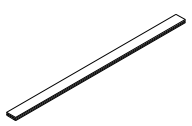
Panel List

Panel List			S1	S2	L1
X1  ×2pcs	X2  ×2pcs	X3  ×14pcs			
X4  ×2pcs	X5  ×2pcs	S1  ×1pcs	X1 	X2 / X3 / X4 	
S2  ×1pcs	L1  ×2pcs	L2  ×1pcs	X5 		

Assembly Steps

1


Attach S1(top slat) and S2 (lower slat) to L1 by inserting the tongues into the groove of L1. Aligning the holes and fastening with four carriage bolts.

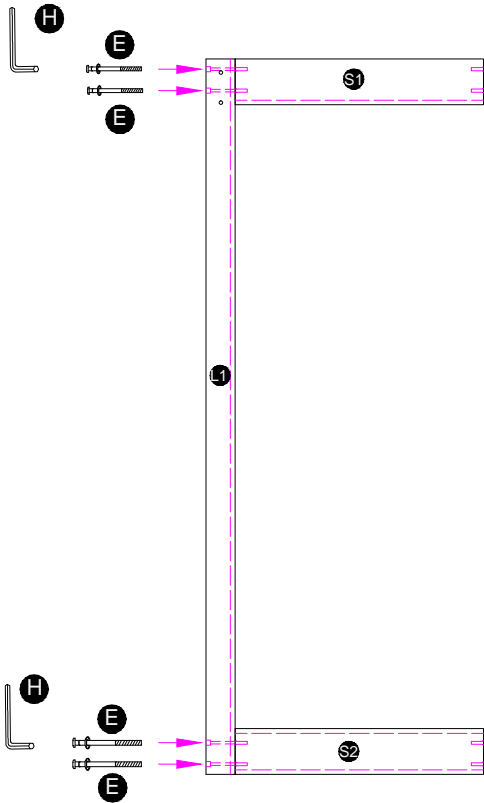

E×4


2

Gently slide slats X1 to X5 into place as shown in the drawing below and make sure following the direction in picture

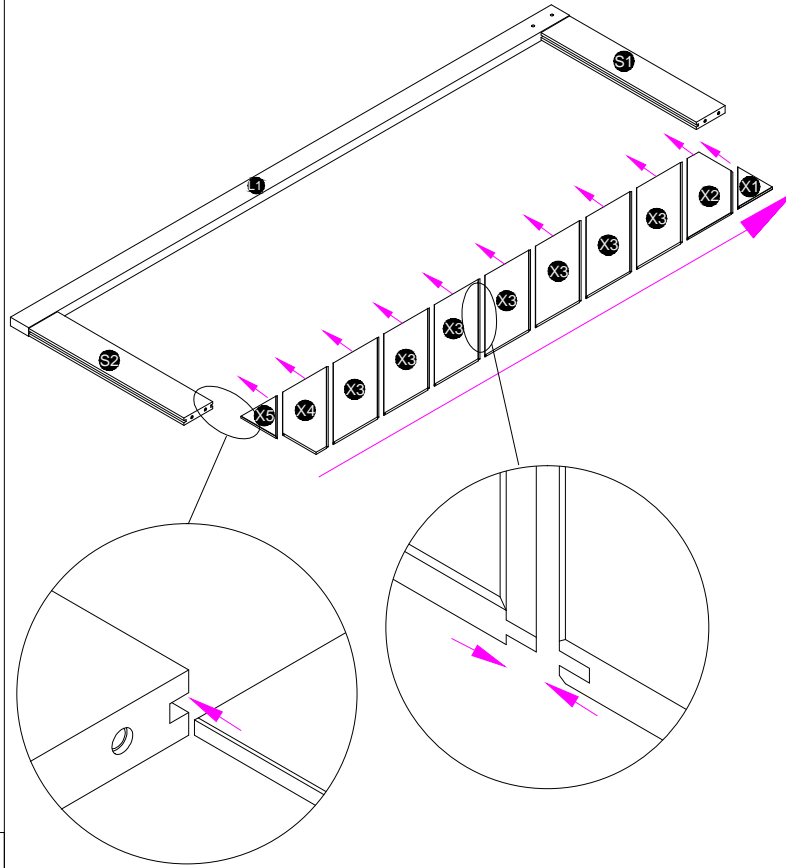


3

Insert middle stile (L2) into frames in the direction of instruction. Make sure every slat is in right position.

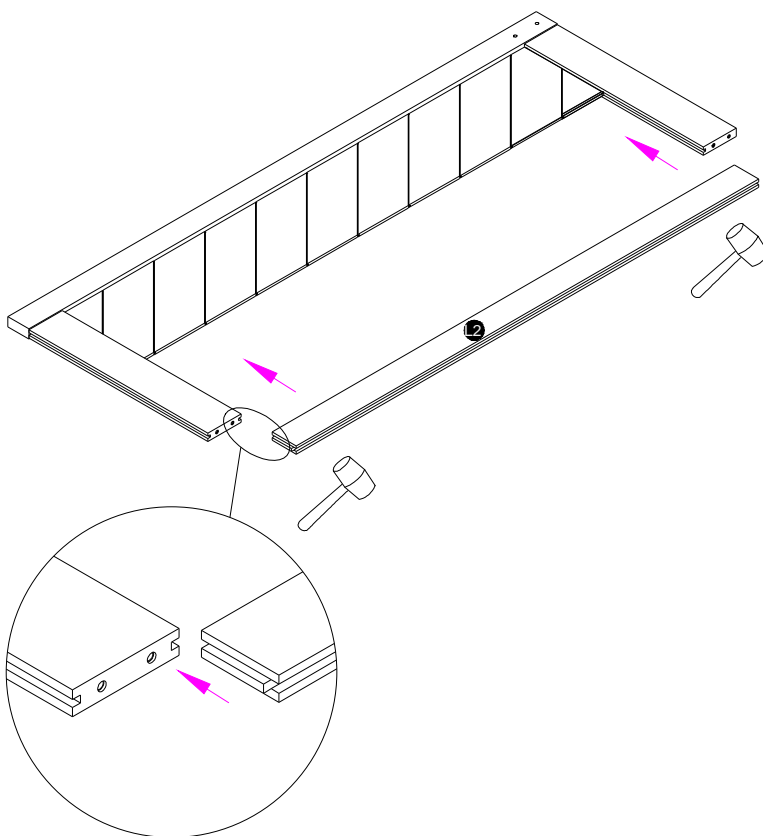


4

Gently slide slats X1 to X5 into the left side of L2 with all their grooves facing up. Make sure all the slats following the direction in instruction.

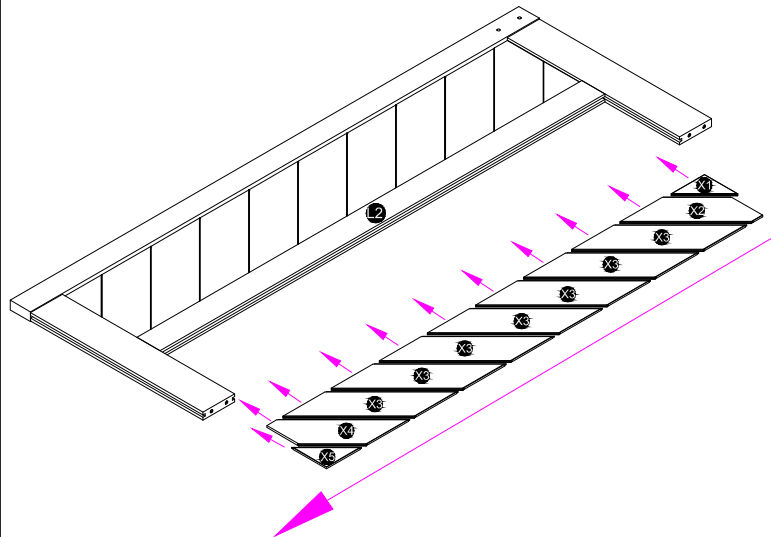

5


Then, align stile L1's groove with tongue of X1 to X5, and fasten L1 with S1 and S2 with four carriage bolts.

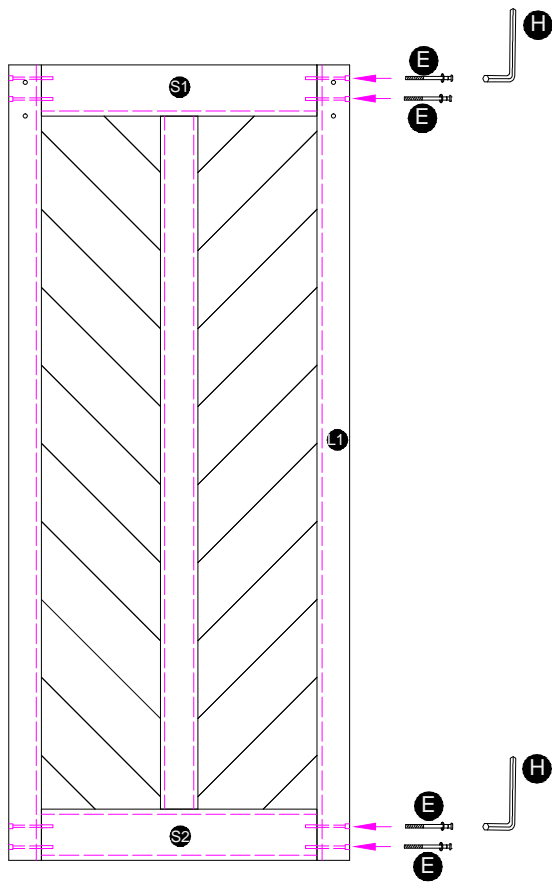

E×4

6

Tighten all 8 of the carriage bolts. After making sure all the bolts are tightened. Place the included plastic covers (G) on top of the bolts. Then your door is ready to hang.

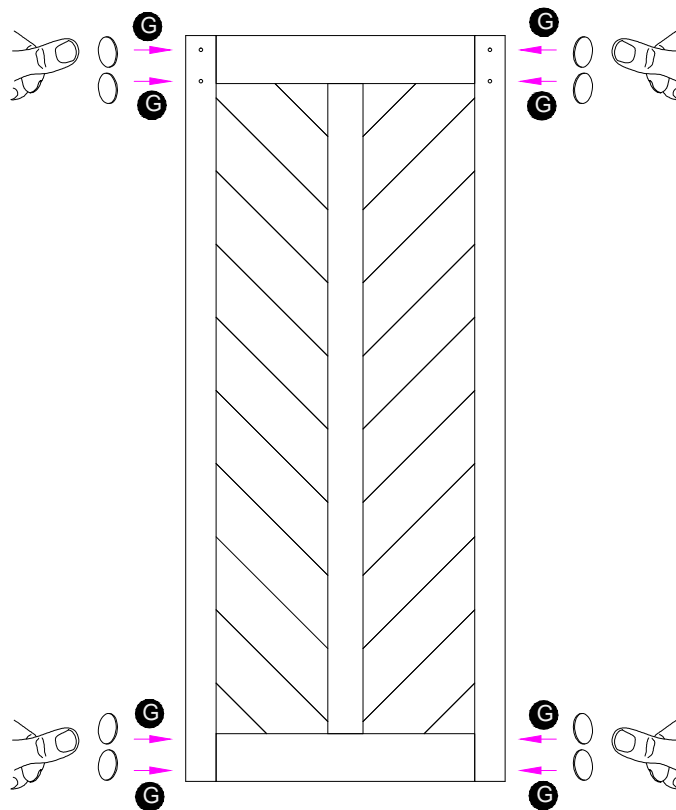

G×8

7

Installation complete

