




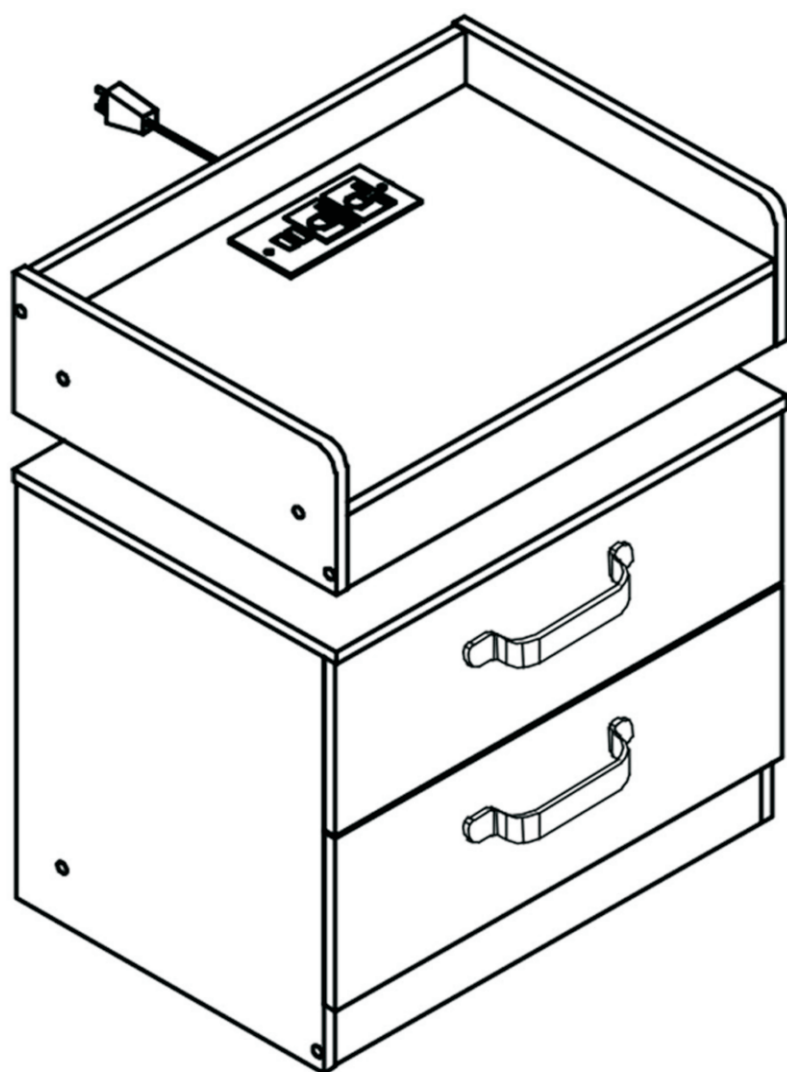


BOARD IDENTIFICATION

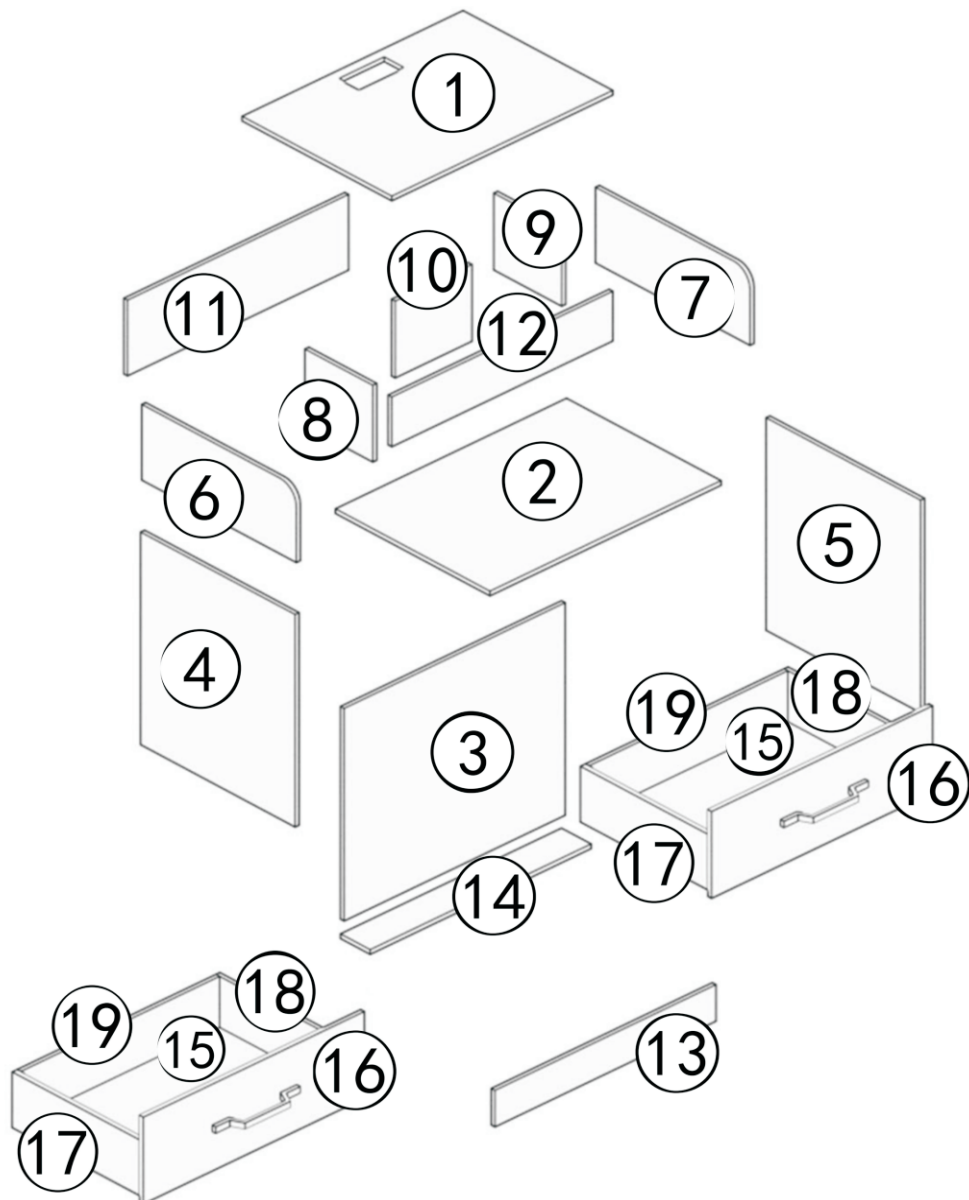


Part List

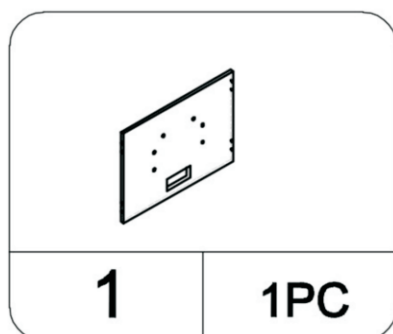


Top Board

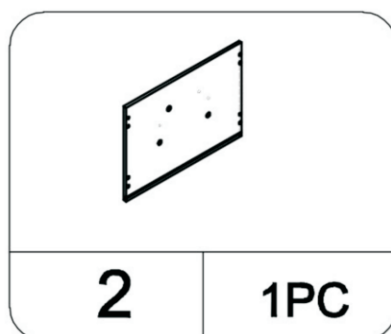


Board

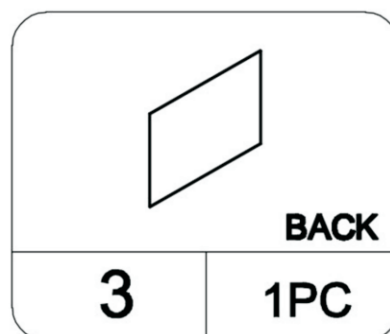


Back Board

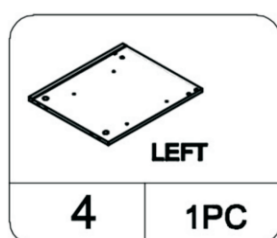


Left Board

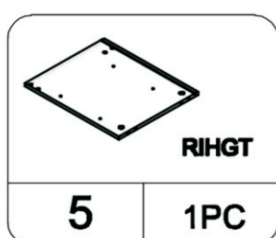


Right Board

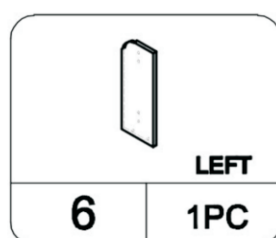


Left Board

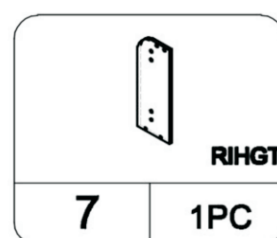


Right Board

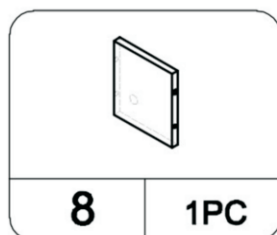


Left Middle Board

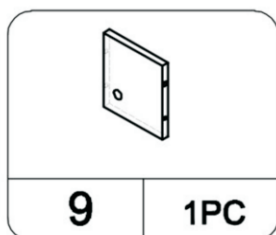


Right Middle Board

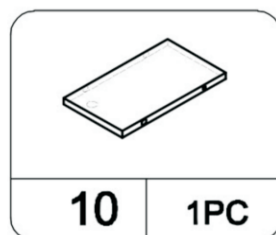


Front Middle Board

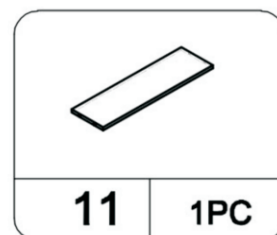


Back Board

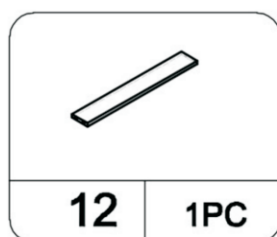


Front Middle Batten

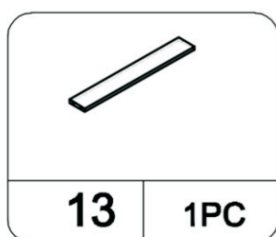


Bottom Batten

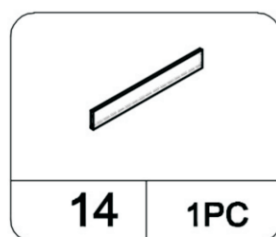


Back Batten

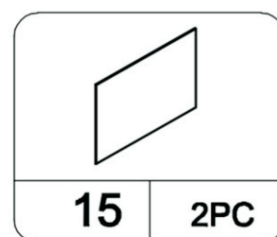


Back Board

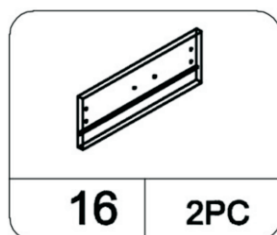


Drawer Front board

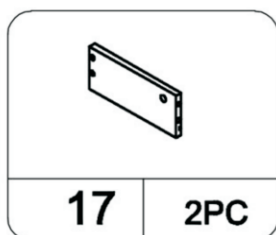

Drawer left board

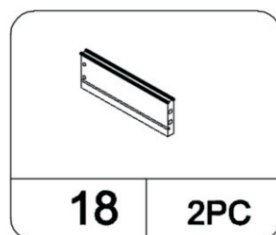


Drawer right board

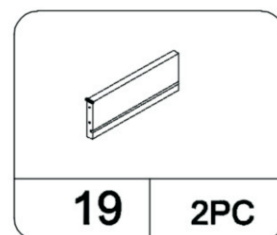


Drawer Back board


Hardware List

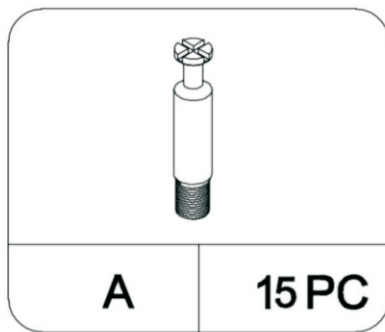

CAM BOLT

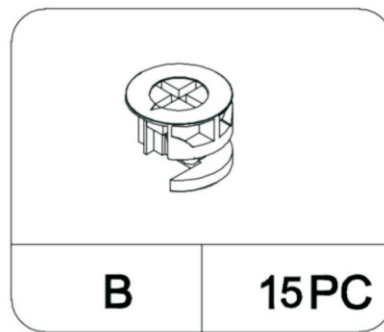


CAM LOCK

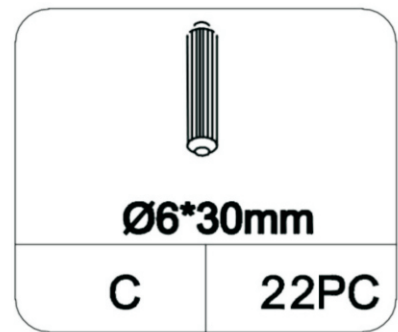


WOODEN PEG




SCREW

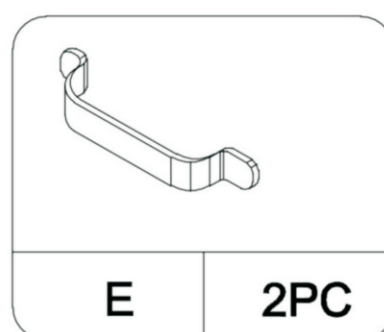


HANDLE

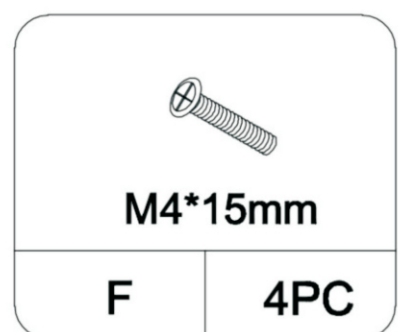


SCREW

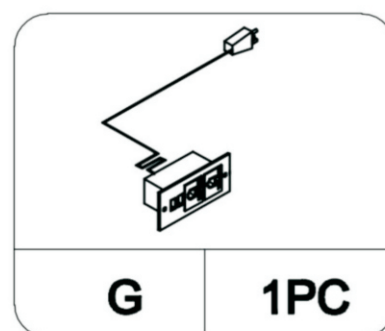


USB

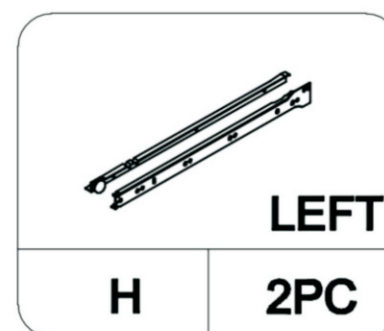


LEFT RAIL

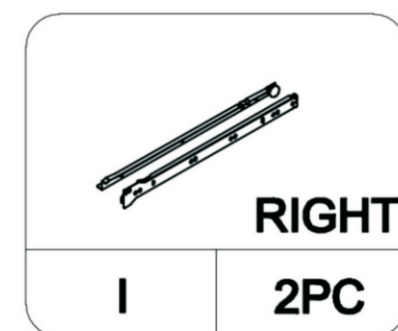


RIGHT RAIL

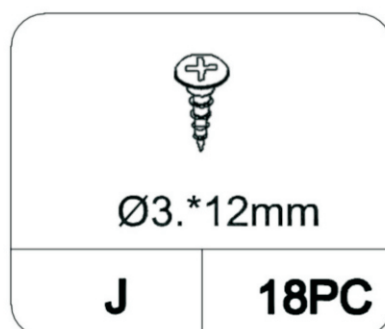

SCREW



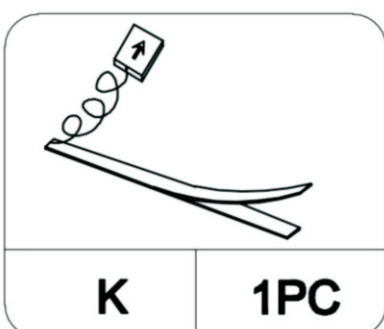


LIGHT STRIP

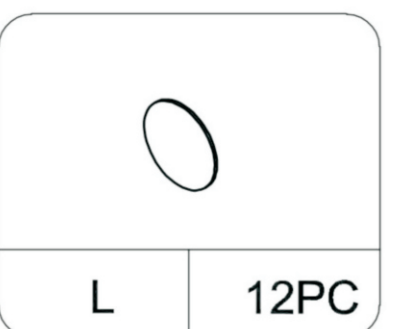


WASHERS

STEP 1

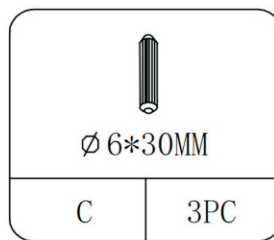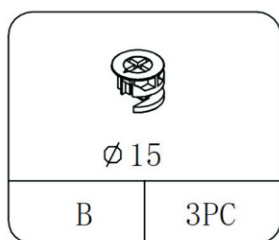
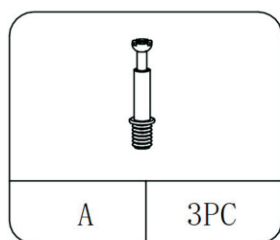


Insert (C) into part (1). Attach cam bolt (A) to part (1) with screwdriver.


Attach part (1) to part (8,9,10). Then use attach part (B) to lock them.

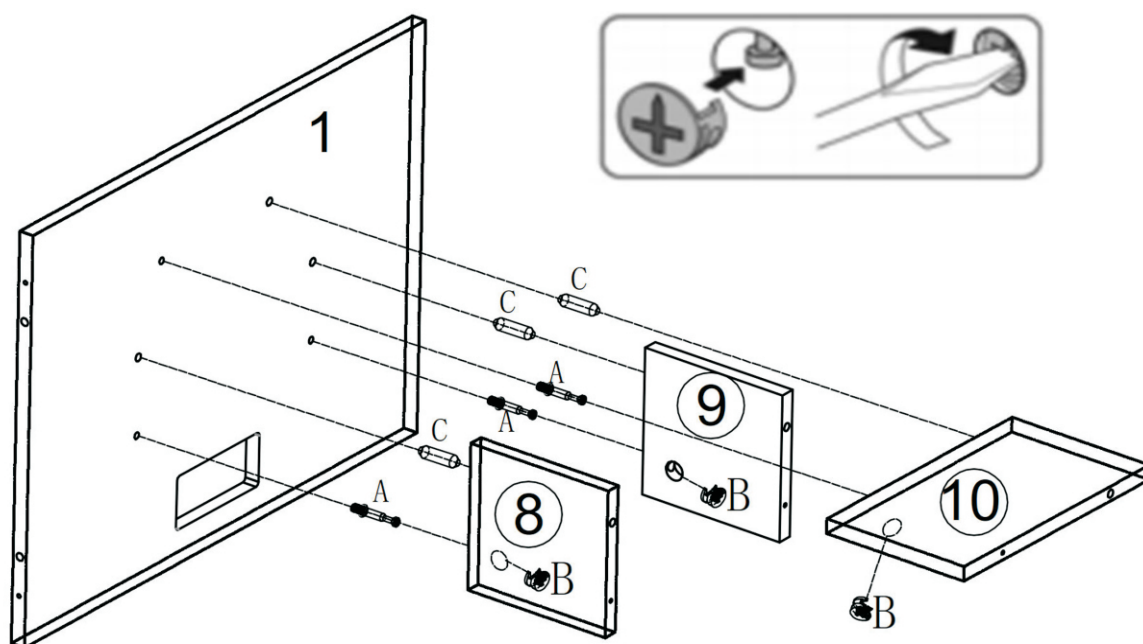



STEP 2

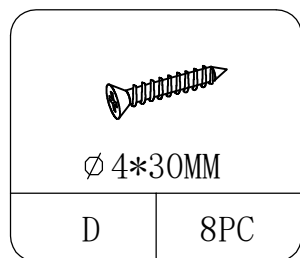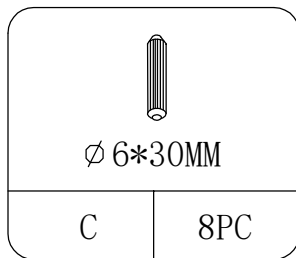


Insert (C) into part (1,11,12). Attach part (6,7) to part (1,11,12) with (D).

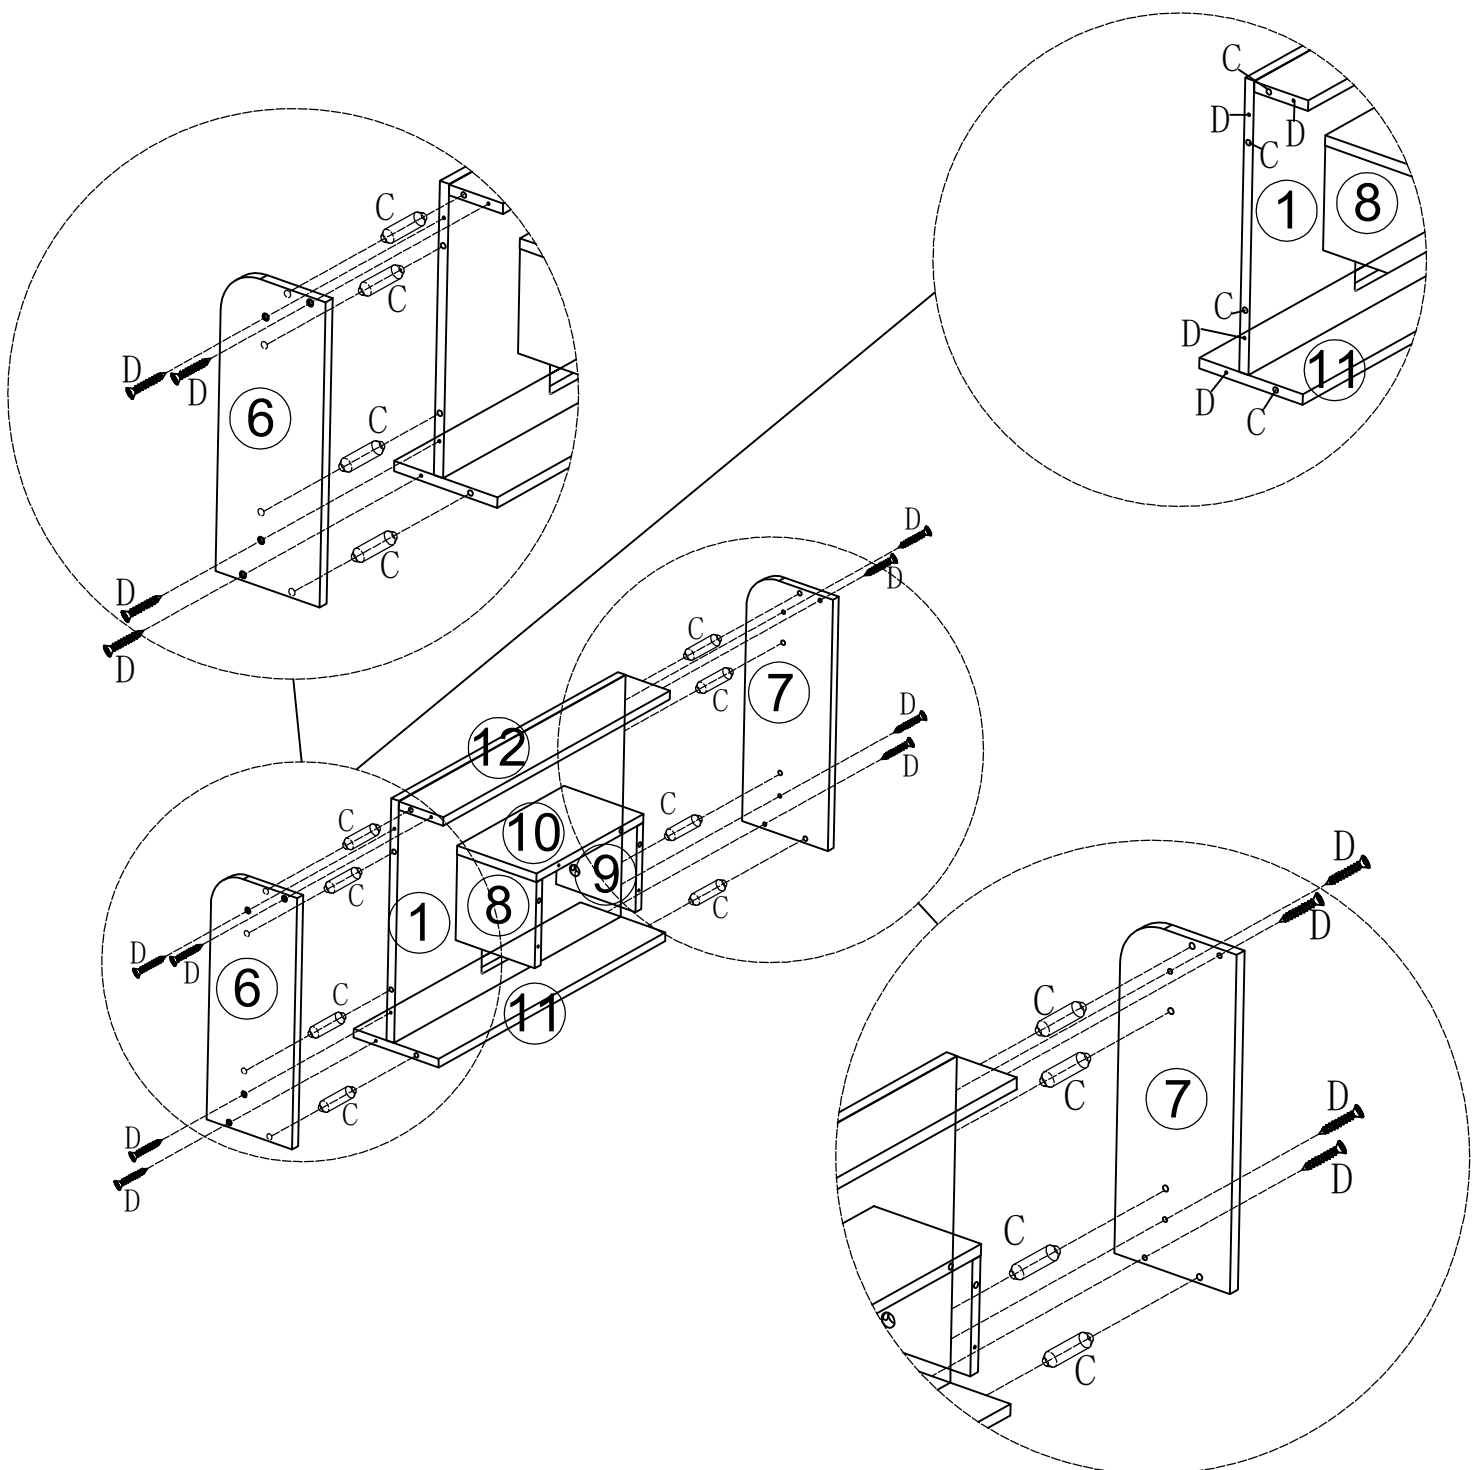




STEP 3

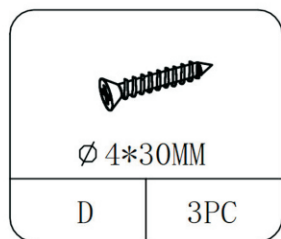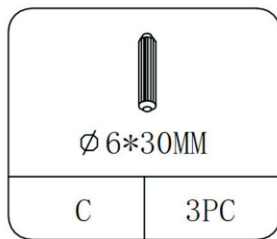

Insert (C) into part (8,9,10). Attach part (2) to part (8,9,10) with (D).

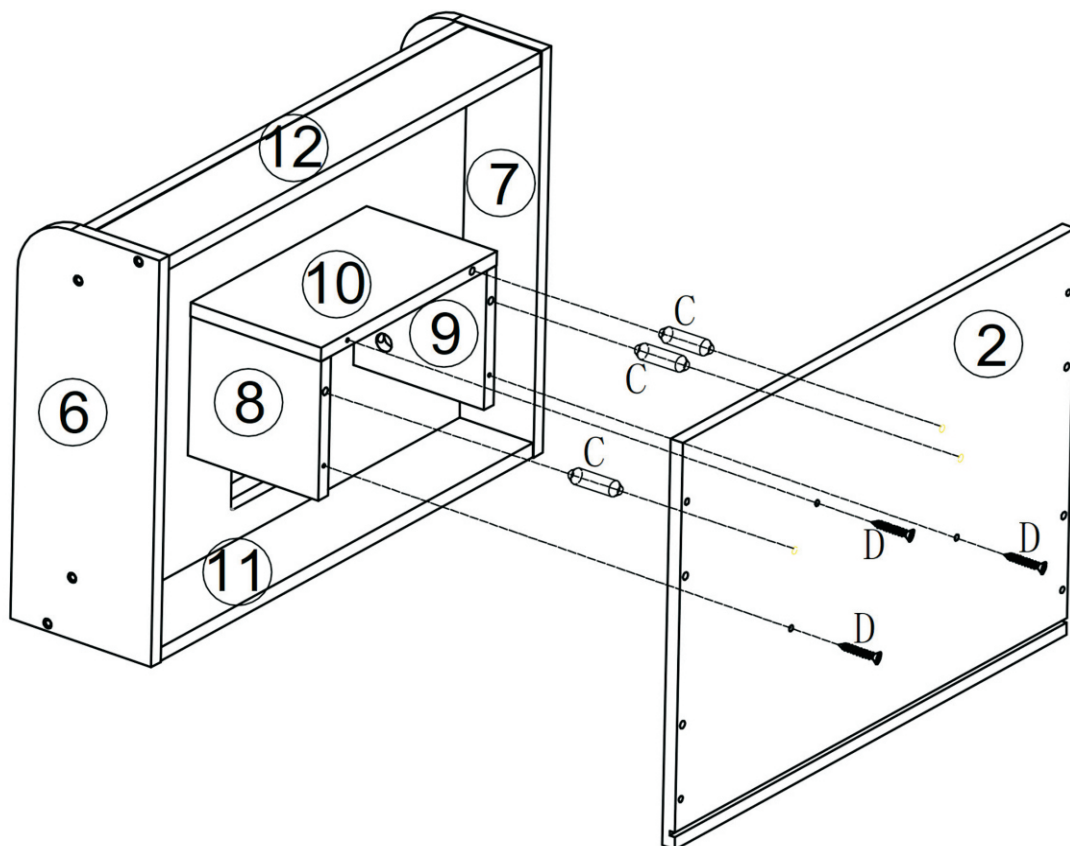

STEP 4

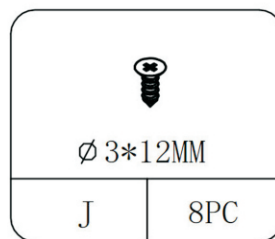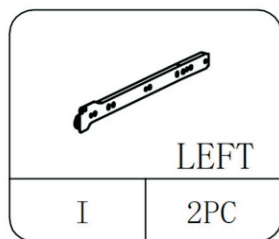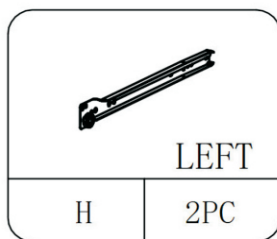


Using screw (J), attach (H) to (4).



Using screw (J), attach (I) to (5).

Notice:


Note the orientation and hole location of (H) and (I).

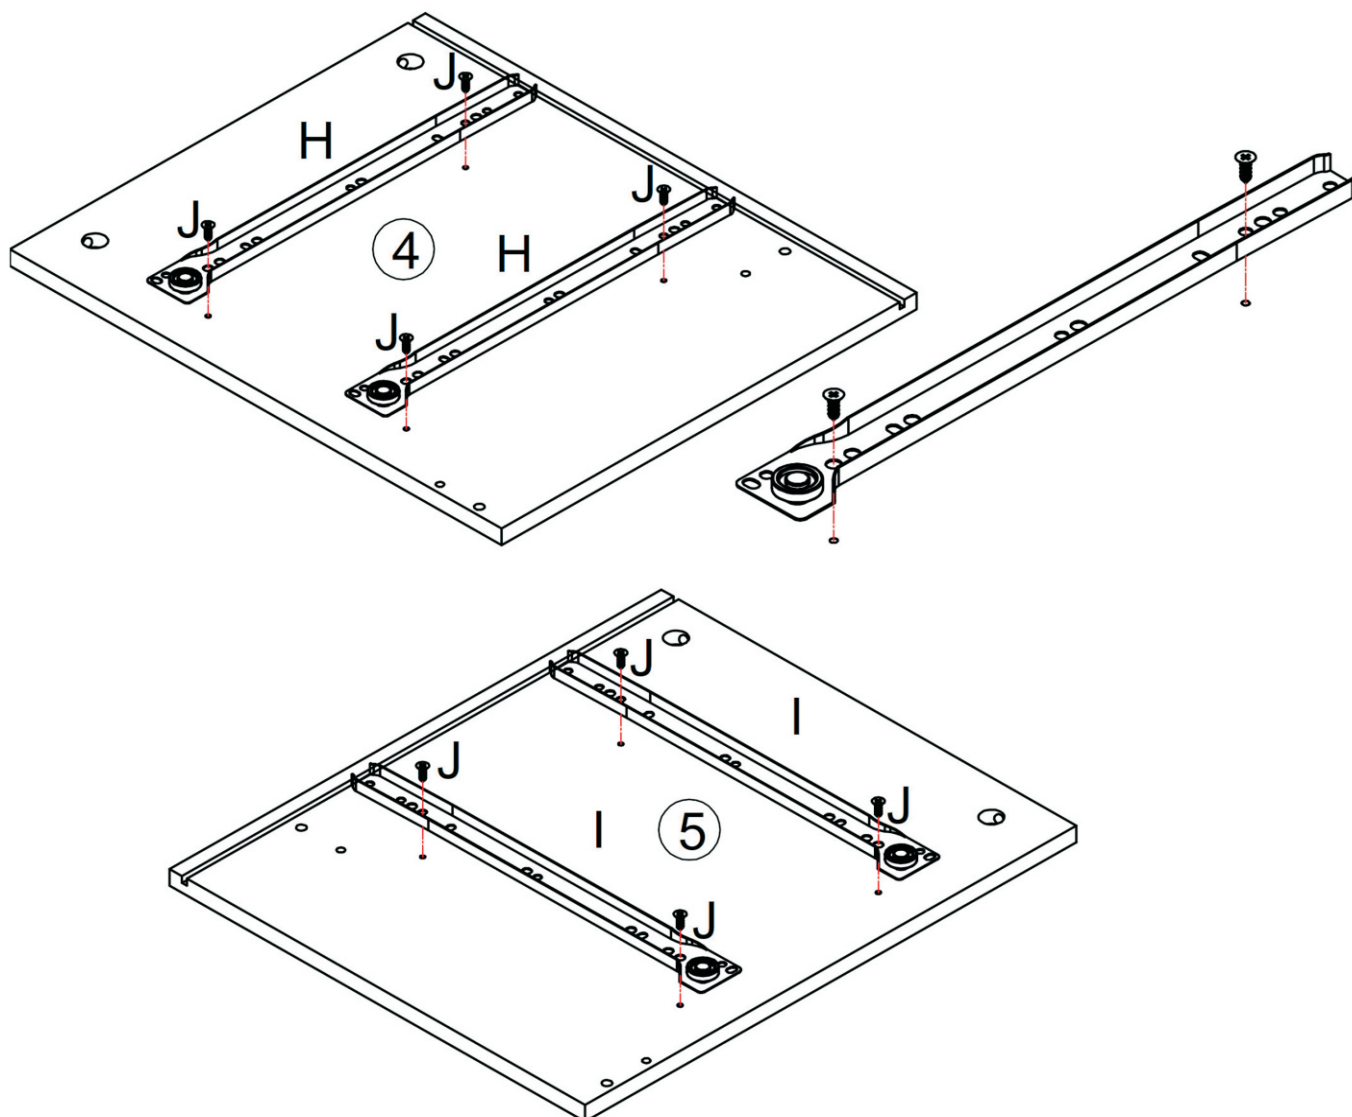



STEP 5

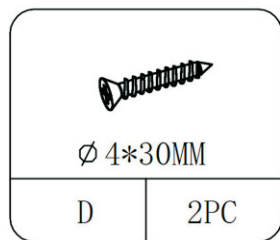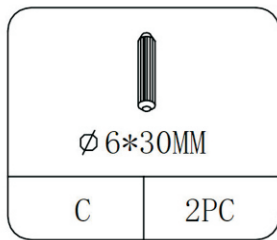


Insert (C) into part (5). Attach part (5) to part (13,14) with (D).

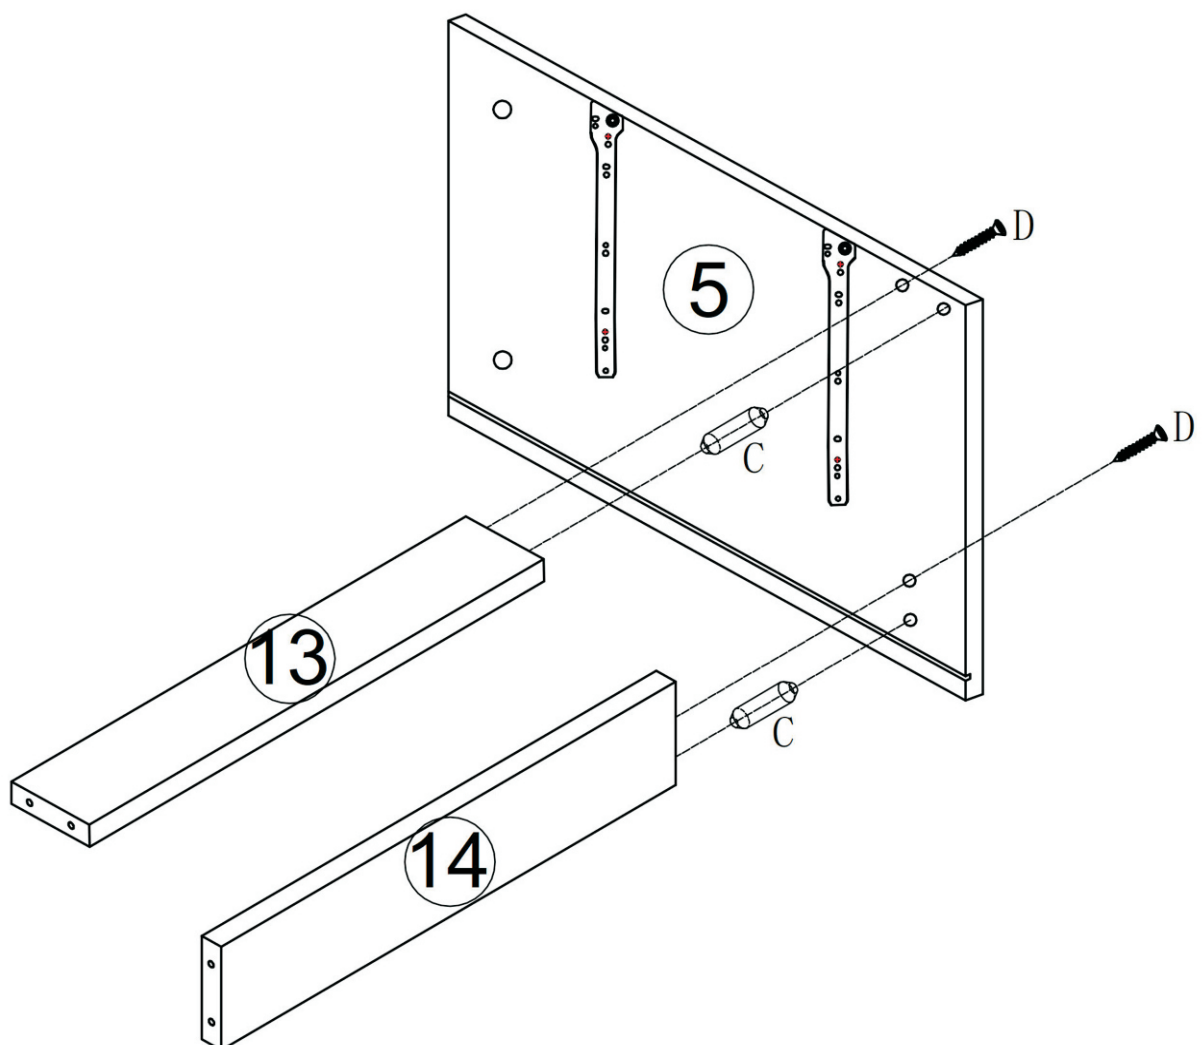



STEP 6

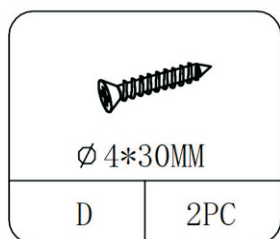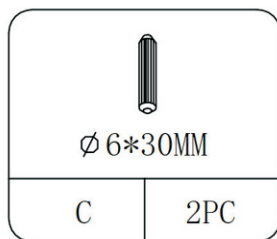

Insert (C) into part (13,14). Attach part (4) to part (13,14) with (D).

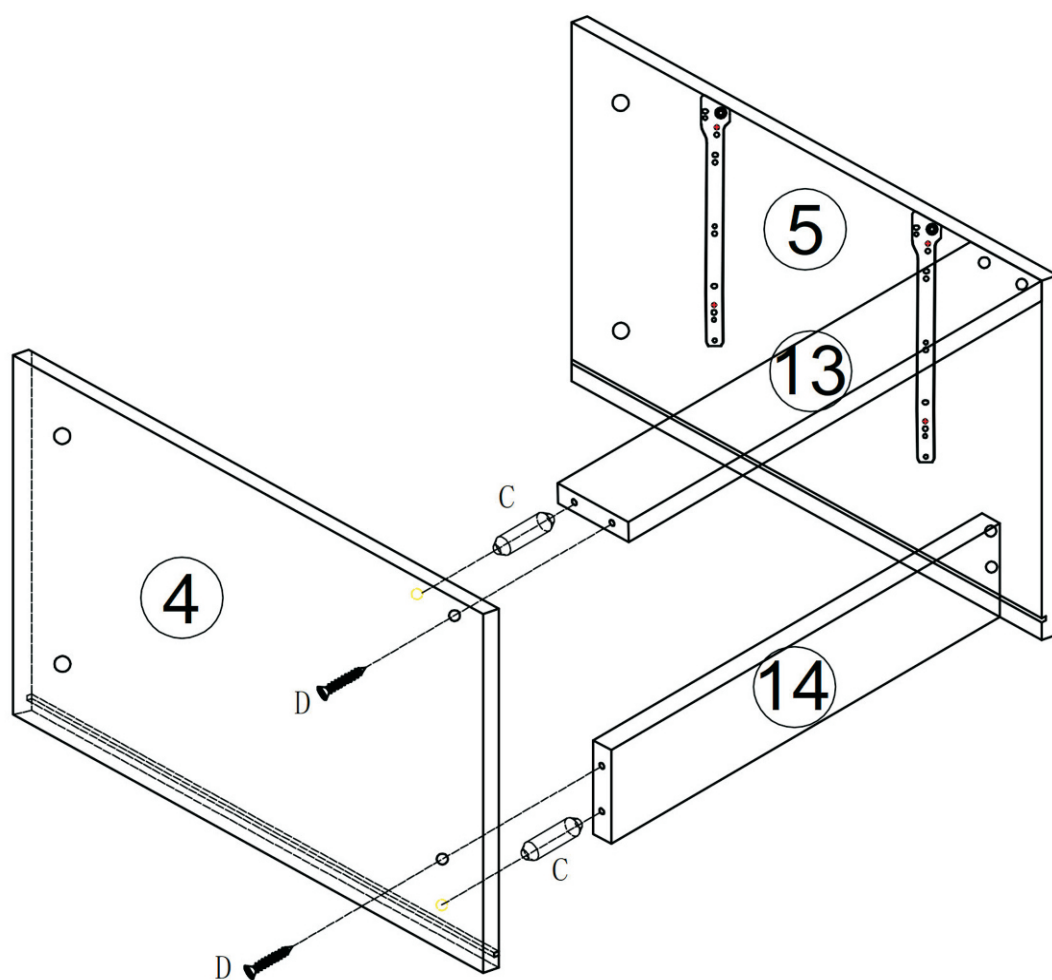


STEP 7

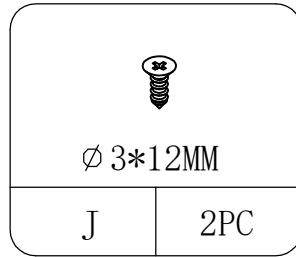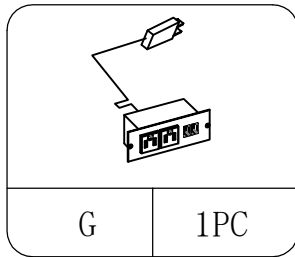


Attach part (G) to part (1) with (J) as shown.

Notice:


Note that the plug is placed under the hole as shown in the figure.

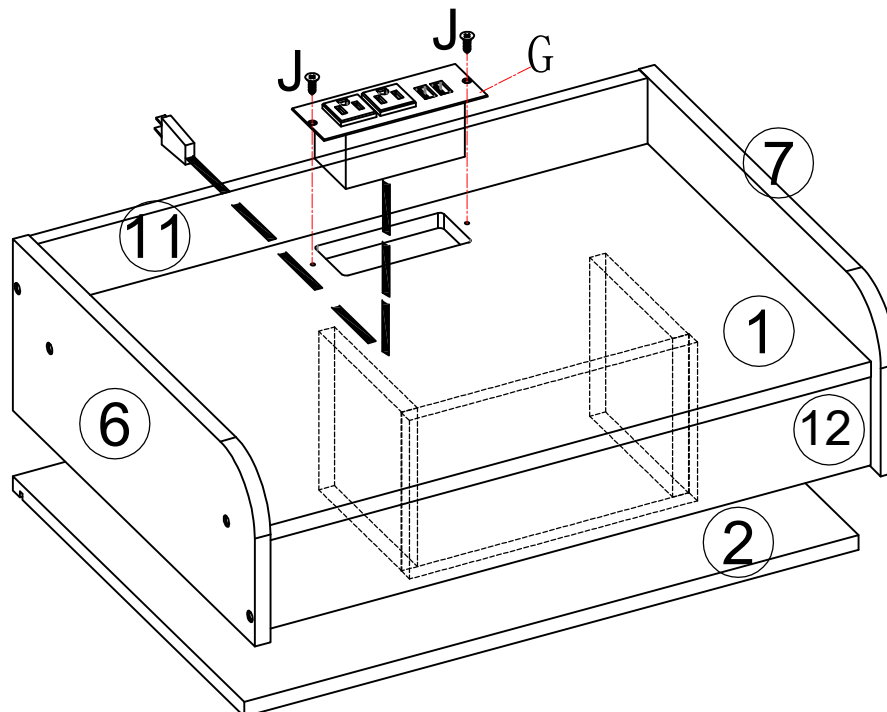

STEP 8

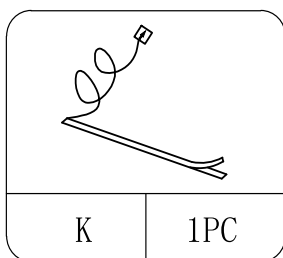


Tear off (K) tape stick (K) on parts (8,9,10)



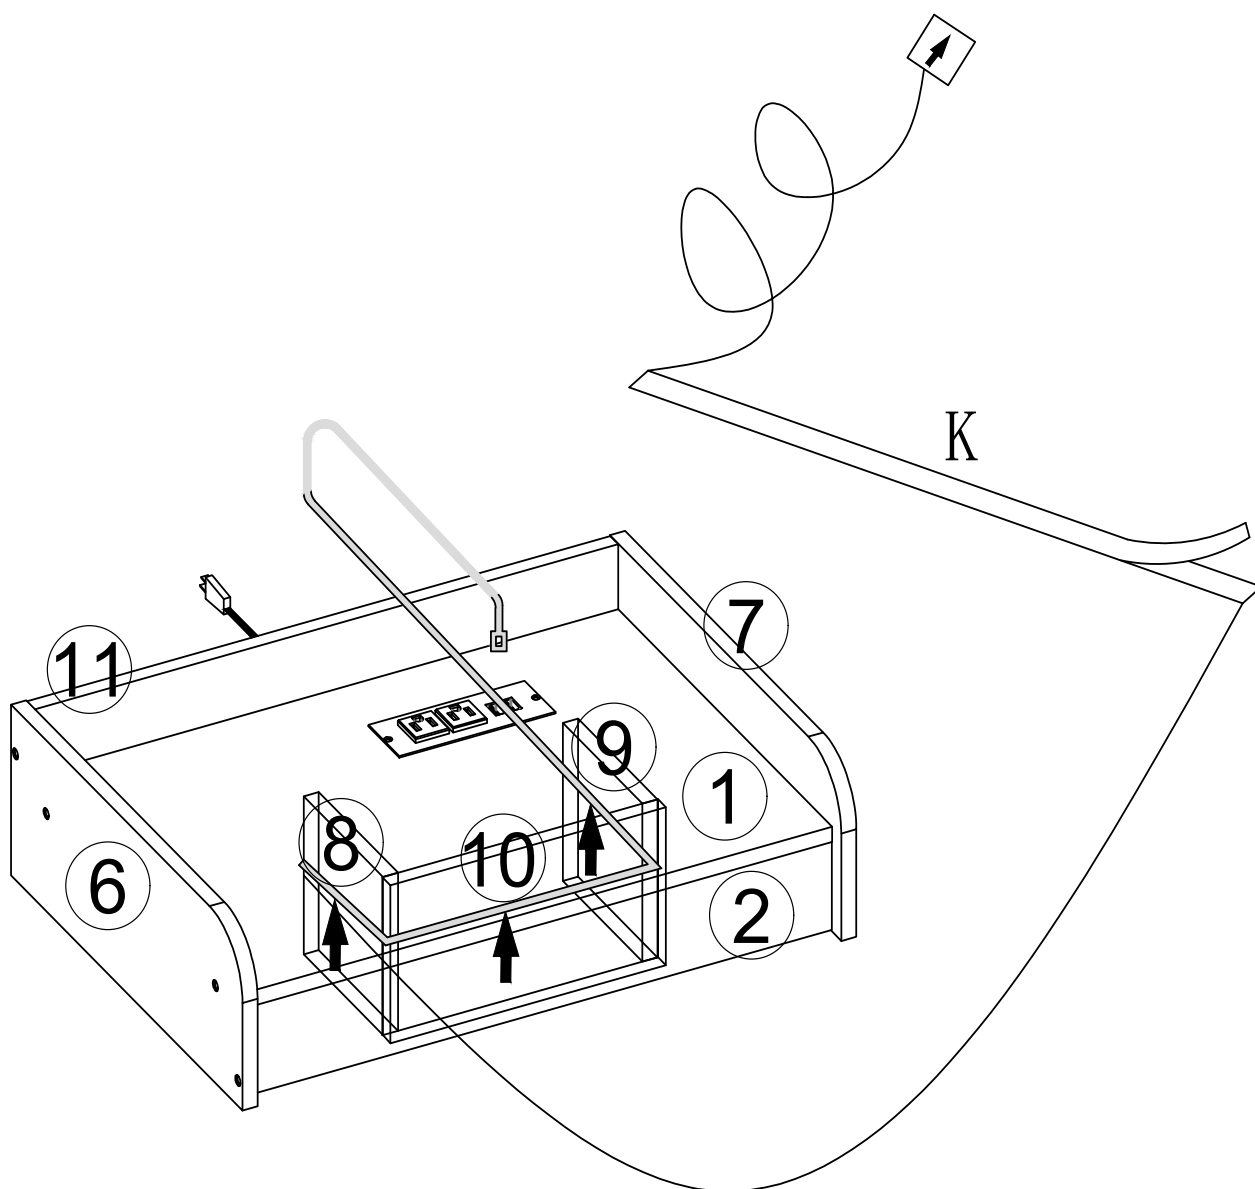


STEP 9

Put part (3) into (4,5) as shown.

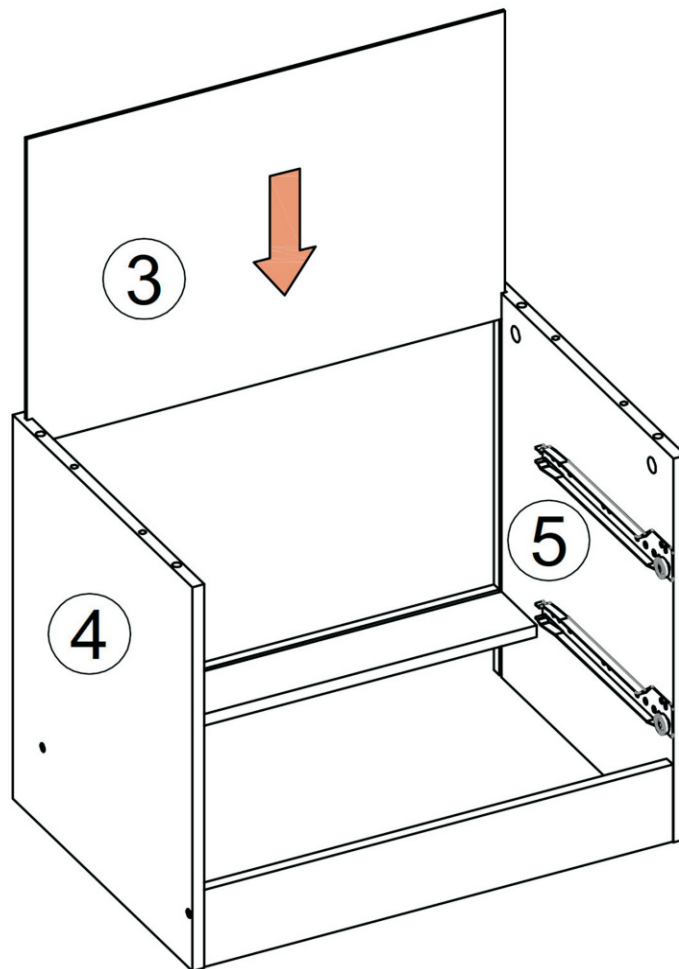


STEP 10

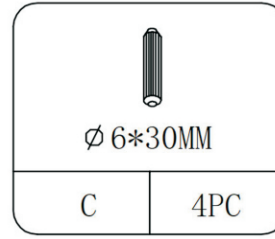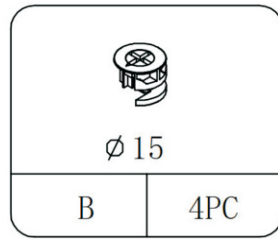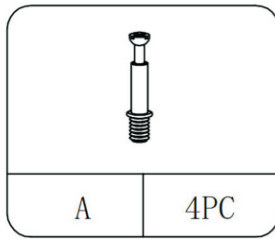


Insert (C) into part (4,5). Attach cam bolt (A) to part (2) with screwdriver.

Attach part (2) to part (4,5). Then use attach part (B) to lock them.

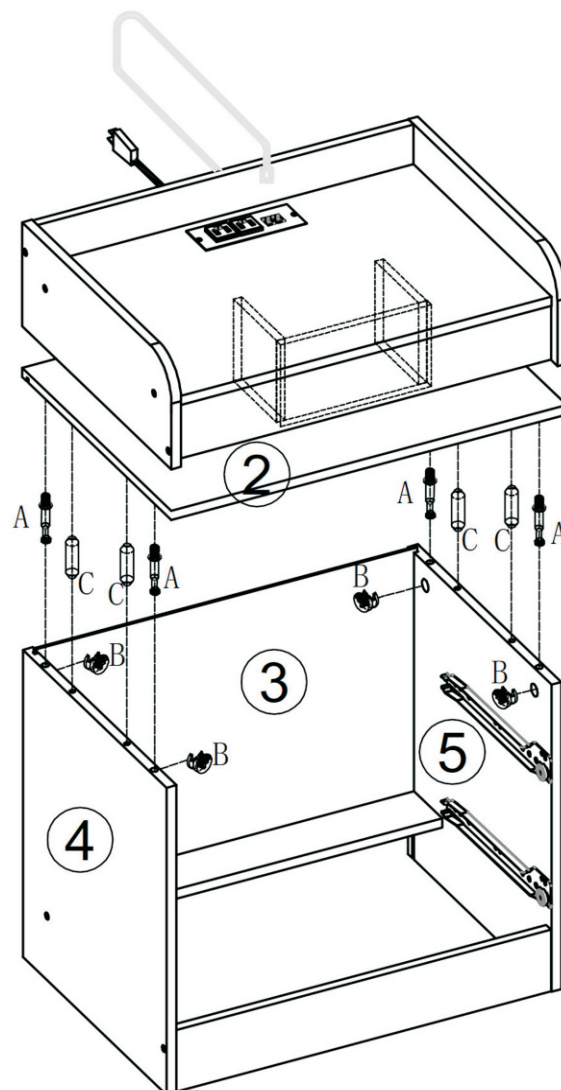


STEP 11





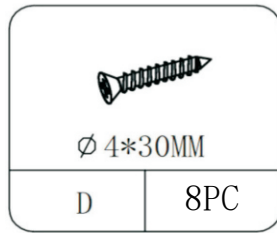


Attach part (17,18) to part (19) with (D). Then put part (15) into (17,18,19) as shown.

Repeat this step for another drawer assembly.

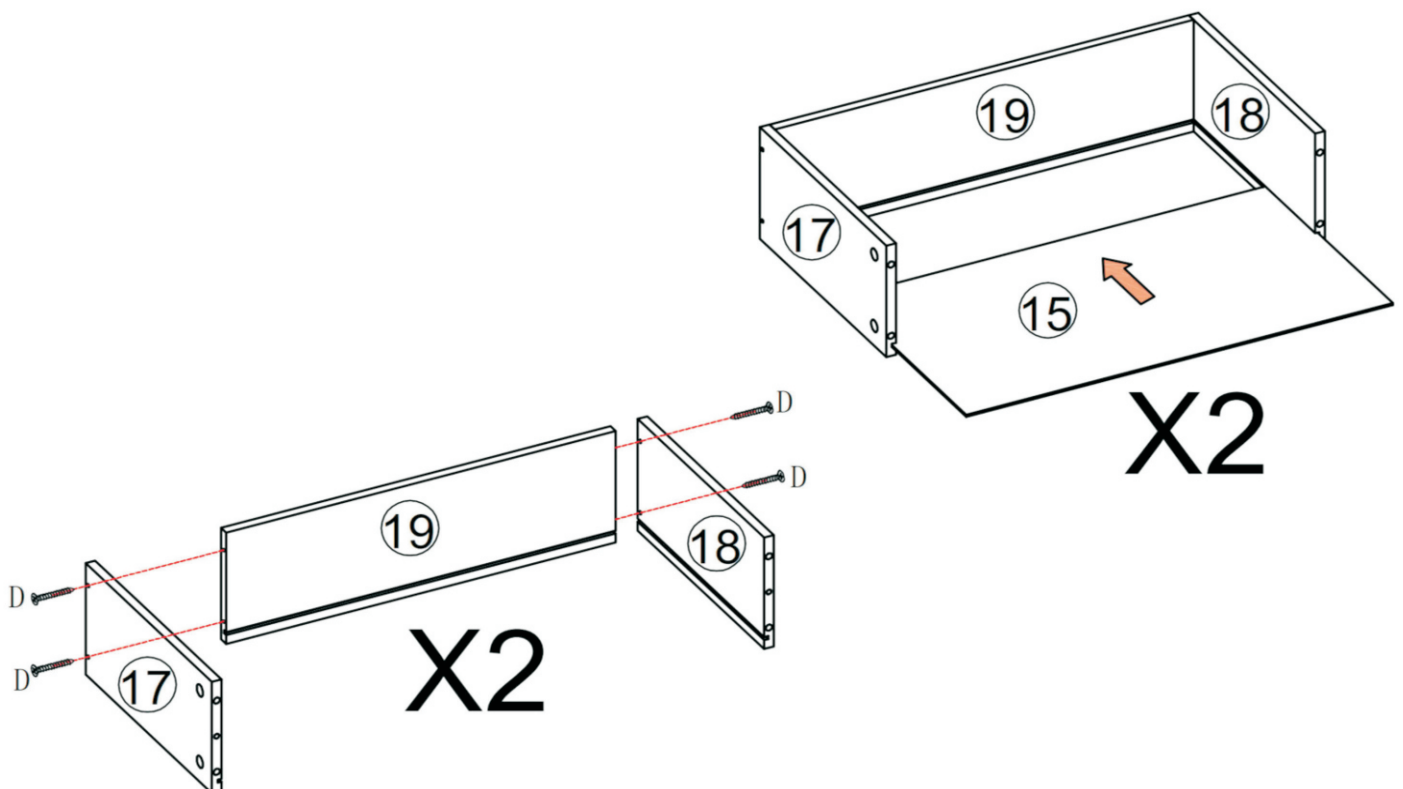

STEP 12

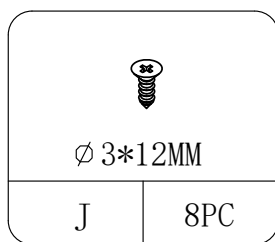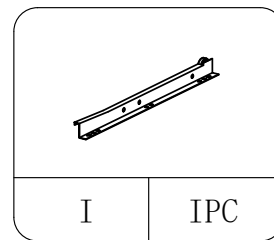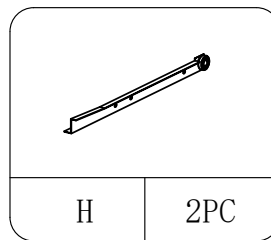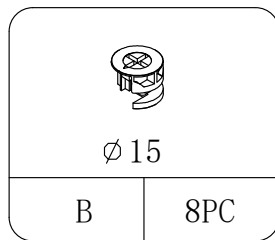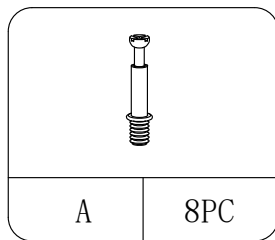

Attach cam bolt (A) to part (16) with screwdriver.

Attach part (16) to part (17,18).Then use attach part (B) to lock them.



Using screw (J), attach (H) to part (18).

Using screw (J), attach (I) to part (17).



Notice:

Note the orientation and hole location of (H) and (I).


Repeat this step for another drawer assembly.

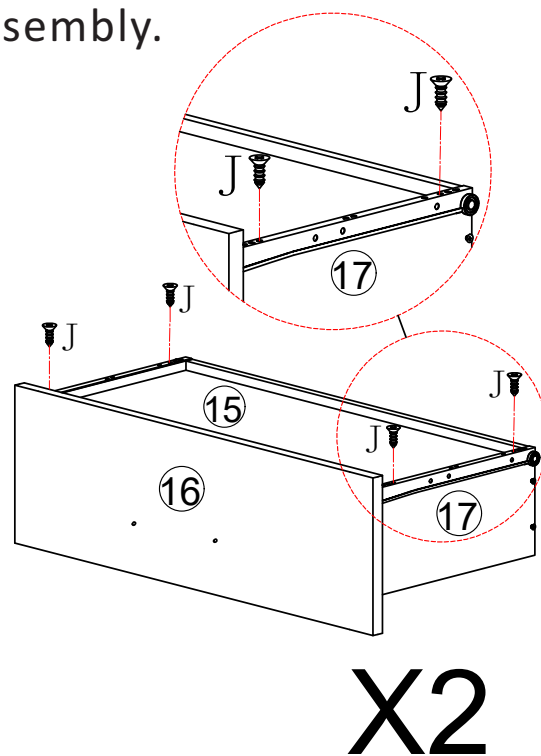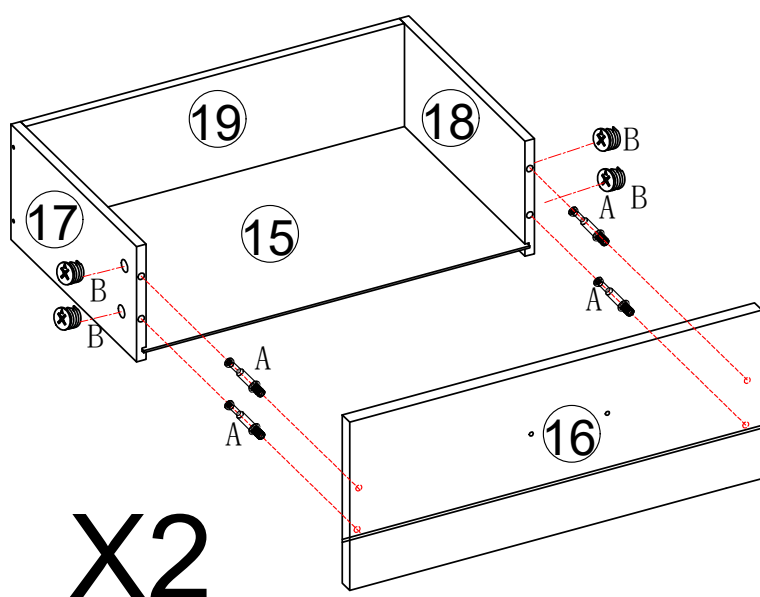


STEP 13

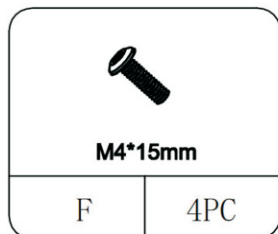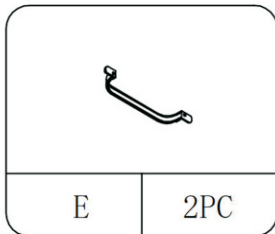

Using screw (F), attach (E) to the side part (16).
Repeat this step for another drawer assembly.

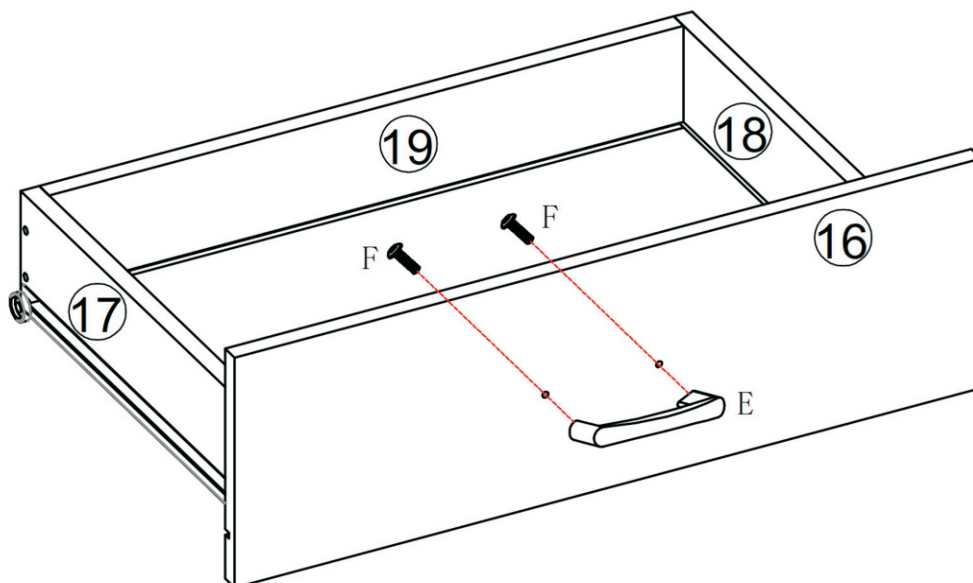

STEP 14

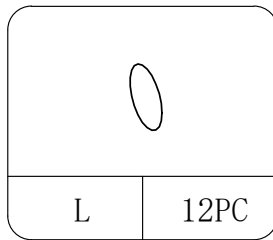

Align the 2 slide rails and put drawer into, then put (L) as shown.

