


ILSC60BVT-N


Assembly Instructions

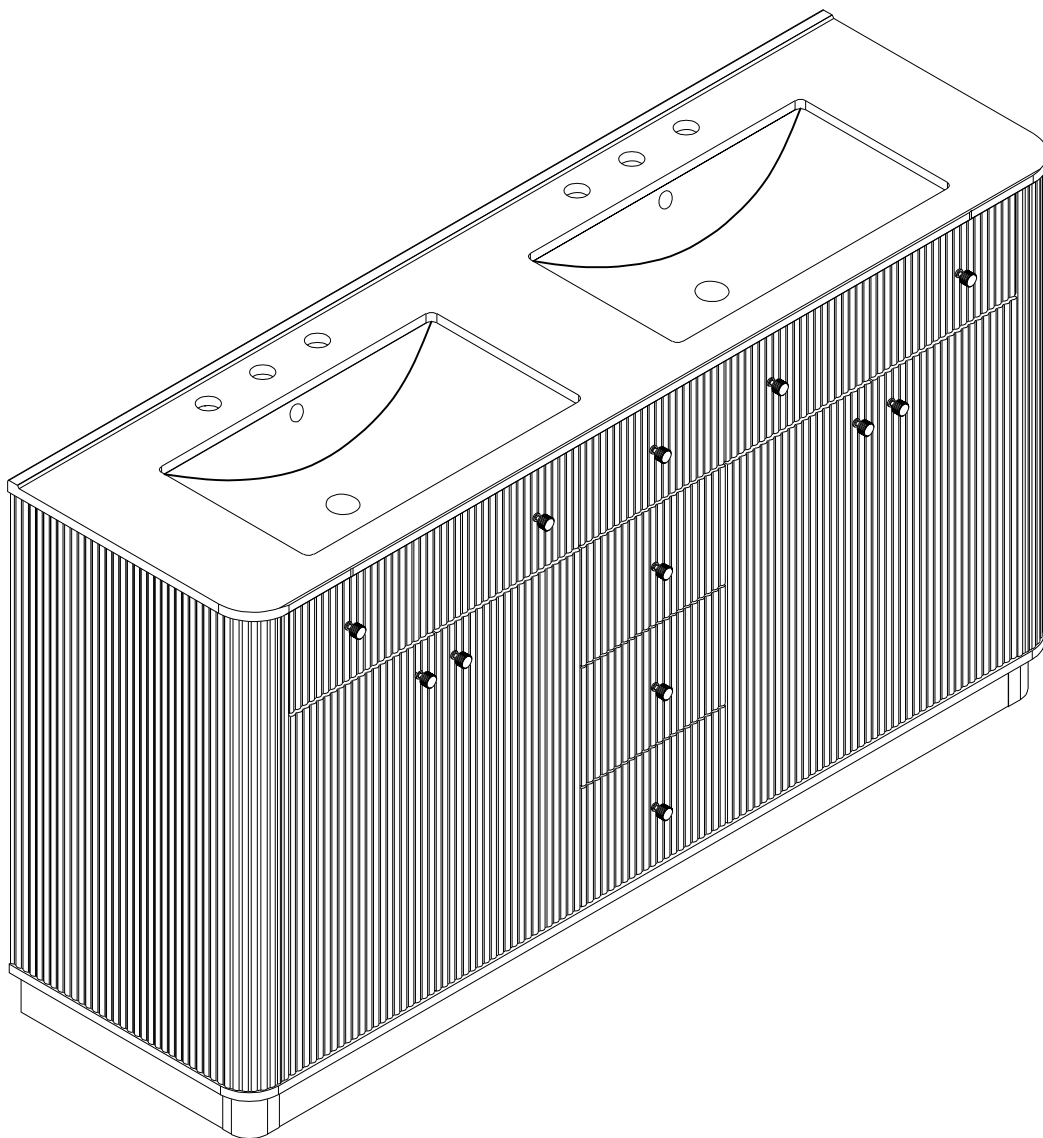


Date 2026-08-22 Rev.04-A

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. A Phillips head screwdriver is required for the assembly of this product .

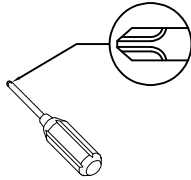

- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

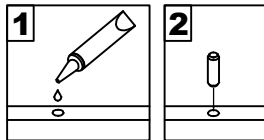


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

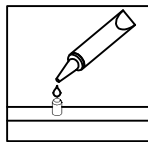


VI HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS

- 1.Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.
- 2.Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.
- 3.Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.
- 4.Use the sticker to conceal the Cam.

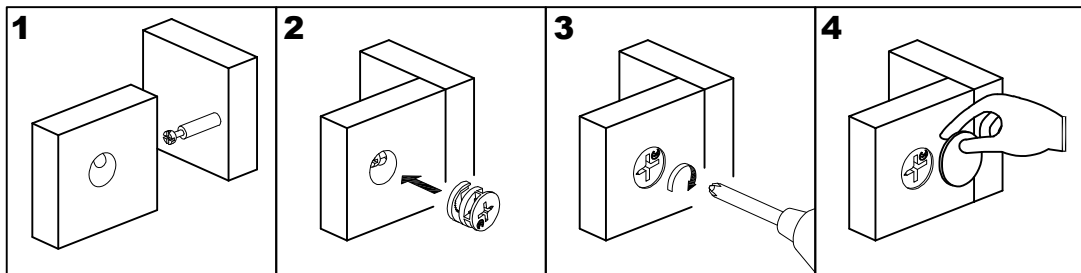


- VII. Power tools should not be used to assemble this product .

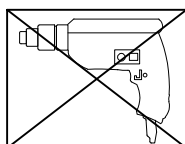


⚠ WARNING




Do not stand on vanity .Use vanity on level ground.Base vanity supports a maximum weight of 200Lbs .Exceeding maximum weight limit will compromise the integrity of the vanity structure and could cause the vanity to fail.Always keep the vanity surface dry after use.

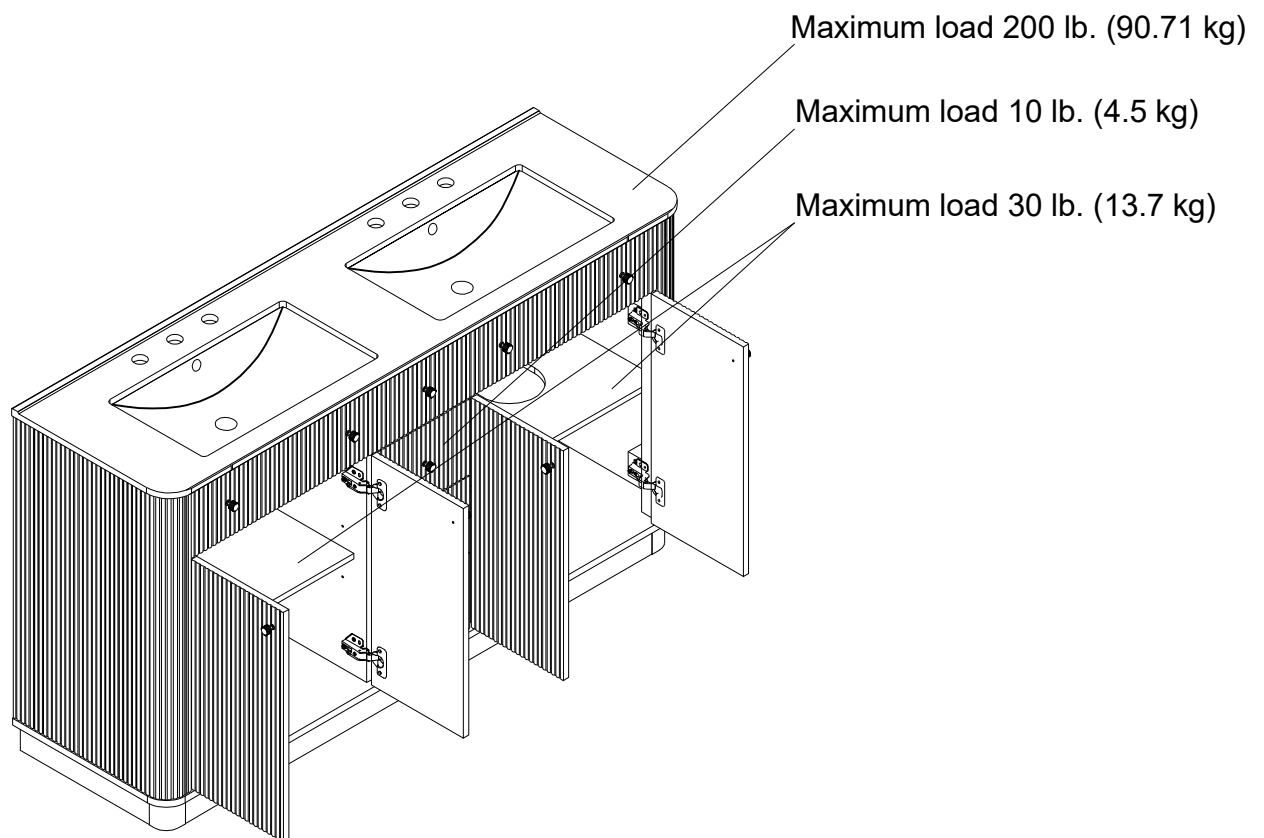


Parts List

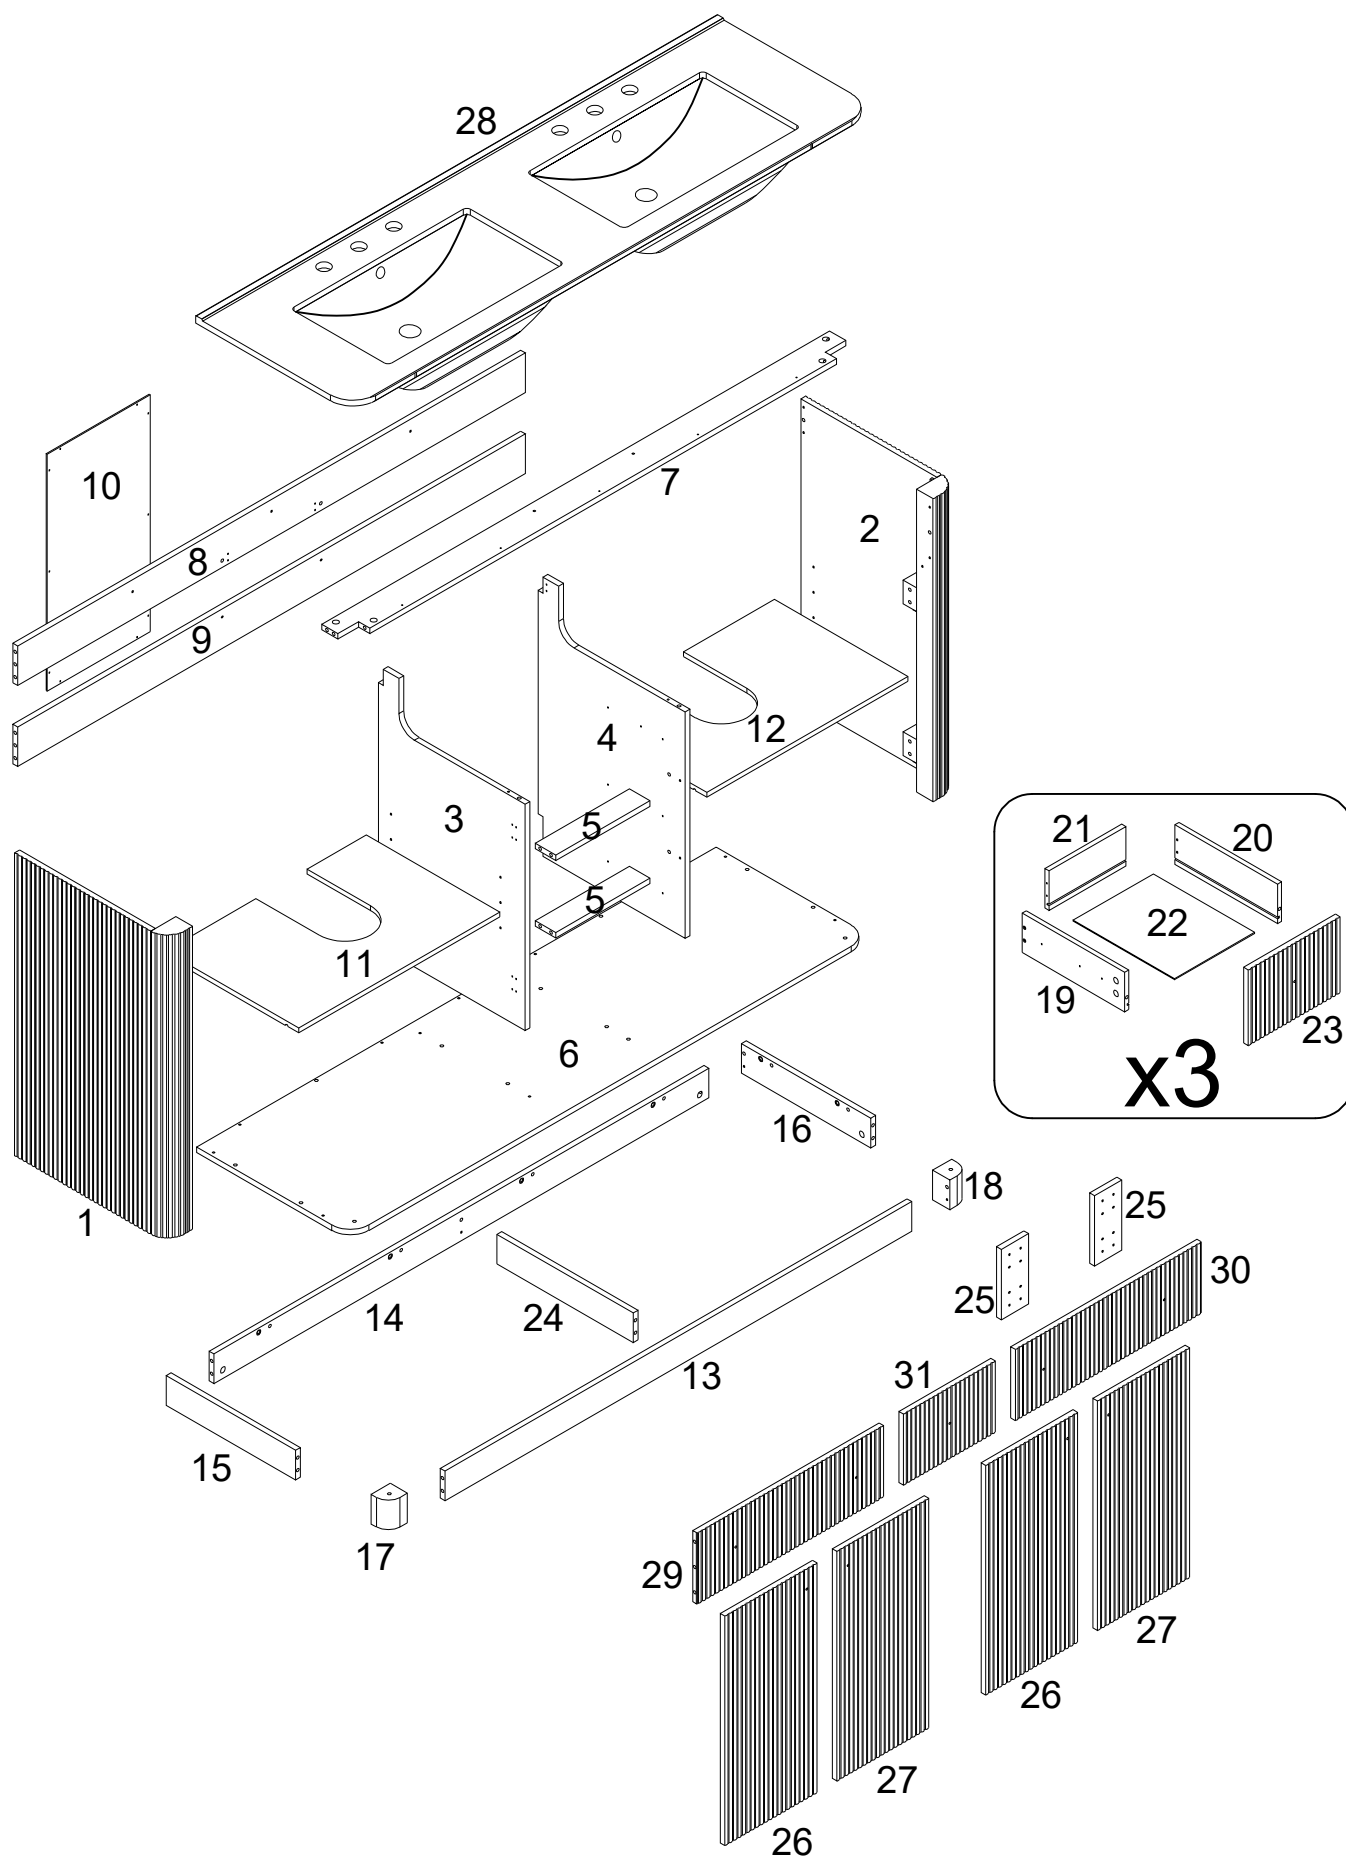


Hardware List


A		Ø8x30mm	Large Dowel	38 pcs
B		Ø6x34mm	Cam bolt	40 pcs
C		Ø15x11mm	Large Cam lock	24 pcs
D		Ø30mm	Cam cover	40 pcs
E			Glue tube	2 pcs
F		M 4	Allen Wrench	1 pc
G		Ø5x50mm	Screw	17 pcs
H		Ø1/4"x12mm	Bolt	28 pcs
J		Ø5/32"x22mm	Bolt	12 pcs
K			Knob	12 pcs
L			Connector	14 pcs
M		M3	Allen Wrench	1 pc
N		Ø3.5x12mm	Screw	54 pcs
O		Ø5x13mm	Shelf Pin	8 pcs
P			Insert Euro Hinge	4 pcs
Q		Ø3.5x14mm	Screw	48 pcs
R		10" Length	Drawer slide	6 pcs

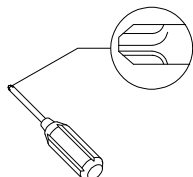

Phillips head screwdriver required for assembly
(not included)


Hardware List

S			Plastic corner	2 pcs
T		Ø3x14mm	Screw	10 pcs
U		Ø4x38mm	Screw	12 pcs
V		Ø15x9mm	Small Cam lock	16 pcs
W		M4x60mm	Screw	3 pcs
X		Ø7x30mm	Nut	3 pcs
Y		Ø13x1mm	Washer	3 pcs
Z		13mmx3mm	EVA Strip	1 pc
AA			Full overlay Euro Hinge	4 pcs
BB		Ø4x22mm	Screw	8 pcs
CC		Ø6x20mm	Short Dowel	8 pcs
DD			Metal corner	5 pcs

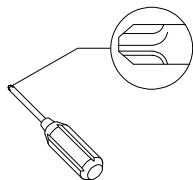


Phillips head screwdriver required for assembly
(not included)






Step 1

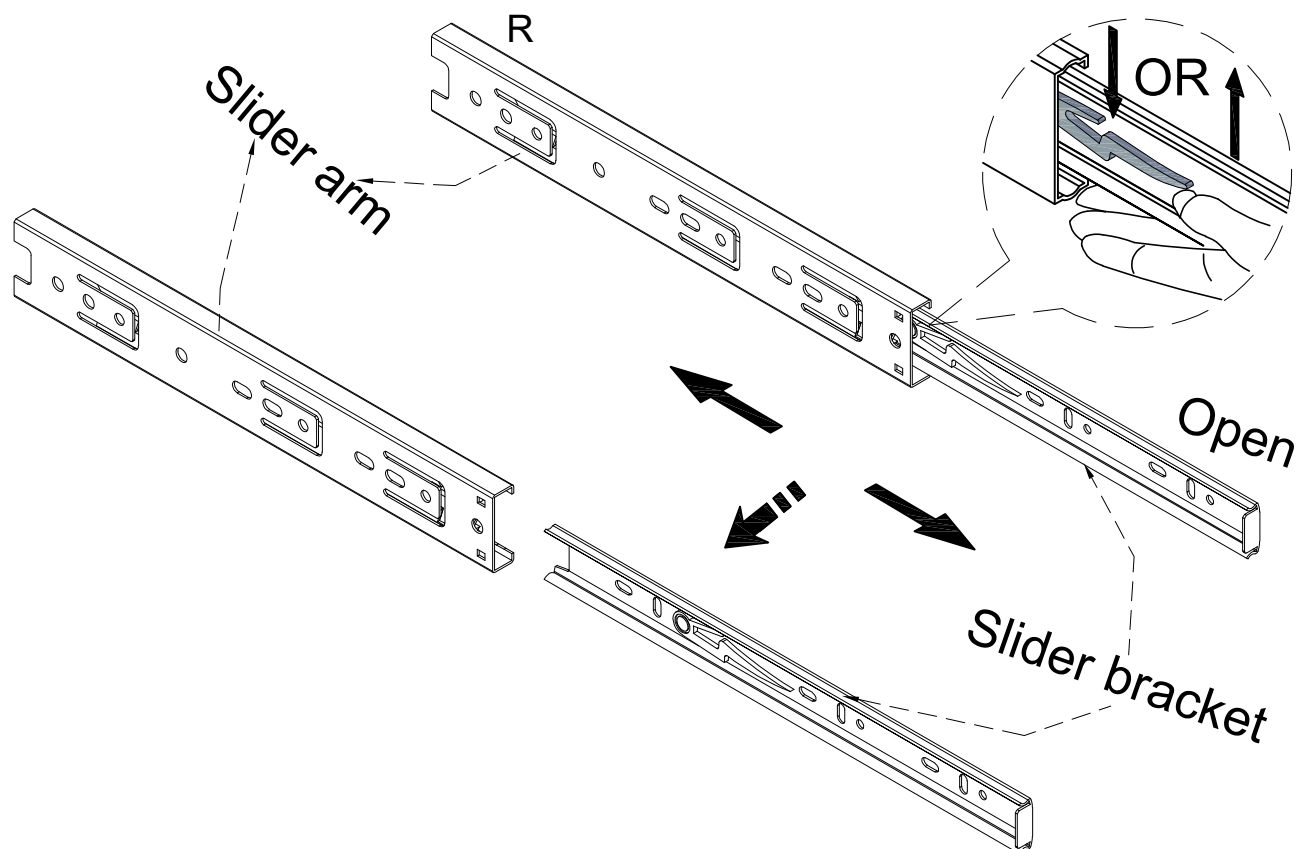


Step 2

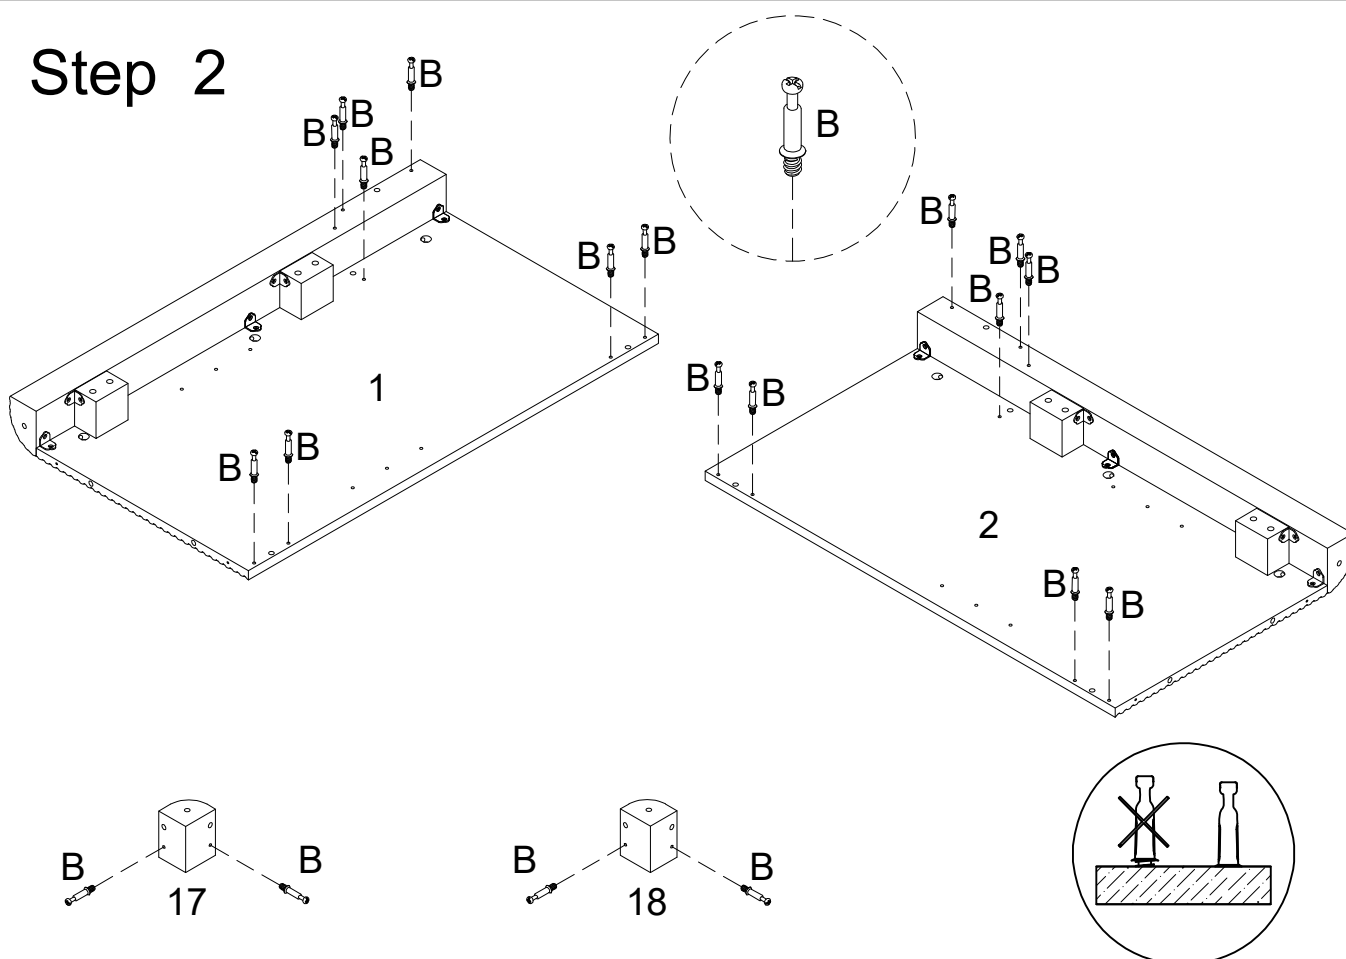


Step 3

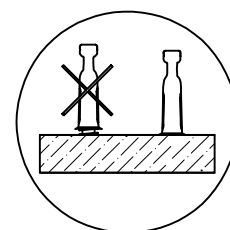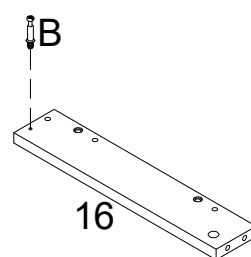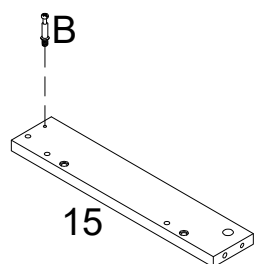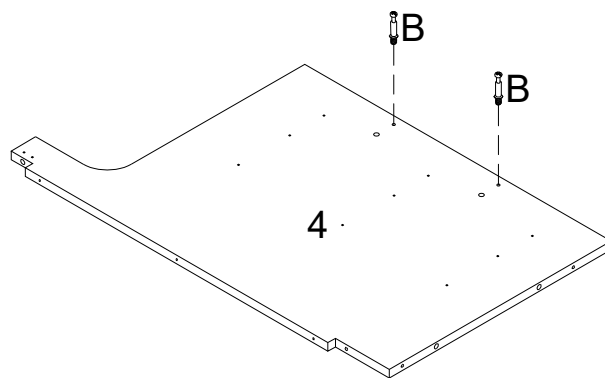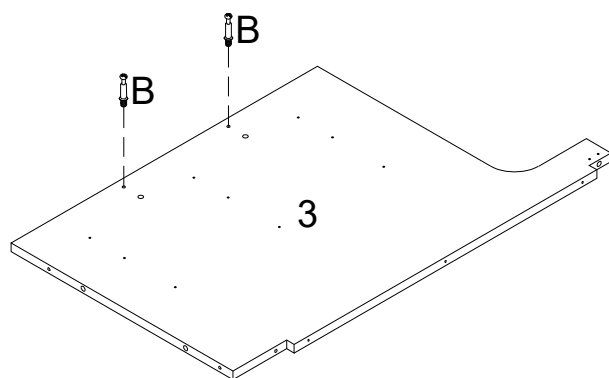


Step 4

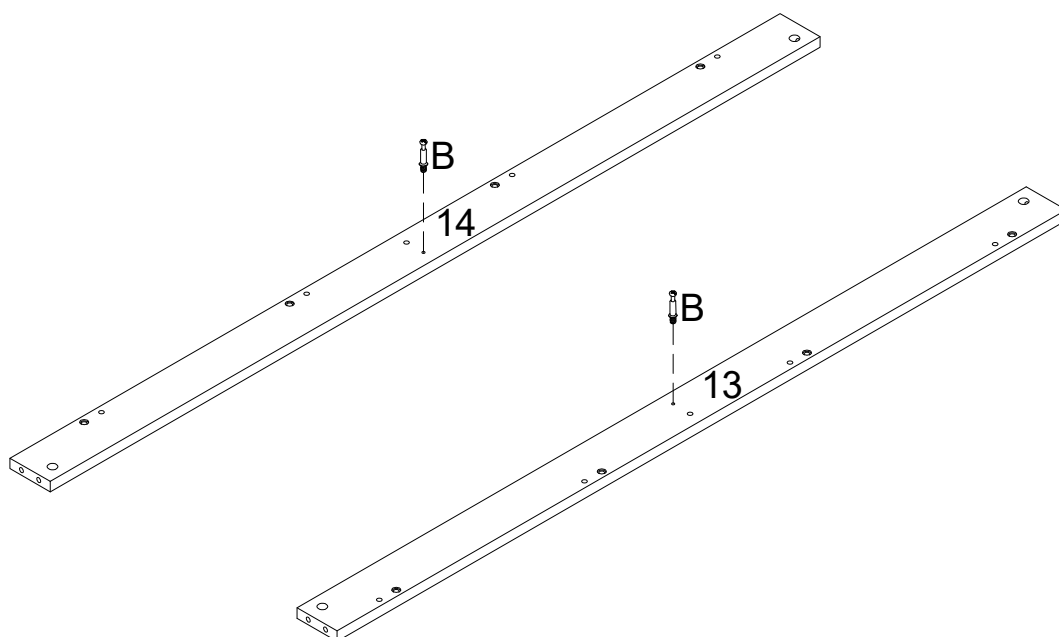


Step 5

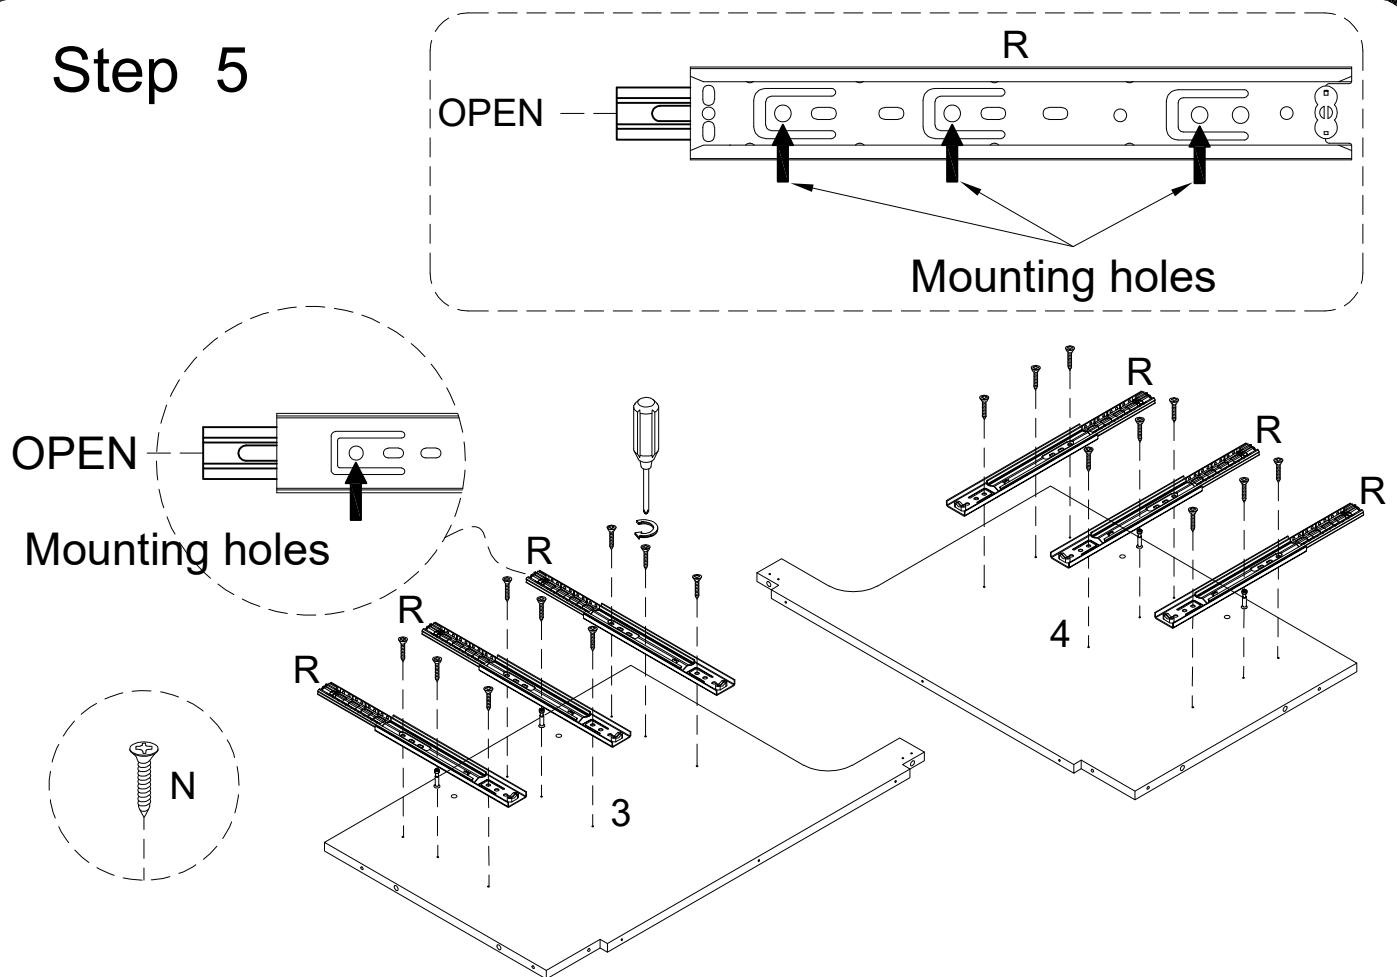


Step 6

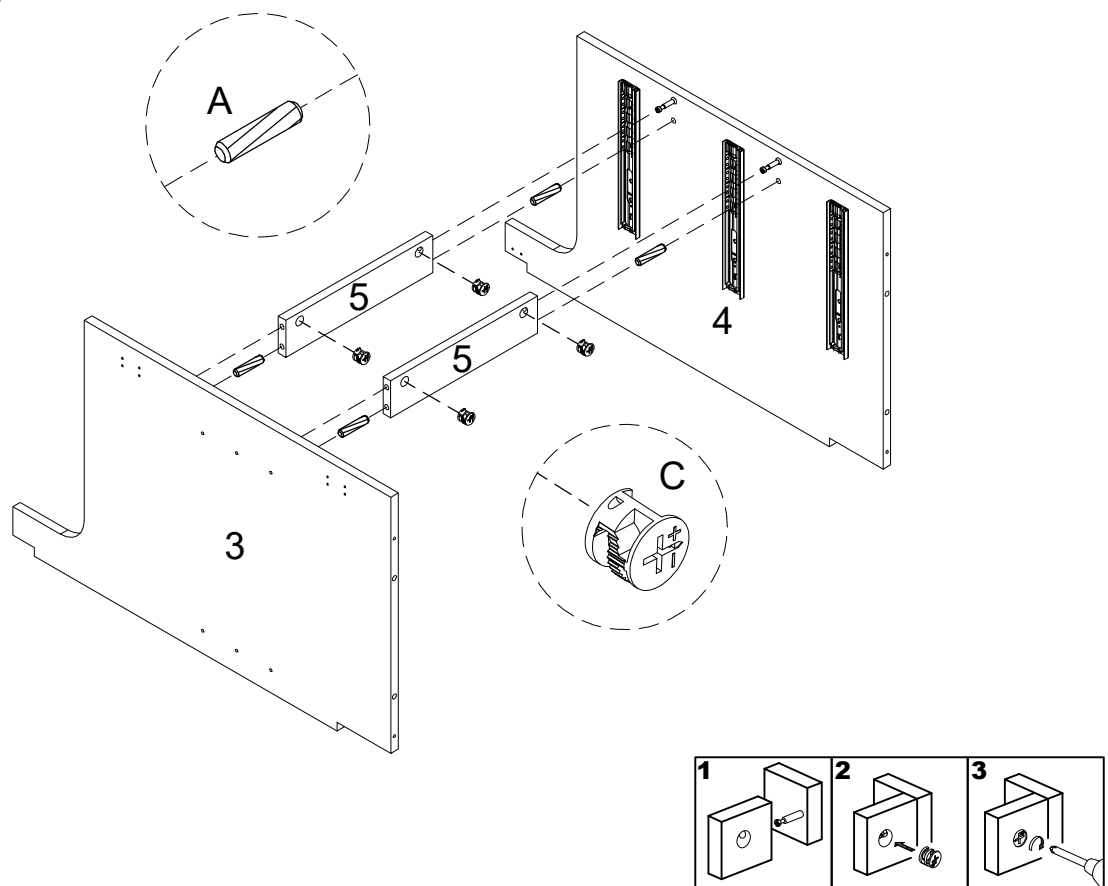


Step 7

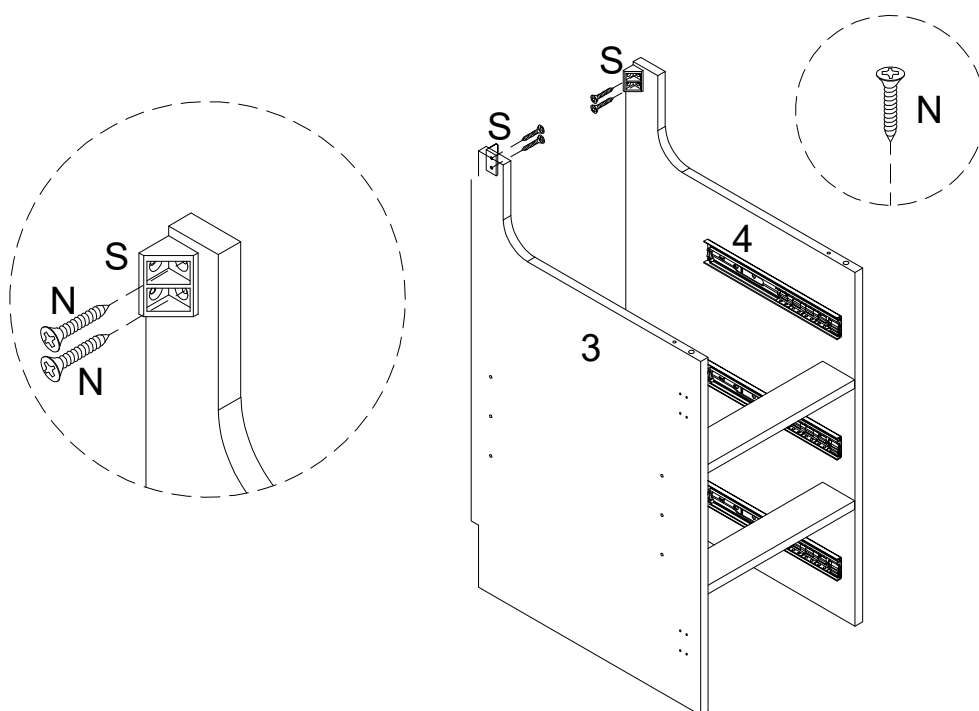

Step 8

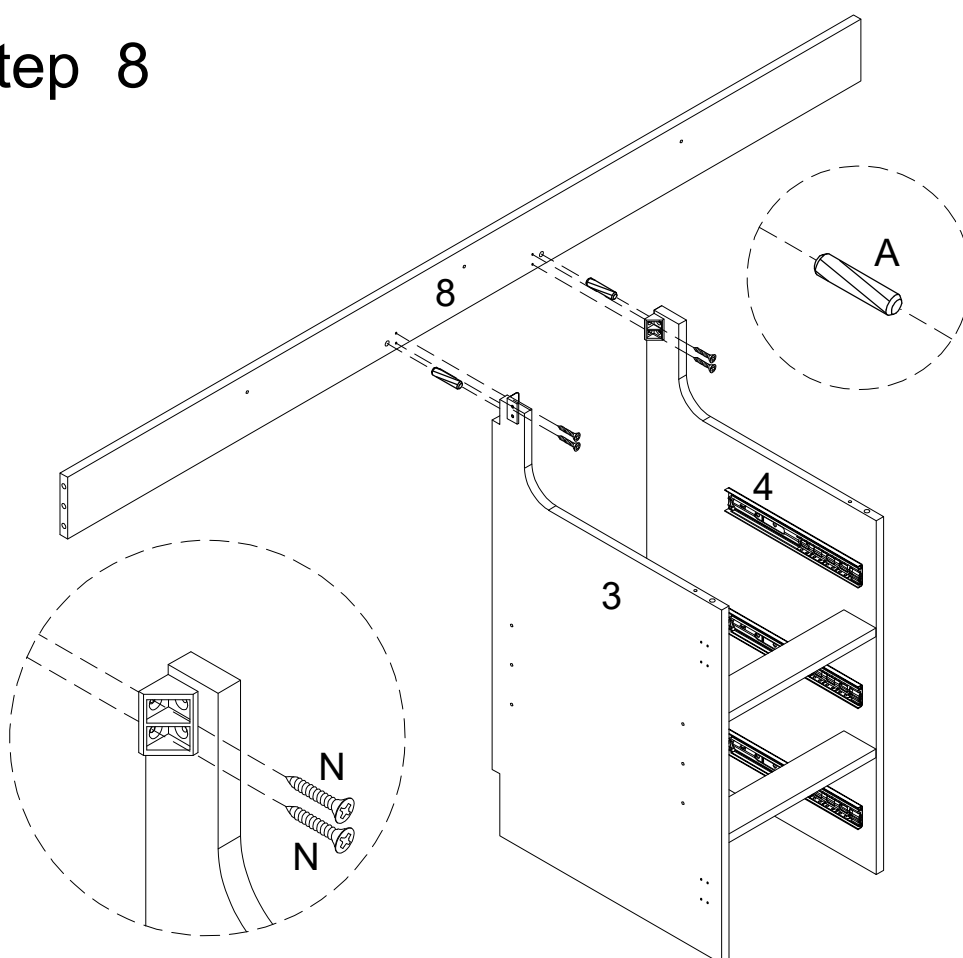


Step 9

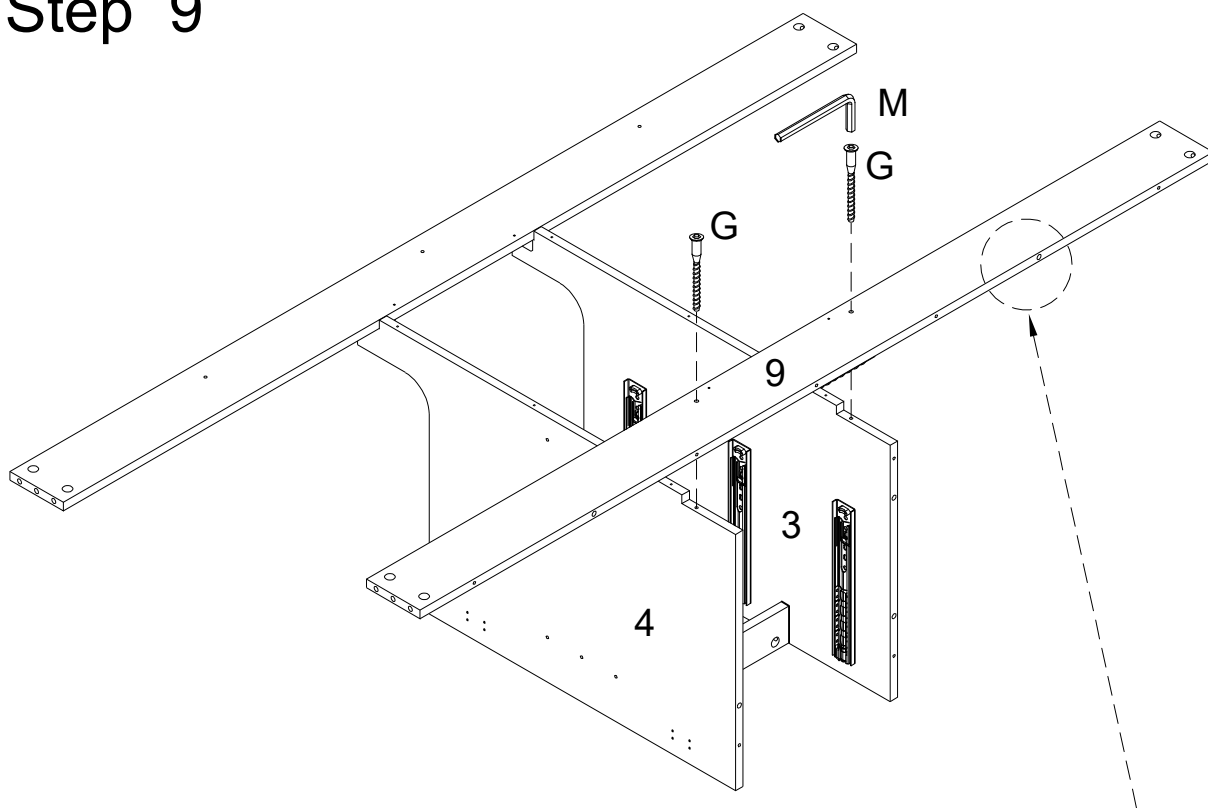


Note: The holes face downward


Step 10

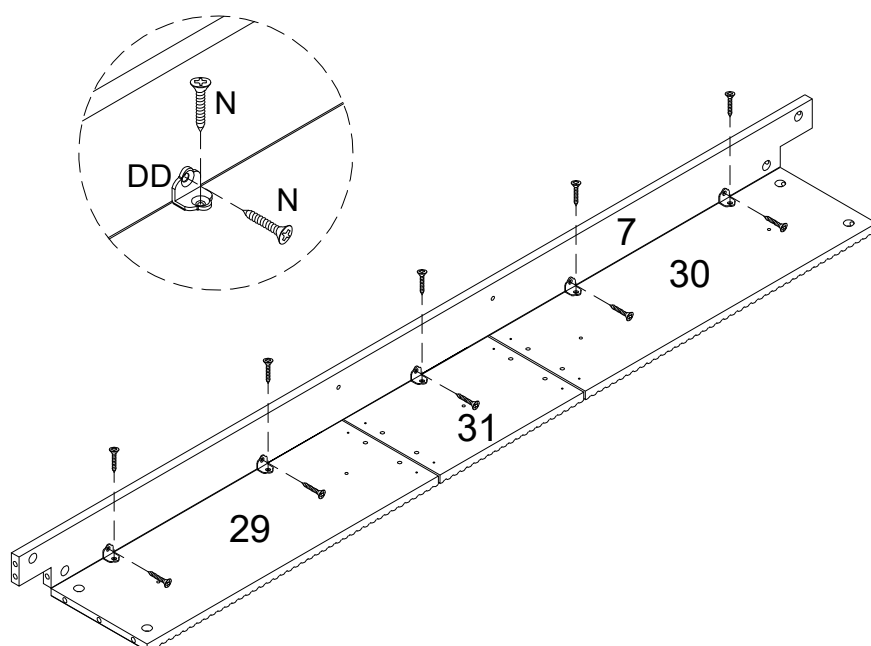


Step 11

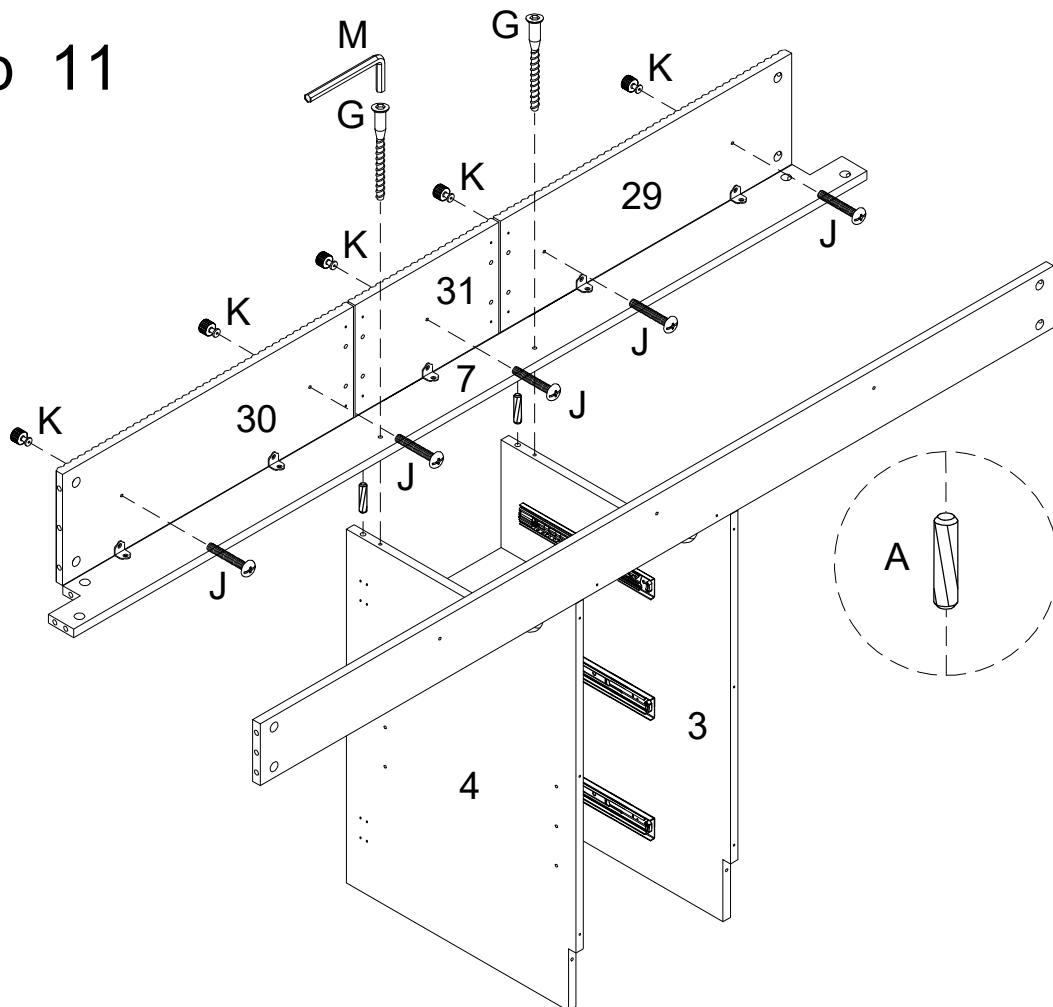


Step 12

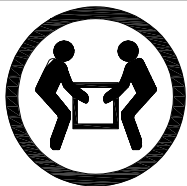


CAUTION: Heavy! You may need assistance with this step.

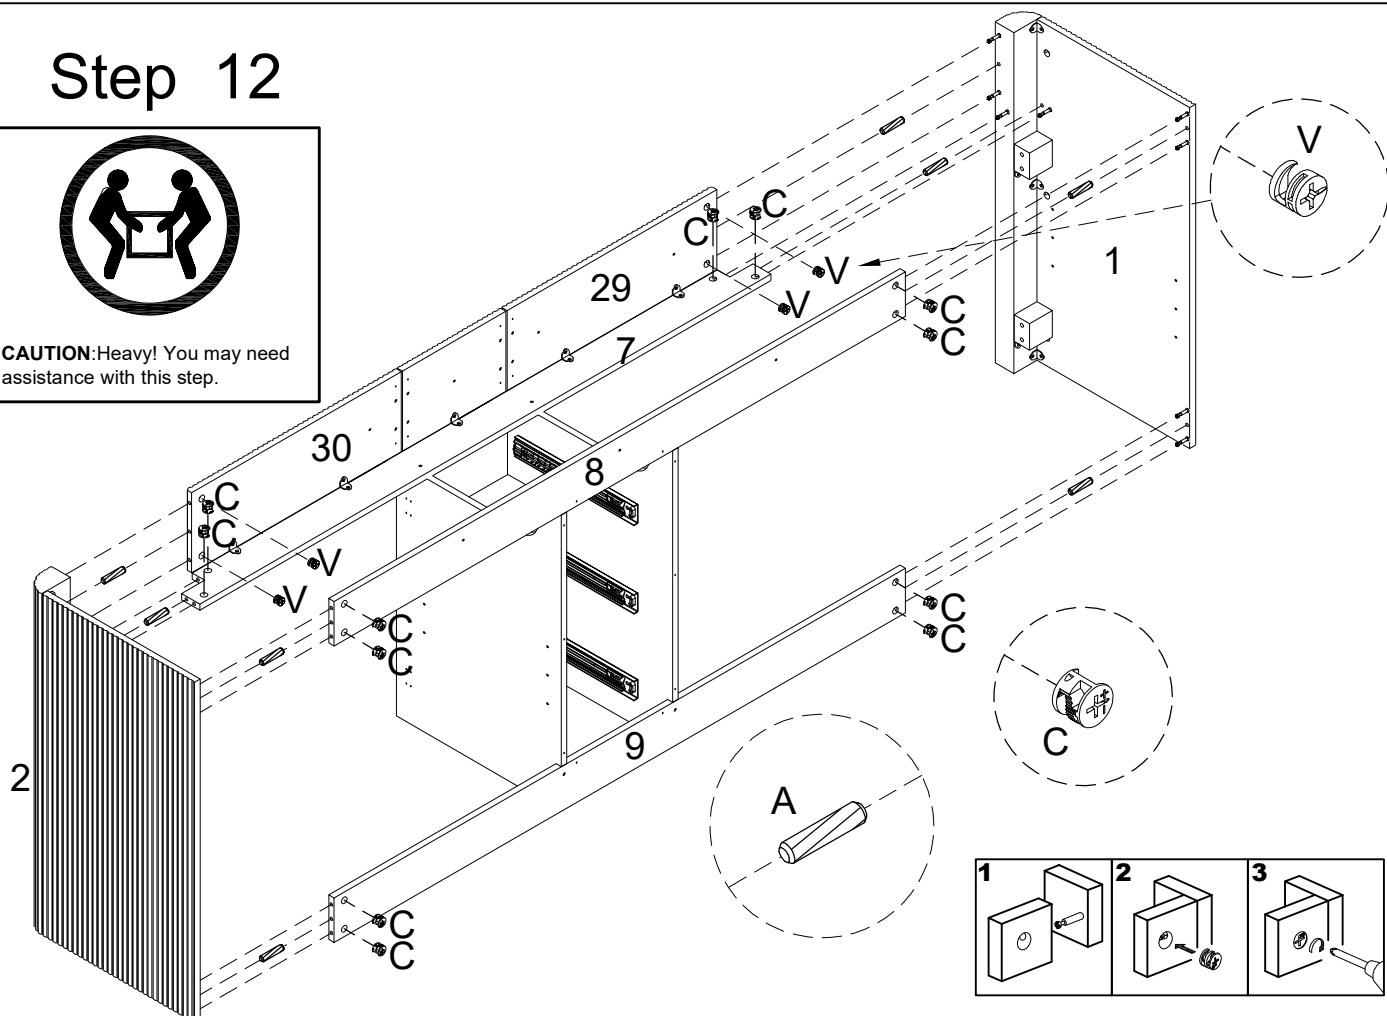


Step 13

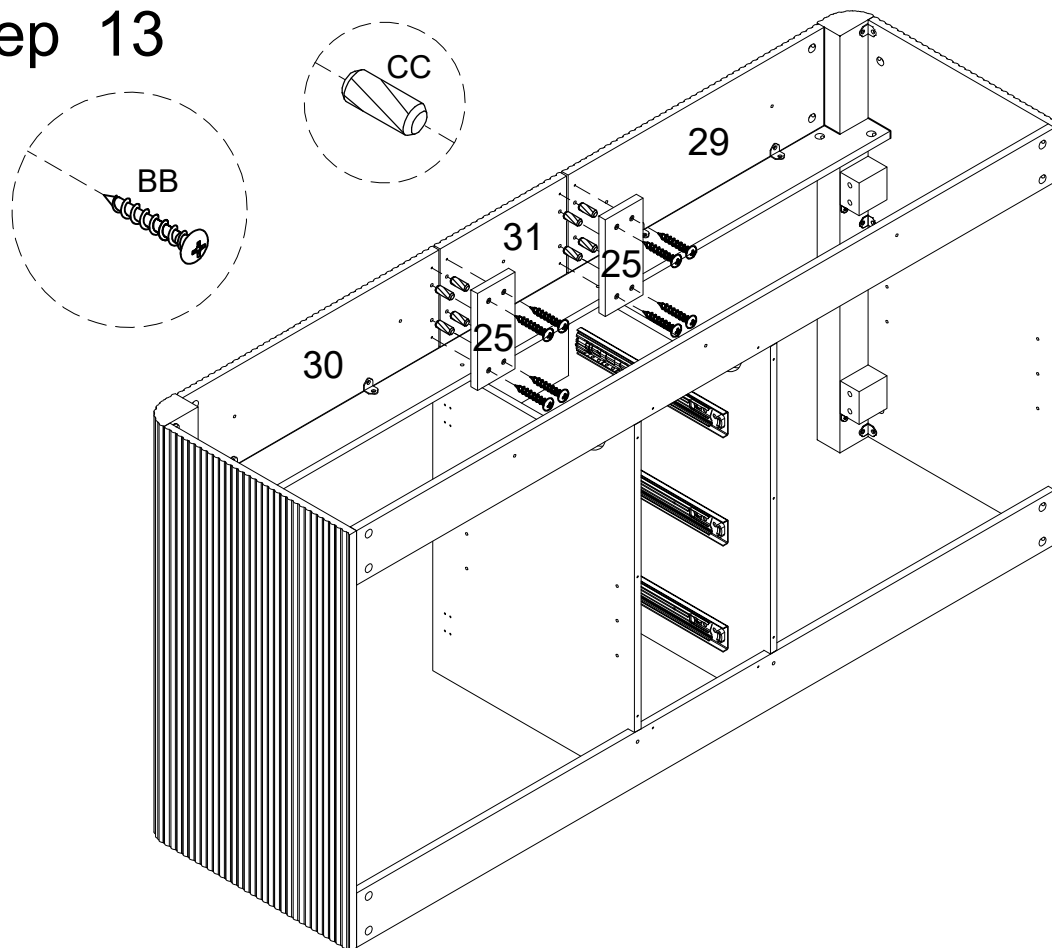



Step 14

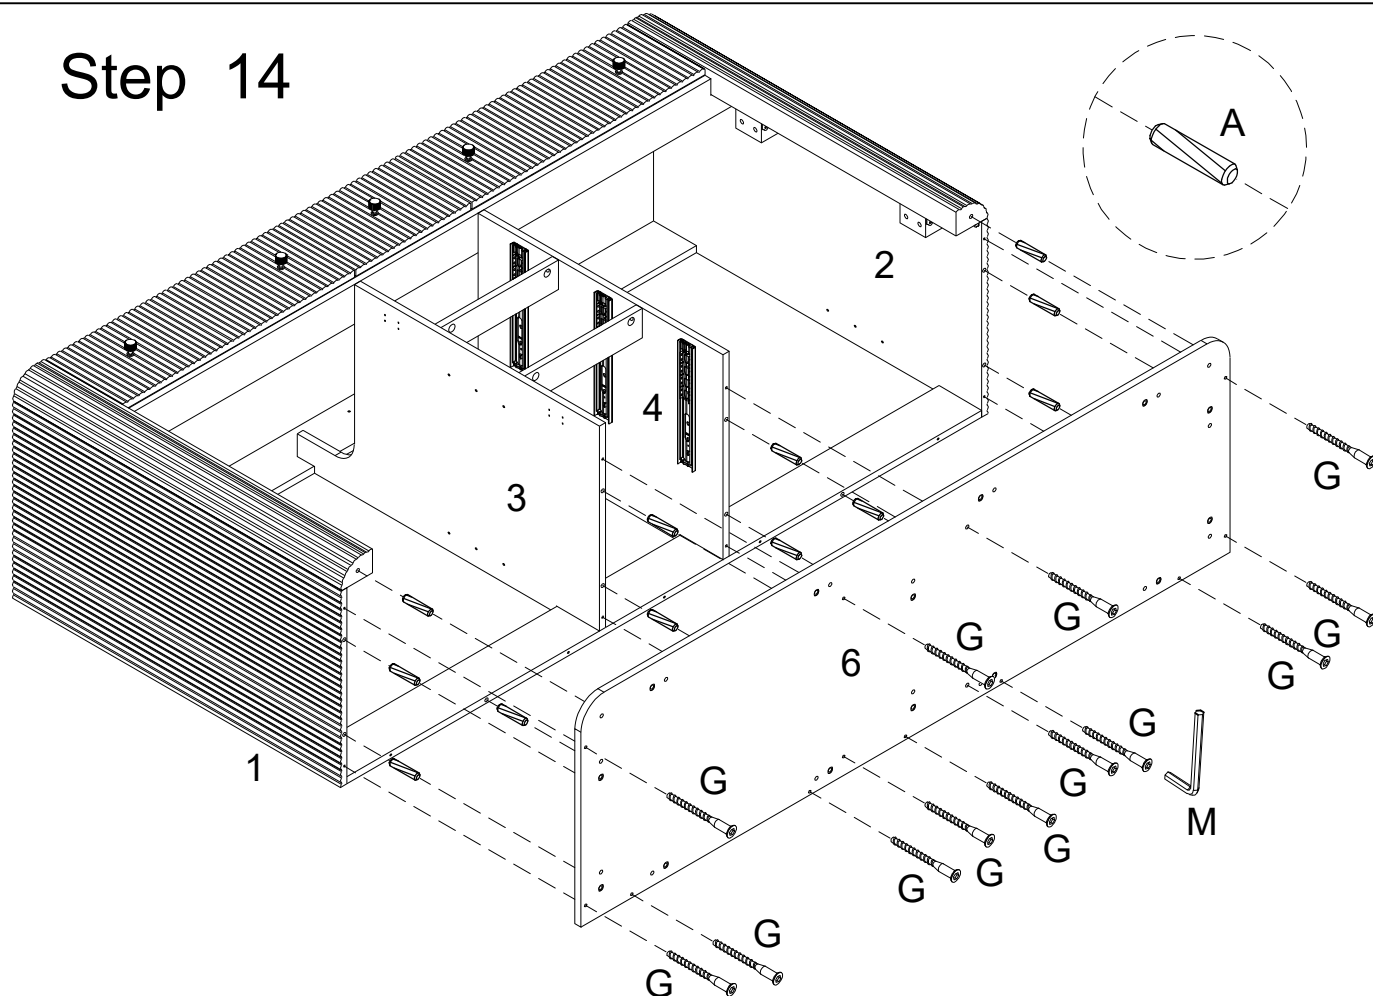


Step 15

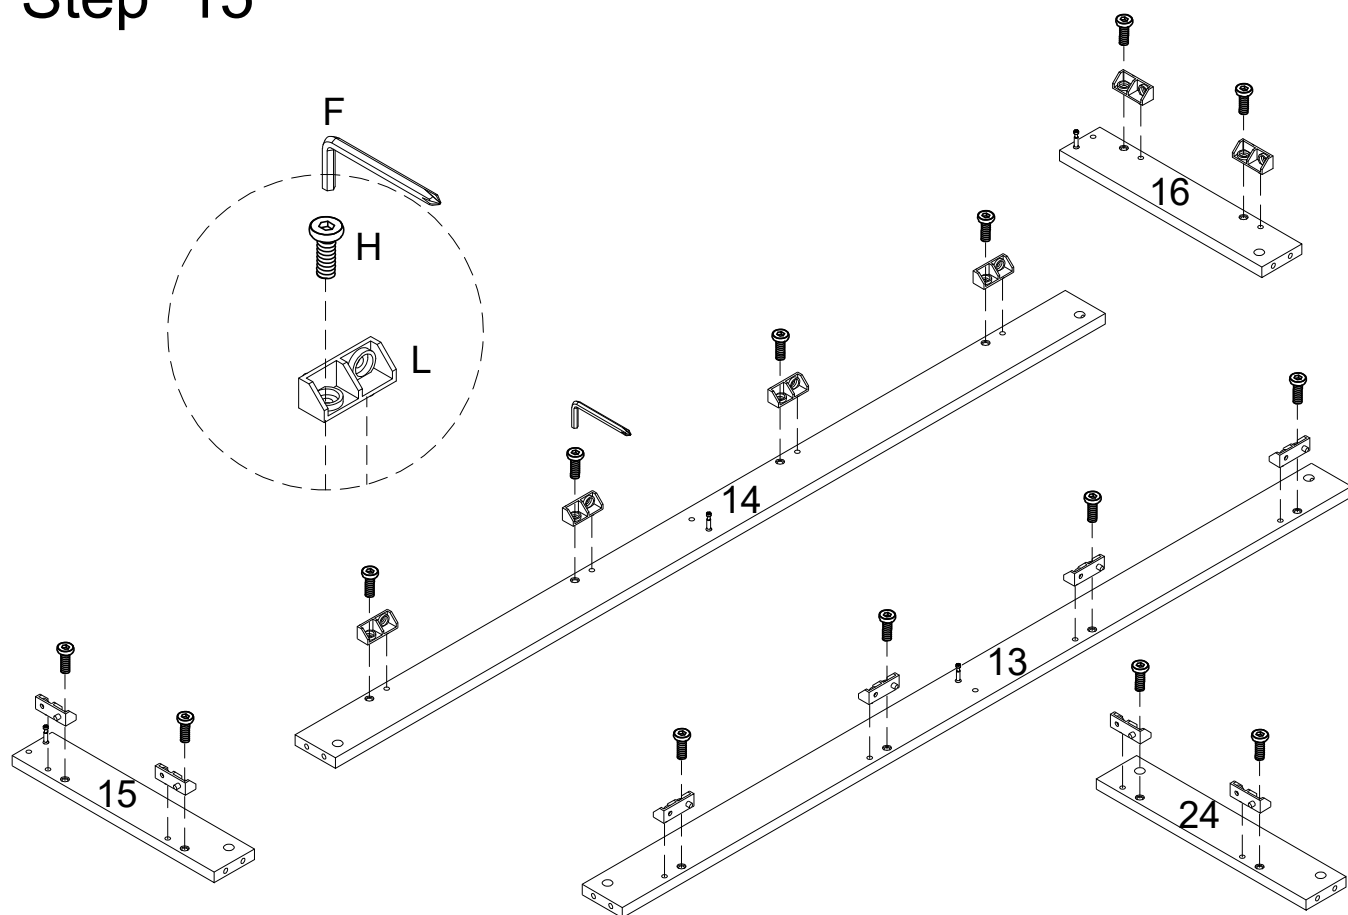


Step 16

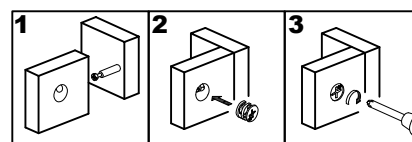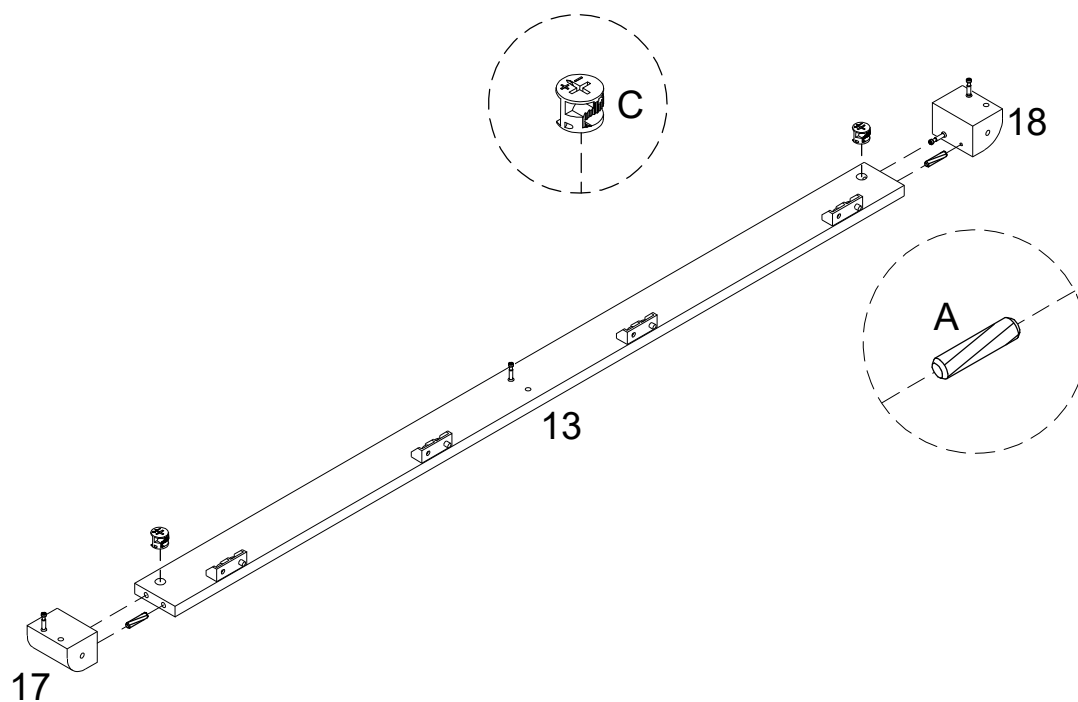


Step 17

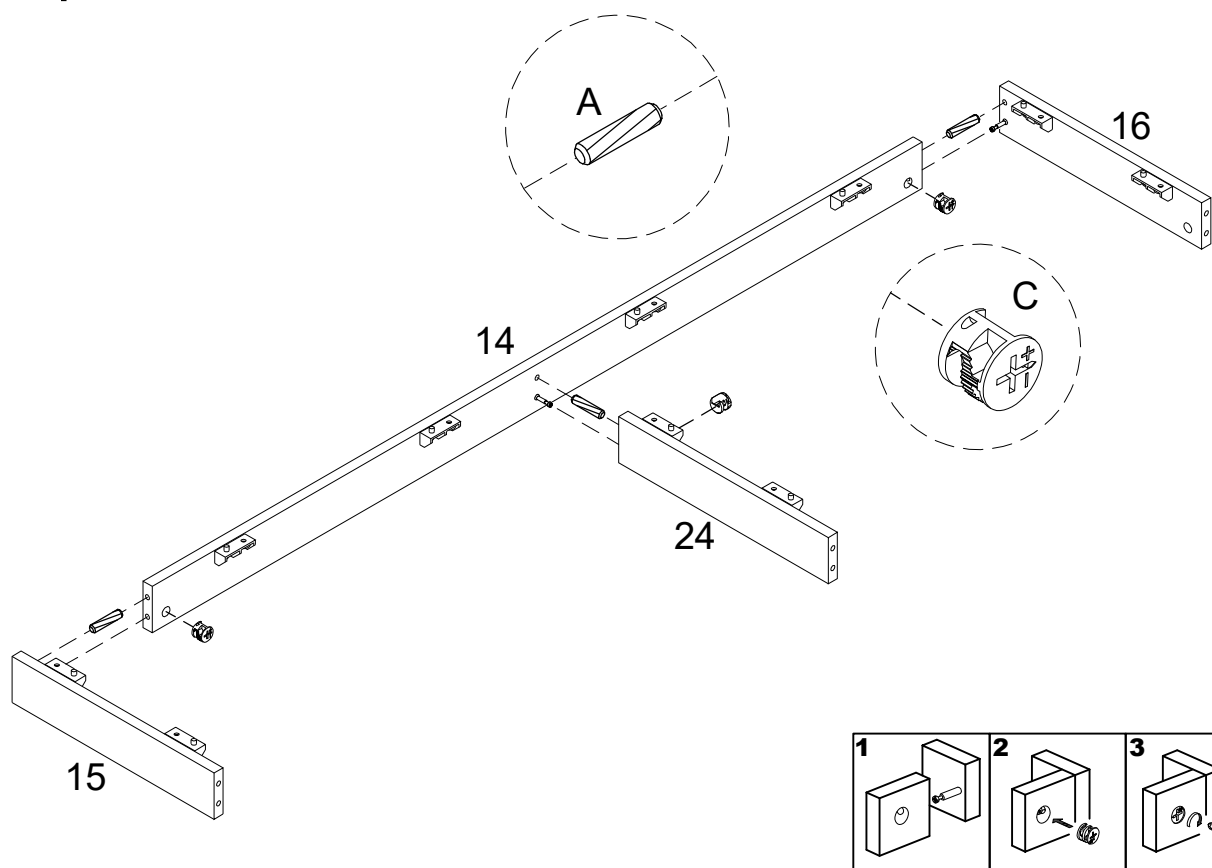


Step 18

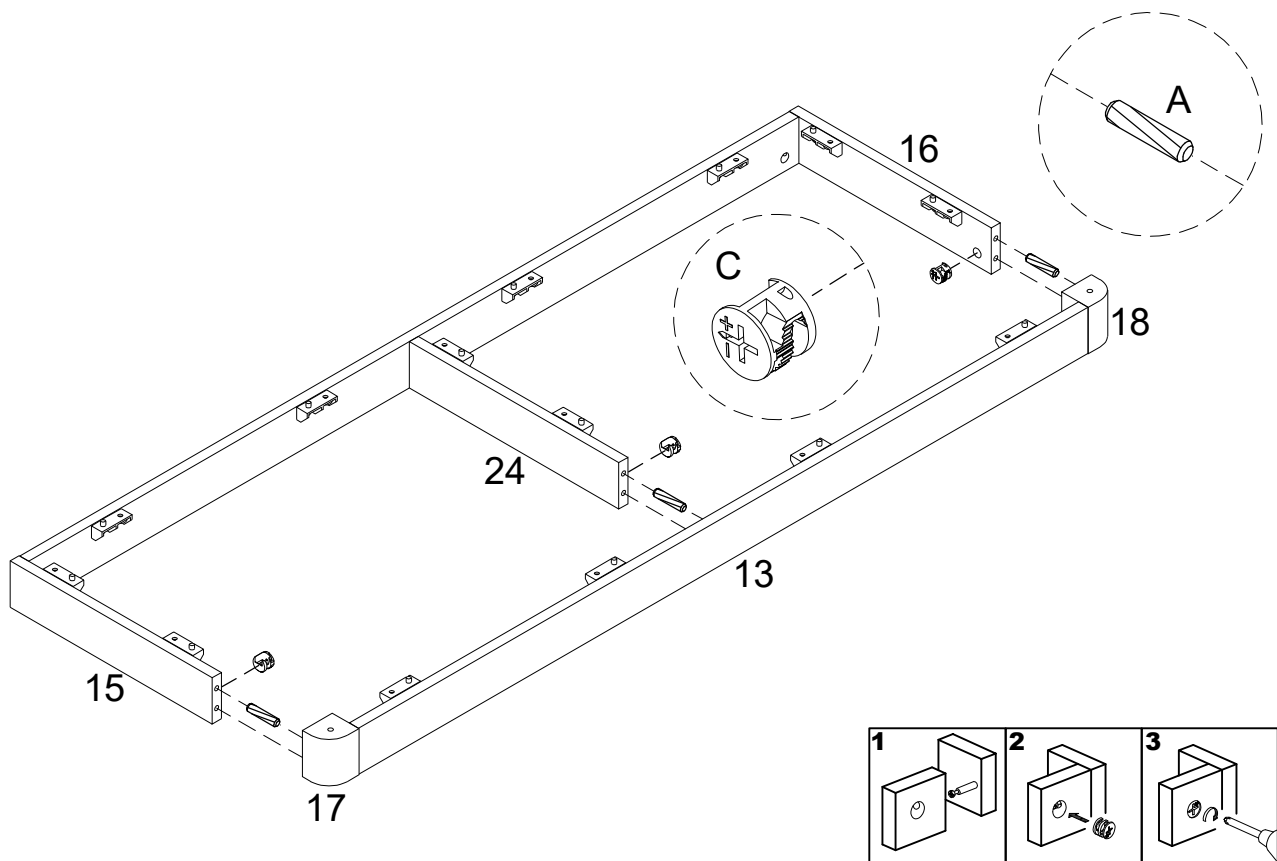


Step 19

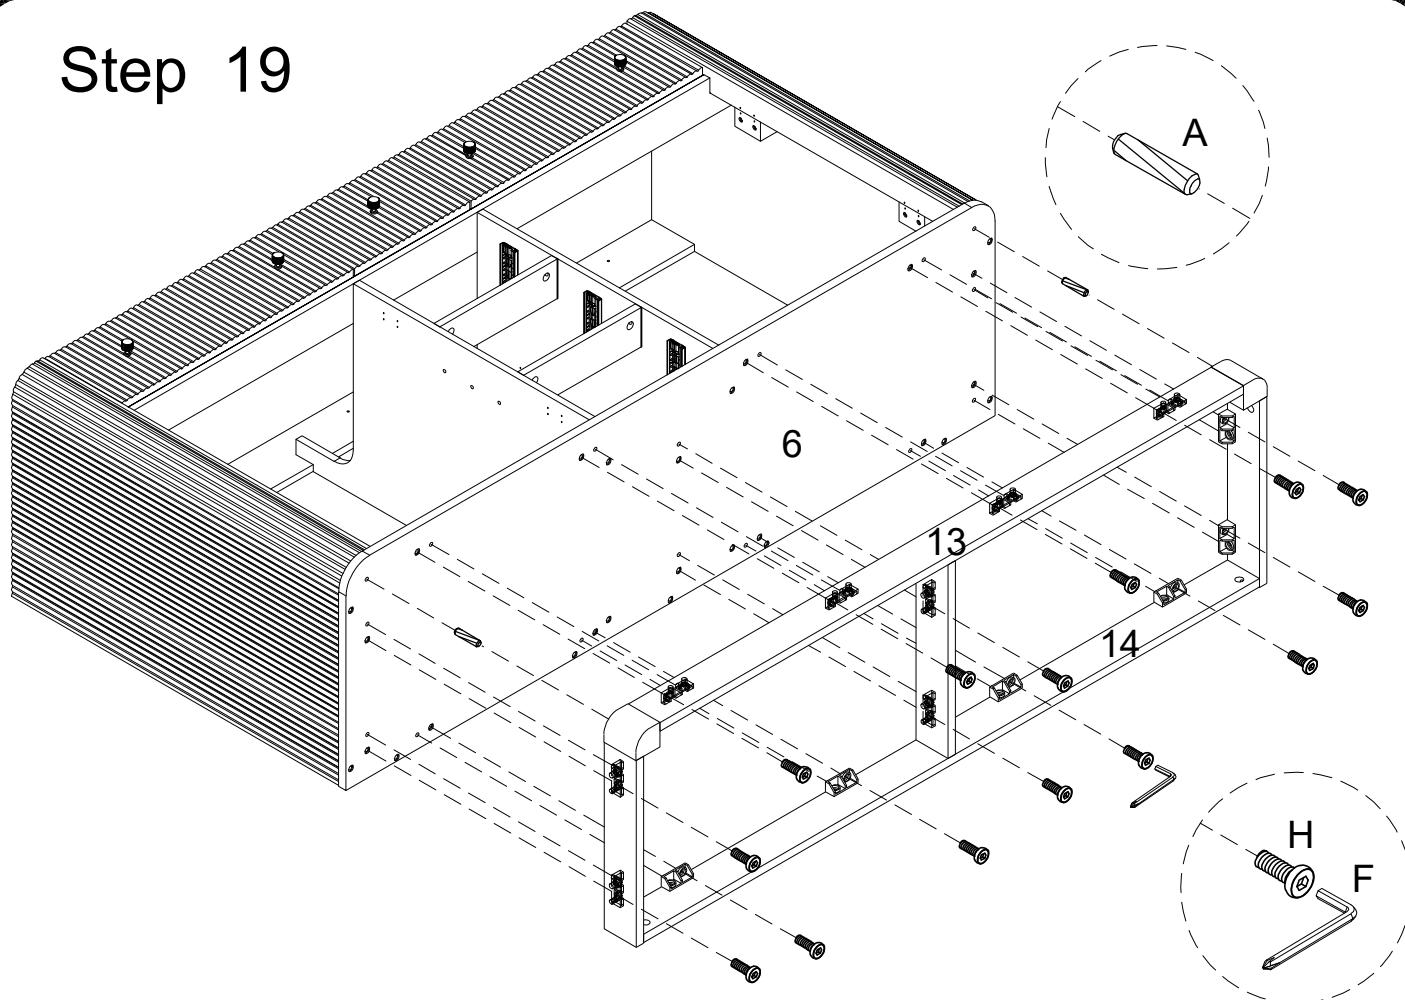


Step 20

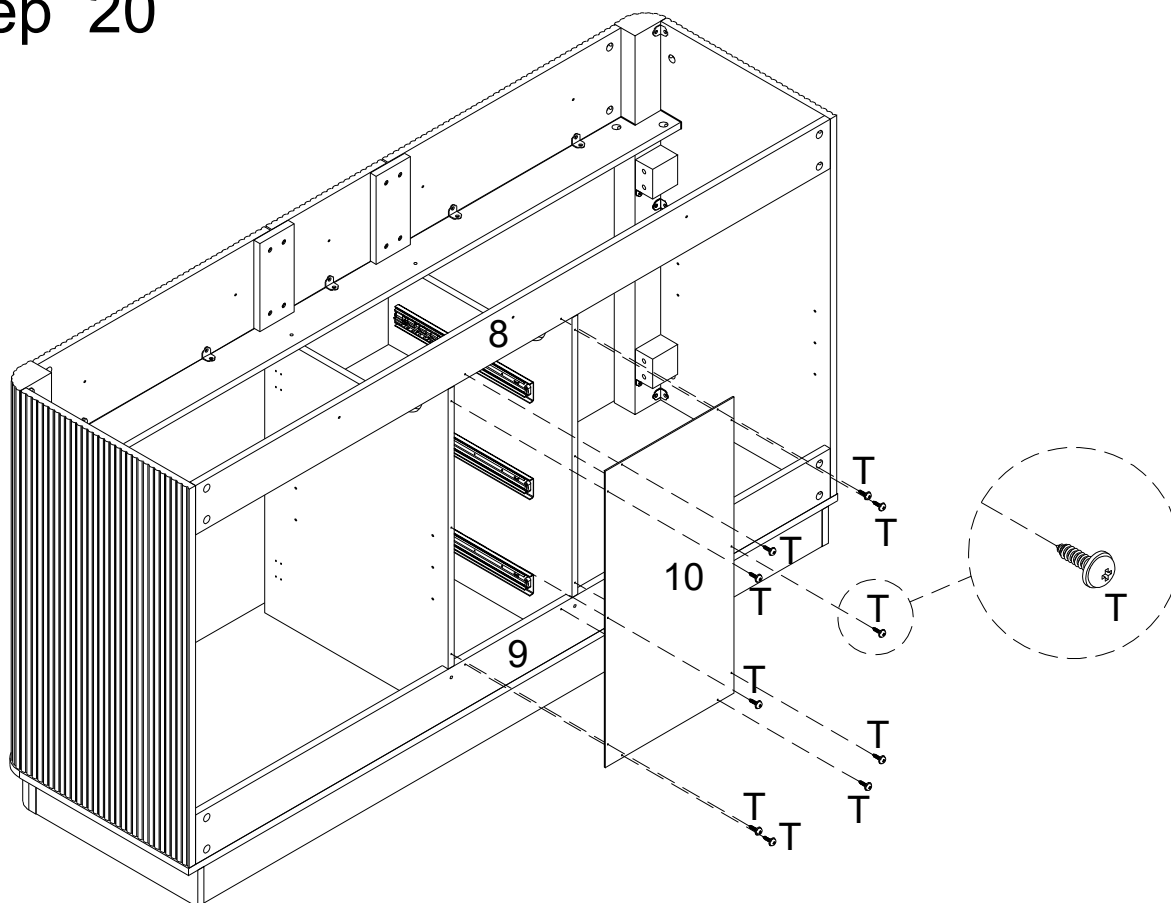


Step 21

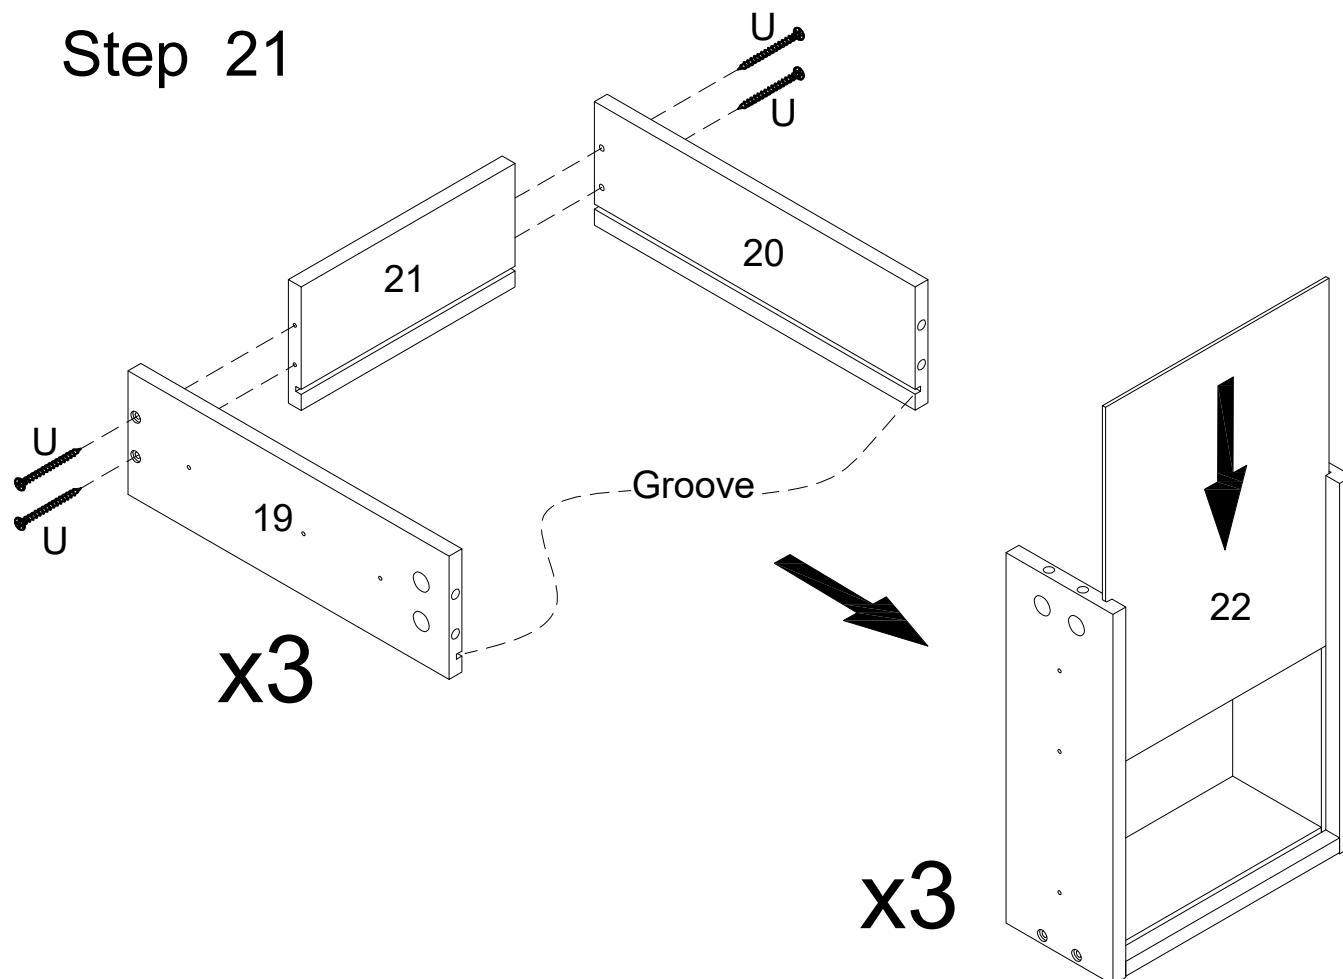


Step 22

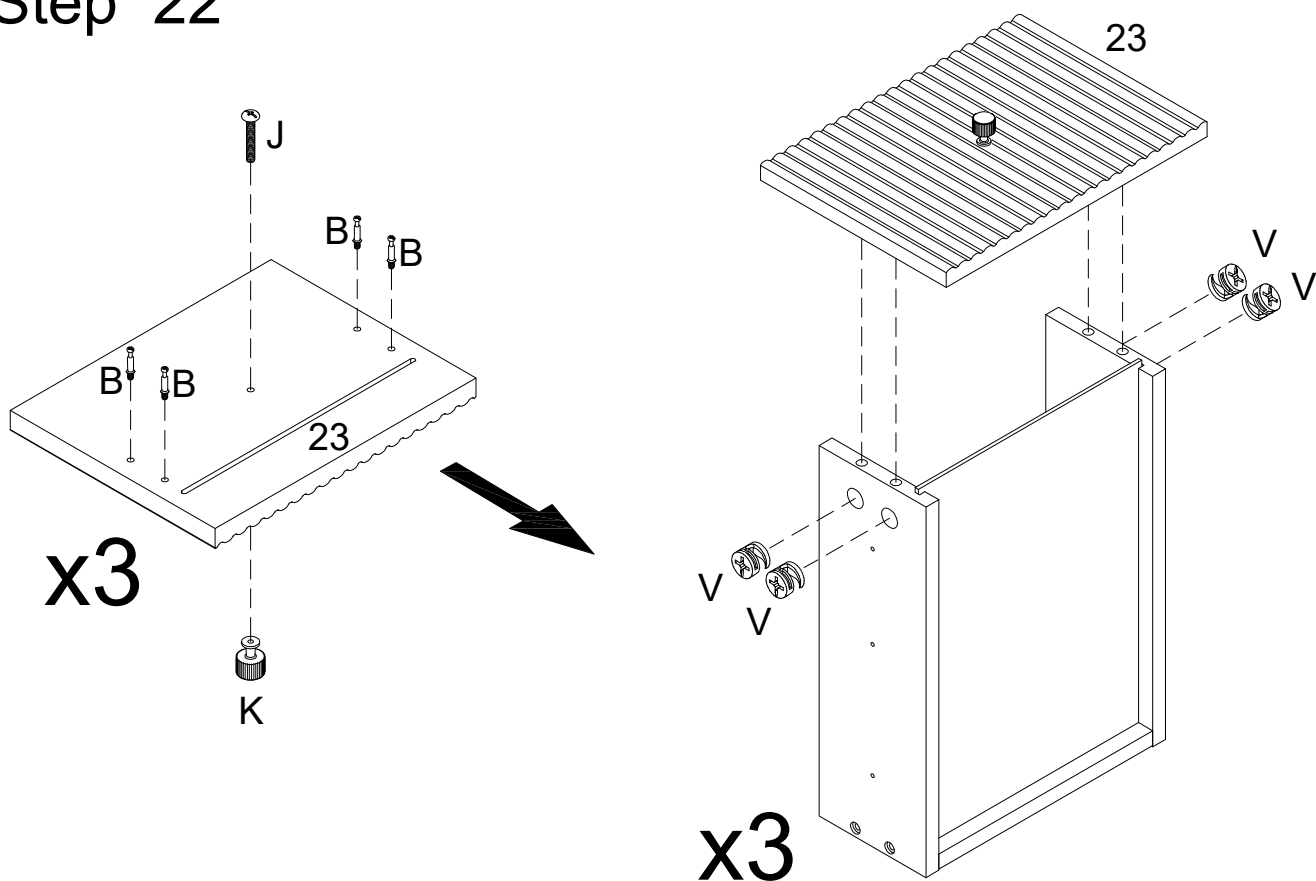


Step 23

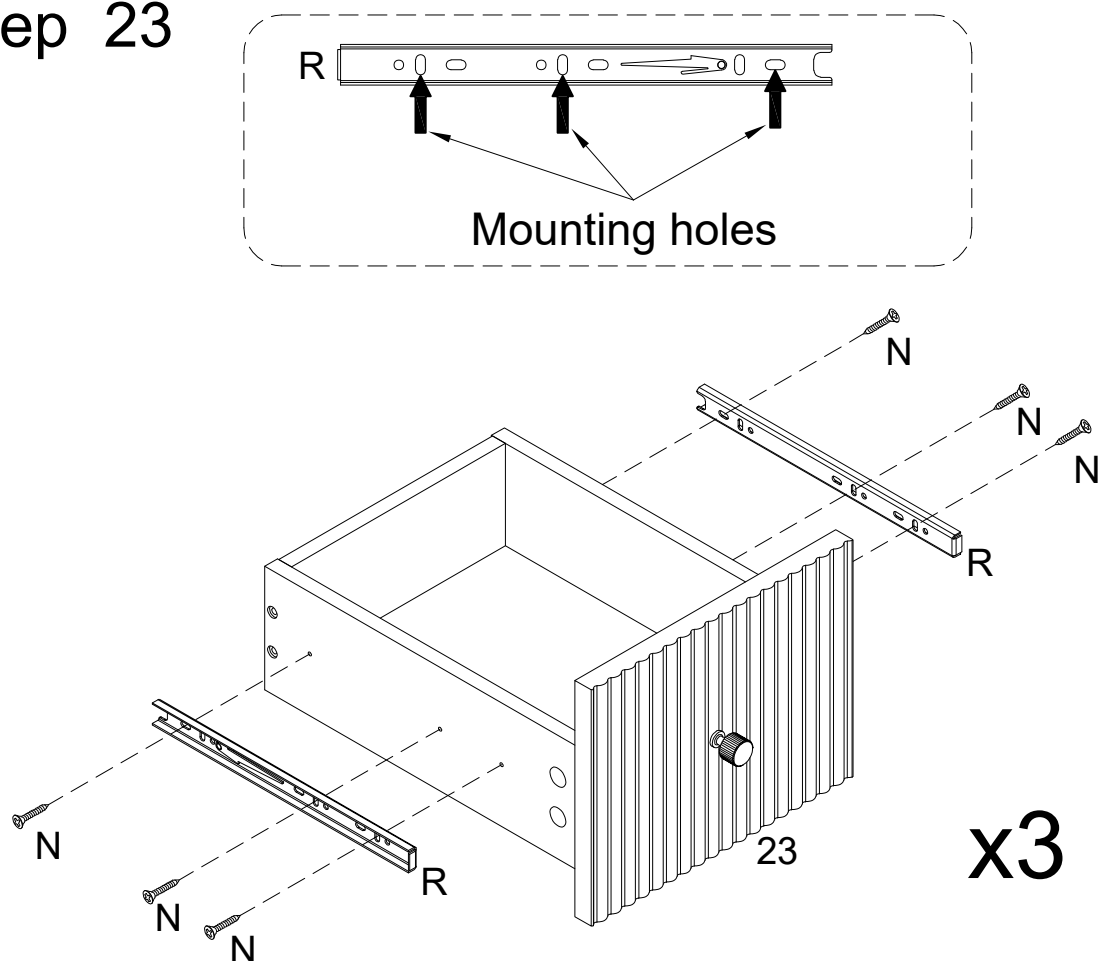


Step 24

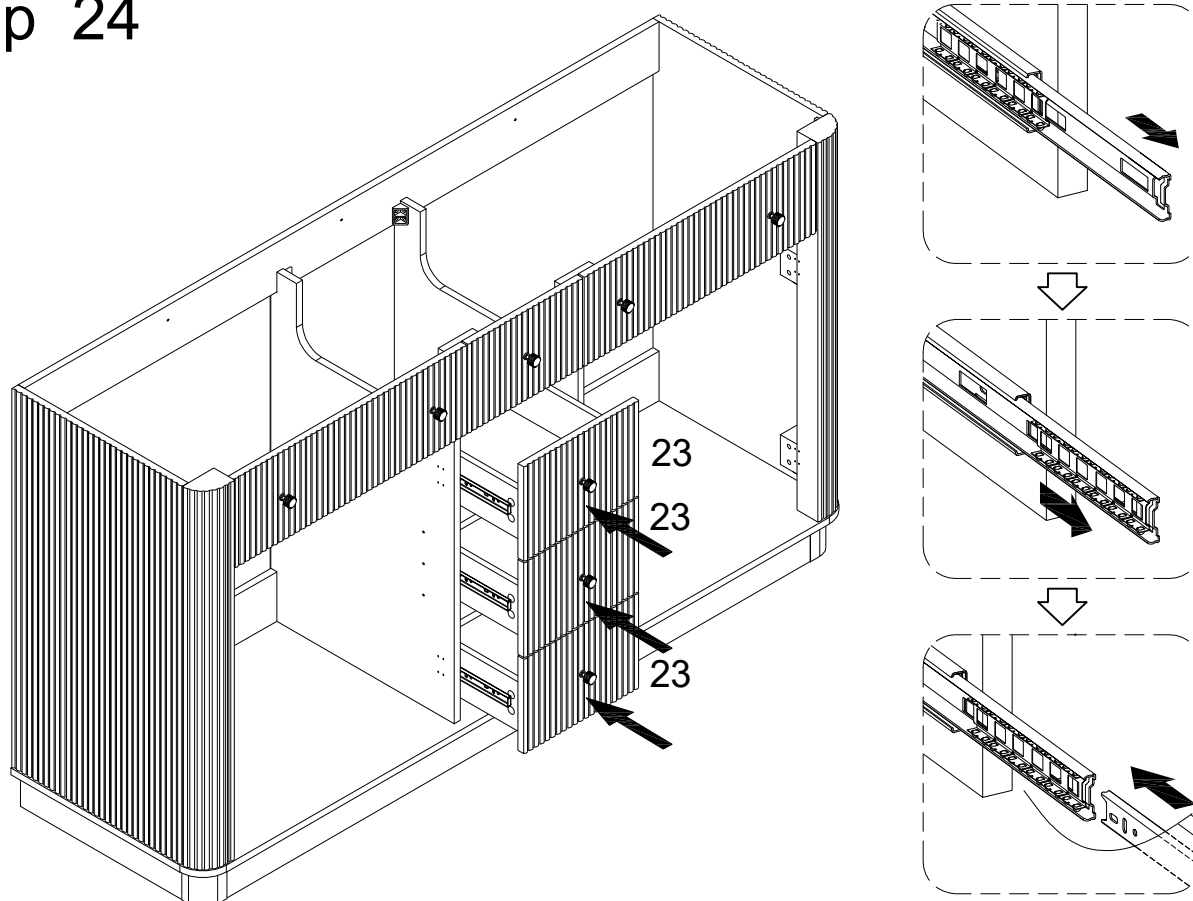


Step 25

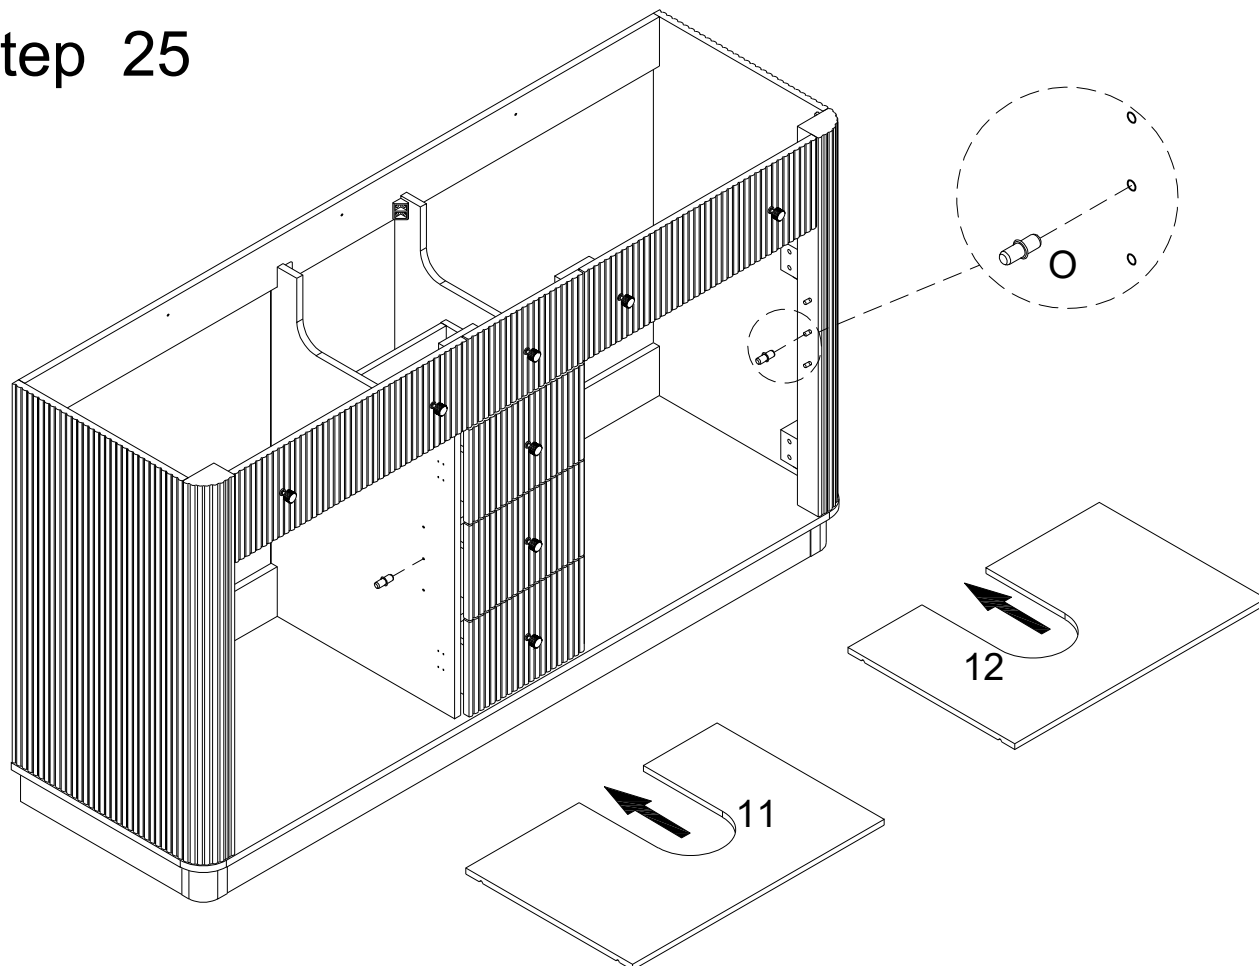


Step 26

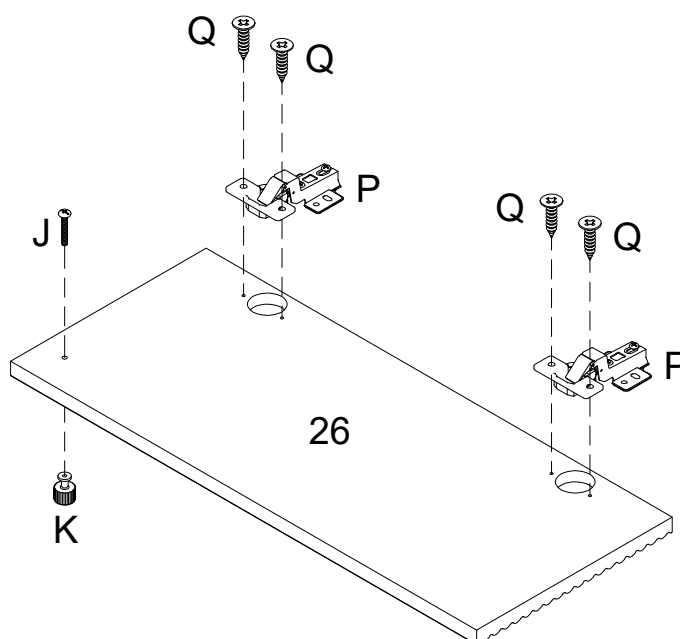


Step 27

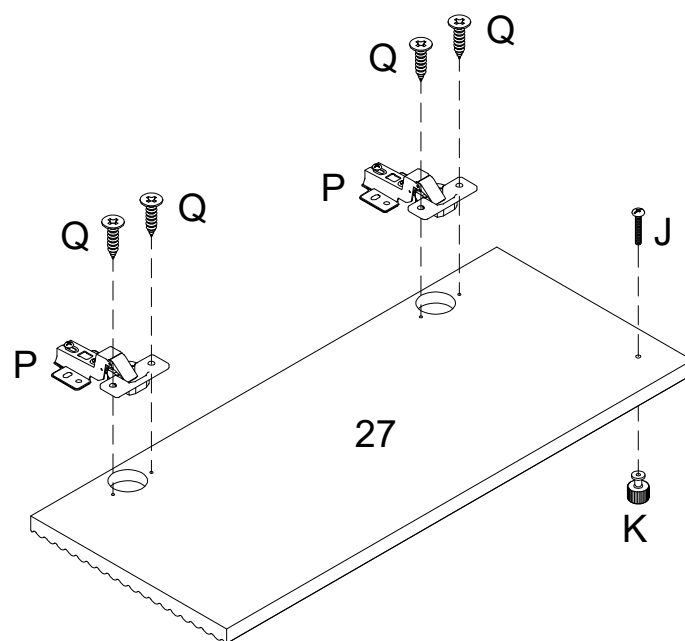


Step 28

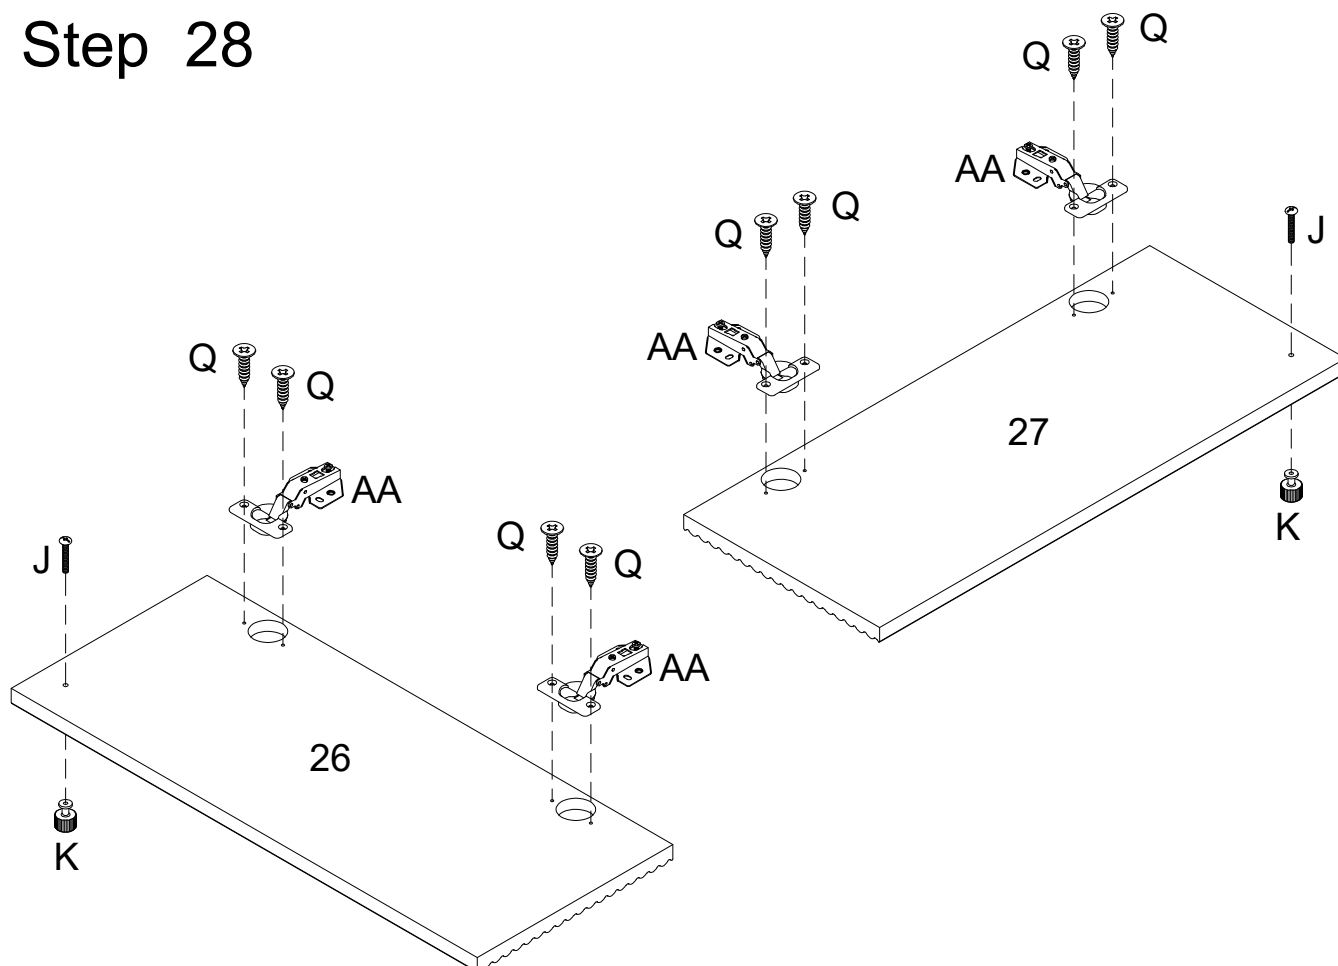


Step 29

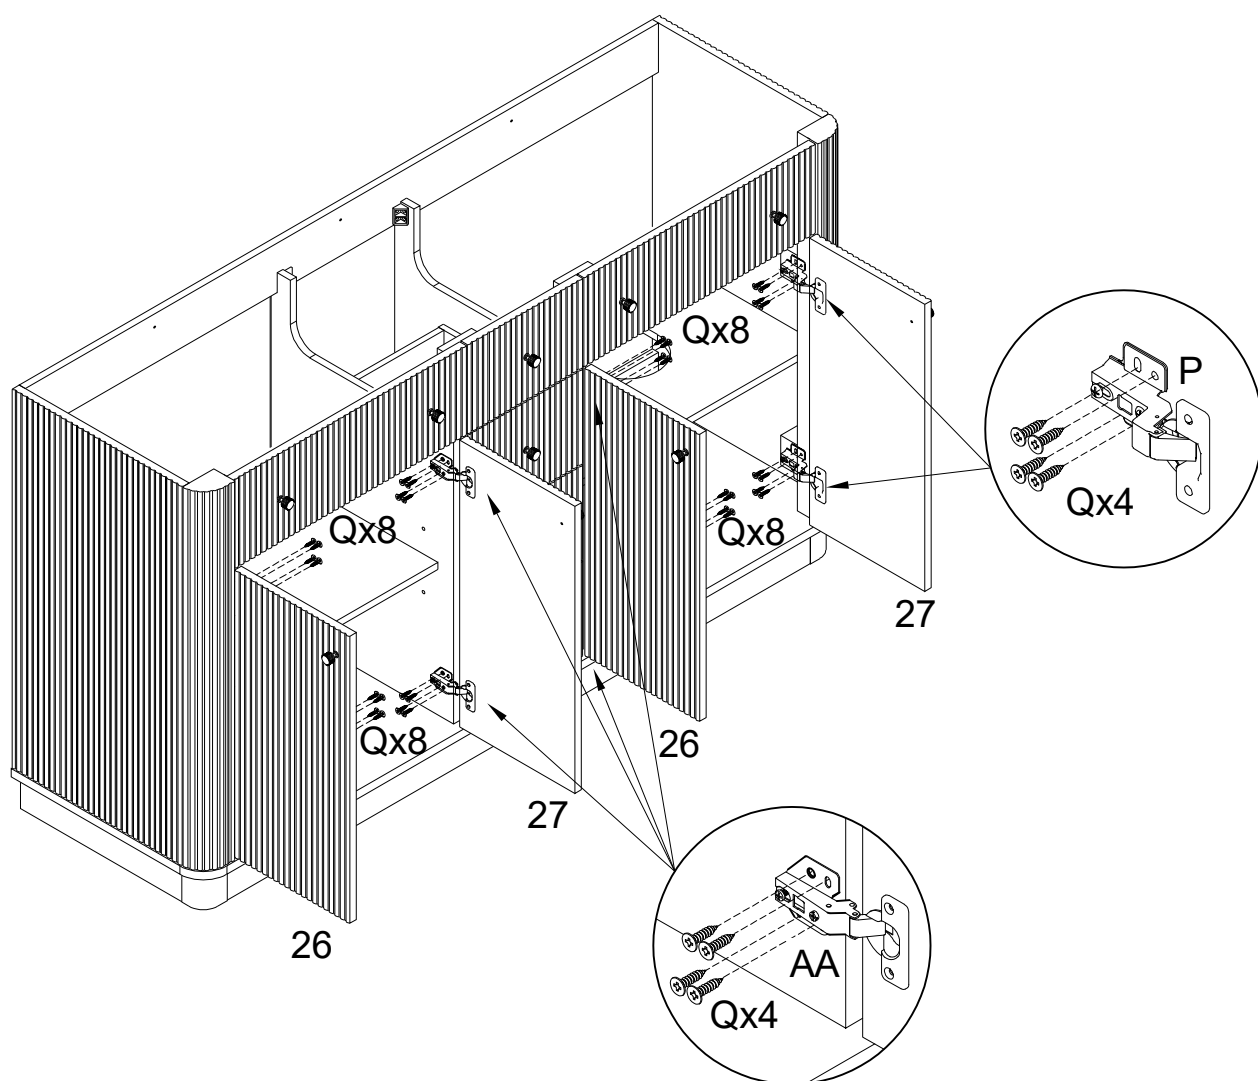

Step 30

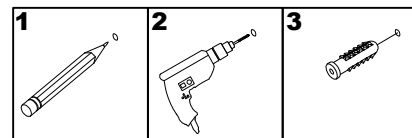


Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

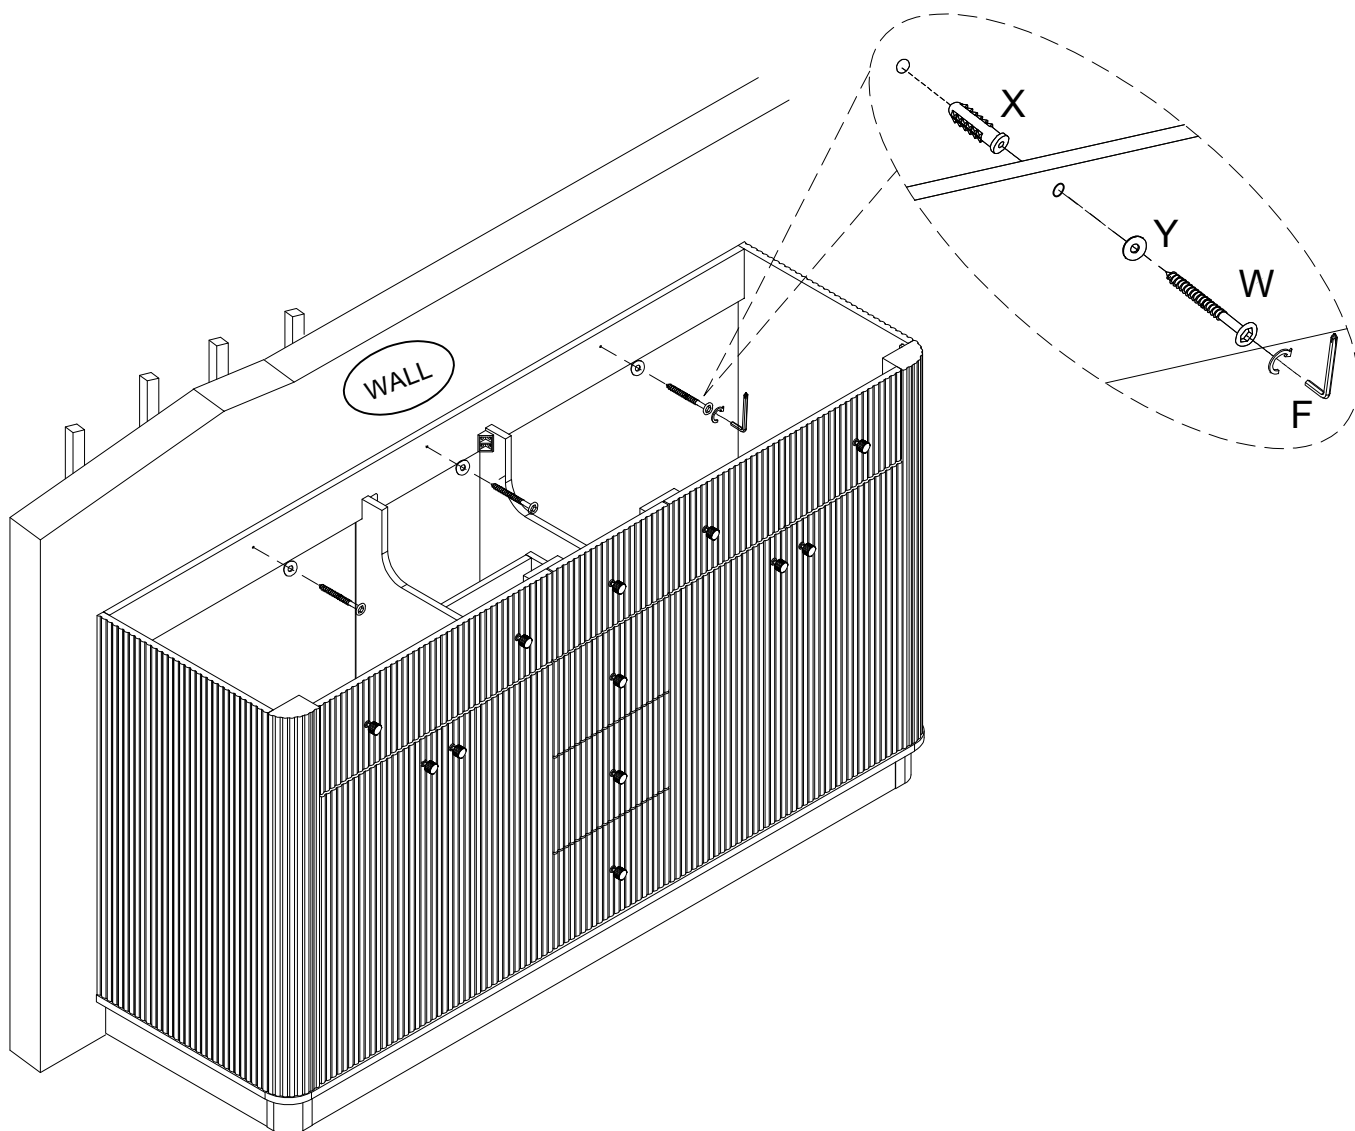




Step 31

Note: The EVA Strip (Z) would be divided into 4 small strip by Scissor per necessary

Remove the tape

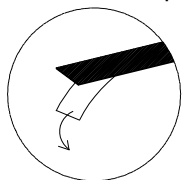

Press

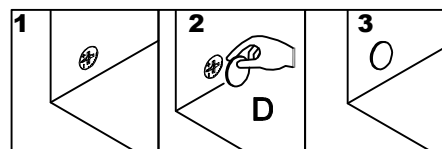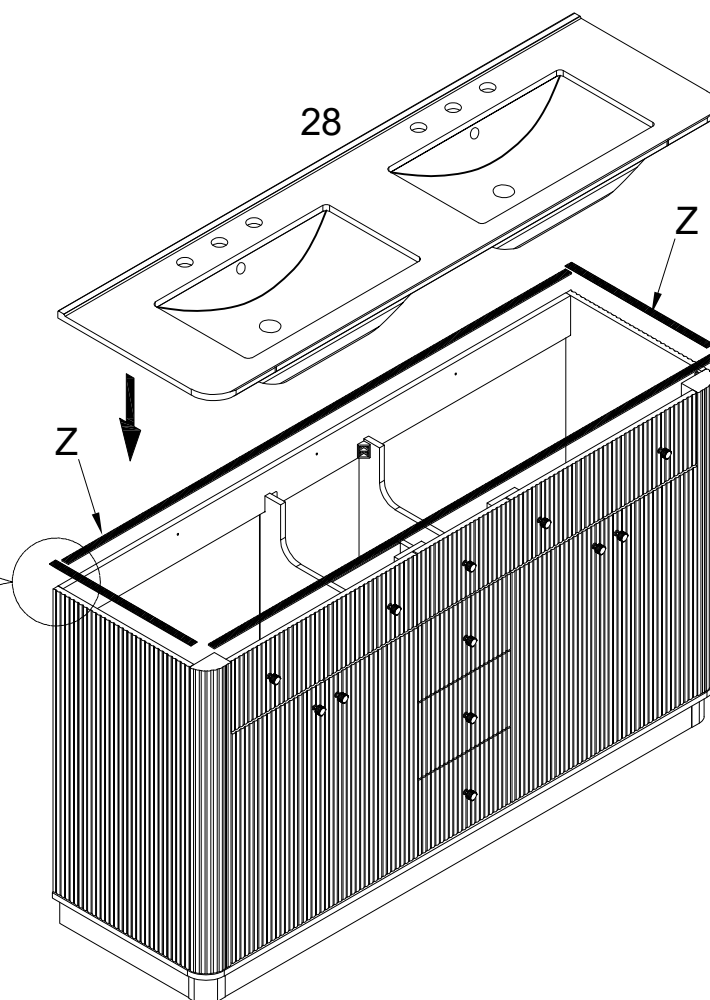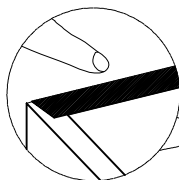

Final Assembly