Installation Manual




Extra-Large Frameless Single Sliding Door

Questions?
Customer Support: **+1 909-276-7014**
Operation Hours: **8am-5pm Mon-Fri PST**

Complicated Stuff?
cs@kobiworks.com

Diagram

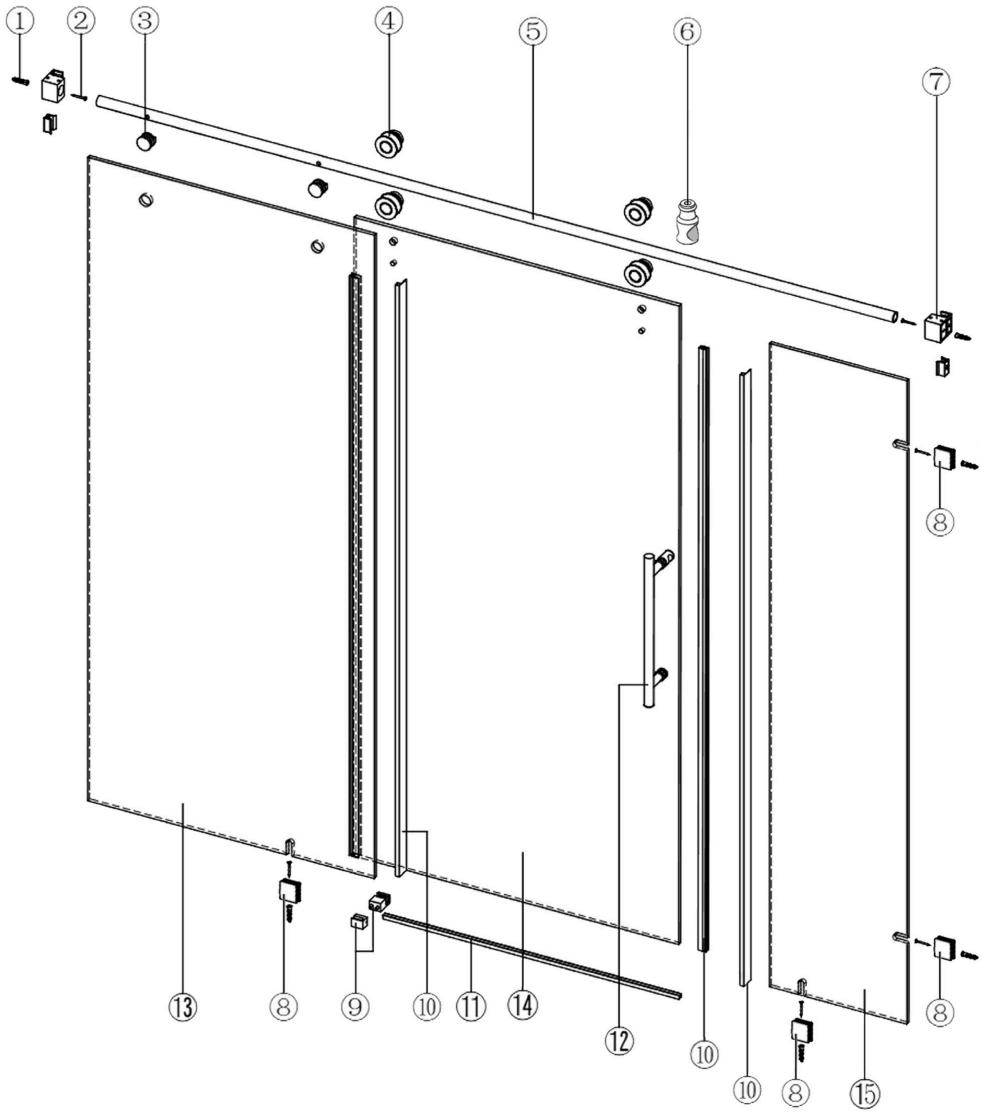

Items List

1




Anchors x6

2




Screws x6

3

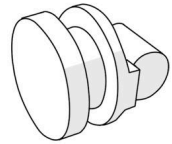


SPB04
Panel Bracket x2

4

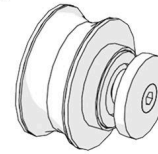

RADBR04
Rollers x4

5

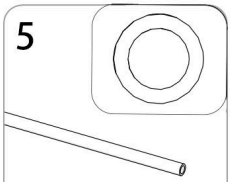


Header Bar x1

6




RADSTP
Bar Stopper x1

7

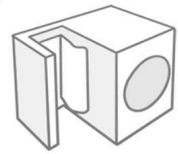


RADSBH04 / R & L
Wall Brackets x2

8

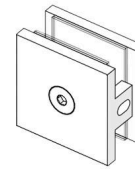


AZU4
Panel Clips x4

9




RADGB04
Bottom Guide x1

10

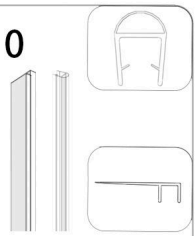

RADPVC
Seals x1

11

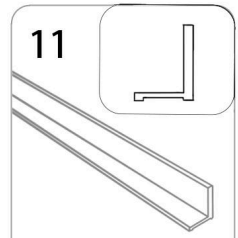

LBTH72
"L" Threshold x1

12




RAD12
Handle x1

13



RADB
Fixed Panel x1

14



RADA
Sliding Door x1

15



NIRC
Side Panel x1


16




Screws & Keys x1

Size Chart

Opening	Width Adj.	Door Size	Panel Size	Panel Size
75"W X 76"H	72" - 75"	36 3/8"W	32 3/8"W	9"W
78"W X 76"H	75" - 78"	36 3/8"W	32 3/8"W	12"W
81"W X 76"H	78" - 81"	36 3/8"W	32 3/8"W	15"W
84"W X 76"H	81" - 84"	39 3/8"W	35 3/8"W	12"W
87"W X 76"H	84" - 87"	39 3/8"W	35 3/8"W	15"W
90"W X 76"H	87" - 90"	39 3/8"W	35 3/8"W	18"W

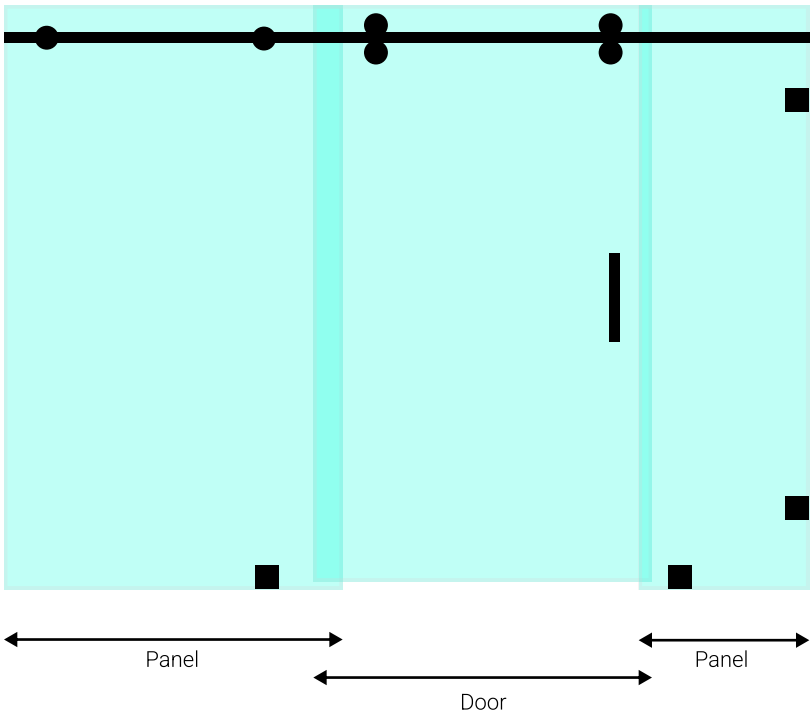

RECOMMENDED:

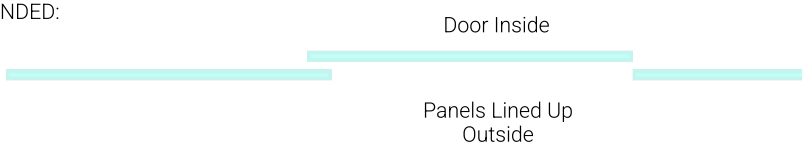

General Information

THIS MODEL IS REVERSIBLE!
Install it by reversing the panels, the bigger panel will always go on the side where the door will slide to.



Threshold for this model has to be at least **2-5/8”** wide for the entire shower to fit.



Out Of Plumb tolerance is 1/4” which can be adjusted on the rollers.

Note:

- Installation of this shower door requires the threshold to be drilled (1 hole), contact the manufacturer of the base in regards to any questions related drilling holes into their products.
- Recommend using waterproof, mildew-resistant silicone caulk.
- Recommend caulking each drilled holes to waterproof further.

- Professional Installation Recommended.
- Minimum two installers required.

Summary:

1. Measuring the opening space.
2. Punch the holes by template or by height.
3. Install wall brackets.
4. Install header bar.
5. Mount the fixed panel and install it with the clamp.
6. Lock the fixed panel with the bar by using the glass fastener (ITEM 3)
7. Mount the guide block on the fixed panel.
8. Mount the glass door with the rollers on, on the inside or outside, it’s reversable.
9. Apply the PVC seals on both ends.
10. Install the threshold with silicone.




Step 1.


Using the provided drilling template, carefully mark and drill the holes with the appropriate drill bit for your installation. Securely mount the wall brackets once the holes are completed.


Ensure that the drilling template is positioned perfectly level, confirming that the header bar alignment will match the glass to prevent any misalignment caused by measurement errors.

Before drilling, review and verify all hole locations by comparing them with the measurements shown on the reference chart.

Product Height	A
60"	56 1/4"
66"	62 1/4"
72"	68 1/4"
76"	72 1/4"
79"	75 1/4"

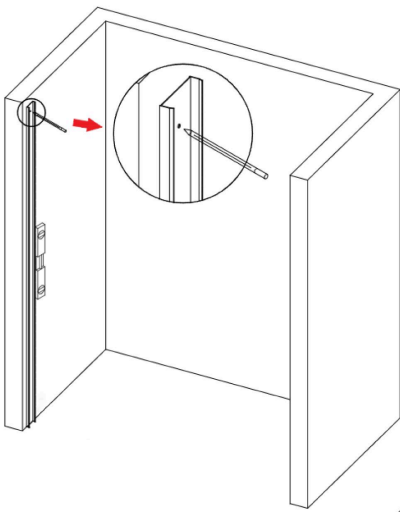

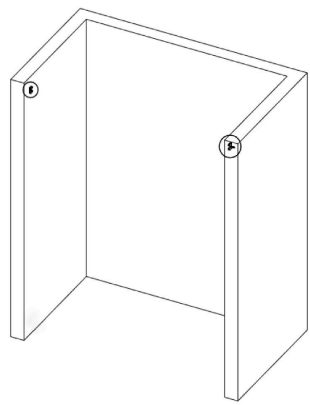

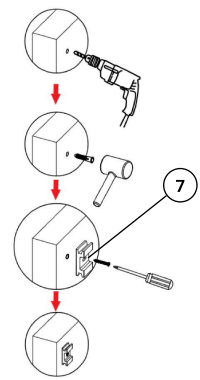


Installation Video

Step 2.

Cut the header bar to 1 inch shorter than your current opening, ensuring you cut from the side without pre-drilled holes.

After cutting, mount the bar onto the bracket using the provided holders. Insert the stopper and install the fixed panel brackets inside the bar, but do not tighten them fully yet, leave them slightly loose to allow for adjustment later.

The orientation of the brackets (facing upward or downward) is optional and may be chosen based on your preferred installation setup.

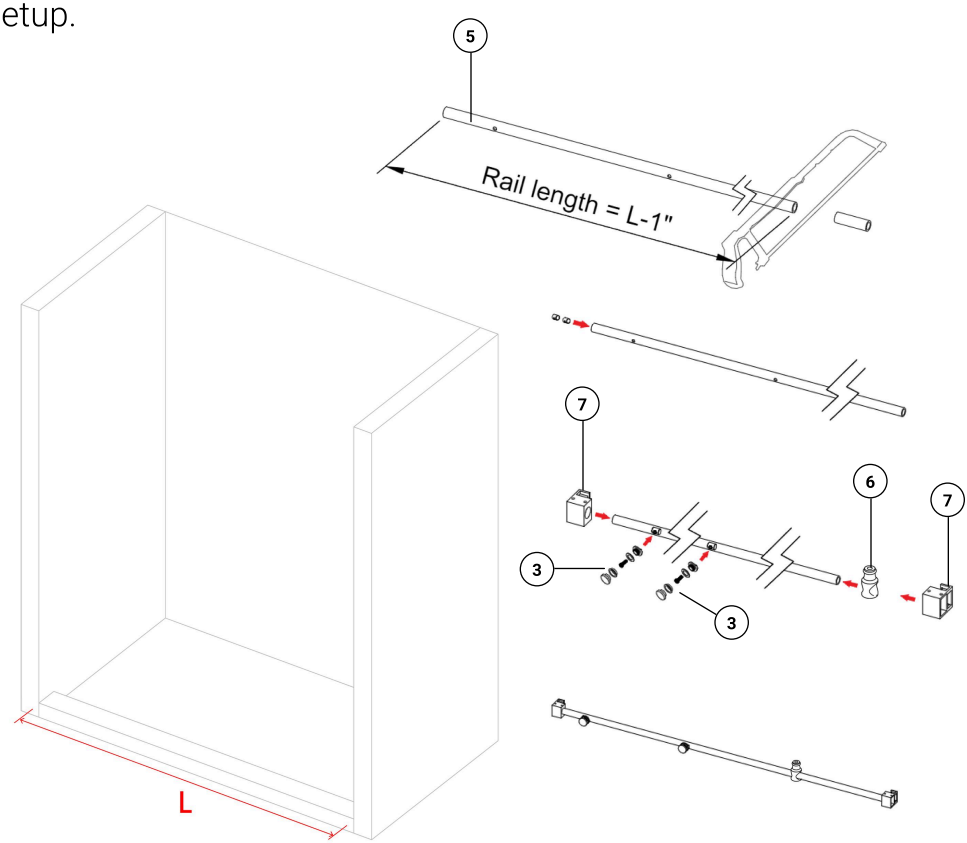



Step 3.

Mount the fixed glass panel and securely attach it to the header bar.

Next, mark the position for the clip, drill the corresponding hole, and install the clip, ensuring the fixed panel remains perfectly plumb.

Once the panel and clip are properly secured, proceed to install the guide block onto the fixed panel.

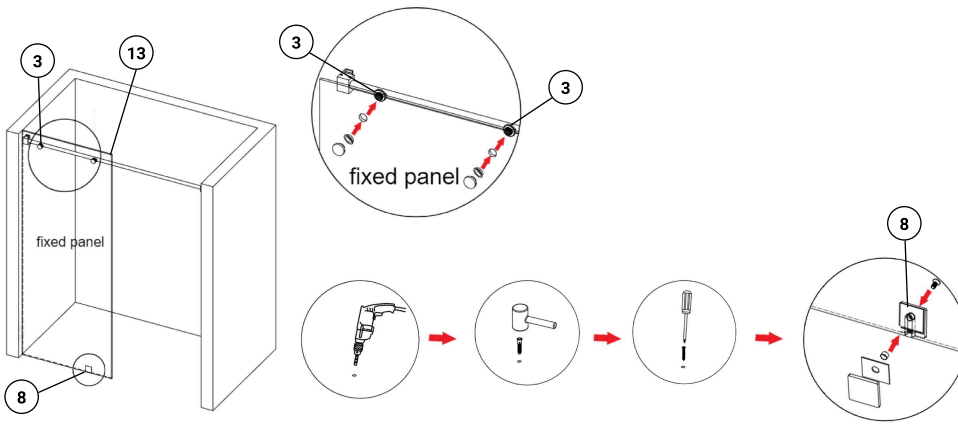


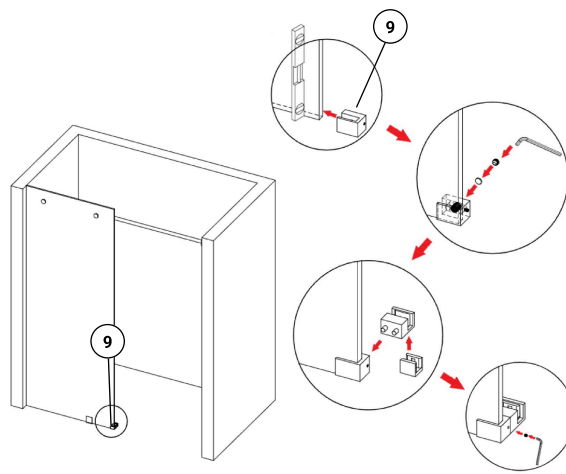

Step 4.

Install the second stationary glass panel on the opposite side, the side where the sliding door will not open.


Ensure the panel is perfectly plumb and aligned with both the first panel and the wall. This alignment is essential for a precise fit and secure installation using the provided clips.

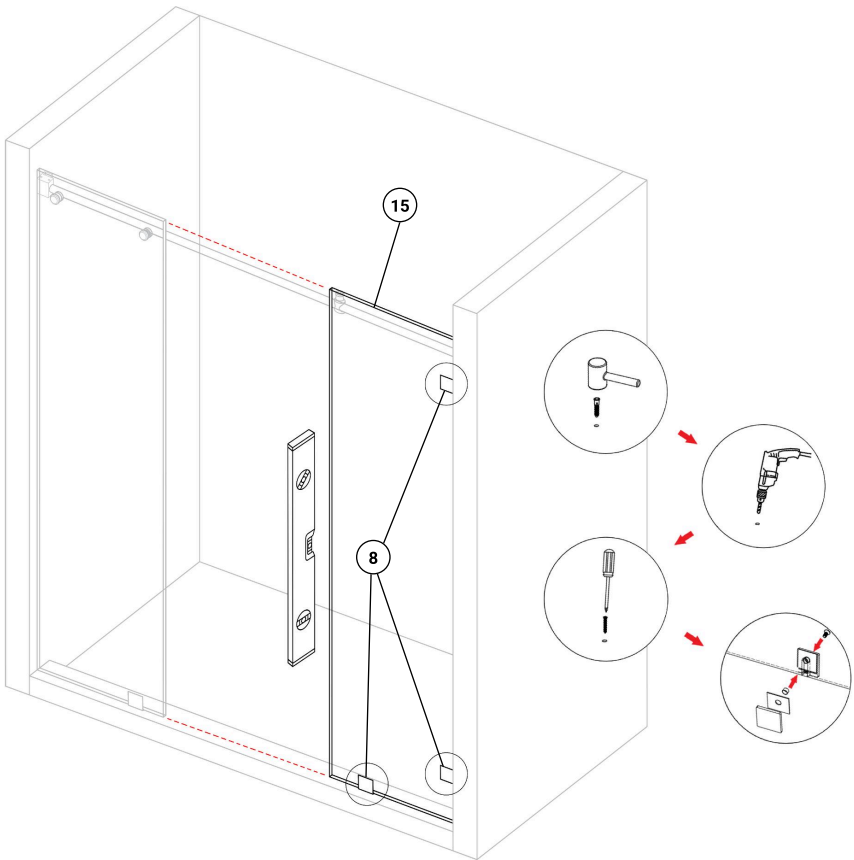

Step 5.

Next, carefully mount the sliding door onto the header bar following the provided schematics.


Secure the glass firmly with the mounting brackets, then position and you can also lock the stopper on the bar so that it prevents the handle from contacting the fixed glass, while still leaving enough space for a comfortable hand grip.

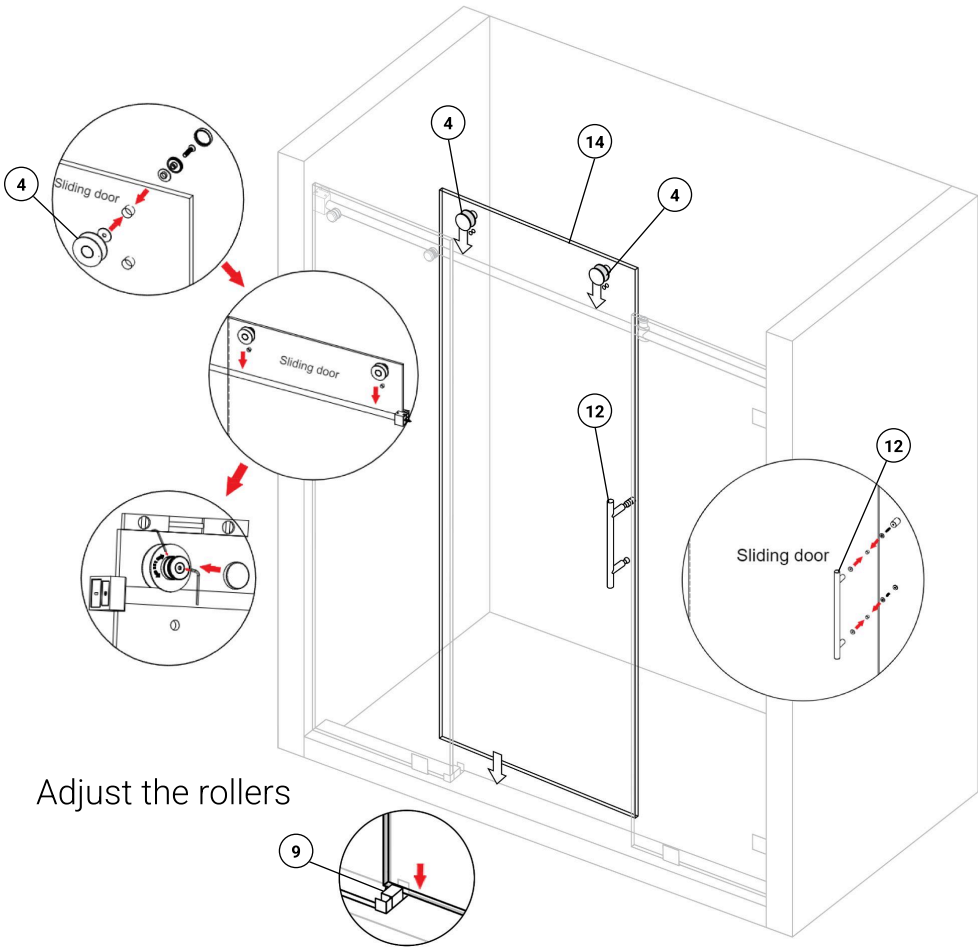

Adjust the rollers

Step 6.


After everything has been adjusted correctly, secure the bottom rollers to ensure the door does not jump.

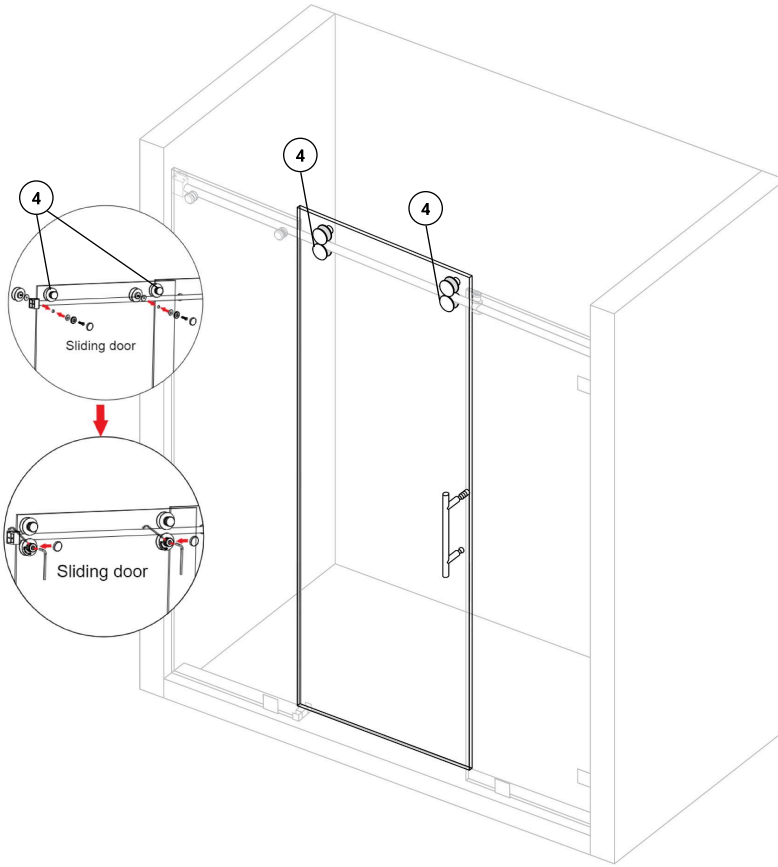

Step 7

If not already done, lock the stopper in place to ensure the sliding door does not contact the opposite fixed panel.


Next, cut the L-shaped threshold to match the width of the door opening, and secure it in place using silicone for a clean, watertight finish.

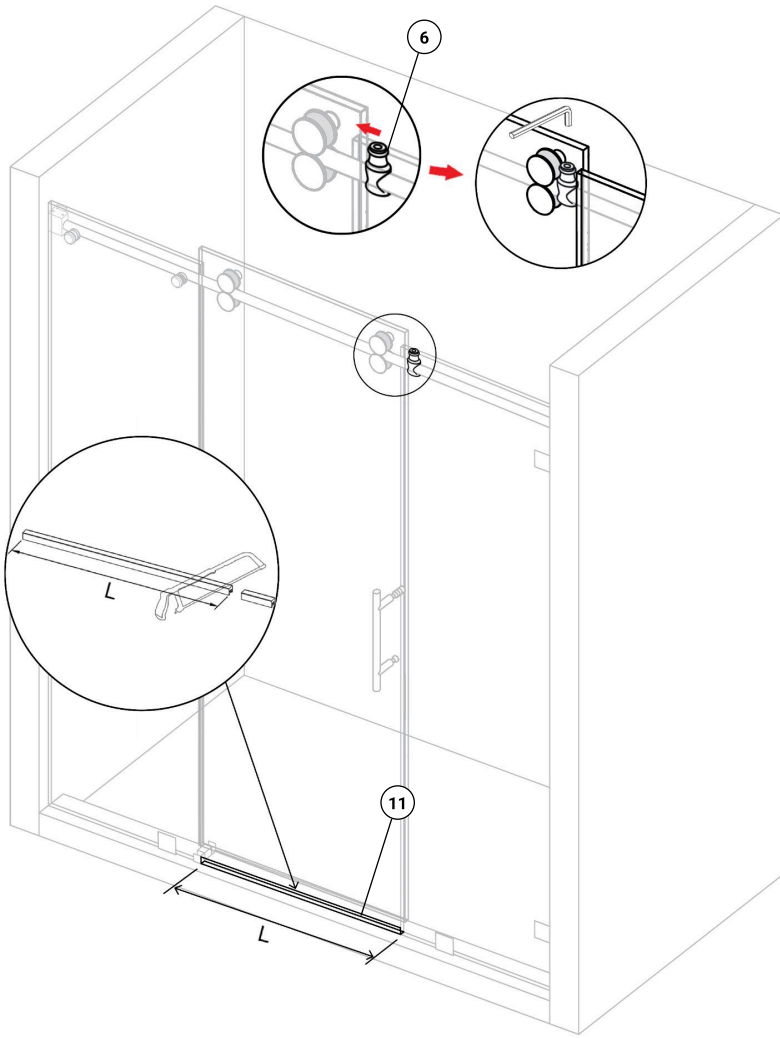

Step 8.

We’re almost finished! Apply silicone along the edges of the glass panels, both on the interior and exterior sides, to ensure a watertight seal and prevent any leakage.

Allow the silicone to fully cure for at least **24 hours** before using the shower for best results.

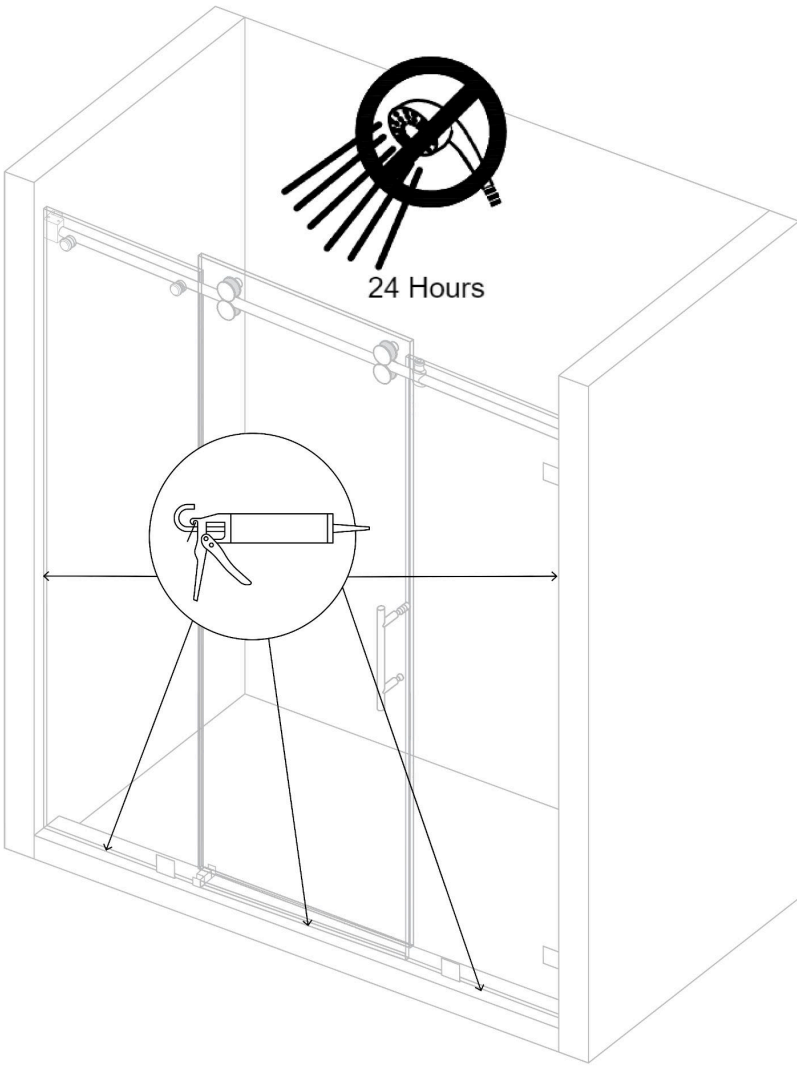



Step 9

Attach the PVC seals along the edges of the door to close any gaps and prevent water from leaking through.

Ensure each seal is firmly pressed into place and properly aligned for a clean, watertight finish.

Wide ones go on the fixed panels, and the thin ones go on the sliding door.

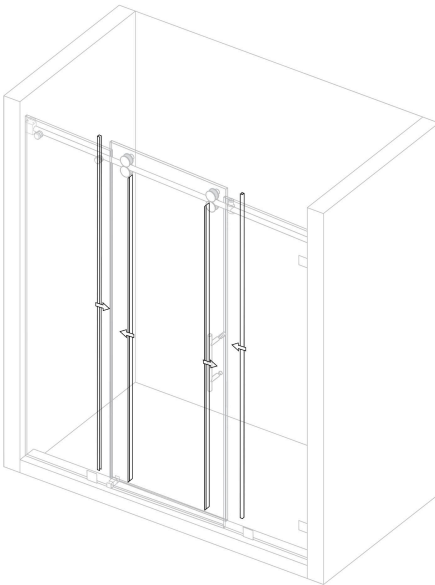

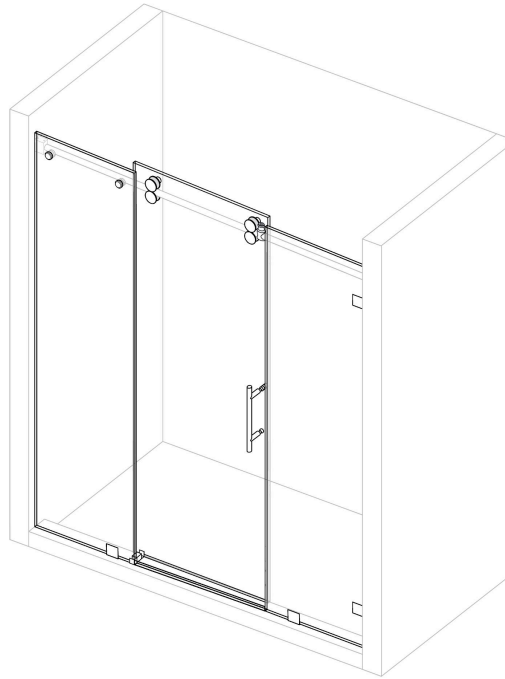

🎉

10 Years Limited Warranty

KOBIWORKS warrants to the original consumer owner that the product will be free from defects in material and workmanship, under normal installation, use, and service, for a period of ten (10) years from the date of original purchase. This warranty applies to products purchased and installed in the United States of America and Canada, and extends to the original owner of the installation in which the product is installed.

What is covered. During the warranty period, KOBIWORKS will, at its sole discretion, repair (only if applicable) or replace, free of charge, any product that proves defective in material or workmanship under normal installation, use, and service. Repair or replacement is the customer's sole and exclusive remedy under this warranty.

What is not covered. This warranty does not cover, and KOBIWORKS is not responsible for:

- Any labor, or other fees incurred to repair, replace, install, or remove the product;
- Damage resulting from reasonable wear and tear, accidents, outdoor use, misuse, abuse, or negligence;
- Damage resulting from incorrectly performed installation, maintenance, or repair, including failure to follow KOBIWORKS' care and cleaning instructions;
- Any product that has been modified, altered, or repaired by anyone other than KOBIWORKS or its authorized representative;
- Products not installed in the United States or Canada.

How to make a claim. To make a claim, the customer must contact KOBIWORKS in writing during the warranty period and provide proof of purchase. Acceptable proof includes the original sales receipt or invoice. Please obtain authorization from KOBIWORKS before returning any product.


Phone: +1 (909) 276-7014
Email: cs@kobiworks.com
Mail: 4671 State St, Montclair, CA 91763

Limitation of liability. To the fullest extent permitted by law, KOBIWORKS shall not be liable for any incidental, consequential, special, or indirect damages arising from the use of or inability to use the product, including but not limited to property damage, water damage, or loss of use, whether based in contract, warranty, tort, or otherwise. KOBIWORKS' total liability under this warranty shall not exceed the original purchase price of the product.

Disclaimer of other warranties. Except as expressly stated in this warranty, KOBIWORKS disclaims all other warranties, whether express or implied, including any implied warranties of merchantability or fitness for a particular purpose, to the extent permitted by applicable law. Some states and provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations may not apply to you. Your legal rights. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state and province to province.

Governing law. This warranty is governed by the laws of the State of California, without regard to its conflict-of-laws provisions.

Watch out! We have an installation video on YouTube too!

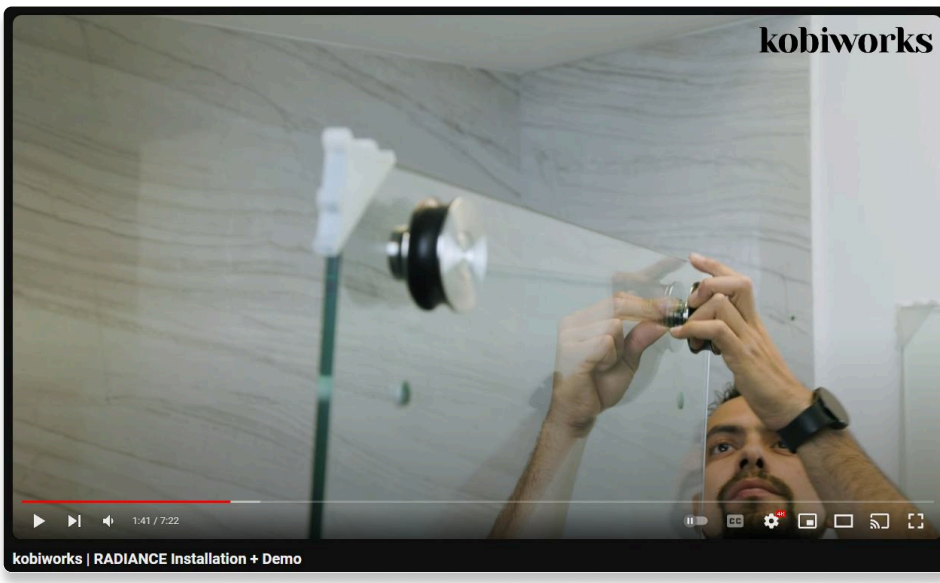

Additional Resources

Website: https://kobiworks.com
Address: 4671 State St, Montclair, CA 91763

Questions?
Customer Support: **+1 909-276-7014**
Operation Hours: **8am-5pm Mon-Fri PST**

Complicated Stuff?
cs@kobiworks.com