
INSTALLATION GUIDE

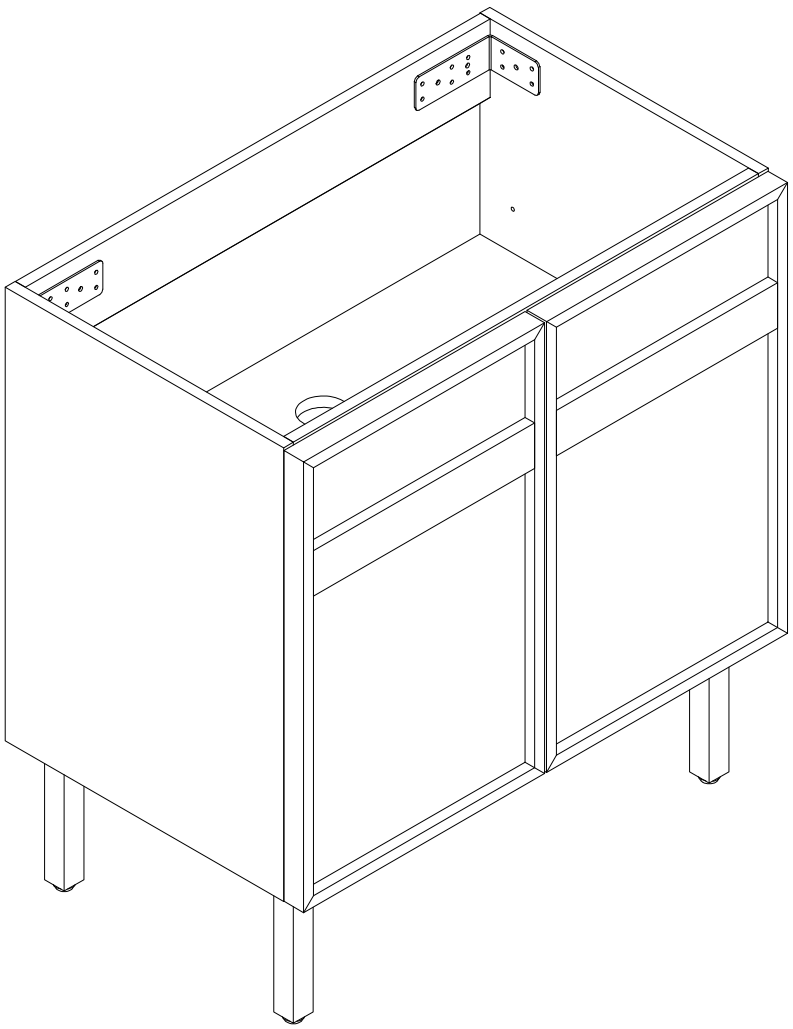


WALL CABINET INSTALLATION

STEP 1:SELECT HARDWARE THAT IS BEST SUITED FOR YOUR WALL TYPE

IMPORTANT:USE "PAN HEAD" OR "ROUND HEAD" SCREWS WITH SEAT WASHERS.SEAT SCREWS TIGHTLY AGAINST BACK RAIL OR PANEL WITHOUT DRIVING INTO BACK RAIL OR PANEL MATERIAL.

PASO 1: INSTALACION DE GABINETES, SELECCIONE LA HERRAJERIA QUE MAS SE ADECUA AL TIPO DE SU PAHED.


IMPORTANTE:USA TORNILLOS DE "CABEZA PLANA BISELADA" O " CABEZA REDONDA" CON ARANDELAS DE ASENTO. COLOCA LOS TORNILLOS FIRMEMENTE CONTRA EL PANEL O EL RIEL. TRASERO SIN INSERTARLOS EN EL PANEL O EL RIEL

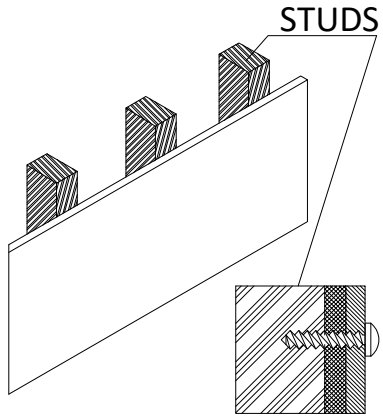

STUDS: Secure to wall with #10 x 3" screws at stud location. Locate at least 2 wall studs


MONTANTES: Fjelo a la pared con tornillos de # 10 x 3 pulgadas en los montantes.

Use at least 4 wall anchors when installing a 24" and 30" cabinet. Use at least 6 wall anchors when installing a 36" and 48" cabinet.

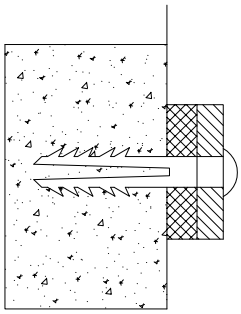

CONCRETE: Drill ¼"holes, insert #10 wall anchors and secure to wall with #10 x3" screws.


CONCRETO: Taladre orificios de ¼ pulgada, inserte anclas de expansión de #10 y fijelo a la pared con tornillos de # 10 x 3 pulgadas.




DRYWALL: Drill holes and secure to the wall with toggle bolts.
Note:Use toggle bolts only when cabinet cannot be attached to a wall stud.

PANEL DE YESO: Taladre los orificios y fije la unidad a la pared conpernos acodillados.
Nota: Use pernos acodillados sólo cuando el gabinete no se pueda fijar a los montantes de pared.


PRE-INSTALLATION - TOOLS REQUIRED

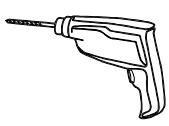

Drill




Measuring tape



Screwdriver









Silicone




Level




Pencil

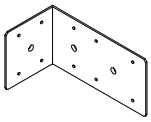
 Ax20	 Bx20	 Cx8	 4*14 Dx40	 4*12 Ex20
 Fx4	 Gx4	 Hx2	 Ix6	 Jx4

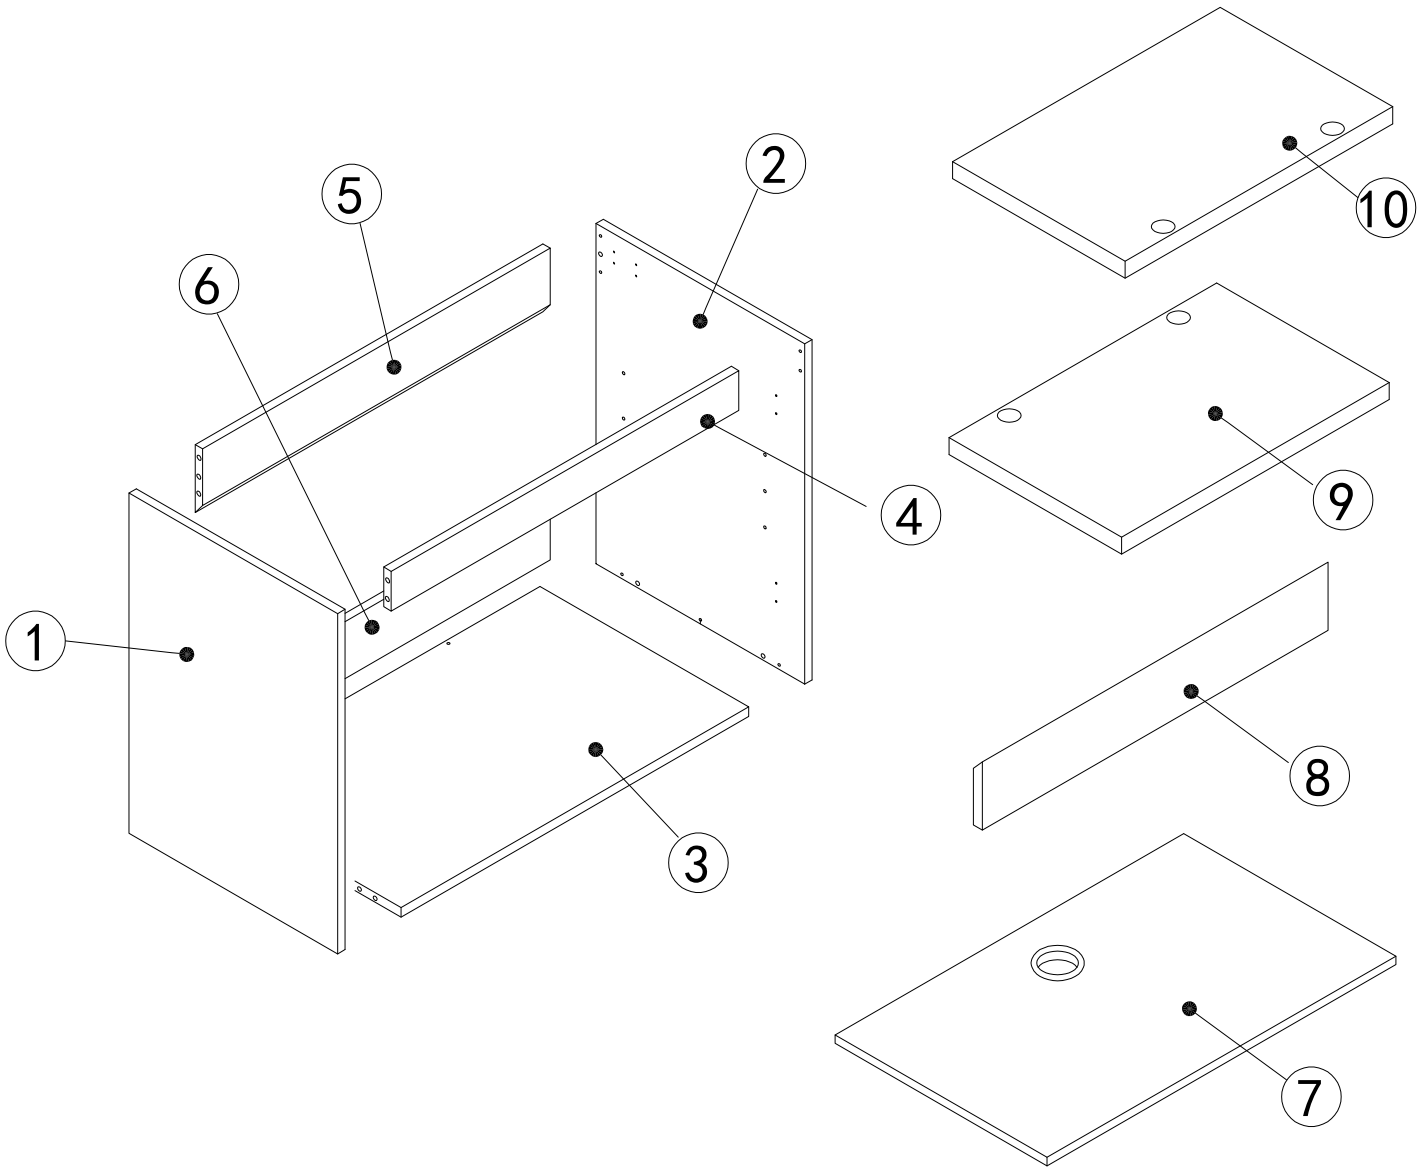


Panels Check

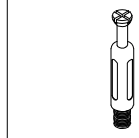



Ax9

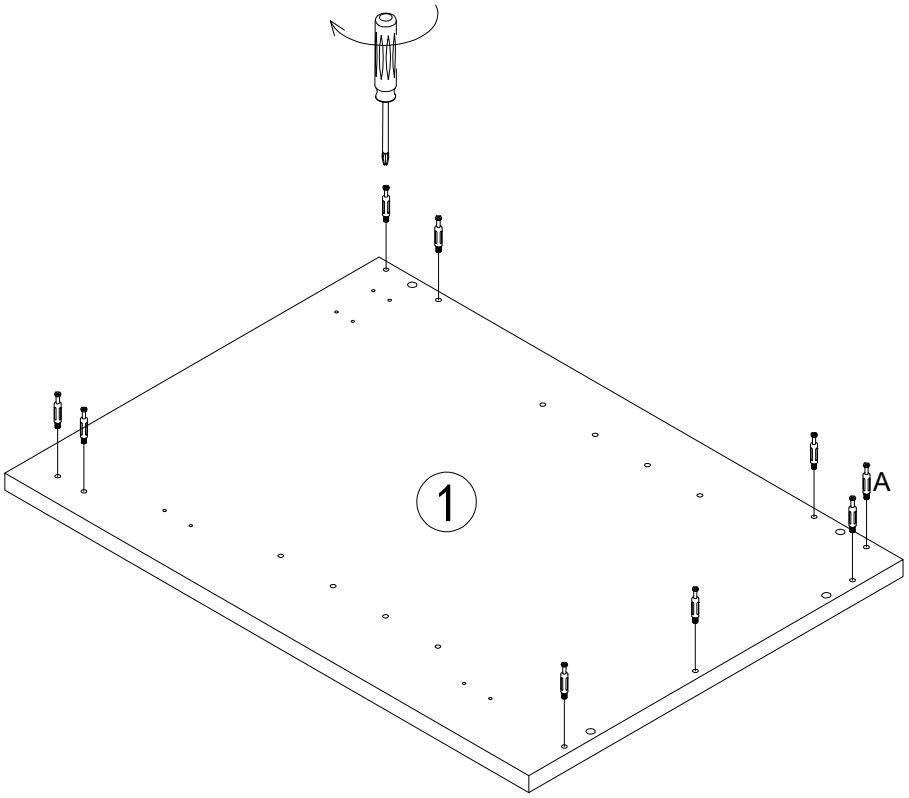

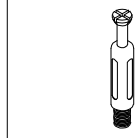


Ax9

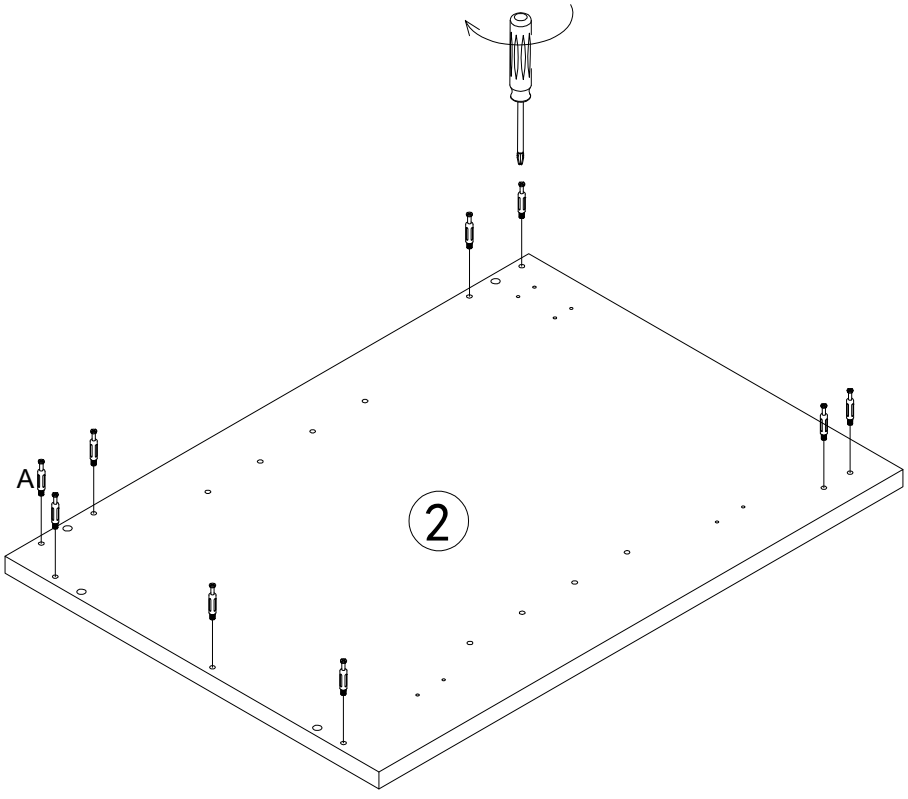

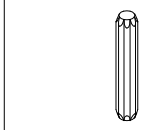

Cx8

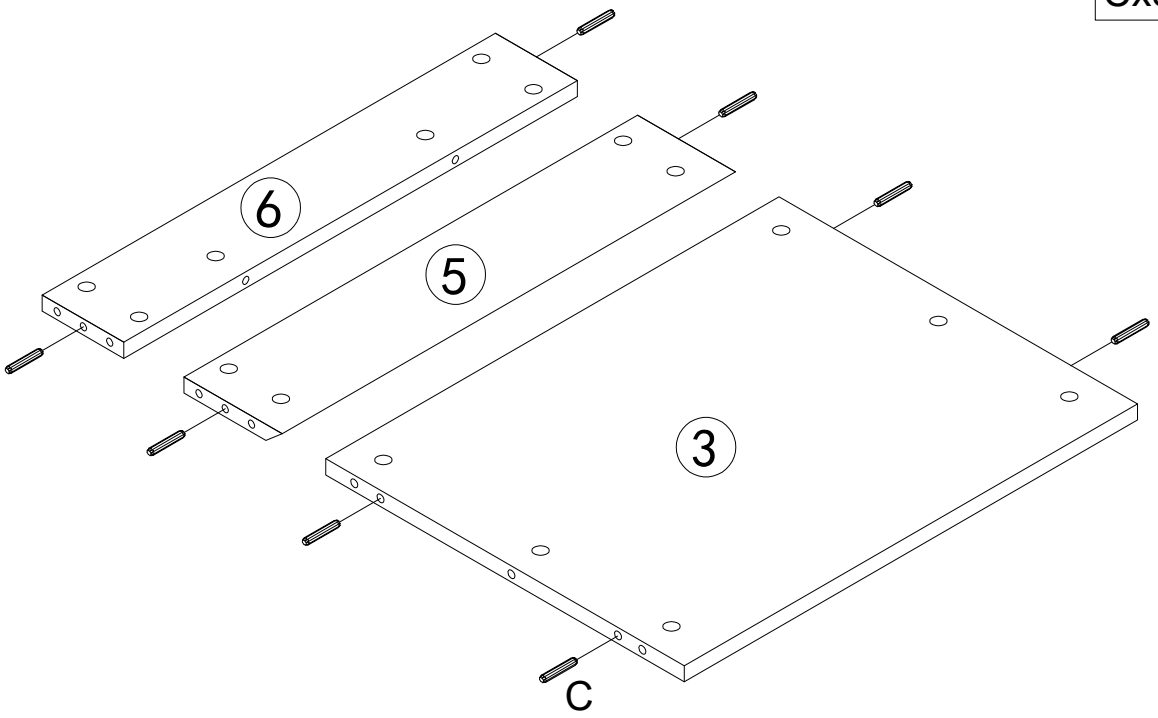


4





Ax2




Bx2

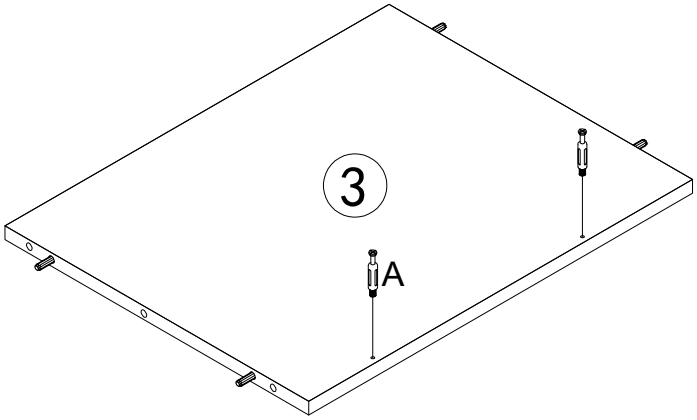


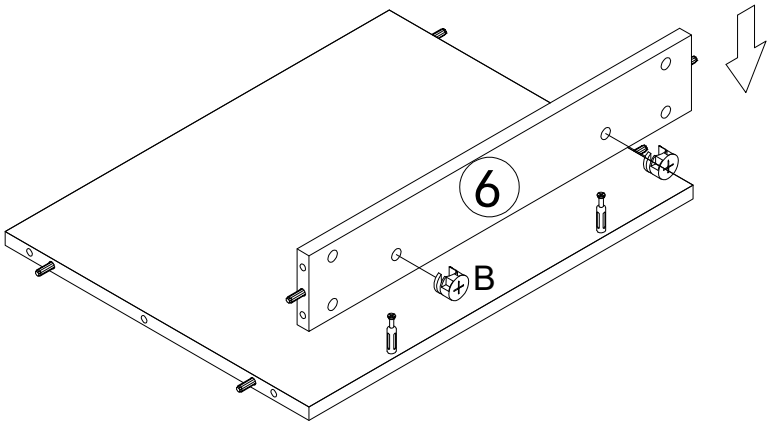


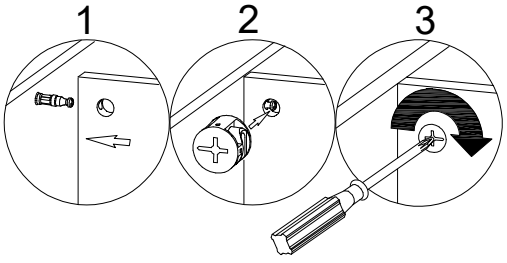


5

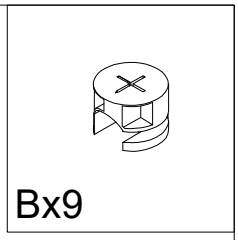


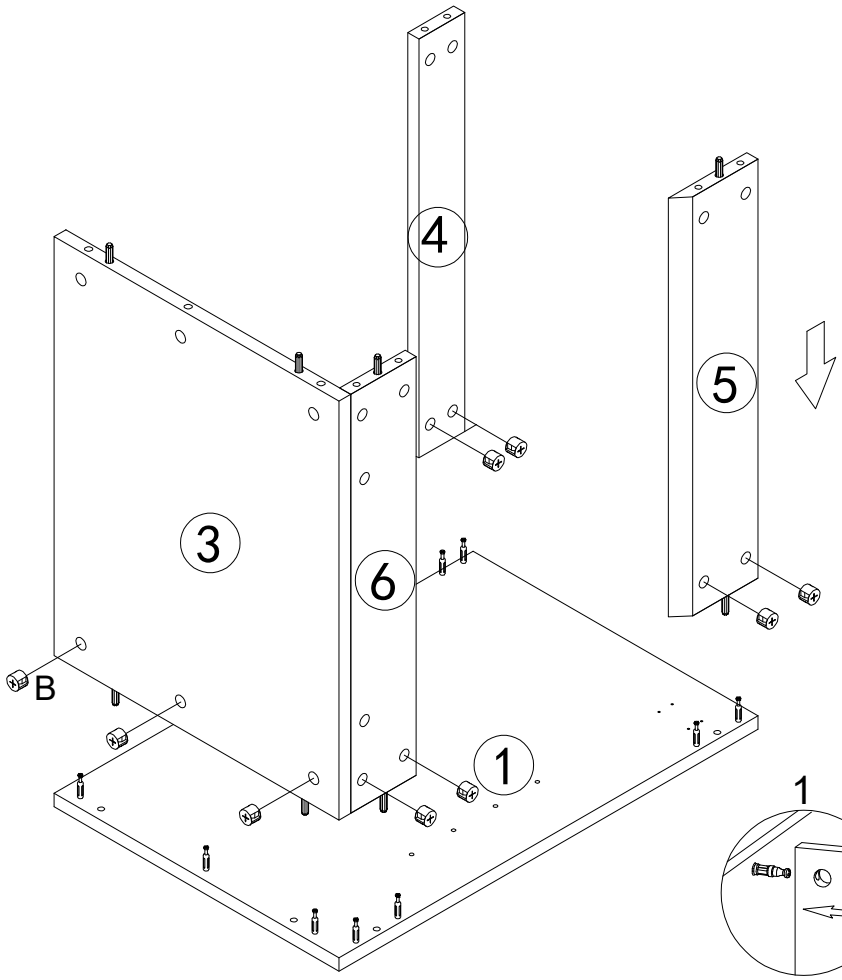


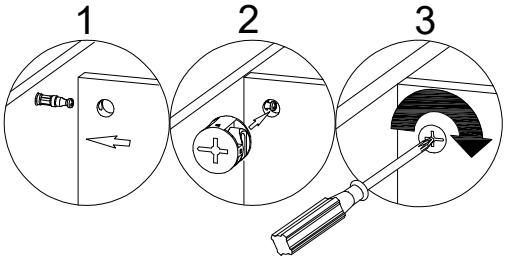


6

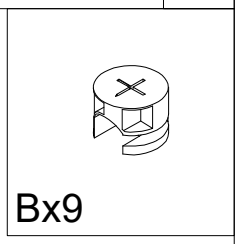

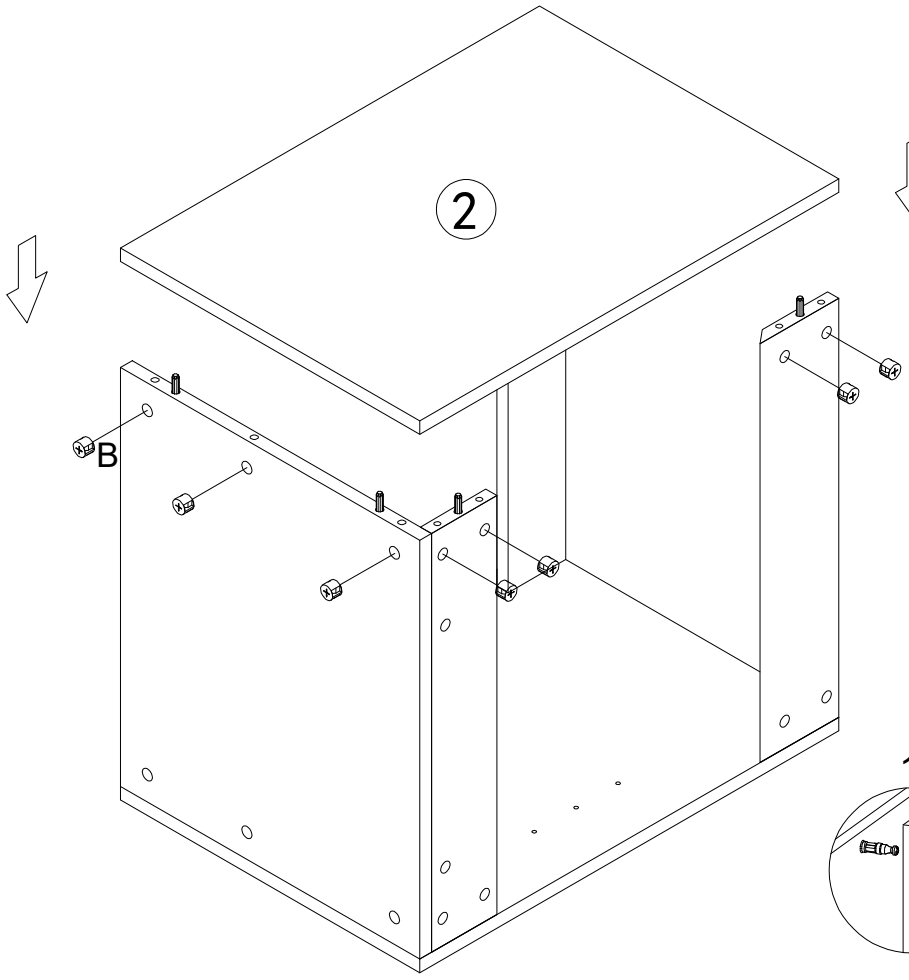

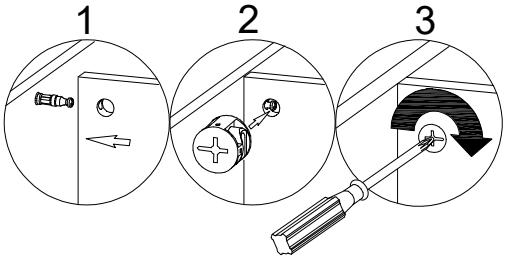


7

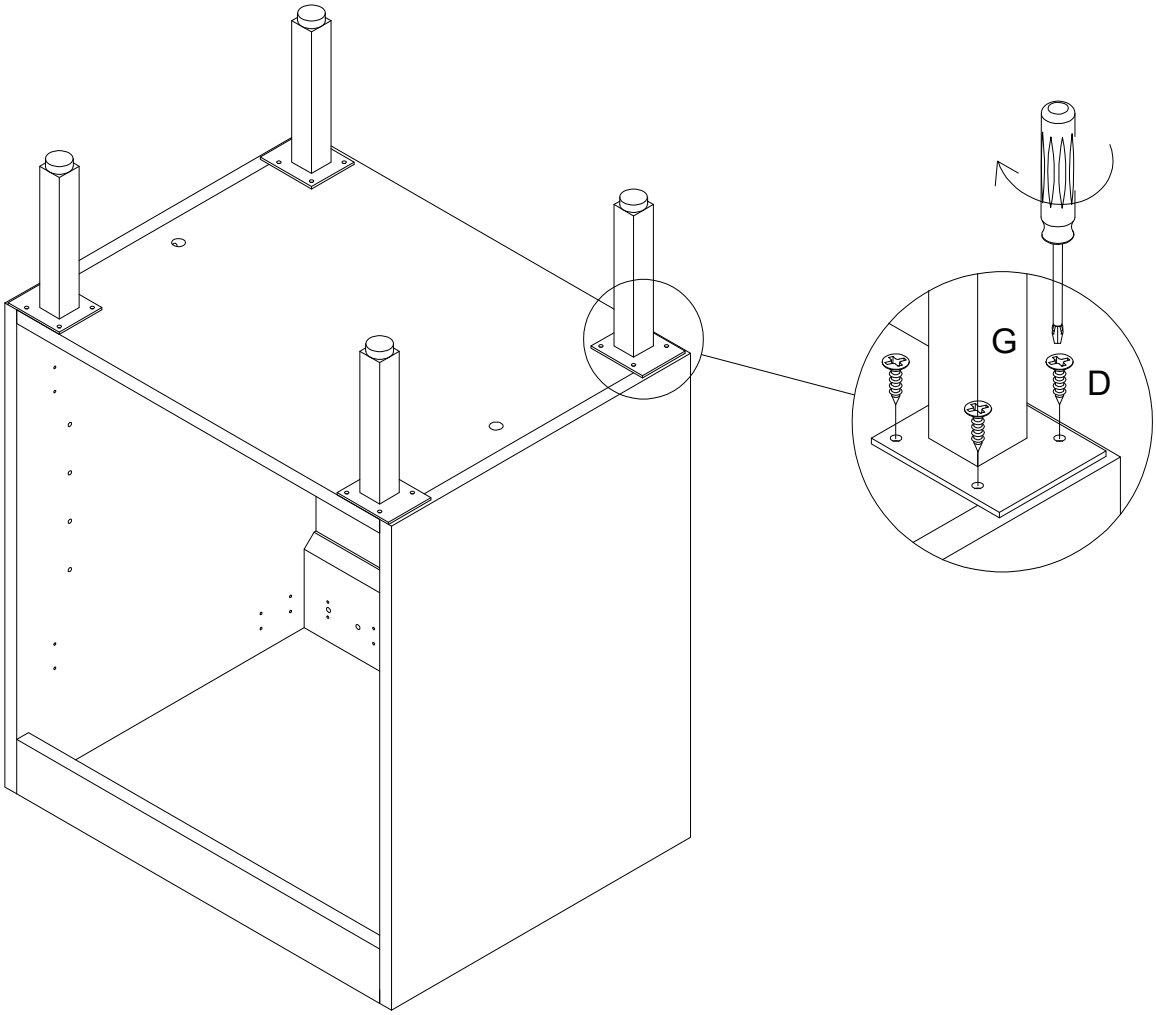




Dx16



Gx4


8

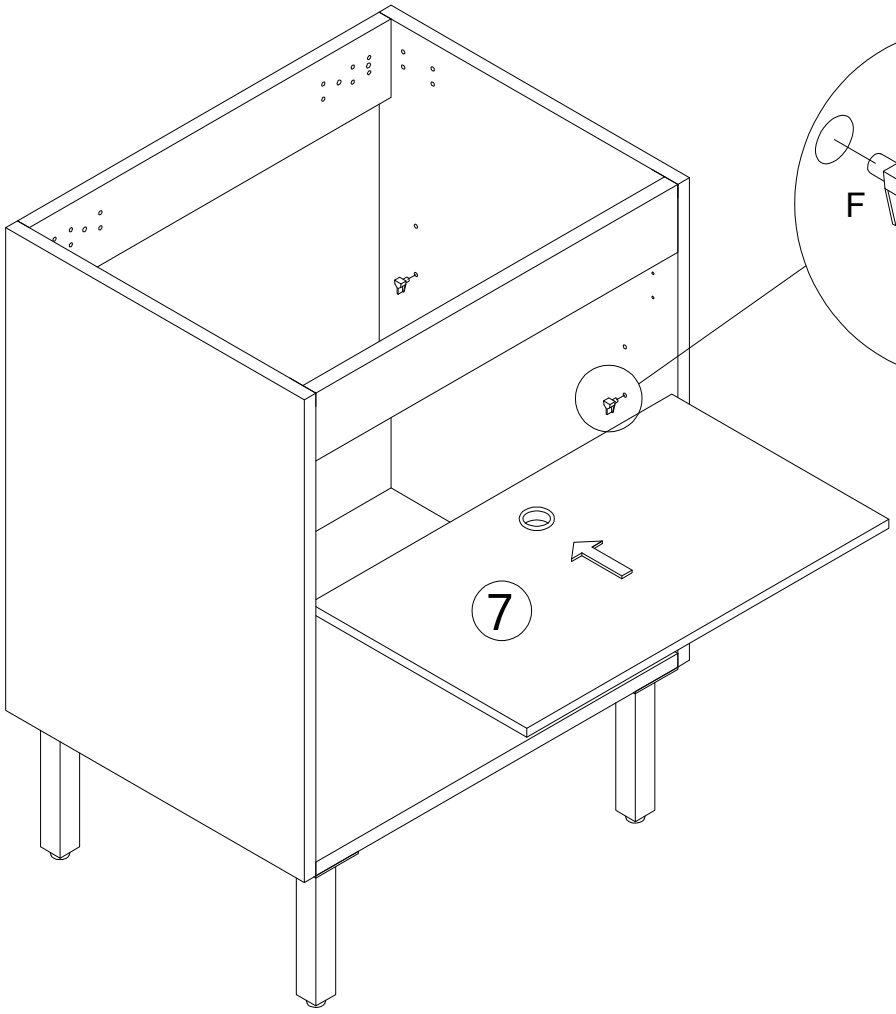



Fx4

9




Jx4



4*14

Dx8

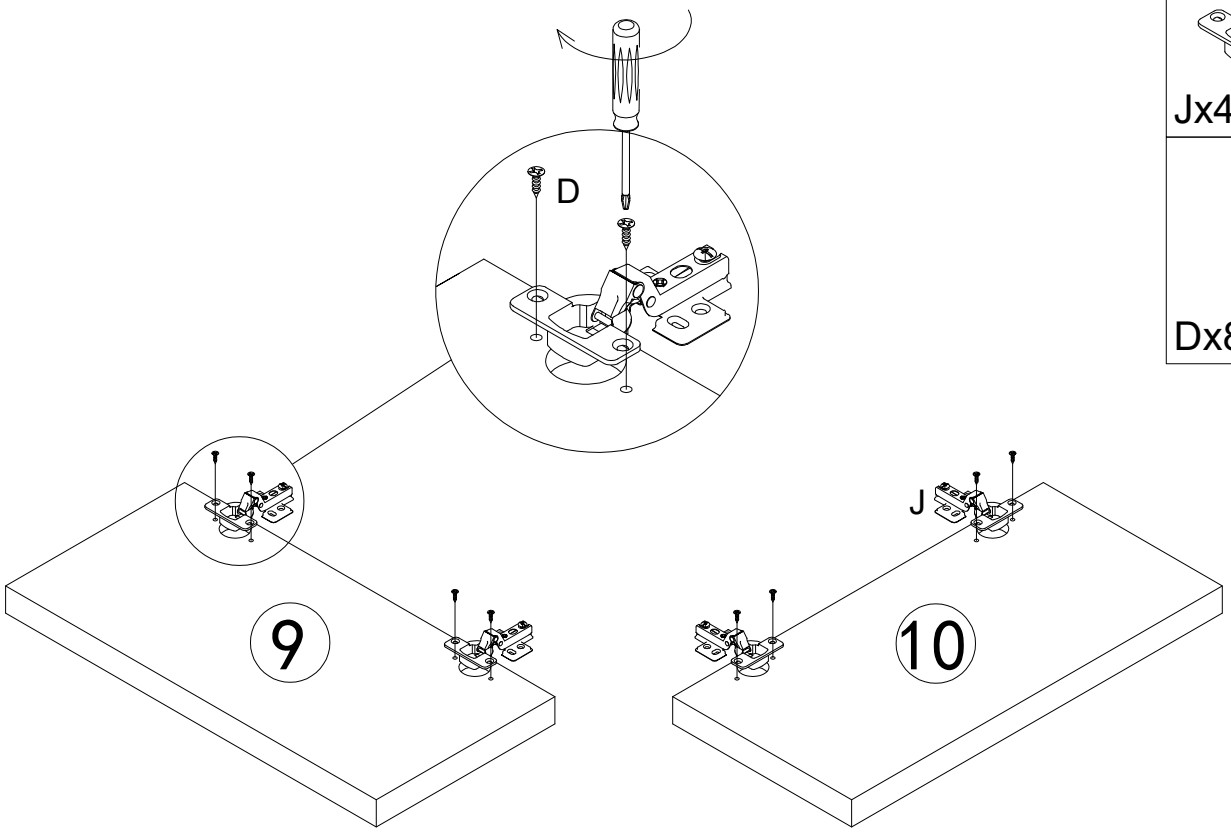


10




4*14


Dx8

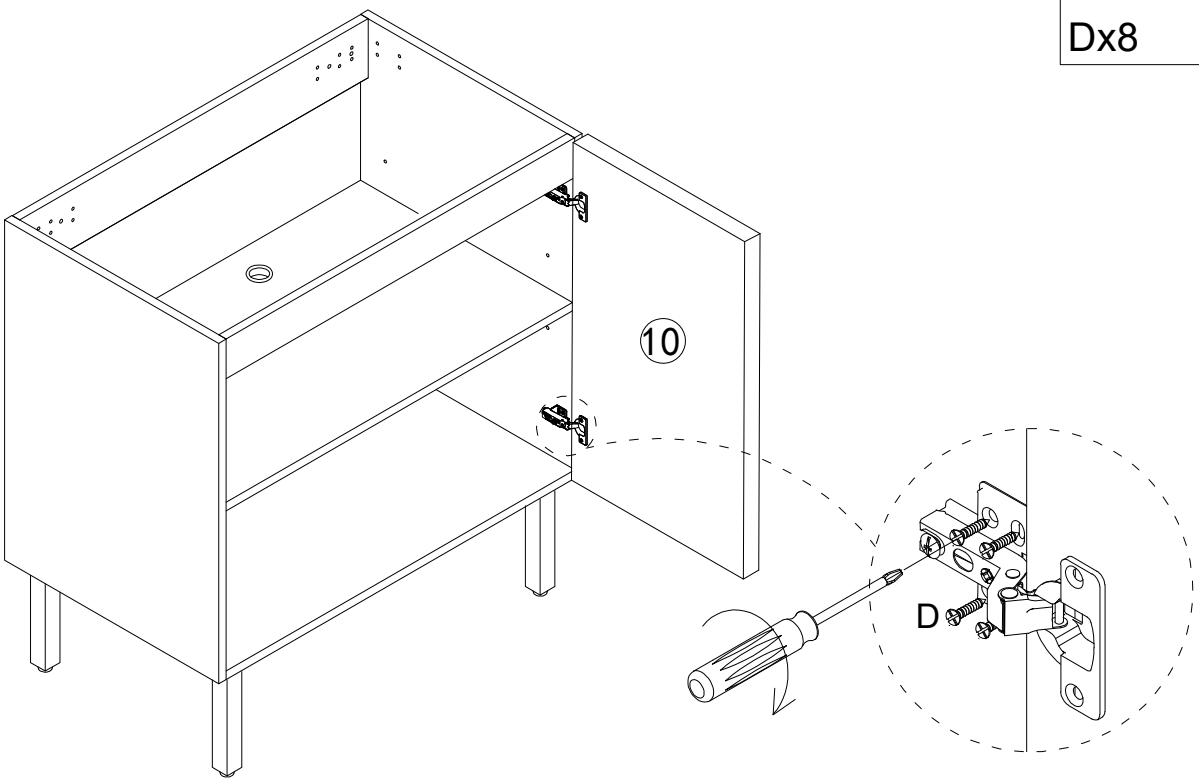


11

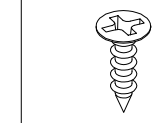


Dx8

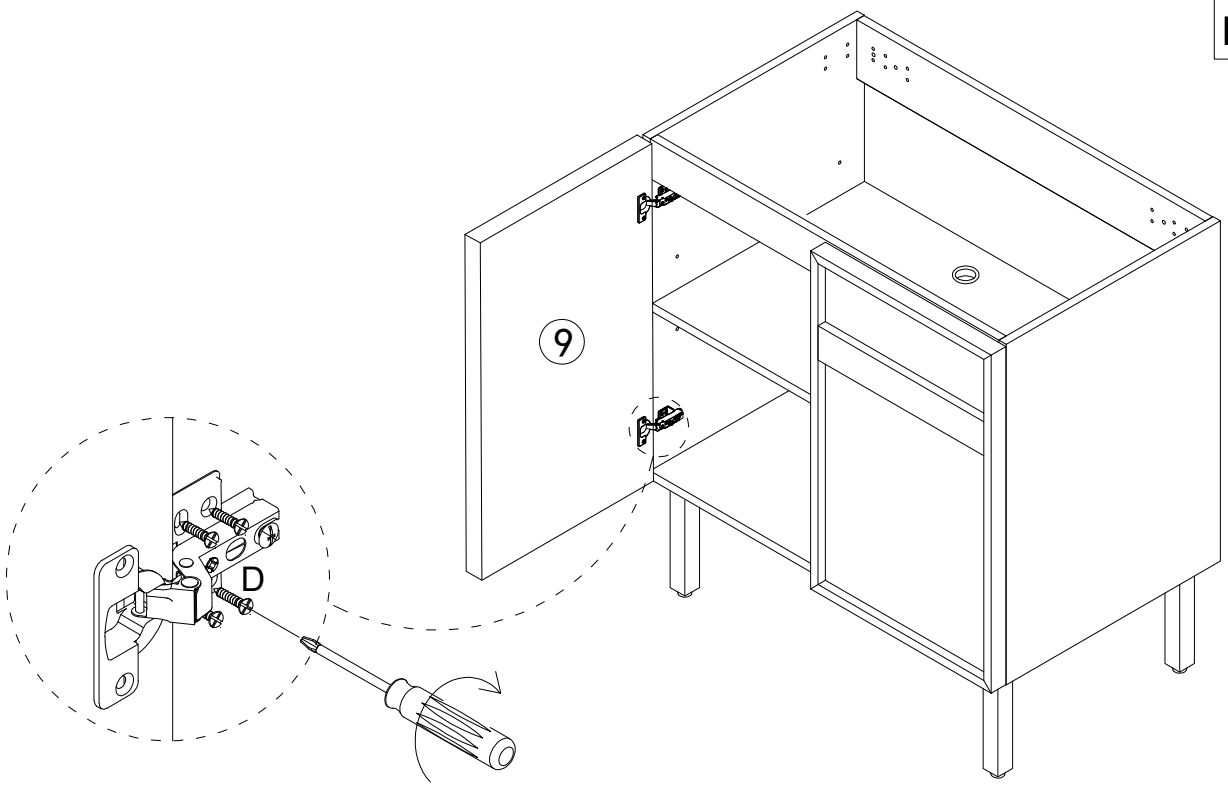


12




Ex20

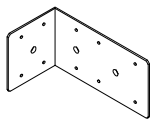

Hx2

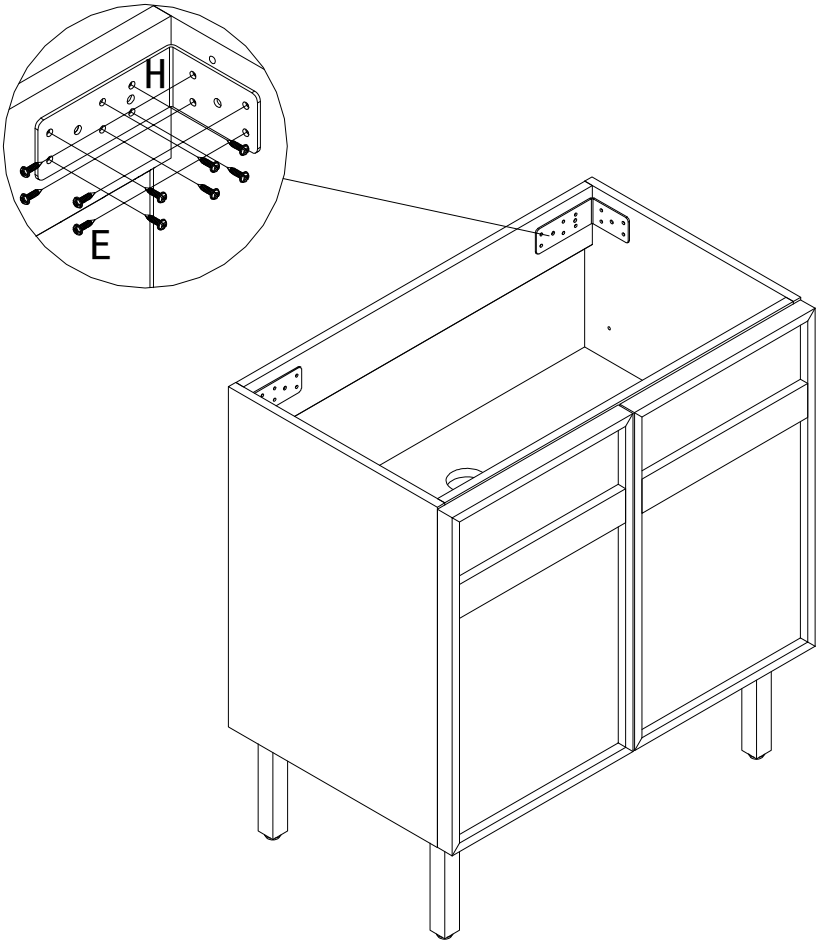



13

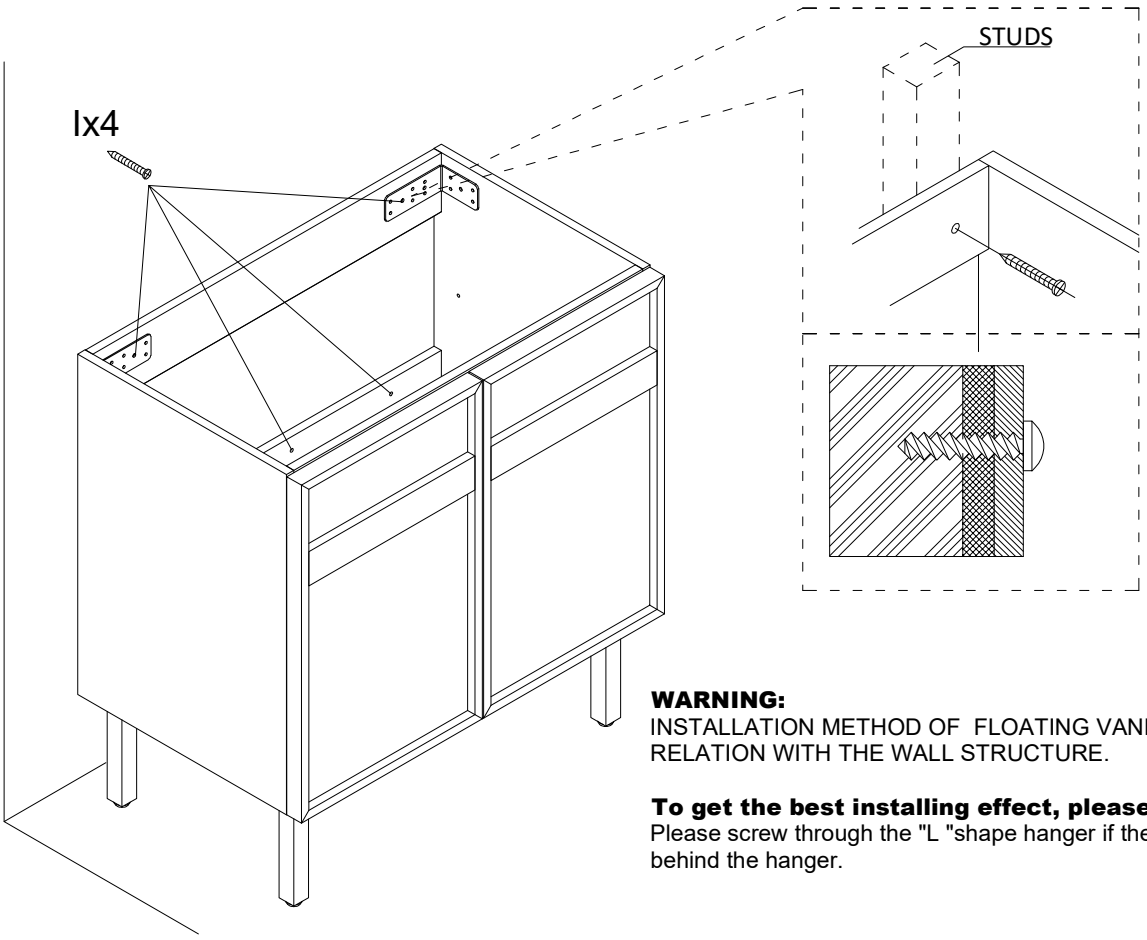


WARNING:
INSTALLATION METHOD OF FLOATING VANITY HAS BIG RELATION WITH THE WALL STRUCTURE.

To get the best installing effect, please follow as below:
Please screw through the "L "shape hanger if there is exactly wall stub behind the hanger.

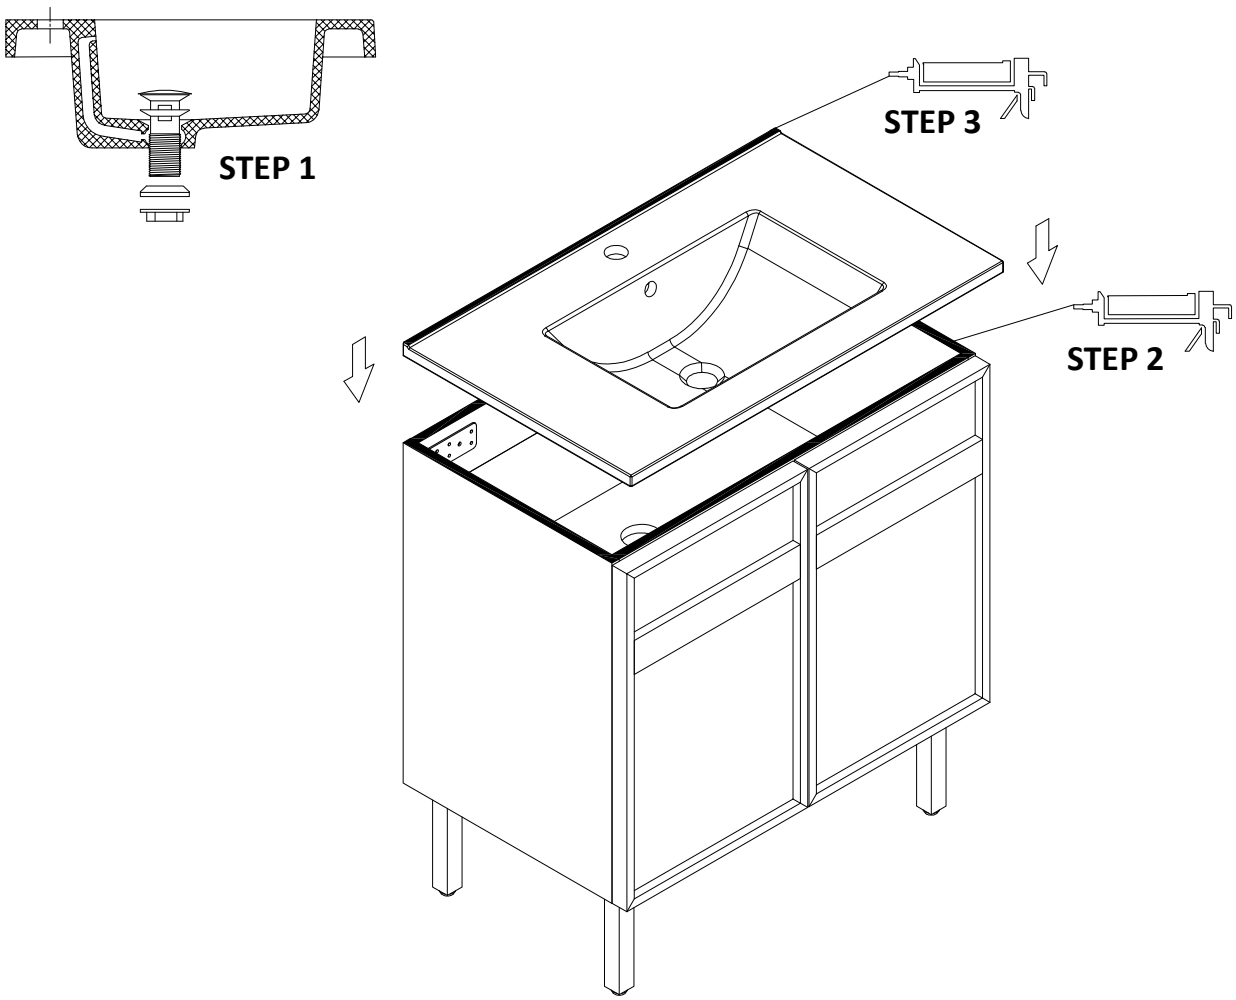


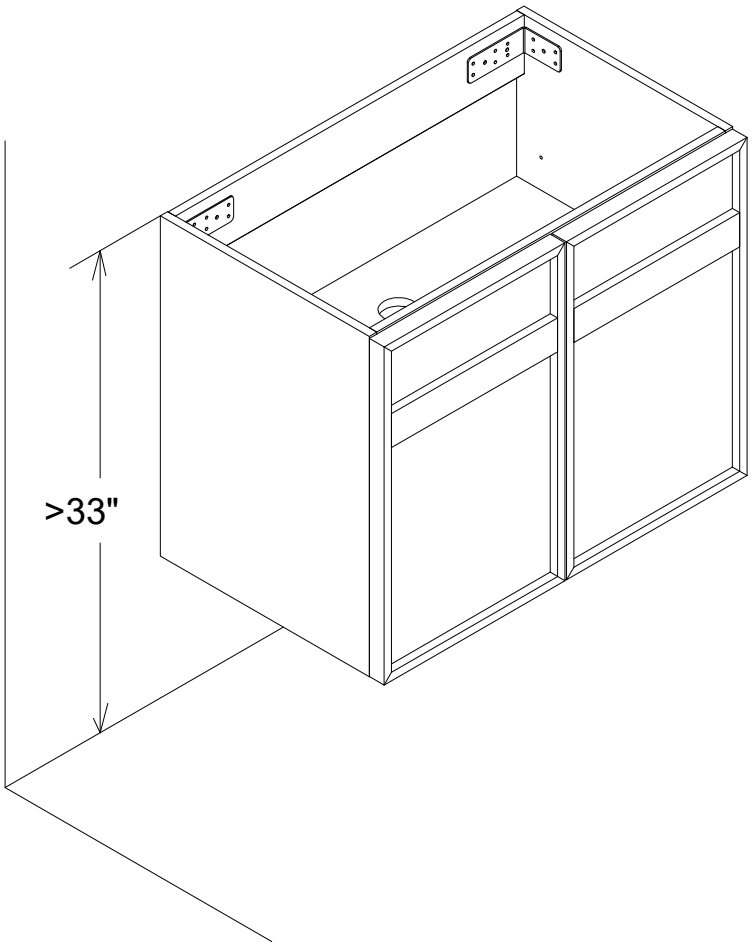


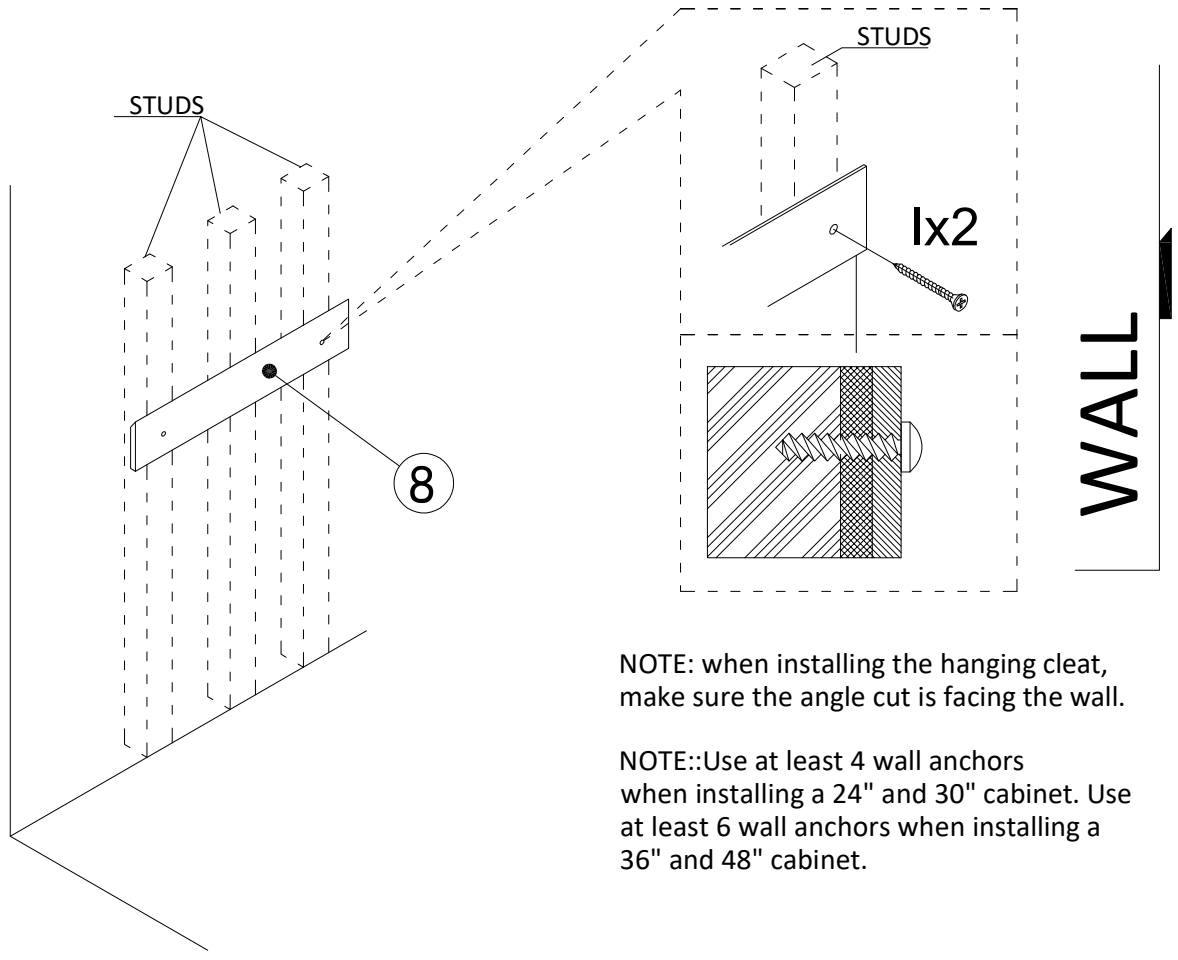



NOTE: when installing the hanging cleat, make sure the angle cut is facing the wall.


NOTE::Use at least 4 wall anchors when installing a 24" and 30" cabinet. Use at least 6 wall anchors when installing a 36" and 48" cabinet.

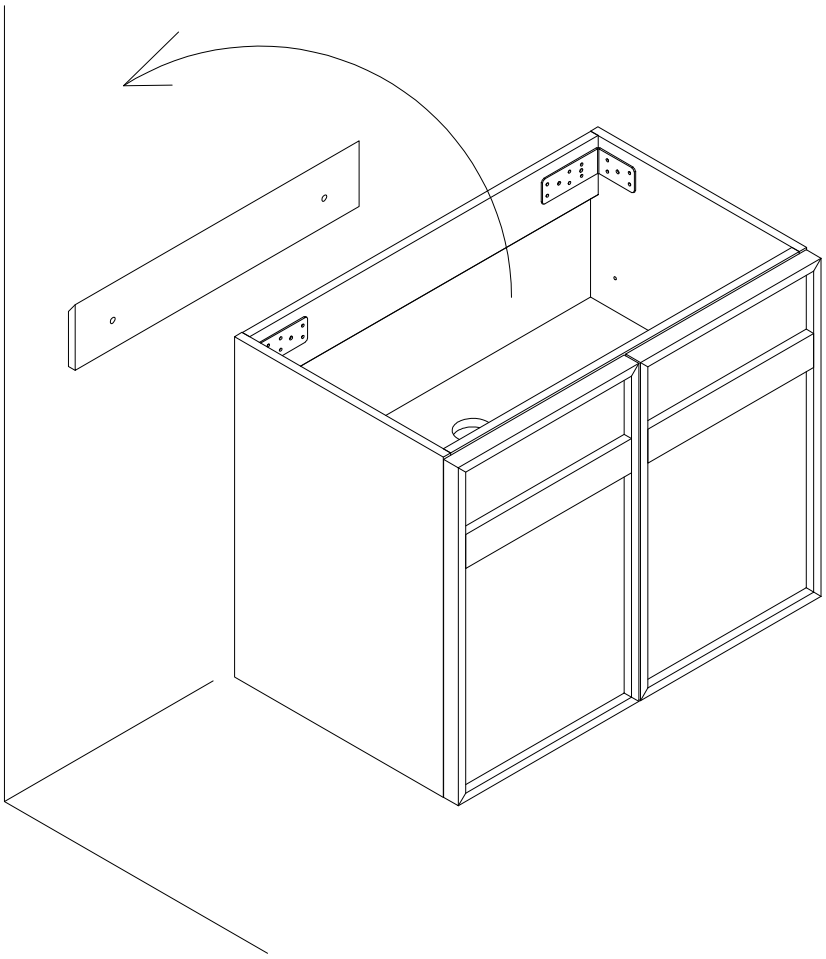

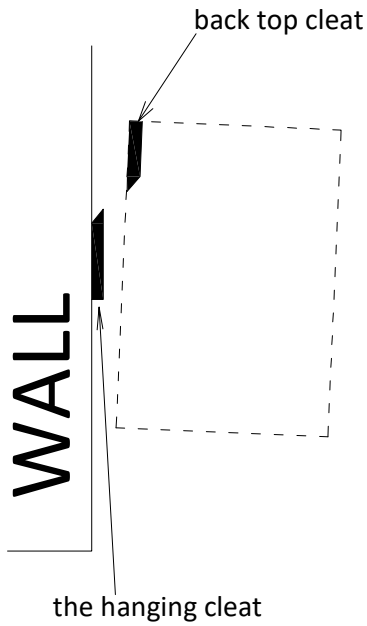

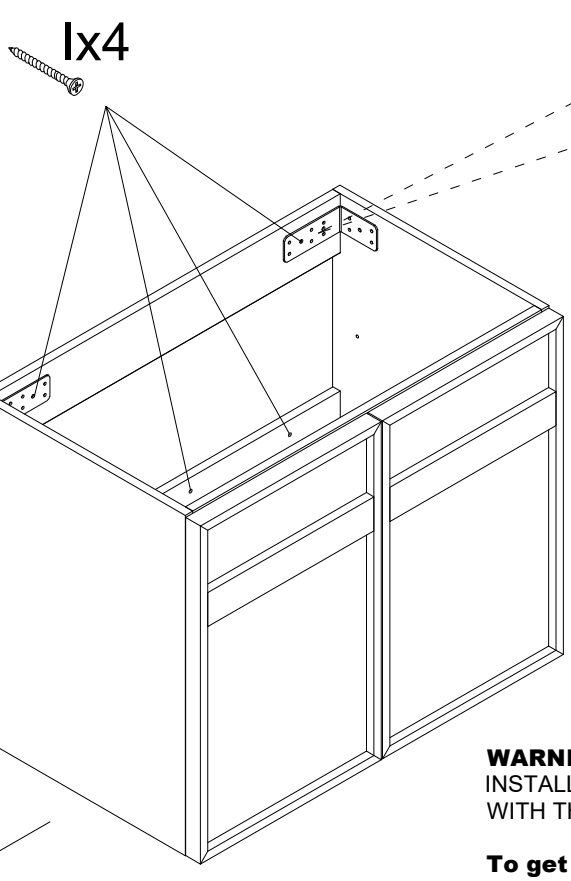


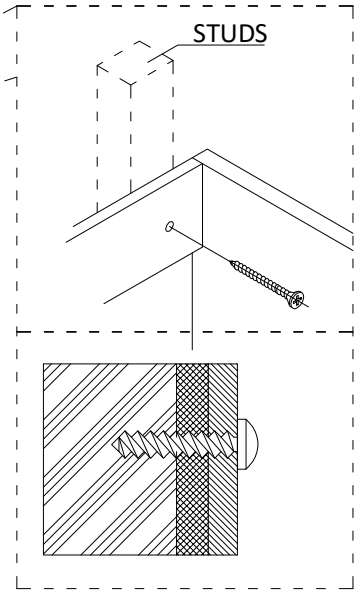



WARNING:
INSTALLATION METHOD OF FLOATING VANITY HAS BIG RELATION WITH THE WALL STRUCTURE.

To get the best installing effect, please follow as below:
Please screw through the "L "shape hanger if there is exactly wall stub behind the hanger.

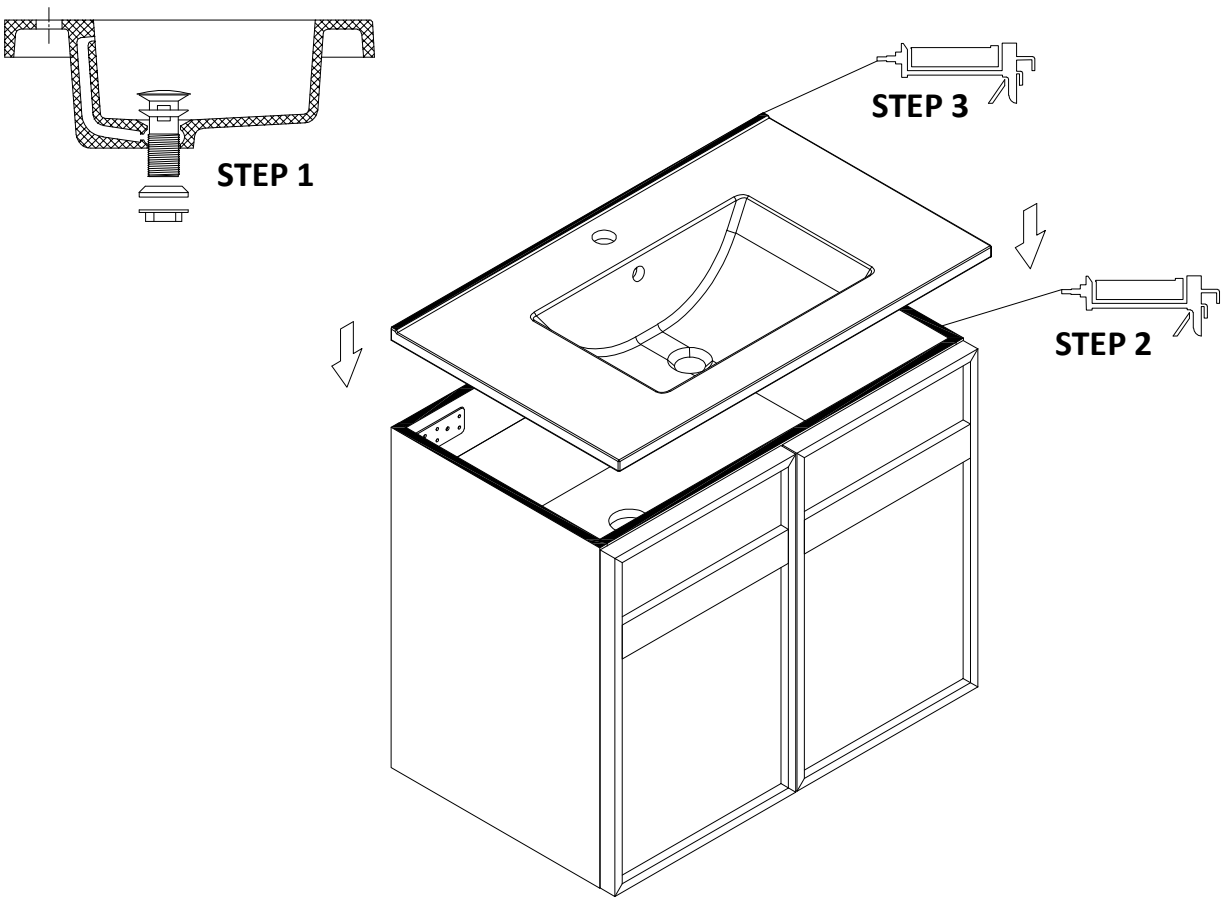

HINGE/DOOR ADJUSTMENT（IF APPLICABLE）

The door alignment was set in the factory, but it could have shiftedduring transit.If adjustment is needed, follow the instructionsprovided in chart below.

