


METAL BED











SIZE:QUEEN








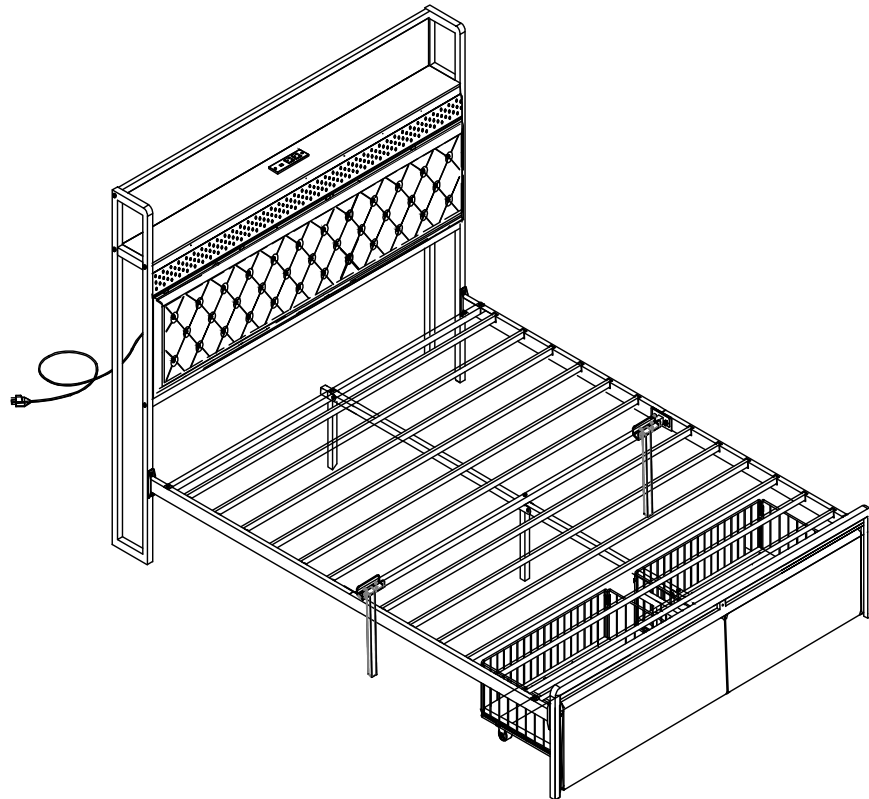


















DEAR CUSTOMER,

Thank you for choosing our product. Please read this manual carefully before assembling or using the product, to avoid damage caused by improper use. If the product is passed on to third parties, this manual has to be passed on along with the product. For any question don't hesitate to contact us.

PARTS LIST

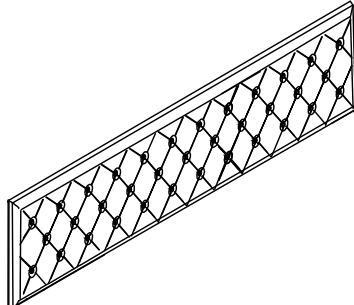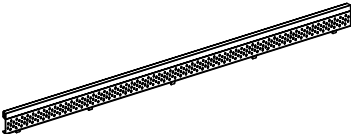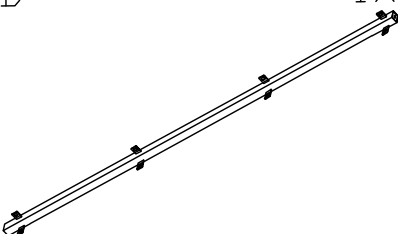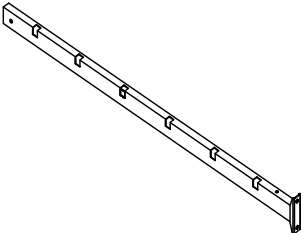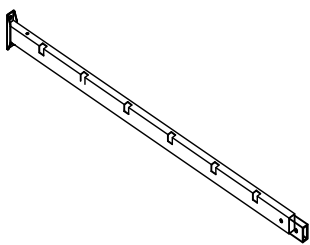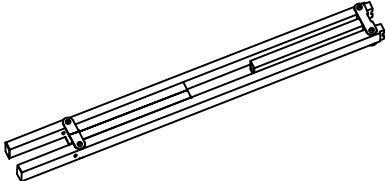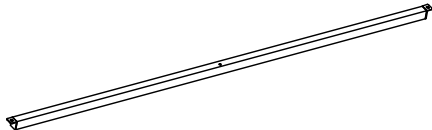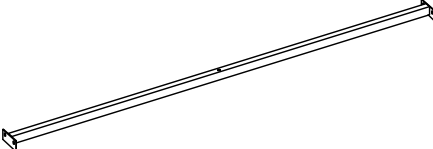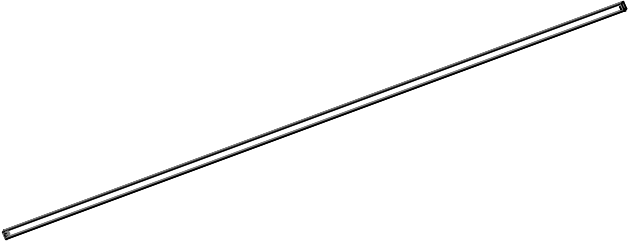
A	2×	B	1×	C	1×
					
		D	1×	E	2×
					
F	2×	G	1×		
					
H	2×	I	1×		
					
J	2×	K	12×		
					

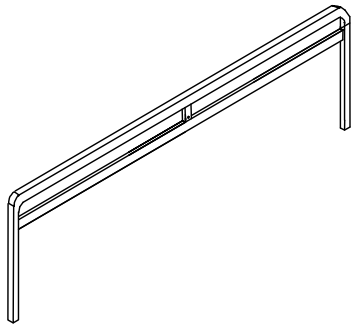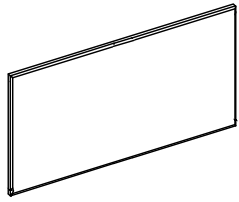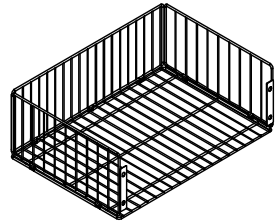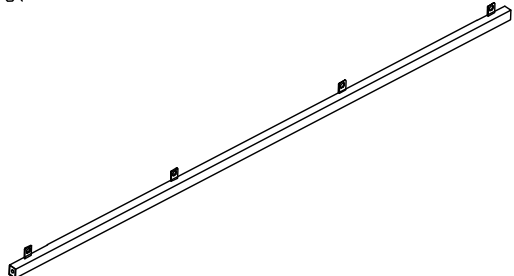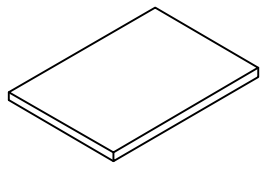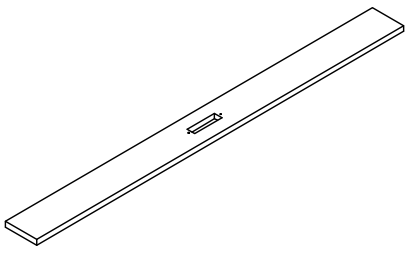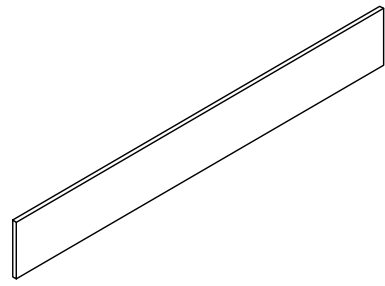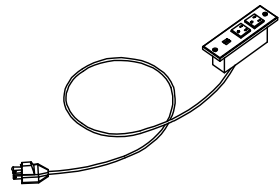L 	1x M 2x 
N 	2x Q 2x 
S 	2x T 1x 
U 	1x V 1x 

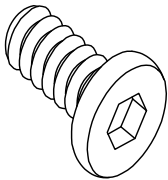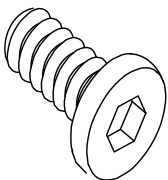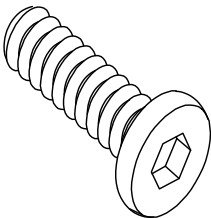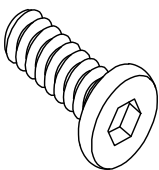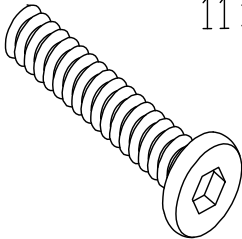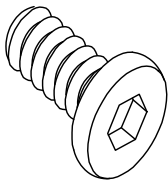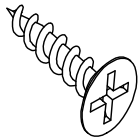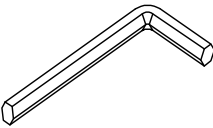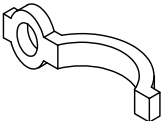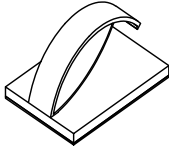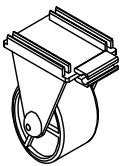1	34×	2	4×	3	4×	4	4×
							
1/4" x 13mm		M 8 x 13mm		M 8 x 19mm		1/4" x 25mm	
5	11×	6	8×	7	10×	8	1×
							
1/4" x 50mm		1/4" x 16mm		Ø 3.5 x 12mm		M 5	
9	1×	10	4 ×	11	2×	12	24×
							
M4							
13		14		15			
							
X8		X2		X1	X1	X1	
16	8×						
							





Parts Identification

Not actual size




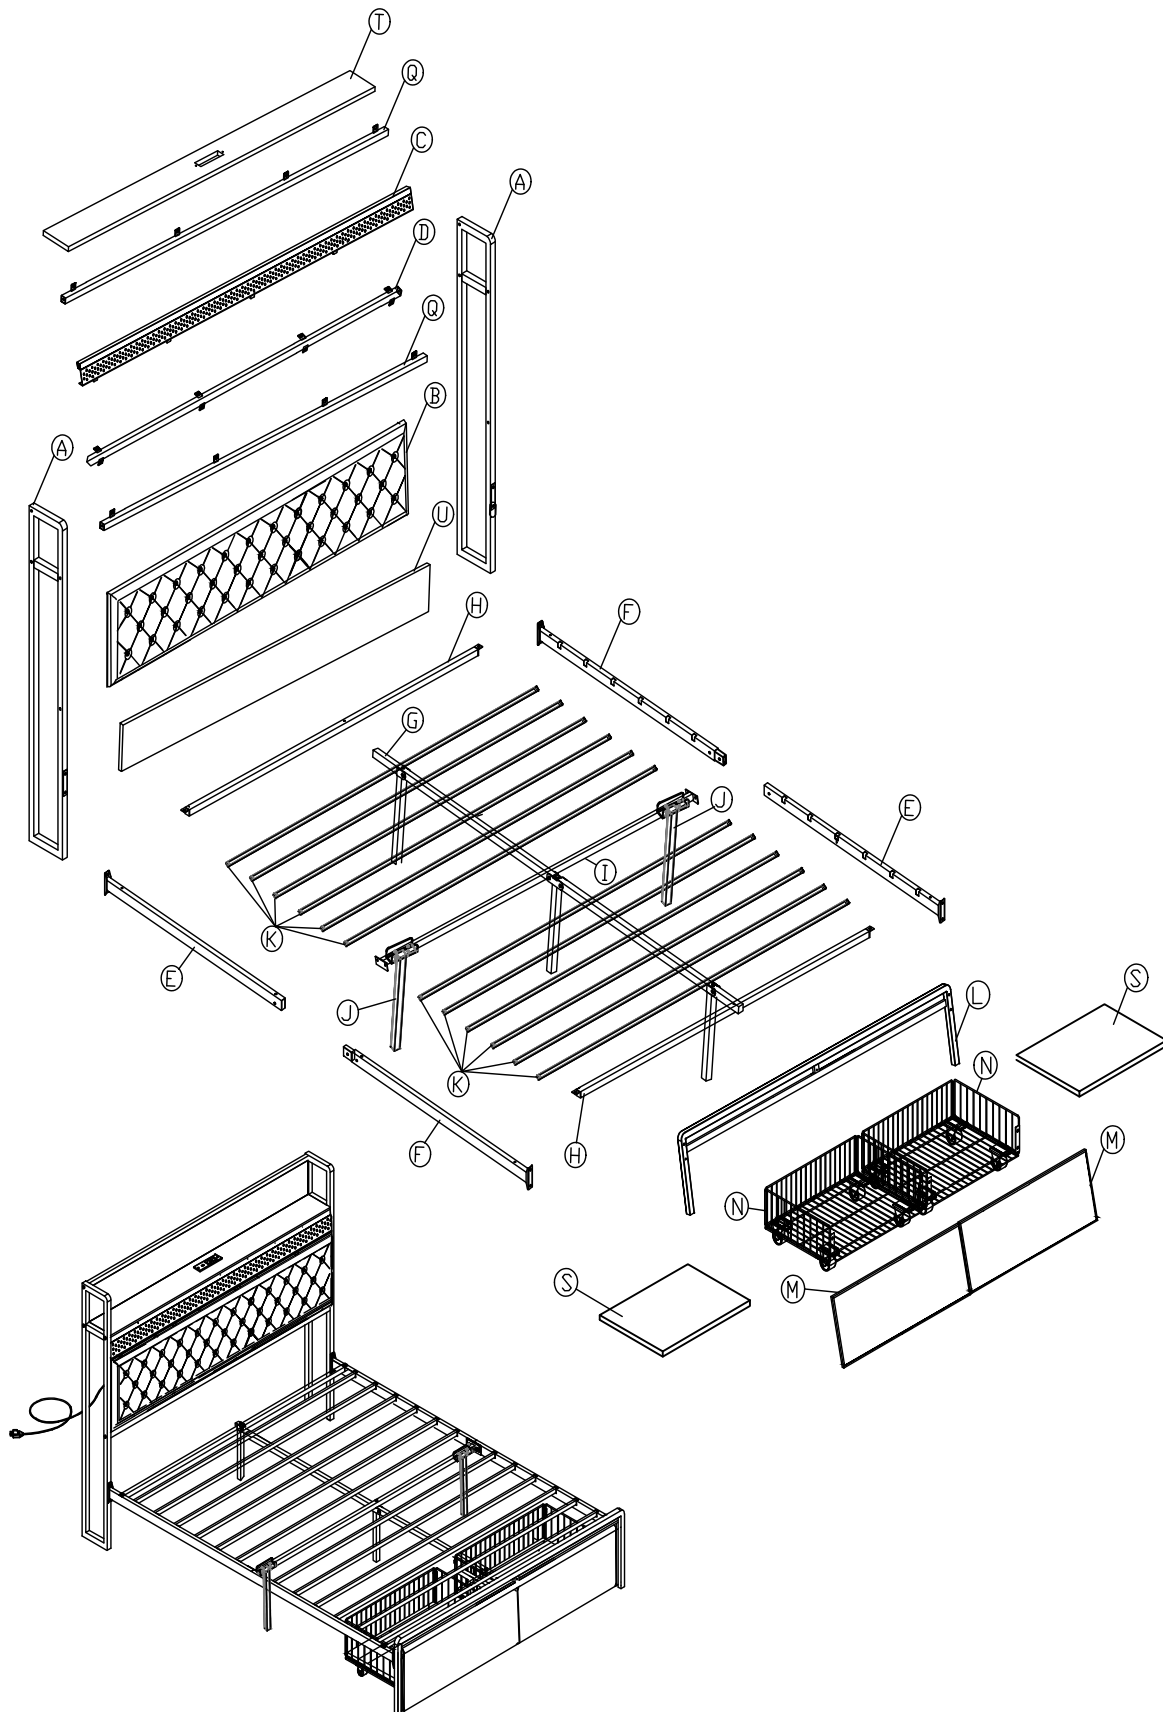


ASSEMBLY





Before your installation, please make sure that you have all the parts listed on the manual. If you find something missing, stop installing and contact your supplier immediately. (Pls do not tighten all bolts until the bed is assembled completely.)

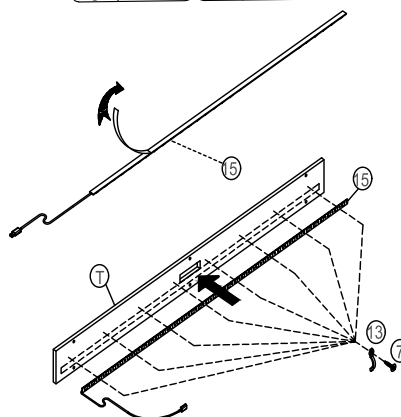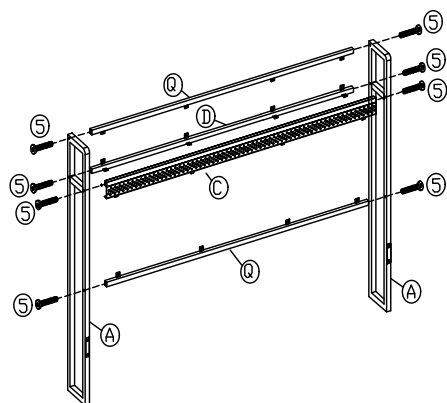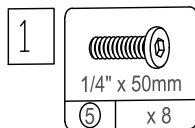


Stick lamp belt underneath ①
You can use the extra clips ⑬ to reinforce the lamp belt.

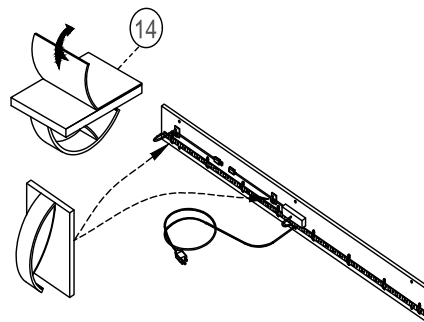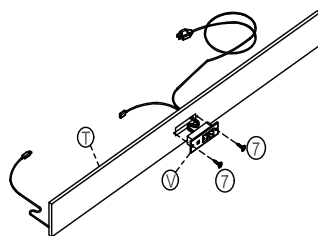




Connect lamp belt to USB plug,
Stick ⑭ underneath ①, then buckle the lines.

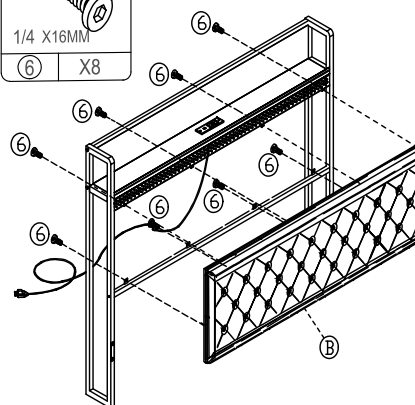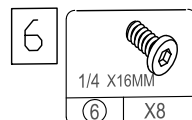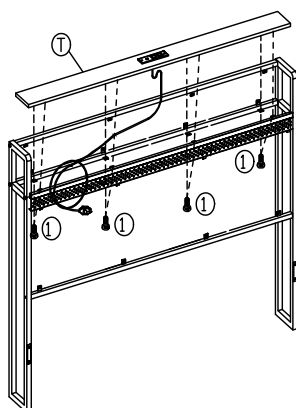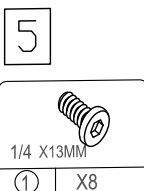



5

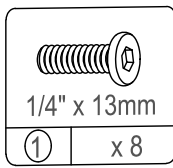



6

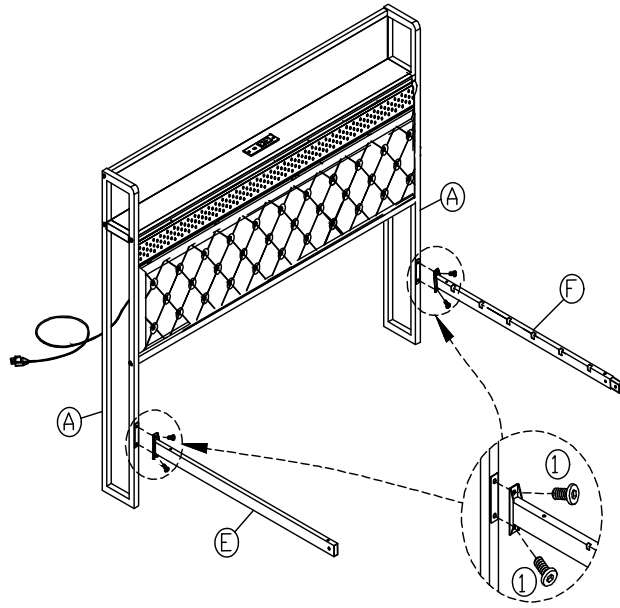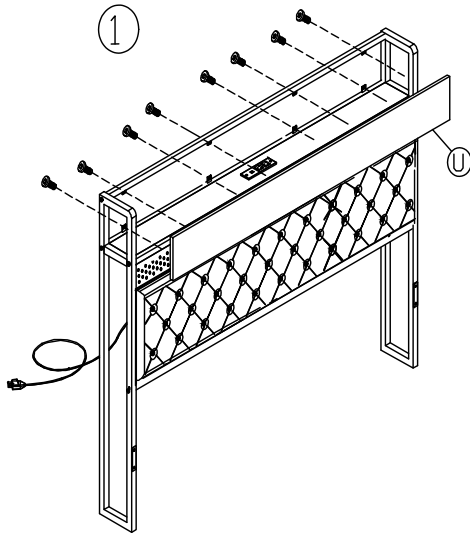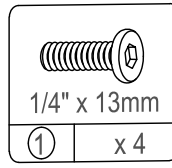


7

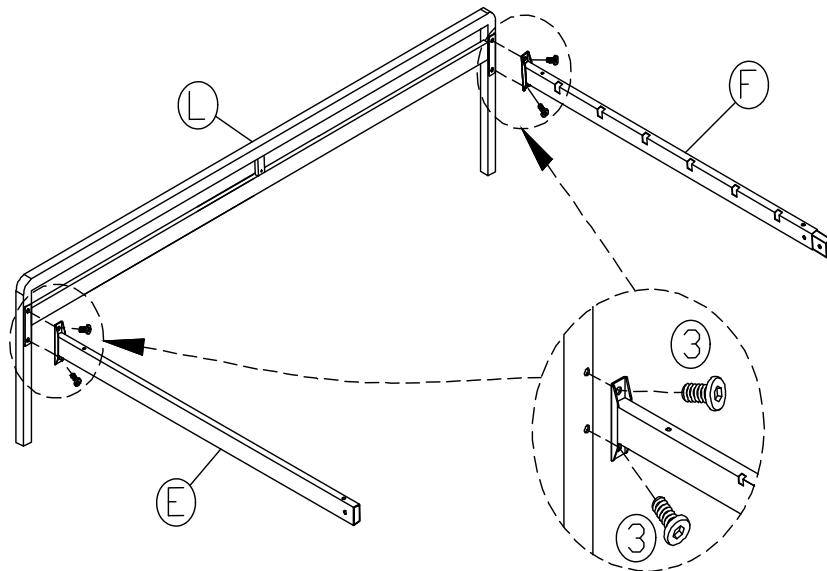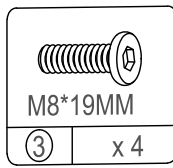

9

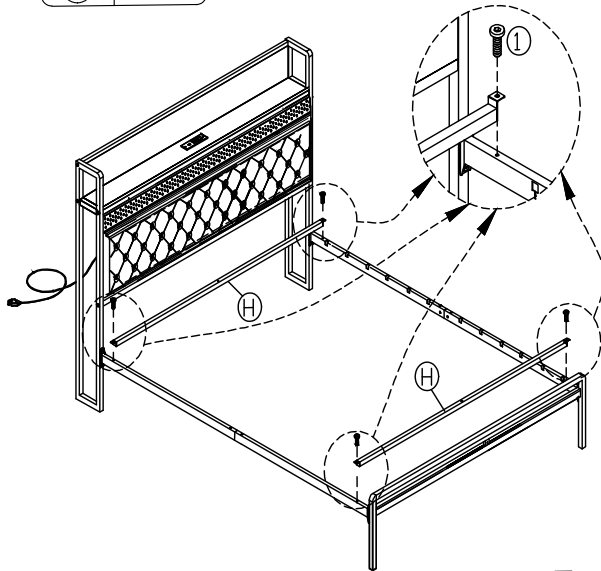
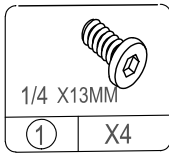


10


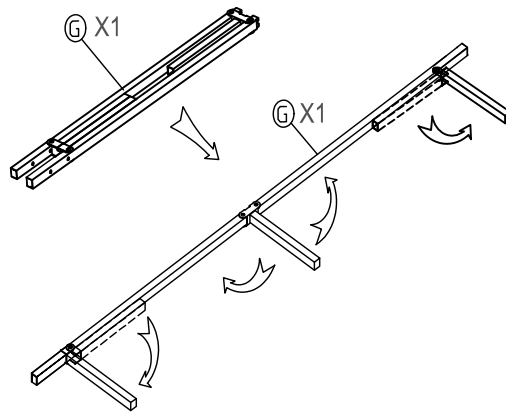


Expand the folded portion


11

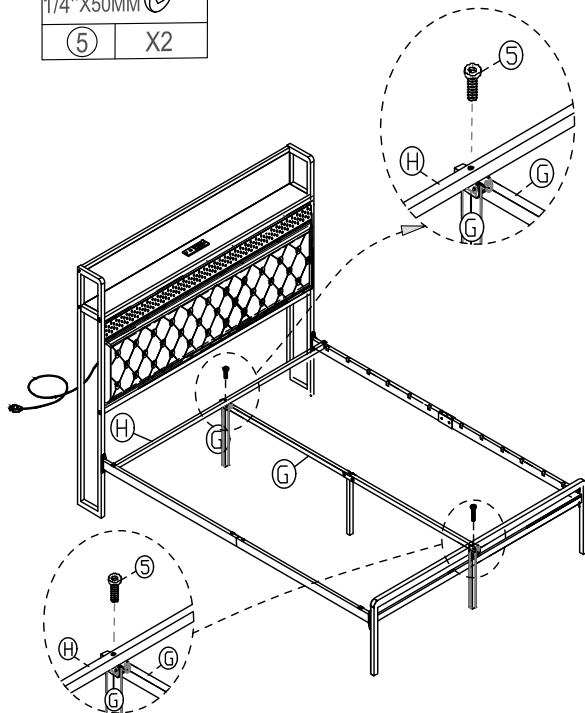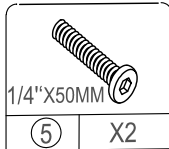


12

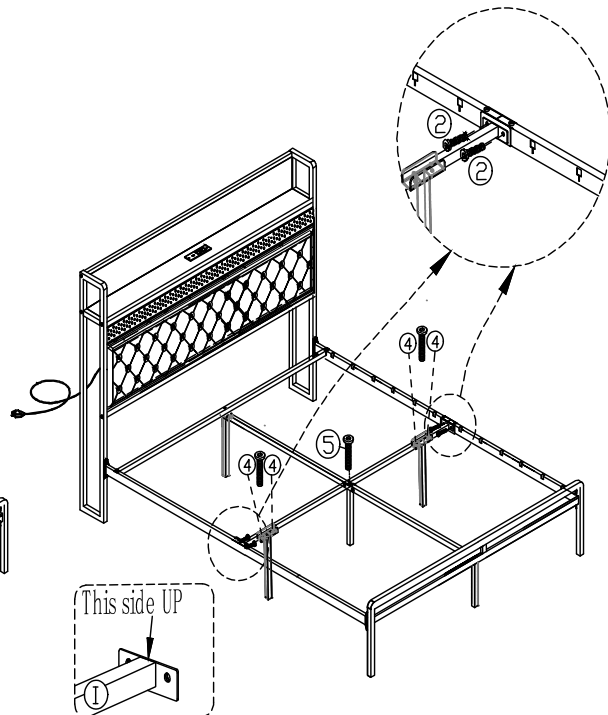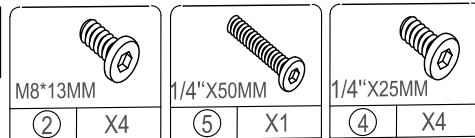


Assemble the slats

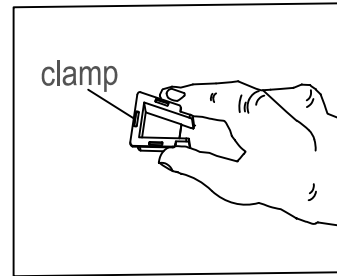


1. Squeeze the clamp(10) tightly.

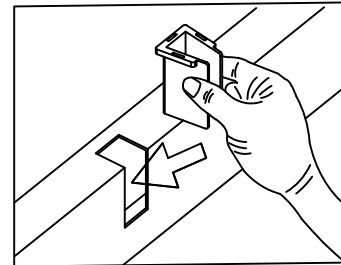


2. Put the clamp into the gaps.

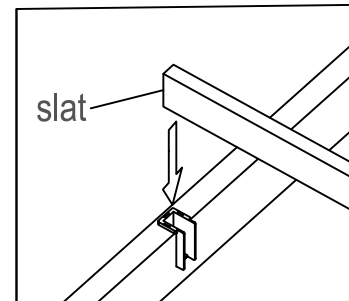

3. Put the slat into the clamp.

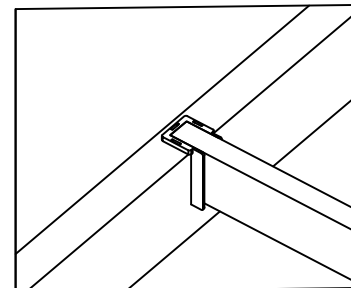


4. Finished .

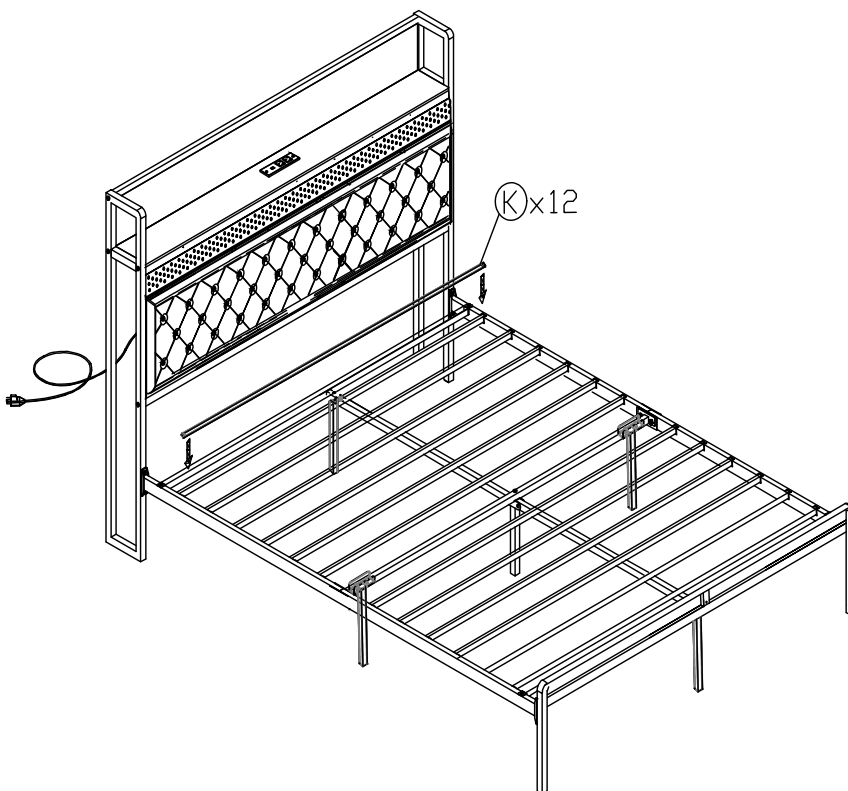



15

Expand the drawer frame

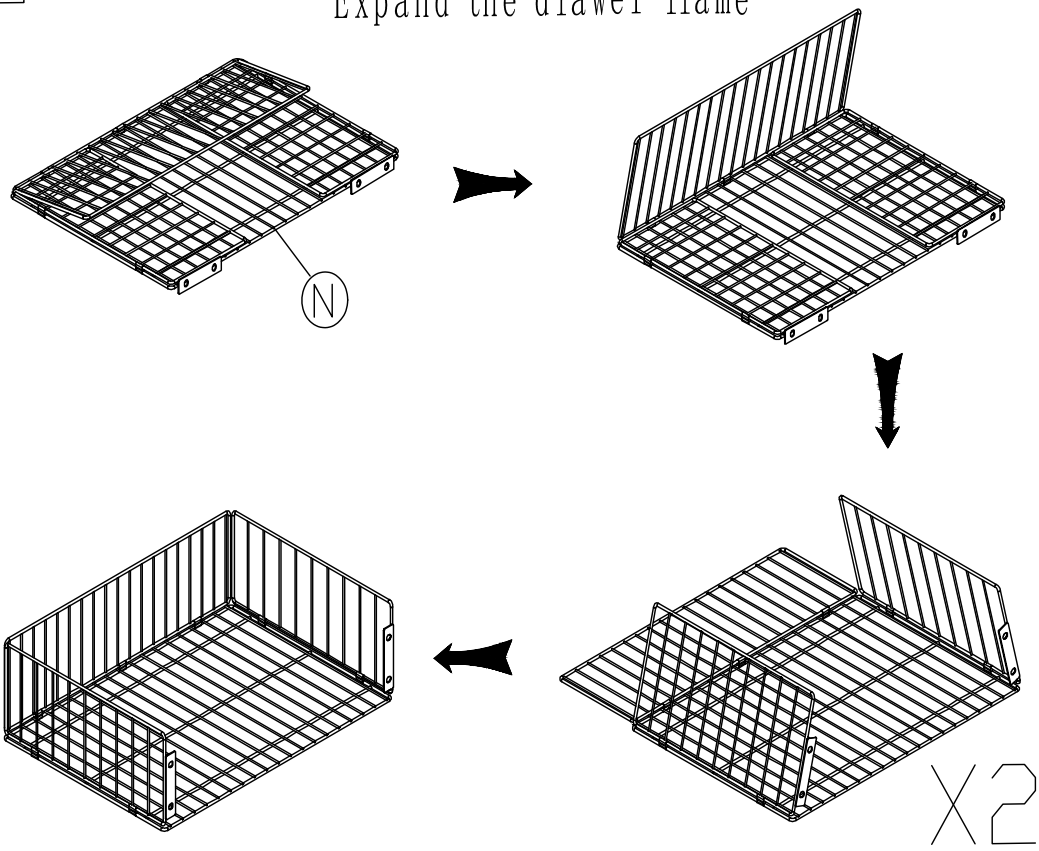

16

17

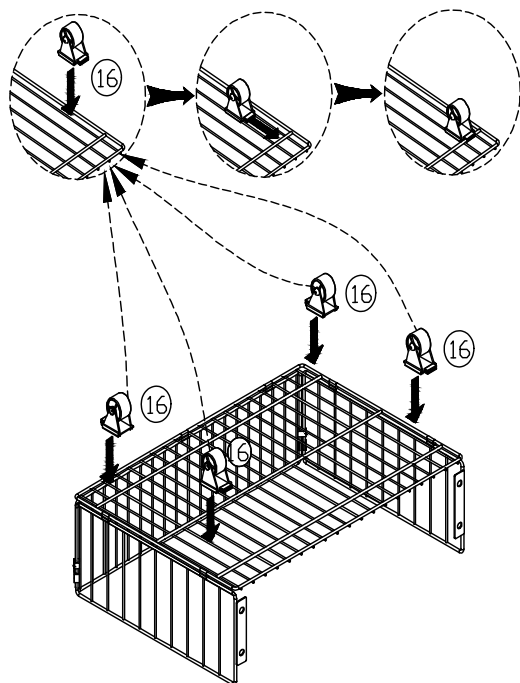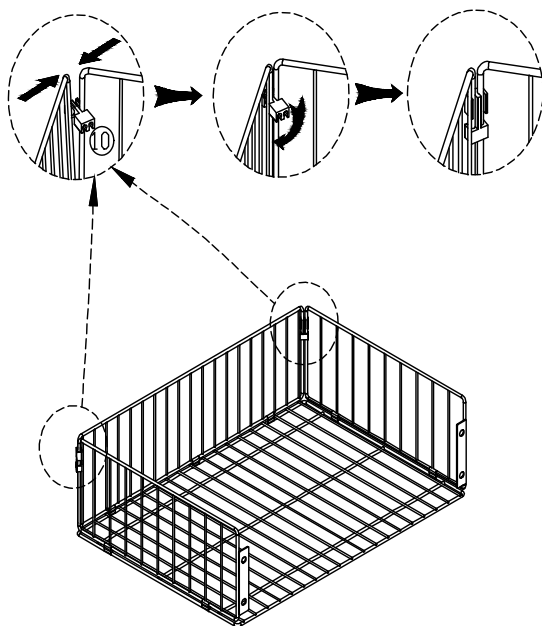

X2

X2

