

ASSEMBLY INSTRUCTION

QUEEN BED

(BOX 1) BOX OF HEADBOARD

NO	ITEM	QTY
A	HEADBOARD LEFT PANEL	1
B	HEADBOARD RIGHT PANEL	1

(BOX 2) BOX OF FOOTBOARD

NO	ITEM	QTY
C	FOOTBOARD	1

(BOX 3) BOX OF SIDE RAIL

NO	ITEM	QTY
D	SIDE RAILS	2
E	BED SLATS	5
F	BED SLATS SUPPORT	5
G	CONSOLE PANEL	5

(BOX 1) HARDWARE LIST

NO	ITEM	QTY
1	ALLEN WRENCH	1
2	M5 X 65MM BLK	1
3	JCBC	6
4	M8 X 40MM BLK	6
5	SPRING WASHER	6
6	5/16" BLK	6
7	FLAT WASHER	6
8	5/16"IDX22MMOD BLK	6

(BOX 2) HARDWARE LIST


NO	ITEM	QTY
9	ALLEN WRENCH	1
10	M4 X 65MM BLK	1
11	JCBC	2
12	M6 X 30MM BLK	2
13	SPRING WASHER	2
14	1/14" BLK	2
15	FLAT WASHER	2
16	1/14"IDX19MMOD BLK	2

(BOX 3) HARDWARE LIST

NO	ITEM	QTY
17	ALLEN WRENCH	1
18	M5 X 65MM BLK	1
19	FLAT HEAD SCREW	10
20	M4 X 32MM RBW	10
21	PAN HEAD SCREW	25
22	M3.5 X 20MM BLK	5
23	JCBC	5
24	M8 X 50MM BLK	5

STEP 1

Attach the Headboard LEFT (A) to Headboard RIGHT (B) as shown using JCBC Bolt (2), Spring Washer (3), Flat Washer (4) and fasten with Allen Wrench (1).

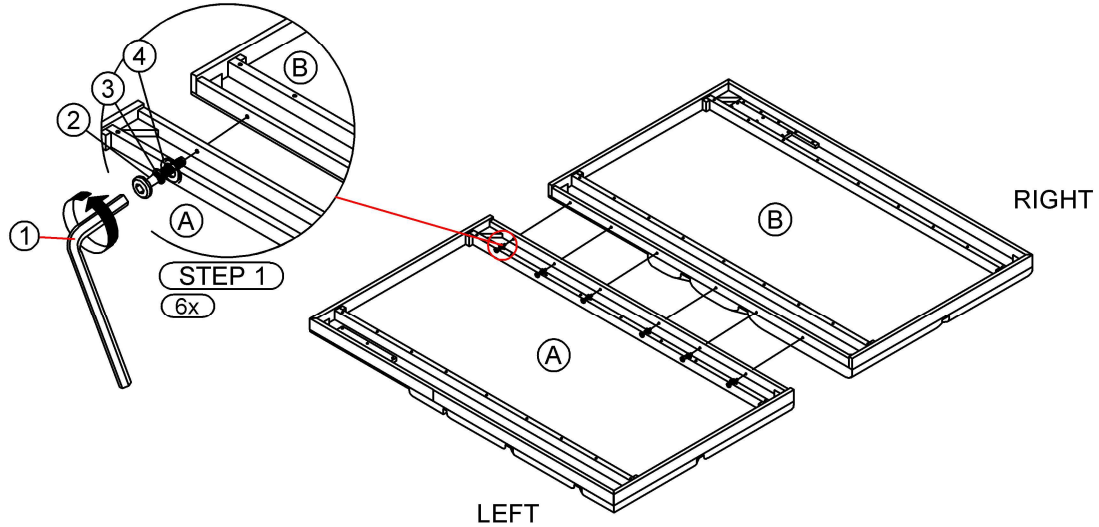


STEP 2

STEP 2:1 loosen the bolt on Headboard L/R (A/B) and Hook the Side Rails (D) to Headboard L/R (A/B) closely and push down to fit.

STEP 2:2 Retighten the bolt using an Allen Wrench (9) as shown. Repeat the same step to hook and retighten onto Footboard (C)

STEP 2:3 Attach the Footboard (C) to Side Rail (D) as shown using JCBC Bolt (6), Spring Washer (7), Flat Washer (8) and fasten with Allen Wrench (5).

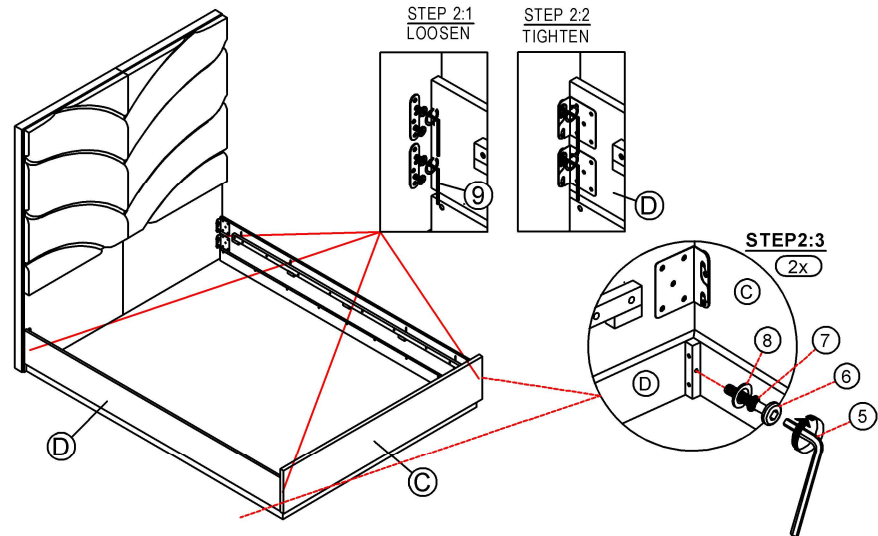



NOTE : MUST TIGHTEN SCREWS PERIODICALLY WITH USE SCREW WILL BECOME LOOSE.CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.
DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED.

ASSEMBLY INSTRUCTION

STEP 3

STEP 3:1 Fix the Bed Slats Support (F) to Bed Slats (E) as Shown using JCBC Bolt (12) and fasten with Allen Wrench (1).

STEP 3:2 Fix the Bed Slats (E) with Bed Slats Support (F) to Side Rail (D) by using Pan Head Screw (10). Bed assembly should be done in final location to ensure stability.

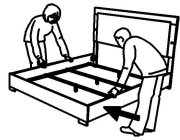
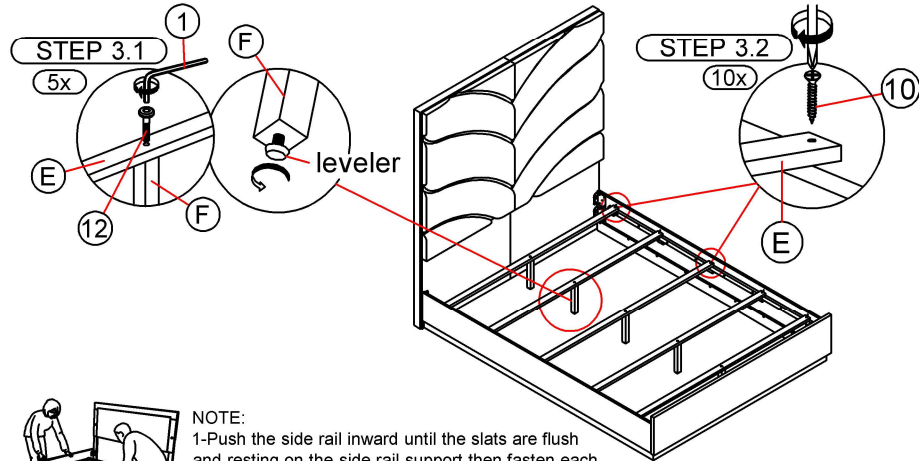


NOTE:

- 1-Push the side rail inward until the slats are flush and resting on the side rail support then fasten each slat to the side rail support using the provided screw.
- 2-The side rail warpage is a temporary condition, it will straighten out once the bed is fully assembled.

STEP 4

STEP 4 Attach Console Panel (G) at the bed slat (E) using Pan head Screw (11) and tighten with Screw Driver.(not Included)

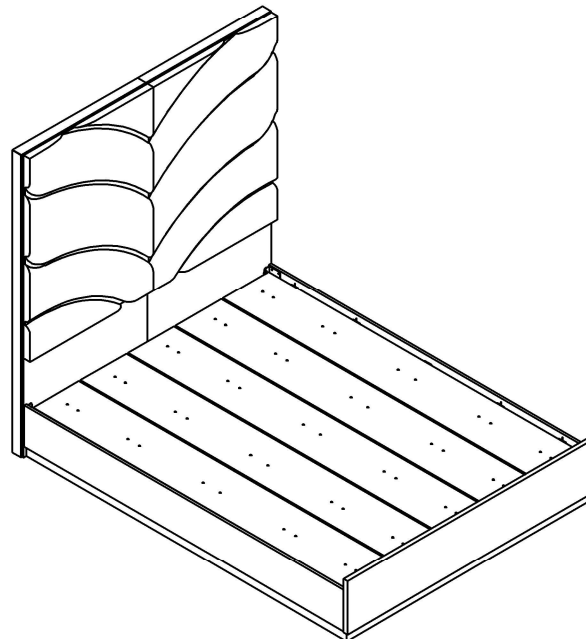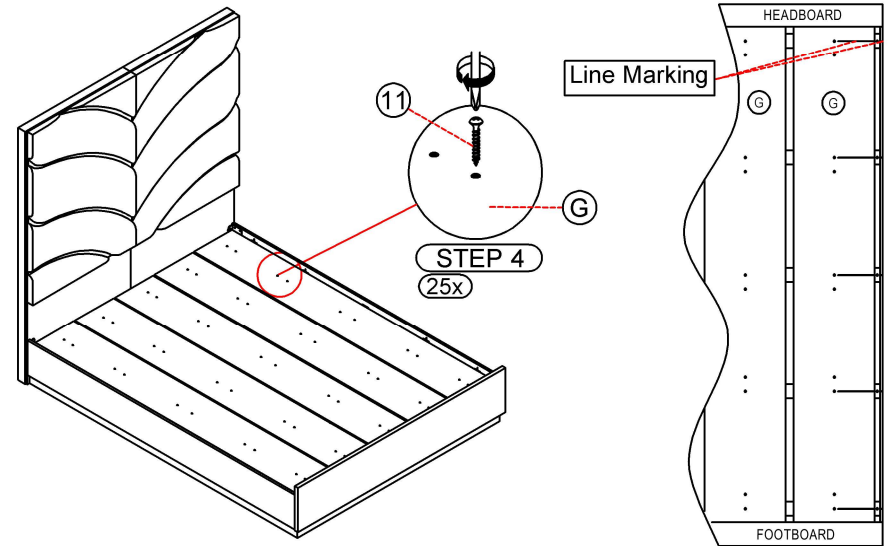

**COMPLETED
ASSEMBLY**

NOTE : MUST TIGHTEN SCREWS **PERIODICALLY** WITH USE SCREW WILL BECOME LOOSE.CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.
DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED.