


Assembly Instruction

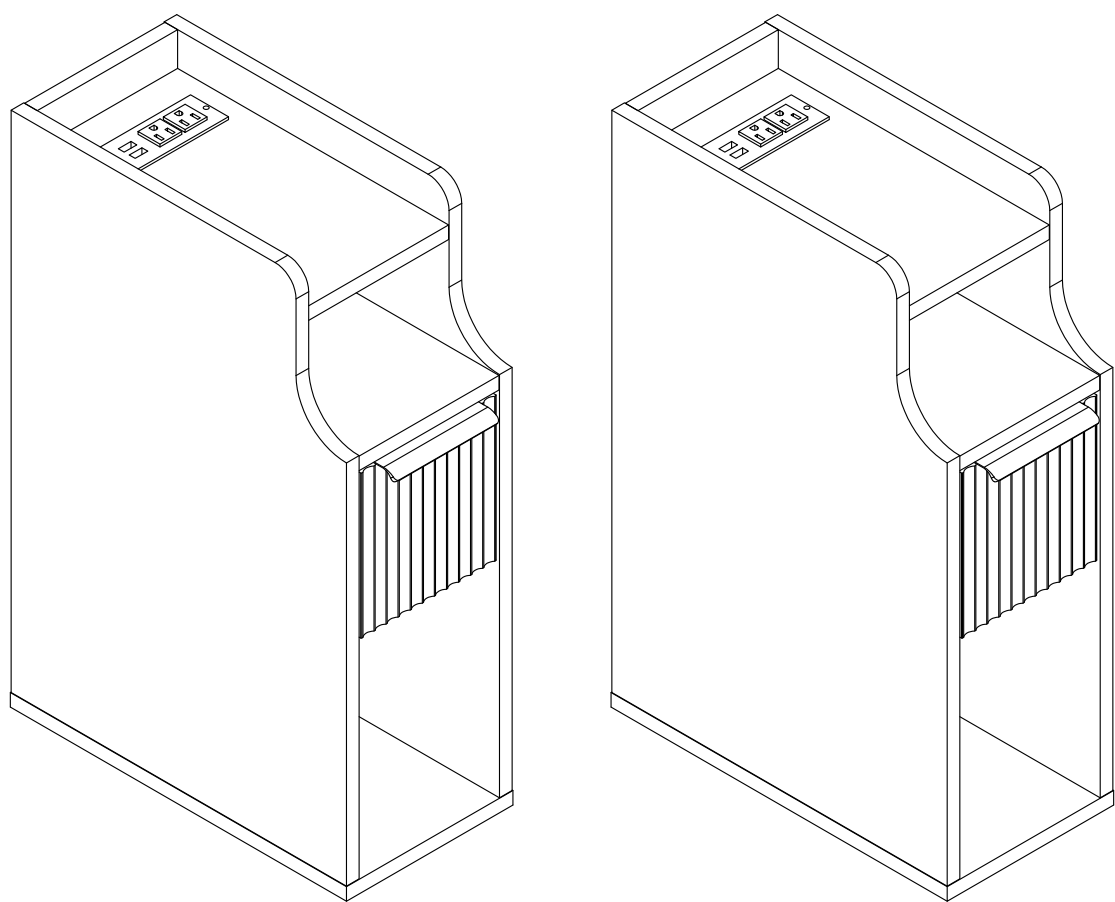

Scan QR Code for Assembly Video












Scan this QR code to watch the step-by-step assembly video.

Follow the video instructions to complete installation quickly and correctly. If you cannot scan the code, please copy and open the YouTube link below in your browser:

<https://youtu.be/KIXjByjflQg>



Keep small parts out of reach of children !

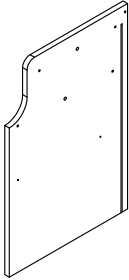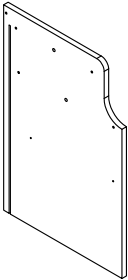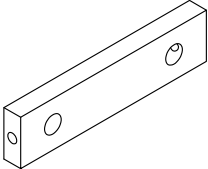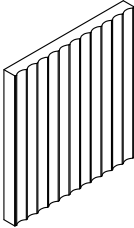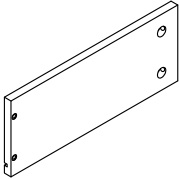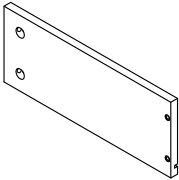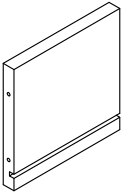① 	② 	③ 	④ 
2PCS	2PCS	2PCS	2PCS
⑤ 	⑥ 	⑦ 	⑧ 
2PCS	2PCS	2PCS	2PCS
⑨ 	⑩ 	⑪ 	⑫ 
2PCS	2PCS	2PCS	2PCS


A	X28	B	X28	C	X28	D	X8	E	X1	F	X10	G	X12	H	X8	I	X2
																	
M6x35mm				M3.5x12mm		M3x16mm		4mm		M5x40mm							
J	X10	K	X2	M	X2	N	X2	O	X2	P	X4	Q	X8	L	X2	R	X2
																	
M4x35mm						M4x12mm								CL DL		DL CR	

Cam Lock Fastening System


Insert the cam bolt into the hole first,then insert the cam lock and lock it.

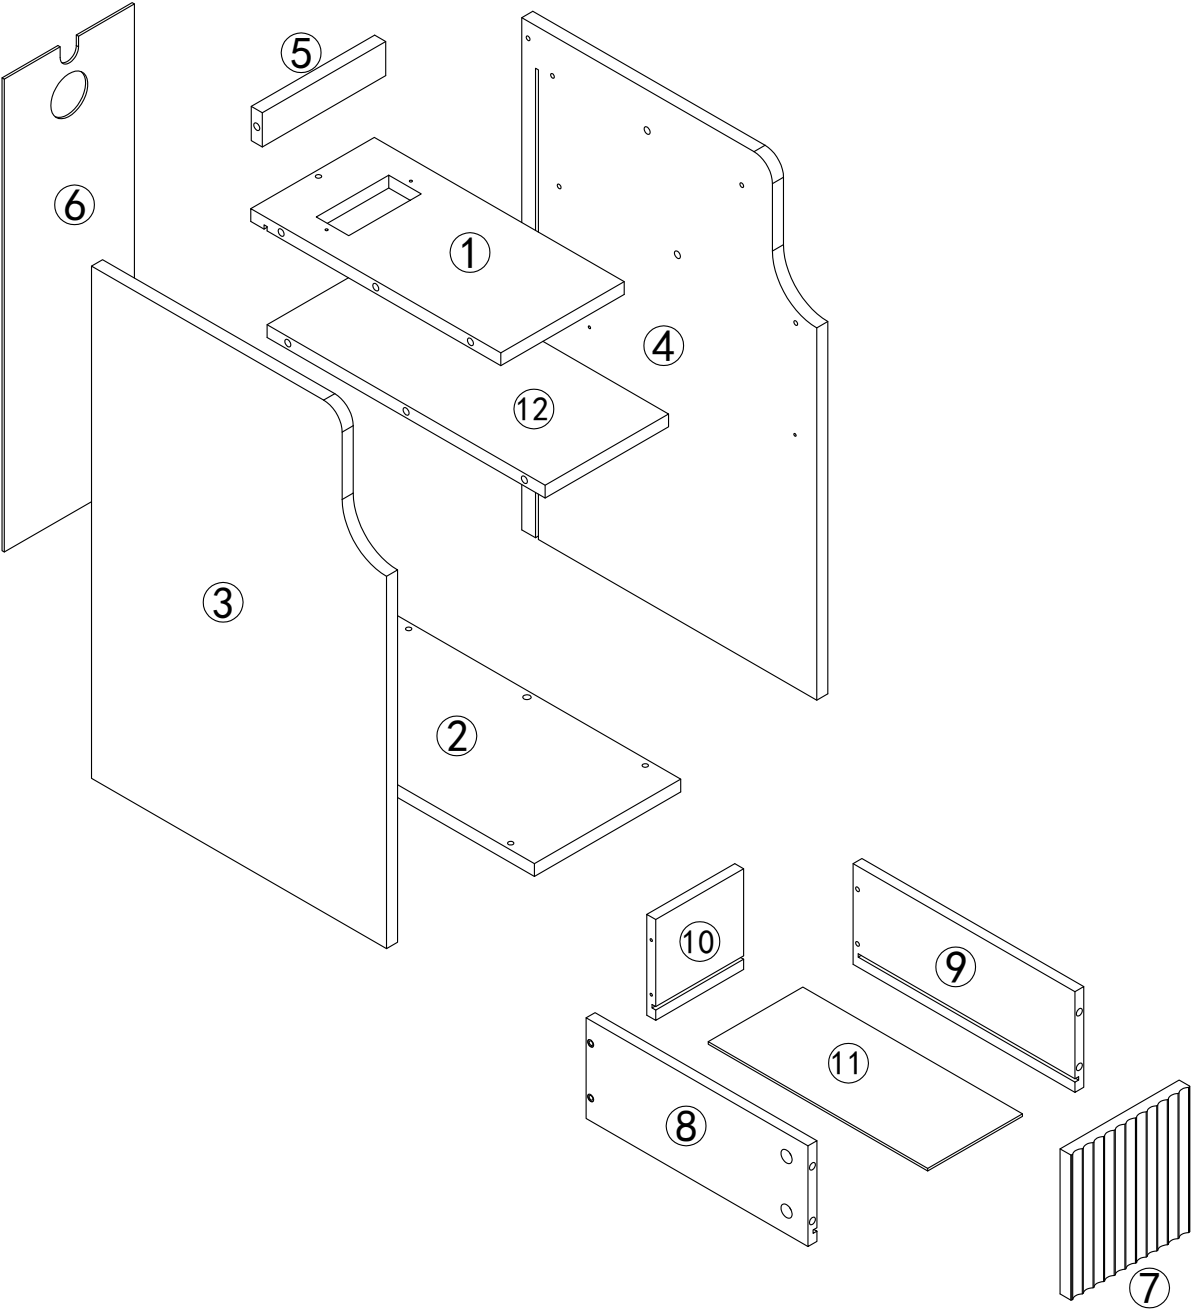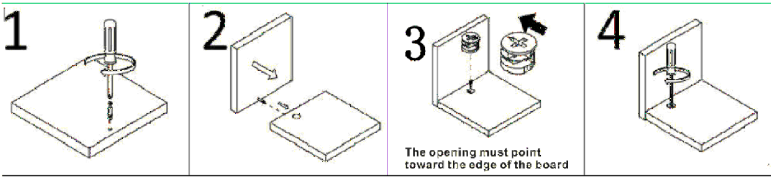


1

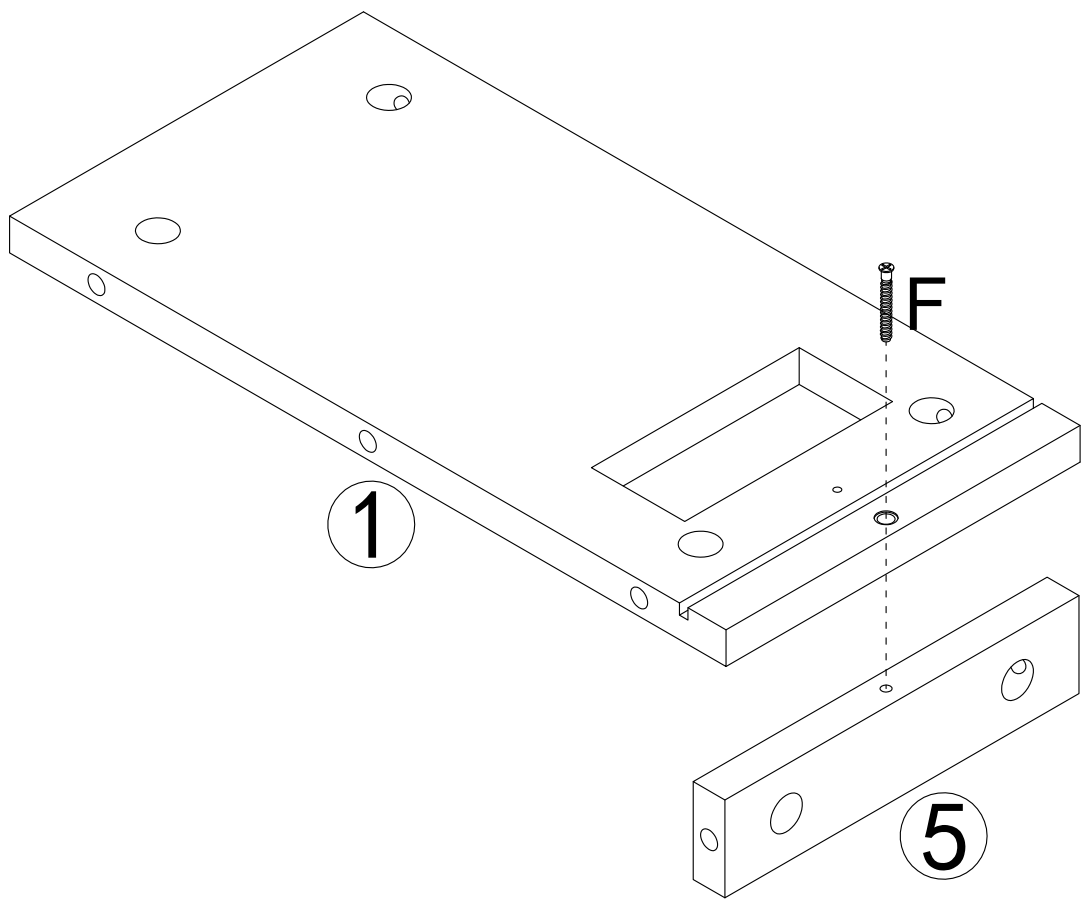


X2

F	X2
	
M5x40mm	

2

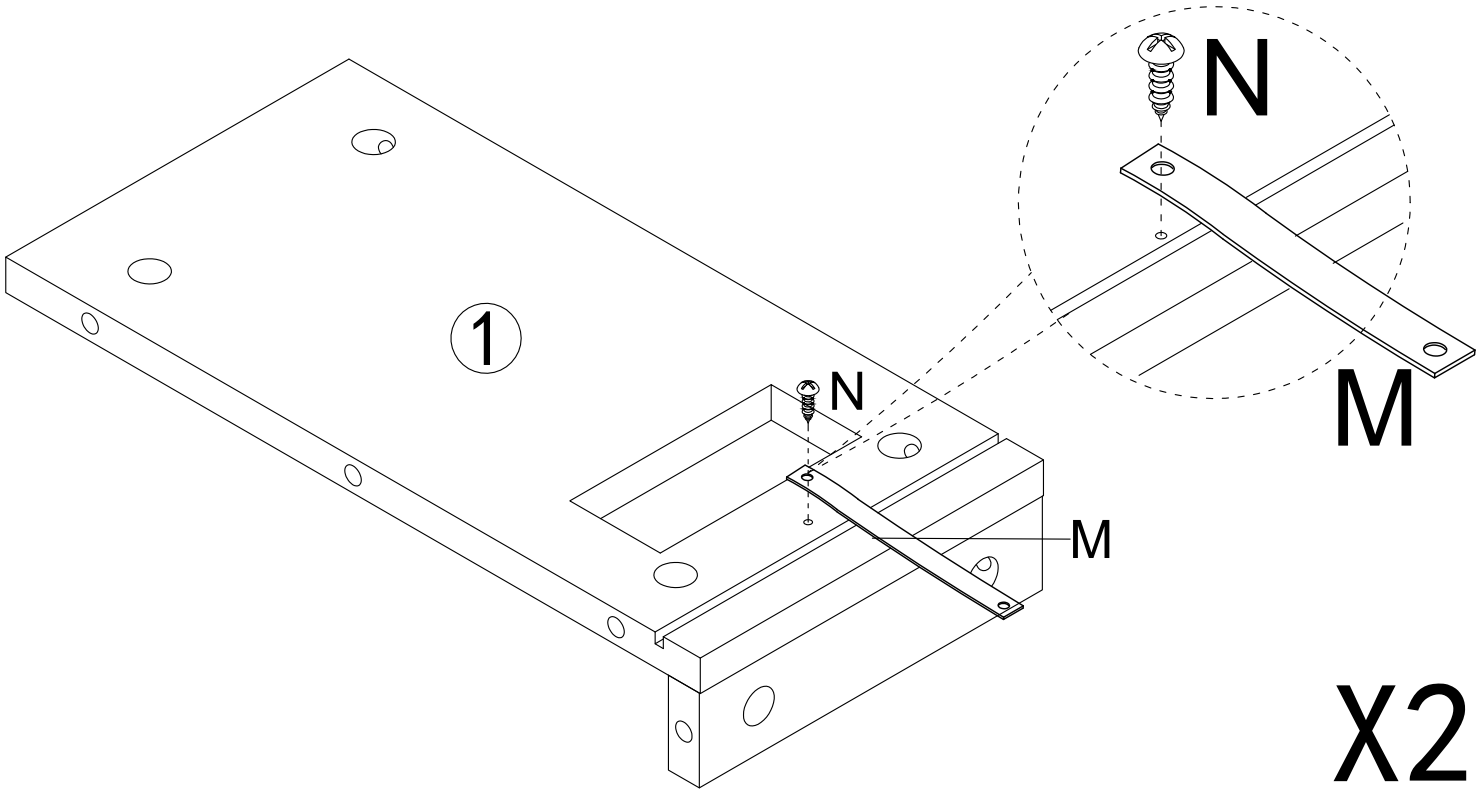


X2

M	X2
	

I	X2
	
M4x12mm	

CR/CL

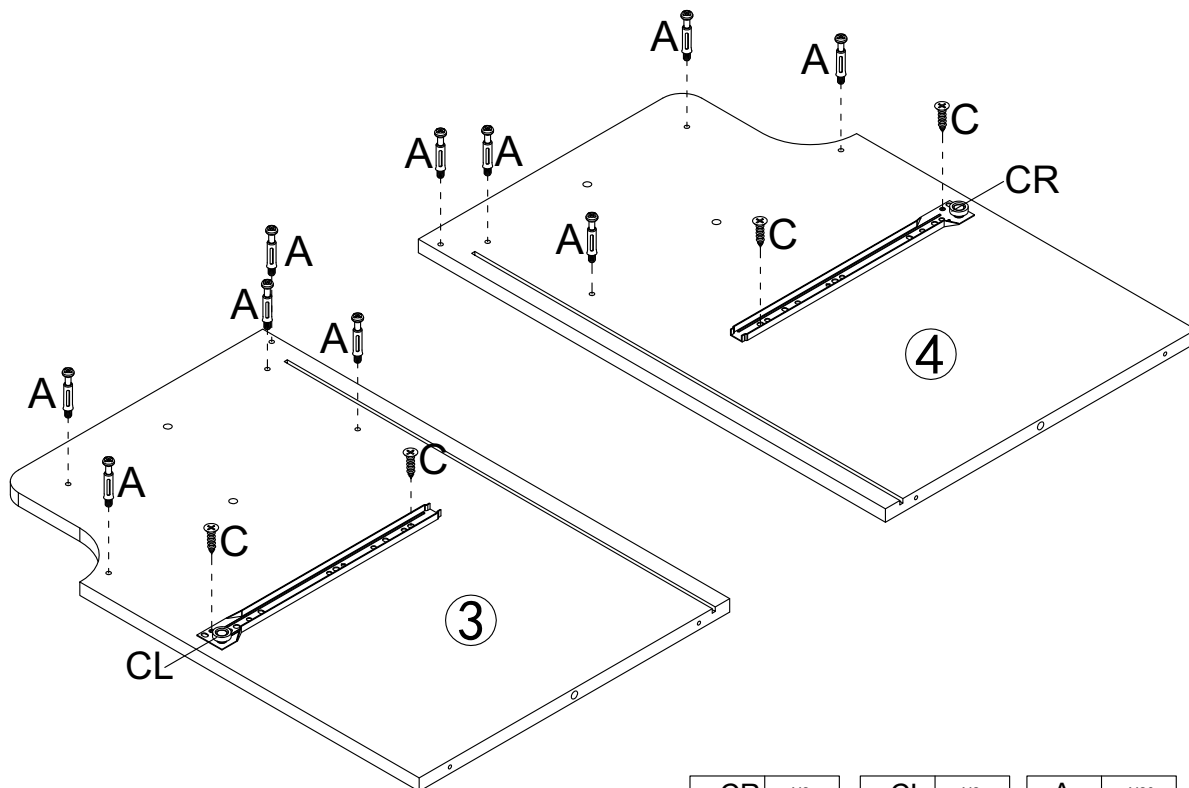

X2

CR	X2
	

CL	X2
	

A	X20
	
M6x35mm	


C	X8
	
M3.5x12mm	

X2


B	X6

G	x2
	
	


5

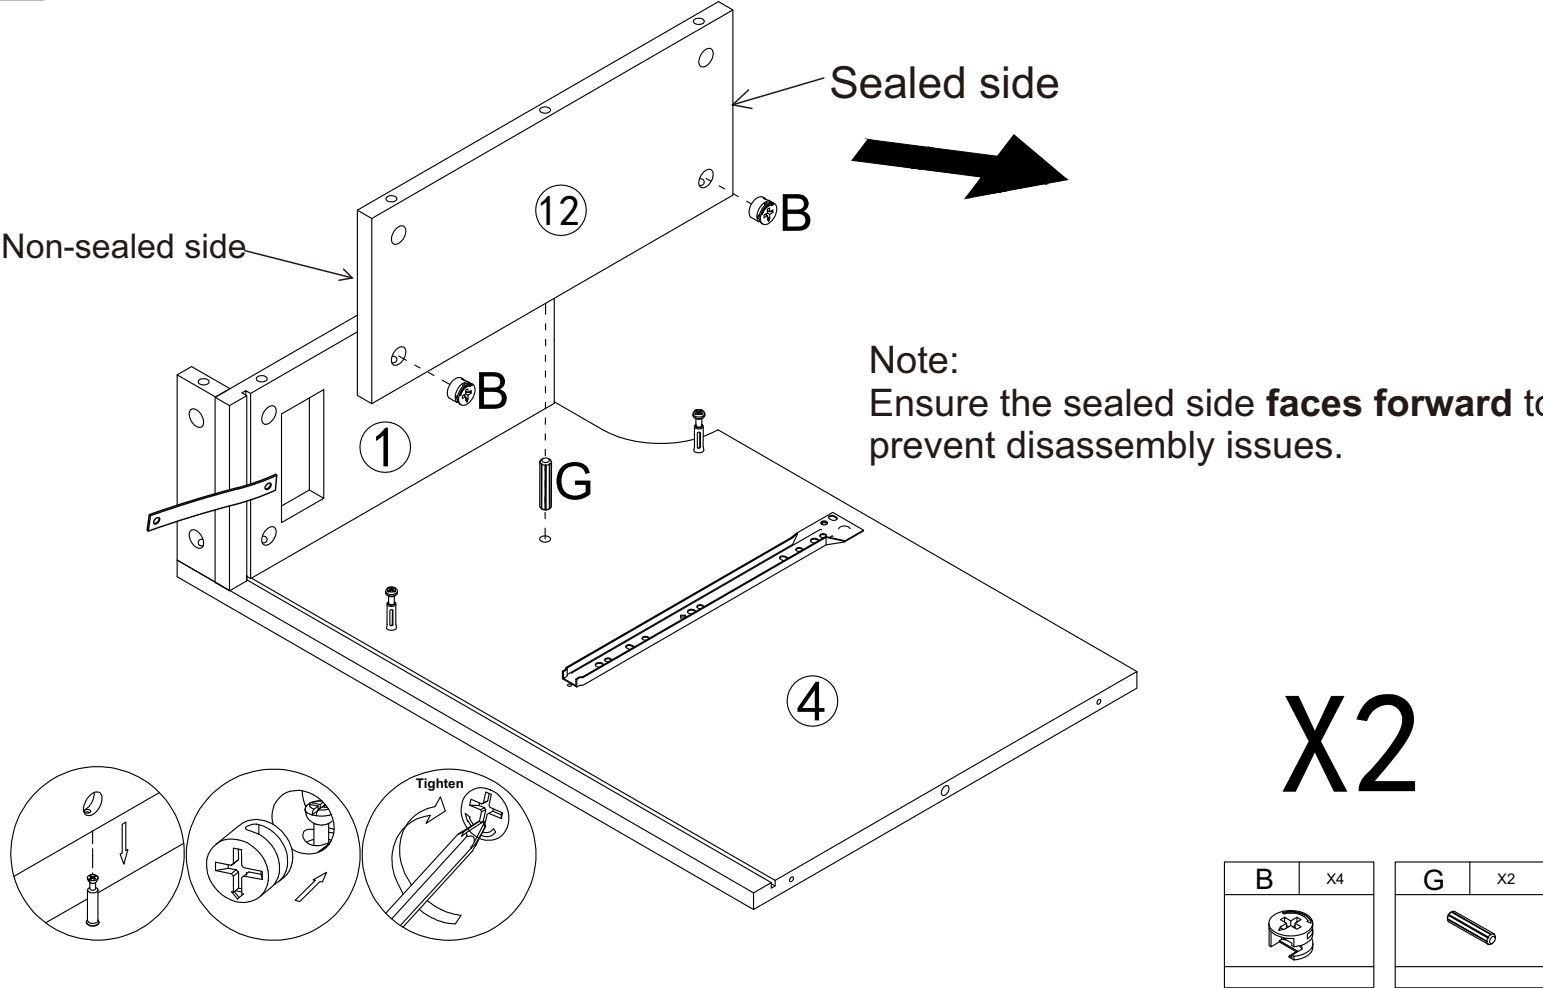

6

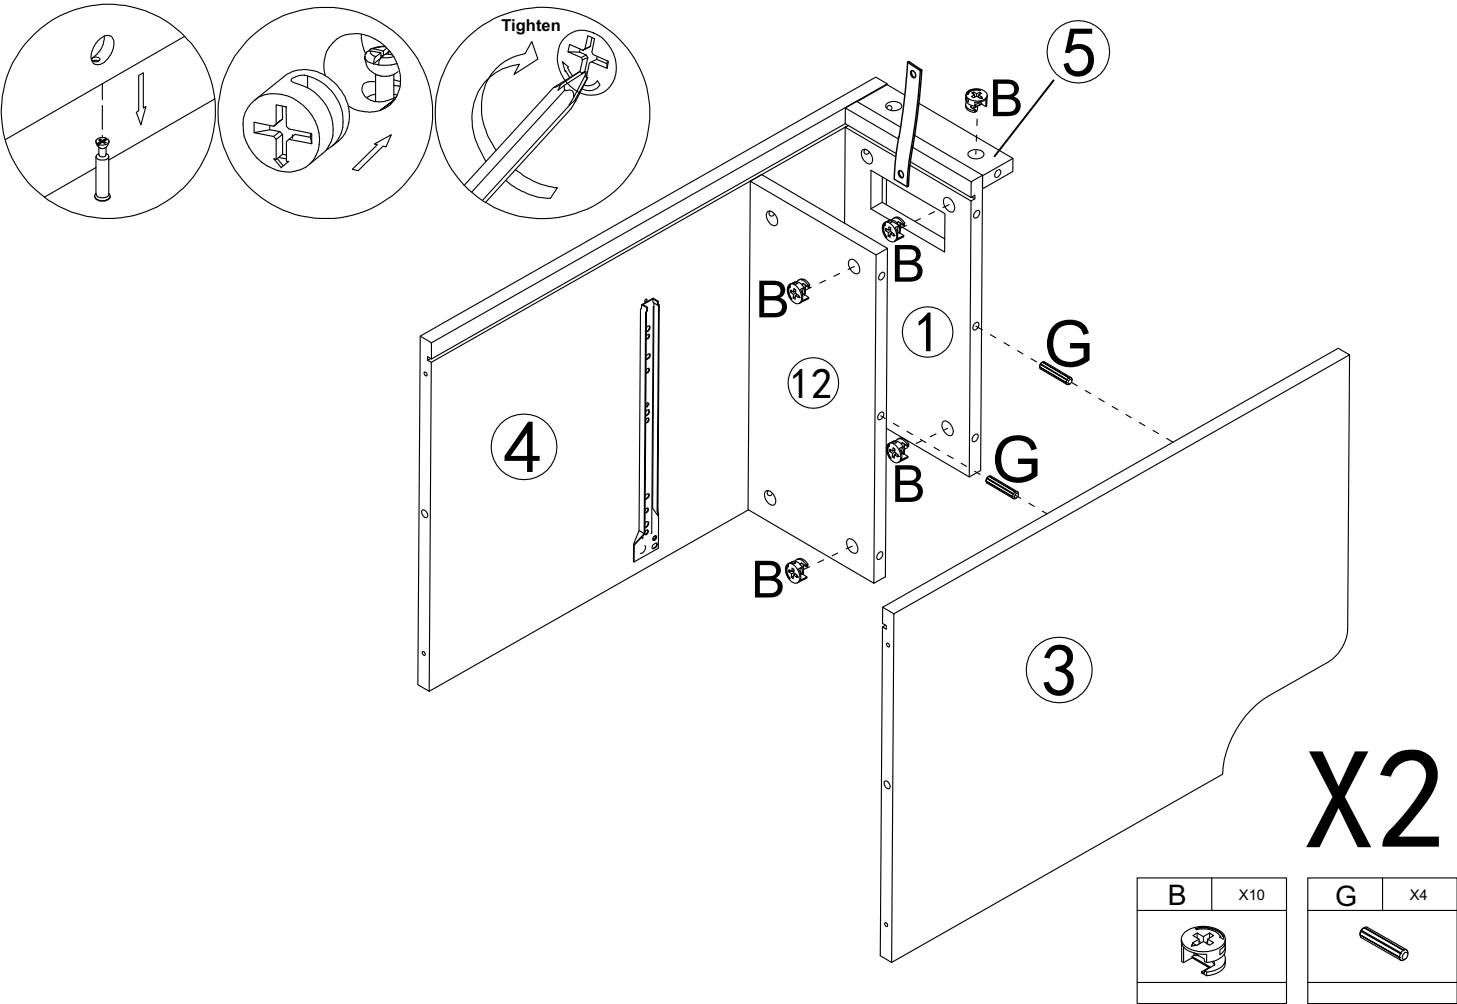


7

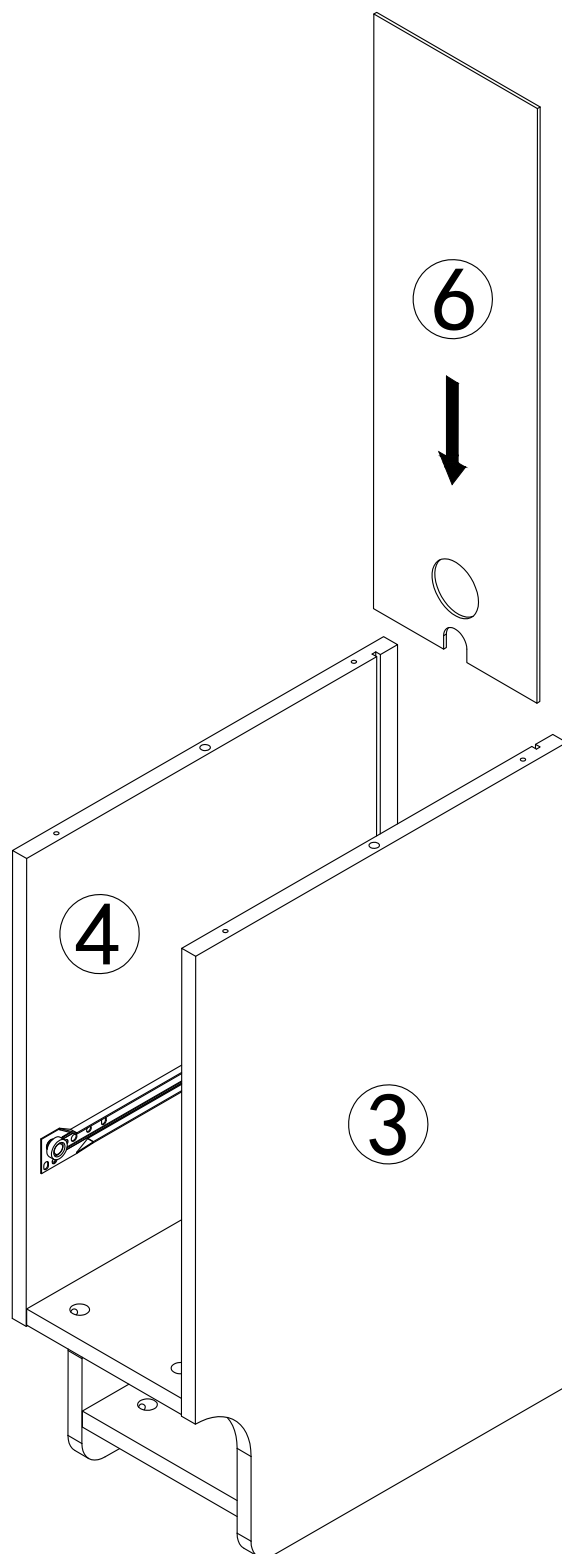

X2

8


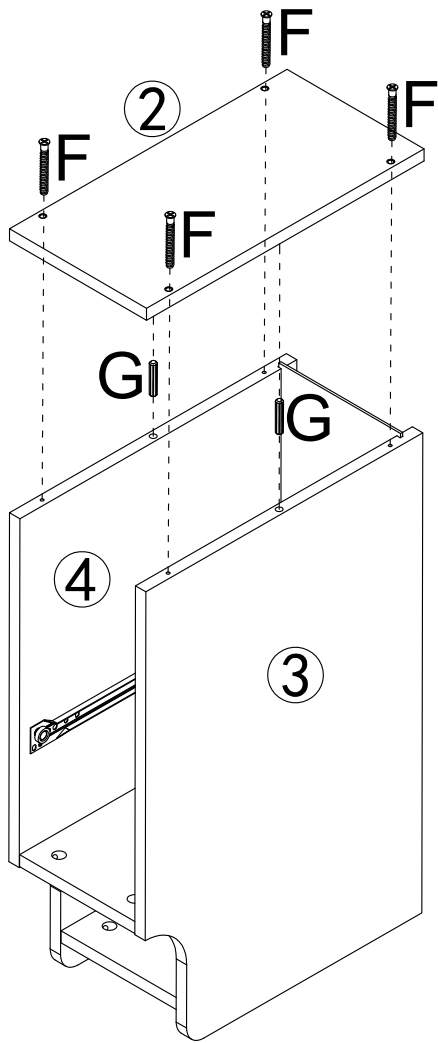


X2

F	X8
	
M5x40mm	

G	X4
	


9

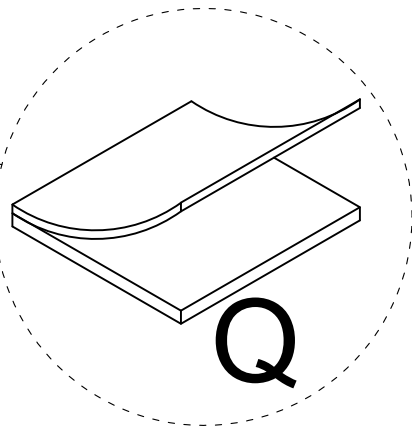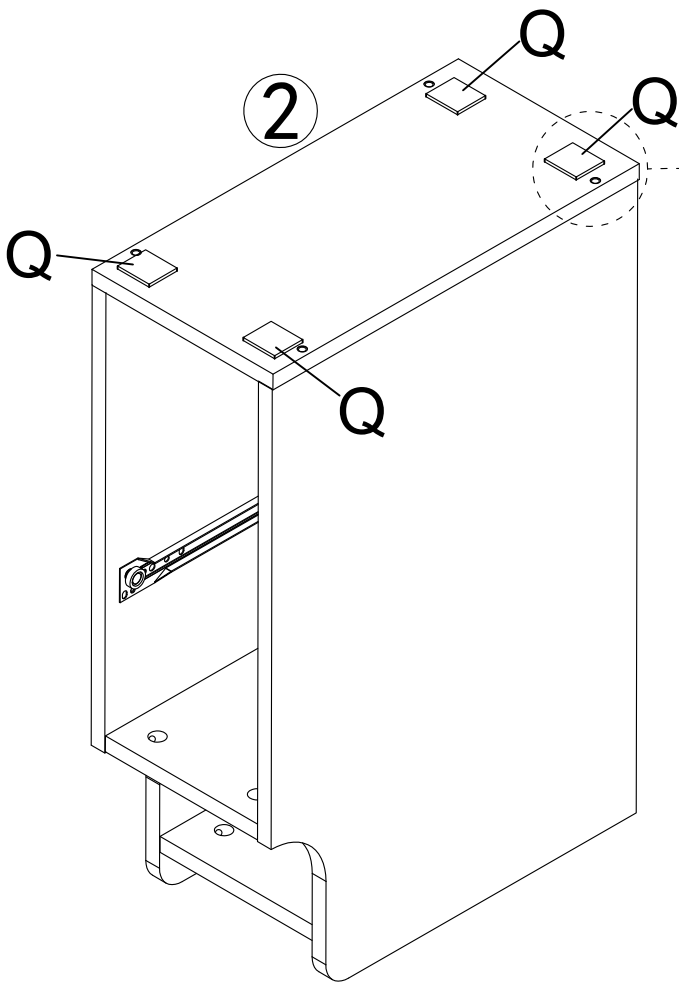

X2

Q	X8
	

10

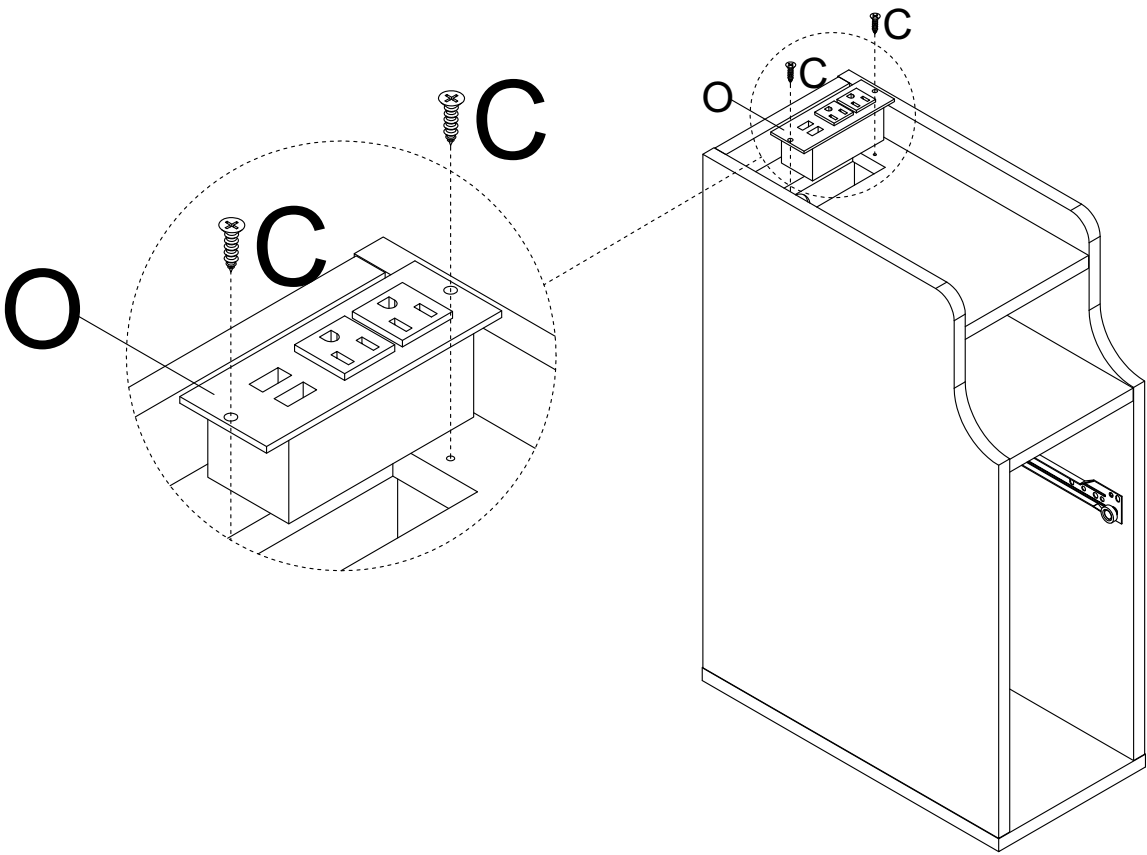


X2

C	X4
	
M3.5x12mm	

O	X2
	

11

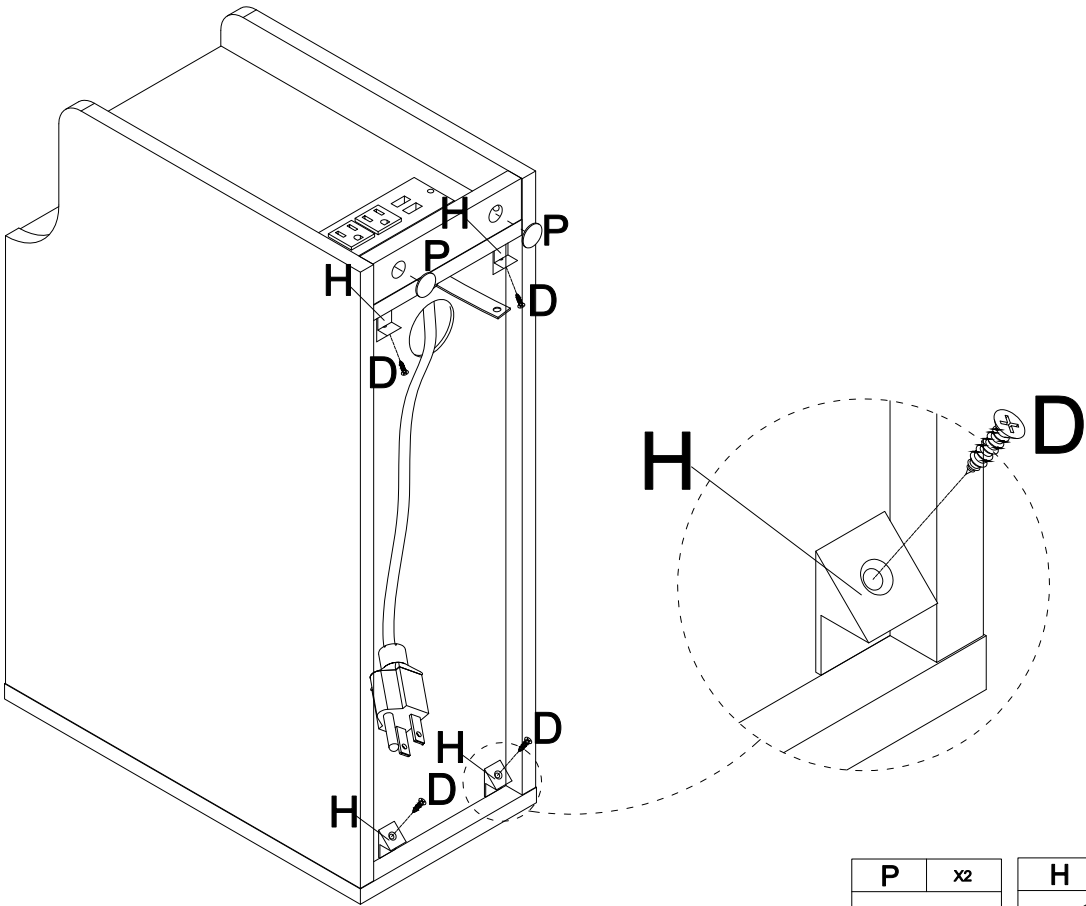


X2

P	X2
	

H	X4
	

D	X4
	
M3x16mm	


12

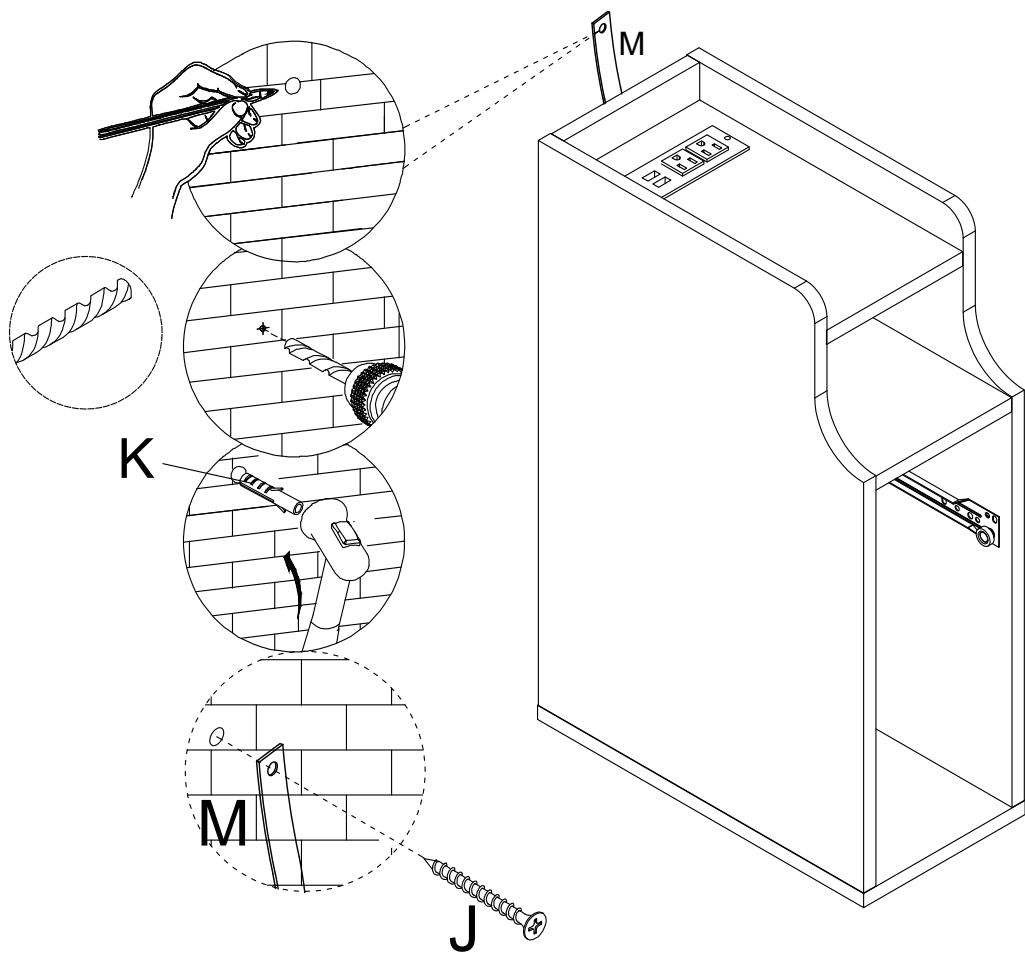

K	X2
	

J	X2
	
M4x35mm	


13

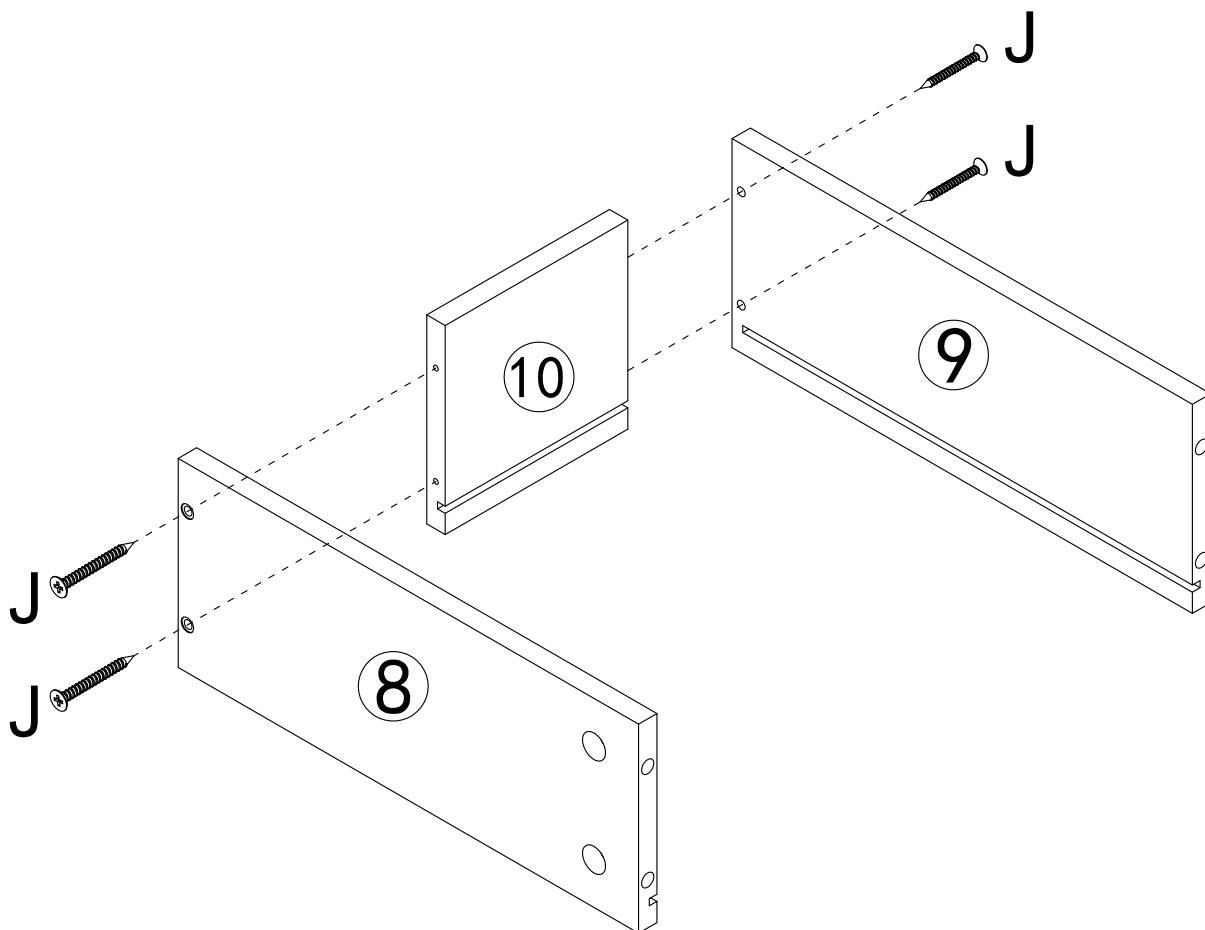

X2




J	X8
	
M4x35mm	

14

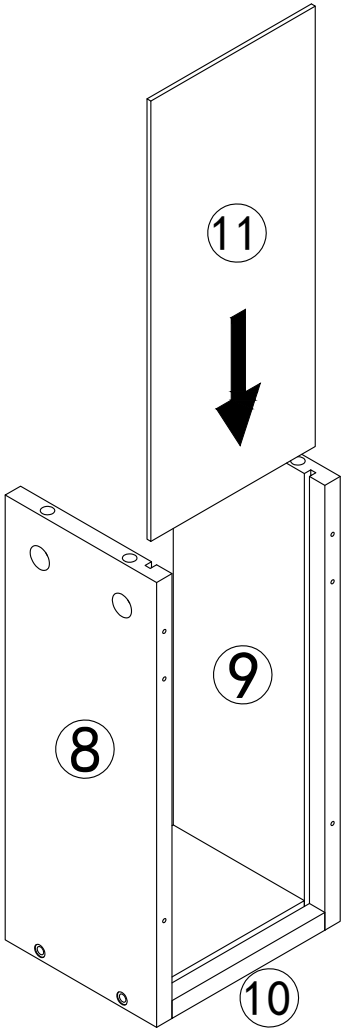

X2


15

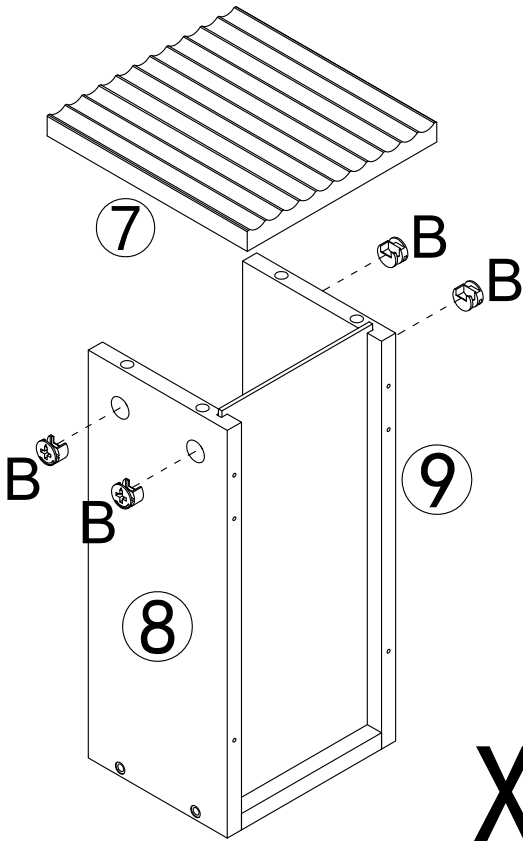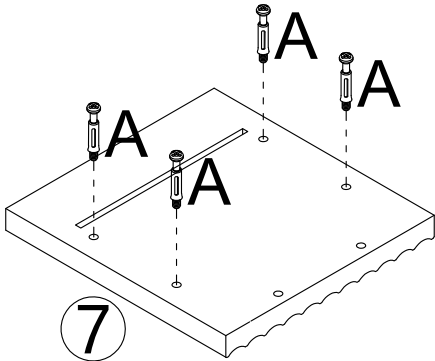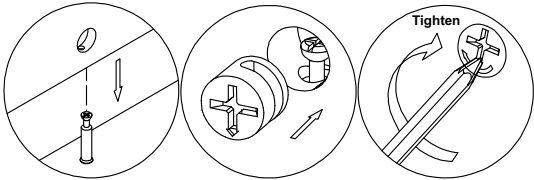

X2

A	X8	B	X8
			
M6x35mm			

16

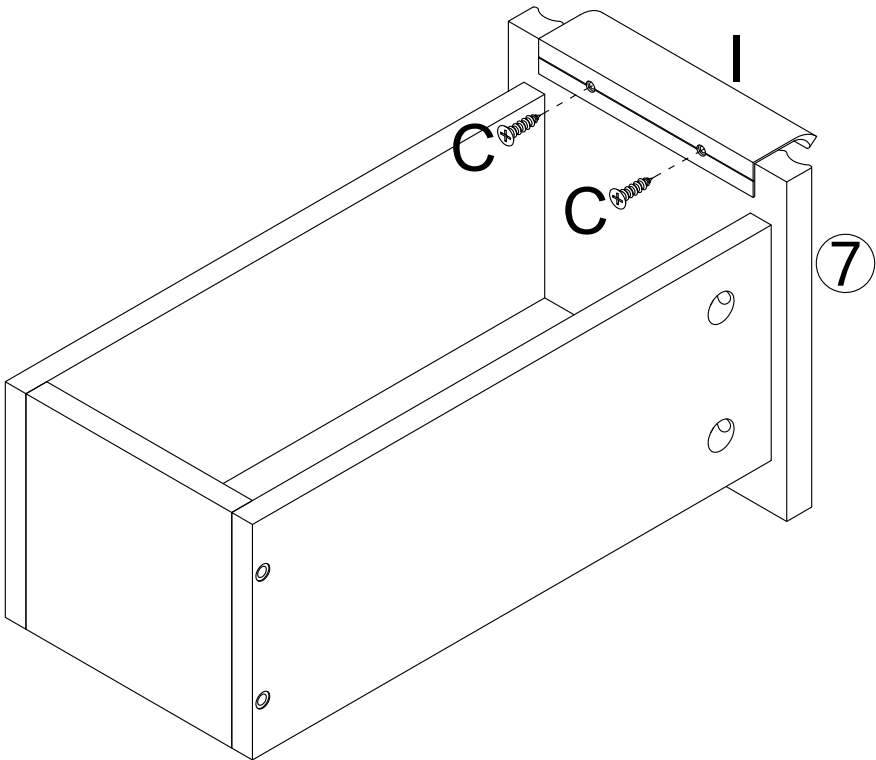


X2


C	x4
	
M3.5x12mm	

I	x2
	

17

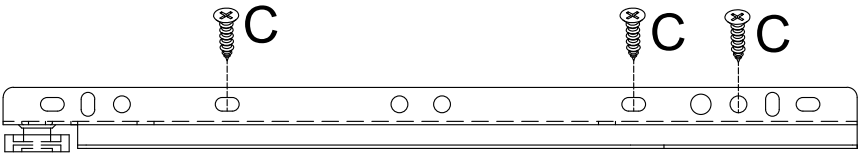

DL/DR

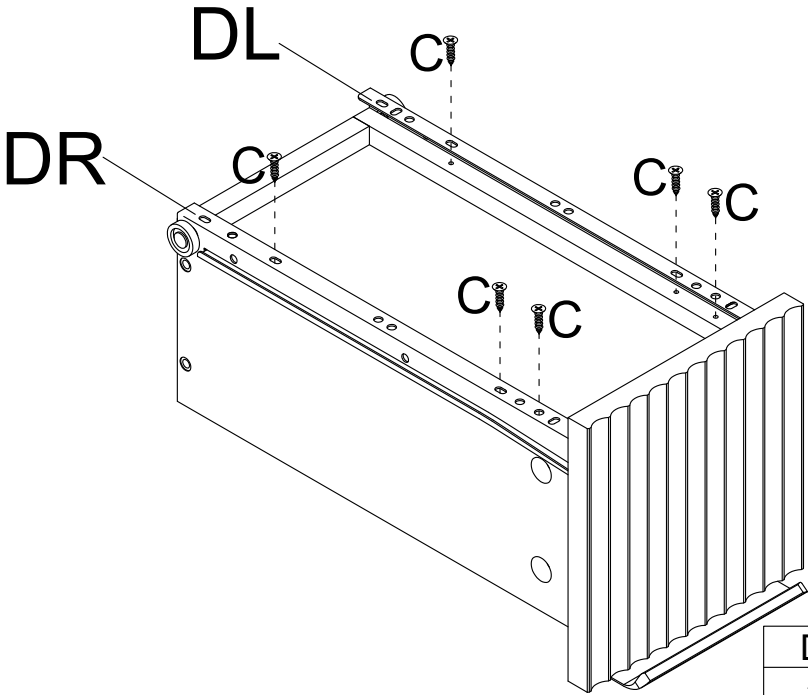


X2

DL	x2
	

DR	x2
	

C	x12
	
M3.5x12mm	

18

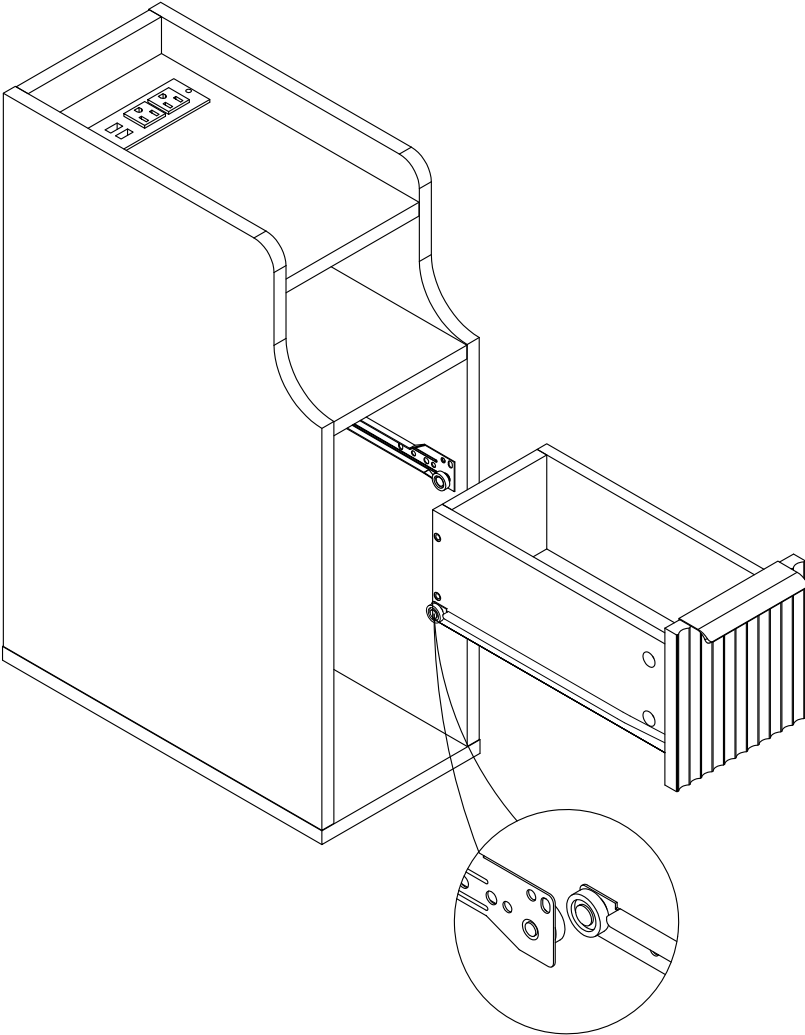

X2

19

