

REFINIATM RITE-TEMP®

Features

- Premium construction
- MasterClean™ spray nozzles prohibit mineral buildup for easy cleaning
- Push-button diverter on bath and shower trim models [K-T5319, K-T5321]
- Intended for use with Rite-Temp_® or HiFlow Rite-Temp_® valves
- Heavy duty slip-fit clamp design and NPT threaded spout

Codes/Standards Applicable

Specified model meets or exceeds the following:

ASME A112.18.1/CSA B125.1

K-T5318
ALSO K-T5319, K-T5320







Colors/Finishes

- · CP: Polished Chrome
- Other: Refer to Price Book for additional colors/finishes

Accessories

NA: None applicable

Specified Model

Model	Description	Colors/Finishes	
K-T5318-4	Bath and shower valve trim (shown)	□ CP	☐ Other
K-T5319-4	Shower trim with diverter button	□СР	☐ Other
K-T5320-4	Shower trim, less diverter button	□ CP	☐ Other
K-T5321-4	Mixing valve trim with diverter button – ADA compliant	□СР	☐ Other
K-T5322-4	Mixing valve trim, less diverter button – ADA compliant	□ CP	Other

Required Accessories					
K-304-**	Rite-Temp _® pressure-balancing valve OR	□ NA			
K-2971-**	HiFlow Rite-Temp valve with stops OR	□ NA			
K-11748-**	Rite-Temp valve with push-button diverter	□ NA			
** For a complete listing of all the Rite-Temp valves, refer to the individual valve Specification sheet or Roughing-in sheet.					

Product Specification

The bath and shower valve trim shall be made of premium construction. Product shall have MasterClean spray nozzles to prohibit mineral buildup for easy cleaning. Product shall have a push-button diverter on trim models [K-T5319, K-T5321]. Product shall have heavy duty slip-fit clamp design and NPT threaded spout. Product is intended for use with Rite-Temp or HiFlow Rite-Temp valves. Valve trim shall be Kohler Model K-T_____ and Rite-Temp valving shall be K-____-NA.

www.kohler.com

REFINIA™ RITE-TEMP®

Optional Accessories						
88526	Thin wall installation kit for K-2971-KS HiFlow Rite-Temp valve		□ CP	☐ Other		
1073881	Deep roughing-in kit for K-304 and K-2971 Rite-Temp valve	□ NA				
1016453	Diverter button kit for K-305-K and K-305-KS Rite-Temp valves		□ CP	☐ Other		
1092535	Deep roughing-in kit for K-305 Rite-Temp valve		□ CP	☐ Other		
1156950	Deep roughing-in kit for K-11748 Rite-Temp valve		□ CP	☐ Other		
K-45129	Shower arm and flange		□ CP	☐ Other		
K-5327	Diverter bath spout		□ CP	☐ Other		
K-5328	Non-diverter bath spout		□ CP	☐ Other		

Installation Notes

Install the valve trim according to the installation guide.

Install the Rite-Temp valve according to the installation guide.




either valve outlet.

CAUTION: Risk of product damage. Long screws, for installing trim, can damage the K-2971-KS valve. Consult the trim installation guide to verify if the thin wall installation kit (88526) is needed.

Avoid cross-flow conditions. Do not install a shut-off device on

Cap the shower outlet if the deck-mounted spout, diverter, or handshower is connected to the spout outlet.

Install a 7" (178 mm) to 18" (457 mm) straight pipe or straight tube with single bath elbow between the valve and the wall-mount spout.

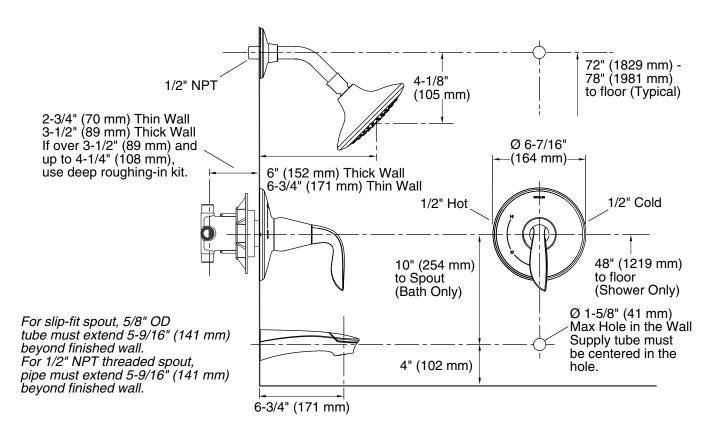

Product Diagram

