Assembly Instruction

<u>CAUTION:</u> Read instruction carefully and turn electicity off at main circuit breaker panel before beginning installation.



Care and Cleaning

To clean the outside fo the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the surface of the fixture.

To clear the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly damperned clean cloth (use clean water, never a solvent) to wipe the interior surface of the fixture

Do not use any cleaners with chemical, solvents or harsh abrasives. Use Only a dry soft cloth to dust or wipe carefully.

Estimated Assembly Time: 30 minutes

Part List and Hardware List

| PIECE | DESCRIPTION | PICTURE | QUANTITY | PIECE | DESCRIPTION | PICTURE | QUANTITY |
|-------|----------------|------------------|----------|-------|-------------------------|------------|----------|
| Α | Mounting bar | - 8 - | 1X | F | Center tube & canopy | 1 | 1X |
| A1 | Mounting screw | | 2X | G | Crystal string (Long) | | 35X |
| В | Canopy | | 1X | G1 | Crystal string (short) | J | 35X |
| С | Lock | 8 | 1X | Н | Lampbody | | 1X |
| D | Out ring | | 1X | I | Dropper | Î | 17X |
| _ | | Ŷ | | J | Bulb | | 6X |
| E | Chain | ğ | 1X | K | Wire Nut | (9 | 3X |

Installation

Step 1

Unpack all parts from cartons carefully

Screw the chain(E) to the lock(C) of the center tube & canopy(F)

Twist the center tube and canopy (F) to the lampbody(H)

Place the bulb(J) to the socket

Hang list:


Hang crystal string (G) to the hole of the center tube & canopy (F)

Hang crystal string (G1) to the hole of the bottom cover (K)

Hang the dropper (I) on the top metal arm (F)

Hang one dropper (I) between each five on the hole of the bottom

cover(K)

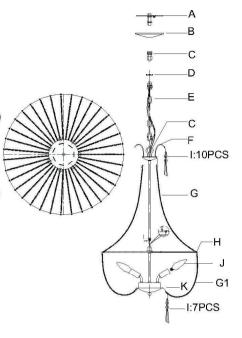

Step 2 Wire Connetion

| Connect,Hot,Black or Red outlet Supply Wire to: | Connect,Neutral,White Outlet Supply Wire to: |
|---|---|
| Black | White |
| * Parallel Cord(round & smooth) | * Parallel Cord(square& ridged) |
| Clear,Brown,Gold or Black without Tracer(colored stripes) | Clear,Brown,Gold or Black without Tracer(colored stripes) |
| Insulated Wire(not green) with copper metal conductor | Insulated Wire(not green) with Silver metal conductor |



*Note: When parallel wire(SPTI & SPT II) is used. The neutral wire is square shaped and ridged and the hot wire will be round in shape and smooth. (See illustration on left.)



Step 3

Installing the mounting bar(A) with mounting screw(A1), and $secure\ canopy(B)$ with the lock(C) and tighten with out ring(D)

Step 4

Installing whole body to the lock(C)

Step 5

Consult a qualified electrician to ensure correct branch circuit conductor

