

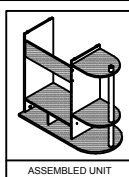
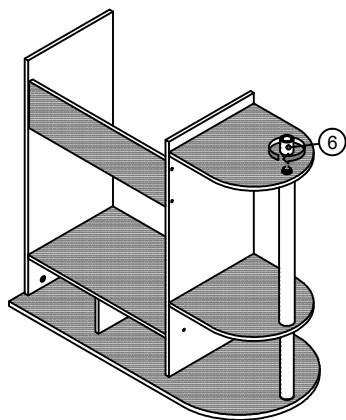
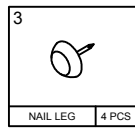





STEP 11

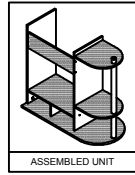




STEP 13

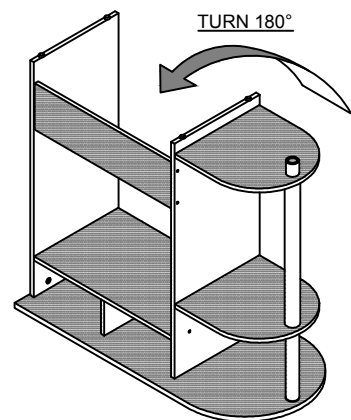


STEP 12

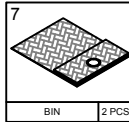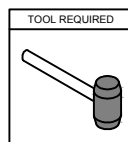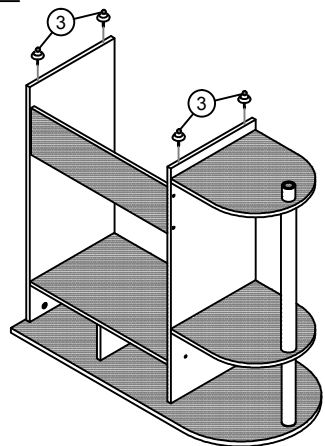


STEP 14

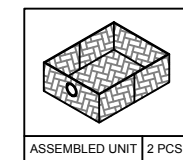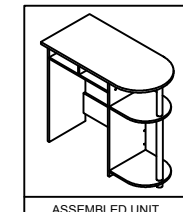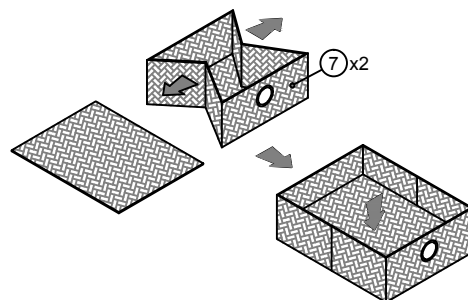

STEP 15

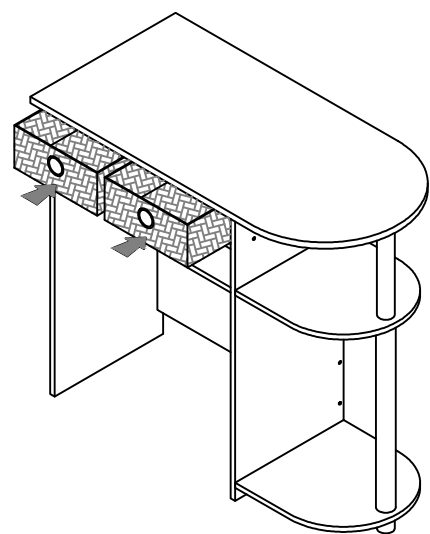

Recommended Maximum Weight

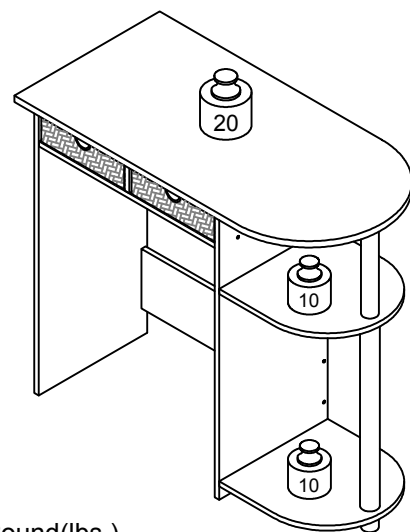

*Unit in Pound(lbs.)

WARNING:

>This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

>DO NOT allow children to climb on unit.

> Put heavier items on lower shelves.

Assembly Instruction


Go Green Home Laptop Notebook Computer Desk / Table

00:30


Approx. 30 minutes




Recomm. 1 Person

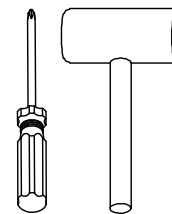


Tool Required

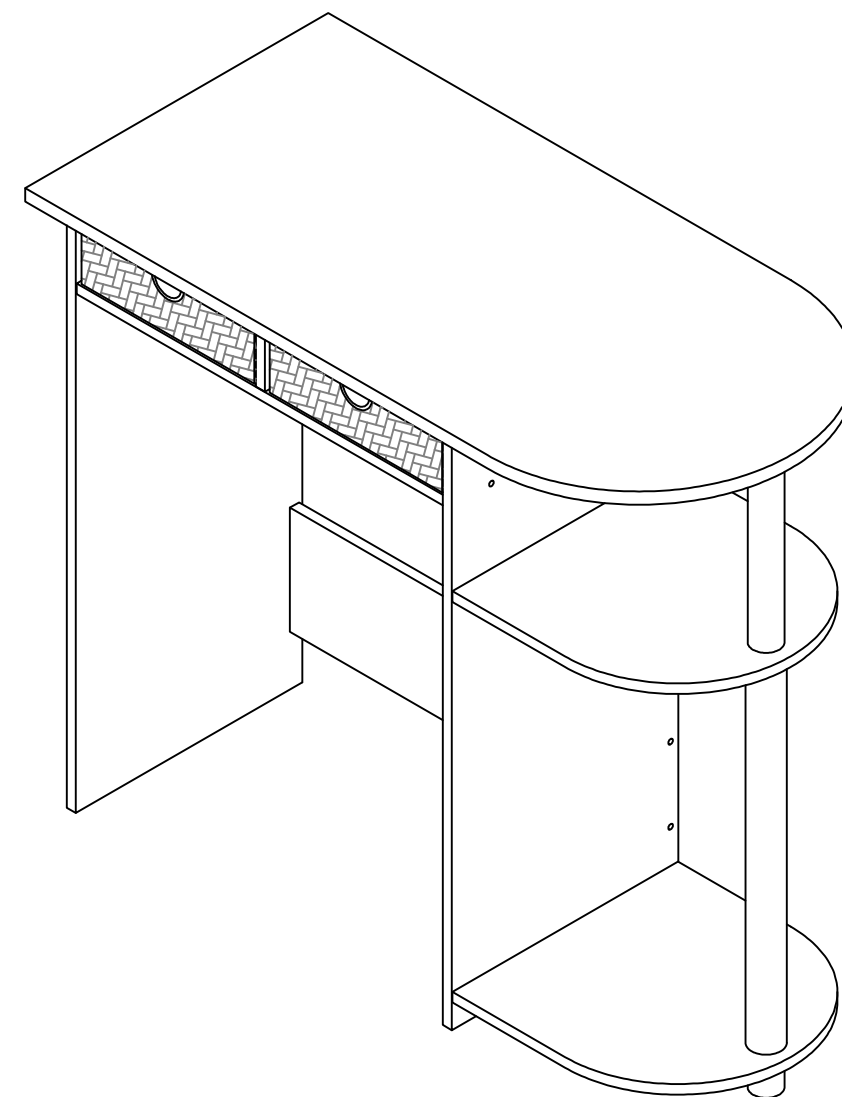


EXPLODED VIEW

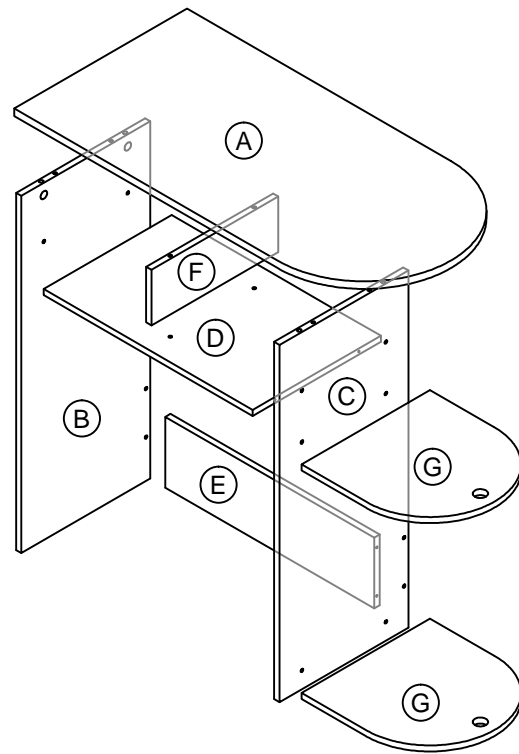

PARTS LIST

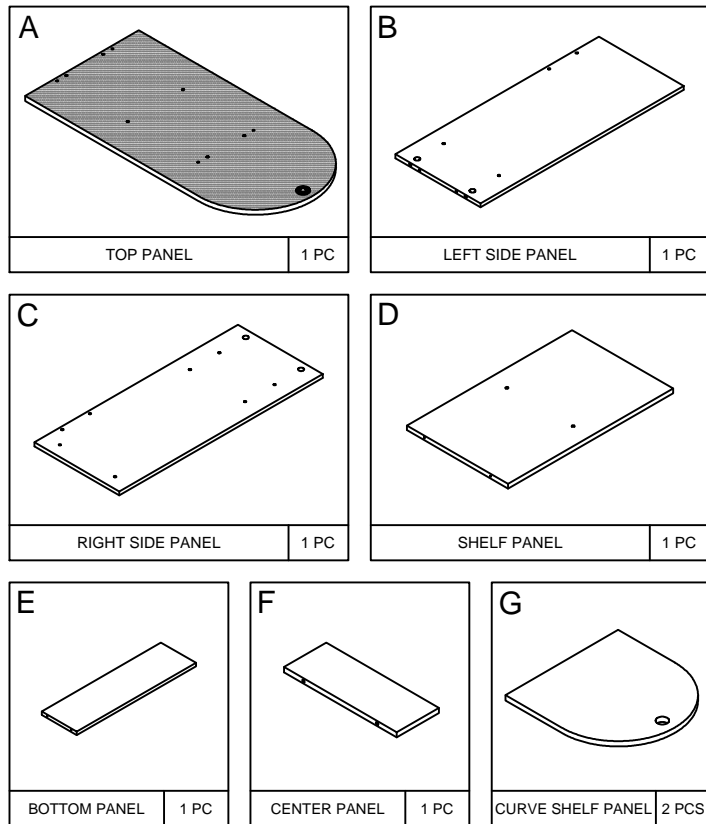


HARDWARE LIST

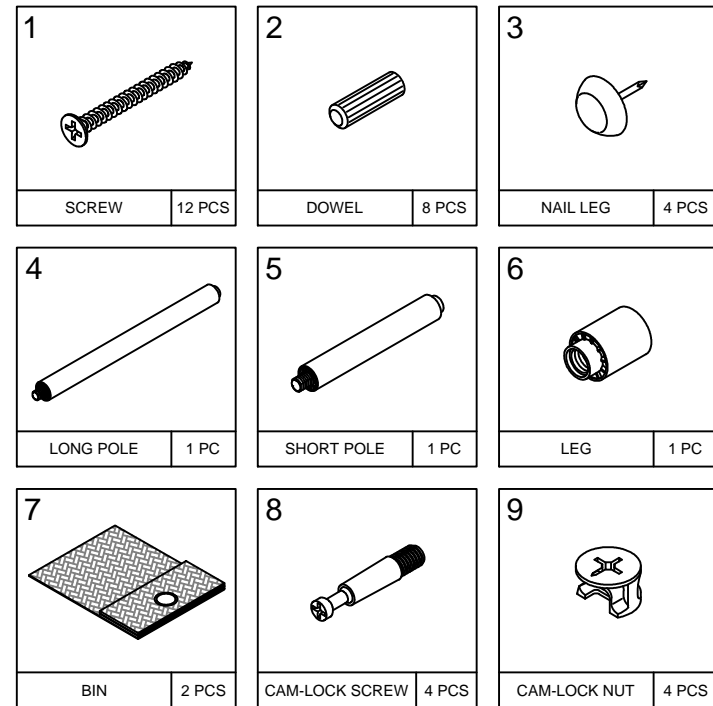


USEFUL HINTS BEFORE YOU START:

1. Read each step carefully before starting.
2. It is important that each step is performed in correct order to avoid difficulties.
3. Identify, soft and count the parts before assembly.
4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
5. Clean the product with mild cleanser using soft damped cloth. Do not use harsh or abrasive cleanser.
6. Using incompatible hardware might cause damage to product.


STEP 9

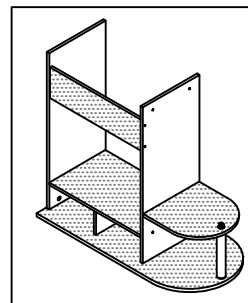


ASSEMBLED UNIT

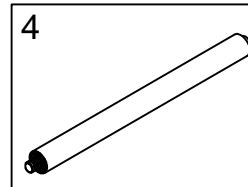


LONG POLE 1 PC

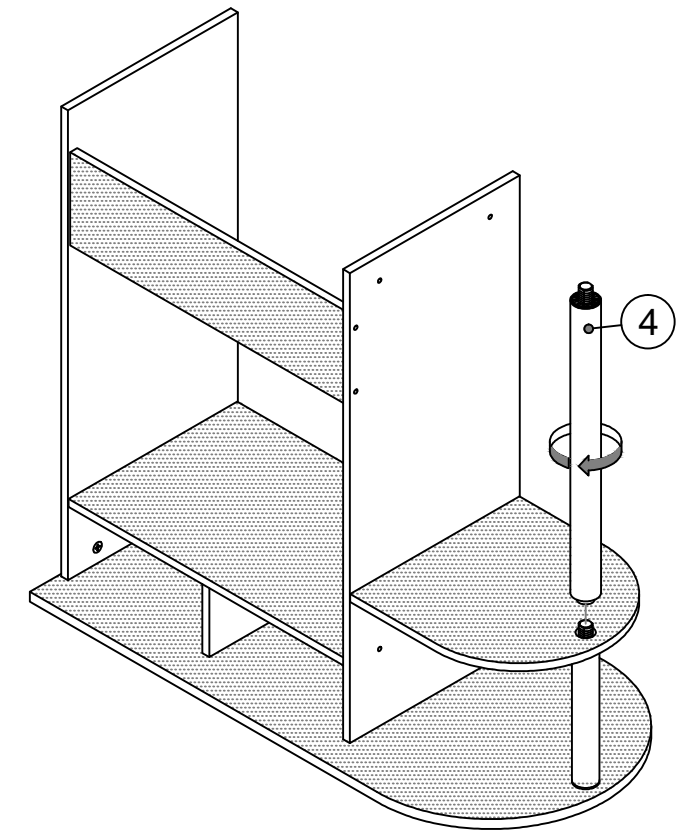


STEP 10

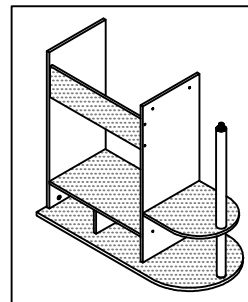


ASSEMBLED UNIT

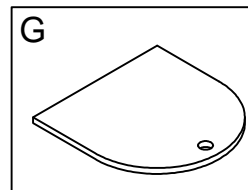


CURVE SHELF PANEL 1 PC

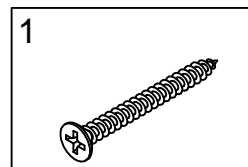




SCREW 2 PCS

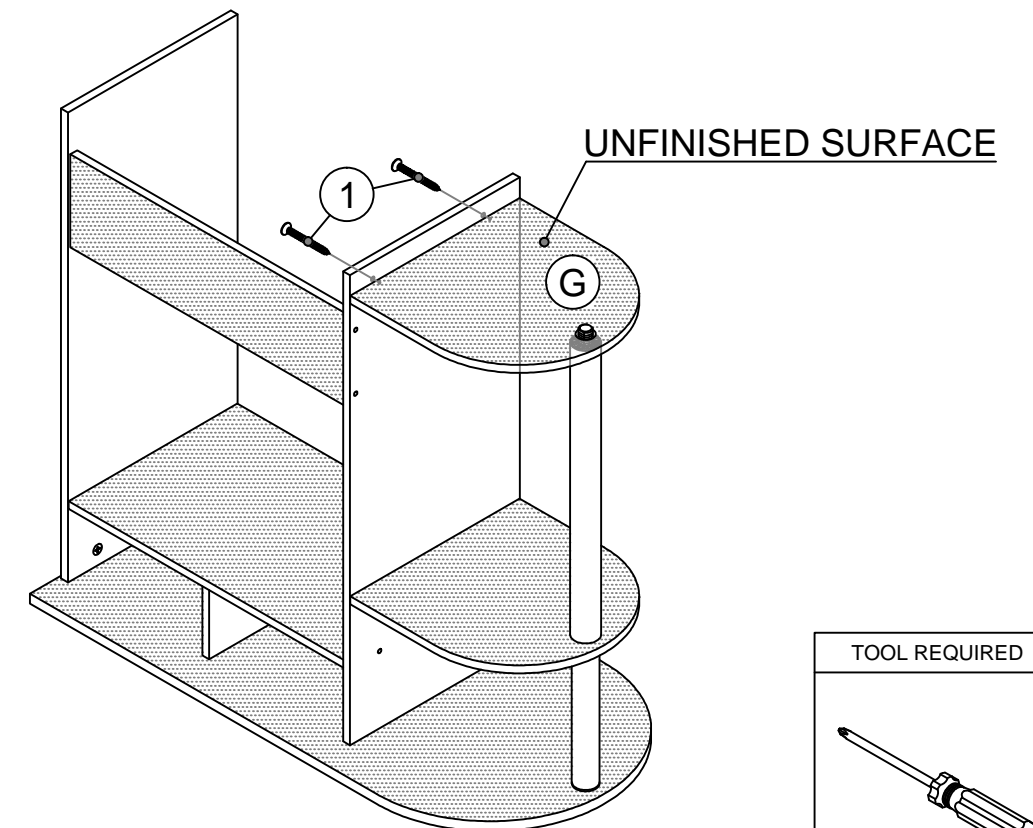






TOOL REQUIRED

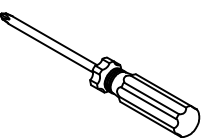







STEP 7

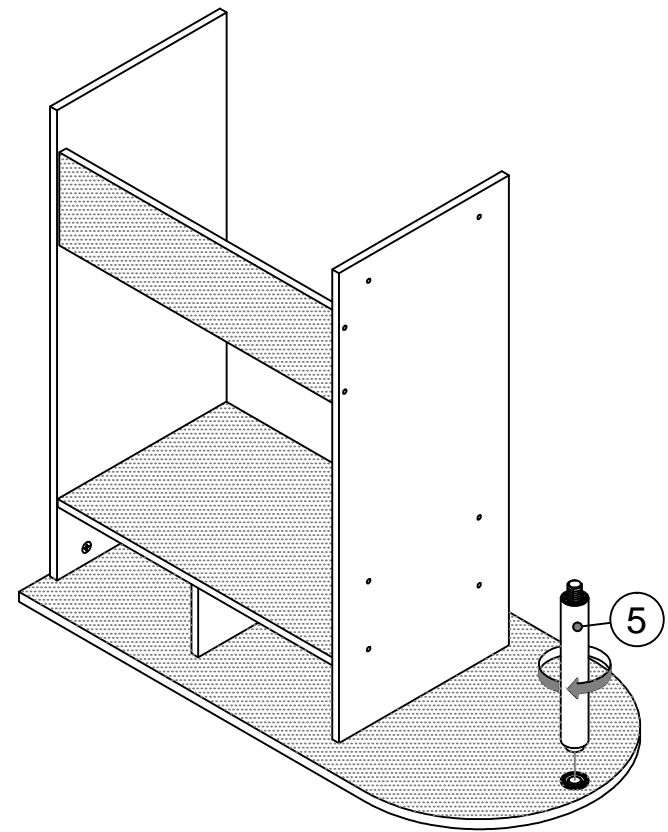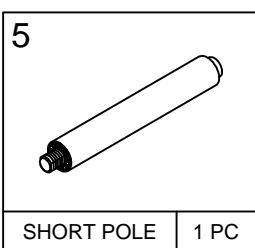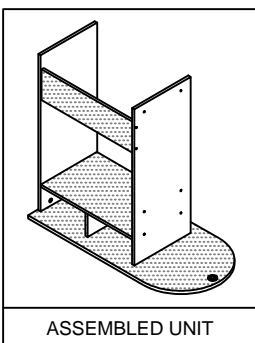





STEP 8

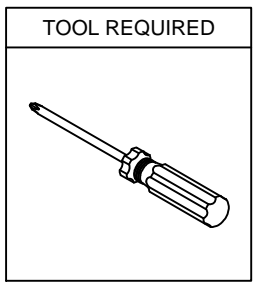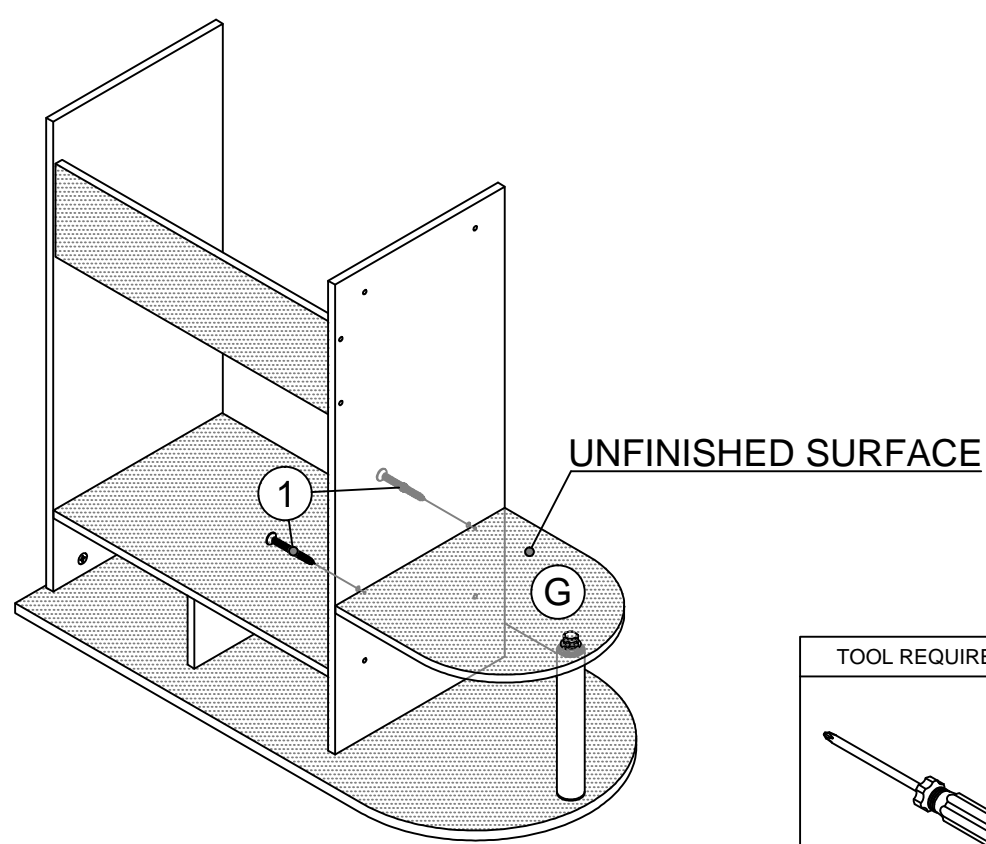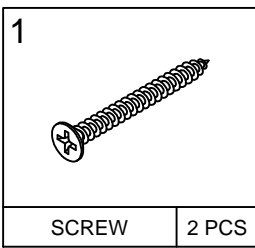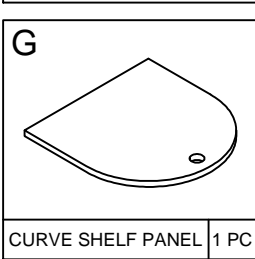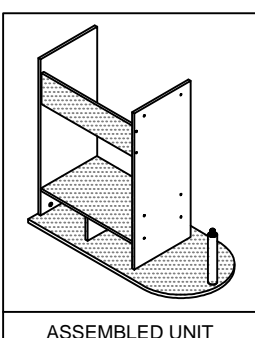


STEP 1

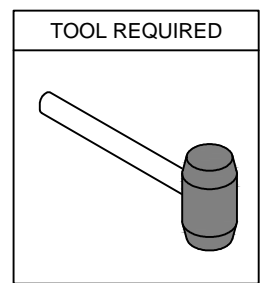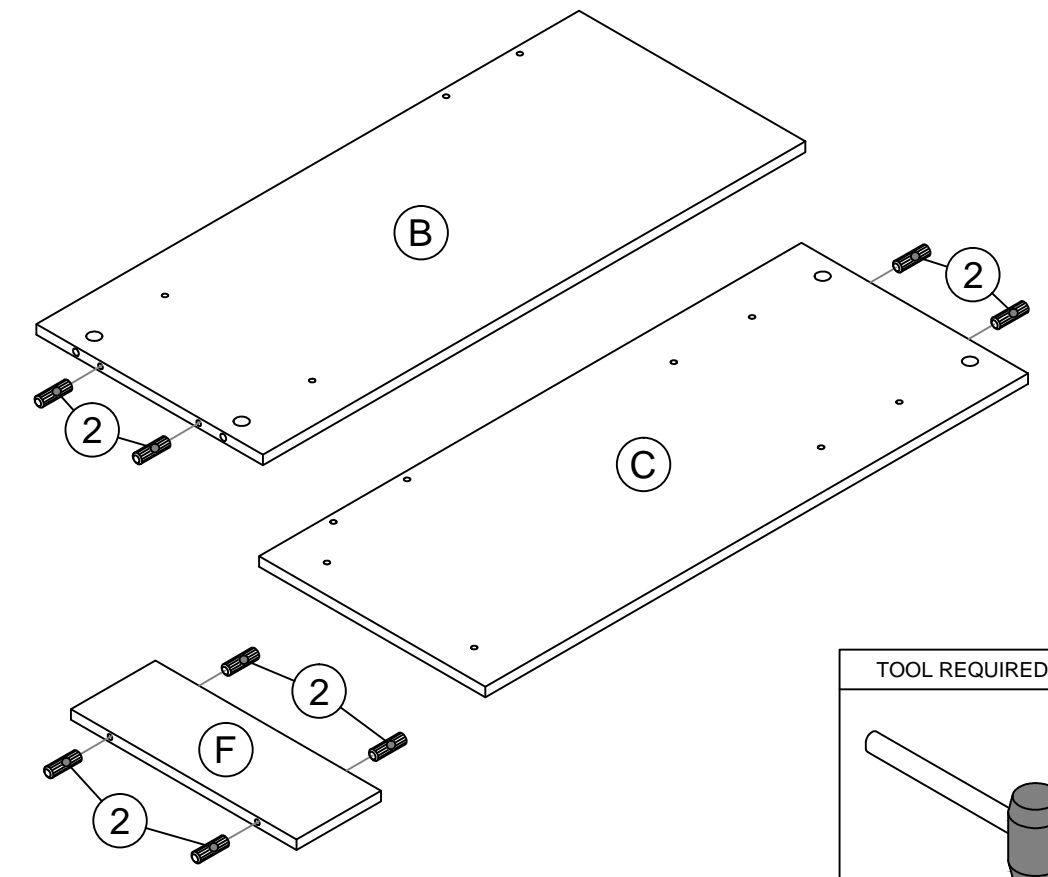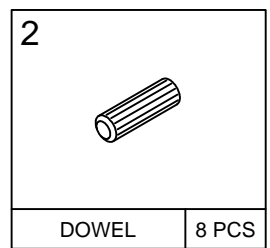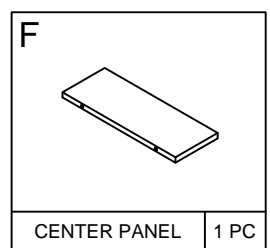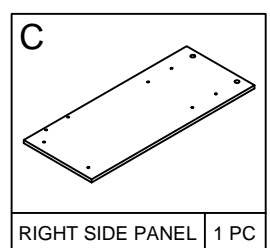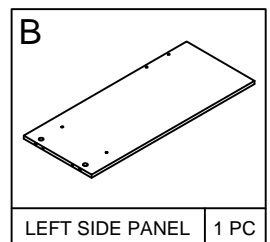


STEP 2

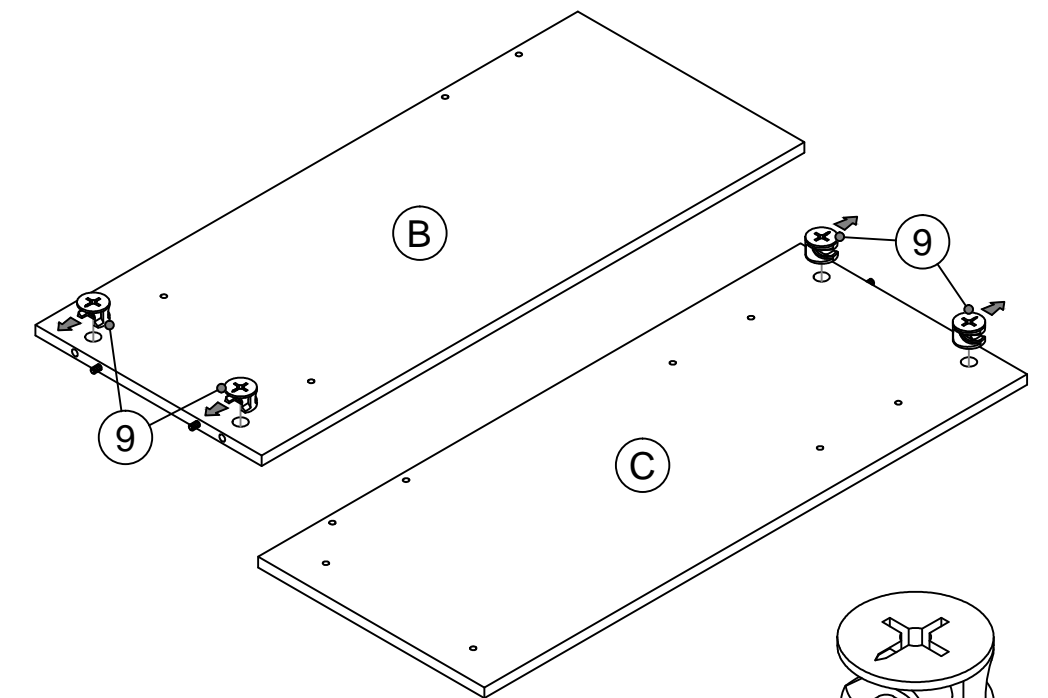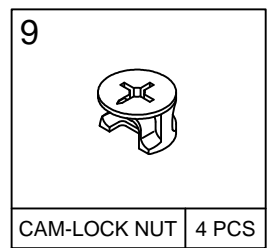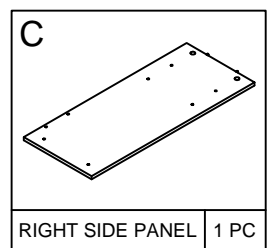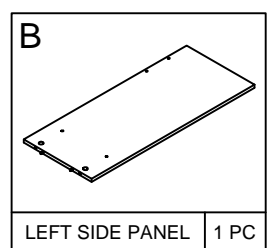



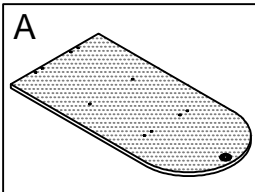


TOP PANEL 1 PC

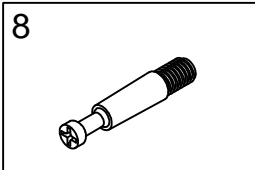


CAM-LOCK SCREW 4 PCS


STEP 3

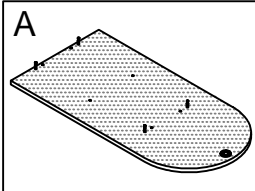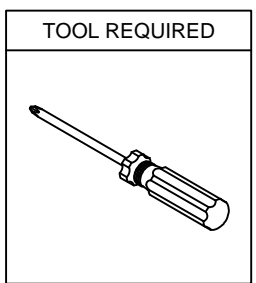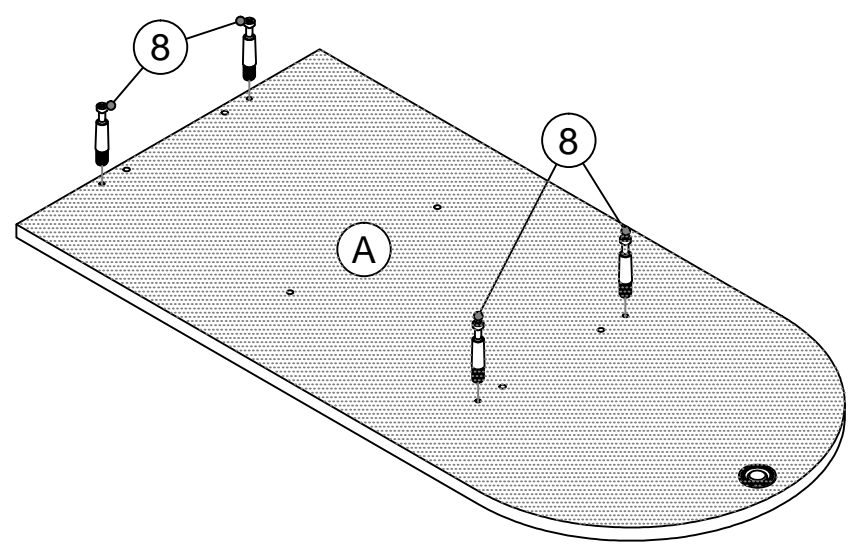

TOP PANEL 1 PC



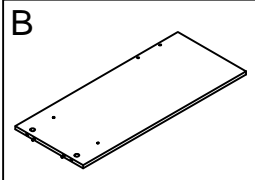


LEFT SIDE PANEL 1 PC

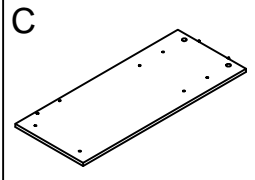


RIGHT SIDE PANEL 1 PC


STEP 4

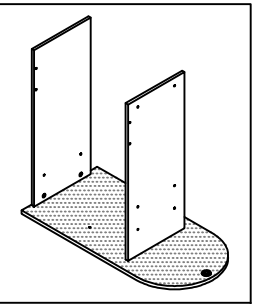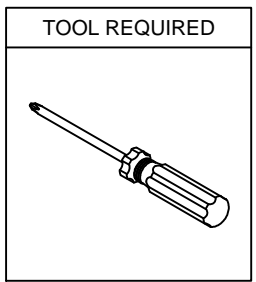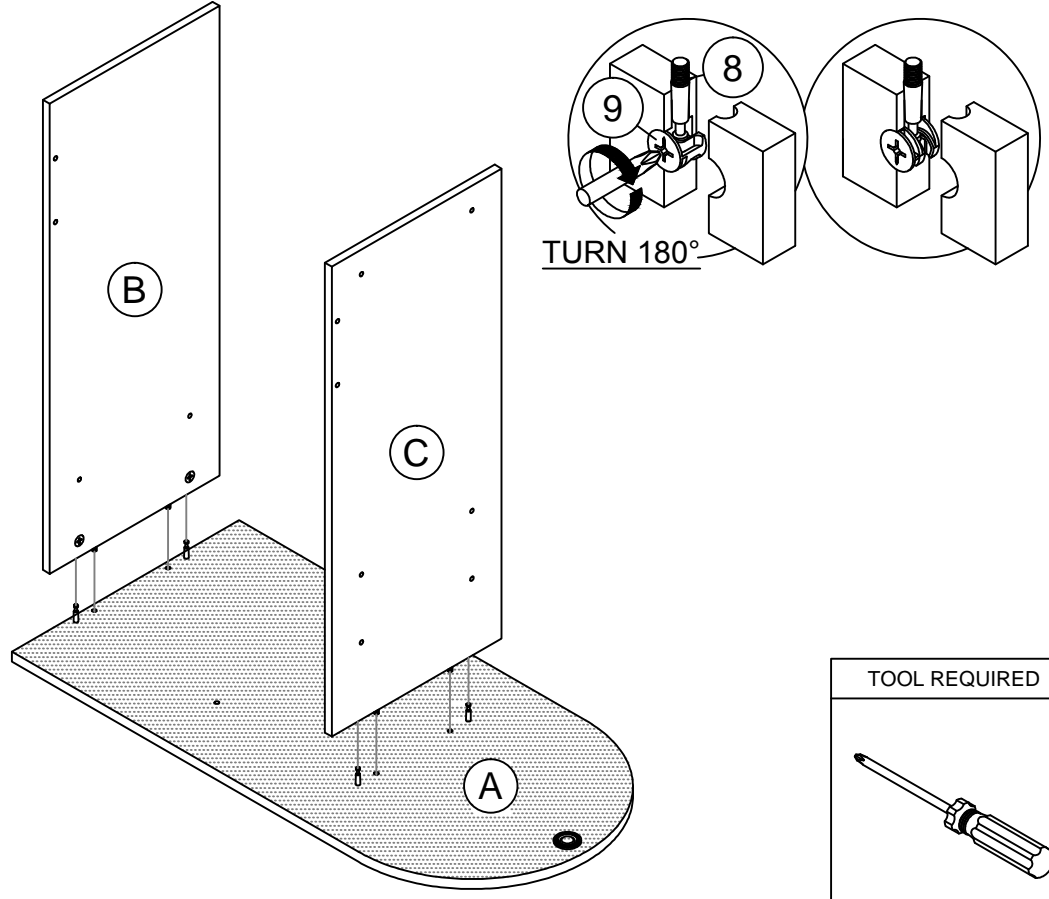

ASSEMBLED UNIT


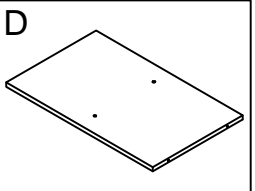


SHELF PANEL 1 PC

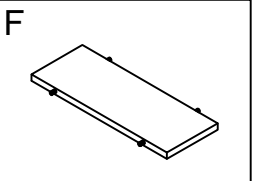


CENTER PANEL 1 PC

STEP 5

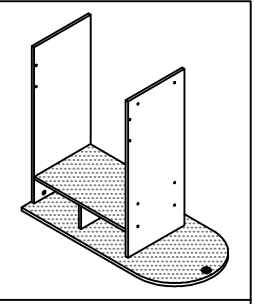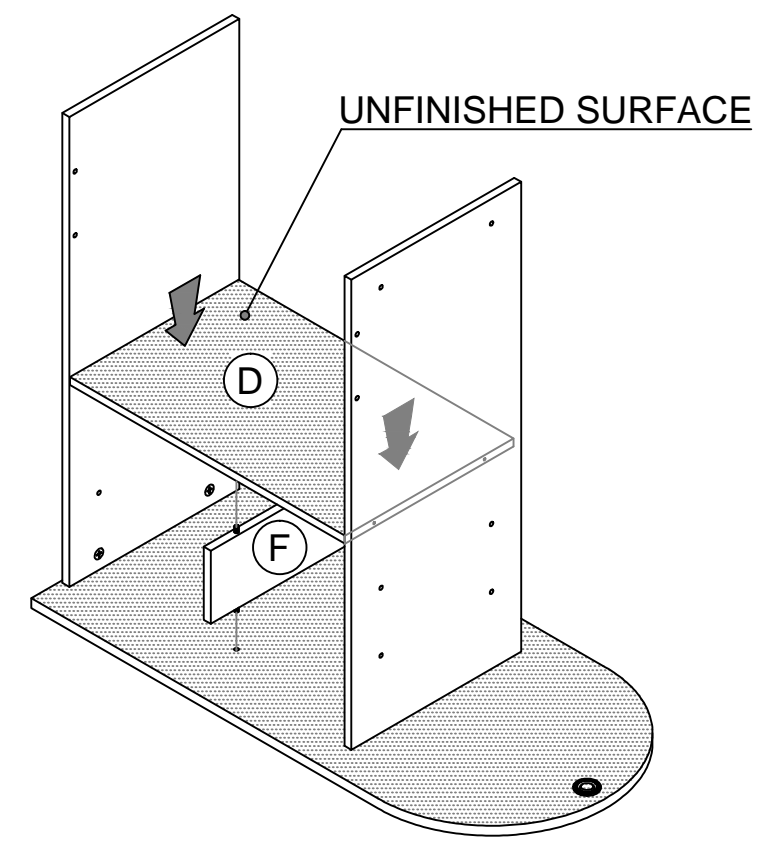

ASSEMBLED UNIT

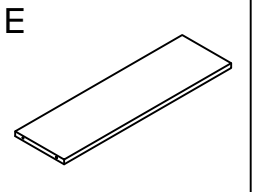

BOTTOM PANEL 1 PC



SCREW 8 PCS

STEP 6

