


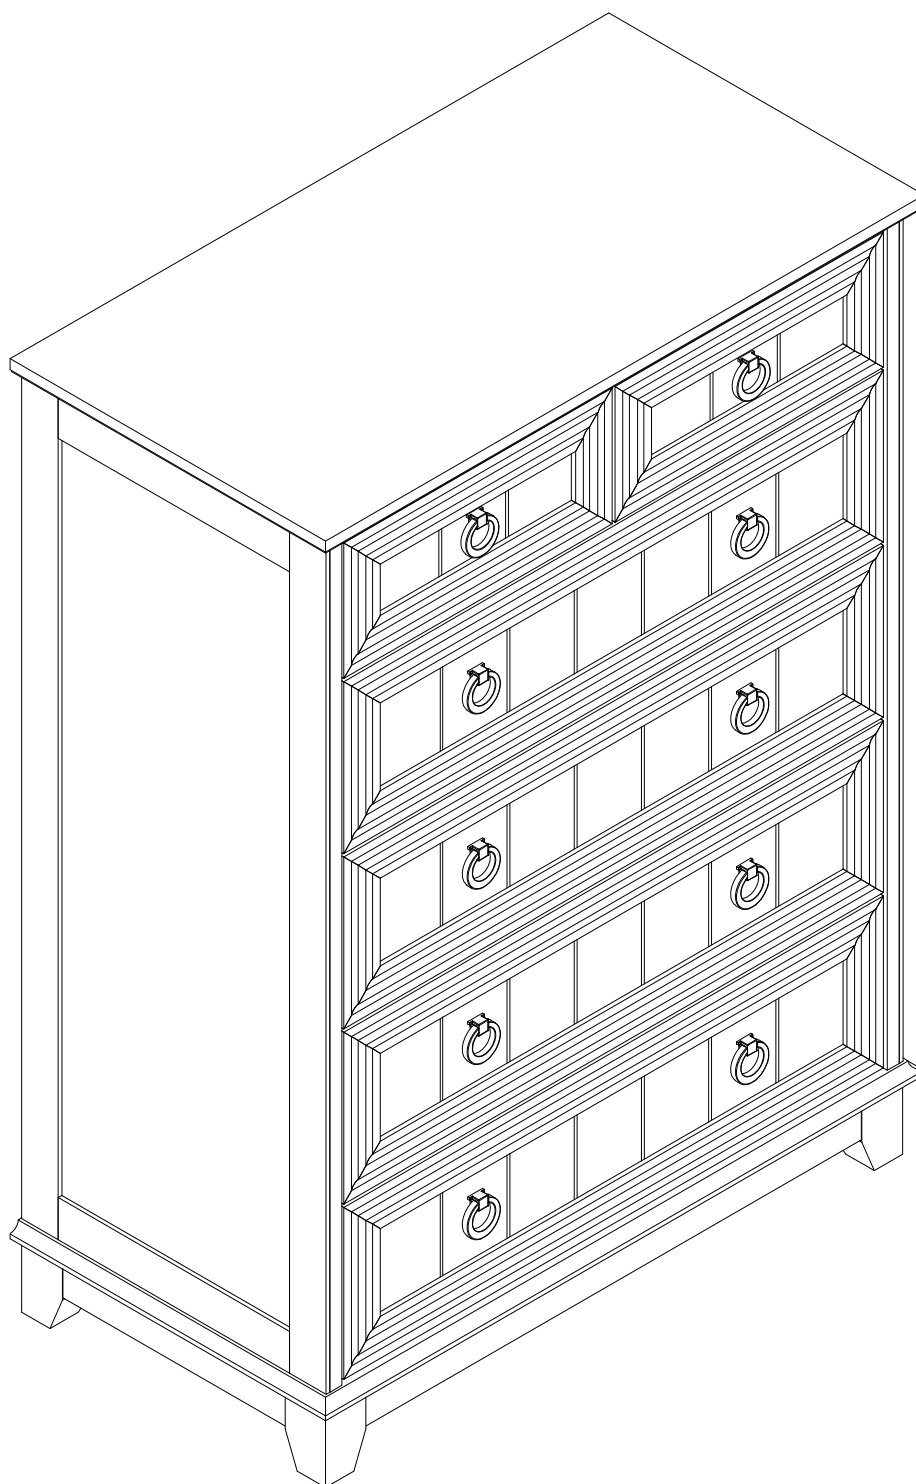

ATTENTION

If there is any missing, please kindly send us messages to let us know the part number of missing part regarding to the first page of instructions.

Please also provide your full address, recipient name and contact phone number so that we can send replacement to you as soon as possible.

Children have died from furniture tipover. To reduce the risk of furniture tipover. ALWAYS install tipover restraint provided.



BEFORE STARTING

Before Using Product



- Read each step carefully before starting. It is very important that each step is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.
- Make sure all parts are included.
- Work in a spacious area and near where the unit will be used, preferably on a carpet, or use a piece of the cardboard packaging to protect your floor and product.
- For a smooth assembly process, we suggest you keep a lite tightness for all the screws during assembly. After the whole product is assembled, firmly tighten all the screws.



WARNING


- Do not allow children to climb on unit.
- Avoid sharp objects or corrosive chemicals to prevent damage to the product.
- During assembly, keep parts and packaging materials away from children and pets as there could be potential injury and choking hazards.
- Please make sure that all objects are removed before moving the assembled unit.
- The unit must be team lifted, not dragged or pushed. Failure to do so could cause instability, product collapse, and/or serious injury.
- Be careful when using power tools to assemble your furniture. Power tools may strip or damage the parts.

QUICKFIT

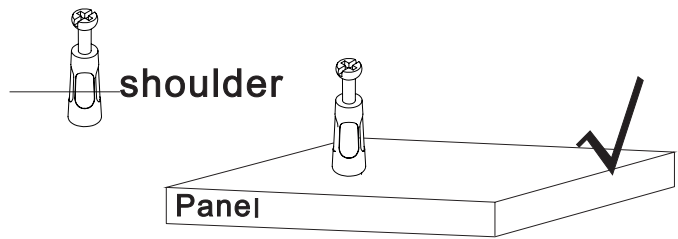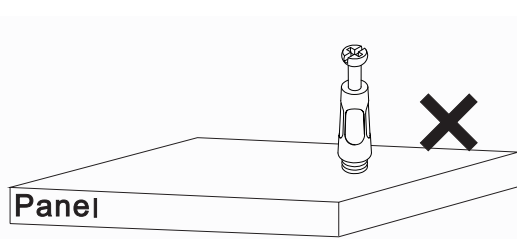


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

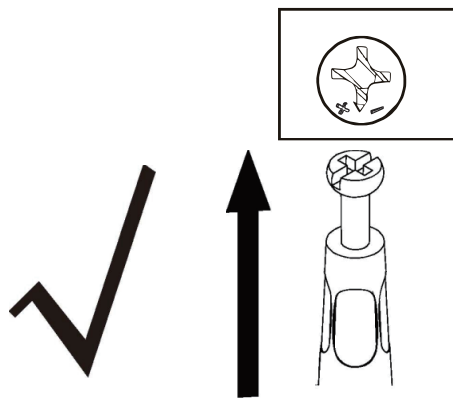


CORRECT

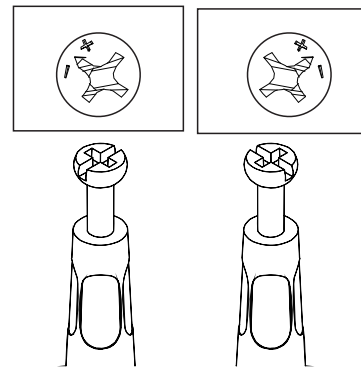


WRONG

When fitting cam lock, ensure starting position is correct before you insert cam lock to quickfit.

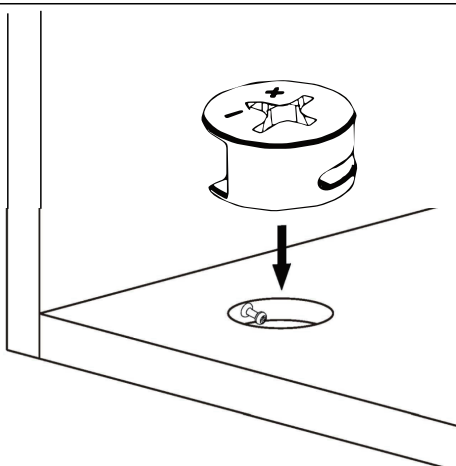


Quickfit head should be in the center of the cam lock. When the two panels are joined. Cam lock should be inserted before quickfit.













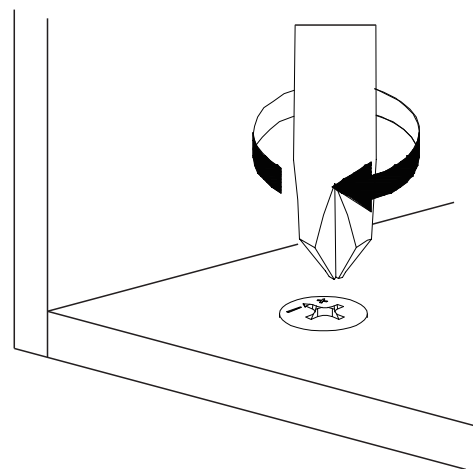


Turn cam lock clockwise to tighten.






PART LIST

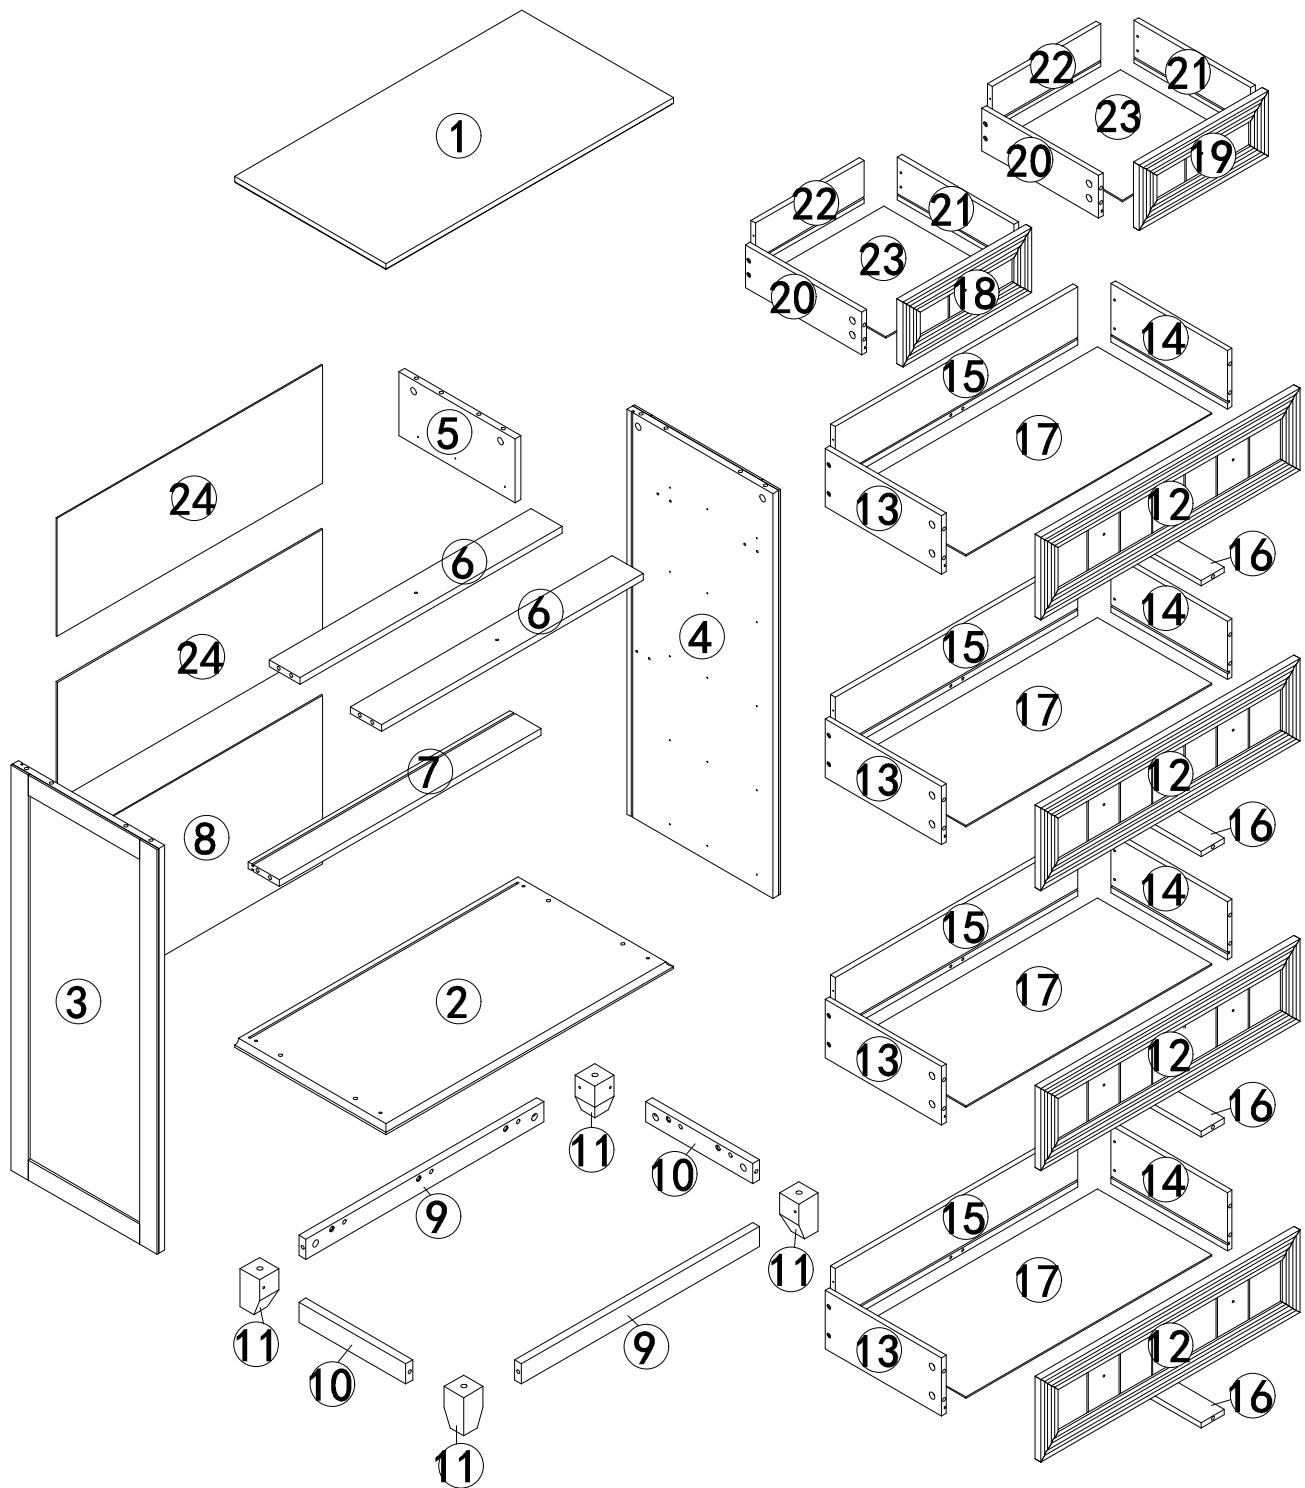









PART LIST

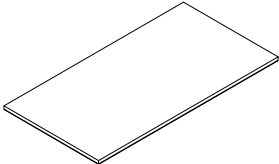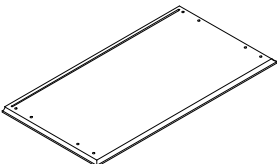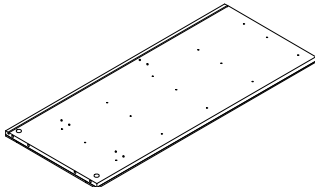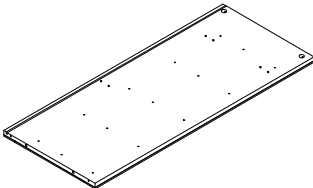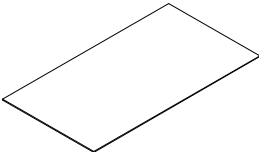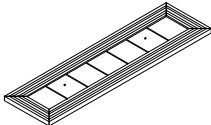①  1PC	②  1PC	③  1PC
④  1PC	⑤  1PC	⑥  2PCS
⑦  1PC	⑧  1PC	⑨  2PCS
⑩  2PCS	⑪  4PCS	⑫  4PCS
⑬  4PCS	⑭  4PCS	⑮  4PCS

PART LIST

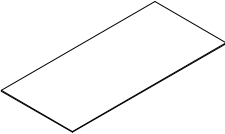
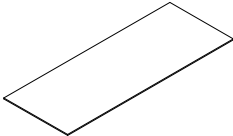
16  4PCS	17  4PCS	18  1PC
19  1PC	20  2PCS	21  2PCS
22  2PCS	23  2PCS	24  2PCS

HARDWARE LIST

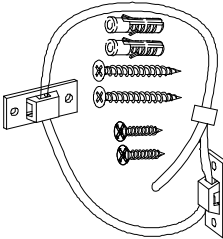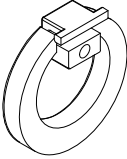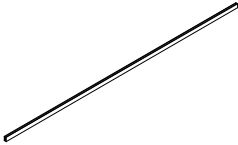
A  $\phi 6 \times 35$ (54+4)PCS	B  $\phi 15 \times 9.5$ (54+4)PCS	C  (10+1)PCS
D  $\phi 8 \times 30$ (14+1)PCS	E  (38+3)PCS	F  $\phi 6 \times 12$ (20+2)PCS
G  10PCS	H  (10+1)PCS	I  $\phi 3 \times 15$ (10+1)PCS
J  6SET	K  $\phi 3 \times 12$ (72+3)PCS	L  2SET
M  10PCS	N  1PC	 2PCS
 1PC		




J X 6SET




CL




CR



DL




DR

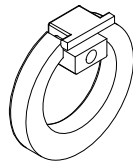


=



+

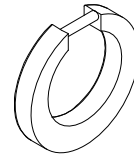


M

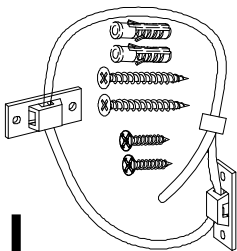

L

=

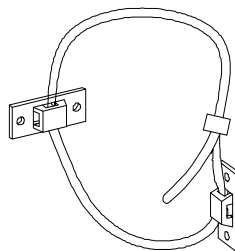

+







+



+




STEP 1

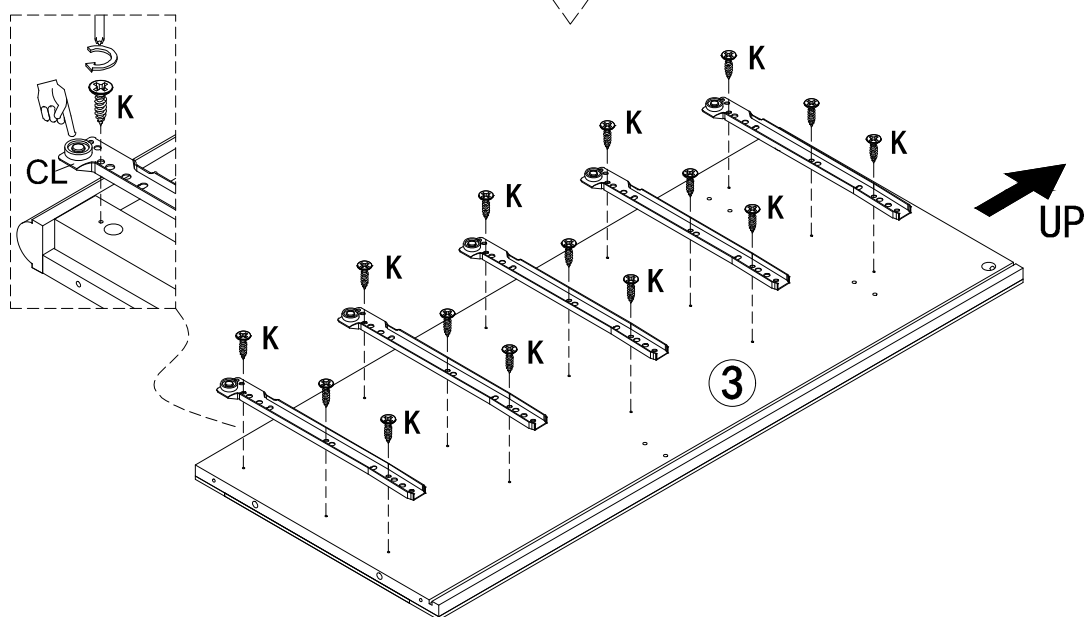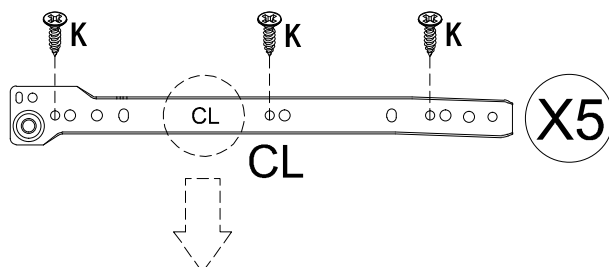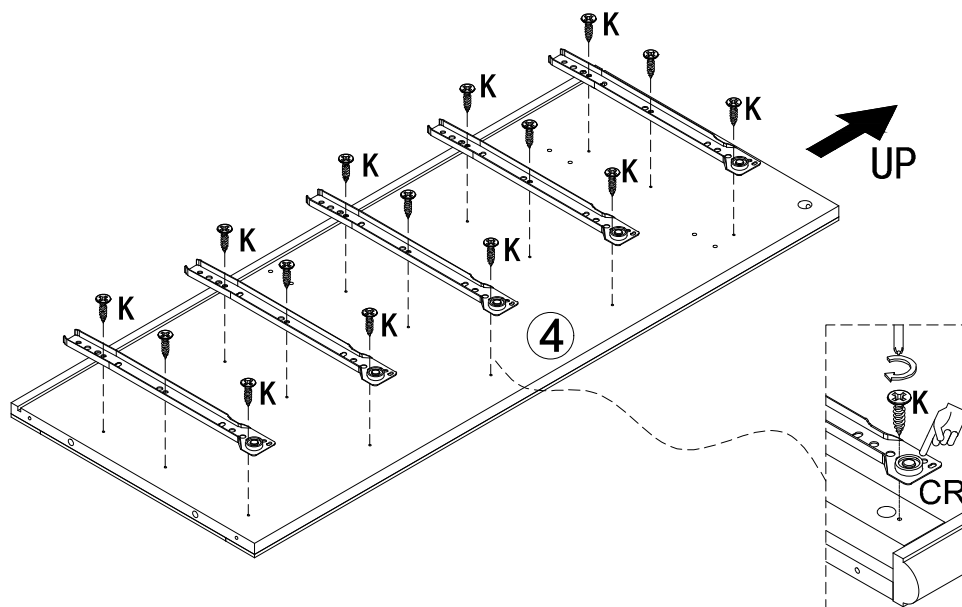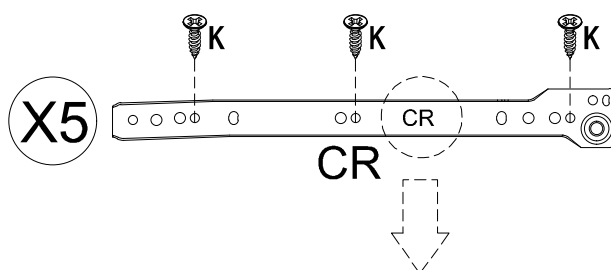

K X 30PCS


STEP 2

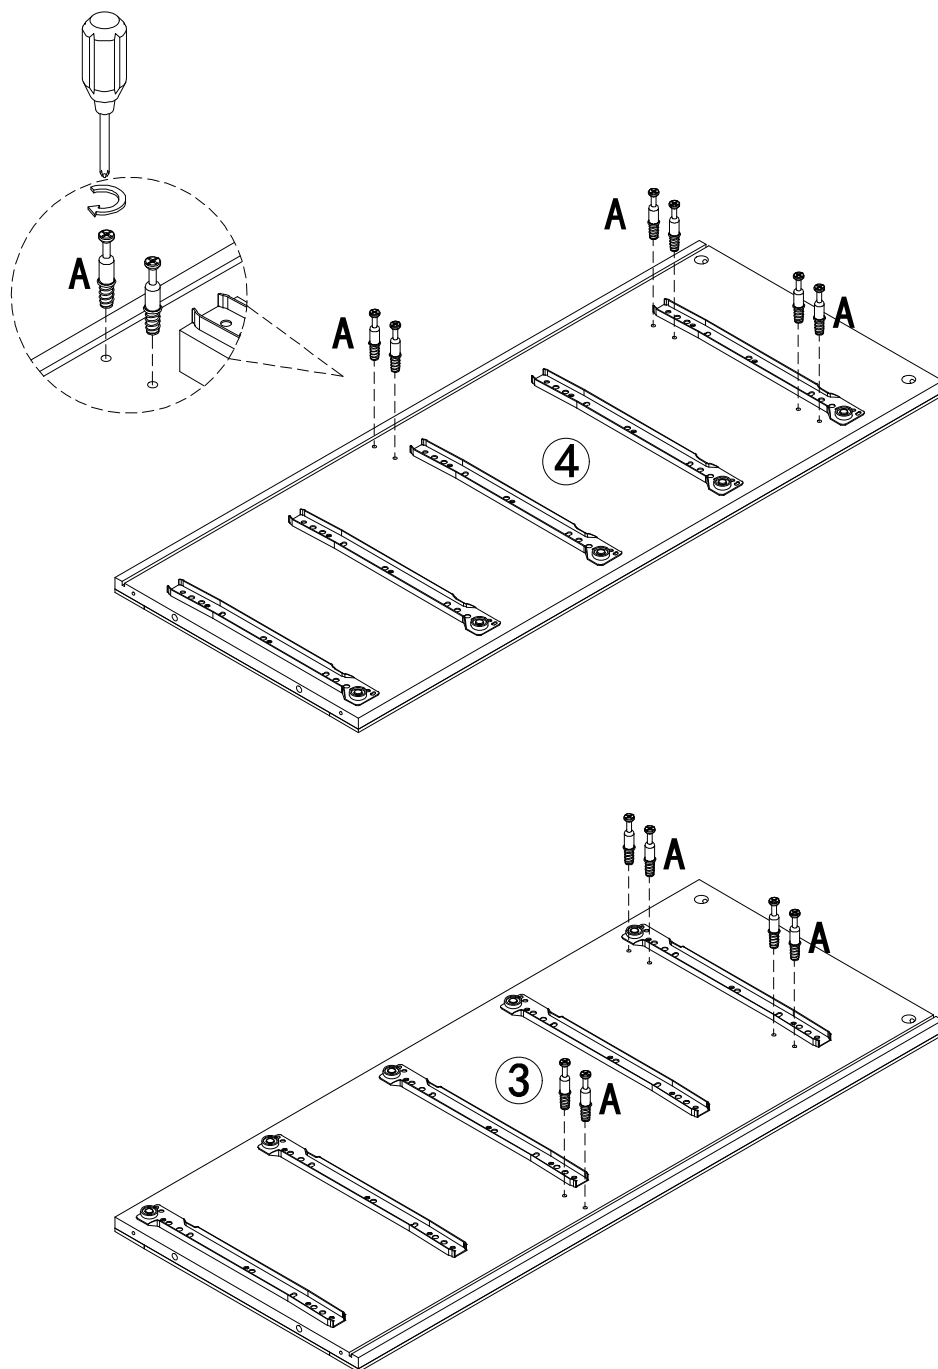


A X 12PCS

STEP 3


Pay attention to the hole position

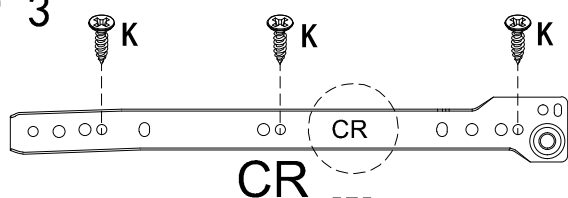


CR

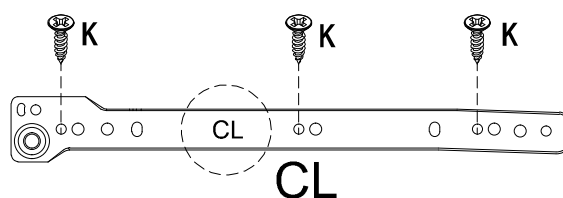

CL

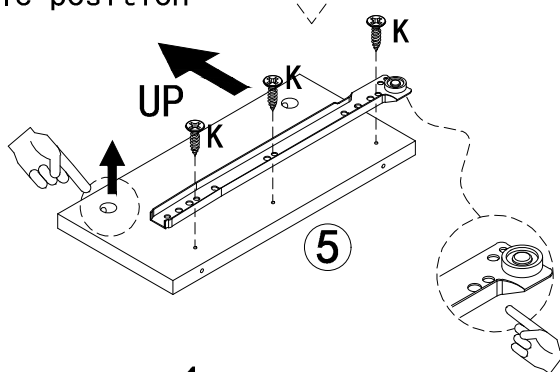

1

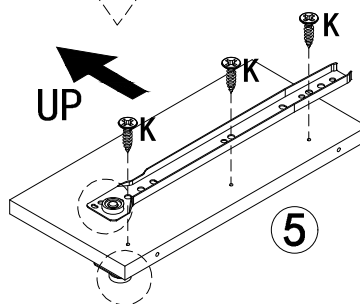


2

ROTATE 180°




K X 6PCS

STEP 4

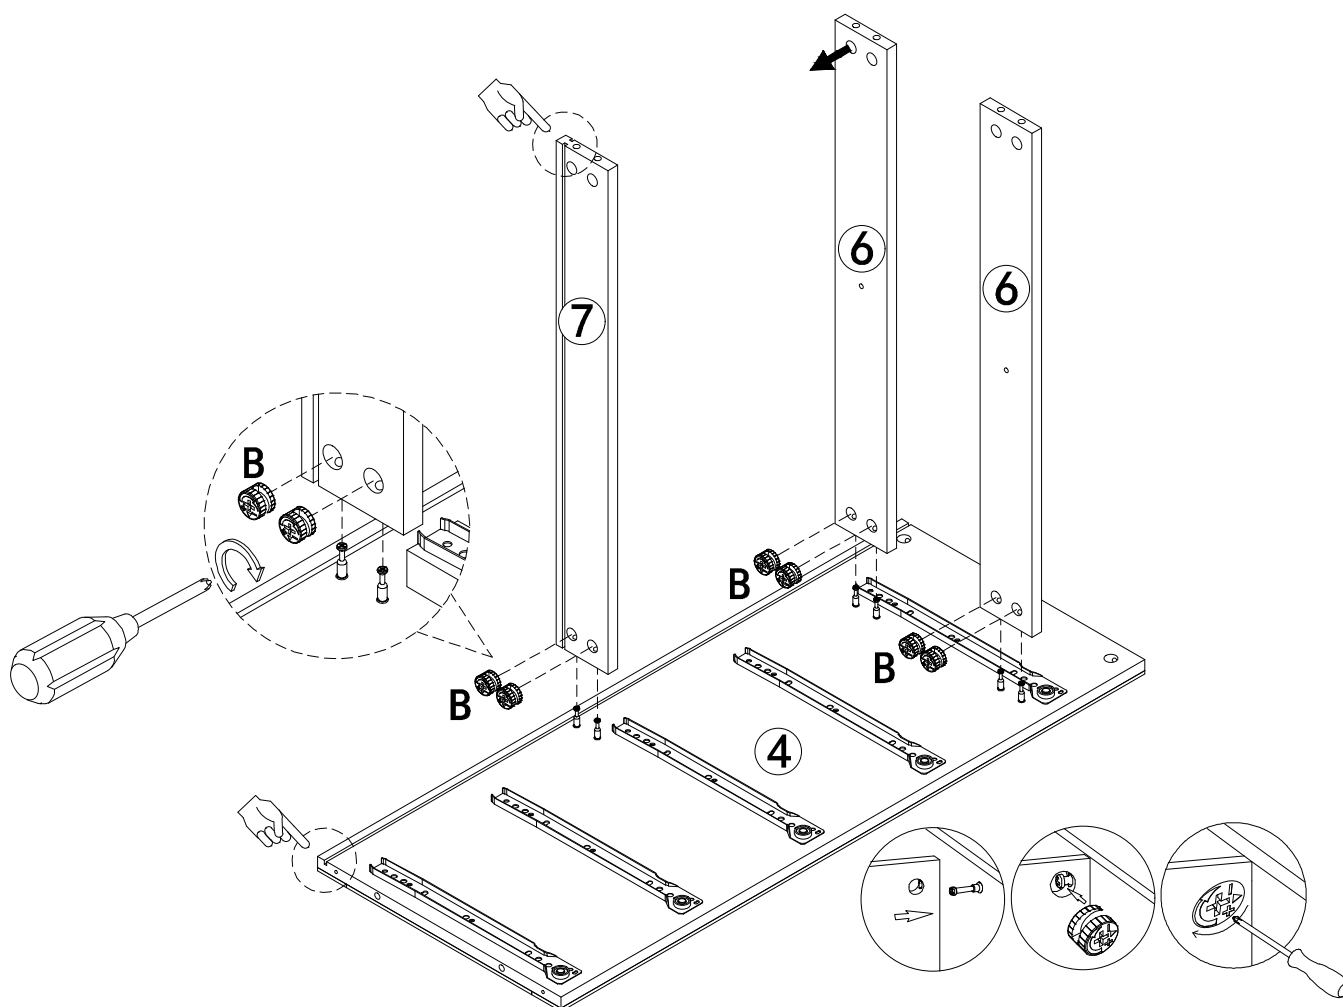


B X 6PCS

STEP 5

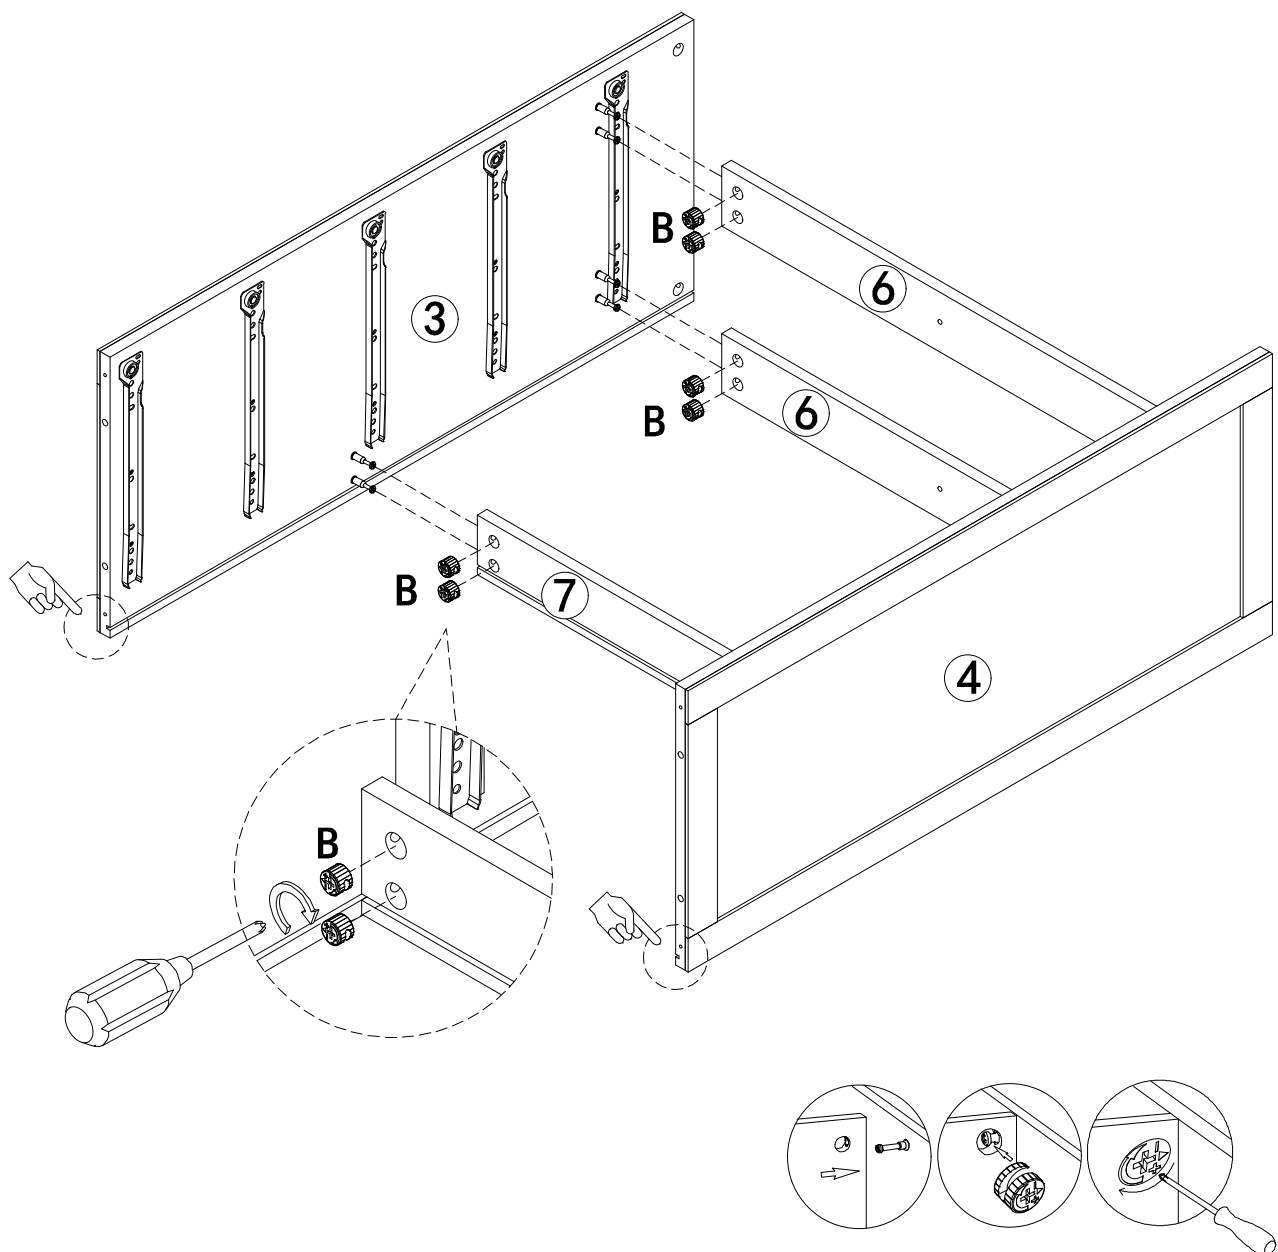


B X 6PCS

STEP 6

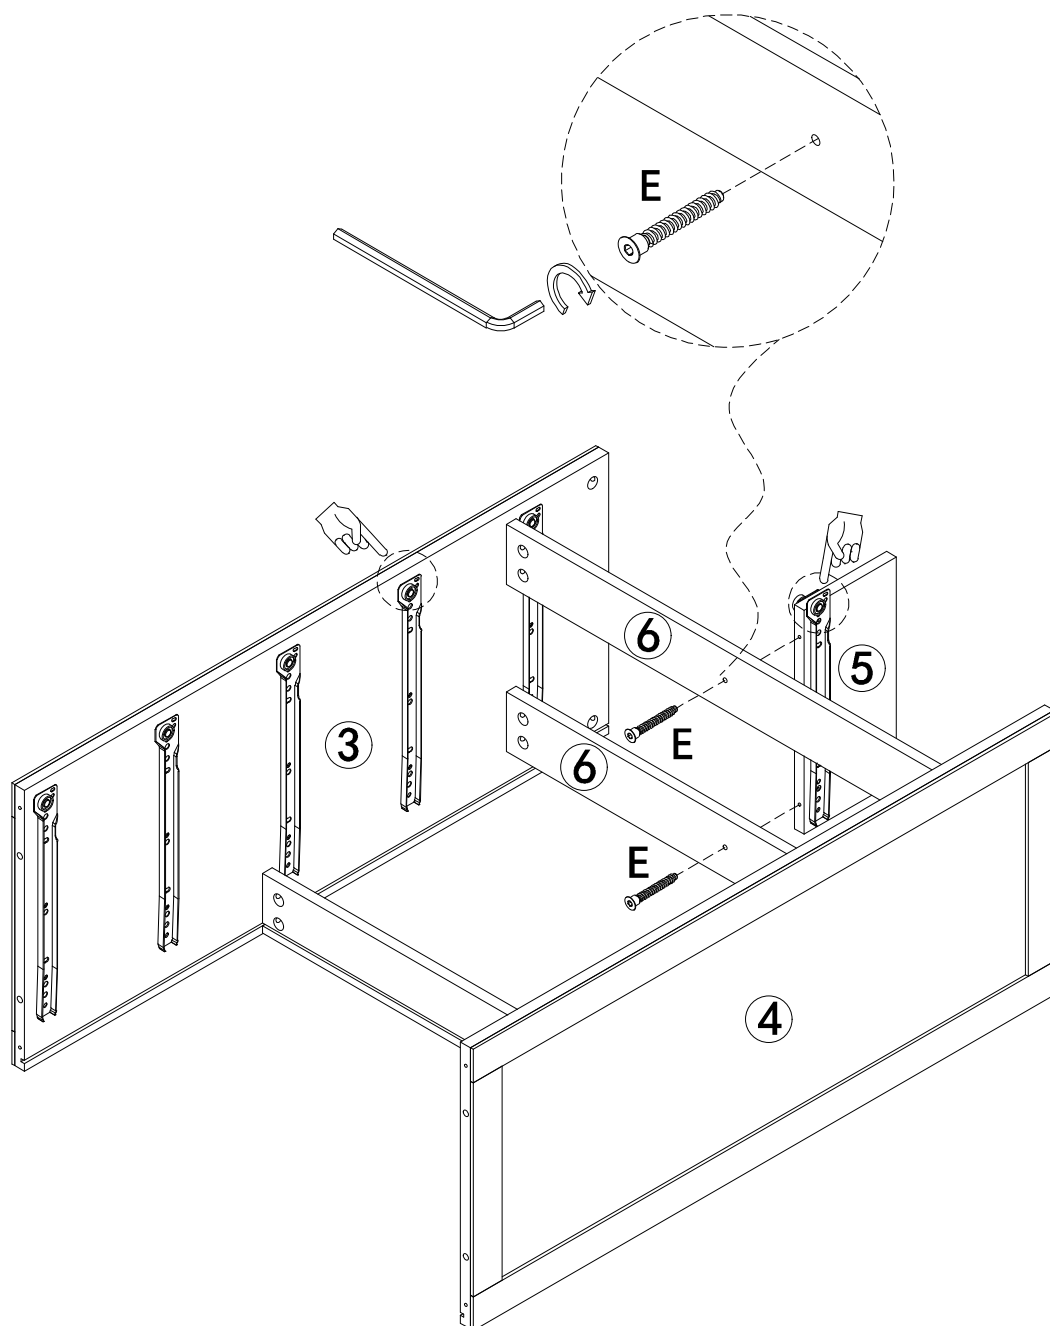


E X 2PCS

STEP 7

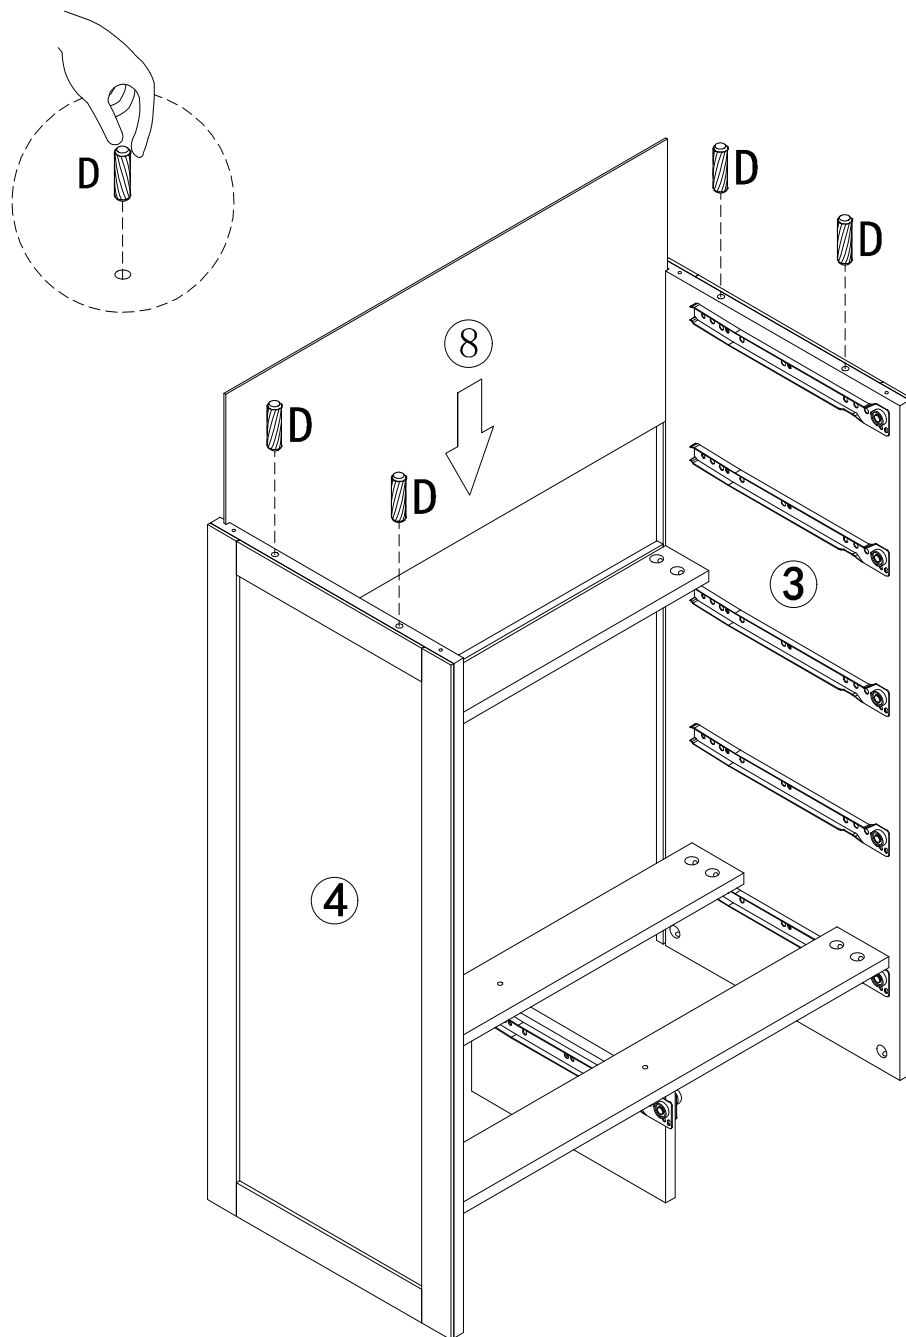


D X 4PCS

STEP 8

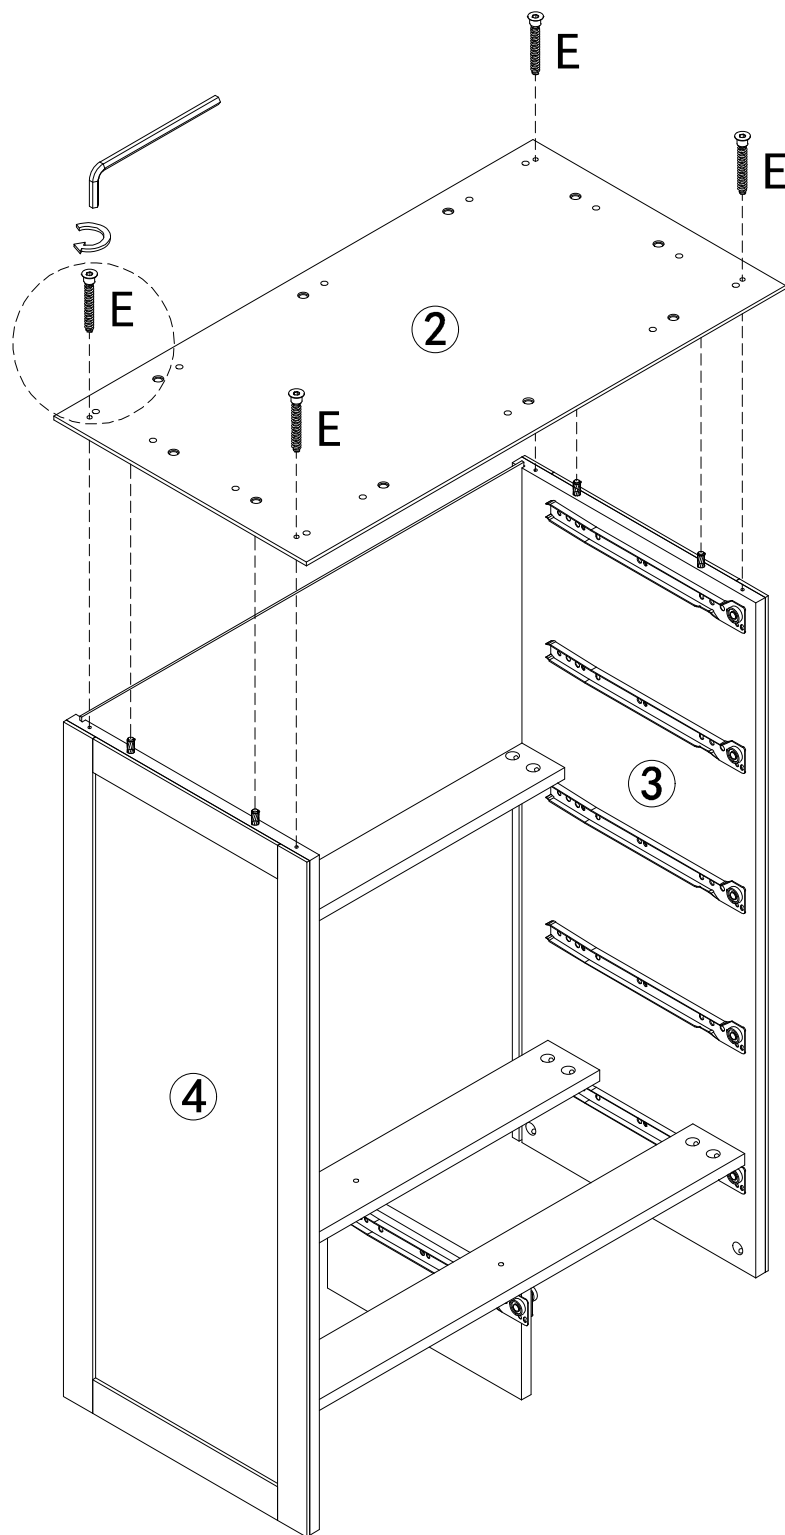


E X 4PCS


STEP 9

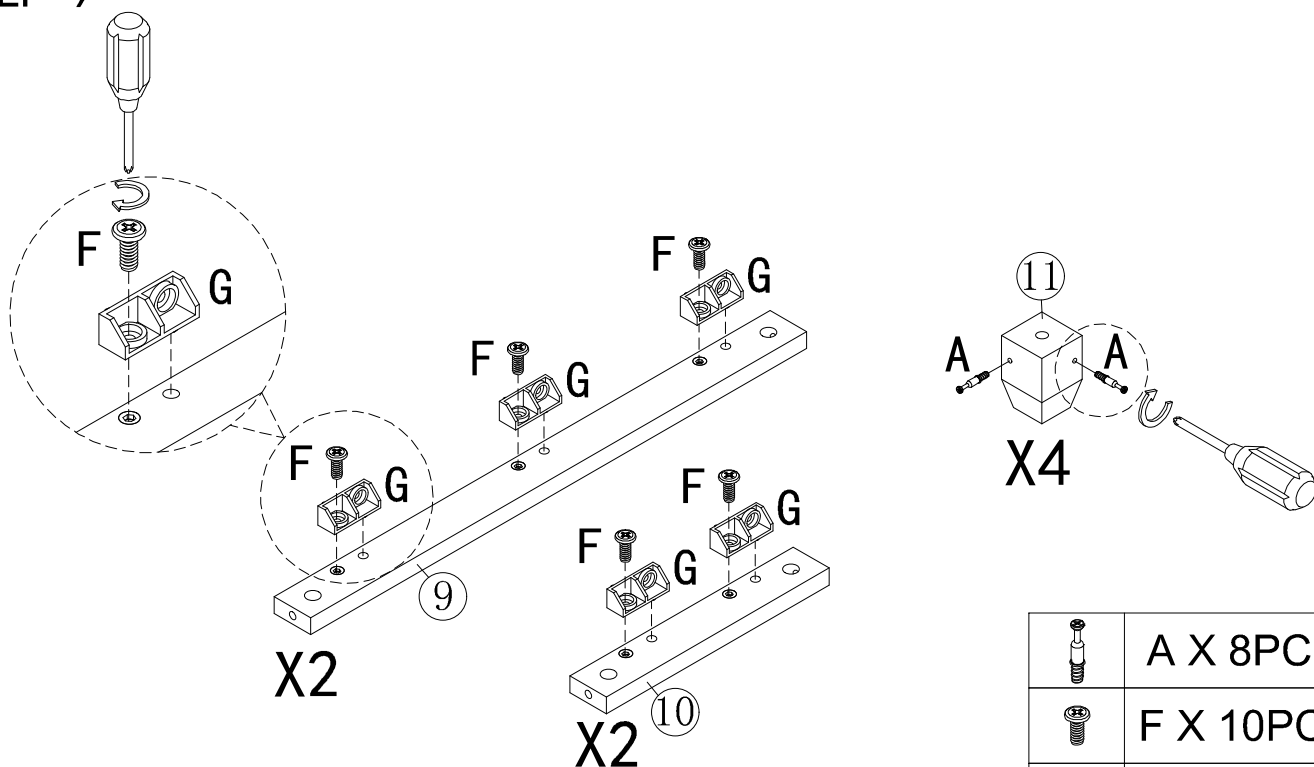

STEP 10

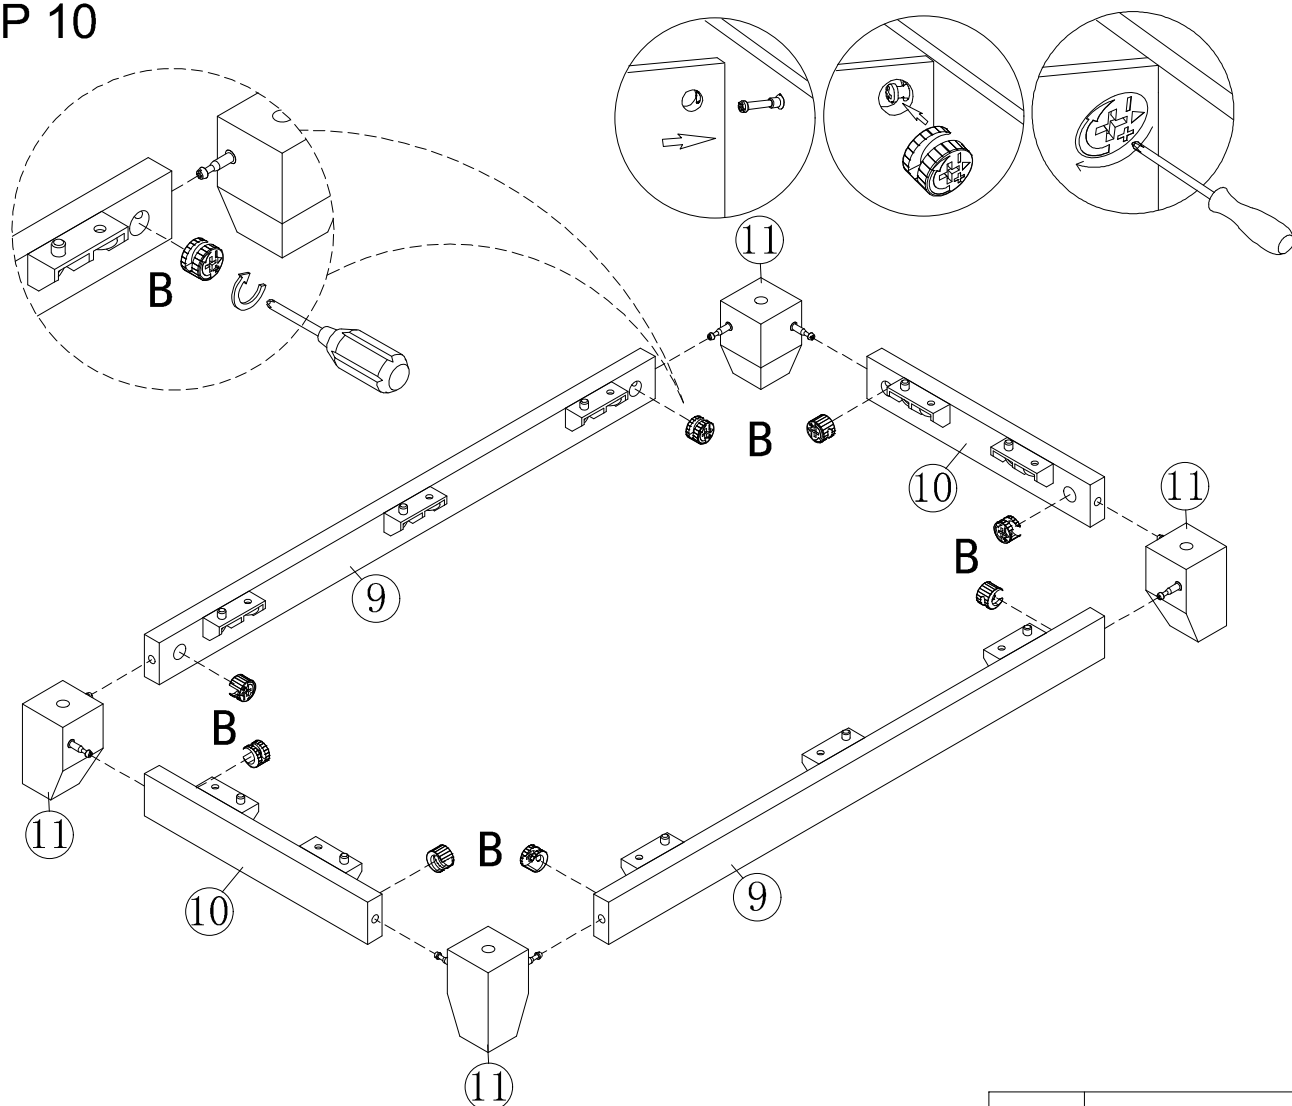


STEP 11

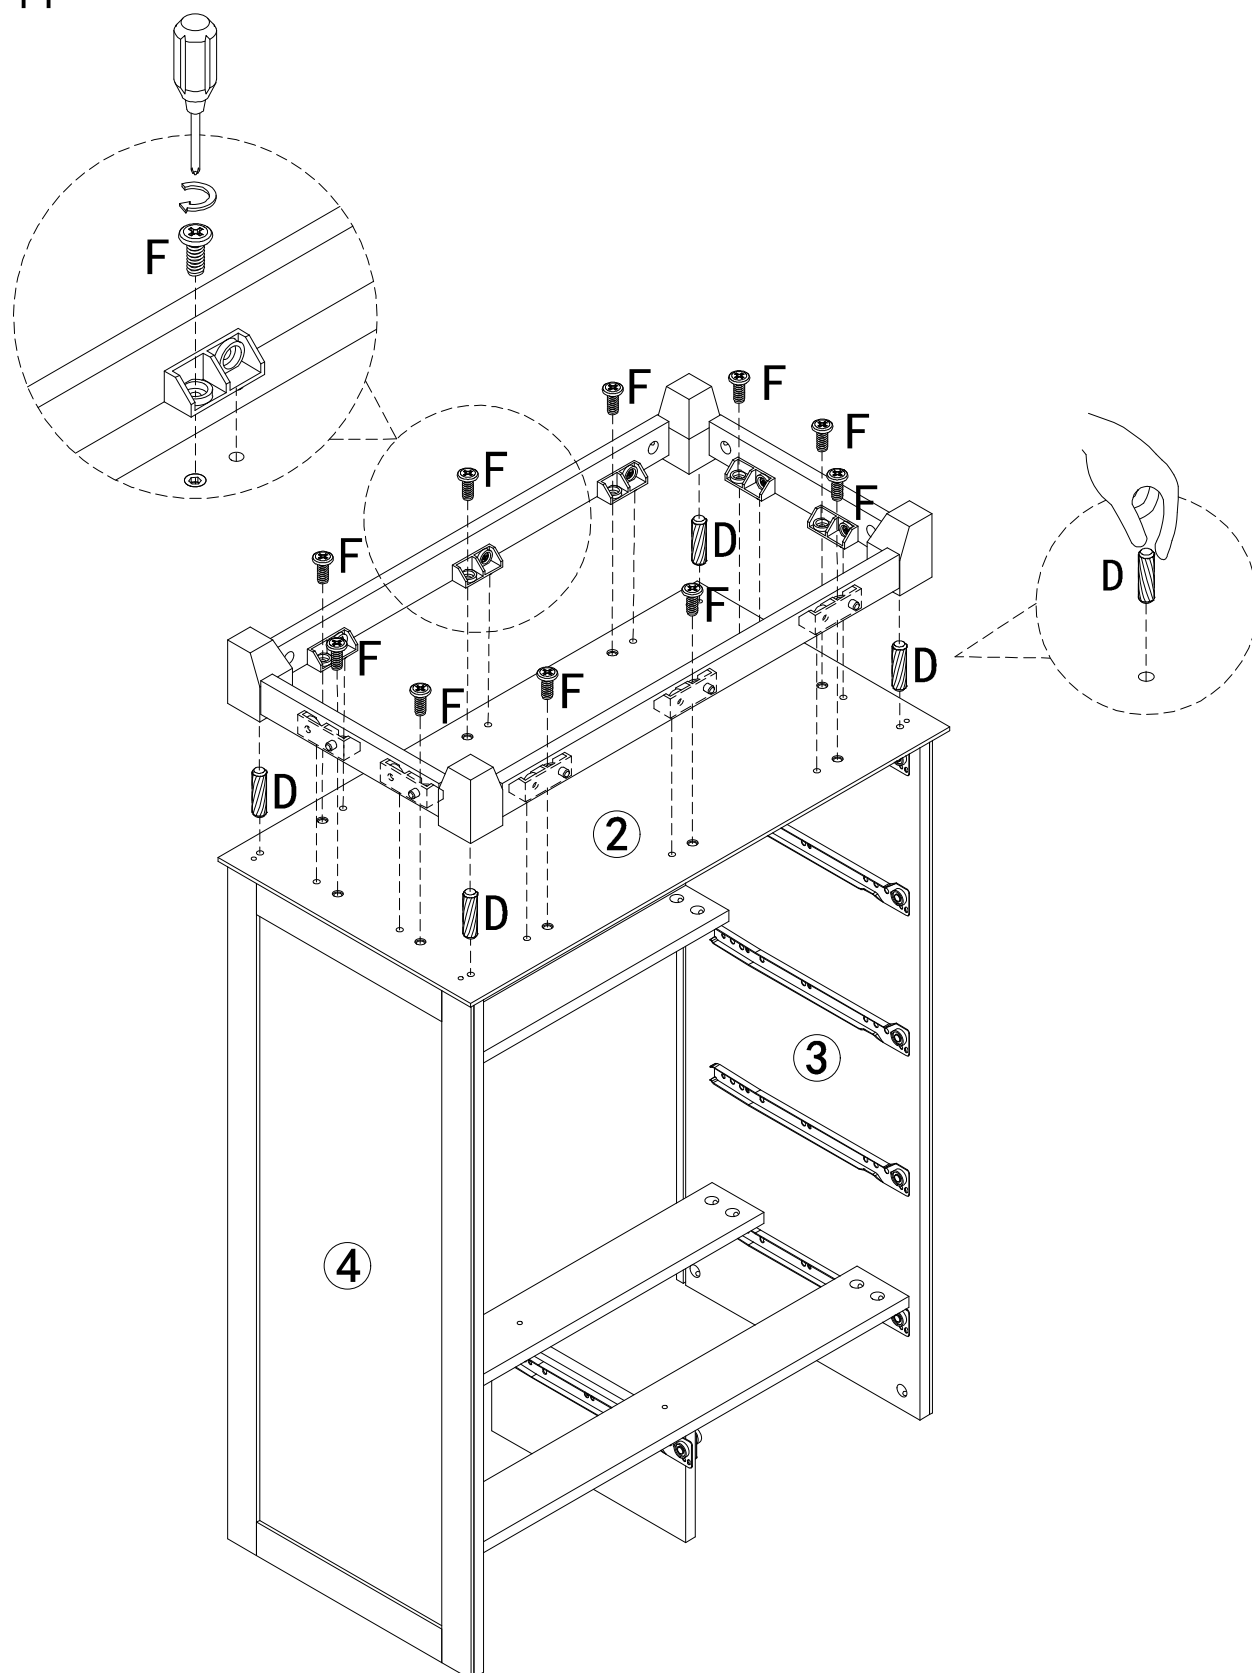


	D X 4PCS
	F X 10PCS

STEP 12

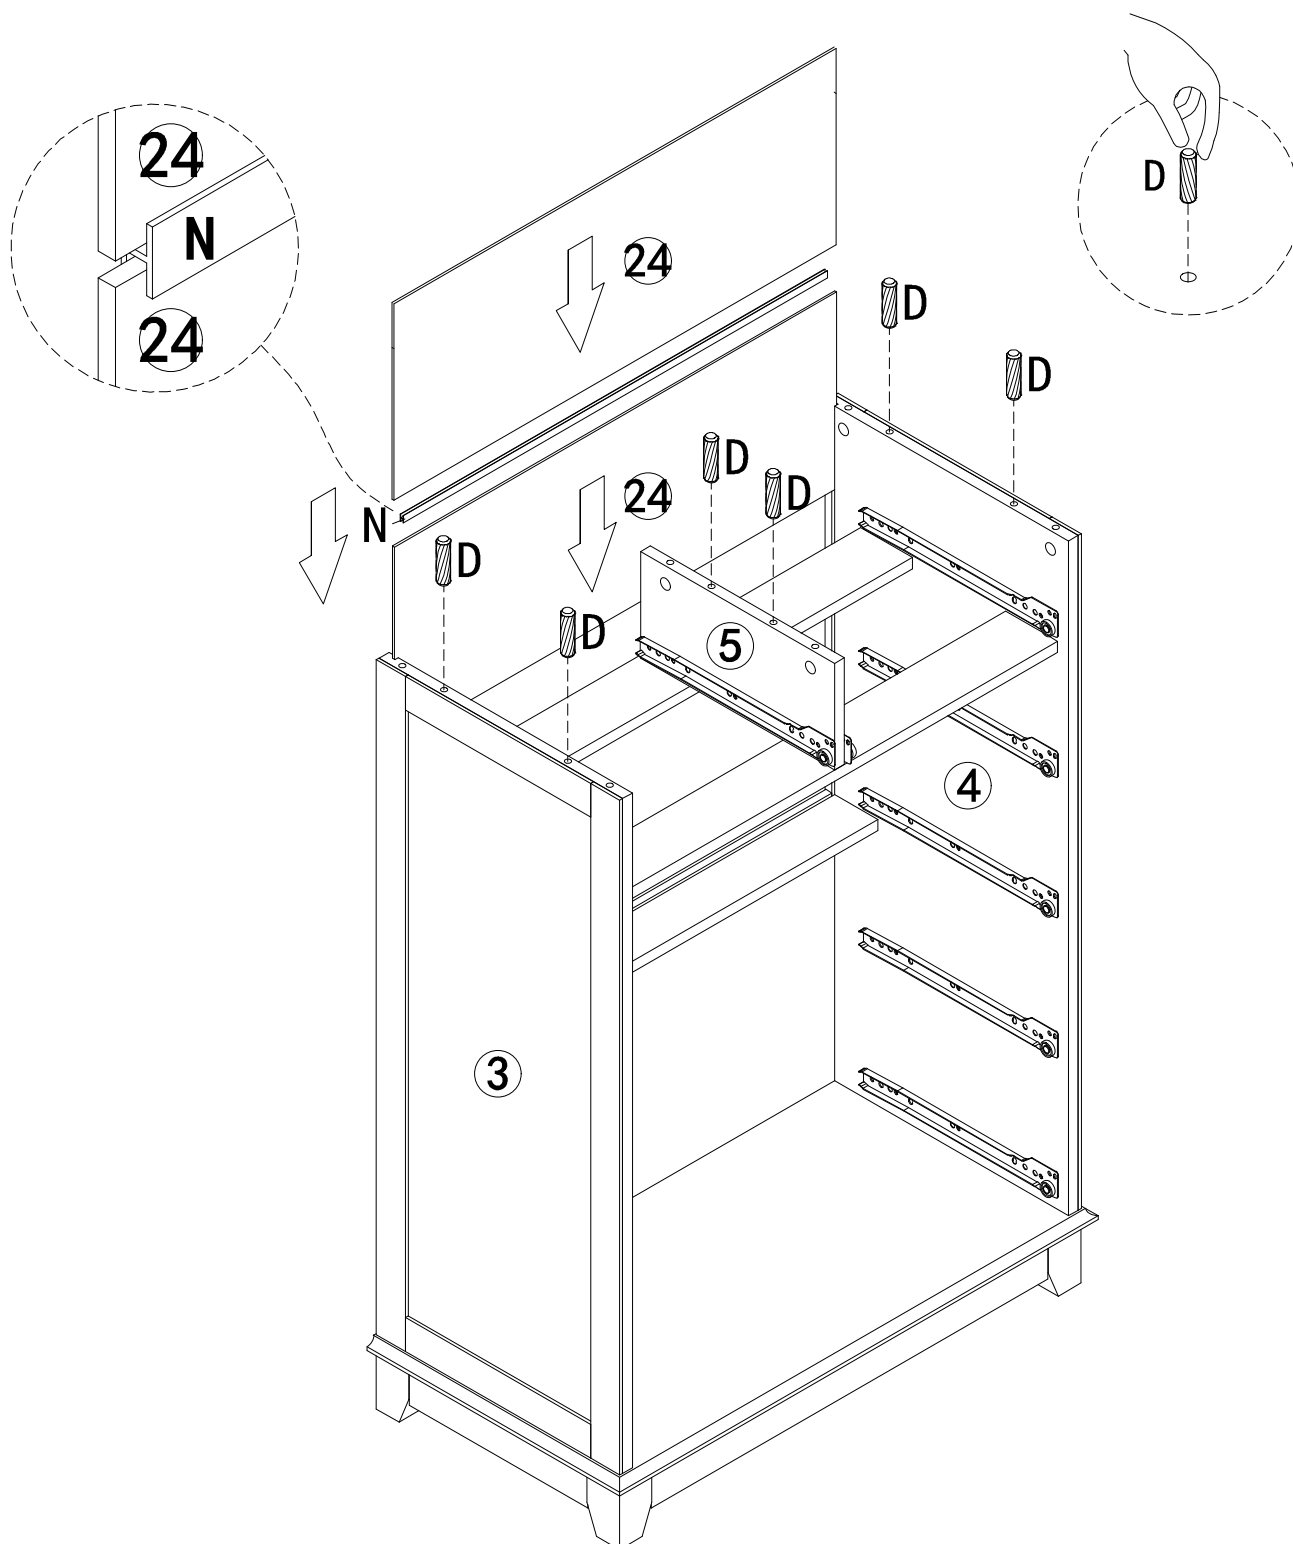


	N X 1PC
	D X 6PCS

STEP 13

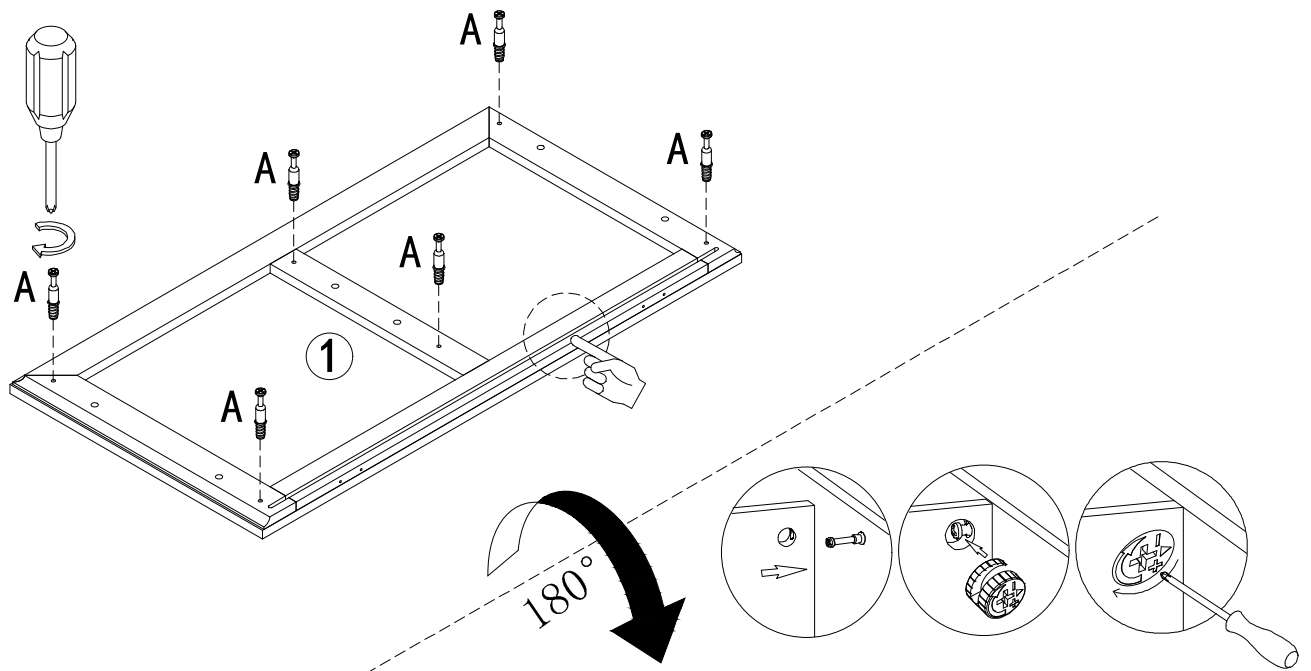


NOTE: that the slot is under here

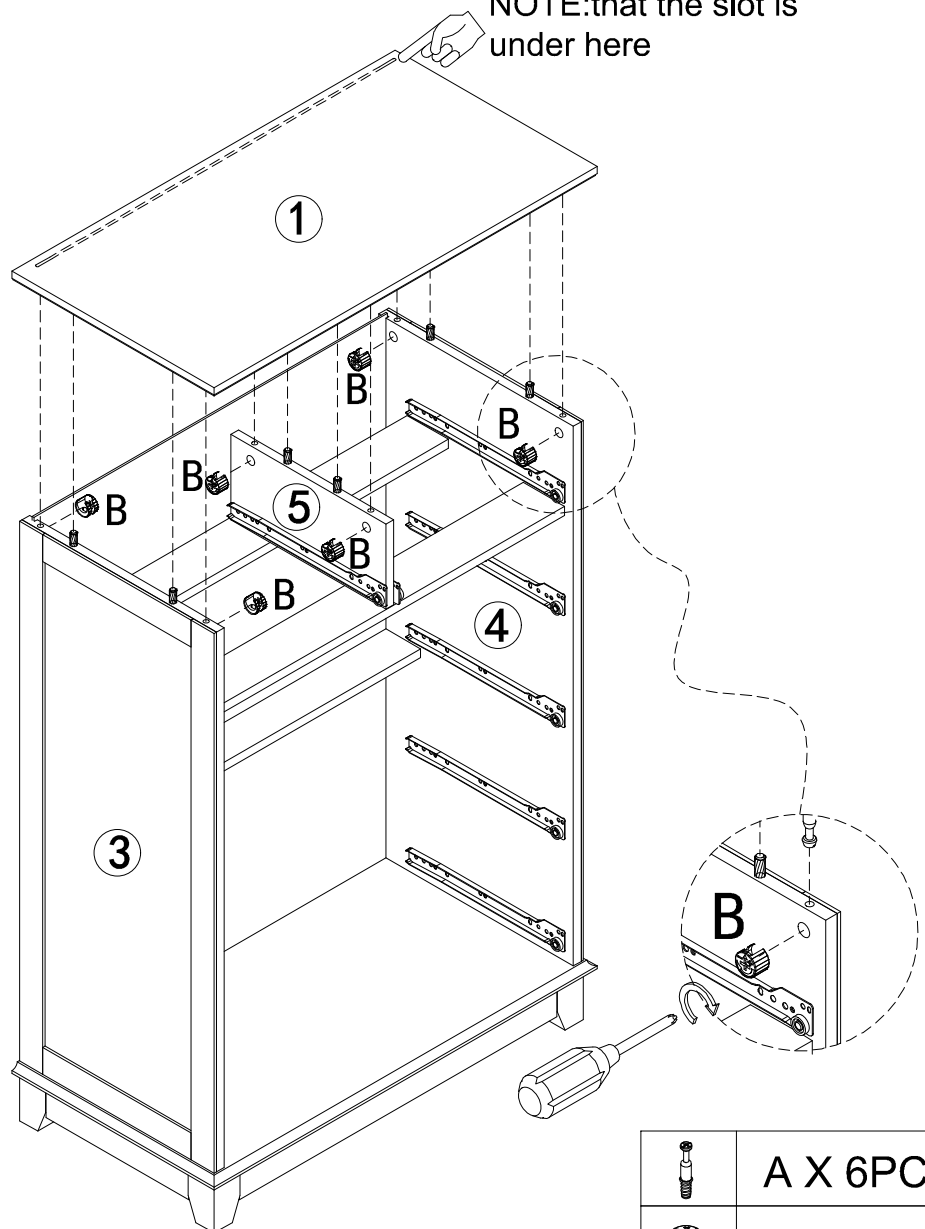


	A X 6PCS
	B X 6PCS

STEP 14

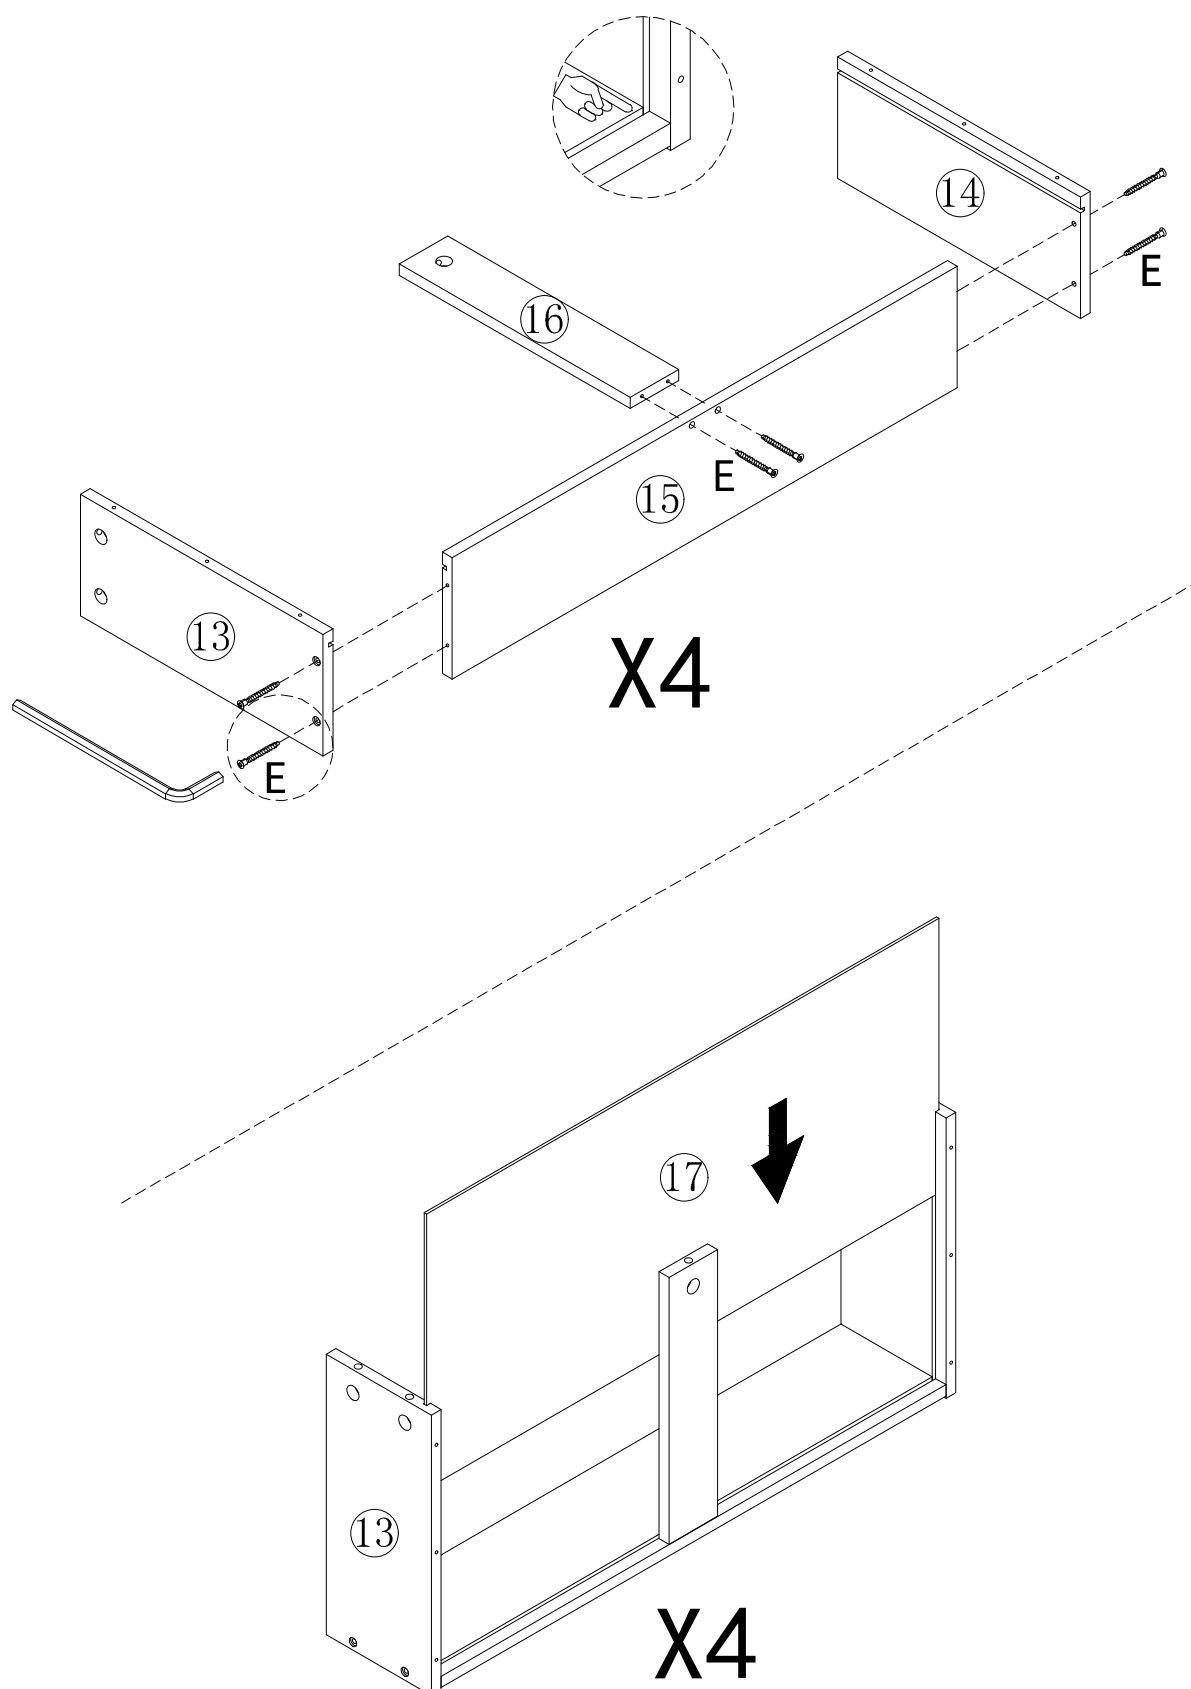



E X 24PCS

STEP 15

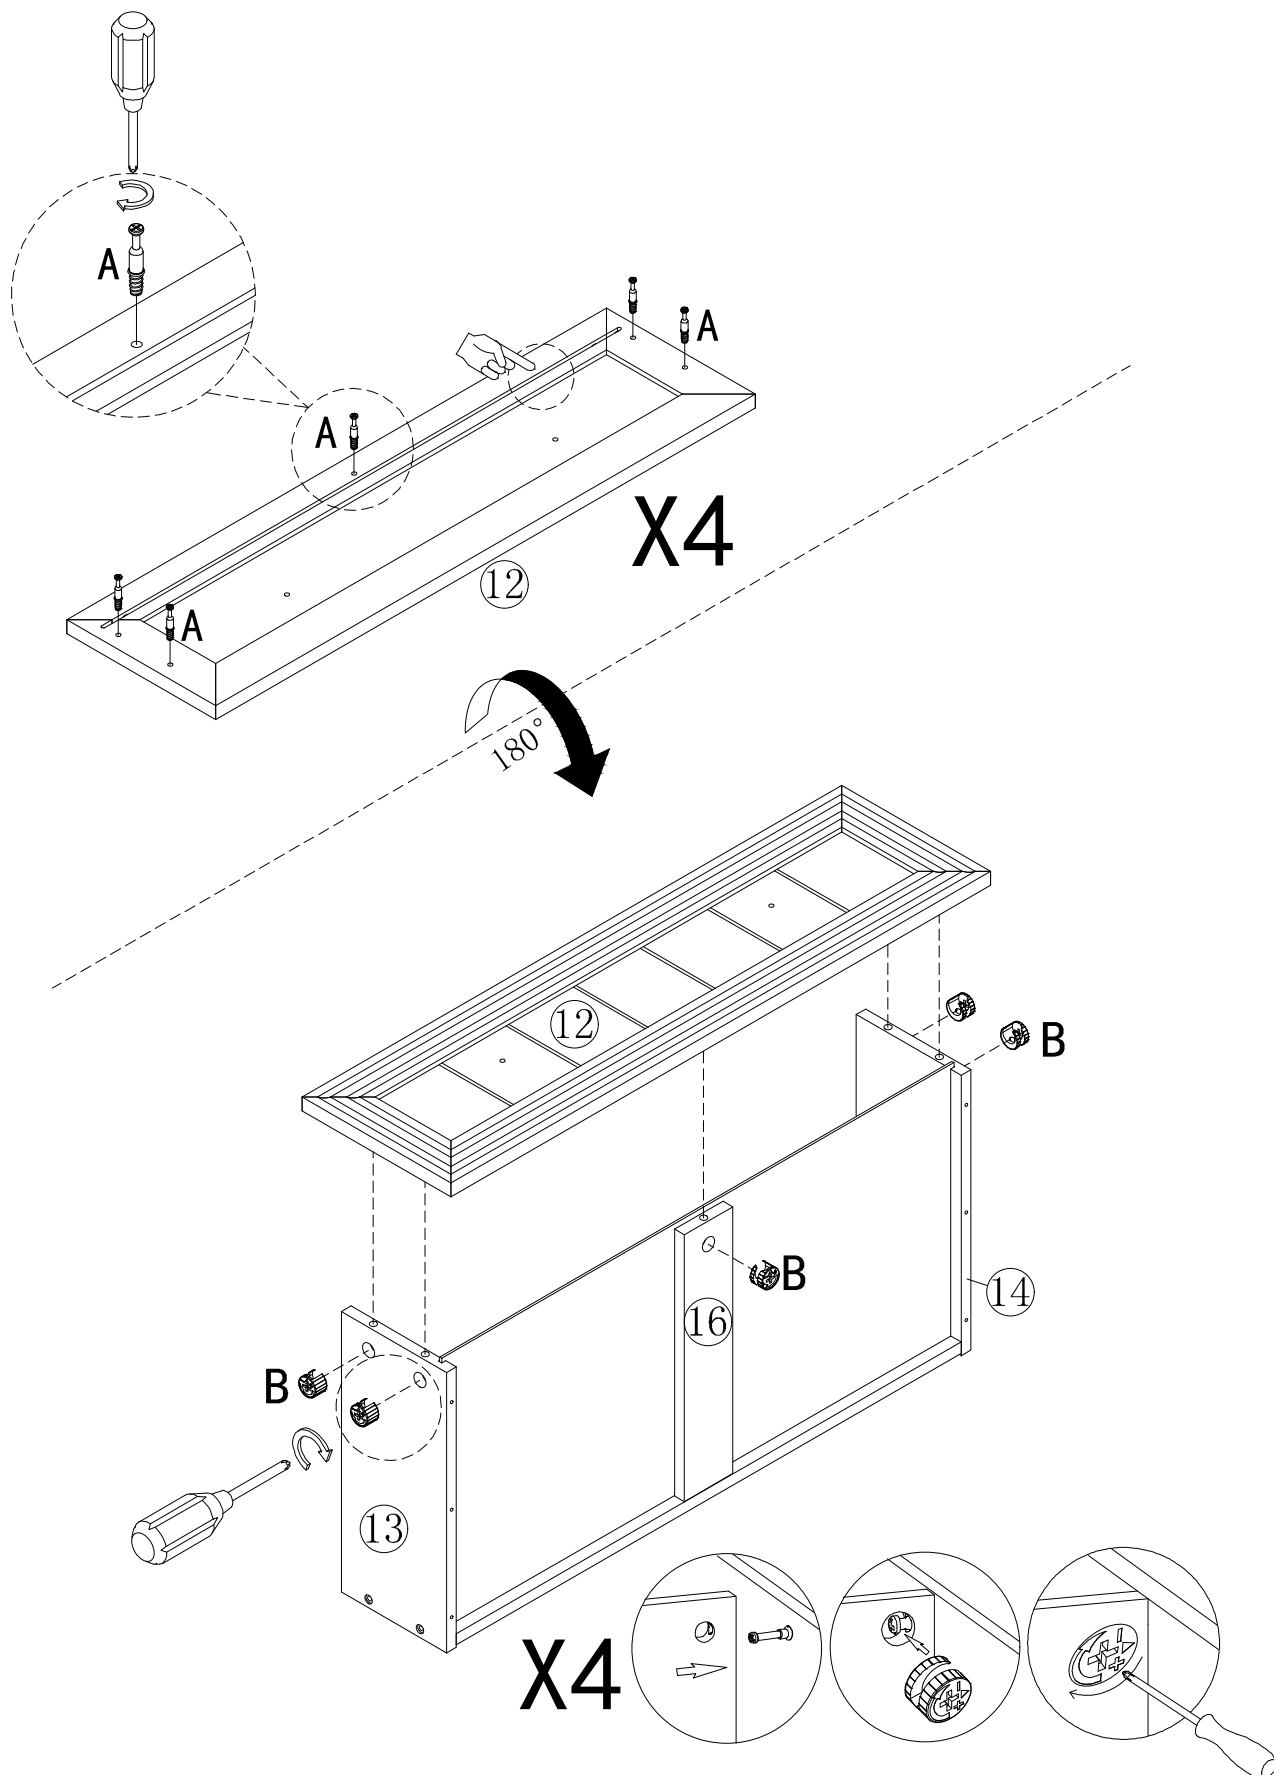

	A X 20PCS
	B X 20PCS


STEP 16

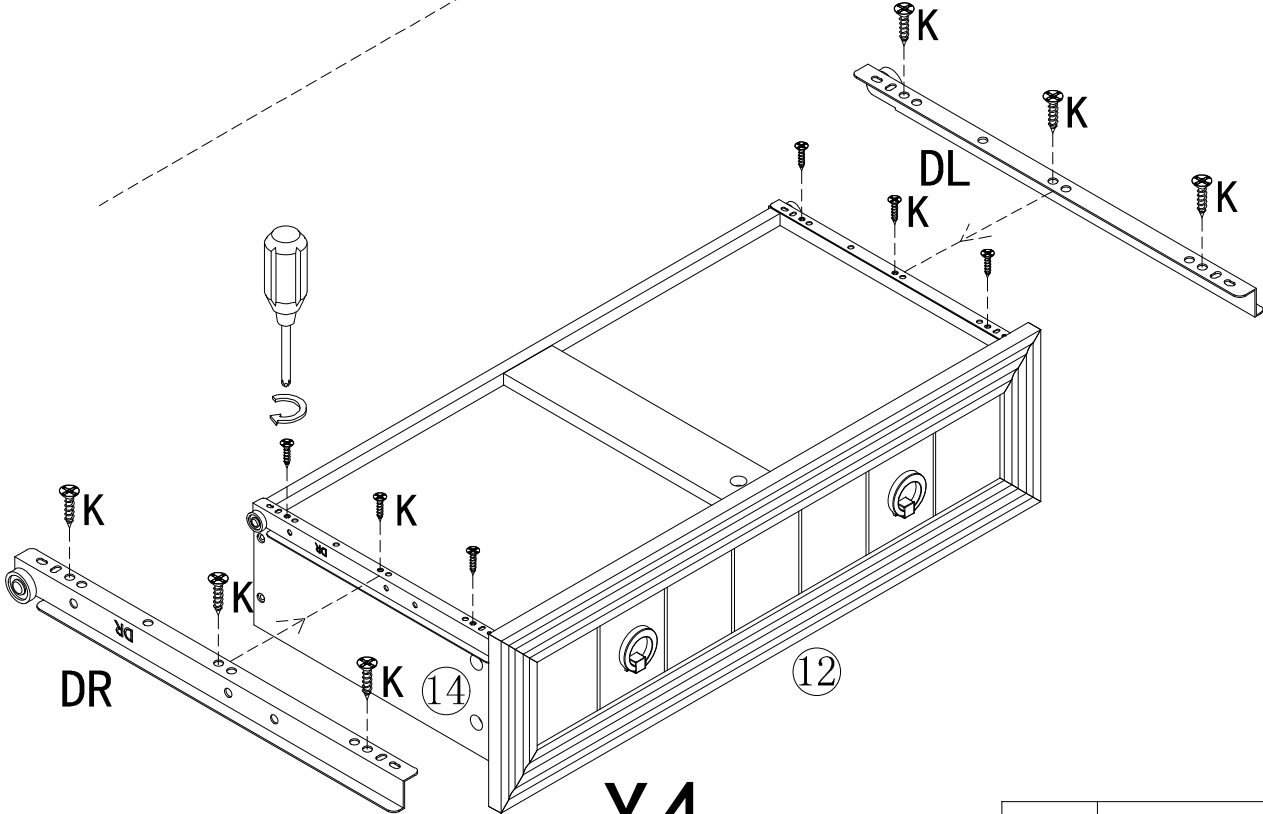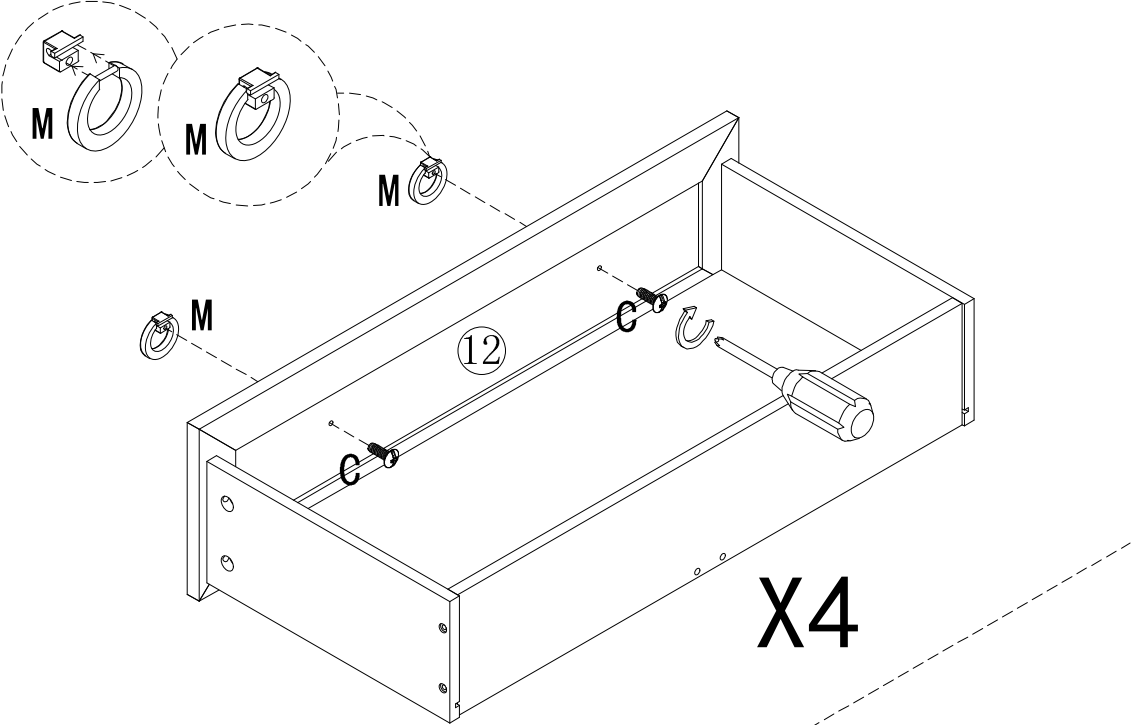


Pay attention to
the hole position

	K X 24PCS
	M X 8PCS
	C X 8PCS


STEP 17

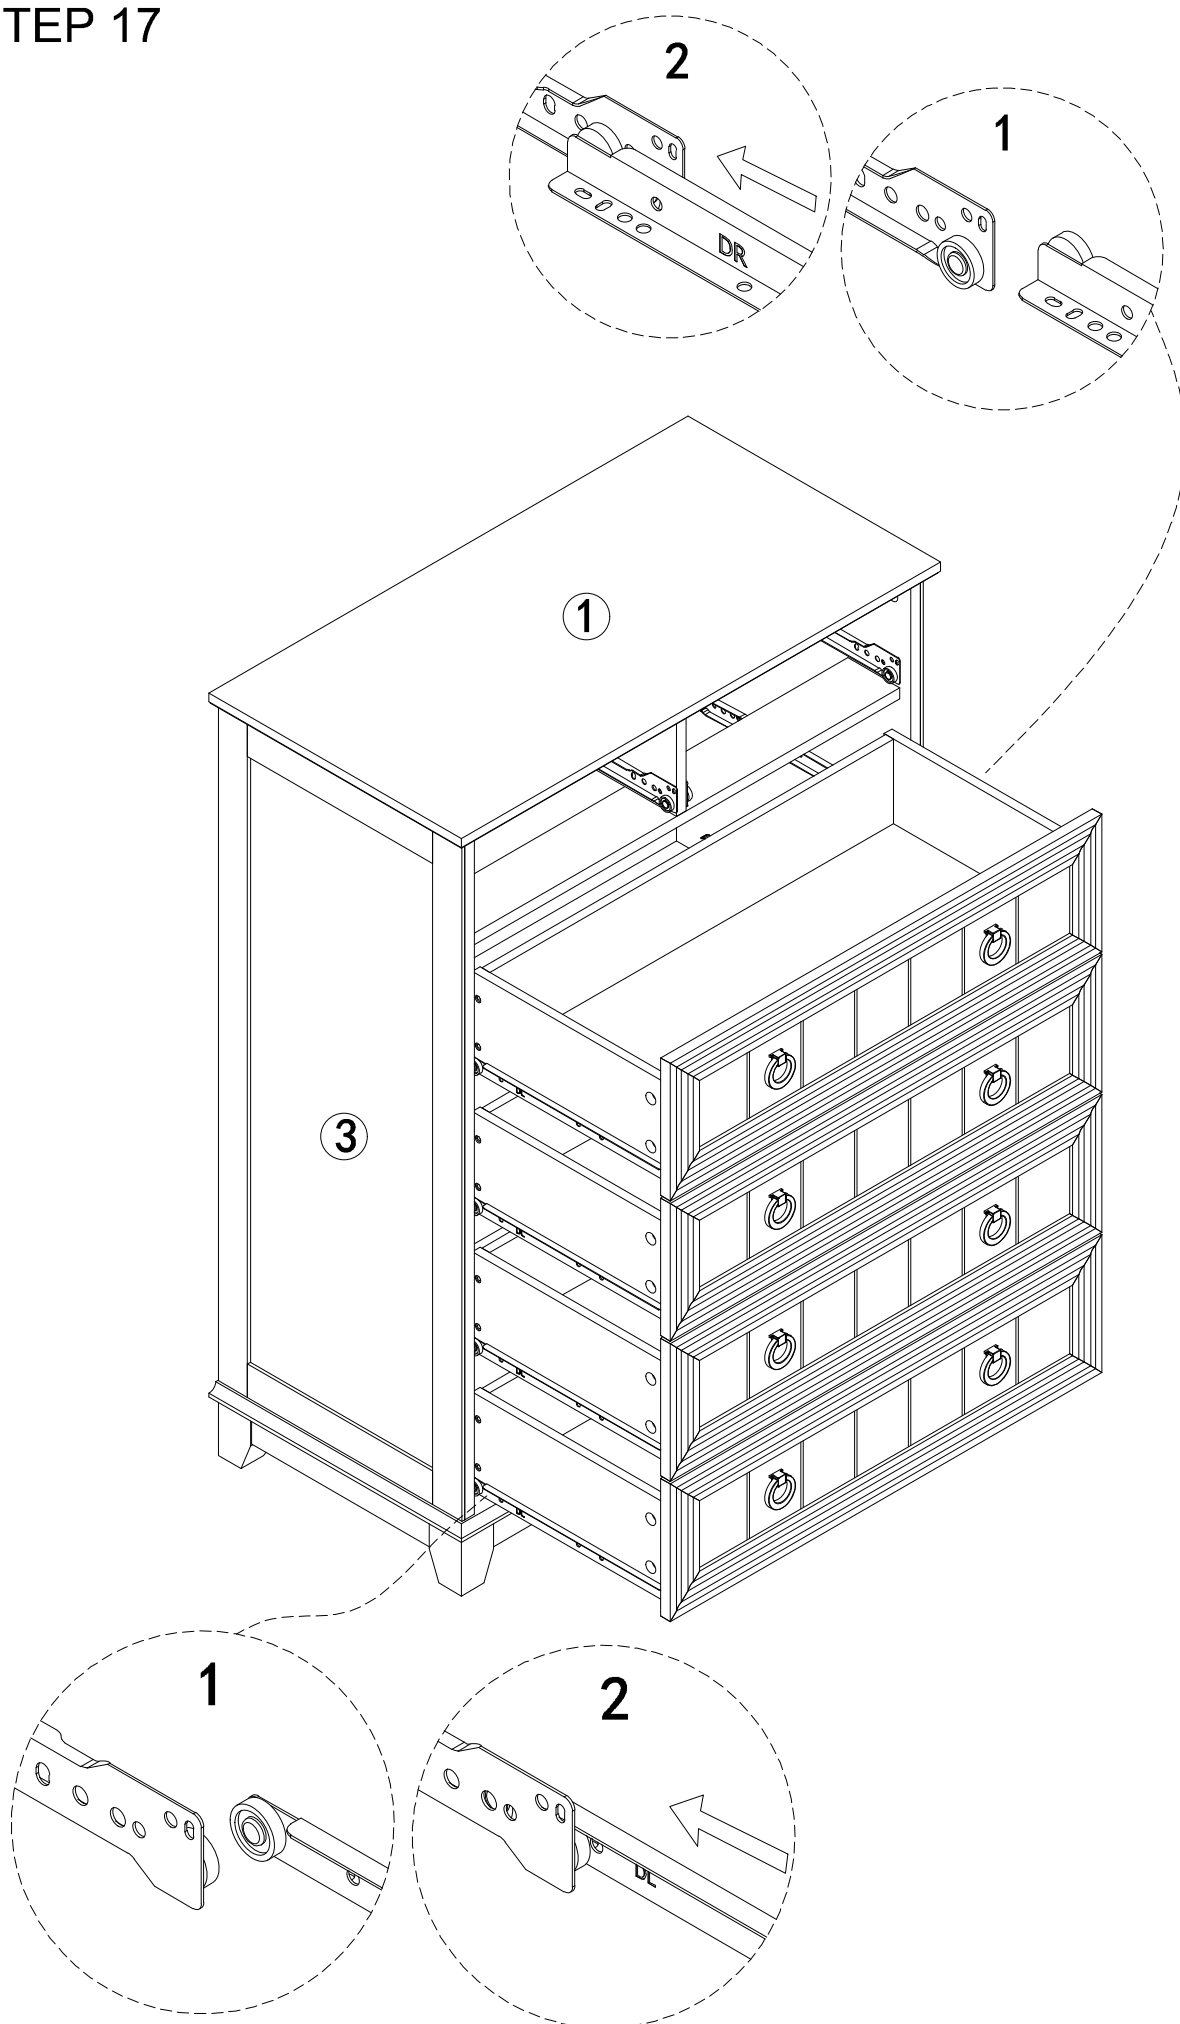

STEP 18

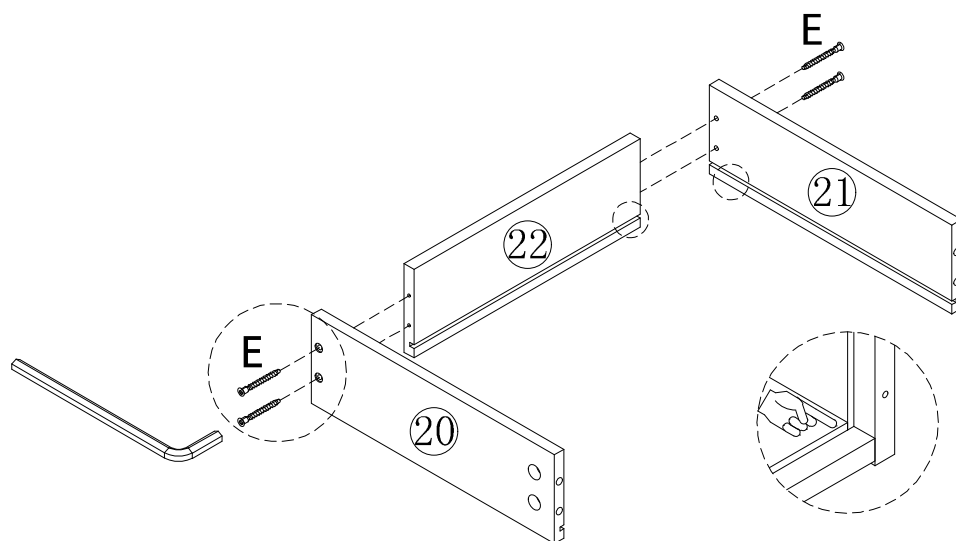

X2

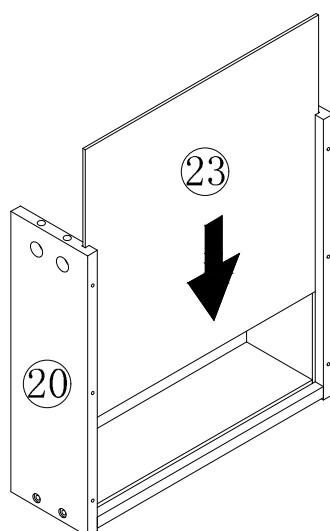


X2




E X 8PCS

STEP 19

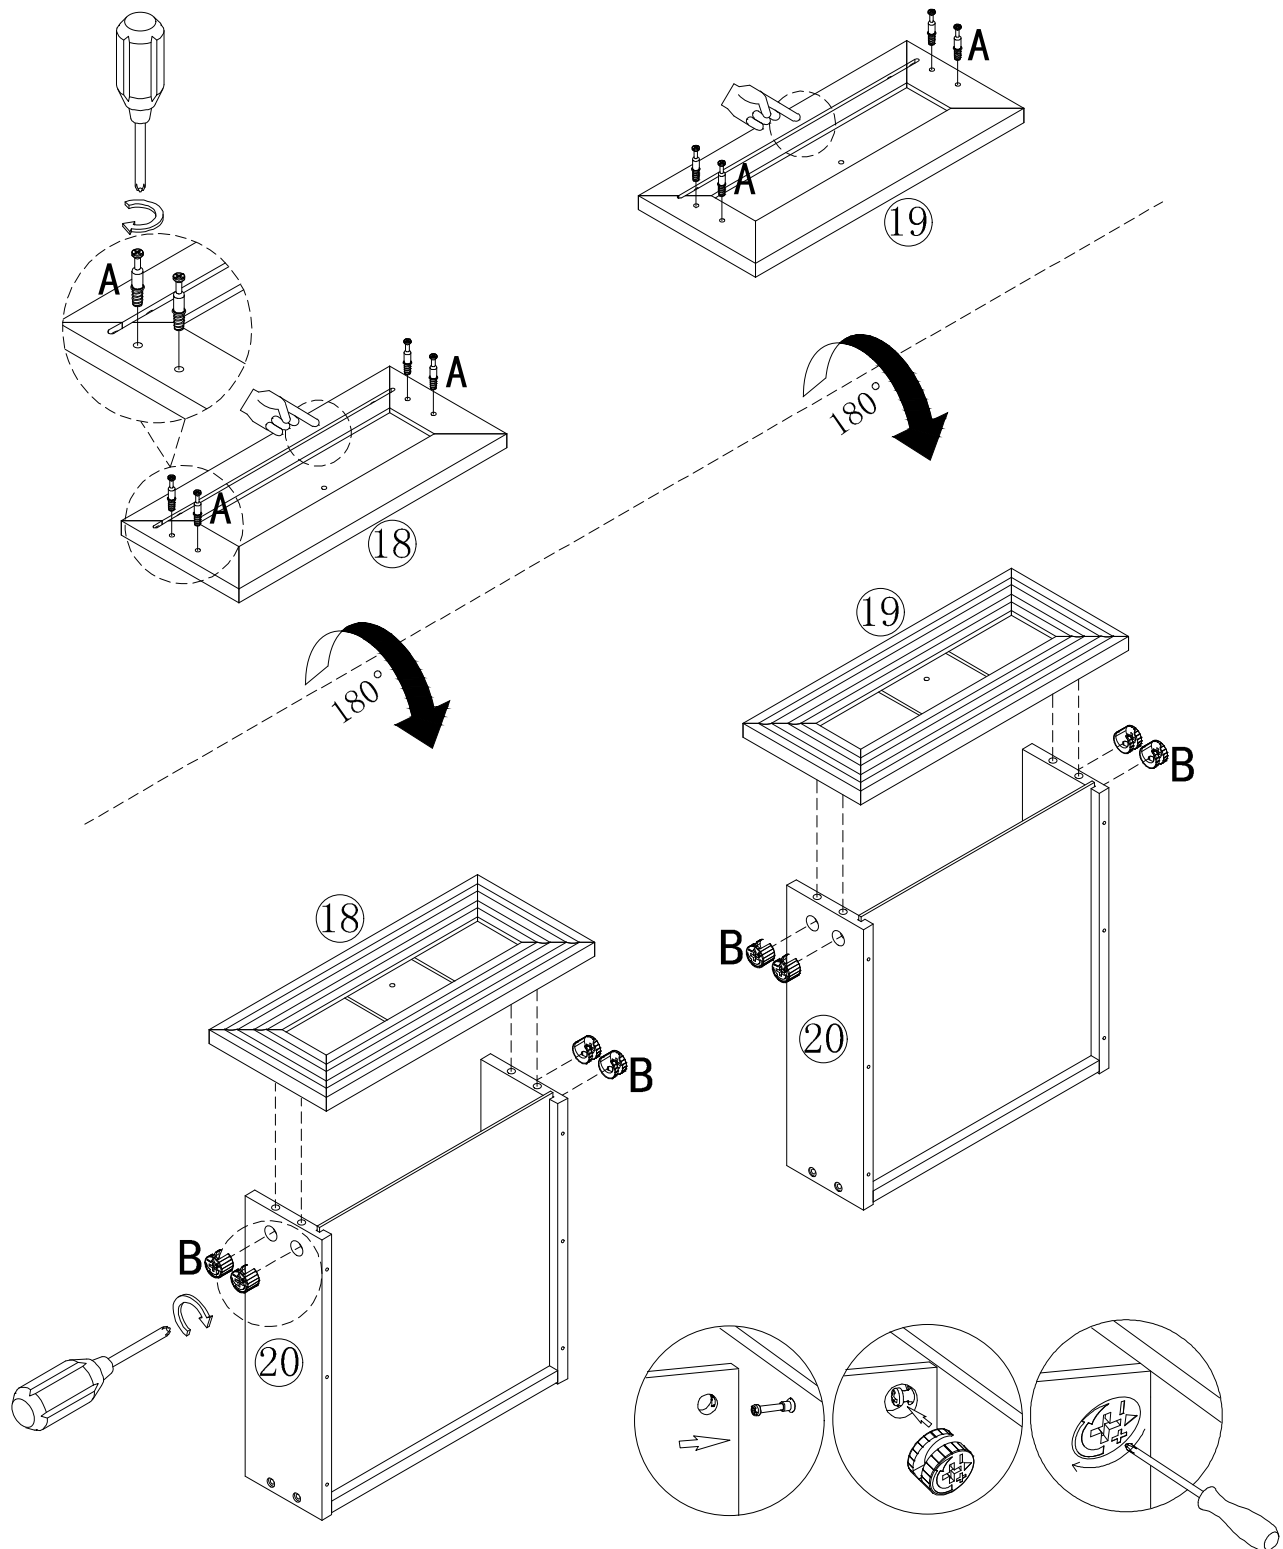




	A X 8PCS
	B X 8PCS

STEP 20



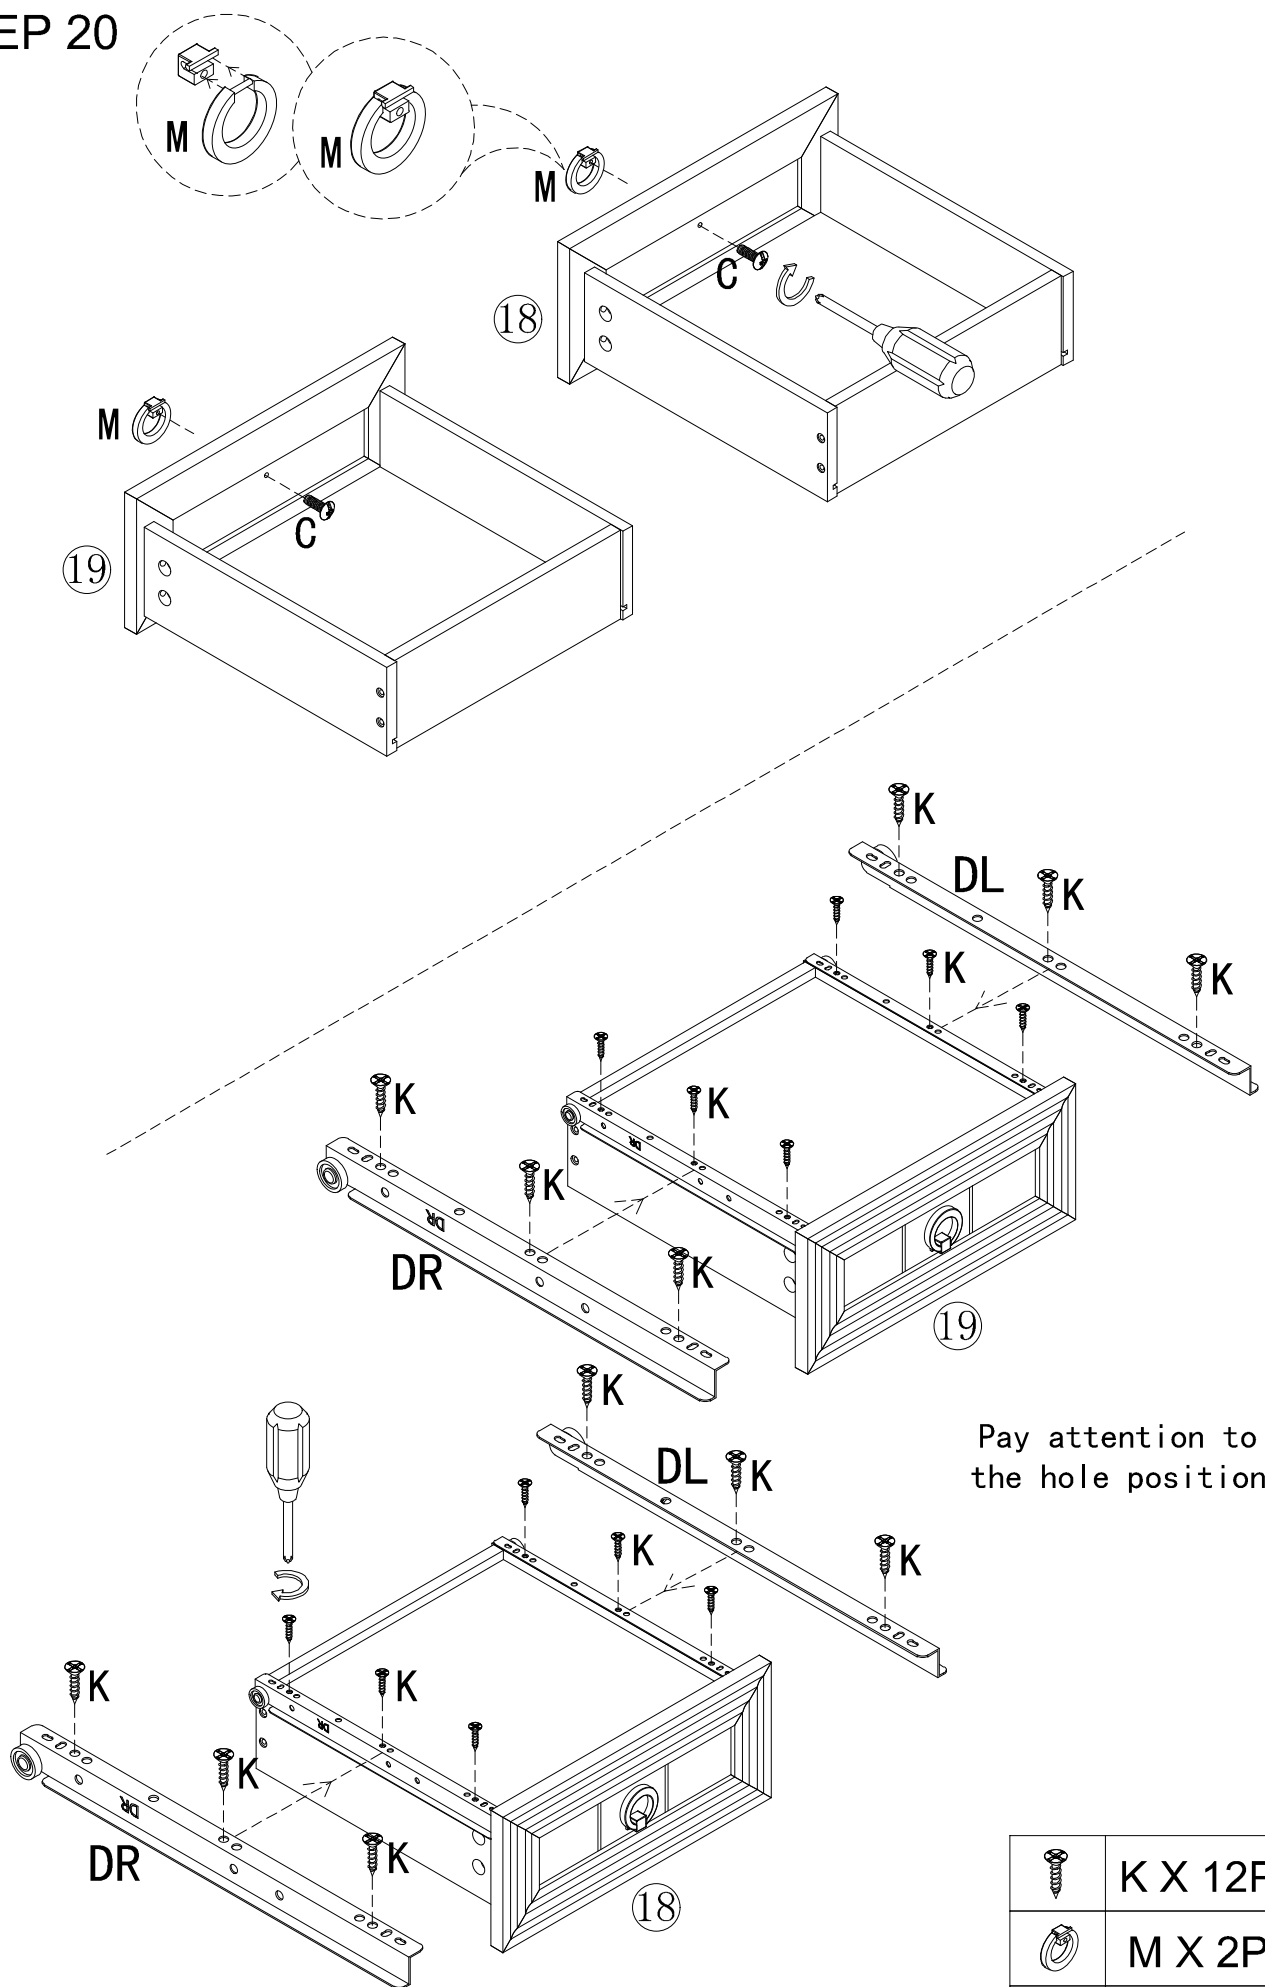


	K X 12PCS
	M X 2PCS
	C X 2PCS


STEP 21

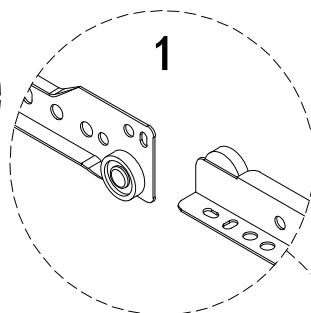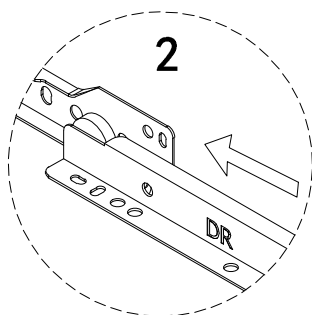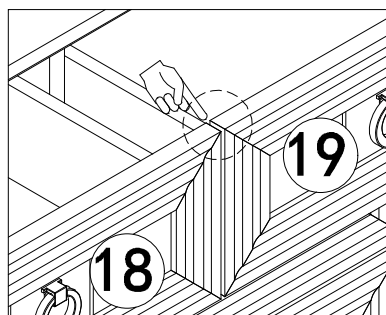


Note: Please insert the drawer into the corresponding position according to the number

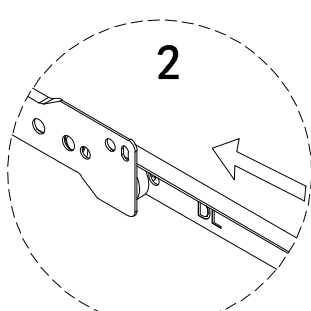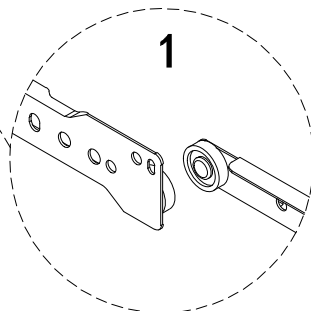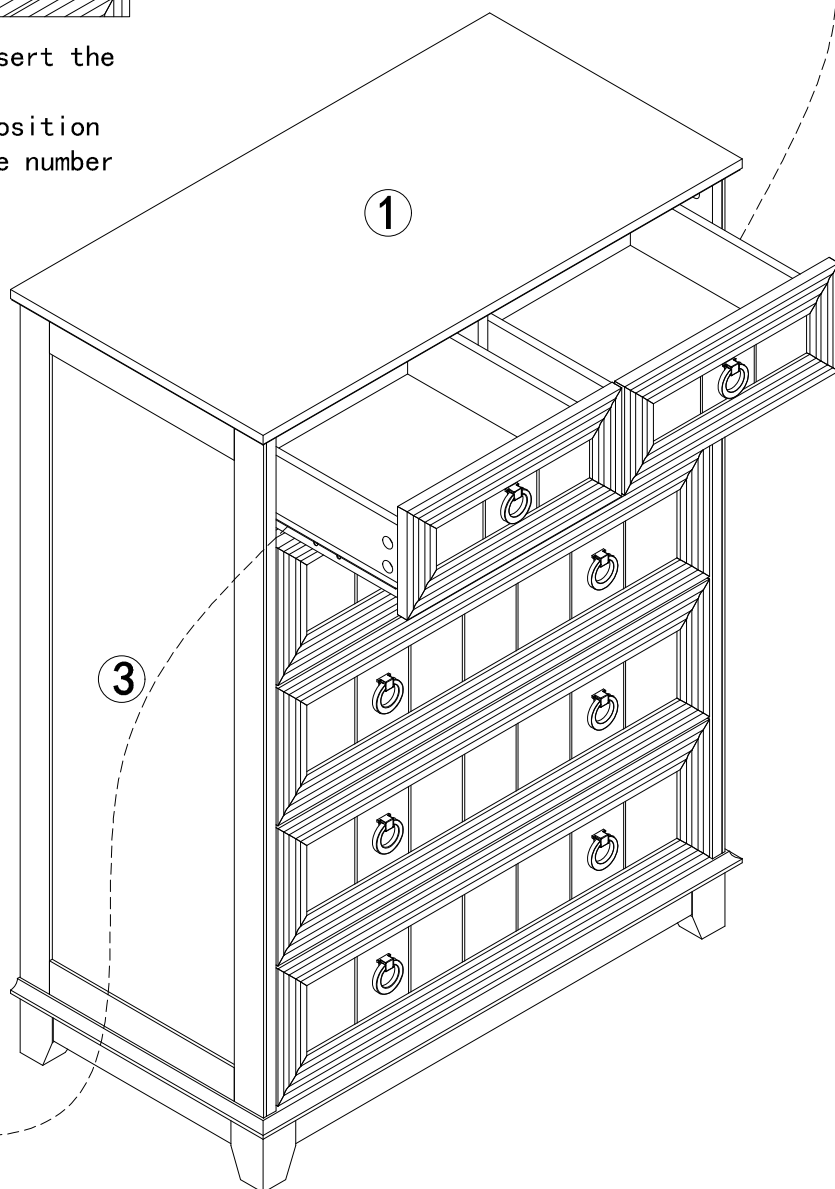


STEP 22

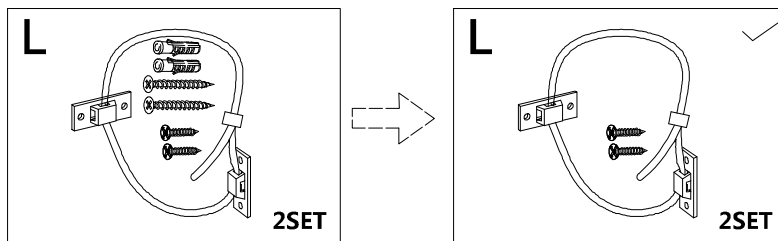

NOTE: To prevent the cabinet from wobbling please be sure to install the back panel fasteners.

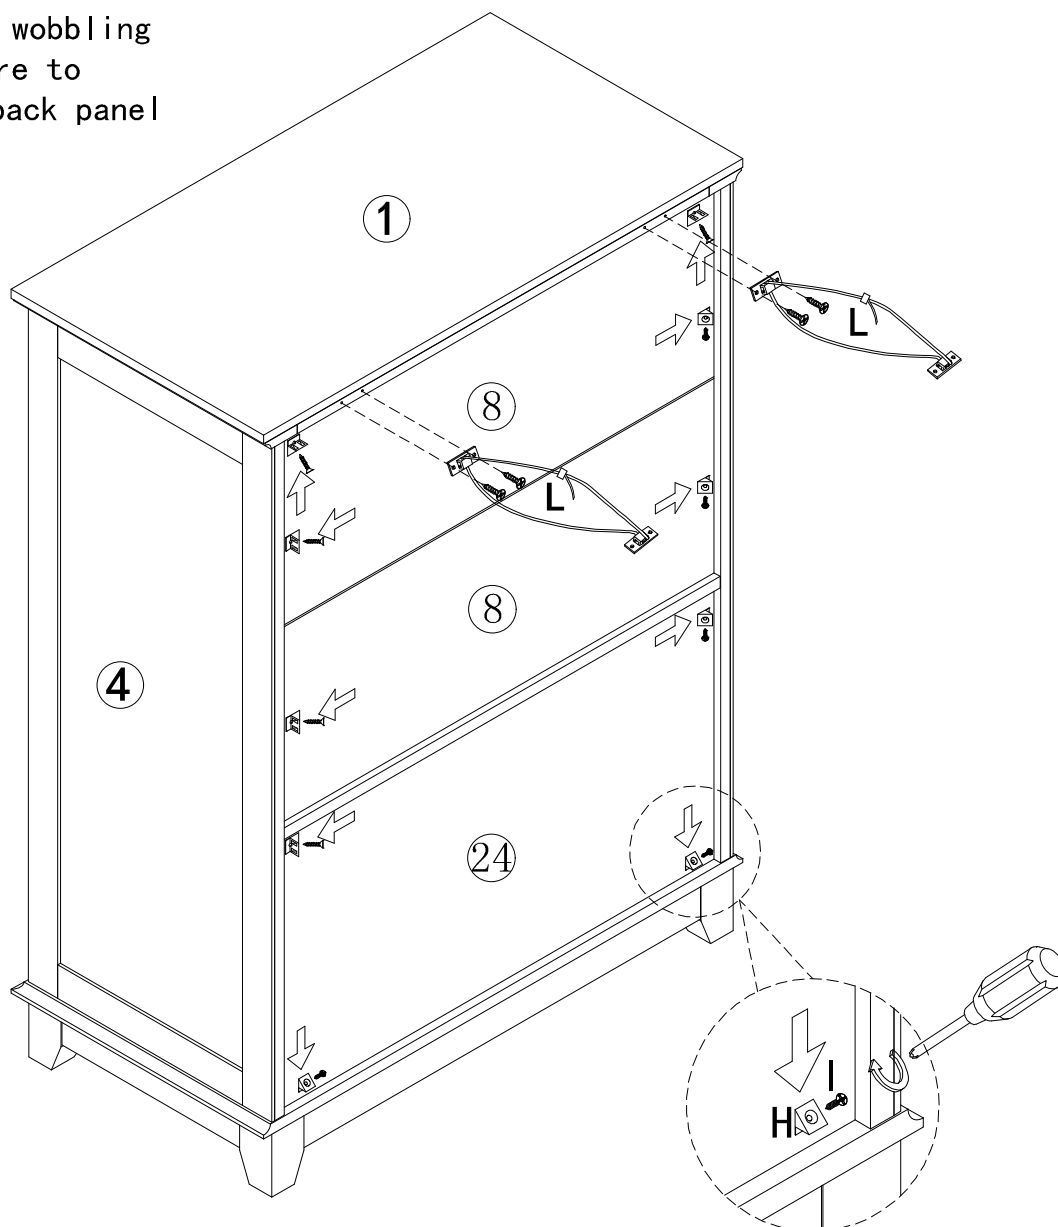

	I X 10PCS
	H X 10PCS

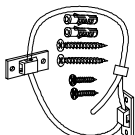	L X 2SET
---	----------

STEP 23

