

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please Email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly (included): Allen Key


CARE AND MAINTENANCE

WOOD CARE: Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on nonabrasive material as to prevent damage to the wood finish. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish.

UPHOLSTERY CARE: To prevent overall soiling, frequent vacuuming or light brushing is recommended. Cushions and pillows should be turned on a weekly basis. Down-filled cushions should be brushed rather than vacuumed. Spot clean, using a mild water-free solvent or dry cleaning product. Only a professional cleaner should undertake a complete overall cleaning. The use of steam or water-based cleaners may cause excessive shrinking or staining.



ITEM ID: COF5900A
ITEM DIMENSION: L43.5 x W18.9 x H20.7

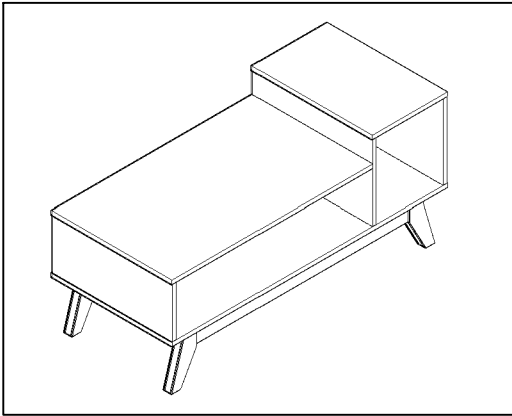

Total Weight Capacity:148 lbs
Warning: Do not stand on the cabinet.
Warning: Do not over torque bolts.

Part List and Hardware List


PIECE	DESCRIPTION	PICTURE	QTY	PIECE	DESCRIPTION	PICTURE	QTY	PIECE	DESCRIPTION	PICTURE	QTY
1	Long Top Panel		1x	6	Center Panel		1x	11	Leg Panel (L)		2x
2	Short Top Panel		1x	7	Support Panel		1x	12	Leg Panel (L)		2x
3	Bottom Panel		1x	8	Long Leg Frame		2x				
4	Side Panel (L)		1x	9	Short Leg Frame		2x				
5	Side Panel (R)		1x	10	Leg Support Panel		2x				

Part List and Hardware List


PIECE	DESCRIPTION	PICTURE	QTY	PIECE	DESCRIPTION	PICTURE	QTY	PIECE	DESCRIPTION	PICTURE	QTY
A	Cam Pin M5x24MM		17x	F	White Leg Pin M15 X 18MM		4x				
B	Cam Lock M15 x 12MM		17x	G	Allen Key M4 X M4		1x				
C	Wood Dowel M8x30MM		34x								
D	Capwood Screw M6x50MM		7x								
E	Screw M4x28MM		4x								

PREPARATION


- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly (included): Allen Key.

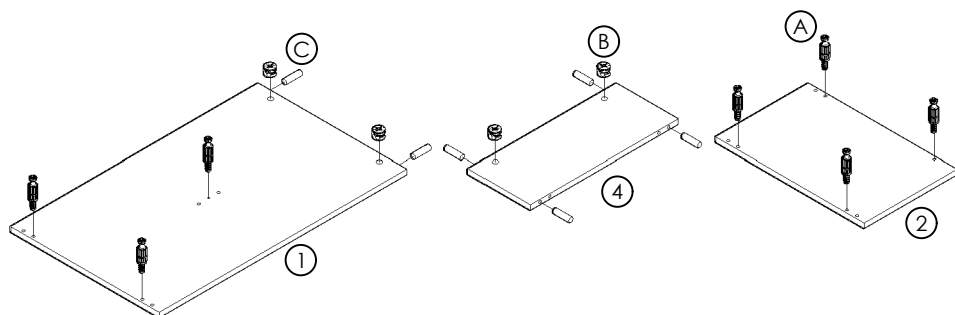


Step 1: As shown, Install the provided hardware. Fasten the screw (A) and do not tighten it too tight. Put in the Camlock(B) into the hole. Please using the hammer to insert the wood dowel(C).

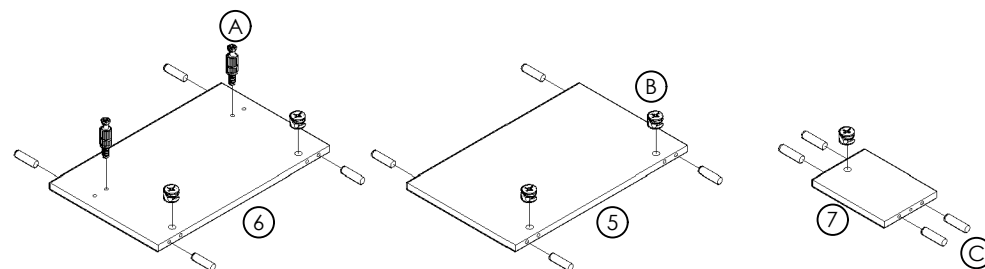


Step 2: Install the provided hardware. Fasten the screw (A) and do not tighten it too tight. Put in the Camlock(B) into the hole. Please using the hammer to insert the wood dowel(C).

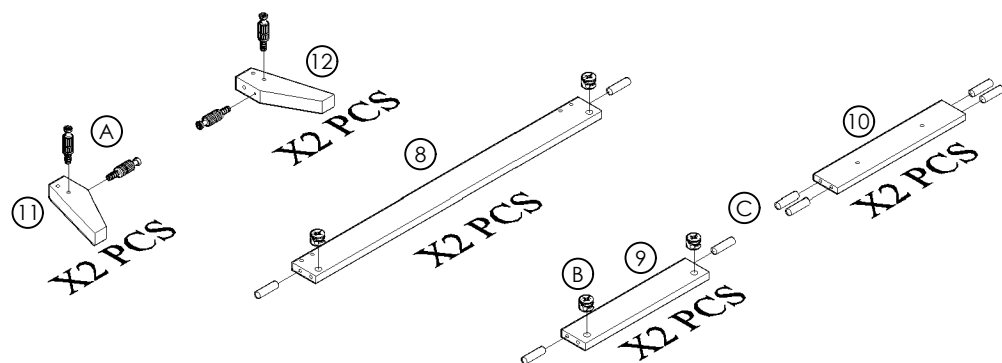


Step 3: Install the provided hardware. Fasten the screw (A) and do not tighten it too tight. Put in the Camlock(B) into the hole. Please using the hammer to insert the wood dowel(C).

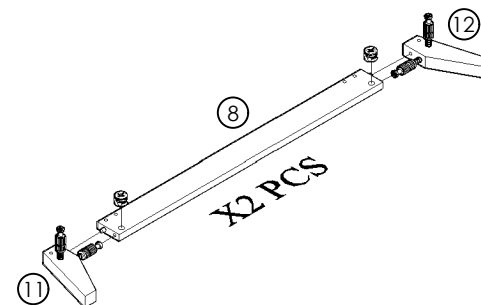


Step 4: As shown, on the position tight the head of minifix housing goes into the open mouth of the minifix bolt, Use Allen Key(G) then turn the minifix housing so it tighten over the minifix bolt.

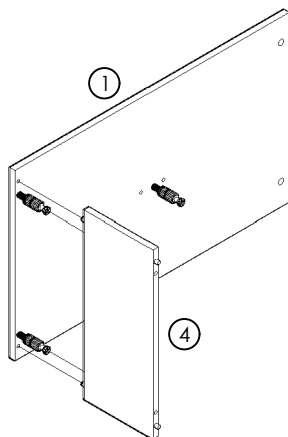


Step 5: As shown, on the position tight the head of minifix housing goes into the open mouth of the minifix bolt, Use Allen Key(G) then turn the minifix housing so it tighten over the minifix bolt.

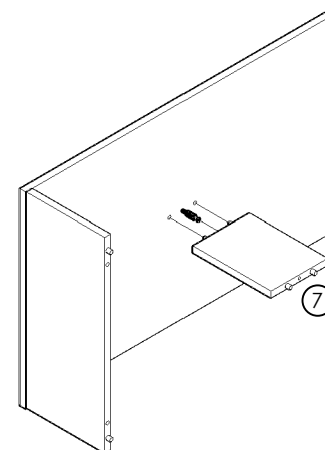


Step 6: As shown, on the position tight the head of minifix housing goes into the open mouth of the minifix bolt, Use Allen Key(G) then turn the minifix housing so it tighten over the minifix bolt.

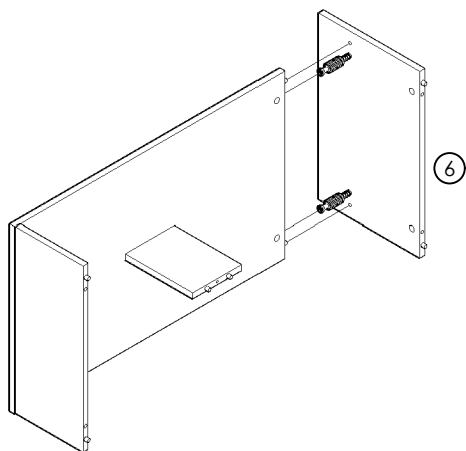


Step 7: Tight the head of minifix housing goes into the open mouth of the minifix bolt, Use Allen Key(G) then turn the minifix housing so it tighten over the minifix bolt.

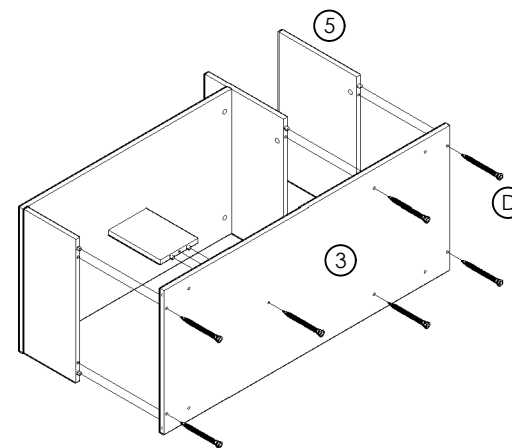


Step 8: Install the hardware and insert the screw (D) on holes of panel using allen key(G). Hold the allen key firmly and turn it clockwise to tighten the screw. Make sure the panel is firmly secured without being overtightened.

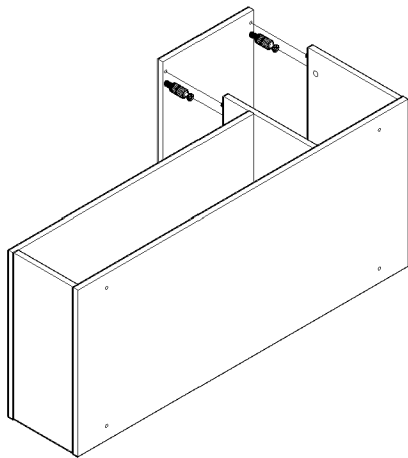


Step 9: On the position, the head of minifix housing goes into the open mouth of the minifix bolt. Use Allen Key then (G) turn the minifix housing so it tightens over the minifix bolt.

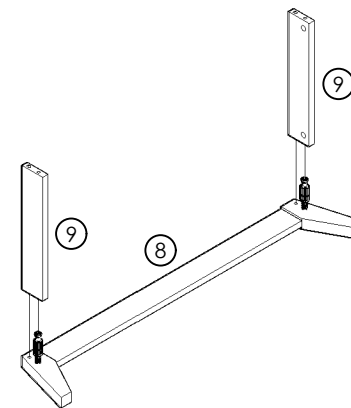


Step 10: As shown, on the position with using the hardware provided, the head of minifix housing goes into the open mouth of the minifix bolt. Use Allen Key (G) then turn the minifix housing so it tightens over the minifix bolt.

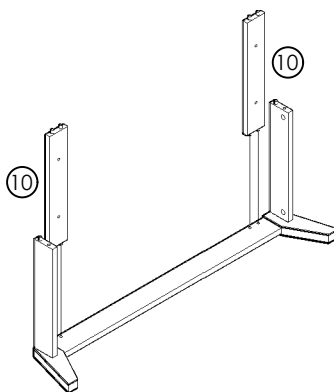


Step 11: Joining Part in the stand Position. As shown, stand the panel on the position to attach together the component No 10 into the hole.

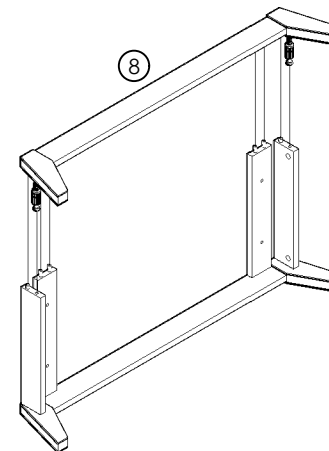

Step 12: Attach the panel with the hardware provided. As shown, the head of minifix housing goes into the open mouth of the minifix bolt. Use Allen Key (G) then turn the minifix housing so it tightens over the minifix bolt.

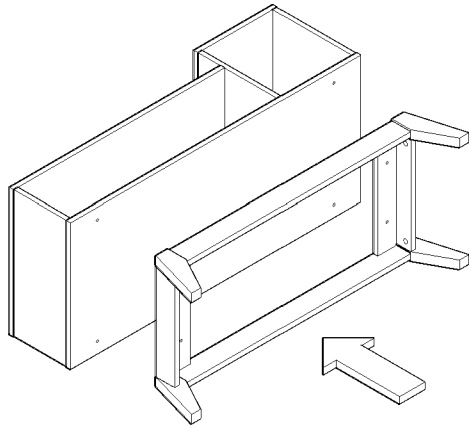


Step 13: On the position, Attach with the hardware provide.

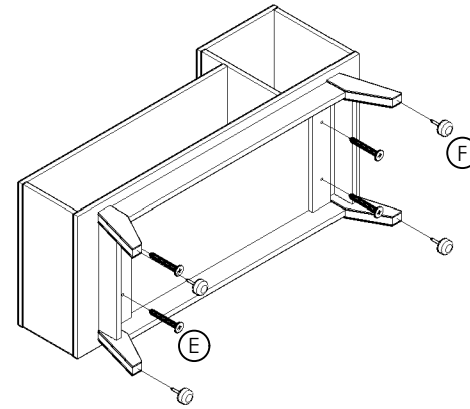

Step 14: Position the panel in the place. Align screw(E) with use a screwdriver to secure them into place. And then, insert the white leg pin(F) using a hammer.

RECOMMENDED LOADING WEIGHT

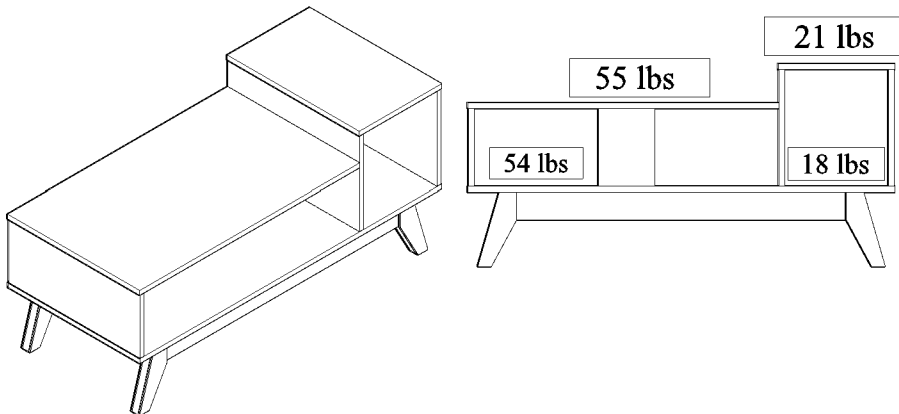

Step 15: Completed.The Cabinet has been ready installed.