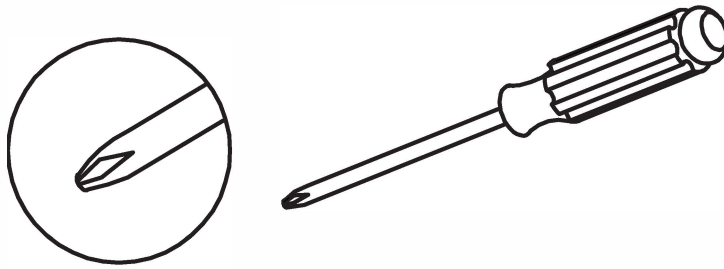
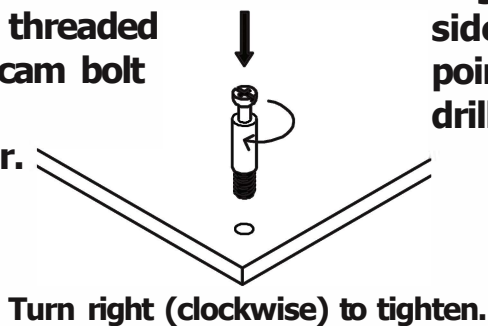


CAM LOCK FASTENER ASSEMBLY INSTRUCTIONS

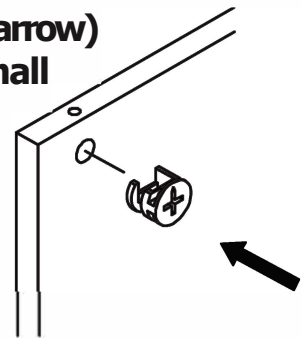


Note: Every cam lock bolt must have a cam lock connector in order to fasten the parts together.


- (1)** Secure the threaded end of the cam bolt by using a screwdriver.



Align the cam connector with its side opening (or arrow) pointing to the small drilled hole.



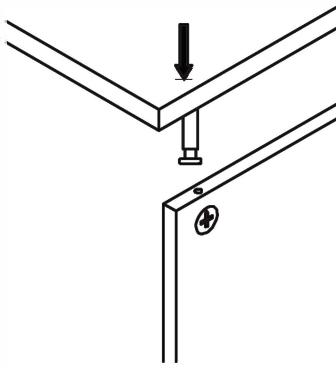
(2)




Insert the cam lock bolt into the pre-drilled hole above the cam connector.

(3)

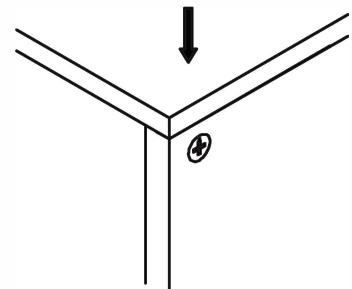Two parts should fit snugly against each other.



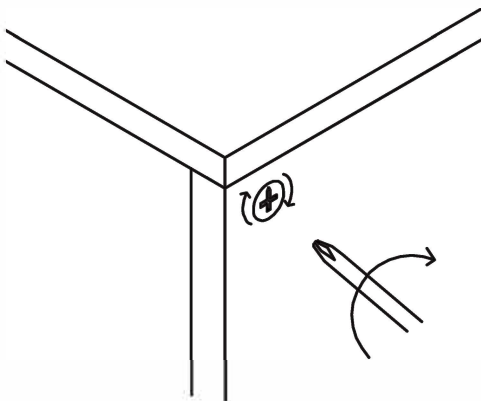(4)

















Turn right (clockwise) to tighten.

Turn the cam connector with a screwdriver until it will not turn any more with light to moderate force.


ASSEMBLY INSTRUCTION

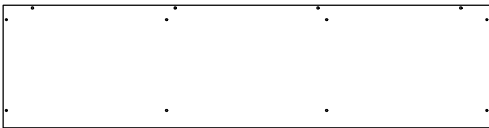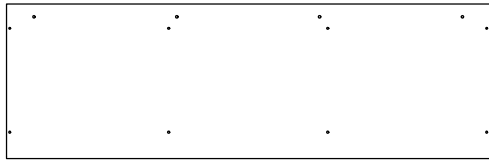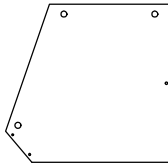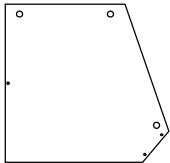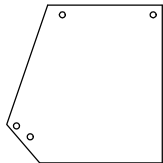STACKABLE BOX 3 OPEN


A	Top Panel	B	Bottom Panel	C	Left Side Panel	D	Right Side Panel
							
1pc		1pc		1pc		1pc	
E	Front Lower Panel	F	Front Panel	G	Back Panel	H	Divider Panel
							
1pc		1pc		1pc		2pcs	
I	Minifix	J	Cam 0.47"	K	Wood Dowel	L	Screw 1.5"
							
18pcs		18pcs		10pcs		10pcs	
M	Screw 1.26"	N	Glue				
							
3pcs		1pc					
O	Wall Anchor 1"	P	Screw #4x5/8"	Q	Wall Hanger	R	Bracket
							
1pc		1pc		1pc		1pc	

***** Do not tighten screws & bolts until the entire unit is completely assembled.**

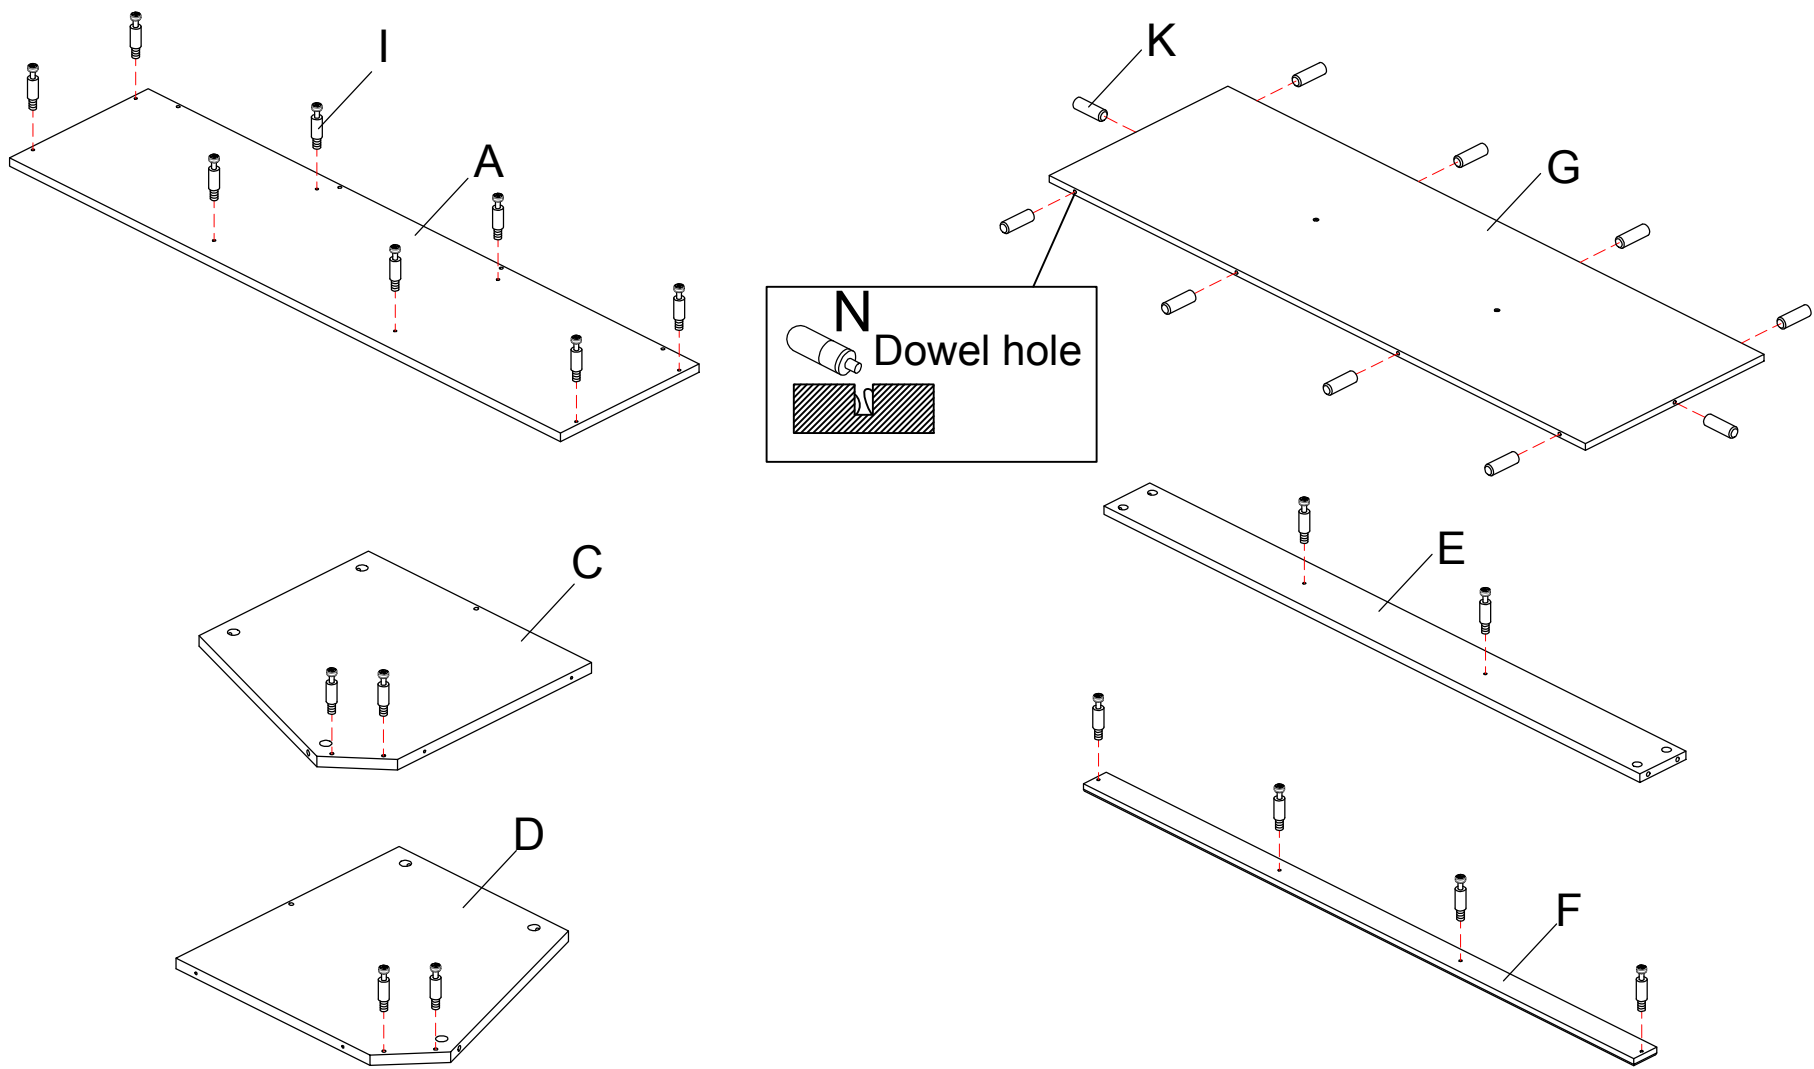- 1** Insert Minifix(I) into the Top Panel(A), Right & Left Panel (C)(D) Front Lower Panel(E) and Front Panel(F).Before insert the Dowel(K),using Glue(N) into the Back Panel(G) of dowel holes.




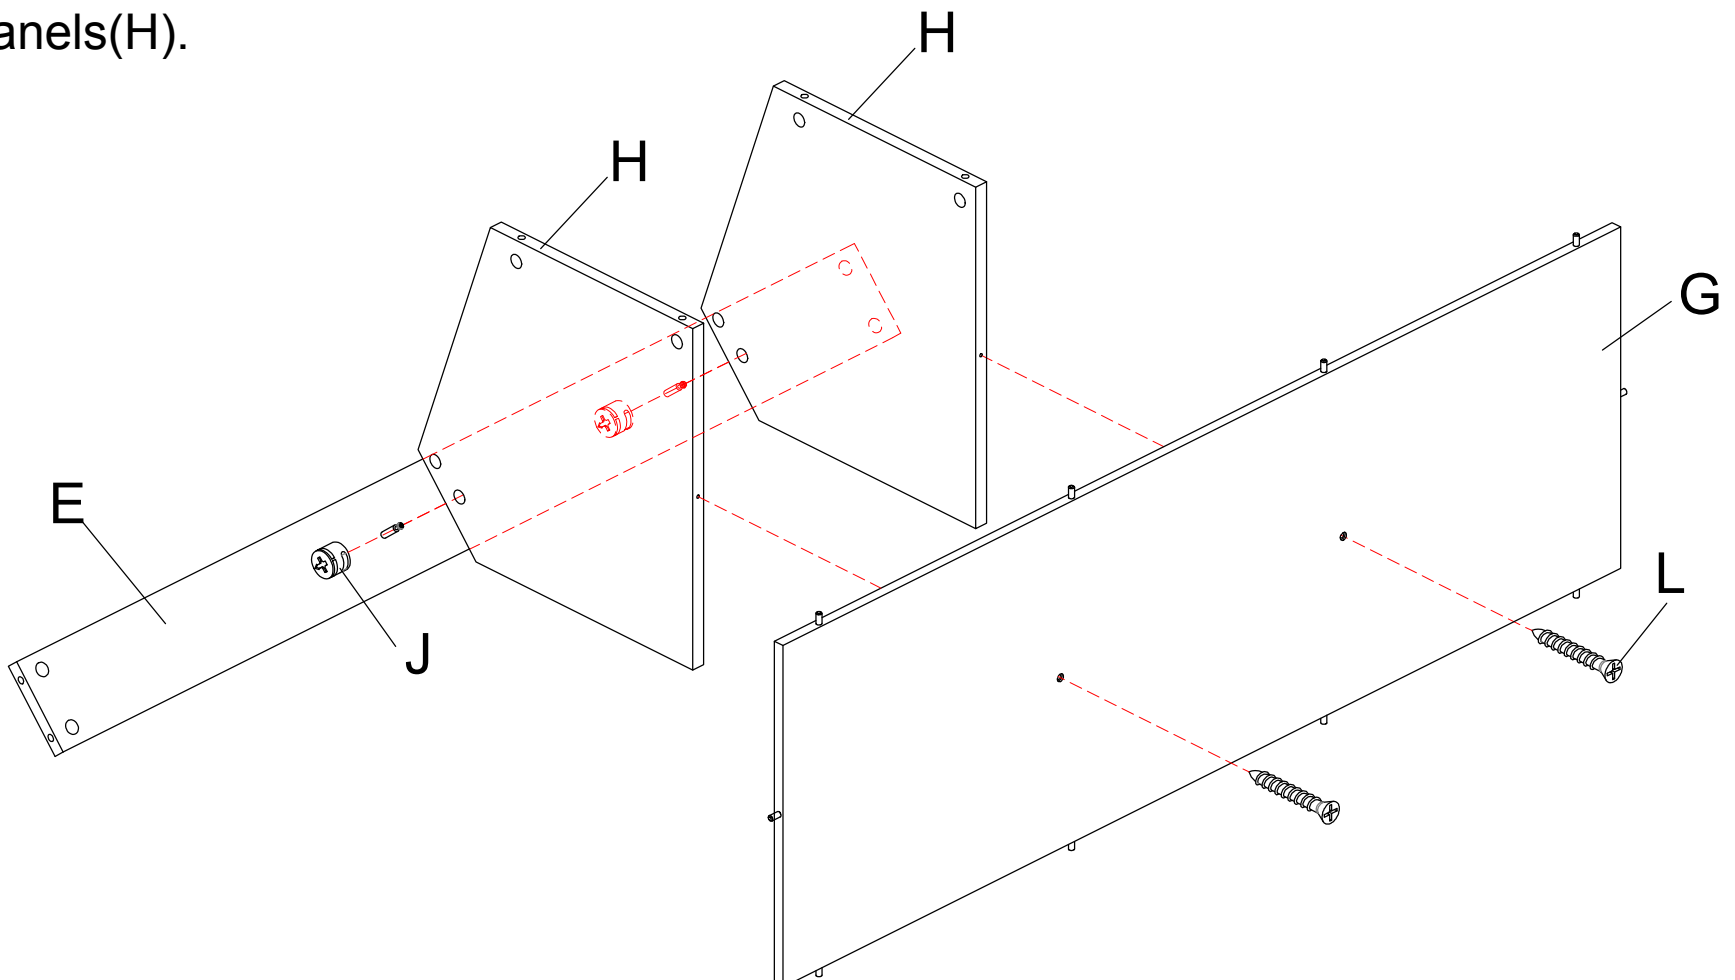- 2** Assemble Divider Panels(H) to connect Front Lower Panel(E), using screwdriver (not provide) with Cam(J). Insert Screws(L) into the Back Panel(G) to connect Divider Panels(H).




3

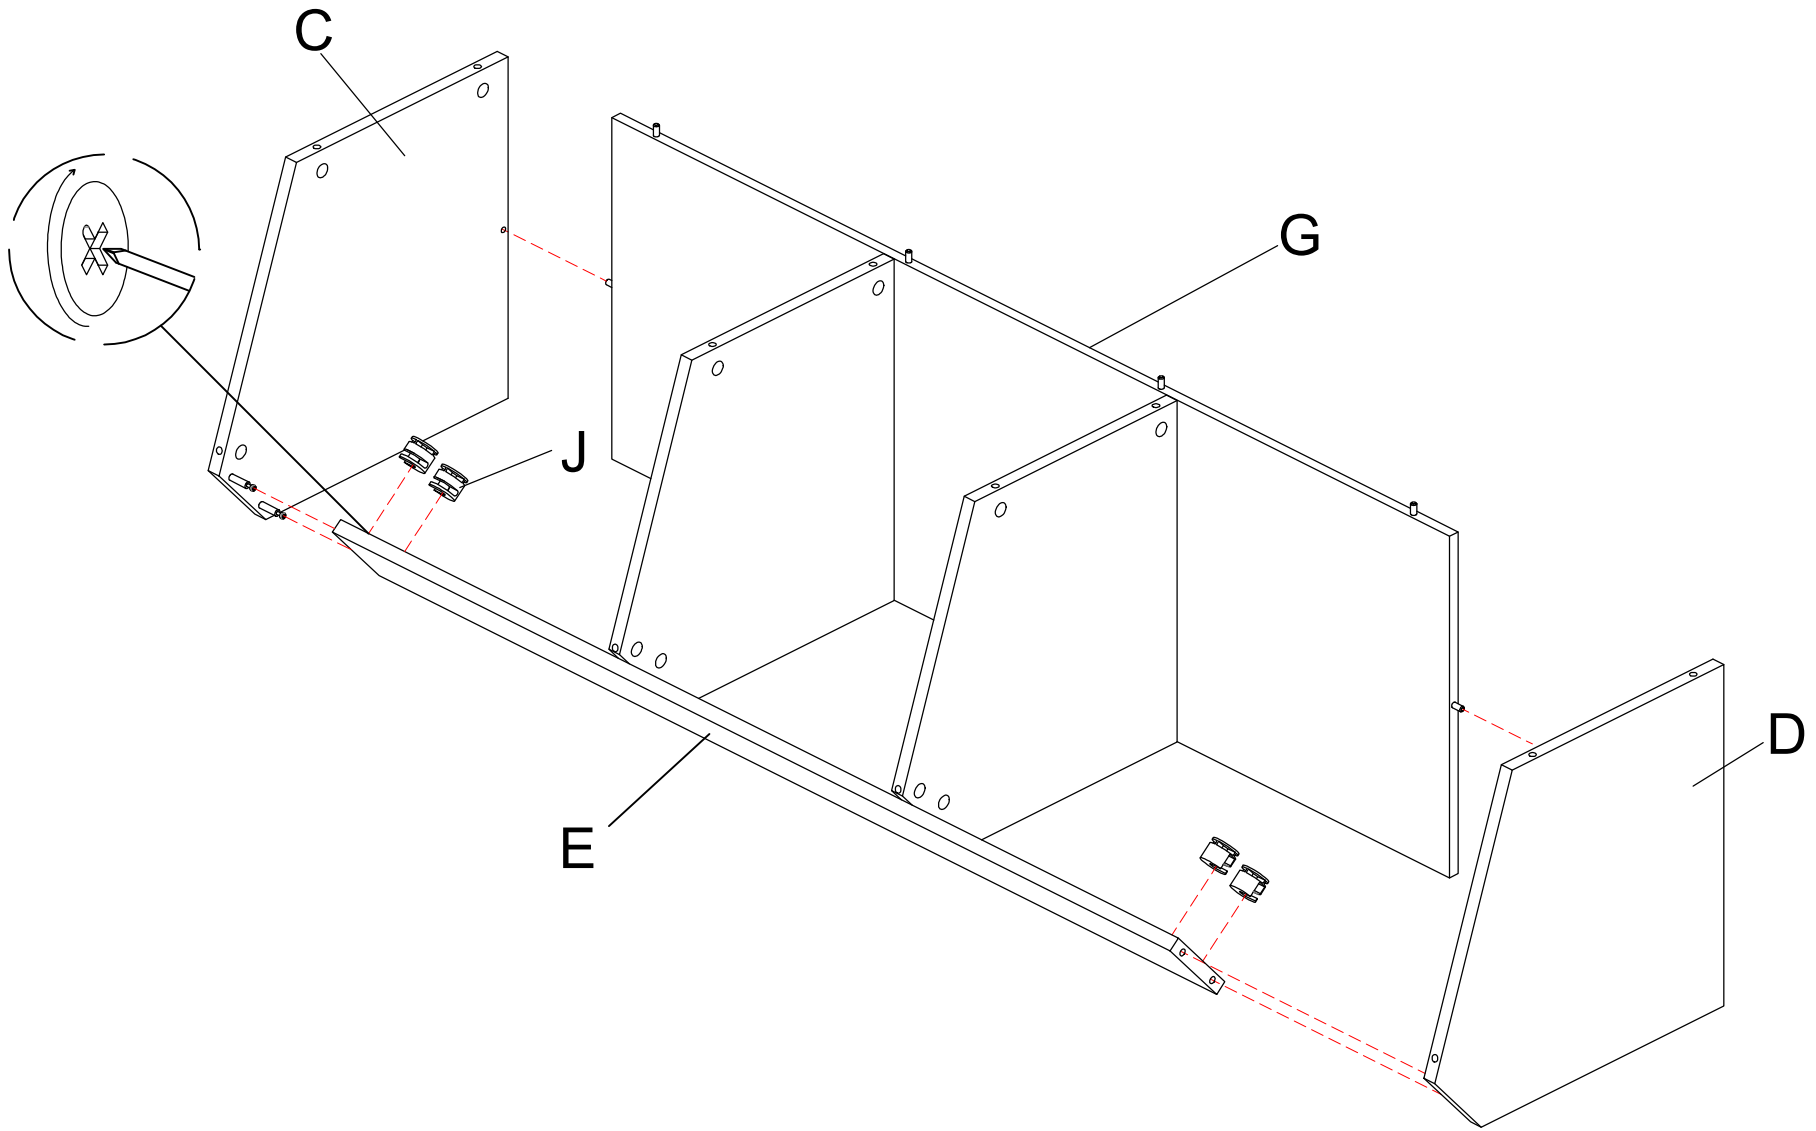Assemble the Front Lower Panel(E) to connect Left Panel(C) Right Panel(D) Back Panel(G), using screwdriver (not provide) with Cam(J).


**4**

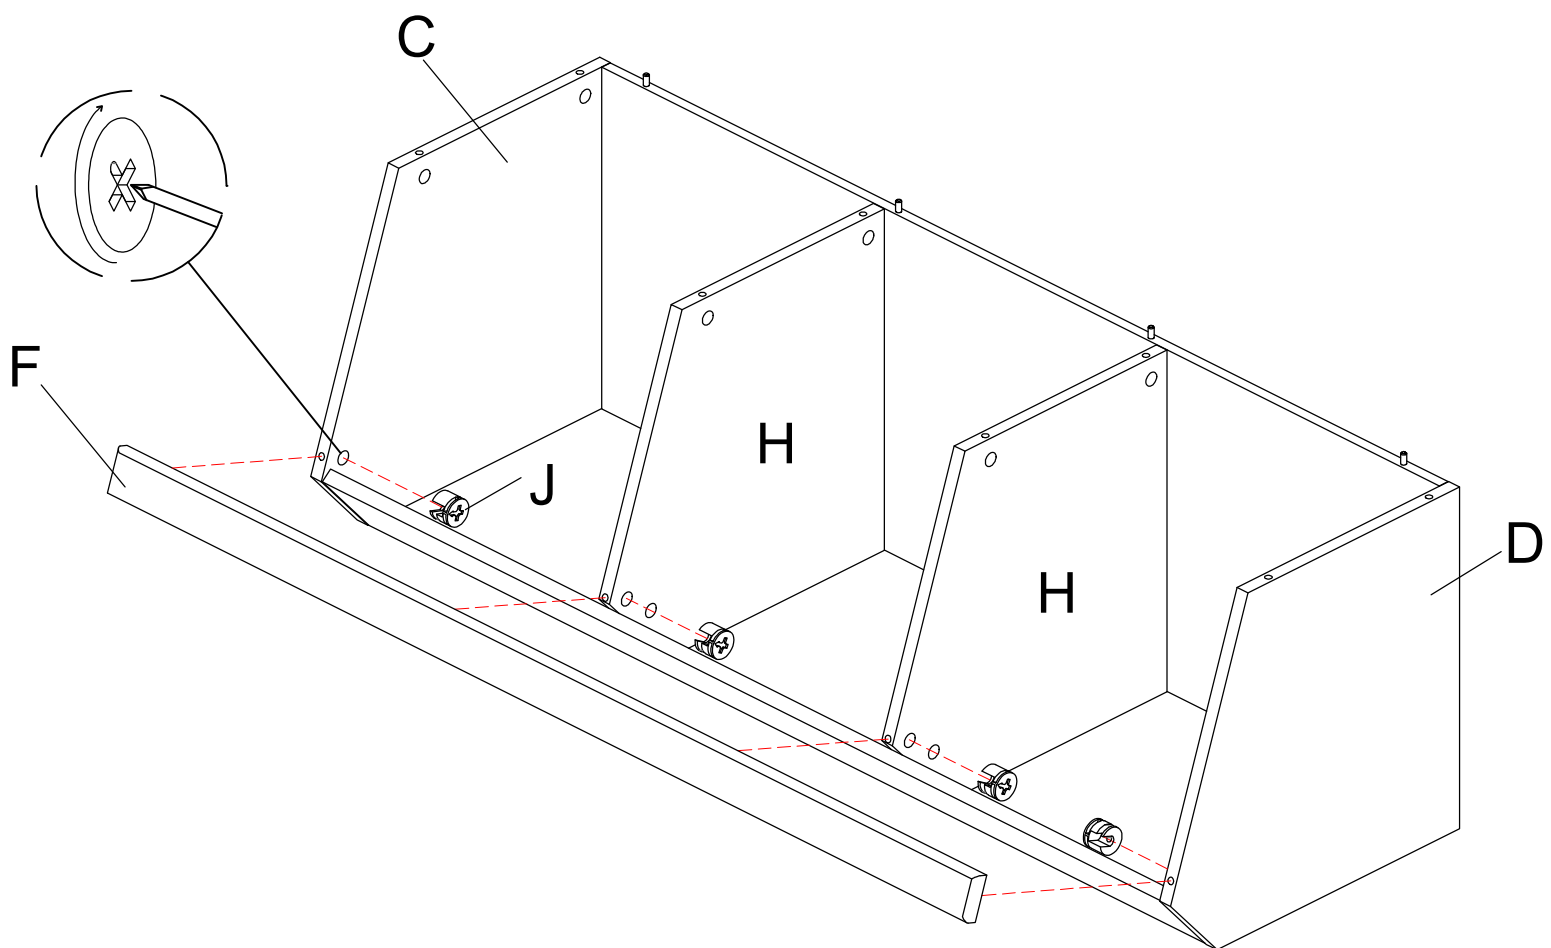Insert Cam(J) into the Left & Right Side Panel(C)(D), Divider Panels(H) to connect Front Panel(F), using screwdriver (not provide) with Cam(J).




5

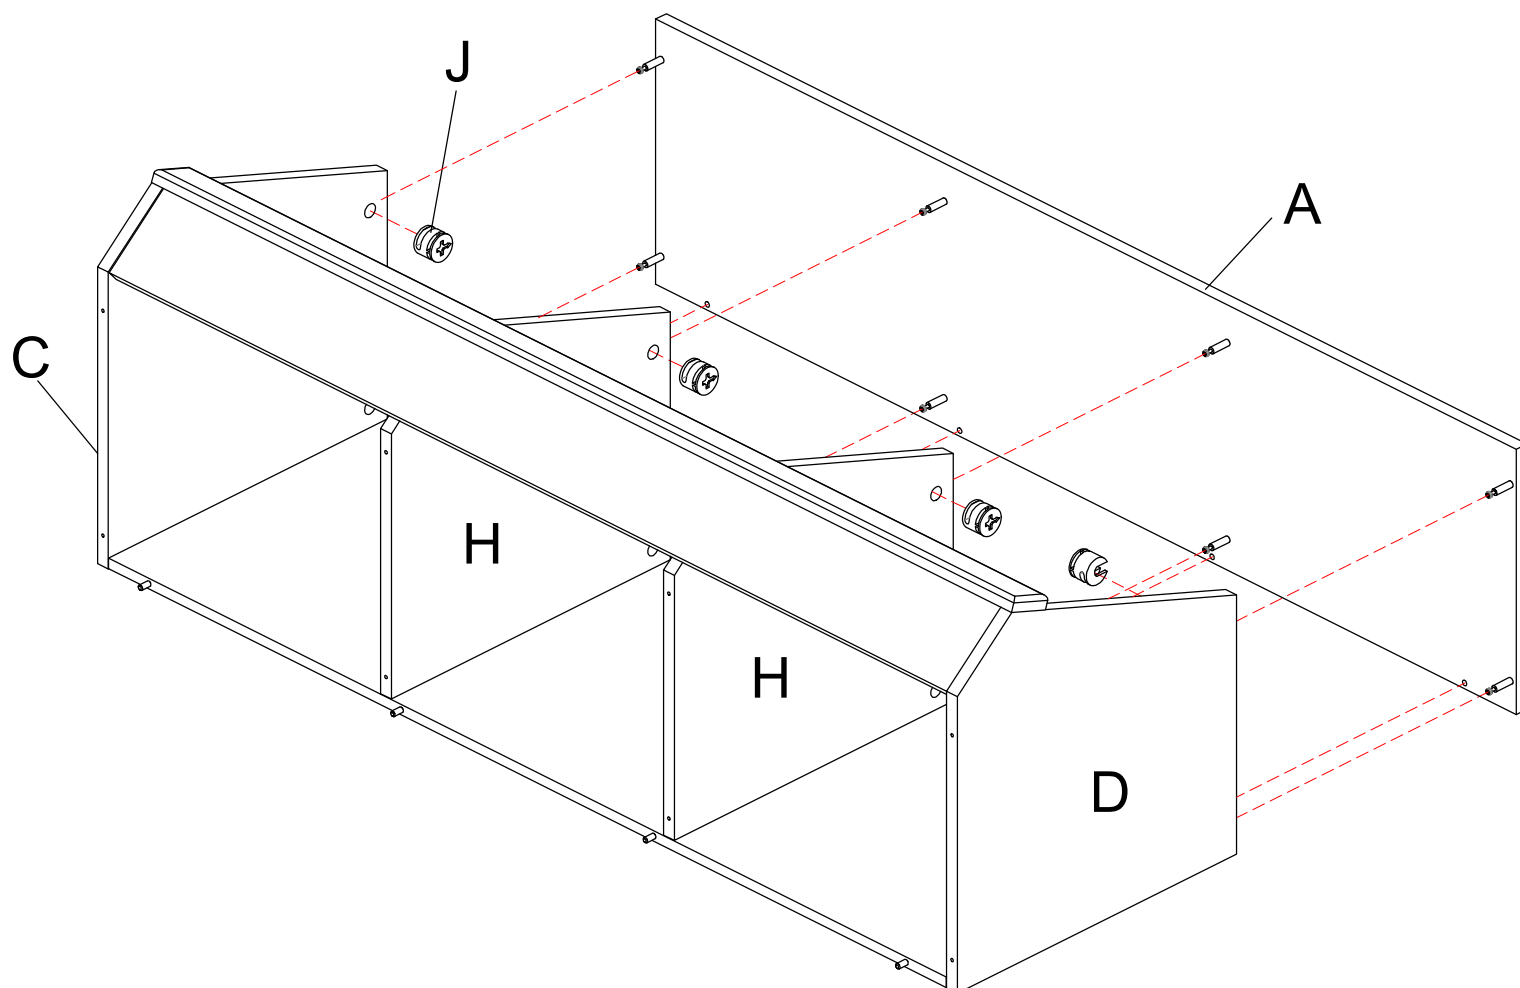Assemble Top Panel(A) to connect Left & Right Side Panel(C)(D), Divider Panels(H), using screwdriver(not provide) with Cam(J).


**6**

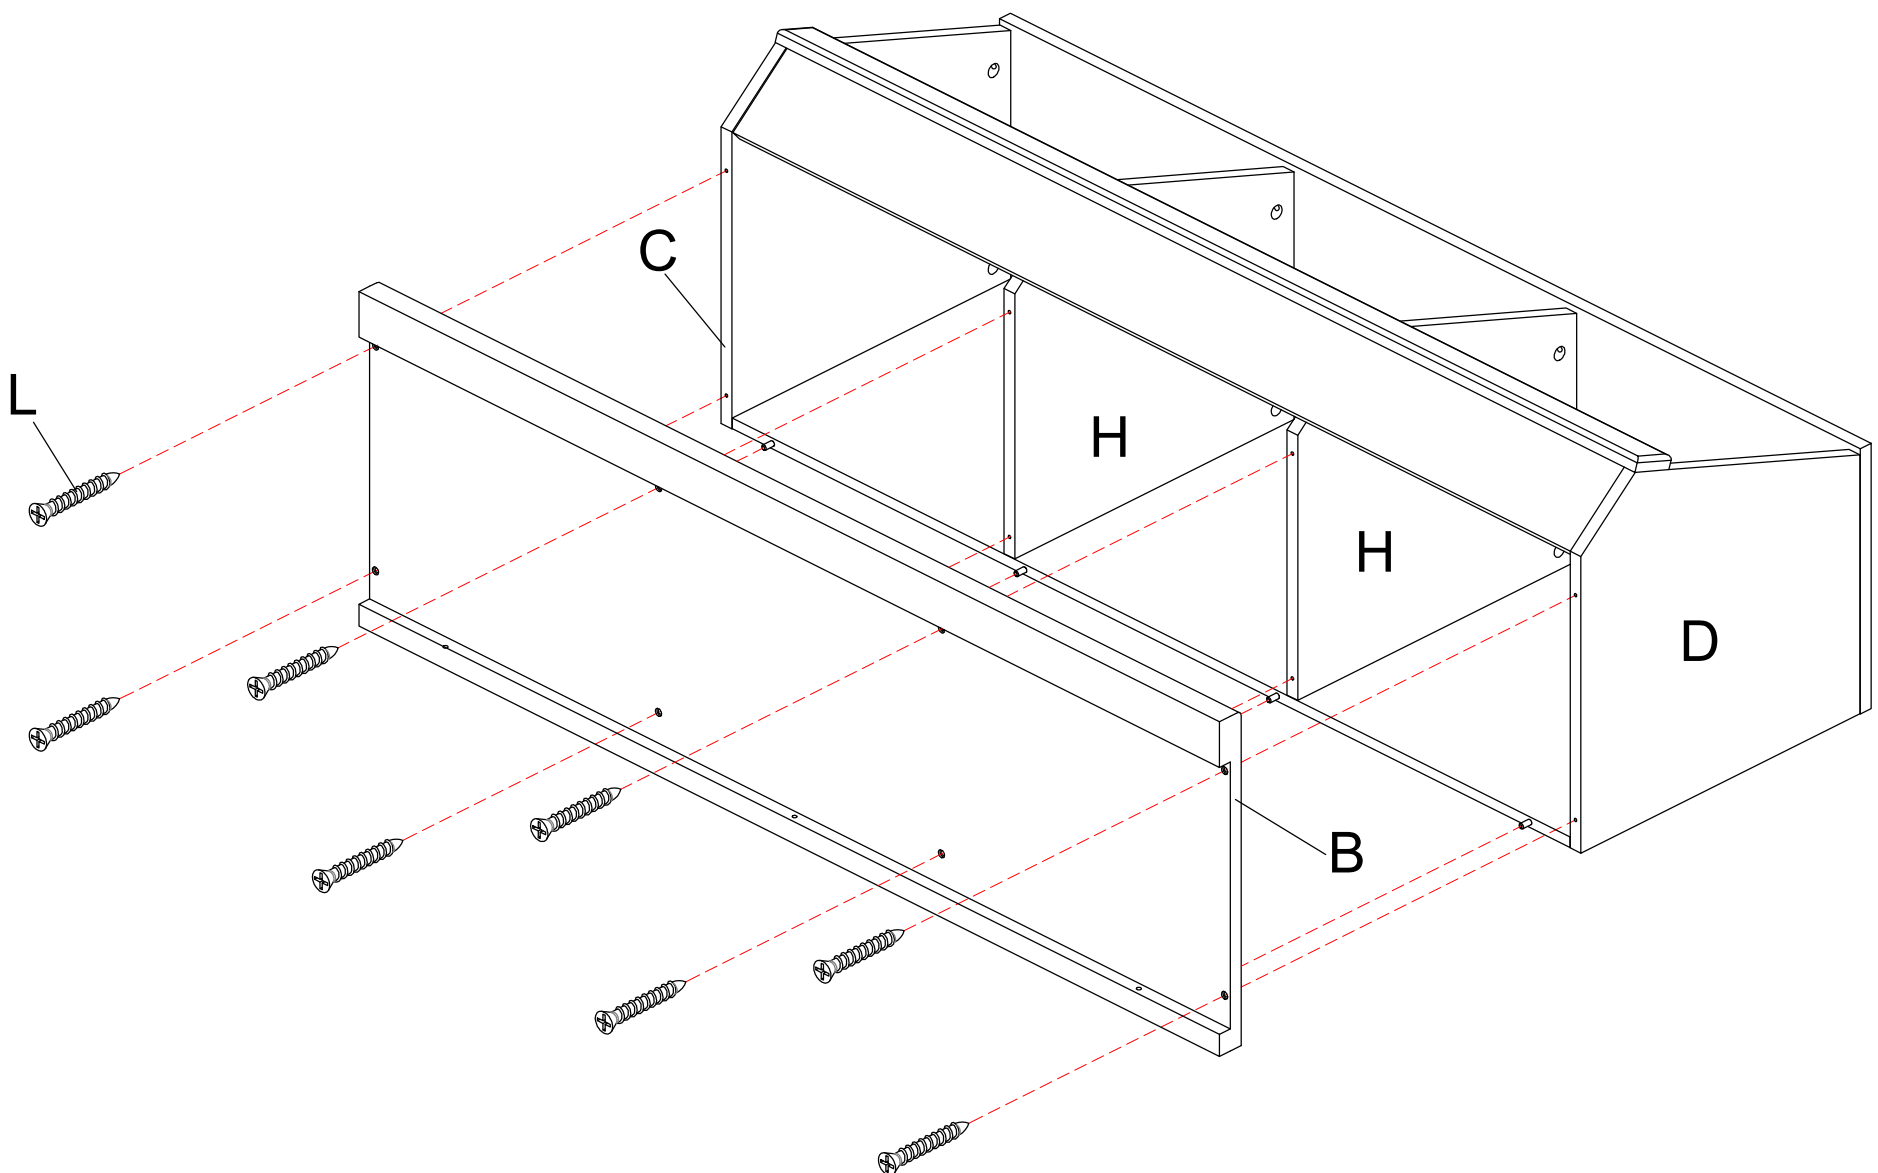Insert Screw(L) into the Left & Right Side Panel(C)(D), Divider Panels(H) to connect Bottom Panel(B).



7

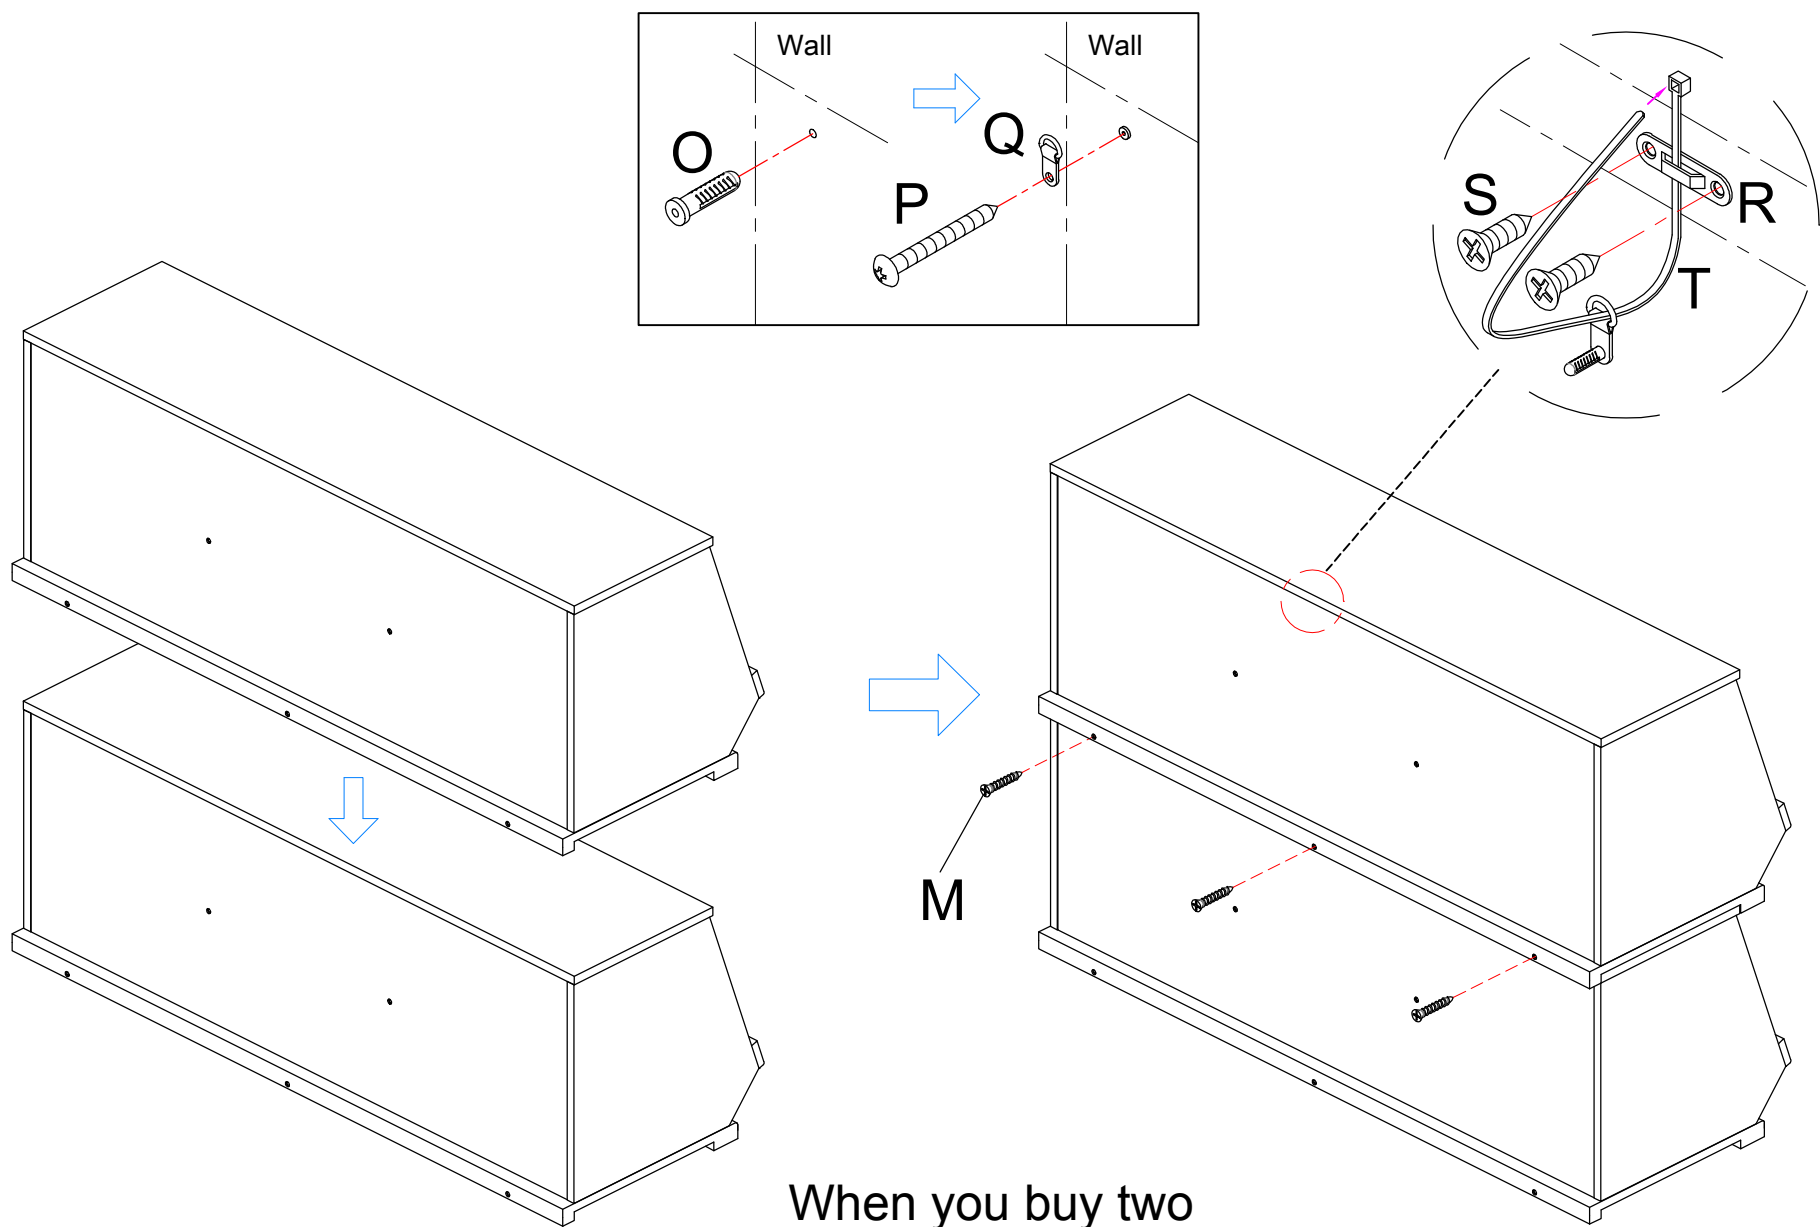Drill a 7mm hole on the wall and fix Wall Anchor(O) into it, then fasten Screw(P) on Wall Anchor(O) through Wall Hanger(Q). Using Screw(S) fasten Bracket(R) onto the panel and hitching Bracket(R) and Wall Hanger(Q) by Cable Tie(T).



When you buy two boxes, please insert Screw (M) to connect.

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are right.